

Technical Publications

Beechcraft | **Hawker**

- **Beechcraft Starship (Model 2000)**

- **Aircraft Maintenance Manual**
- **Illustrated Parts Catalog**
- **Printed Circuit Board Manual**
- **Structural Repair Manual**
- **Wiring Diagram Manual**

MAINTENANCE LIBRARY

CD1220013-000A2

Raytheon Aircraft Company

P.O. Box 85
Wichita, Kansas
67201-0085 USA
800.796.2665
316.676.8238
www.racpubs.com

Raytheon Aircraft

BEECH

STARSHIP 1®

Model 2000

NC-4 and after

Illustrated Parts Catalog

Volume 2 Chapters 33 thru 80

Note: This manual was formerly called the Beechcraft Starship Illustrated Parts Catalog

Notice

Refer to the applicable Wiring Diagram Manual
for wiring diagrams and associated electrical
components parts breakdown.

Copyright © Raytheon Aircraft Company 2002

P/N 122-590013-11B
Reissued: February 25, 1994

P/N 122-590013-11B4
Revised: July 31, 2002

Published By
RAYTHEON AIRCRAFT COMPANY
P.O. Box 85
Wichita, Kansas 67201
U.S.A.

NOTE

Where Beech Aircraft Corporation or Beechcraft is referred to in this publication, it will be taken to read Raytheon Aircraft Company.

Exported under the authority of license exception: TSU
"These commodities, technology or software were exported from the
United States in accordance with Export Administration Regulations.
Diversion contrary to U.S. law prohibited."

Raytheon Aircraft

Beech
Hawker

 Member of GAMA
General Aviation
Manufacturers Association

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

INTRODUCTION
LIST OF PAGE EFFECTIVITY
(Volume 2)

SECTION	PAGE	DATE
INTRODUCTION-EFFECTIVITY	1	June 30, 1995
INTRODUCTION-ATA INDEX GUIDE	1	June 30, 1995
	thru 12	June 30, 1995
INTRODUCTION-ALPHABETICAL INDEX	13	June 30, 1995
	thru 28	June 30, 1995

"END"

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

The Following Is An ATA-100 Chapter Index Guide For Use With This Parts Catalog.

NOTE * The Following Chapters Are Not Applicable To This Parts Catalog
49, 81, 82 & 83.

CHAPTER	SUB-SECTION	TITLE
AIRCRAFT GENERAL		
11		PLACARDS & MARKINGS
	11-00	GENERAL
	11-00-00	LIST OF PAGES & TABLE OF CONTENTS
	11-20	EXTERIOR PLACARDS & MARKINGS
	11-20-00	EXTERIOR PLACARDS
	11-30	INTERIOR PLACARDS & MARKINGS
	11-30-00	INTERIOR PLACARDS
AIRFRAME SYSTEMS		
21		ENVIRONMENTAL SYSTEMS
	21-00	GENERAL
	21-00-00	LIST OF PAGES & TABLE OF CONTENTS
	21-20	DISTRIBUTION
	21-20-00	AIR INFLOW AND DISTRIBUTION
	21-20-15	COCKPIT DUCTS.....
	21-20-20	CABIN SIDEWALL DUCTS
	21-20-25	CABIN OVERHEAD DUCTS.....
	21-20-30	FORWARD VENTILATION BLOWER
	21-20-35	AFT VENTILATION BLOWER
	21-20-40	AMBIENT AIR INLET
	21-20-60	HEAT EXCHANGER.....
	21-30	PRESSURIZATION CONTROL
	21-30-00	PRESSURIZATION CONTROL.....
	21-30-10	CABIN PRESSURIZATION MODULE.....
	21-50	COOLING
	21-50-10	AIR CONDITIONER SERVICE PROVISIONS
	21-50-20	COOLING CONDENSER
	21-50-30	AFT EVAPORATOR
	21-50-40	FUSELAGE REFRIGERATION PLUMBING.....
	21-50-45	WING REFRIGERATION PLUMBING.....
	21-50-50	COOLING SYSTEM COMPRESSOR.....
		NC-4 THRU NC-29
	21-50-51	COOLING SYSTEM COMPRESSOR.....
		NC-30 AND AFTER
	21-50-60	FORWARD EVAPORATOR.....
	21-55-00	AVIONICS COOLING SYSTEM.....
	21-55-10	NOSE AVIONICS COOLING
	21-60	TEMPERATURE CONTROL
	21-60-00	CABIN TEMPERATURE CONTROL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
22		AUTO FLIGHT
	22-00	GENERAL
	22-00-00	LIST OF PAGES & TABLE OF CONTENTS
	22-10	AUTO PILOT
	22-11-00	AUTOPILOT PITCH SYSTEM SERVO
	22-11-10	AUTOPILOT ROLL SYSTEM SERVO
	22-11-20	AUTOPILOT YAW SYSTEM SERVO
	22-11-30	AUTOMATIC TRIM COMPUTER INSTL
		AUTOPILOT ENGAGE PANEL
23		COMMUNICATIONS
	23-00	GENERAL
	23-00-00	LIST OF PAGES & TABLE OF CONTENTS
	23-00-01	GROUND WIRE TERMINATION
	23-10	SPEECH COMMUNICATION
	23-10-00	COMMUNICATION TRANSCIVER AND ANTENNA
	23-10-10	RADIOPHONE AND ANTENNA
	23-10-20	FLIGHT PHONE, PEDESTAL EXTENSION
	23-10-25	FLIGHT PHONE, CABIN
	23-10-30	FLIGHT PHONE, COCKPIT-RH MAP CASE
	23-30	PASSENGER ADDRESS & ENTERTAINMENT
	23-30-00	CABIN SPEAKER
	23-30-10	FM ANTENNA
	23-30-20	PAGING AMPLIFIER
	23-30-30	PAGING AMPLIFIER, CABIN
	23-30-40	PASSENGER BRIEFER, COCKPIT
	23-40	INTERPHONE
	23-40-00	INTERPHONE AMPLIFIER
	23-40-10	NOSE WHEEL WELL INTERPHONE EQUIPMENT
	23-50	AUDIO INTEGRATING
	23-50-00	COCKPIT SPEAKERS
	23-50-10	AUDIO CONTROL AMPLIFIER
	23-50-30	NOSE AVIONICS JUNCTION BOX
		NC-4 THRU NC-22
	23-50-32	NOSE AVIONICS JUNCTION BOX
		NC-23 AND AFTER
	23-50-40	HEADSET, MICROPHONE AND REEL
	23-60	STATIC DISCHARGING
	23-60-00	STATIC DISCHARGE WICKS
	23-60-10	NOSE COMPARTMENT AVIONICS TRANSZORBS
	23-70	AUDIO & VIDEO MONITORING
	23-70-10	VOICE RECORDER, COCKPIT
24		ELECTRICAL POWER
	24-00	GENERAL
	24-00-00	LIST OF PAGES & TABLE OF CONTENTS
	24-30	DC GENERATION
	24-30-00	BATTERY AND BATTERY VENT
	24-30-10	ATTITUDE HEADING COMPUTER AUXILIARY POWER
	24-30-20	STANDBY GYRO HORIZON INDICATOR AUXILIARY POWER
	24-30-30	STARTER-GENERATOR

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
24		ELECTRICAL POWER (CONT)
	24-40	EXTERNAL POWER
	24-40-00	EXTERNAL POWER RECEPTACLE AND DOOR.....
	24-50	ELECTRICAL LOAD DISTRIBUTION
	24-50-00	LEFT NACELLE ELECTRICAL EQUIPMENT
	24-50-10	RIGHT NACELLE ELECTRICAL EQUIPMENT
	24-50-20	COCKPIT ELECTROLUMINESCENT PANEL POWER SUPPLY
25		EQUIPMENT/FURNISHINGS
	25-00	GENERAL
	25-00-00	LIST OF PAGES & TABLE OF CONTENTS
	25-10	FLIGHT COMPARTMENT
	25-10-00	LOOSE TOOLS AND ACCESSORIES
	25-10-10	FLIGHT COMPARTMENT MISCELLANEOUS FURNISHINGS
	25-10-20	FLIGHT COMPARTMENT SEATS
	25-10-30	FLIGHT COMPARTMENT UPPER SIDEWALL UPHOLSTERY
	25-10-40	FLIGHT COMPARTMENT LOWER SIDEWALL UPHOLSTERY
		NC-4 THRU NC-20
	25-10-41	FLIGHT COMPARTMENT LOWER SIDEWALL UPHOLSTERY
		NC-21 AND AFTER
	25-10-50	FLIGHT COMPARTMENT OVERHEAD UPHOLSTERY
	25-10-70	GLARESHIELD ASSEMBLY
	25-10-80	PEDESTAL UPHOLSTERY
	25-10-90	FLIGHT COMPARTMENT CARPET
		NC-4 THRU NC-20
	25-10-92	FLIGHT COMPARTMENT CARPET
		NC-21 AND AFTER
	25-20	PASSENGER COMPARTMENT
	25-20-00	PASSENGER SEATS
	25-20-10	AFT TWO PLACE COUCH
		NC-4 THRU NC-20
	25-21-00	CABIN WINDOW PANELS
		NC-4 THRU NC-20
	25-21-05	CABIN WINDOW PANELS
		NC-21 AND AFTER
	25-21-20	CABIN LOWER SIDEWALL UPHOLSTERY
		NC-4 THRU NC-20
	25-21-21	CABIN LOWER SIDEWALL UPHOLSTERY
		NC-21 AND AFTER
	25-21-30	CABIN AIRSTAIR DOOR UPHOLSTERY
	25-21-40	EMERGENCY EXIT DOOR UPHOLSTERY
		NC-4 THRU NC-20
	25-21-45	EMERGENCY EXIT DOOR UPHOLSTERY
		NC-21 AND AFTER
	25-21-50	CABIN HEADLINER
		NC-4 THRU NC-20
	25-21-55	CABIN HEADLINER
		NC-21 AND AFTER
	25-21-60	VESTIBULE HEADLINER
	25-21-70	CABIN CARPET
		NC-4 THRU NC-20
	25-21-72	CABIN CARPET
		NC-21 AND AFTER
	25-21-90	aisle container.....
		NC-4 THRU NC-20
	25-22-00	CABIN TABLES.....
	25-22-10	LH FORWARD PARTITION.....
	25-22-20	LH FORWARD REFRESHMENT CABINET
	25-22-30	PYRAMID CABINETS
		NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
25		EQUIPMENT/FURNISHINGS (CONT)
	25-20	PASSENGER COMPARTMENT (CONT)
	25-22-40	RH BAGGAGE/IAPS CABINET..... NC-4 THRU NC-20
	25-22-41	RH BAGGAGE/IAPS CABINET..... NC-21 AND AFTER
	25-22-50	FWD BAGGAGE COMPARTMENT WEB.....
	25-23-00	AFT TOILET CABINET..... NC-21 AND AFTER
	25-23-10	AFT TOILET HEADLINER..... NC-21 AND AFTER
	25-24-00	AFT CABIN BLEED AIR PLUMBING COVER.....
	25-25-00	AFT CABIN PARTITION..... NC-21 AND AFTER
	25-50	CARGO COMPARTMENTS
	25-50-00	AFT BULKHEAD UPHOLSTERY.....
	25-50-01	AFT COMPARTMENT UPHOLSTERY.....
	25-50-10	AFT BAGGAGE COMPARTMENT WEB.....
	25-50-30	AFT BAGGAGE COMPARTMENT PARTITION..... NC-4 THRU NC-20
	25-50-35	AFT BAGGAGE COMPARTMENT CLOSURE..... NC-21 AND AFTER
	25-60	EMERGENCY
	25-60-00	EMERGENCY LOCATOR TRANSMITTER AND ANTENNA.....
	25-60-20	SPARE FUSE AND LIMITER CONTAINER.....
26		FIRE PROTECTION
	26-00	GENERAL
	26-00-00	LIST OF PAGES & TABLE OF CONTENTS.....
	26-10	DETECTION
	26-10-00	ENGINE FIRE DETECTION.....
	26-10-10	BLEED AIR FAIL WARNING.....
	26-10-20	ANNUNCIATOR/SWITCH LIGHT ASSY.....
	26-20	EXTINGUISHING
	26-20-00	ENGINE FIRE EXTINGUISHER.....
	26-20-10	COCKPIT FIRE EXTINGUISHER.....
	26-20-20	CABIN FIRE EXTINGUISHER.....
27		FLIGHT CONTROLS
	27-00	GENERAL
	27-00-00	LIST OF PAGES & TABLE OF CONTENTS.....
	27-00-10	PULLEY BANK PLATFORM.....
	27-00-20	FORWARD WING AND FLAP MONITOR BOX.....
	27-00-30	ELECTRIC TRIM CONTROL.....
	27-00-40	ROLL AND YAW INTERCONNECT.....
	27-20	RUDDER & TAB
	27-20-00	RUDDER CONTROLS.....
	27-20-10	RUDDER PEDALS.....
	27-20-20	RUDDER FORWARD CONTROL BELL CRANKS AND LINKAGE.....
	27-20-30	RUDDER TRIM TAB CONTROL ACTUATOR.....
	27-30	ELEVATOR & TAB
	27-30-00	ELEVATOR CONTROLS.....
	27-30-10	FLIGHT CONTROL COLUMN.....
	27-30-20	ELEVATOR TRIM TAB CONTROL ACTUATOR.....
	27-30-30	STALL WARNING.....

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
27		FLIGHT CONTROLS (CONT)
	27-30	ELEVATOR & TAB (CONT)
	27-30-40	CONTROL COLUMN STABILIZING BOB WEIGHT
	27-31-00	ELEVON CONTROLS
	27-31-10	CONTROL WHEEL
	27-31-20	ELEVON CONTROL MIXER ASSEMBLY
	27-31-30	ELEVON TRIM TAB CONTROL ACTUATOR
	27-40	HORIZONTAL STABILIZERS
	27-40-00	FORWARD WING CONTROL MECHANISM
	27-40-10	FORWARD WING MONITOR SENSOR
	27-50	FLAPS
	27-50-00	FLAP ACTUATING MECHANISM
	27-50-10	FLAP MONITOR SYSTEM
	27-70	GUST LOCK & DAMPER
	27-70-00	SURFACE CONTROL GUST LOCK
28		FUEL
	28-00	GENERAL
	28-00-00	LIST OF PAGES & TABLE OF CONTENTS
	28-10	STORAGE
	28-10-00	FUEL STORAGE AND INTERCONNECT
	28-10-01	CAP AND ADAPTER ASSY
	28-10-10	FUEL VENT SYSTEM
	28-20	DISTRIBUTION
	28-20-00	FUEL DISTRIBUTION SYSTEM
	28-40	INDICATING
	28-40-00	FUEL QUANTITY AND TEMPERATURE PROBES
29		HYDRAULIC POWER
	29-00	GENERAL
	29-00-00	LIST OF PAGES & TABLE OF CONTENTS
	29-00-01	HYDRAULIC SYSTEMS/REFERENCE/
30		ICE & RAIN PROTECTION
	30-00	GENERAL
	30-00-00	LIST OF PAGES & TABLE OF CONTENTS
	30-10	AIRFOIL
	30-10-00	PNEUMATIC DEICE SYSTEM
	30-20	AIR INTAKES
	30-20-00	AIR INLET & INERTIAL VANE ANTI-ICE
	30-40	WINDOWS, WINDSHIELDS & DOORS
	30-40-10	WINDSHIELD WIPER
	30-50	ANTENNAS & RADOMES
	30-50-00	SURFACE DEICE PRINTED CIRCUIT BOARD BOX
	30-70	WATER LINES
	30-70-00	ICE DETECTOR

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
31		INSTRUMENTS
	31-00	GENERAL
	31-00-00	LIST OF PAGES & TABLE OF CONTENTS
	31-40	CENTRAL COMPUTERS
	31-40-00	IAPS CARD CAGE.....
	31-50	CENTRAL WARNING SYSTEMS
	31-50-00	ANNUNCIATOR WARNING LIGHT ASSY
	31-50-10	AURAL WARNING TONE GENERATOR
32		LANDING GEAR
	32-00	GENERAL
	32-00-00	LIST OF PAGES & TABLE OF CONTENTS
	32-10	MAIN GEAR & DOORS
	32-10-00	MAIN LANDING GEAR INSTALLATION
	32-10-10	MAIN LANDING GEAR ASSEMBLY
	32-20	NOSE GEAR & DOORS
	32-20-00	NOSE LANDING GEAR INSTALLATION
	32-20-10	NOSE LANDING GEAR ASSEMBLY
	32-30	EXTENSION AND RETRACTION
	32-30-00	NACELLE HYDRAULIC PLUMBING.....
		/LANDING GEAR/
	32-30-05	AFT FUSELAGE HYDRAULIC PLUMBING
		/LANDING GEAR/
	32-30-10	HYDRAULIC HAND PUMP
	32-30-15	FORWARD FUSELAGE AND NOSE HYDRAULIC PLUMBING
		/LANDING GEAR/
	32-30-20	POWER PACK PRESSURE REGULATOR
	32-40	WHEELS & BRAKES
	32-40-00	BRAKE PLUMBING
	32-40-10	BRAKE FLUID RESERVOIR
	32-40-20	BRAKE ANTI SKID PALLET
	32-40-30	BRAKE ANTI SKID CONTROL BOX.....
	32-50	STEERING
	32-50-00	NOSE GEAR STEERING.....
	32-50-10	NOSE GEAR SHIMMY DAMPER.....
33		LIGHTS
	33-00	GENERAL
	33-00-00	LIST OF PAGES & TABLE OF CONTENTS
	33-10	FLIGHT COMPARTMENT
	33-10-00	COCKPIT LIGHTS
	33-20	PASSENGER COMPARTMENT
	33-20-00	LIGHTS-OVERHEAD ENTRY.....
	33-20-03	CABIN OVERHEAD LIGHTS.....
		NC-4 THRU NC-20
	33-20-07	LIGHTS,CABIN-AFT TOILET
		NC-21 AND AFTER
	33-20-10	CABIN AISLE AND AIRSTAIR DOOR LIGHTS
	33-20-30	CABIN LIGHTING POWER SUPPLIES
		NC-4 THRU NC-20
	33-20-35	CABIN LIGHTING POWER SUPPLIES
		NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
33		LIGHTS (CONT)
	33-20	PASSENGER COMPARTMENT (CONT)
	33-30	CARGO & SERVICE DEPARTMENTS
	33-30-00	AFT BAGGAGE COMPARTMENT LIGHTS
	33-40	EXTERIOR
	33-40-00	NOSE LANDING AND TAXI LIGHTS
	33-40-10	WING LANDING LIGHT
	33-40-20	WING INSPECTION LIGHT
	33-40-50	ANTI-COLLISION LIGHTS
34		NAVIGATION, PITOT/STATIC
	34-00	GENERAL
	34-00-00	LIST OF PAGES & TABLE OF CONTENTS
	34-00-10	AVIONICS FEEDTHRU PLATE
	34-10	FLIGHT ENVIRONMENT DATA
	34-10-00	PITOT AND STATIC PLUMBING
	34-10-20	INSTRUMENT AIR PLUMBING
	34-11-00	AIR DATA COMPUTER AND PLUMBING
	34-20	ATTITUDE & DIRECTION
	34-20-00	MAGNETIC COMPASS
	34-20-10	FLUX DETECTOR
	34-20-20	ATTITUDE HEADING SYSTEM
	34-30	LANDING & TAXIING AIDS
	34-30-00	GLIDESLOPE AND MARKER BEACON ANTENNAS
	34-40	INDEPENDENT POSITION DETERMINING
	34-40-00	WEATHER RADAR TRANSCEIVER AND ANTENNA
	34-50	DEPENDENT POSITION DETERMINING
	34-50-00	NAVIGATION RECEIVER AND ANTENNA
	34-50-10	VLF RECEIVER AND ANTENNA
	34-50-20	ADF RECEIVER AND ANTENNA
	34-50-30	DME TRANSCEIVER AND ANTENNA
	34-50-40	TRANSPONDER AND ANTENNA
	34-50-50	RADIO ALTIMETER TRANSCEIVER AND ANTENNA
	34-50-60	RADIO TUNING ADAPTER
		NC-4 THRU NC-25
35		OXYGEN
	35-00	GENERAL
	35-00-00	LIST OF PAGES & TABLE OF CONTENTS
	35-00-01	OXYGEN SYSTEM INSTALLATION
		NC-4 THRU NC-20
	35-00-02	OXYGEN SYSTEM INSTALLATION
		NC-21 AND AFTER
36		PNEUMATIC
	36-00	GENERAL
	36-00-00	LIST OF PAGES & TABLE OF CONTENTS
	36-00-10	PRESSURIZATION SYSTEM
	36-00-20	WING PRESSURIZATION SYSTEM
	36-10	DISTRIBUTION
	36-10-00	ENGINE COMPARTMENT BLEED AIR

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
38		WATER/WASTE
	38-00	GENERAL
	38-00-00	LIST OF PAGES & TABLE OF CONTENTS
	38-30	WASTE DISPOSAL
	38-30-00	RH FORWARD TOILET
		NC-4 THRU NC-20
	38-30-05	AFT TOILET AND RELIEF TUBE
		NC-21 AND AFTER
	38-30-10	COCKPIT RELIEF TUBE
		NC-4 THRU NC-20
	38-30-12	CABIN RELIEF TUBE
		NC-4 THRU NC-20
	38-30-15	AFT TOILET PLUMBING
		NC-21 AND AFTER
	38-30-30	OVERBOARD DRAIN PLUMBING
		NC-4 THRU NC-20
39		ELECTRIC PANELS, PARTS & INST.
	39-00	GENERAL
	39-00-00	LIST OF PAGES & TABLE OF CONTENTS
	39-10	INSTRUMENT & CONTROL PANELS
	39-10-00	OVERHEAD LIGHT CONTROL PANEL
	39-10-10	CONTROL PEDESTAL ASSEMBLY
	39-10-20	LEFT CIRCUIT BREAKER PANEL
	39-10-30	RIGHT CIRCUIT BREAKER PANEL
	39-10-40	AUXILLIARY CIRCUIT BREAKER PANEL
	39-10-50	AFT FUSELAGE CIRCUIT BREAKER PANEL
	39-10-60	MAIN INSTRUMENT PANEL
	39-10-70	INSTRUMENT SUBPANEL
		NC-4 THRU NC-28
	39-10-71	INSTRUMENT SUBPANEL
		NC-29 AND AFTER
	39-10-80	REVERSIONARY PANELS
	39-20	ELECTRICAL & ELECTRONIC EQUIPMENT RACKS
	39-20-00	COCKPIT SIDEWALL ELECTRICAL EQUIPMENT
	39-20-10	COCKPIT LOWER ELECTRICAL EQUIPMENT
	39-20-20	AFT STEP ELECTRICAL EQUIPMENT
	39-20-30	AFT FUSELAGE ELECTRICAL EQUIPMENT
	39-21-00	CENTER SECTION ELECTRICAL EQUIPMENT
STRUCTURE		
52		DOORS
	52-00	GENERAL
	52-00-00	LIST OF PAGES & TABLE OF CONTENTS
	52-10	PASSENGER/CREW
	52-10-00	CABIN AIRSTAIR DOOR
	52-10-10	CABIN AIRSTAIR DOOR LATCH MECHANISM
	52-10-20	AIRSTAIR DOOR SEAL PLUMBING
	52-20	EMERGENCY EXIT
	52-20-00	EMERGENCY EXIT DOOR
	52-40	SERVICE
	52-40-00	NOSE AVIONICS ACCESS DOORS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
52		DOORS (CONT)
	52-70	DOOR WARNING
	52-70-00	CABIN DOOR WARNING SWITCHES
	52-80	LANDING GEAR
	52-80-10	MAIN LANDING GEAR DOORS
	52-80-20	NOSE LANDING GEAR DOORS
	52-80-30	NOSE LANDING GEAR AFT DOORS
53		FUSELAGE
	53-00	GENERAL
	53-00-00	LIST OF PAGES & TABLE OF CONTENTS
	53-00-01	AFT PRESSURE DOME WIRE SEAL
	53-20	AUXILIARY STRUCTURE
	53-20-00	COCKPIT LEFT SIDE CONSOLE STRUCTURE
	53-20-10	COCKPIT RIGHT SIDE CONSOLE STRUCTURE
	53-20-20	CONTROL PEDESTAL STRUCTURE
	53-20-30	PEDESTAL EXTENSION STRUCTURE
	53-20-40	SUBPANEL STRUCTURE ASSEMBLY
	53-20-50	COCKPIT FLOOR PANELS
	53-20-60	CABIN FLOOR AND AISLE PANELS
	53-20-70	NOSE AVIONICS SHELVES
	53-20-80	MAIN INSTRUMENT PANEL STRUCTURE
	53-21-00	FUSELAGE ELECTRICAL WIRE CONDUIT
	53-21-10	FLIGHT CONTROL CABLE TRAY
	53-25-00	DYNAMIC ABSORBER
	53-30	PLATES/SKIN
	53-30-00	NOSE SKINS AND PLATES
	53-30-10	AFT FUSELAGE ACCESS DOORS
	53-40	ATTACH FITTINGS
	53-40-00	MAIN PANEL AND SUBPANEL SUPPORT
	53-40-10	ELECTRONIC FLIGHT DISPLAYS SUPPORT
	53-40-20	NOSE ATTACH FITTINGS
	53-40-30	AVIONICS INTERFACE RACK
	53-50	AERODYNAMIC FAIRINGS
	53-50-00	RADOME AND TAIL CONE
	53-50-20	FORWARD WING FAIRINGS
	53-50-40	AFT WING/FUSELAGE FAIRING/
54		NACELLES
	54-00	GENERAL
	54-00-00	LIST OF PAGES & TABLE OF CONTENTS
	54-10	MAIN FRAME
	54-10-00	NACELLE INSTALLATION
	54-10-10	NACELLE
	54-10-20	NACELLE FIREWALL LOWER STRUCTURE
	54-10-30	NACELLE FIREWALL
	54-11-00	NACELLE FIREWALL INSULATION
	54-30	PLATES/SKIN
	54-30-00	COWLING INSTALLATION
	54-30-10	UPPER AFT COWLING
	54-30-20	LOWER AFT COWLING
	54-30-30	UPPER FORWARD COWLING
	54-30-40	LOWER FORWARD COWLING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
55		STABILIZERS
	55-00	GENERAL
	55-00-00	LIST OF PAGES & TABLE OF CONTENTS
	55-10	HORIZONTAL STABILIZERS
	55-10-00	FORWARD WING.....
	55-20	ELEVATOR/ELEVON
	55-20-00	ELEVATOR.....
	55-30	VERTICAL STABILIZER
	55-30-00	TIPSAIL
	55-40	RUDDER
	55-40-00	TIPSAIL RUDDER
	55-50	ATTACH FITTINGS
	55-60-00	VENTRAL STABILIZER
56		WINDOWS
	56-00	GENERAL
	56-00-00	LIST OF PAGES & TABLE OF CONTENTS
	56-10	FLIGHT COMPARTMENT
	56-10-00	FLIGHT COMPARTMENT WINDOWS.....
	56-20	CABIN
	56-20-00	CABIN POLARIZED WINDOWS
	56-20-10	CABIN OUTER WINDOWS
	56-20-20	AFT TOILET WINDOW INSTALLATION
57		WINGS
	57-00	GENERAL
	57-00-00	LIST OF PAGES & TABLE OF CONTENTS
	57-10	MAIN FRAME
	57-10-00	AFT WING INSTALLATION
	57-10-10	AFT WING
	57-10-20	AFT WING BOX ASSEMBLY
	57-11-00	MAIN LANDING GEAR CLOSURE SUPPORT
		NC-4 THRU NC-33
	57-11-10	MAIN LANDING GEAR CLOSURE SUPPORT
		NC-34 AND AFTER
	57-20	AUXILIARY STRUCTURE
	57-20-00	FLAP FAIRINGS
	57-20-10	WING ELECTRICAL WIRE CONDUIT
	57-20-20	ELEVON FENCE
	57-20-30	AFT WING FLAP COVE.....
	57-20-40	AFT WING ACCESS DOORS.....
	57-21-00	AFT WING TRAILING EDGE INBD COVE.....
	57-40	ATTACH FITTINGS
	57-40-00	LEADING EDGE
	57-40-10	AFT WING LEADING EDGE VORTILON.....
	57-50	FLIGHT SURFACES
	57-50-00	FLAP INSTALLATION
	57-60-00	ELEVON INSTALLATION.....

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
PROPELLER/ROTOR		
61		PROPELLERS
	61-00	GENERAL
	61-00-00	LIST OF PAGES & TABLE OF CONTENTS
	61-10	PROPELLER ASSEMBLY
	61-10-00	PROPELLER
	61-20	CONTROLLING
	61-20-00	PROPELLER SYNCHROPHASER
	61-20-10	PROPELLER AUTOFEATHER
	61-20-20	GROUND IDLE STOP SOLENOID
POWER PLANT		
71		POWER PLANT
	71-00	GENERAL
	71-00-00	LIST OF PAGES & TABLE OF CONTENTS
	71-00-10	POWER PLANT
	71-20	MOUNTS
	71-20-00	ENGINE MOUNT
	71-60	AIR INTAKES
	71-60-00	ENGINE AIR PLENUM AND INLET DUCT
	71-70	ENGINE DRAINS
	71-70-00	ENGINE DRAINS
72		ENGINE
	72-00	GENERAL
	72-00-00	LIST OF PAGES & TABLE OF CONTENTS
	72-00-01	ENGINE/REFERENCE/
73		ENGINE FUEL & CONTROL
	73-00	GENERAL
	73-00-00	LIST OF PAGES & TABLE OF CONTENTS
	73-10	DISTRIBUTION
	73-10-00	ENGINE SECTION FUEL
	73-10-05	ENGINE FUEL FILTER ASSEMBLY
	73-10-10	FUEL PURGE TANK
	73-20	CONTROLLING
	73-20-00	CONDITION LEVER FUEL CUTOFF SWITCH
	73-30	INDICATING
	73-30-00	FUEL FLOWMETER TRANSMITTER
74		IGNITION
	74-00	GENERAL
	74-00-00	LIST OF PAGES & TABLE OF CONTENTS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ATA-100 SYSTEM - CHAPTER INDEX GUIDE

CHAPTER	SUB-SECTION	TITLE
74		IGNITION (CONT)
	74-10	ELECTRICAL POWER SUPPLY
	74-10-00	IGNITION EXCITER.....
75		AIR
	75-00	GENERAL
	75-00-00	LIST OF PAGES & TABLE OF CONTENTS
	75-20	ACCESSORY COOLING
	75-20-00	GENERATOR COOLING.....
76		ENGINE CONTROLS
	76-00	GENERAL
	76-00-00	LIST OF PAGES & TABLE OF CONTENTS
	76-10	POWER CONTROL
	76-10-00	PEDESTAL ENGINE CONTROL MECHANISM
	76-10-10	ENGINE CONTROLS
	76-10-20	THROTTLE GO AROUND SWITCH.....
77		ENGINE INDICATING
	77-00	GENERAL
	77-00-00	LIST OF PAGES & TABLE OF CONTENTS
	77-30	ANALYZERS
	77-40-00	INTEGRATED ENGINE INSTRUMENT SYSTEMS.....
78		EXHAUST
	78-00	GENERAL
	78-00-00	LIST OF PAGES & TABLE OF CONTENTS
	78-10	COLLECTOR/NOZZLE
	78-10-00	ENGINE EXHAUST STACKS
79		OIL
	79-00	GENERAL
	79-00-00	LIST OF PAGES & TABLE OF CONTENTS
	79-20	DISTRIBUTION
	79-20-00	ENGINE OIL SYSTEM.....
	79-20-10	OIL BREATHER LINE
	79-30	INDICATING
	79-30-00	OIL LEVEL INDICATOR
80		STARTING
	80-00	GENERAL
	80-00-00	LIST OF PAGES & TABLE OF CONTENTS
	80-00-01	STARTER/REFERENCE/.....

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
A		
ABSORBER, DYNAMIC	FUSELAGE	53-25-00
ACCUMULATOR, HYDRAULIC	LANDING GEAR	32-40-20
ACTUATOR ASSEMBLY, FWD WING CONTROL	FLIGHT CONTROLS	27-40-00
ACTUATOR ASSEMBLY, ICE VANE	ICE & RAIN PROTECTION	30-20-00
ACTUATOR ASSEMBLY, NOSE GEAR DOOR	LANDING GEAR	32-20-00
ACTUATOR, ELEVATOR TRIM TAB CONTROL	FLIGHT CONTROLS	27-30-20
ACTUATOR, ELEVON TRIM TAB CONTROL	FLIGHT CONTROLS	27-31-30
ACTUATOR, FLAP	FLIGHT CONTROLS	27-50-00
ACTUATOR, RUDDER	STABILIZERS	55-40-00
ACTUATOR, RUDDER TRIM TAB CONTROL	FLIGHT CONTROLS	27-20-30
ADF ANTENNA	NAVIGATION	34-50-20
ADF SYSTEM	NAVIGATION	34-50-20
AEROFICHE SUBSCRIPTION CARD	EQUIPMENT/FURNISHINGS	25-10-00
AFT BAGGAGE COMPARTMENT CLOSURE	EQUIPMENT/FURNISHINGS	25-50-35
AFT BAGGAGE COMPARTMENT LIGHTS	LIGHTS	33-30-00
AFT BAGGAGE COMPARTMENT PARTITION	EQUIPMENT/FURNISHINGS	25-50-30
AFT BAGGAGE COMPARTMENT WEB	EQUIPMENT/FURNISHINGS	25-50-10
AFT BULKHEAD UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-50-01
AFT CABIN BLEED AIR PLUMBING COVER	EQUIPMENT/FURNISHINGS	25-24-00
AFT CABIN PARTITION	EQUIPMENT/FURNISHINGS	25-25-00
AFT COMPARTMENT UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-50-00
AFT FUSELAGE ACCESS DOORS	FUSELAGE	53-30-10
AFT FUSELAGE CIRCUIT BREAKER PANEL	ELEC PANELS, PARTS, INST.	39-10-50
AFT FUSELAGE ELECTRICAL EQUIPMENT	ELEC PANELS, PARTS, INST.	39-20-30
AFT FUSELAGE HYDRAULIC PLUMBING	LANDING GEAR	32-30-10
AFT PRESSURE DOME WIRE SEAL	FUSELAGE	53-00-01
AFT TOILET	WATER/WASTE	38-30-05
AFT TOILET CABINET	EQUIPMENT/FURNISHINGS	25-23-00
AFT TOILET HEADLINER	EQUIPMENT/FURNISHINGS	25-23-10
AFT TOILET PLUMBING	WATER/WASTE	38-30-15
AFT TOILET WINDOW	WINDOWS	56-20-20
AFT TWO PLACE COUCH	EQUIPMENT/FURNISHINGS	25-20-10
AFT WING	WINGS	57-10-10
AFT WING ACCESS DOORS	WINGS	57-20-40
AFT WING BOX ASSEMBLY	WINGS	57-10-20
AFT WING FLAP COVE	WINGS	57-20-30
AFT WING FUEL TANK	FUEL	28-10-00
AFT WING LEADING EDGE	WINGS	57-40-00
AFT WING TRAILING EDGE INBD COVE	WINGS	57-21-00
AFT WING/FUSELAGE FAIRING/	FUSELAGE	53-50-40
AHC AUXILIARY POWER SUPPLY	ELECTRICAL POWER	24-30-10
AIR DATA COMPUTER AND PLUMBING	NAVIGATION	34-11-00
AIR INFLOW AND DISTRIBUTION	ENVIRONMENTAL SYSTEMS	21-20-00
AIR INLET AND INERTIAL VANE ANTI-ICE	ICE & RAIN PROTECTION	30-20-00
AIR INLET, AMBIENT	ENVIRONMENTAL SYSTEMS	21-20-40
AIR INTAKE LIP ASSEMBLY	ICE & RAIN PROTECTION	30-20-00
AIR PLUMBING, INSTRUMENT	NAVIGATION	34-10-20
AIRSPEED INDICATOR	ELEC PANELS, PARTS, INST.	39-10-60
AIRSTAIR DOOR SEAL PLUMBING	DOORS	52-10-20
AISLE CONTAINER	EQUIPMENT/FURNISHINGS	25-21-90
ALTIMETER, STANDBY/PNEUMATIC/	ELEC PANELS, PARTS, INST.	39-10-60
ALTITUDE INDICATOR	ELEC PANELS, PARTS, INST.	39-10-60
ALTITUDE PRESSURE SWITCH, CABIN	OXYGEN	35-00-01
AMBIENT AIR INLET	ENVIRONMENTAL SYSTEMS	21-20-40
AMPLIFIER, AUDIO CONTROL	COMMUNICATIONS	23-50-10
AMPLIFIER, INTERPHONE	COMMUNICATIONS	23-40-00
AMPLIFIER, PAGING	COMMUNICATIONS	23-30-20
ANNUNCIATOR WARNING LIGHT	INSTRUMENTS	31-50-00
ANTENNA, ADF	NAVIGATION	34-50-20
ANTENNA, DME	NAVIGATION	34-50-30
ANTENNA, ELT	EQUIPMENT/FURNISHINGS	25-50-00
ANTENNA, FM RECEIVER	COMMUNICATIONS	23-30-10
ANTENNA, GLIDESLOPE	NAVIGATION	34-30-00
ANTENNA, MARKER BEACON	NAVIGATION	34-30-00
ANTENNA, RADIO ALTIMETER	NAVIGATION	34-50-50

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
A		
ANTENNA, RADIOPHONE	COMMUNICATIONS	23-10-10
ANTENNA, TRANSPONDER	NAVIGATION	34-50-40
ANTENNA, VHF COMM	COMMUNICATIONS	23-10-00
ANTENNA, VHF NAV	NAVIGATION	34-50-00
ANTENNA, VLF	NAVIGATION	34-50-10
ANTENNA, WEATHER RADAR	NAVIGATION	34-40-00
ANTI-COLLISION LIGHTS	LIGHTS	33-40-50
ANTI-SKID BRAKE PALLET	LANDING GEAR	32-40-20
ANTI-SKID BRAKE SYSTEM	LANDING GEAR	32-40-20
ANTI-SKID LOW PRESSURE WARNING SWITCH	LANDING GEAR	32-40-20
ANTI-SKID MOTOR AND PUMP ASSEMBLY	LANDING GEAR	32-40-20
ANTI-SKID PUMP OUTPUT CONTROL SWITCH	LANDING GEAR	32-40-20
ARM, NOSE GEAR STEERING	LANDING GEAR	32-20-10
ASHTRAY, CREW	EQUIPMENT/FURNISHINGS	25-10-40
AUDIO CONTROL AMPLIFIER	COMMUNICATIONS	23-50-10
AURAL WARNING TONE GENERATOR	INSTRUMENTS	31-50-10
AUTOFEATHER, PROPELLER	PROPELLERS	61-20-10
AUTOMATIC TRIM COMPUTER	AUTO FLIGHT	22-11-30
AUTOPILOT ENGAGE PANEL	AUTO FLIGHT	22-11-30
AUTOPILOT PITCH SYSTEM SERVO	AUTO FLIGHT	22-11-00
AUTOPILOT ROLL SYSTEM SERVO	AUTO FLIGHT	22-11-10
AUTOPILOT YAW SYSTEM SERVO	AUTO FLIGHT	22-11-20
AUXILIARY CIRCUIT BREAKER PANEL	ELEC PANELS, PARTS, INST.	39-10-40
AVIONICS ACCESSORIES	COMMUNICATIONS	23-50-40
AVIONICS COOLING, FUSELAGE	ENVIRONMENTAL SYSTEMS	21-55-00
AVIONICS COOLING, NOSE	ENVIRONMENTAL SYSTEMS	21-55-10
AVIONICS FEEDTHRU PLATE	NAVIGATION	34-00-10
AVIONICS HAND MICROPHONE	COMMUNICATIONS	23-50-40
AVIONICS INTERFACE RACK	FUSELAGE	53-40-30
AVIONICS JUNCTION BOX, NOSE	COMMUNICATIONS	23-50-30
B		
BAG, FLIGHT	EQUIPMENT/FURNISHINGS	25-10-00
BAG, MOTION SICKNESS	EQUIPMENT/FURNISHINGS	25-10-00
BAGGAGE COMPARTMENT WEB, FWD	EQUIPMENT/FURNISHINGS	25-22-50
BAR, TOW	EQUIPMENT/FURNISHINGS	25-10-00
BARREL ASSEMBLY, SHIMMY DAMPER	LANDING GEAR	32-50-10
BATTERY AND BATTERY VENT	ELECTRICAL POWER	24-30-00
BATTERY SUPPORT BRACKET	NACELLES	54-10-10
BATTERY, 34 AMP	ELECTRICAL POWER	24-30-00
BEECHCRAFT SERVICE CENTER DIRECTORY	EQUIPMENT/FURNISHINGS	25-10-00
BLEED AIR FAIL WARNING	FIRE PROTECTION	26-10-10
BLEED AIR FAIL WARNING CONTROL UNIT	FIRE PROTECTION	26-10-10
BLEED AIR INFLOW BYPASS VALVE	ENVIRONMENTAL SYSTEMS	21-20-00
BLEED AIR PLUMBING	ENVIRONMENTAL SYSTEMS	21-20-20
BLEED AIR PLUMBING COVER, AFT CABIN	EQUIPMENT/FURNISHINGS	25-24-00
BLEED AIR, ENGINE COMPARTMENT	PNEUMATIC	36-10-00
BLOWER ASSEMBLY, AFT VENTILATION	ENVIRONMENTAL SYSTEMS	21-20-35
BLOWER ASSEMBLY, FWD VENTILATION	ENVIRONMENTAL SYSTEMS	21-20-30
BLOWER ASSEMBLY, VANE AXIAL	ENVIRONMENTAL SYSTEMS	21-50-20
BOB WEIGHT, CONTROL COLUMN STABILIZING	FLIGHT CONTROLS	27-30-40
BOOKLET, SAFETY INFORMATION	EQUIPMENT/FURNISHINGS	25-10-00
BOOM MICROPHONE HEADSET	EQUIPMENT/FURNISHINGS	25-10-00
BOOT ASSEMBLY, CONTROL COLUMN TEE	FUSELAGE	53-20-50
BOTTLE, ENGINE FIRE EXTINGUISHER	FIRE PROTECTION	26-20-00
BOX ASSEMBLY, AFT WING	WINGS	57-10-20
BOX, BRAKE ANTI-SKID CONTROL	LANDING GEAR	32-40-30
BRACE ASSEMBLY, MAIN GEAR	LANDING GEAR	32-10-10
BRACE ASSEMBLY, NOSE LANDING GEAR	LANDING GEAR	32-20-10
BRACKET, BATTERY SUPPORT	NACELLES	54-10-10
BRACKET, LANDING GEAR HYDRAULIC PUMP	NACELLES	54-10-10
BRAKE ANTI-SKID CONTROL BOX	LANDING GEAR	32-40-30
BRAKE ASSEMBLY	LANDING GEAR	32-10-10
BRAKE ASSEMBLY, CONTROL FRICTION	ENGINE CONTROLS	76-10-00

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
B		
BRAKE FLUID RESERVOIR	LANDING GEAR	32-40-10
BRAKE PALLET, ANTI-SKID	LANDING GEAR	32-40-20
BRAKE PLUMBING	LANDING GEAR	32-40-00
BRAKE SYSTEM, ANTI-SKID	LANDING GEAR	32-40-20
BRAKE VALVE, POWER	LANDING GEAR	32-40-20
BRUSH, ELECTRICAL CONTACT	ELECTRICAL POWER	24-30-30
BUCKLE ASSEMBLY, LEFT ROTARY	EQUIPMENT/FURNISHINGS	25-10-20
BULB, FUEL TEMPERATURE	FUEL	28-40-00
BULKHEAD ASSEMBLY/STA 46.00/	FUSELAGE	53-20-70
C		
CABIN AFT TOILET LIGHTS	LIGHTS	33-20-07
CABIN AIRSTAIR DOOR	DOORS	52-10-00
CABIN AIRSTAIR DOOR UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-21-30
CABIN AISLE AND AIRSTAIR DOOR LIGHTS	LIGHTS	33-20-10
CABIN CARPET	EQUIPMENT/FURNISHINGS	25-21-70
CABIN DOOR WARNING SWITCH	DOORS	52-70-00
CABIN FLOOR AND AISLE DROP PANELS	FUSELAGE	53-20-60
CABIN FLOOR PANELS	FUSELAGE	53-20-60
CABIN HEADLINER	EQUIPMENT/FURNISHINGS	25-21-50
CABIN LIGHTING POWER SUPPLIES	LIGHTS	33-20-30
CABIN LOWER SIDEWALL UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-21-20
CABIN OUTER WINDOWS	WINDOWS	56-20-10
CABIN OVERHEAD DUCTS	ENVIRONMENTAL SYSTEMS	21-20-25
CABIN OVERHEAD ENTRY	LIGHTS	33-20-00
CABIN OVERHEAD LIGHTS	LIGHTS	33-20-03
CABIN PARTITION, AFT	EQUIPMENT/FURNISHINGS	25-25-00
CABIN POLARIZED WINDOWS	WINDOWS	56-20-00
CABIN PRESSURIZATION MODULE	ENVIRONMENTAL SYSTEMS	21-30-10
CABIN SIDEWALL DUCTS	ENVIRONMENTAL SYSTEMS	21-20-20
CABIN SPEAKER	COMMUNICATIONS	23-30-00
CABIN TABLES	EQUIPMENT/FURNISHINGS	25-22-00
CABIN TEMPERATURE CONTROL	ENVIRONMENTAL SYSTEMS	21-60-00
CABIN TEMPERATURE SENSOR	ENVIRONMENTAL SYSTEMS	21-60-00
CABIN WINDOW UPHOLSTERY PANEL	EQUIPMENT/FURNISHINGS	25-21-00
CABINET, AFT TOILET	EQUIPMENT/FURNISHINGS	25-23-00
CABINET, LH FORWARD REFRESHMENT	EQUIPMENT/FURNISHINGS	25-22-20
CABINET, RH BAGGAGE/IAPS	EQUIPMENT/FURNISHINGS	25-22-40
CABINETS, PYRAMID	EQUIPMENT/FURNISHINGS	25-22-30
CABLE ASSEMBLY, ENGINE CONTROL	ENGINE CONTROLS	76-10-10
CABLE TRAY, FLIGHT CONTROL	FUSELAGE	53-21-10
CABLE, ELEVON CONTROL	FLIGHT CONTROLS	27-31-00
CARD, AEROFICHE SUBSCRIPTION	EQUIPMENT/FURNISHINGS	25-10-00
CARD, OWNERS NOTIFICATION REPLY	EQUIPMENT/FURNISHINGS	25-10-00
CARD, PASSENGER BRIEFING	EQUIPMENT/FURNISHINGS	25-10-00
CARPET, CABIN	EQUIPMENT/FURNISHINGS	25-21-70
CARPET, FLIGHT COMPARTMENT	EQUIPMENT/FURNISHINGS	25-10-90
CENTER SECTION ELECTRICAL EQUIPMENT	ELEC PANELS, PARTS, INST.	39-21-00
CHAIRS, PASSENGER	EQUIPMENT/FURNISHINGS	25-20-00
CHESS PIECES	EQUIPMENT/FURNISHINGS	25-10-00
CHESS SET STORAGE INSTRUCTIONS	EQUIPMENT/FURNISHINGS	25-10-00
CIRCUIT BREAKER PANEL, AFT FUSELAGE	ELEC PANELS, PARTS, INST.	39-10-50
CIRCUIT BREAKER PANEL, LEFT	ELEC PANELS, PARTS, INST.	39-10-20
CIRCUIT BREAKER PANEL, RIGHT	ELEC PANELS, PARTS, INST.	39-10-20
CLOCK	ELEC PANELS, PARTS, INST.	39-10-60
CLOSURE, LANDING GEAR SUPPORT	WINGS	57-11-00
COAT HANGER	EQUIPMENT/FURNISHINGS	25-10-00
COCKPIT DUCTS	ENVIRONMENTAL SYSTEMS	21-20-15
COCKPIT EL PANEL POWER SUPPLY	ELECTRICAL POWER	24-50-20
COCKPIT FLOOR PANELS	FUSELAGE	53-20-50
COCKPIT LIGHTS	LIGHTS	33-10-00
COCKPIT LOWER ELECTRICAL EQUIPMENT	ELEC PANELS, PARTS, INST.	39-20-10
COCKPIT RELIEF TUBE	WATER/WASTE	38-30-10
COCKPIT RIGHT SIDE CONSOLE STRUCTURE	FUSELAGE	53-20-10

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
-------------------------------	--------------	----------------------

C

COCKPIT SIDEWALL ELECTRICAL EQUIPMENT	ELEC PANELS, PARTS, INST.	39-20-00
COCKPIT SPEAKER	COMMUNICATIONS	23-50-00
COIL ASSEMBLY, FWD EVAPORATOR	ENVIRONMENTAL SYSTEMS	21-50-60
COLUMN ASSEMBLY, FLIGHT CONTROL	FLIGHT CONTROLS	27-30-10
COMPARTMENT CLOSURE, AFT BAGGAGE	EQUIPMENT/FURNISHINGS	25-50-35
COMPASS, MAGNETIC	NAVIGATION	34-20-00
COMPRESSOR, AIR CONDITIONING	ENVIRONMENTAL SYSTEMS	21-50-50
COMPUTER, STALL WARNING	FLIGHT CONTROLS	27-30-30
CONDENSER ASSEMBLY, COOLING	ENVIRONMENTAL SYSTEMS	21-50-20
CONDITION CONTROL LEVER ASSEMBLY	ENGINE CONTROLS	76-10-00
CONDITION CONTROL LEVER KNOB	ENGINE CONTROLS	76-10-00
CONDITION LEVER FUEL CUTOFF SWITCH	ENGINE FUEL & CONTROL	73-20-00
CONNECTOR ASSEMBLY, BATTERY	ELECTRICAL POWER	24-30-00
CONSOLE STRUCTURE, COCKPIT LEFT	FUSELAGE	53-20-00
CONSOLE STRUCTURE, COCKPIT RIGHT	FUSELAGE	53-20-00
CONTAINER ASSEMBLY, OXYGEN MASK	OXYGEN	35-00-01
CONTAINER, AISLE	EQUIPMENT/FURNISHINGS	25-21-90
CONTAINER, OXYGEN MASK	EQUIPMENT/FURNISHINGS	25-21-50
CONTAINER, SPARE FUSE AND LIMITER	EQUIPMENT/FURNISHINGS	25-60-20
CONTROL ASSEMBLY, DEFROST	ENVIRONMENTAL SYSTEMS	21-20-15
CONTROL BOX, ELECTRIC TRIM	FLIGHT CONTROLS	27-00-30
CONTROL COLUMN STABILIZING BOB WEIGHT	FLIGHT CONTROLS	27-30-40
CONTROL COLUMN TEE BOOT	FUSELAGE	53-20-50
CONTROL FRICTION BRAKE ASSEMBLY	ENGINE CONTROLS	76-10-00
CONTROL PEDESTAL	ELEC PANELS, PARTS, INST.	39-10-10
CONTROL PEDESTAL STRUCTURE	FUSELAGE	53-20-20
CONTROL WHEEL	FLIGHT CONTROLS	27-31-10
CONTROL WHEEL ASSEMBLY, COPILOT'S	FLIGHT CONTROLS	27-31-10
CONTROL WHEEL ASSEMBLY, PILOT'S	FLIGHT CONTROLS	27-31-10
CONTROLLER, FLAP	FLIGHT CONTROLS	27-50-00
COOLER ASSEMBLY, OIL	OIL	79-20-00
COOLING SYSTEM COMPRESSOR	ENVIRONMENTAL SYSTEMS	21-50-50
COPLOT'S CONTROL WHEEL ASSEMBLY	FLIGHT CONTROLS	27-31-10
COPLOT'S SEAT	EQUIPMENT/FURNISHINGS	25-10-20
COUCH, AFT TWO PLACE	EQUIPMENT/FURNISHINGS	25-20-10
COUPLER/GLS/	NAVIGATION	34-30-00
COUPLER/MKR BCN/	NAVIGATION	34-30-00
COUPLER, NAV ANTENNA	NAVIGATION	34-50-00
COVER ASSEMBLY, AISLE DROP	FUSELAGE	53-20-60
COVER ASSEMBLY, RUDDER PEDAL ADJUSTMENT	FUSELAGE	53-20-50
COVER, AFT CABIN BLEED AIR PLUMBING	EQUIPMENT/FURNISHINGS	25-24-00
COVER, ENGINE INLET DUST	EQUIPMENT/FURNISHINGS	25-10-00
COVER, PITOT TUBE	EQUIPMENT/FURNISHINGS	25-10-00
COWLING INSTALLATION	NACELLES	54-30-00
COWLING, LOWER AFT	NACELLES	54-30-20
COWLING, LOWER FWD	NACELLES	54-30-40
COWLING, UPPER AFT	NACELLES	54-30-10
COWLING, UPPER FWD	NACELLES	54-30-30
CUPHOLDER, CREW	EQUIPMENT/FURNISHINGS	25-10-40
CYLINDER, OXYGEN	OXYGEN	35-00-01

D

DATA CONCENTRATOR, ENGINE	IND/RECORDING SYSTEMS	31-40-00
DEFROST CONTROL ASSEMBLY	ENVIRONMENTAL SYSTEMS	21-20-15
DETECTOR, FLUX	NAVIGATION	34-20-10
DETECTOR, ICE	ICE & RAIN PROTECTION	30-70-00
DIRECTORY, BEECHCRAFT SERVICE CENTER	EQUIPMENT/FURNISHINGS	25-10-00
DISPLAY UNIT, ENGINE	ELEC PANELS, PARTS, INST.	39-10-60
DISPLAY UNIT, MULTIFUNCTION	ELEC PANELS, PARTS, INST.	39-10-60
DISPLAY UNIT, NAVIGATION	ELEC PANELS, PARTS, INST.	39-10-60
DISPLAY UNIT, PRIMARY FLIGHT	ELEC PANELS, PARTS, INST.	39-10-60
DISPLAY UNIT, SENSOR	ELEC PANELS, PARTS, INST.	39-10-60
DISPLAYS SUPPORT, ELECTRONIC FLIGHT	FUSELAGE	53-40-10
DME ANTENNA	NAVIGATION	34-50-30

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
D		
DME SYSTEM	NAVIGATION	34-50-30
DOOR ACTUATOR ASSEMBLY, NOSE GEAR	LANDING GEAR	32-20-00
DOOR ASSEMBLY, MAIN LANDING GEAR	DOORS	52-80-10
DOOR ASSEMBLY, NOSE LANDING GEAR	DOORS	52-80-30
DOOR ASSY, EXTERNAL POWER RECEPTACLE	WINGS	57-10-00
DOOR HANDLE, EMERGENCY EXIT	DOORS	52-20-00
DOOR HANDLE, INSIDE	DOORS	52-10-10
DOOR HANDLE, OUTSIDE FLUSH	DOORS	52-10-10
DOOR LATCHING MECHANISM, EMERGENCY EXIT	DOORS	52-20-00
DOOR PLACARD, CABIN AIRSTAIR	EQUIPMENT/FURNISHINGS	25-21-30
DOOR PUSHROD ASSEMBLY, NOSE GEAR	LANDING GEAR	32-20-00
DOOR UPHOLSTERY, CABIN AIRSTAIR	EQUIPMENT/FURNISHINGS	25-21-30
DOOR WARNING STREAMER PIN	EQUIPMENT/FURNISHINGS	25-10-00
DOOR, AFT WING ACCESS	WINGS	57-20-40
DOOR, CABIN AIRSTAIR	DOORS	52-10-00
DOOR, EMERGENCY EXIT	DOORS	52-20-00
DOORS, AFT FUSELAGE ACCESS	FUSELAGE	53-30-10
DOORS, NOSE AVIONICS ACCESS	DOORS	52-40-00
DOWNLOCK SENSOR SWITCH, MAIN GEAR	LANDING GEAR	32-10-00
DRAG BRACE, NOSE GEAR	LANDING GEAR	32-20-00
DRAIN VALVE, ENGINE OIL	OIL	79-20-00
DRAIN VALVE, FUEL	FUEL	28-10-00
DRAINS, ENGINE	POWER PLANT	71-70-00
DRIVER, SENSOR DISPLAY	NAVIGATION	34-20-20
DUCT, OIL COOLER OUTLET	OIL	79-20-00
DUCTS, CABIN OVERHEAD	ENVIRONMENTAL SYSTEMS	21-20-25
DUCTS, CABIN SIDEWALL	ENVIRONMENTAL SYSTEMS	21-20-20
DUCTS, COCKPIT	ENVIRONMENTAL SYSTEMS	21-20-15
DYNAMIC ABSORBER	FUSELAGE	53-25-00
E		
ELECTRIC TRIM CONTROL	FLIGHT CONTROLS	27-00-30
ELECTRICAL EQUIPMENT, AFT FUSELAGE	ELEC PANELS, PARTS, INST.	39-20-30
ELECTRICAL EQUIPMENT, CENTER SECTION	ELEC PANELS, PARTS, INST.	39-21-00
ELECTRICAL EQUIPMENT, COCKPIT LOWER	ELEC PANELS, PARTS, INST.	39-20-10
ELECTRICAL EQUIPMENT, LEFT NACELLE	ELECTRICAL POWER	24-50-00
ELECTRICAL EQUIPMENT, RIGHT NACELLE	ELECTRICAL POWER	24-50-10
ELECTRICAL WIRE CONDUIT, FUSELAGE	FUSELAGE	53-21-00
ELECTROLUMINESCENT PANELS INVERTER	ELEC PANELS, PARTS, INST.	39-20-20
ELECTRONIC FLIGHT DISPLAYS SUPPORT	FUSELAGE	53-40-10
ELEVATOR	STABILIZERS	55-20-00
ELEVATOR CONTROLS	FLIGHT CONTROLS	27-30-00
ELEVATOR TAB ASSEMBLY	STABILIZERS	55-20-00
ELEVATOR TRIM TAB CONTROL ACTUATOR	FLIGHT CONTROLS	27-30-20
ELEVON ASSEMBLY	WINGS	57-60-00
ELEVON CONTROL CABLE	FLIGHT CONTROLS	27-31-00
ELEVON CONTROL MIXER ASSEMBLY	FLIGHT CONTROLS	27-31-20
ELEVON CONTROLS	FLIGHT CONTROLS	27-31-00
ELEVON FENCE	WINGS	57-20-20
ELEVON TRIM TAB CONTROL ACTUATOR	FLIGHT CONTROLS	27-31-30
EMERGENCY EXIT DOOR	DOORS	52-20-00
EMERGENCY EXIT DOOR LATCHING MECHANISM	DOORS	52-20-00
EMERGENCY EXIT DOOR UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-21-40
EMERGENCY LOCATOR TRANSMITTER	EQUIPMENT/FURNISHINGS	25-60-00
ENG FIRE EXT SWITCH LIGHT ASSY	FIRE PROTECTION	26-10-20
ENGINE AIR PLENUM AND INLET DUCT	POWER PLANT	71-60-00
ENGINE COMPARTMENT BLEED AIR	PNEUMATIC	36-10-00
ENGINE CONTROL CABLE ASSEMBLY	ENGINE CONTROLS	76-10-10
ENGINE CONTROL MECHANISM, PEDESTAL	ENGINE CONTROLS	76-10-00
ENGINE CONTROLS	ENGINE CONTROLS	76-10-10
ENGINE DATA CONCENTRATOR	IND/RECORDING SYSTEMS	31-40-00
ENGINE DISPLAY UNIT	ELEC PANELS, PARTS, INST.	39-10-60
ENGINE DRAINS	POWER PLANT	71-70-00
ENGINE EXHAUST COVER	EQUIPMENT/FURNISHINGS	25-10-00

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
E		
ENGINE EXHAUST STACKS	EXHAUST	78-10-00
ENGINE FIRE DETECTION	FIRE PROTECTION	26-10-00
ENGINE FUEL FILTER	ENGINE FUEL & CONTROL	73-10-05
ENGINE INLET DUST COVER	EQUIPMENT/FURNISHINGS	25-10-00
ENGINE MOUNT	POWER PLANT	71-20-00
ENGINE OIL SYSTEM	OIL	79-20-00
ENGINE SECTION FUEL	ENGINE FUEL & CONTROL	73-10-00
ENGINE TORQUEMETER TRANSDUCER	ENGINE INDICATING	77-40-00
ENGINE/REFERENCE/	ENGINE	72-00-01
ENTRY HEADLINER	EQUIPMENT/FURNISHINGS	25-21-60
EQUIPMENT, COCKPIT LOWER ELECTRICAL	ELEC PANELS, PARTS, INST.	39-20-10
EQUIPMENT, COCKPIT SIDEWALL ELECTRICAL	ELEC PANELS, PARTS, INST.	39-20-00
EVAPORATOR COIL ASSEMBLY, AFT	ENVIRONMENTAL SYSTEMS	21-50-30
EVAPORATOR COIL ASSEMBLY, FWD	ENVIRONMENTAL SYSTEMS	21-50-60
EXCHANGER, HEAT	ENVIRONMENTAL SYSTEMS	21-20-60
EXHAUST STACKS, ENGINE	EXHAUST	78-10-00
EXIT LIGHT, SELF ILLUMINATING	EQUIPMENT/FURNISHINGS	25-21-50
EXIT RAMP	ENVIRONMENTAL SYSTEMS	21-30-00
EXTENSION, GLARESHIELD DECK	EQUIPMENT/FURNISHINGS	25-10-70
EXTENSION, PEDESTAL	FUSELAGE	53-20-30
EXTERIOR PLACARDS	PLACARDS & MARKINGS	11-20-00
EXTERNAL POWER RECEPTACLE	ELECTRICAL POWER	24-40-00
EXTERNAL POWER RECEPTACLE DOOR	WINGS	57-10-00
EXTINGUISHER, CABIN FIRE	FIRE PROTECTION	26-20-20
EXTINGUISHER, COCKPIT FIRE	FIRE PROTECTION	26-20-10
F		
FAIRING, AFT WING/FUSELAGE	FUSELAGE	53-50-40
FAIRINGS, FLAP	WINGS	57-20-00
FAIRINGS, FORWARD WING	FUSELAGE	53-50-20
FENCE, ELEVON	WINGS	57-20-20
FILTER ASSEMBLY, FUEL	ENGINE FUEL & CONTROL	73-10-00
FILTER, ENGINE FUEL	ENGINE FUEL & CONTROL	73-10-05
FIRE DETECTION, ENGINE	FIRE PROTECTION	26-10-00
FIRE EXTINGUISHER, CABIN	FIRE PROTECTION	26-20-20
FIRE EXTINGUISHER, COCKPIT	FIRE PROTECTION	26-20-10
FIRE EXTINGUISHER, ENGINE	FIRE PROTECTION	26-20-00
FIREWALL ASSEMBLY, NACELLE	NACELLES	54-10-30
FIREWALL SHUTOFF VALVE	ENVIRONMENTAL SYSTEMS	21-20-20
FIREWALL VALVE SWITCH LIGHT ASSY	FIRE PROTECTION	26-10-20
FIREWALL, NACELLE	NACELLES	54-30-30
FLAP ACTUATING MECHANISM	FLIGHT CONTROLS	27-50-00
FLAP ACTUATING MOTOR	FLIGHT CONTROLS	27-50-00
FLAP ACTUATOR	FLIGHT CONTROLS	27-50-00
FLAP ACTUATOR INTERCONNECT	FLIGHT CONTROLS	27-50-00
FLAP ASSEMBLY	WINGS	57-50-00
FLAP CONTROLLER	FLIGHT CONTROLS	27-50-00
FLAP COVE, AFT WING	WINGS	57-20-30
FLAP FAIRINGS	WINGS	57-20-00
FLAP MONITOR RELAY	ELEC PANELS, PARTS, INST.	39-21-00
FLAP MONITOR SYSTEM	FLIGHT CONTROLS	27-50-10
FLAP TRACK	FLIGHT CONTROLS	27-50-00
FLIGHT BAG	EQUIPMENT/FURNISHINGS	25-10-00
FLIGHT COMPARTMENT CARPET	EQUIPMENT/FURNISHINGS	25-10-90
FLIGHT COMPARTMENT MISC FURNISHINGS	EQUIPMENT/FURNISHINGS	25-10-10
FLIGHT COMPARTMENT OVERHEAD UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-10-50
FLIGHT COMPARTMENT SEATS	EQUIPMENT/FURNISHINGS	25-10-20
FLIGHT COMPARTMENT WINDOWS	WINDOWS	56-10-00
FLIGHT COMPT LWR SIDEWALL UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-10-40
FLIGHT COMPT UPR SIDEWALL UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-10-30
FLIGHT CONTROL CABLE TRAY	FUSELAGE	53-21-10
FLIGHT CONTROL COLUMN	FLIGHT CONTROLS	27-30-10
FLIGHT PHONE, CABIN	COMMUNICATIONS	23-10-15
FLIGHT PHONE, COCKPIT	COMMUNICATIONS	23-10-30

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
F		
FLIGHT PHONE, PEDESTAL	COMMUNICATIONS	23-10-20
FLOOR PANELS, CABIN	FUSELAGE	53-20-60
FLOOR PANELS, COCKPIT	FUSELAGE	53-20-60
FLUX DETECTOR	NAVIGATION	34-20-10
FM ANTENNA	COMMUNICATIONS	23-30-10
FORWARD PARTITION, LH	EQUIPMENT/FURNISHINGS	25-22-10
FORWARD WING	STABILIZERS	55-10-00
FORWARD WING AND FLAP MONITOR BOX	FLIGHT CONTROLS	27-00-20
FORWARD WING CONTROL MECHANISM	FLIGHT CONTROLS	27-40-00
FORWARD WING FAIRINGS	FUSELAGE	53-50-20
FORWARD WING MONITOR SENSOR	FLIGHT CONTROLS	27-40-10
FRICTION BRAKE KNOB	ENGINE CONTROLS	76-10-00
FUEL BOOST PUMP/ENGINE DRIVEN/	ENGINE FUEL & CONTROL	73-10-00
FUEL CAP AND ADAPTER	FUEL	28-10-01
FUEL CELL ASSEMBLY	FUEL	28-10-00
FUEL DISTRIBUTION SYSTEM	FUEL	28-20-00
FUEL DRAIN VALVE	FUEL	28-10-00
FUEL FLOWMETER TRANSMITTER	ENGINE FUEL & CONTROL	73-30-00
FUEL JET PUMP, PRIMARY	FUEL	28-20-00
FUEL PLUMBING, ENGINE SECTION	ENGINE FUEL & CONTROL	73-10-00
FUEL PUMP ASSEMBLY/ELECTRIC SUBMERSIBLE	FUEL	28-20-00
FUEL PUMP, TRANSFER JET/AFT TANK/	FUEL	28-20-00
FUEL PURGE TANK	ENGINE FUEL & CONTROL	73-10-10
FUEL PURGE VALVE	FUEL	28-20-00
FUEL QUANTITY PROBE	FUEL	28-40-00
FUEL QUANTITY PROCESSING UNIT	FUEL	28-40-00
FUEL SENSOR, HOPPER TANK LOW	FUEL	28-40-00
FUEL STORAGE AND INTERCONNECT	FUEL	28-10-00
FUEL SUMP DRAIN WRENCH	EQUIPMENT/FURNISHINGS	25-10-00
FUEL TANK, AFT WING	FUEL	28-10-00
FUEL TEMPERATURE BULB	FUEL	28-40-00
FUEL VALVE, CROSS TRANSFER	FUEL	28-20-00
FUEL VENT CHECK VALVE	FUEL	28-10-10
FUEL VENT FLOAT VALVE	FUEL	28-10-10
FUEL VENT MANIFOLD ASSEMBLY	FUEL	28-10-10
FUEL VENT PRESSURE RELIEF VALVE	FUEL	28-10-10
FUEL VENT SCOOP	WINGS	57-20-40
FUEL VENT SYSTEM	FUEL	28-10-10
FUEL VENT, HEATED	FUEL	28-10-10
FURNISHINGS, FLIGHT COMPARTMENT MISC	EQUIPMENT/FURNISHINGS	25-10-10
FUSE, TOW TURN BREAK-AWAY	LANDING GEAR	32-20-10
FUSELAGE ELECTRICAL WIRE CONDUIT	FUSELAGE	53-21-00
FUSELAGE REFRIGERATION PLUMBING	ENVIRONMENTAL SYSTEMS	21-50-40
FWD BAGGAGE COMPARTMENT WEB	EQUIPMENT/FURNISHINGS	25-22-50
FWD VENTILATION BLOWER	ENVIRONMENTAL SYSTEMS	21-20-30
G		
GAGE, HYDRAULIC ACCUMULATOR PRESSURE	LANDING GEAR	32-40-20
GAGE, OXYGEN PRESSURE	OXYGEN	35-00-01
GEAR ASSEMBLY, NOSE LANDING	LANDING GEAR	32-20-10
GEAR WARNING STREAMER PIN	EQUIPMENT/FURNISHINGS	25-10-00
GENERATOR	ELECTRICAL POWER	24-30-30
GENERATOR COOLING	AIR	75-20-00
GENERATOR, AURAL WARNING TONE	INSTRUMENTS	31-50-10
GENERATOR, GAS GENERATOR TACHOMETER	ENGINE INDICATING	77-10-10
GENERATOR, PROPELLER SHAFT TACHOMETER	ENGINE INDICATING	77-10-10
GENERATOR, VORTEX	STABILIZERS	55-30-00
GLARESHIELD ASSEMBLY	EQUIPMENT/FURNISHINGS	25-10-70
GLARESHIELD DECK EXTENSION	EQUIPMENT/FURNISHINGS	25-10-70
GLIDESLOPE ANTENNA	NAVIGATION	34-30-00
GO AROUND SWITCH, THROTTLE	ENGINE CONTROLS	76-10-20
GREASE NOZZLE	EQUIPMENT/FURNISHINGS	25-10-00
GROSS WEIGHT INCREASE KIT	EQUIPMENT/FURNISHINGS	25-10-00
GROUND IDLE STOP	PROPELLERS	61-20-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
-------------------------------	--------------	----------------------

G

GROUND WIRE TERMINATION	COMMUNICATIONS	23-00-01
GUIDE ASSEMBLY, WIRE HARNESS/STA 46.00/	FUSELAGE	53-20-70
GUST LOCK, SURFACE CONTROL	FLIGHT CONTROLS	27-70-00
GYRO HORIZON INDICATOR/STBY/ELECTRIC/	ELEC PANELS, PARTS, INST.	39-10-60

H

HANDLE ASSEMBLY, DOOR OUTSIDE FLUSH	DOORS	52-10-10
HANDLE ASSEMBLY, EMERGENCY EXIT DOOR	DOORS	52-20-00
HANDLE, AIRSTAIR DOOR INSIDE	DOORS	52-10-10
HANGER, COAT	EQUIPMENT/FURNISHINGS	25-10-00
HEADLINER, AFT COMPARTMENT	EQUIPMENT/FURNISHINGS	25-50-00
HEADLINER, AFT TOILET	EQUIPMENT/FURNISHINGS	25-23-10
HEADLINER, CABIN	EQUIPMENT/FURNISHINGS	25-21-50
HEADLINER, ENTRY	EQUIPMENT/FURNISHINGS	25-21-60
HEADSET, BOOM MICROPHONE	EQUIPMENT/FURNISHINGS	25-10-00
HEADSET, PILOT'S AND COPILOT'S	COMMUNICATIONS	23-50-40
HEAT EXCHANGER	ENVIRONMENTAL SYSTEMS	21-20-60
HOPPER TANK MANIFOLD ASSEMBLY	FUEL	28-10-10
HOSE, AIR CONDITIONER COMPRESSOR DRAIN	POWER PLANT	71-70-00
HYDRAULIC ACCUMULATOR	LANDING GEAR	32-40-20
HYDRAULIC ACCUMULATOR PRESSURE GAGE	LANDING GEAR	32-40-20
HYDRAULIC FLUID LOW LEVEL SENSOR	LANDING GEAR	32-30-00
HYDRAULIC LOCK ASSEMBLY, FWD WING	FLIGHT CONTROLS	27-40-00
HYDRAULIC PLUMBING, AFT FUSELAGE	LANDING GEAR	32-30-05
HYDRAULIC POWER PACK	LANDING GEAR	32-30-00
HYDRAULIC PRESSURE RELIEF VALVE	LANDING GEAR	32-40-20
HYDRAULIC SYSTEM, NACELLE	LANDING GEAR	32-30-00
HYDRAULIC SYSTEMS/REFERENCE/	HYDRAULIC POWER	29-00-01
HYDRAULIC VALVE ASSEMBLY	LANDING GEAR	32-30-00

I

IAPS CARD CAGE	INSTRUMENTS	31-40-00
ICE DETECTOR	ICE & RAIN PROTECTION	30-70-00
ICE VANE ACTUATOR ASSEMBLY	ICE & RAIN PROTECTION	30-20-00
IDLE STOP, GROUND	PROPELLERS	61-20-20
IGNITION EXCITER	IGNITION	74-10-00
INDICATOR, AIRSPEED	ELEC PANELS, PARTS, INST.	39-10-60
INDICATOR, ALTITUDE	ELEC PANELS, PARTS, INST.	39-10-60
INDICATOR, GYRO HORIZON/STBY/ELECTRIC/	ELEC PANELS, PARTS, INST.	39-10-60
INDICATOR, OIL LEVEL	OIL	79-30-00
INSTRUCTIONS, CHESS SET STORAGE	EQUIPMENT/FURNISHINGS	25-10-00
INSTRUMENT AIR PLUMBING	NAVIGATION	34-10-20
INSTRUMENT PANEL STRUCTURE, MAIN	FUSELAGE	53-20-80
INSTRUMENT PANEL, MAIN	ELEC PANELS, PARTS, INST.	39-10-60
INSTRUMENT SUBPANEL	ELEC PANELS, PARTS, INST.	39-10-70
INSULATION, NACELLE FIREWALL	NACELLES	54-11-00
INTERCONNECT ASSEMBLY, FLAP ACTUATOR	FLIGHT CONTROLS	27-50-00
INTERIOR PLACARDS	PLACARDS & MARKINGS	11-30-00
INTERPHONE AMPLIFIER	COMMUNICATIONS	23-40-00
INTERPHONE EQUIPMENT, NOSE WHEEL WELL	COMMUNICATIONS	23-40-10
INVERTER, ELECTROLUMINESCENT PANELS	ELEC PANELS, PARTS, INST.	39-20-20
ISOLATOR ASSEMBLY, ENGINE MOUNT	POWER PLANT	71-20-00

J

JACK POINT FITTING	EQUIPMENT/FURNISHINGS	25-10-00
JET PUMP, FUEL TRANSFER/FWD/	FUEL	28-20-00
JUNCTION BOX, NOSE AVIONICS	COMMUNICATIONS	23-50-30

K

KIT LIST, SERVICE PUBLICATIONS	EQUIPMENT/FURNISHINGS	25-10-00
KIT, GROSS WEIGHT INCREASE	EQUIPMENT/FURNISHINGS	25-10-00

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
K		
KIT, STARTER-GENERATOR MOUNTING	ELECTRICAL POWER	24-30-30
KNEE ASSEMBLY, MAIN GEAR	LANDING GEAR	32-10-10
KNOB, CONDITION CONTROL LEVER	ENGINE CONTROLS	76-10-00
KNOB, FRICTION BRAKE	ENGINE CONTROLS	76-10-00
KNOB, POWER CONTROL LEVER	ENGINE CONTROLS	76-10-00
KNOB, PROPELLER CONTROL LEVER	ENGINE CONTROLS	76-10-00
L		
LANDING GEAR HYDRAULIC PLUMBING	LANDING GEAR	32-30-15
LANDING GEAR HYDRAULIC SYSTEM/NACELLE/	LANDING GEAR	32-30-00
LANDING GEAR INSTALLATION, MAIN	LANDING GEAR	32-10-00
LANDING GEAR INSTALLATION, NOSE	LANDING GEAR	32-20-00
LANDING LIGHT, WING	LIGHTS	33-40-10
LEADING EDGE, AFT WING	WINGS	57-40-00
LEFT NACELLE ELECTRICAL EQUIPMENT	ELECTRICAL POWER	24-50-00
LENS, WING LANDING LIGHT	LIGHTS	33-40-10
LEVER ASSEMBLY, CONDITION CONTROL	ENGINE CONTROLS	76-10-00
LEVER ASSEMBLY, POWER CONTROL	ENGINE CONTROLS	76-10-00
LEVER ASSEMBLY, PROPELLER CONTROL	ENGINE CONTROLS	76-10-00
LID, OXYGEN BOX	EQUIPMENT/FURNISHINGS	25-21-50
LID, OXYGEN CONTAINER	OXYGEN	35-00-01
LIGHT ASSEMBLY, WING LANDING	LIGHTS	33-40-10
LIGHT CONTROL PANEL, OVERHEAD	ELEC PANELS, PARTS, INST.	39-10-00
LIGHT LENS, WING LANDING	LIGHTS	33-40-10
LIGHT SWITCH, PASSENGER READING	EQUIPMENT/FURNISHINGS	25-21-20
LIGHT, ANNUNCIATOR WARNING	INSTRUMENTS	31-50-00
LIGHT, SELF ILLUMINATING EXIT	EQUIPMENT/FURNISHINGS	25-21-50
LIGHTS, AFT BAGGAGE COMPARTMENT	LIGHTS	33-30-00
LIGHTS, ANTI-COLLISION	LIGHTS	33-40-50
LIGHTS, CABIN AFT TOILET	LIGHTS	33-20-07
LIGHTS, CABIN AISLE AND AIRSTAIR DOOR	LIGHTS	33-20-10
LIGHTS, COCKPIT	LIGHTS	33-10-00
LIGHTS, OVERHEAD ENTRY	LIGHTS	33-20-00
LIGHTS, TAXI AND NOSE LANDING	LIGHTS	33-40-00
LIGHTS, WING INSPECTION	LIGHTS	33-40-20
LIP ASSEMBLY, AIR INTAKE	ICE & RAIN PROTECTION	30-20-00
LOCK ASSEMBLY, AIR PRESSURE ACTUATED	DOORS	52-10-10
LOCK ASSEMBLY, FWD WING HYDRAULIC	FLIGHT CONTROLS	27-40-00
LOCK, SURFACE CONTROL GUST	EQUIPMENT/FURNISHINGS	25-10-00
LOGIC RELAY PANEL	ELEC PANELS, PARTS, INST.	39-20-30
LOOSE TOOLS AND ACCESSORIES	EQUIPMENT/FURNISHINGS	25-10-00
LOW LEVEL SENSOR, HYDRAULIC FLUID	LANDING GEAR	32-30-00
LOWER AFT COWLING	NACELLES	54-30-20
LOWER FWD COWLING	NACELLES	54-30-40
M		
MAGNETIC COMPASS	NAVIGATION	34-20-00
MAIN GEAR BRACE ASSEMBLY	LANDING GEAR	32-10-10
MAIN GEAR KNEE ASSEMBLY	LANDING GEAR	32-10-10
MAIN GEAR TIRE	LANDING GEAR	32-10-10
MAIN GEAR UNLOCK ASSEMBLY	LANDING GEAR	32-10-00
MAIN LANDING GEAR DOORS	DOORS	52-80-10
MAIN LANDING GEAR INSTALLATION	LANDING GEAR	32-10-00
MAIN LANDING GEAR SUPPORT CLOSURE	WINGS	57-11-00
MAIN PANEL AND SUBPANEL SUPPORT	FUSELAGE	53-40-00
MANIFOLD ASSEMBLY, FUEL VENT	FUEL	28-10-10
MANIFOLD ASSEMBLY, HOPPER TANK	FUEL	28-10-10
MANIFOLD, VACUUM REGULATED	ENVIRONMENTAL SYSTEMS	21-30-10
MARKER BEACON ANTENNA	NAVIGATION	34-30-00
MASK CONTAINER ASSEMBLY, OXYGEN	OXYGEN	35-00-01
MASK, CREW OXYGEN	OXYGEN	35-00-01
MECHANISM, EMERGENCY DOOR LATCHING	DOORS	52-20-00
MECHANISM, FLAP ACTUATING	FLIGHT CONTROLS	27-50-00

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME

CHAPTER NAME

CHAP/SUB SECT & UNIT

M

MECHANISM, FWD WING CONTROL
 MICROPHONE AND REEL, AVIONICS HAND
 MIXER ASSEMBLY, ELEVON CONTROL
 MODEL, STARSHIP AIRPLANE
 MODULE ASSEMBLY, CABIN PRESSURIZATION
 MONITOR BOX, FWD WING AND FLAP
 MOTION SICKNESS BAG
 MOTOR AND PUMP ASSEMBLY, ANTI-SKID
 MOTOR, FLAP ACTUATING
 MOTOR, WINDSHIELD WIPER
 MOUNT ASSEMBLY, ENGINE
 MULTIFUNCTION DISPLAY UNIT

FLIGHT CONTROLS
 COMMUNICATIONS
 FLIGHT CONTROLS
 EQUIPMENT/FURNISHINGS
 ENVIRONMENTAL SYSTEMS
 FLIGHT CONTROLS
 EQUIPMENT/FURNISHINGS
 LANDING GEAR
 FLIGHT CONTROLS
 ICE & RAIN PROTECTION
 POWER PLANT
 ELEC PANELS, PARTS, INST.

27-40-00
 23-50-40
 27-31-20
 25-10-00
 21-30-10
 27-00-20
 25-10-00
 32-40-20
 27-50-00
 30-40-10
 71-20-00
 39-10-60

N

NACELLE ASSEMBLY
 NACELLE ELECTRICAL EQUIPMENT, LEFT
 NACELLE ELECTRICAL EQUIPMENT, RIGHT
 NACELLE FIREWALL
 NACELLE FIREWALL INSULATION
 NACELLE FIREWALL LOWER STRUCTURE
 NACELLE INSTALLATION
 NAV ANTENNA
 NAVIGATION DISPLAY UNIT
 NOSE ATTACH FITTINGS
 NOSE AVIONICS ACCESS DOORS
 NOSE AVIONICS COOLING
 NOSE AVIONICS JUNCTION BOX
 NOSE AVIONICS SHELF
 NOSE COMPARTMENT AVIONICS TRANSZORBS
 NOSE GEAR DRAG BRACE
 NOSE GEAR SHOCK ABSORBER ASSEMBLY
 NOSE GEAR STEERING
 NOSE GEAR STEERING DISCONNECT CRANK
 NOSE GEAR UPLOCK HOOK
 NOSE LANDING AND TAXI LIGHTS
 NOSE LANDING GEAR ASSEMBLY
 NOSE LANDING GEAR BRACE ASSEMBLY
 NOSE LANDING GEAR DOORS
 NOSE LANDING GEAR INSTALLATION
 NOSE LANDING GEAR WHEEL
 NOSE SKINS AND PLATES
 NOSE WHEEL WELL INTERPHONE EQUIPMENT
 NOSE WHEEL WELL SPEAKER
 NOZZLE, GREASE

NACELLES
 ELECTRICAL POWER
 ELECTRICAL POWER
 NACELLES
 NACELLES
 NACELLES
 NACELLES
 NACELLES
 NAVIGATION
 ELEC PANELS, PARTS, INST.
 FUSELAGE
 DOORS
 ENVIRONMENTAL SYSTEMS
 COMMUNICATIONS
 FUSELAGE
 COMMUNICATIONS
 LANDING GEAR
 LANDING GEAR
 LANDING GEAR
 FLIGHT CONTROLS
 LANDING GEAR
 LIGHTS
 LANDING GEAR
 LANDING GEAR
 DOORS
 LANDING GEAR
 LANDING GEAR
 FUSELAGE
 COMMUNICATIONS
 COMMUNICATIONS
 EQUIPMENT/FURNISHINGS

54-10-10
 24-50-00
 24-50-10
 54-10-30
 54-11-00
 54-10-20
 54-10-00
 34-50-00
 39-10-60
 53-40-20
 52-40-00
 21-55-10
 23-50-30
 53-20-70
 23-60-10
 32-20-00
 32-20-10
 32-50-00
 27-20-20
 32-20-00
 33-40-00
 32-20-10
 32-20-10
 52-80-20
 32-20-00
 32-20-10
 53-30-00
 23-40-10
 23-40-10
 25-10-00

O

OIL BREATHER LINE
 OIL COOLER
 OIL COOLER DRAIN PLUG
 OIL COOLER OUTLET DUCT
 OIL DRAIN VALVE, ENGINE
 OIL LEVEL INDICATOR
 OIL PRESSURE TRANSMITTER
 OIL SYSTEM, ENGINE
 OIL THERMOSTATIC CONTROL VALVE
 ORIFICE ASSEMBLY, MAIN GEAR
 OVERBOARD DRAIN PLUMBING
 OVERHEAD LIGHT CONTROL PANEL
 OVERHEAD LIGHTS, CABIN
 OWNERS NOTIFICATION REPLY CARD
 OXYGEN ARM PRESSURE SWITCH
 OXYGEN CYLINDER
 OXYGEN FILL VALVE

OIL
 OIL
 OIL
 OIL
 OIL
 OIL
 OIL
 OIL
 OIL
 OIL
 OIL
 OIL
 OIL
 LANDING GEAR
 WATER/WASTE
 ELEC PANELS, PARTS, INST.
 LIGHTS
 EQUIPMENT/FURNISHINGS
 OXYGEN
 OXYGEN
 OXYGEN

79-20-10
 79-20-00
 79-20-00
 79-20-00
 79-20-00
 79-20-00
 79-30-00
 79-20-00
 79-20-00
 79-20-00
 79-20-00
 79-20-00
 32-10-10
 38-30-30
 39-10-00
 33-20-03
 25-10-00
 35-00-01
 35-00-01
 35-00-01

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
O		
OXYGEN LOW PRESSURE SWITCH	OXYGEN	35-00-01
OXYGEN MASK CONTAINER	EQUIPMENT/FURNISHINGS	25-21-50
OXYGEN MASK CONTAINER ASSEMBLY	OXYGEN	35-00-01
OXYGEN MASK, CREW	OXYGEN	35-00-01
OXYGEN OUTLET VALVE	OXYGEN	35-00-01
OXYGEN PRESSURE GAGE	OXYGEN	35-00-01
OXYGEN PRESSURE SENSE SWITCH	OXYGEN	35-00-01
OXYGEN QUANTITY PRESSURE TRANSDUCER	OXYGEN	35-00-01
OXYGEN SYSTEM	OXYGEN	35-00-01
P		
PAD, ISOLATOR	POWER PLANT	71-20-00
PAGING AMPLIFIER	COMMUNICATIONS	23-30-20
PAGING AMPLIFIER, COCKPIT	COMMUNICATIONS	23-30-30
PALLET ASSEMBLY, ANTI-SKID BRAKE	LANDING GEAR	32-40-20
PANEL ASSEMBLY, CABIN FLOOR	FUSELAGE	53-20-60
PANEL ASSEMBLY, REVERSIONARY	ELEC PANELS, PARTS, INST.	39-10-80
PANEL ASSEMBLY, SUBPANEL SWITCH	ELEC PANELS, PARTS, INST.	39-10-70
PANEL STRUCTURE, MAIN INSTRUMENT	FUSELAGE	53-20-80
PANEL, AUXILIARY CIRCUIT BREAKER	ELEC PANELS, PARTS, INST.	39-10-40
PANEL, CABIN WINDOW UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-21-00
PANEL, COCKPIT CONSOLE FWD UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-10-40
PANEL, COCKPIT KICK	EQUIPMENT/FURNISHINGS	25-10-40
PANEL, RIGHT CIRCUIT BREAKER	ELEC PANELS, PARTS, INST.	39-10-30
PANEL, SIDEWALL ESCUTCHEON	FUSELAGE	53-20-80
PARTITION, AFT BAGGAGE COMPARTMENT	EQUIPMENT/FURNISHINGS	25-50-30
PARTITION, AFT CABIN	EQUIPMENT/FURNISHINGS	25-25-00
PARTITION, LH FORWARD	EQUIPMENT/FURNISHINGS	25-22-10
PASSENGER BRIEFER, COCKPIT	COMMUNICATIONS	23-30-40
PASSENGER BRIEFING CARD	EQUIPMENT/FURNISHINGS	25-10-00
PASSENGER CHAIRS	EQUIPMENT/FURNISHINGS	25-20-00
PASSENGER SEATS	EQUIPMENT/FURNISHINGS	25-20-00
PEDAL, RUDDER	FLIGHT CONTROLS	27-20-10
PEDESTAL ENGINE CONTROL MECHANISM	ENGINE CONTROLS	76-10-00
PEDESTAL EXTENSION STRUCTURE	FUSELAGE	53-20-30
PEDESTAL LOWER QUADRANT	ENGINE CONTROLS	76-10-00
PEDESTAL UPHOLSTERY	EQUIPMENT/FURNISHINGS	25-10-80
PEDESTAL, CONTROL	ELEC PANELS, PARTS, INST.	39-10-10
PILOT'S CONTROL WHEEL ASSEMBLY	FLIGHT CONTROLS	27-31-10
PILOT'S SEAT	EQUIPMENT/FURNISHINGS	25-10-20
PIN, NOSE LANDING GEAR TRUNNION	LANDING GEAR	32-20-10
PIN, RUDDER PEDAL ADJUSTMENT	FLIGHT CONTROLS	27-20-20
PISTON AND AXLE, MAIN GEAR	LANDING GEAR	32-10-10
PISTON ASSEMBLY, SHIMMY DAMPER	LANDING GEAR	32-50-10
PITOT AND STATIC PLUMBING	NAVIGATION	34-10-00
PITOT TUBE COVER	EQUIPMENT/FURNISHINGS	25-10-00
PLACARD, CABIN AIRSTAIR DOOR INSTR	EQUIPMENT/FURNISHINGS	25-21-30
PLACARDS, EXTERIOR	PLACARDS & MARKINGS	11-20-00
PLACARDS, INTERIOR	PLACARDS & MARKINGS	11-30-00
PLENUM, ENGINE AIR	POWER PLANT	71-60-00
PLUG, OIL COOLER DRAIN	OIL	79-20-00
PLUMB BOB SUPPORT	EQUIPMENT/FURNISHINGS	25-10-00
PLUMBING, AFT FUSELAGE HYDRAULIC	LANDING GEAR	32-30-05
PLUMBING, AFT TOILET	WATER/WASTE	38-30-15
PLUMBING, AIR DATA COMPUTER	NAVIGATION	34-11-00
PLUMBING, AIRSTAIR DOOR SEAL	DOORS	52-10-20
PLUMBING, BRAKE	LANDING GEAR	32-40-00
PLUMBING, INSTRUMENT AIR	NAVIGATION	34-10-20
PLUMBING, LANDING GEAR HYDRAULIC	LANDING GEAR	32-30-15
PLUMBING, OVERBOARD DRAIN	WATER/WASTE	38-30-30
PLUMBING, PITOT AND STATIC	NAVIGATION	34-10-00
PNEUMATIC DEICE SYSTEM	ICE & RAIN PROTECTION	30-10-00
PNEUMATIC PRESSURIZATION SYSTEM	PNEUMATIC	36-00-10
POLARIZED WINDOWS, CABIN	WINDOWS	56-20-00

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
-------------------------------	--------------	----------------------

P

POWER BRAKE VALVE	LANDING GEAR	32-40-20
POWER CONTROL LEVER ASSEMBLY	ENGINE CONTROLS	76-10-00
POWER CONTROL LEVER KNOB	ENGINE CONTROLS	76-10-00
POWER PACK PRESSURE REGULATOR	LANDING GEAR	32-30-20
POWER PACK, HYDRAULIC	LANDING GEAR	32-30-00
POWER PLANT	POWER PLANT	71-00-10
POWER SUPPLY, AHC AUXILIARY	ELECTRICAL POWER	24-30-10
POWER SUPPLY, CABIN LIGHTING	LIGHTS	33-20-30
POWER SUPPLY, STBY HRZN IND AUXILIARY	ELECTRICAL POWER	24-30-20
PRECONDENSER ASSEMBLY, COOLING	ENVIRONMENTAL SYSTEMS	21-50-20
PRESSURE GAGE, HYDRAULIC ACCUMULATOR	LANDING GEAR	32-40-20
PRESSURE REGULATOR	ENVIRONMENTAL SYSTEMS	21-30-10
PRESSURE WARNING SWITCH, ANTI-SKID LOW	LANDING GEAR	32-40-20
PRESSURIZATION CONTROL	ENVIRONMENTAL SYSTEMS	21-30-00
PRIMARY FLIGHT DISPLAY UNIT	ELEC PANELS, PARTS, INST.	39-10-60
PROBE, FUEL QUANTITY	FUEL	28-40-00
PROCESSING UNIT, FUEL QUANTITY	FUEL	28-40-00
PROPELLER	PROPELLERS	61-10-00
PROPELLER AUTOFEATHER	PROPELLERS	61-20-10
PROPELLER CONTROL LEVER ASSEMBLY	ENGINE CONTROLS	76-10-00
PROPELLER CONTROL LEVER KNOB	ENGINE CONTROLS	76-10-00
PROPELLER SLING	EQUIPMENT/FURNISHINGS	25-10-00
PROPELLER SYNCHROPHASER	PROPELLERS	61-20-00
PULLEY BANK PLATFORM	FLIGHT CONTROLS	27-00-10
PUMP ASSEMBLY, FUEL/ELEC SUBMERSIBLE/	FUEL	28-20-00
PUMP BRACKET, LANDING GEAR HYDRAULIC	NACELLES	54-10-10
PUMP OUTPUT CONTROL SWITCH, ANTI-SKID	LANDING GEAR	32-40-20
PUMP, ANTI-SKID	LANDING GEAR	32-40-20
PUMP, FUEL BOOST/ENGINE DRIVEN/	ENGINE FUEL & CONTROL	73-10-00
PUMP, FUEL TRANSFER JET/AFT TANK/	FUEL	28-20-00
PUMP, FUEL TRANSFER JET/FWD/	FUEL	28-20-00
PUMP, HYDRAULIC HAND	LANDING GEAR	32-30-10
PUMP, PRIMARY FUEL JET	FUEL	28-20-00
PURGE VALVE, FUEL	FUEL	28-20-00
PUSHROD ASSEMBLY, NOSE GEAR DOOR	LANDING GEAR	32-20-00
PYRAMID CABINETS	EQUIPMENT/FURNISHINGS	25-22-30

Q

QUADRANT, PEDESTAL LOWER	ENGINE CONTROLS	76-10-00
QUADRANT, RUDDER CONTROL	FLIGHT CONTROLS	27-20-00

R

RACK ASSY, INTERFACE	FUSELAGE	53-40-30
RADAR ANTENNA, WEATHER	NAVIGATION	34-40-00
RADAR TRANSCEIVER, WEATHER	NAVIGATION	34-40-00
RADIO ALTIMETER ANTENNA	NAVIGATION	34-50-50
RADIO ALTIMETER TRANSCEIVER	NAVIGATION	34-50-50
RADIO TUNING ADAPTER	NAVIGATION	34-50-60
RADIOPHONE ANTENNA	COMMUNICATIONS	23-10-10
RADIOPHONE TRANSCEIVER	COMMUNICATIONS	23-10-10
RADOME ASSY	FUSELAGE	53-50-00
READING LIGHT SWITCH, PASSENGER	EQUIPMENT/FURNISHINGS	25-21-20
RECEIVER DRYER, AIR CONDITIONING	ENVIRONMENTAL SYSTEMS	21-50-10
RECEIVER, VLF	NAVIGATION	34-50-10
RECEPTACLE, EXTERNAL POWER	ELECTRICAL POWER	24-40-00
REEL ASSEMBLY, LEFT AND RIGHT SAFETY	EQUIPMENT/FURNISHINGS	25-10-20
REEL, AVIONICS HAND MICROPHONE	COMMUNICATIONS	23-50-40
REFRESHMENT CABINET, LH FORWARD	EQUIPMENT/FURNISHINGS	25-22-20
REFRIGERATION PLUMBING, FUSELAGE	ENVIRONMENTAL SYSTEMS	21-50-40
REFRIGERATION PLUMBING, WING	ENVIRONMENTAL SYSTEMS	21-50-45
REGULATOR, POWER PACK PRESSURE	LANDING GEAR	32-30-20
REGULATOR, PRESSURE	ENVIRONMENTAL SYSTEMS	21-30-10
RELAY, FLAP MONITOR	ELEC PANELS, PARTS, INST.	39-21-00

INTRODUCTION

PAGE 24

JUNE 30, 1995

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
R		
RELAY, PNEUMATIC	ENVIRONMENTAL SYSTEMS	21-30-10
RELIEF TUBE, COCKPIT	WATER/WASTE	38-30-10
RESERVOIR, BRAKE FLUID	LANDING GEAR	32-40-10
RESTRICTOR ASSEMBLY, PRESSURE	ENVIRONMENTAL SYSTEMS	21-30-10
REVERSIONARY PANELS	ELEC PANELS, PARTS, INST.	39-10-80
RH BAGGAGE/IAPS CABINET	EQUIPMENT/FURNISHINGS	25-22-40
RIGHT CIRCUIT BREAKER PANEL	ELEC PANELS, PARTS, INST.	39-10-30
RIGHT NACELLE ELECTRICAL EQUIPMENT	ELECTRICAL POWER	24-50-10
ROLL AND YAW INTERCONNECT	FLIGHT CONTROLS	27-00-40
ROLLER, NOSE GEAR STEERING	LANDING GEAR	32-20-10
RUDDER ACTUATOR	STABILIZERS	55-40-00
RUDDER CONTROL QUADRANT	FLIGHT CONTROLS	27-20-00
RUDDER CONTROL SECTOR	FLIGHT CONTROLS	27-20-00
RUDDER CONTROLS	FLIGHT CONTROLS	27-20-00
RUDDER FWD CONTROL BELL CRANK	FLIGHT CONTROLS	27-20-20
RUDDER PEDAL ADJUSTMENT COVER	FUSELAGE	53-20-50
RUDDER PEDAL ADJUSTMENT PIN	FLIGHT CONTROLS	27-20-20
RUDDER PEDALS	FLIGHT CONTROLS	27-20-10
RUDDER TAB ASSEMBLY	STABILIZERS	55-40-00
RUDDER TAB ASSEMBLY	STABILIZERS	55-60-00
RUDDER TRIM TAB CONTROL ACTUATOR	FLIGHT CONTROLS	27-20-30
S		
SAFETY INFORMATION BOOKLET	EQUIPMENT/FURNISHINGS	25-10-00
SAFETY SWITCH, MAIN GEAR	LANDING GEAR	32-10-00
SCOOP ASSEMBLY, FUEL VENT	WINGS	57-20-40
SEAL, AFT PRESSURE DOME WIRE	FUSELAGE	53-00-01
SEAT TRACK, CABIN	FUSELAGE	53-20-60
SEAT TRACK, COCKPIT	FUSELAGE	53-20-50
SEAT, COPILOT'S	EQUIPMENT/FURNISHINGS	25-10-20
SEAT, PILOT'S	EQUIPMENT/FURNISHINGS	25-10-20
SEATS, PASSENGER	EQUIPMENT/FURNISHINGS	25-20-00
SECTOR, RUDDER CONTROL	FLIGHT CONTROLS	27-20-00
SENSOR DISPLAY UNIT	ELEC PANELS, PARTS, INST.	39-10-60
SENSOR, CABIN TEMPERATURE	ENVIRONMENTAL SYSTEMS	21-60-00
SENSOR, FLAP POSITION	FLIGHT CONTROLS	27-50-10
SENSOR, FWD WING MONITOR	FLIGHT CONTROLS	27-40-10
SENSOR, HOPPER TANK LOW FUEL	FUEL	28-40-00
SENSOR, HYDRAULIC FLUID LOW LEVEL	LANDING GEAR	32-30-00
SERVICE PUBLICATIONS KIT LIST	EQUIPMENT/FURNISHINGS	25-10-00
SERVO, AUTOPILOT PITCH SYSTEM	AUTO FLIGHT	22-11-00
SERVO, AUTOPILOT ROLL SYSTEM	AUTO FLIGHT	22-11-10
SERVO, AUTOPILOT YAW SYSTEM	AUTO FLIGHT	22-11-20
SHAKER, STALL WARNING CONTROL	FLIGHT CONTROLS	27-30-30
SHELF ASSEMBLY, NACELLE	NACELLES	54-10-10
SHELF, AVIONICS	FUSELAGE	53-20-70
SHELF, STROBE LIGHT POWER SUPPLY	STABILIZERS	55-30-00
SHIMMY DAMPER	LANDING GEAR	32-50-10
SHOCK ABSORBER ASSEMBLY, NOSE GEAR	LANDING GEAR	32-20-10
SIDEWALL UPHOLSTERY, FLIGHT COMPT UPR	EQUIPMENT/FURNISHINGS	25-10-30
SKINS, PLATES AND NOSE	FUSELAGE	53-30-10
SLING, PROPELLER	EQUIPMENT/FURNISHINGS	25-10-00
SOLENOID VALVE, PNEUMATIC/PRESET/	ENVIRONMENTAL SYSTEMS	21-30-10
SOLENOID, GROUND IDLE STOP	PROPELLERS	61-20-20
SPARE FUSE AND LIMITER CONTAINER	EQUIPMENT/FURNISHINGS	25-60-20
SPEAKER, CABIN	COMMUNICATIONS	23-30-00
SPEAKER, COCKPIT	COMMUNICATIONS	23-50-00
SPEAKER, NOSE WHEEL WELL	COMMUNICATIONS	23-40-10
SPOILER, FLAP COVE	WINGS	57-10-20
STABILIZER ASSEMBLY, VENTRAL	STABILIZERS	55-60-00
STABILIZER, VERTICAL	STABILIZERS	55-30-00
STALL WARNING COMPUTER	FLIGHT CONTROLS	27-30-30
STALL WARNING CONTROL SHAKER	FLIGHT CONTROLS	27-30-30
STALL WARNING TRANSMITTER	FLIGHT CONTROLS	27-30-30

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
S		
STARSHIP AIRPLANE MODEL	EQUIPMENT/FURNISHINGS	25-10-00
STARTER-GENERATOR	ELECTRICAL POWER	24-30-30
STARTER/REFERENCE/	STARTING	80-00-01
STATIC DISCHARGE WICKS	COMMUNICATIONS	23-60-00
STBY GYRO HORIZON INDICATOR AUX POWER	ELECTRICAL POWER	24-30-20
STEERING ARM, NOSE GEAR	LANDING GEAR	32-20-10
STEERING DISCONNECT CRANK	FLIGHT CONTROLS	27-20-20
STEERING ROLLER, NOSE GEAR	LANDING GEAR	32-20-10
STEERING, NOSE GEAR	LANDING GEAR	32-50-00
STREAMER PIN, DOOR WARNING	EQUIPMENT/FURNISHINGS	25-10-00
STREAMER PIN, GEAR WARNING	EQUIPMENT/FURNISHINGS	25-10-00
STRUCTURE, COCKPIT RIGHT SIDE CONSOLE	FUSELAGE	53-20-10
STRUCTURE, CONTROL PEDESTAL	FUSELAGE	53-20-20
STRUCTURE, NACELLE FIREWALL LOWER	NACELLES	54-30-20
STRUCTURE, SUBPANEL	FUSELAGE	53-20-40
SUBPANEL STRUCTURE	FUSELAGE	53-20-40
SUBPANEL SUPPORT	FUSELAGE	53-40-00
SUBPANEL, INSTRUMENT	ELEC PANELS, PARTS, INST.	39-10-70
SURFACE CONTROL GUST LOCK	FLIGHT CONTROLS	27-70-00
SURFACE DEICE PCB BOX	ICE & RAIN PROTECTION	30-50-00
SWITCH LIGHT ASSY, ENG FIRE EXT	FIRE PROTECTION	26-10-20
SWITCH LIGHT ASSY, FIREWALL VALVE	FIRE PROTECTION	26-10-20
SWITCH PANEL ASSEMBLY, SUBPANEL	ELEC PANELS, PARTS, INST.	39-10-70
SWITCH, -G-	FLIGHT CONTROLS	27-30-30
SWITCH, ANTI-SKID LOW PRESSURE WARNING	LANDING GEAR	32-40-20
SWITCH, ANTI-SKID PUMP OUTPUT CONTROL	LANDING GEAR	32-40-20
SWITCH, CABIN ALTITUDE PRESSURE	OXYGEN	35-00-01
SWITCH, CONDITION LEVER FUEL CUTOFF	ENGINE FUEL & CONTROL	73-20-00
SWITCH, MAIN GEAR DOWNLOCK SENSOR	LANDING GEAR	32-10-00
SWITCH, MAIN GEAR SAFETY	LANDING GEAR	32-10-00
SWITCH, MAIN GEAR UPLOCK SENSOR	LANDING GEAR	32-10-00
SWITCH, NOSE GEAR UPLOCK PROXIMITY	LANDING GEAR	32-20-00
SWITCH, OXYGEN ARM PRESSURE	OXYGEN	35-00-01
SWITCH, OXYGEN LOW PRESSURE	OXYGEN	35-00-01
SWITCH, OXYGEN PRESSURE SENSE	OXYGEN	35-00-01
SWITCH, PASSENGER READING LIGHT	EQUIPMENT/FURNISHINGS	25-21-20
SWITCH, THROTTLE GO AROUND	ENGINE CONTROLS	76-10-20
SWITCH, WINDOW SHADING	EQUIPMENT/FURNISHINGS	25-21-20
SWITCH, CABIN DOOR WARNING	DOORS	52-70-00
SYNCHROPHASER, PROPELLER	PROPELLERS	61-20-00
SYSTEM, ATTITUDE HEADING	NAVIGATION	34-20-20
T		
TAB ASSEMBLY, ELEVATOR	STABILIZERS	55-20-00
TAB ASSEMBLY, RUDDER	STABILIZERS	55-40-00
TAB ASSEMBLY, RUDDER	STABILIZERS	55-55-00
TABLE, CABIN	EQUIPMENT/FURNISHINGS	25-22-00
TACHOMETER GENERATOR, GAS GENERATOR	ENGINE INDICATING	77-10-10
TACHOMETER, GENERATOR PROPELLER SHAFT	ENGINE INDICATING	77-10-10
TAILCONE ASSY	FUSELAGE	53-50-00
TEMPERATURE CONTROL, CABIN	ENVIRONMENTAL SYSTEMS	21-60-00
THROTTLE GO AROUND SWITCH	ENGINE CONTROLS	76-10-20
TIE DOWN RING	EQUIPMENT/FURNISHINGS	25-10-00
TIPSAIL RUDDER	STABILIZERS	55-40-00
TIRE AND WHEEL ASSEMBLY, NOSE GEAR	LANDING GEAR	32-20-10
TIRE, MAIN GEAR	LANDING GEAR	32-10-10
TOILET	WATER/WASTE	38-30-00
TOILET CABINET, AFT	EQUIPMENT/FURNISHINGS	25-23-00
TOILET HEADLINER, AFT	EQUIPMENT/FURNISHINGS	25-23-10
TOILET, AFT	WATER/WASTE	38-30-05
TOW BAR	EQUIPMENT/FURNISHINGS	25-10-00
TOW TURN BREAK-AWAY FUSE	LANDING GEAR	32-20-10
TRACK ASSEMBLY, COCKPIT SEAT	FUSELAGE	53-20-50
TRACK, CABIN SEAT	FUSELAGE	53-20-60

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
T		
TRACK, FLAP	FLIGHT CONTROLS	27-50-00
TRAILING EDGE INBD COVE, AFT WING	WINGS	57-21-00
TRANSCIVER, RADIO ALTIMETER	NAVIGATION	34-50-50
TRANSCIVER, RADIOPHONE	COMMUNICATIONS	23-10-10
TRANSCIVER, VHF COMM	COMMUNICATIONS	23-10-00
TRANSCIVER, WEATHER RADAR	NAVIGATION	34-40-00
TRANSDUCER, ENGINE TORQUEMETER	ENGINE INDICATING	77-40-00
TRANSDUCER, OXYGEN QUANTITY PRESSURE	OXYGEN	35-00-01
TRANSDUCER, WHEEL ROTATION VELOCITY	LANDING GEAR	32-10-10
TRANSMITTER, FUEL FLOWMETER	ENGINE FUEL & CONTROL	73-30-00
TRANSMITTER, OIL PRESSURE	OIL	79-20-00
TRANSMITTER, STALL WARNING	FLIGHT CONTROLS	27-30-30
TRANSPONDER	NAVIGATION	34-50-40
TRANSPONDER ANTENNA	NAVIGATION	34-50-40
TRANSZORBS, NOSE COMPARTMENT AVIONICS	COMMUNICATIONS	23-60-10
TRUNNION PIN, NOSE LANDING GEAR	LANDING GEAR	32-20-10
TRUNNION PLATE ASSEMBLY	FUSELAGE	53-40-20
TUBE, LIGHTNING BREAK	FUEL	28-20-00
U		
UPHOLSTERY, AFT BULKHEAD	EQUIPMENT/FURNISHINGS	25-50-01
UPHOLSTERY, AFT COMPARTMENT	EQUIPMENT/FURNISHINGS	25-50-00
UPHOLSTERY, CABIN AIRSTAIR DOOR	EQUIPMENT/FURNISHINGS	25-21-30
UPHOLSTERY, CABIN LOWER SIDEWALL	EQUIPMENT/FURNISHINGS	25-21-20
UPHOLSTERY, COCKPIT LOWER SIDEWALL	EQUIPMENT/FURNISHINGS	25-10-40
UPHOLSTERY, COCKPIT UPPER SIDEWALL	EQUIPMENT/FURNISHINGS	25-10-30
UPHOLSTERY, EMERGENCY EXIT DOOR	EQUIPMENT/FURNISHINGS	25-21-40
UPHOLSTERY, FLIGHT COMPT UPR SIDEWALL	EQUIPMENT/FURNISHINGS	25-10-30
UPHOLSTERY, PEDESTAL	EQUIPMENT/FURNISHINGS	25-10-80
UPLOCK ASSEMBLY, MAIN GEAR	LANDING GEAR	32-10-00
UPLOCK HOOK, NOSE GEAR	LANDING GEAR	32-20-00
UPLOCK PROXIMITY SWITCH, NOSE GEAR	LANDING GEAR	32-20-00
UPLOCK SENSOR SWITCH, MAIN GEAR	LANDING GEAR	32-10-00
UPPER AFT COWLING	NACELLES	54-30-10
UPPER FWD COWLING	NACELLES	54-30-30
V		
VALVE ASSEMBLY, BATTERY VENT AIR INLET	ELECTRICAL POWER	24-30-00
VALVE ASSEMBLY, FUEL FILTER DRAIN	ENGINE FUEL & CONTROL	73-10-00
VALVE ASSEMBLY, FWD WING LOCK	FLIGHT CONTROLS	27-40-00
VALVE ASSEMBLY, HYDRAULIC	LANDING GEAR	32-30-00
VALVE, AIR CONDITIONER SERVICE	ENVIRONMENTAL SYSTEMS	21-50-10
VALVE, BLEED AIR ALTERNATE INFLOW	ENVIRONMENTAL SYSTEMS	21-20-00
VALVE, BLEED AIR FIREWALL SHUTOFF	ENVIRONMENTAL SYSTEMS	21-20-00
VALVE, BLEED AIR INFLOW BYPASS	ENVIRONMENTAL SYSTEMS	21-20-00
VALVE, CROSS TRANSFER FUEL	FUEL	28-20-00
VALVE, ENGINE OIL DRAIN	OIL	79-20-00
VALVE, FUEL DRAIN	FUEL	28-10-00
VALVE, FUEL PURGE	FUEL	28-20-00
VALVE, FUEL VENT CHECK	FUEL	28-10-10
VALVE, FUEL VENT FLOAT	FUEL	28-10-10
VALVE, FUEL VENT PRESSURE RELIEF	FUEL	28-10-10
VALVE, HYDRAULIC PRESSURE RELIEF	LANDING GEAR	32-40-20
VALVE, OIL THERMOSTATIC CONTROL	OIL	79-20-00
VALVE, OXYGEN FILL	OXYGEN	35-00-01
VALVE, OXYGEN OUTLET	OXYGEN	35-00-01
VALVE, PNEUMATIC SOLENOID/PRESET/	ENVIRONMENTAL SYSTEMS	21-30-10
VALVE, POWER BRAKE	LANDING GEAR	32-40-20
VANE AXIAL BLOWER ASSEMBLY	ENVIRONMENTAL SYSTEMS	21-50-20
VELOCITY TRANSDUCER, WHEEL ROTATION	LANDING GEAR	32-10-10
VENT, BATTERY	ELECTRICAL POWER	24-30-00
VENT, HEATED FUEL	FUEL	28-10-10
VENTILATION BLOWER ASSEMBLY, AFT	ENVIRONMENTAL SYSTEMS	21-20-35

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

ALPHABETICAL INDEX

COMPONENT ITEM OR SYSTEM NAME	CHAPTER NAME	CHAP/SUB SECT & UNIT
V		
VENTILATION BLOWER ASSEMBLY, FWD	ENVIRONMENTAL SYSTEMS	21-20-30
VENTRAL STABILIZER	STABILIZERS	55-60-00
VERTICAL STABILIZER	STABILIZERS	55-30-00
VERTICAL STABILIZER FAIRING	STABILIZERS	55-30-00
VLf ANTENNA	NAVIGATION	34-50-10
VLf RECEIVER	NAVIGATION	34-50-10
VOICE RECORDER, COCKPIT	COMMUNICATIONS	23-70-10
VORTEX GENERATOR	STABILIZERS	55-30-00
VORTILON, AFT WING LEADING EDGE	WINGS	57-40-10
VORTILON, NACELLE	NACELLES	54-10-10
W		
WEATHER RADAR ANTENNA	NAVIGATION	34-40-00
WEATHER RADAR TRANSCIVER	NAVIGATION	34-40-00
WEB, AFT BAGGAGE COMPARTMENT	EQUIPMENT/FURNISHINGS	25-50-10
WEB, FWD BAGGAGE COMPARTMENT	EQUIPMENT/FURNISHINGS	25-22-50
WHEEL ASSEMBLY, COPILOT'S CONTROL	FLIGHT CONTROLS	27-31-10
WHEEL ASSEMBLY, PILOT'S CONTROL	FLIGHT CONTROLS	27-31-10
WHEEL, NOSE LANDING GEAR	LANDING GEAR	32-20-10
WHEEL, TIRE AND BRAKE ASSEMBLY	LANDING GEAR	32-10-10
WICK, STATIC	COMMUNICATIONS	23-60-00
WICKS, STATIC DISCHARGE	COMMUNICATIONS	23-60-00
WINDOW SHADING SWITCH	EQUIPMENT/FURNISHINGS	25-21-20
WINDOWS, CABIN OUTER	WINDOWS	56-20-10
WINDOWS, CABIN POLARIZED	WINDOWS	56-20-00
WINDOWS, FLIGHT COMPARTMENT	WINDOWS	56-10-00
WINDSHIELD DEICE RELAY	ELEC PANELS, PARTS, INST.	39-20-10
WINDSHIELD WIPER	ICE & RAIN PROTECTION	30-40-10
WINDSHIELD WIPER MOTOR CONVERTER	ICE & RAIN PROTECTION	30-40-10
WING ELECTRICAL WIRE CONDUIT	WINGS	57-20-10
WING FUEL TANK, AFT	FUEL	28-10-00
WING INSPECTION LIGHTS	LIGHTS	33-40-20
WING LANDING LIGHT	LIGHTS	33-40-10
WING LEADING EDGE VORTILON, AFT	WINGS	57-40-10
WING PRESSURIZATION SYSTEM	PNEUMATIC	36-00-20
WING REFRIGERATION PLUMBING	ENVIRONMENTAL SYSTEMS	21-50-45
WING, AFT	WINGS	57-10-00
WING, FWD	STABILIZERS	55-10-00
WIPER, WINDSHIELD	ICE & RAIN PROTECTION	30-40-10
WIRE CONDUIT, WING ELECTRICAL	WINGS	57-20-10
WRENCH, FUEL SUMP DRAIN	EQUIPMENT/FURNISHINGS	25-10-00

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG


LIST OF PAGES & TABLE OF CONTENTS FOR CHAPTER 33-00-00 LIGHTS

CHAP/SUB- SECT & UNIT	PAGE NUMBER	EFFECTIVE DATE	TABLE OF CONTENTS
33-00-00	1	07/31/02	LIST OF PAGES & TABLE OF CONTENTS
33-10-00	1	02/25/94	COCKPIT LIGHTS
33-10-00	2	02/25/94	
33-10-00	3	02/25/94	
33-20-00	1	02/25/94	LIGHTS-OVERHEAD ENTRY
33-20-00	2	11/04/94	
33-20-00	3	02/25/94	
33-20-03	1	02/25/94	CABIN OVERHEAD LIGHTS
33-20-03	2	02/25/94	NC-4 THRU NC-20
33-20-03	3	02/25/94	
33-20-07	1	02/25/94	LIGHTS,CABIN-AFT TOILET
33-20-07	2	02/25/94	NC-21 AND AFTER
33-20-07	3	02/25/94	
33-20-07	4	02/25/94	
33-20-07	5	02/25/94	
33-20-07	6	02/25/94	
33-20-07	7	02/25/94	
33-20-10	1	02/25/94	CABIN AISLE AND AIRSTAIR DOOR LIGHTS
33-20-10	2	02/25/94	
33-20-10	3	02/25/94	
33-20-10	4	02/25/94	
33-20-10	5	02/25/94	
33-20-30	1	02/25/94	CABIN LIGHTING POWER SUPPLIES
33-20-30	2	02/25/94	NC-4 THRU NC-20
33-20-30	3	02/25/94	
33-20-35	1	02/25/94	CABIN LIGHTING POWER SUPPLIES
33-20-35	2	02/25/94	NC-21 AND AFTER
33-20-35	3	02/25/94	
33-20-35	4	02/25/94	
33-20-35	5	02/25/94	
33-30-00	1	02/25/94	AFT BAGGAGE COMPARTMENT LIGHTS
33-30-00	2	02/25/94	
33-30-00	3	02/25/94	
33-40-00	1	02/25/94	NOSE LANDING AND TAXI LIGHTS
33-40-00	2	02/25/94	
33-40-00	3	02/25/94	
33-40-10	1	02/25/94	WING LANDING LIGHT
33-40-10	2	02/25/94	
33-40-10	3	11/04/94	
33-40-20	1	02/25/94	WING INSPECTION LIGHT
33-40-20	2	02/25/94	
33-40-20	3	02/25/94	
33-40-50	1	02/25/94	ANTI-COLLISION LIGHTS
33-40-50	2	02/25/94	
33-40-50	3	07/31/02	
33-40-50	4	02/25/94	
33-40-50	5	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-10-00
COCKPIT LIGHTS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

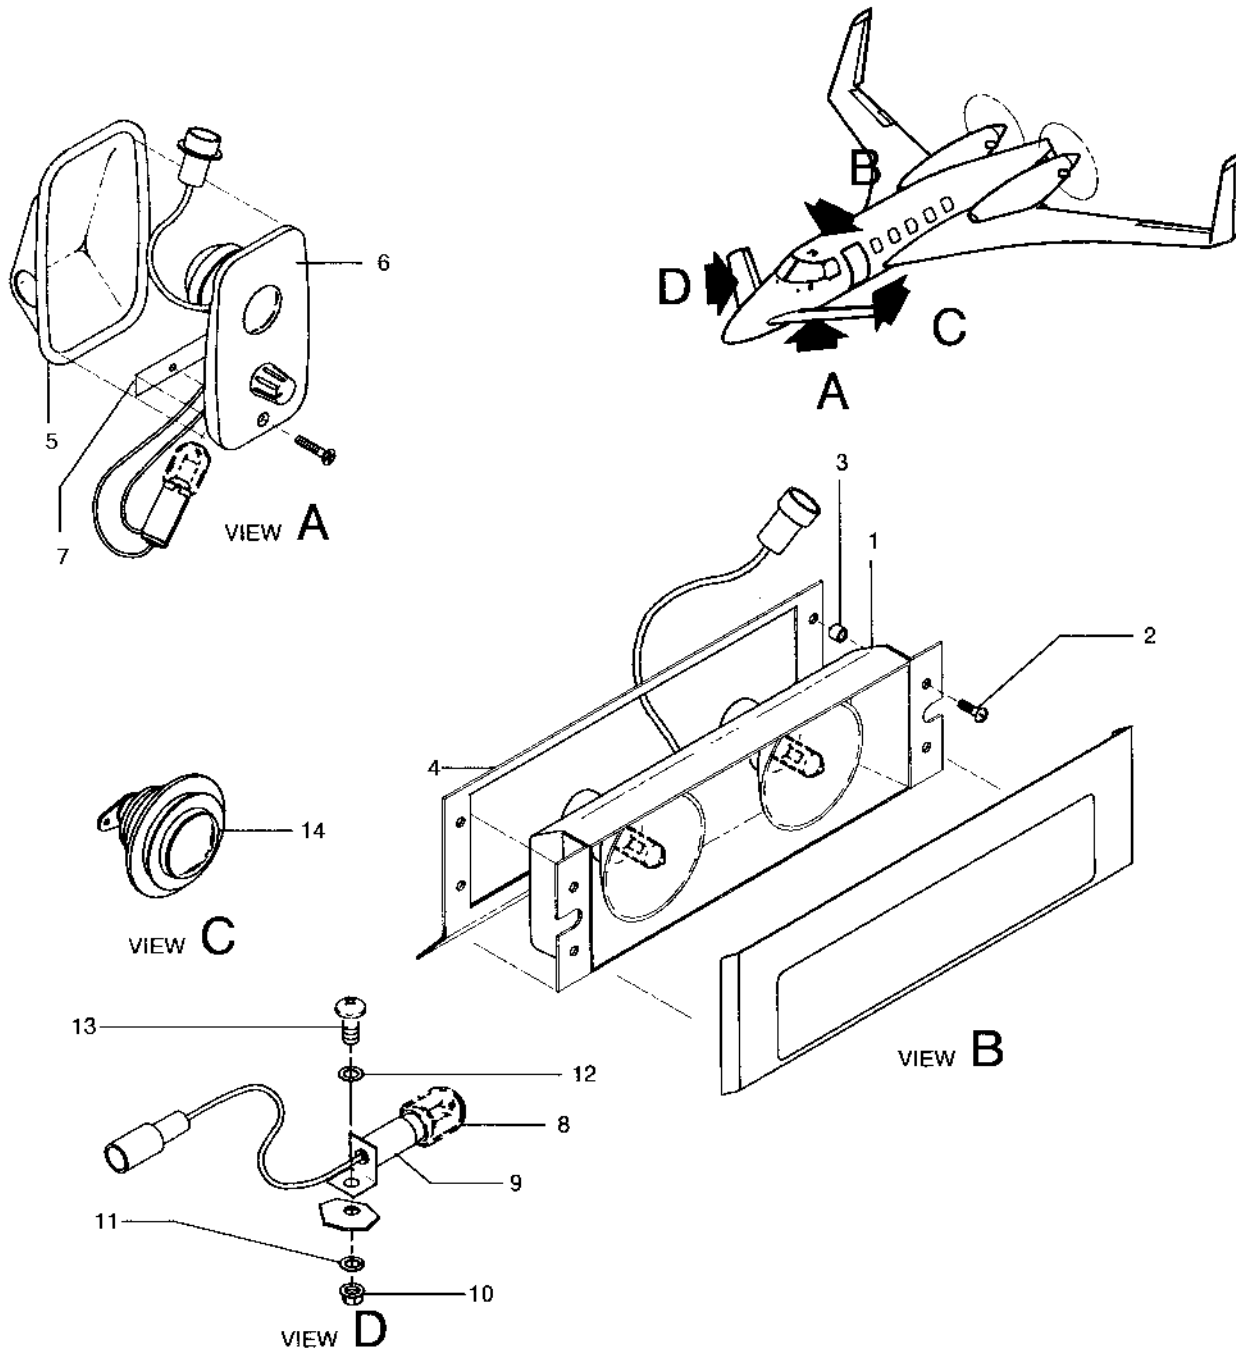

2000-352-03

FIGURE 10-00.COCKPIT LIGHTS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-322199-3	LIGHT INSTL, THUNDERSTORM	NP	3
	122-322199-5	LIGHT INSTL, THUNDERSTORM	NP	4
- 1	122-384083-3	. LIGHT ASSY, THUNDERSTORM	1	
		/ATTACHING PARTS/		
- 2	AN525-832R12	. SCREW	4	3
	AN525-832R10	. SCREW	4	4
- 3	NAS42DD6-16	. SPACER	2	3
		-----★-----		
	1939X	. . LAMP	2	
	BR7507-700	. . BEZEL	1	
- 4	122-322197-9	. BRACKET ASSY	1	3
	122-322197-23	. BRACKET ASSY	1	4
	MS21075L08	. . NUTPLATE	4	
	122-322230-1	LIGHT INSTL, MAP LAP	NP	
- 5	122-322231-1	. SHIELD, LH AND RH	2	
- 6	122-384077-3	. LIGHT ASSY, LH AND RH	2	
	MS35190-240	. . SCREW/VENDOR FURNISHED/	1	
	1495X	. . LAMP	1	
- 7	122-322039-17	. PLATE, LH AND RH	2	
	MS21060L06K	. . NUTPLATE	1	
	122-322162-1	LIGHT INSTL, SUBPANEL	NP	
- 8	MS25069-1495	. LAMP	2	
- 9	122-322162-3	. HOLDER ASSY, LAMP	2	
		/ATTACHING PARTS/		
- 10	MS21042L06	. NUT	1	
- 11	MS35338-41	. WASHER, LOCK	1	
- 12	AN960-6L	. WASHER	2	
- 13	MS35206-229	. SCREW	1	
		-----★-----		
	122-530388-1	HEADLINER INSTL, FLIGHT COMPARTMENT	NP	1
	122-530396-1	HEADLINER INSTL, FLIGHT COMPARTMENT	NP	2
- 14	3089-01	. LIGHT ASSY, READING	1	
	1308	. . BULB, READING LIGHT	1	

CODES OF EFFECTIVITY


1	NC-4 THRU NC-19	2	NC-20 AND AFTER
3	NC-4 THRU NC-20	4	NC-21 AND AFTER

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-20-00
LIGHTS-OVERHEAD ENTRY

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

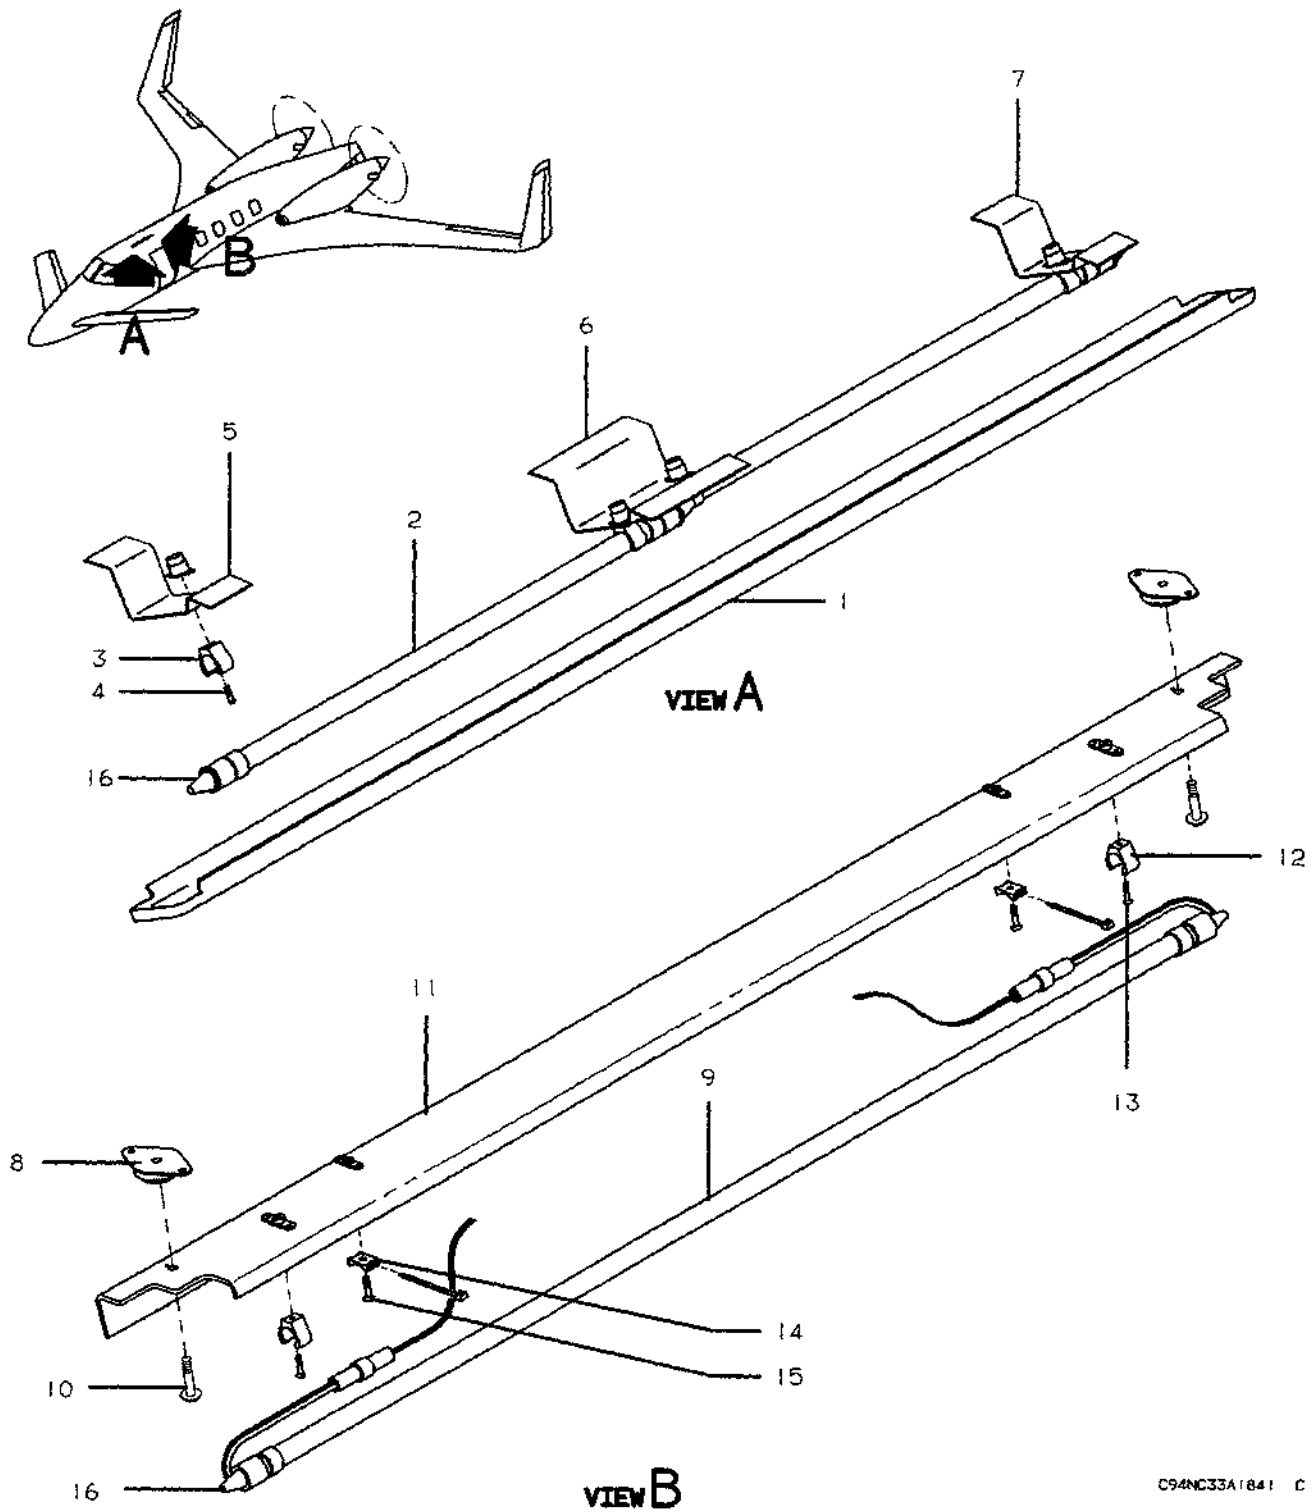

C94NC33A1841 C

FIGURE 20-00.LIGHTS-OVERHEAD ENTRY

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00 - 1	122-530070-1	LENS, VESTIBULE HEADLINER LIGHT	1	1
	122-530292-1	LIGHT INSTL, VESTIBULE HEADLINER	NP	1
- 2	6635-380 2S	. LAMP	2	1
	122-530292-3	. CLIP ASSY/FS 171.00/	1	1
	122-530292-5	. CLIP ASSY/FS 183.75/	1	1
	122-530292-7	. CLIP ASSY/FS 196.50/	1	1
- 3	31 87	. LAMP HOLDER	AR	1
		/ATTACHING PARTS/		
- 4	MS24693S5	. SCREW/2 EA FOR 122-530292-5 CLIP ASSY/	1	1
	NAS1474A04-04	. NUTPLATE	1	1
		-----★-----		
- 5	122-530292-9	. CLIP/FS 171.00/	1	1
- 6	122-530292-11	. CLIP/FS 183.75/	1	1
- 7	122-530292-13	. CLIP/FS 196.50/	1	1
	122-530292-15	LIGHT INSTL, OVERHEAD ENTRY	NP	2
	122-530292-21	LIGHT INSTL, OVERHEAD ENTRY	NP	3
- 8	122-384052-1	. VIBRATION ISOLATOR	2	4
- 9	6635-750 2S	. LAMP	1	2
	122-530292-17	. LAMP ASSY	1	4
		/ATTACHING PARTS/		
- 10	AN525-10-6	. SCREW	2	4
		-----★-----		
- 11	122-530292-19	. REFLECTOR	1	4
- 12	TM2R6	. TIE MOUNT	2	3
		/ATTACHING PARTS/		
- 13	MS24693S7	. SCREW	2	3
	MS21047L04	. NUTPLATE	2	3
		-----★-----		
- 14	31 87	. LAMP HOLDER	2	2
	3187-11	. LAMP HOLDER	2	3
		/ATTACHING PARTS/		
- 15	MS24693S5	. SCREW	1	4
	MS21047L04	. NUTPLATE	1	4
		-----★-----		
	6335-750S	LAMP	1	3
	122-384188-1	WIRE HARNESS INSTL	NP	5
- 16	31 85 1 A	. CONNECTOR ASSY	2	5

CODES OF EFFECTIVITY

1	NC-4 THRU NC-14	2	NC-15 THRU NC-20
3	NC-21 AND AFTER	4	NC-15 AND AFTER
5	NC-4 THRU NC-20		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-20-03
CABIN OVERHEAD LIGHTS
NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

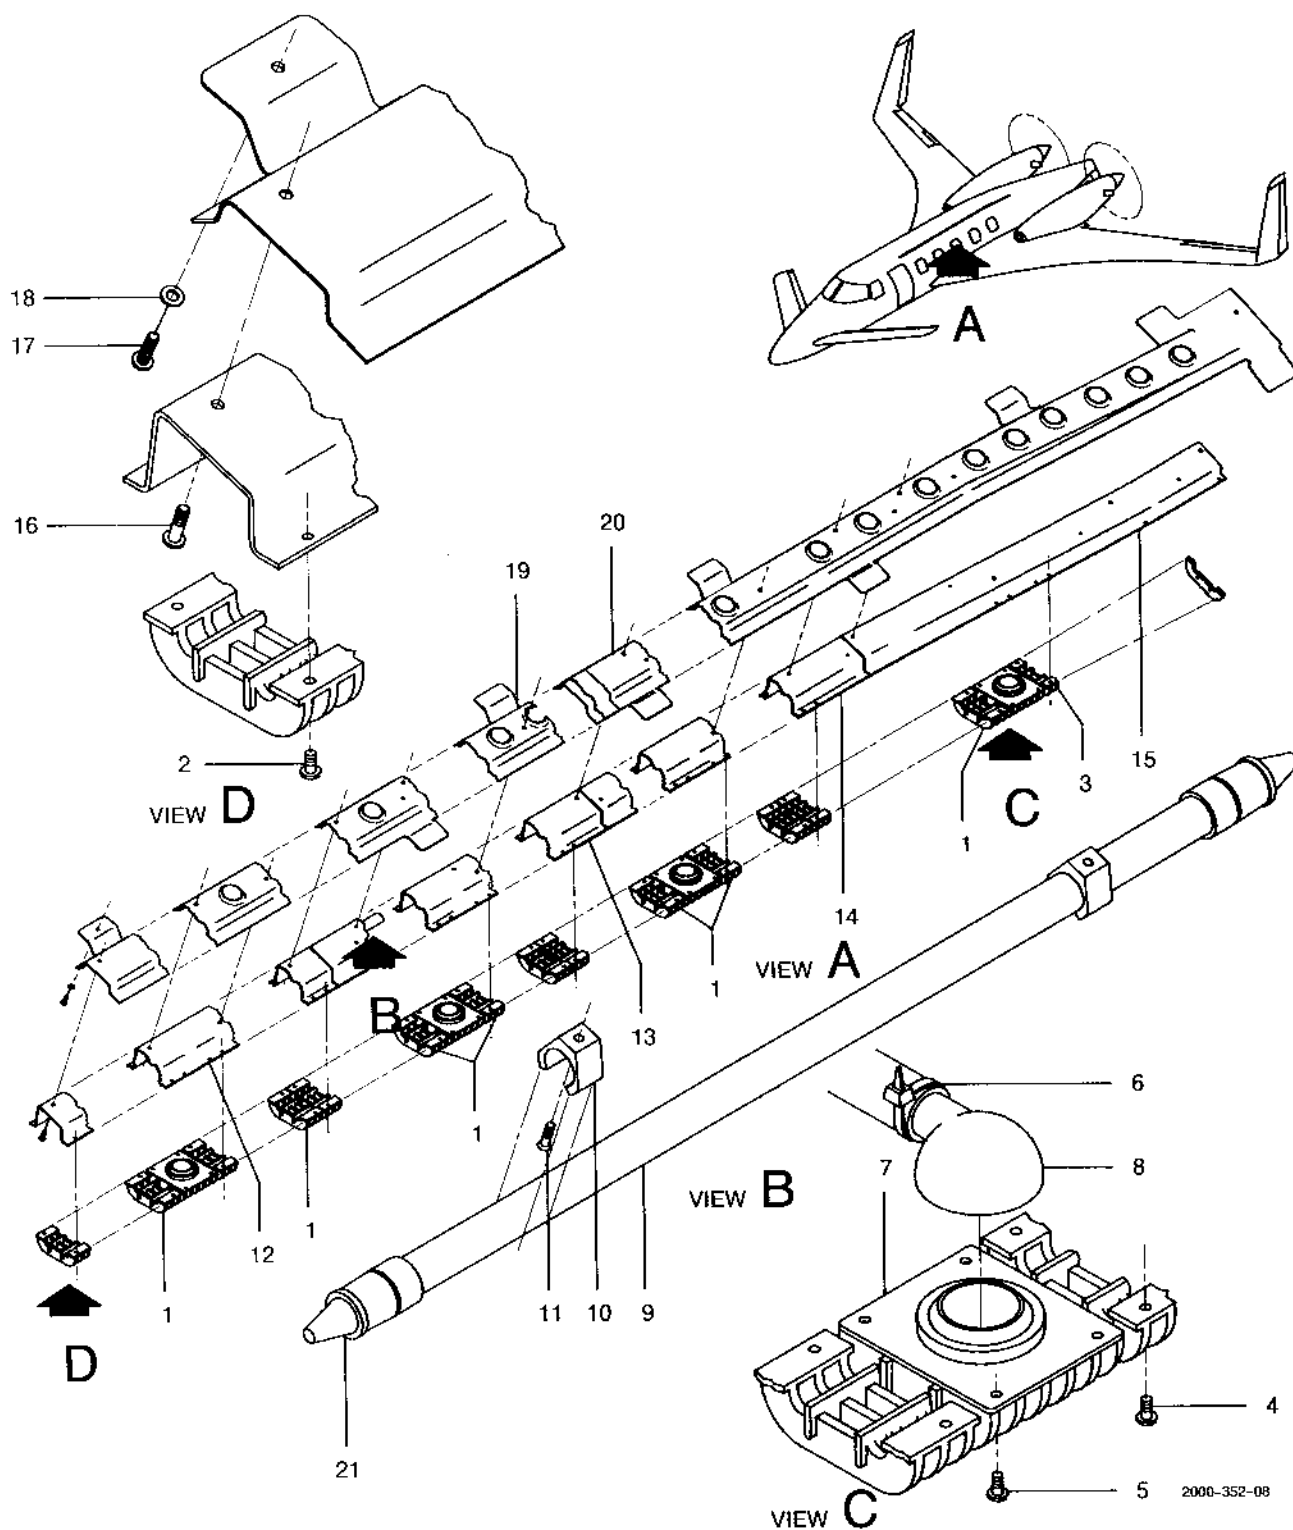


FIGURE 20-03.CABIN OVERHEAD LIGHTS

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-03	122-530222-1	CABIN LIGHT INSTL.....	NP	3
- 1	122-384113-1	. GRILL ASSY, LH & RH.....	14	3
		/ATTACHING PARTS/		
- 2	FH8C10CP-L09BG	. SCREW.....	6	
		-----★-----		
- 3	122-384113-3	. GRILL ASSY, LH.....	1	3
	122-384113-4	. GRILL ASSY, RH.....	1	3
		/ATTACHING PARTS/		
- 4	FH8C10CP-L09BG	. SCREW.....	6	
		-----★-----		
	122-530273-1	. AIR VALVE ASSY.....	8	3
		/ATTACHING PARTS/		
- 5	FH8C10CP-L09BG	. SCREW.....	4	
- 6	MS3367-5	. TIEDOWN.....	1	
		-----★-----		
- 7	122-384114-1	. GRILL ASSY.....	1	3
- 8	2010	. AIR VALVE ASSY.....	1	3
- 9	8635-360 2S	. LAMP.....	20	3
- 10	31 87	. LAMP HOLDER.....	40	3
		/ATTACHING PARTS/		
- 11	MS24693S5	. SCREW.....	1	
		-----★-----		
- 12	122-530274-1	. REFLECTOR ASSY, LH/FS 203.5 TO FS 243.5/.....	1	3
	122-530274-2	. REFLECTOR ASSY, RH/FS 203.5 TO FS 243.5/.....	1	3
	MS21075L08	. NUTPLATE.....	18	3
- 13	122-530274-3	. REFLECTOR ASSY, LH/FS 243.5 TO FS 283.5/.....	1	3
	122-530274-4	. REFLECTOR ASSY, RH/FS 243.5 TO FS 283.5/.....	1	3
	MS21075L08	. NUTPLATE.....	16	3
- 14	122-530274-5	. REFLECTOR ASSY, LH/FS 283.5 TO FS 323.6/.....	1	3
	122-530274-6	. REFLECTOR ASSY, RH/FS 283.5 TO FS 323.6/.....	1	3
	MS21075L08	. NUTPLATE.....	16	3
- 15	122-530274-7	. REFLECTOR ASSY, LH/FS 323.6 TO FS 355.5/.....	1	3
	122-530274-8	. REFLECTOR ASSY, RH/FS 323.6 TO FS 355.5/.....	1	3
	MS21075L08	. NUTPLATE.....	14	3
- 16	PS8C6CP-L09BG	. SCREW.....	38	3
	122-530275-1	. SUPPORT ASSY, LH.....	1	3
	122-530275-2	. SUPPORT ASSY, RH.....	1	3
		/ATTACHING PARTS/		
- 17	MS27037-1-07	. SCREW.....	11	
- 18	AN960-10L	. WASHER.....	11	
		-----★-----		
- 19	122-530275-3	. SUPPORT, LH FWD.....	1	1
	122-530275-4	. SUPPORT, RH FWD.....	1	2
- 20	122-530275-5	. SUPPORT, LH AFT.....	1	1
	122-530275-6	. SUPPORT, RH AFT.....	1	2
	NAS1474A04-04	. NUTPLATE.....	20	3
	NAS1474A04-08	. NUTPLATE.....	19	3
	122-364188-1	WIRE HARNESS INSTL.....	NP	3
- 21	31 85 1 A	. CONNECTOR ASSY.....	40	3

CODES OF EFFECTIVITY


1	NC-4 THRU NC-14	2	NC-15 THRU NC-20
3	NC-4 THRU NC-20		

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-20-07
LIGHTS,CABIN-AFT TOILET
NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

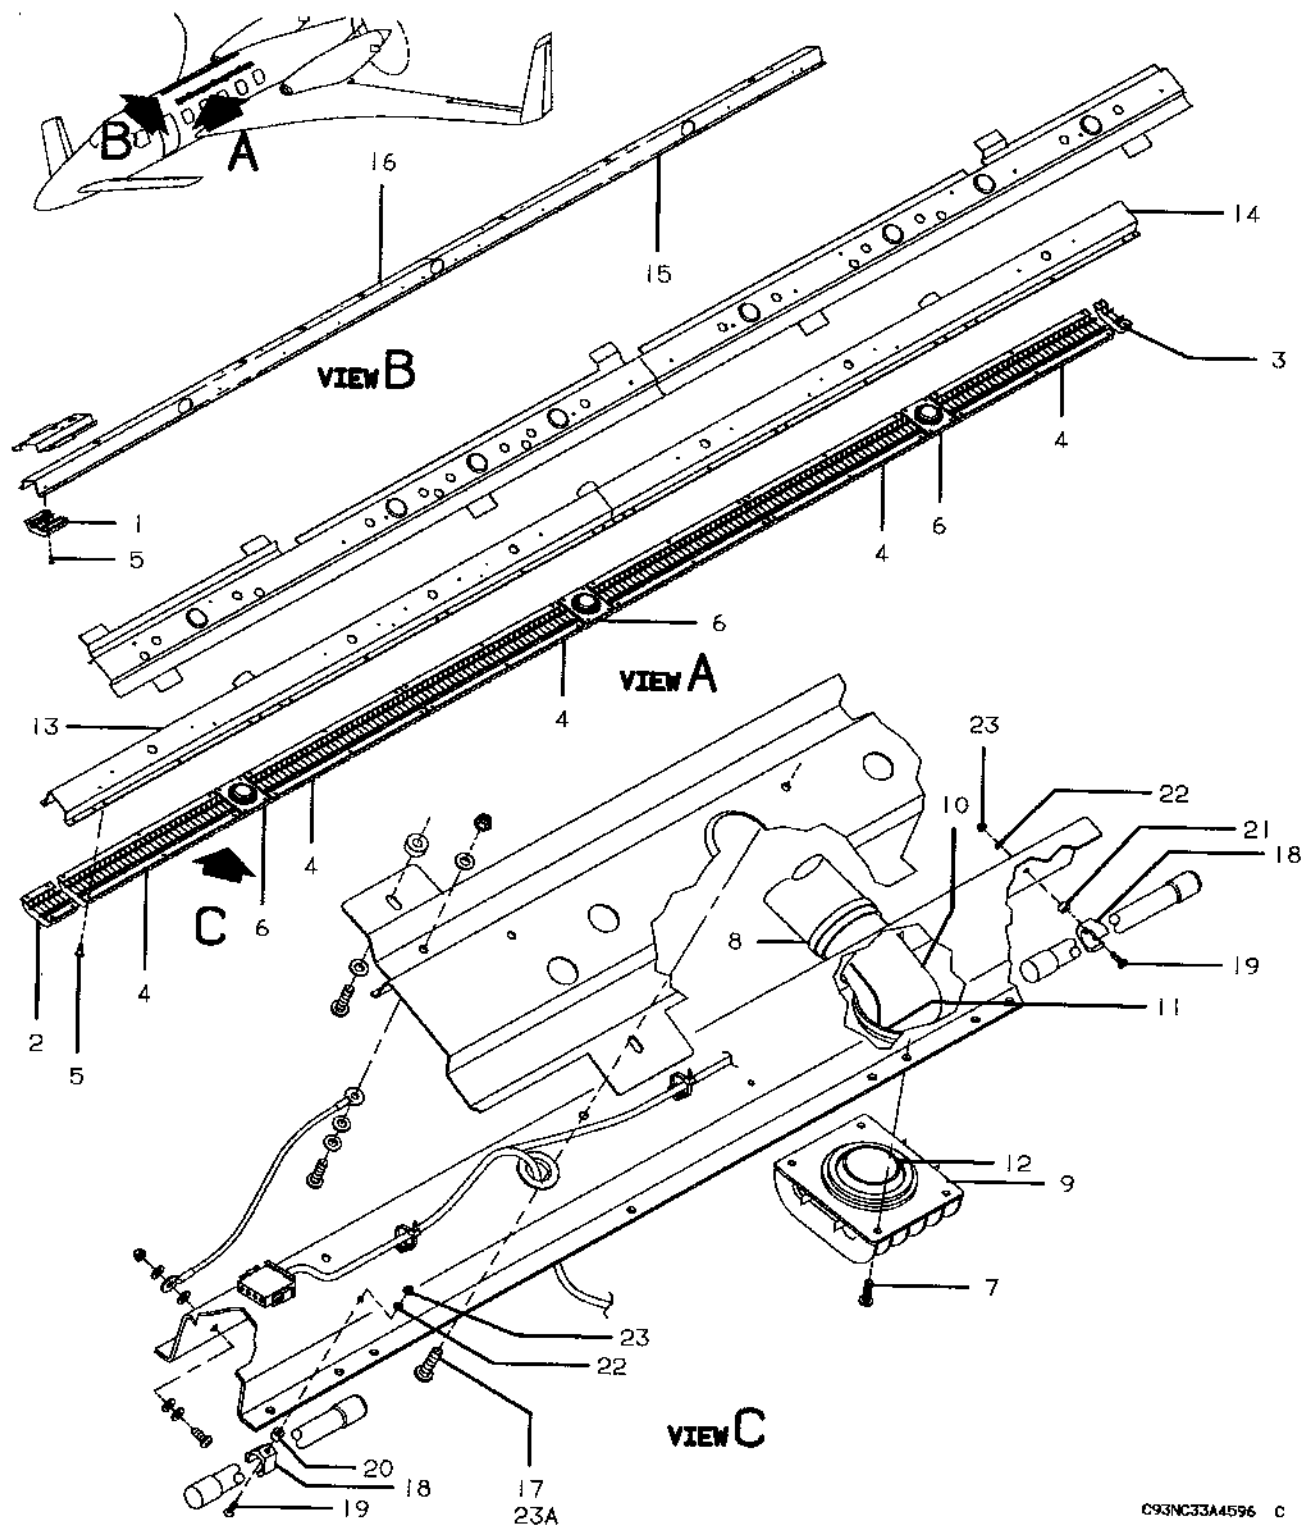


C93NC33A4596 C

FIGURE 20-07. LIGHTS, CABIN-AFT TOILET
/SHEET 1 OF 3 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-07	122-530355-1	LIGHT INSTL, CABIN-AFT TOILET	NP	1
- 1	122-530355-3	. GRILL ASSY/RH FWD/	1	1
- 2	122-530355-5	. GRILL ASSY/LH FWD/	1	1
- 3	122-530355-7	. GRILL ASSY/LH, RH AFT/	2	1
- 4	122-384113-1	. GRILL ASSY/AIR VALVE/	12	1
		/ATTACHING PARTS/		
- 5	FH8C10CP-L09BG	. SCREW	84	1
		-----★-----		
- 6	122-530273-3	. VALVE ASSY-AIR	6	1
		/ATTACHING PARTS/		
- 7	FH8C10CP-L09BG	. SCREW	4	1
- 8	MS3367-5	. TIEDOWN	1	1
		-----★-----		
- 9	122-384114-1	. GRILL ASSY	1	1
- 10	122-554054-1	. PLENUM CAP	1	1
		/ATTACHING PARTS/		
- 11	2000-24	. CLAMP	1	1
		-----★-----		
- 12	3818-01	. AIR OUTLET	1	1
- 13	122-530537-13	. REFLECTOR ASSY	1	1
- 14	122-530537-15	. REFLECTOR ASSY	1	1
- 15	122-530537-16	. REFLECTOR ASSY	1	1
- 16	122-530537-17	. REFLECTOR ASSY	1	1
		/ATTACHING PARTS/		
- 17	DPY79000P8B2 1/2	. SCREW/8EA for -13 AND -15 ASSYS/	AR	1
		7EA FOR -16 AND -17 REFLECTOR ASSYS/		
		-----★-----		
- 18	3187-11	. LAMP HOLDER	28	1
		/ATTACHING PARTS/		
- 19	MS24693S7	. SCREW	1	1
- 20	NAS47ND4B020	. SPACER	1	1
- 21	NAS47ND4B012	. SPACER	1	1
- 22	AN960-4L	. WASHER	1	1
- 23	MS21042-L04	. NUT	1	1
		-----★-----		
- 23A	PS8C6CP-L09BG	. SCREW	16	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

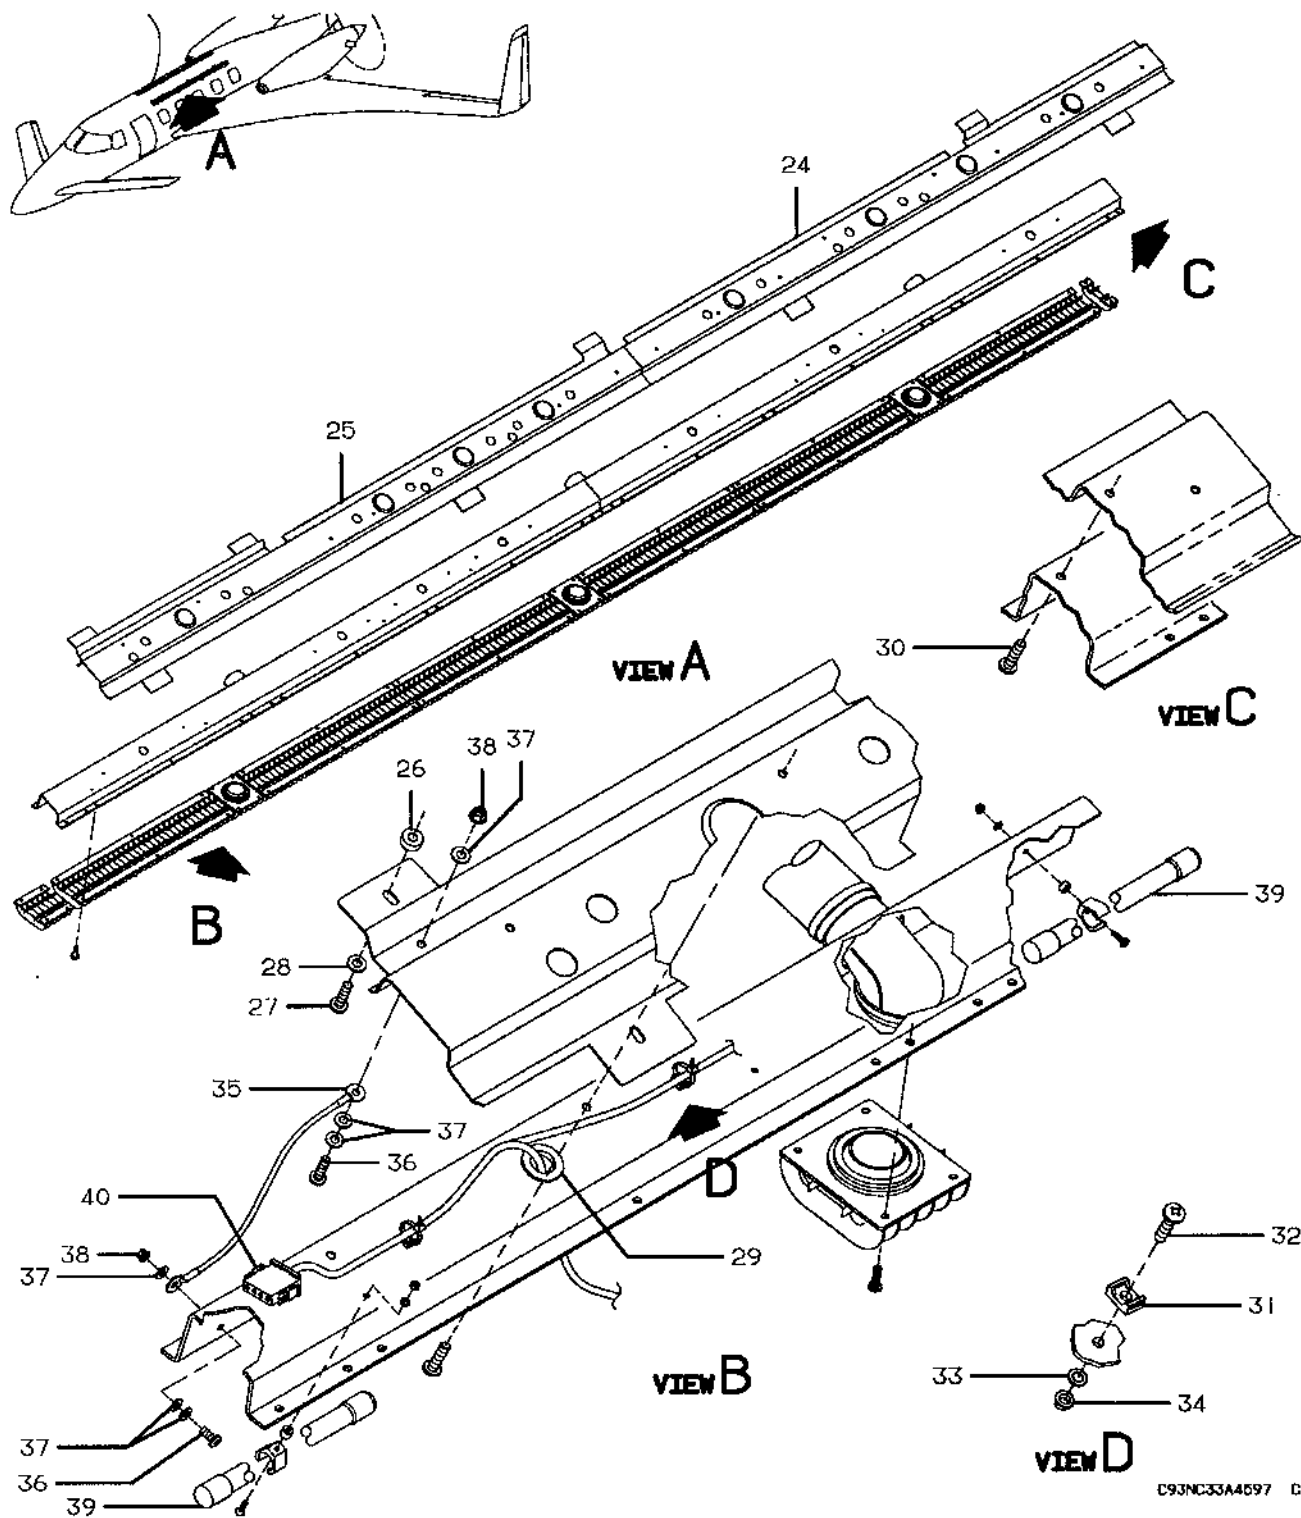


C93NC33A4597 C

FIGURE 20-07. LIGHTS, CABIN-AFT TOILET
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-07 -24	122-530356-15	. LIGHT TRAY ASSY	1	2
	122-530356-25	. LIGHT TRAY ASSY	1	3
-25	122-530356-17	. LIGHT TRAY ASSY	1	2
	122-530356-27	. LIGHT TRAY ASSY	1	3
		/ATTACHING PARTS/		
-26	122-530222-3	. SPACER	1	1
-27	MS27039-1-07	. SCREW	1	1
-28	AN960-10L	. WASHER	1	1
		---★---		
-29	MS21266-2N	. GROMMET	1	1
	NAS1474A08	. NUTPLATE/15EA for -15 AND -25 ASSYS/	AR	2
-30	MS24693S270	. SCREW	2	4
-31	TM2R6	. TIEMOUNT	28	1
		/ATTACHING PARTS/		
-32	MS35208-216	. SCREW	1	1
-33	AN960-4L	. WASHER	1	1
-34	MS21042L04	. NUT	1	1
		---★---		
-35	MS25083-2BB5	. JUMPER, BONDING	8	1
		/ATTACHING PARTS/		
-36	MS35208-246	. SCREW	2	1
-37	AN960-8	. WASHER	6	1
-38	MS21042L08	. NUT	2	1
		---★---		
-39	8635-360 2S	LAMP	14	1
	122-364188-1	WIRE HARNESS ASSY	1	1
-40	31 85 1 A	. CONNECTOR ASSY	28	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

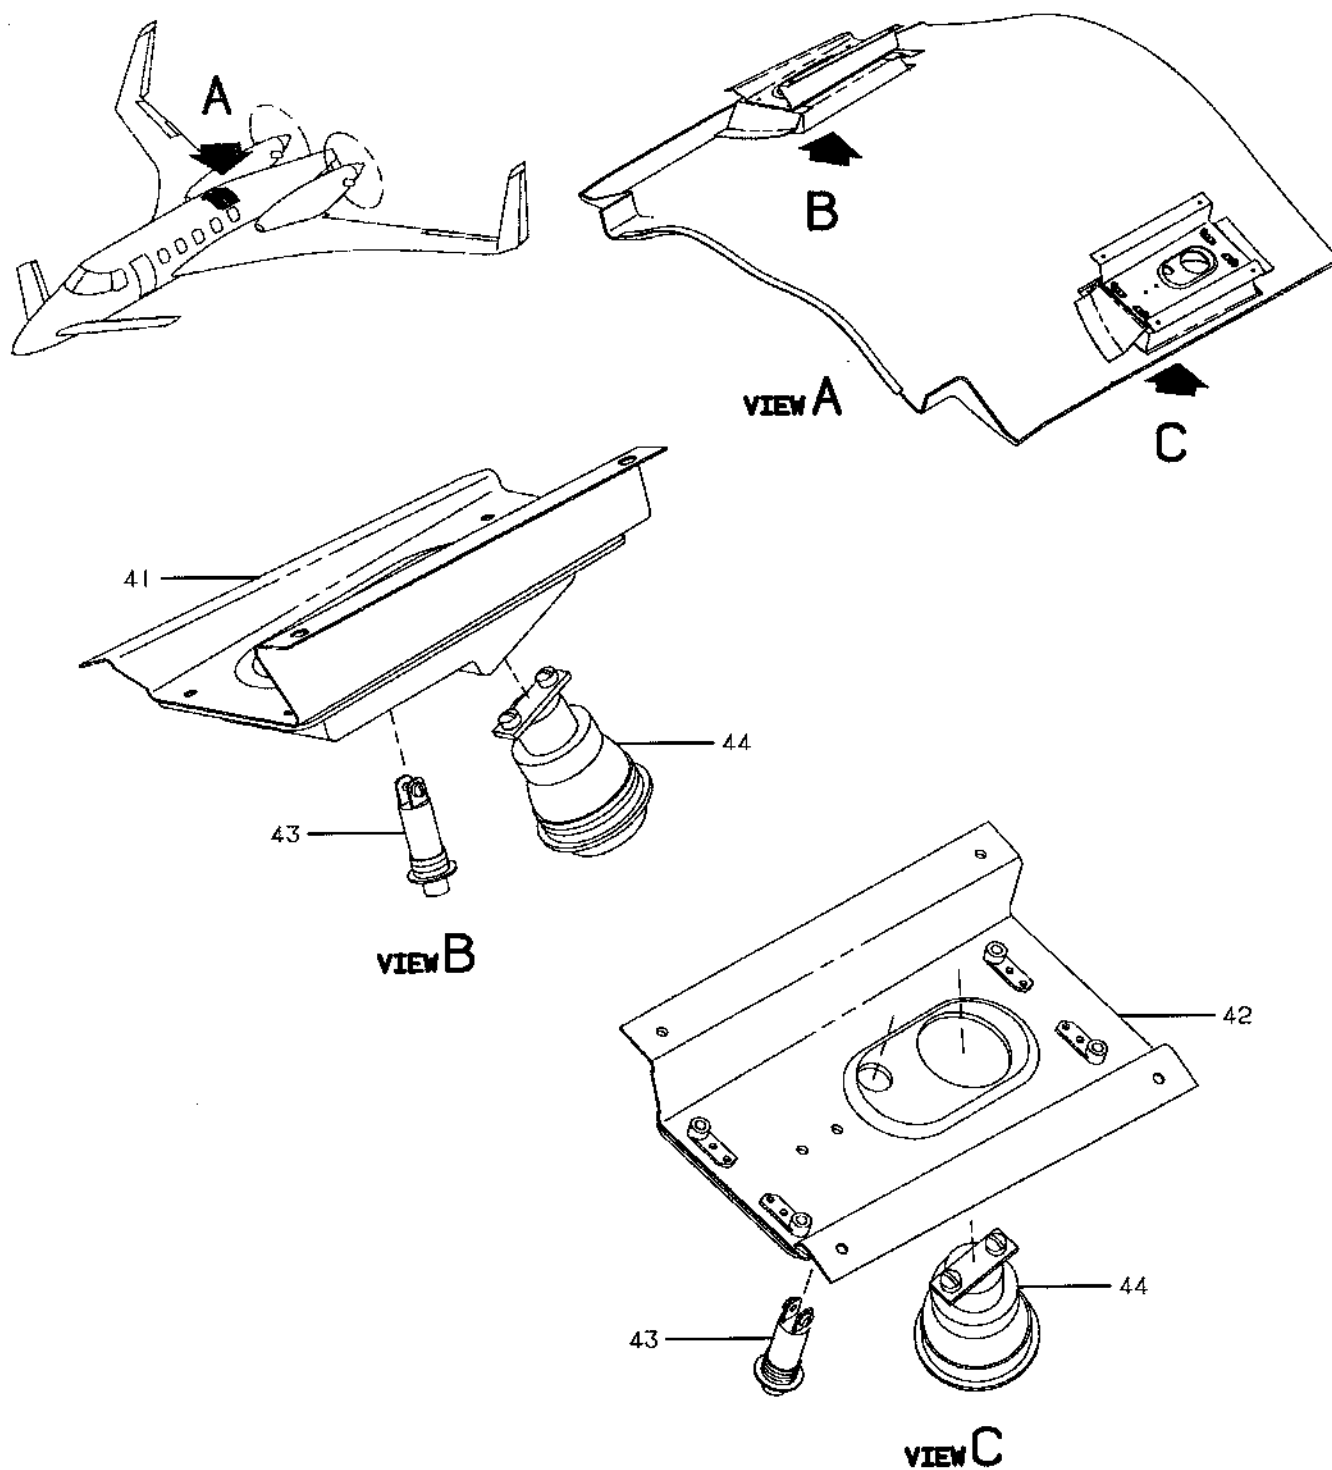

C93NC33A0203 C

FIGURE 20-07. LIGHTS, CABIN-AFT TOILET
/SHEET 3 OF 3 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-07 - 41	122-530371-1	LIGHT SUPPORT ASSY, AFT TOILET/RH SIDE/	1	1
- 42	122-530372-1	COAT HOOK SUPPORT ASSY, AFT TOILET/LH SIDE/	1	1
- 43	J20125-31	. SWITCH, LIGHT	1	1
- 44	2520-10	. LIGHT	1	1
	207359-1	. CONNECTOR	1	1
	66103-4	. CONTACT, PIN	1	1
	1N4007	. DIODE	2	1


CODES OF EFFECTIVITY

1	NC-21 AND AFTER	2	NC-21 THRU NC-53
3	NC-54 AND AFTER	4	NC-31 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-20-10
CABIN AISLE AND AIRSTAIR DOOR LIGHTS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

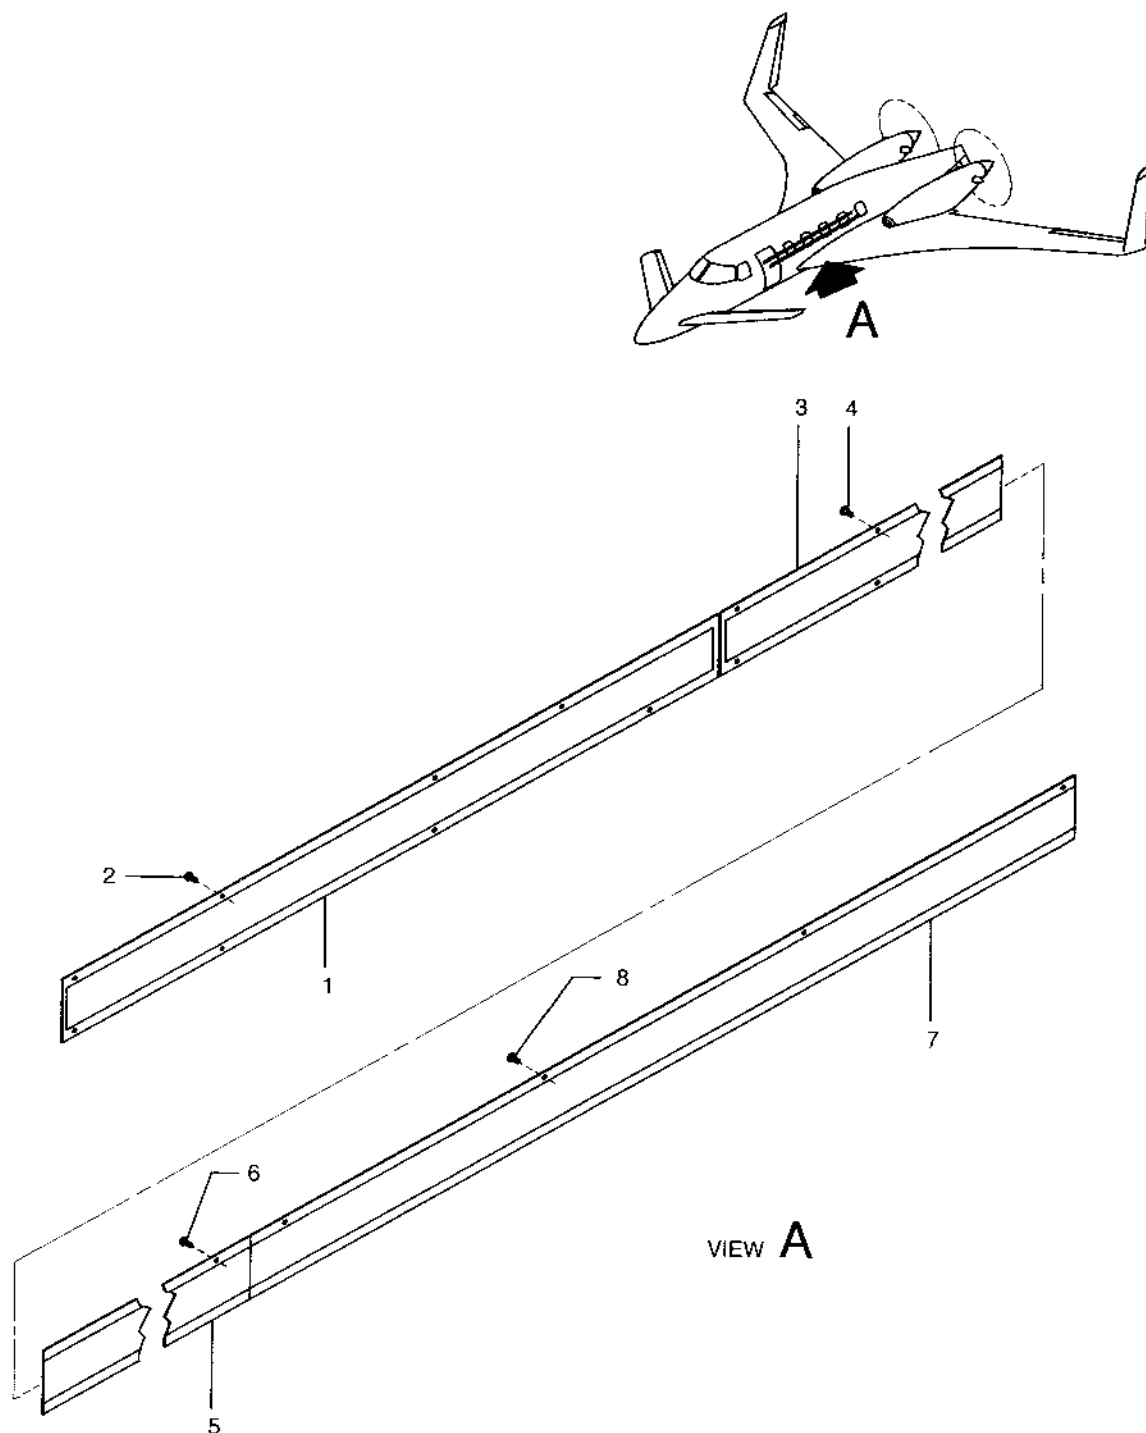


2000-352-10

FIGURE 20-10. CABIN AISLE & AIRSTAIR DOOR LIGHTS
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10	122-530014-5	LIGHT INSTL, CABIN AISLE.....	NP	
- 1	122-384068-15	. LIGHT ASSY, CABIN AISLE LH & RH	2	
		/ATTACHING PARTS/		
- 2	MS35207-263	. SCREW.....	4	
		---★---		
- 3	122-384068-13	. LIGHT ASSY, CABIN AISLE LH & RH	2	
		/ATTACHING PARTS/		
- 4	MS35207-263	. SCREW.....	6	
		---★---		
- 5	122-384068-11	. LIGHT ASSY, CABIN AISLE LH & RH	2	
		/ATTACHING PARTS/		
- 6	MS35207-263	. SCREW.....	6	
		---★---		
- 7	122-384068-9	. LIGHT ASSY, CABIN AISLE LH & RH	2	
		/ATTACHING PARTS/		
- 8	MS35207-263	. SCREW.....	7	
		---★---		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

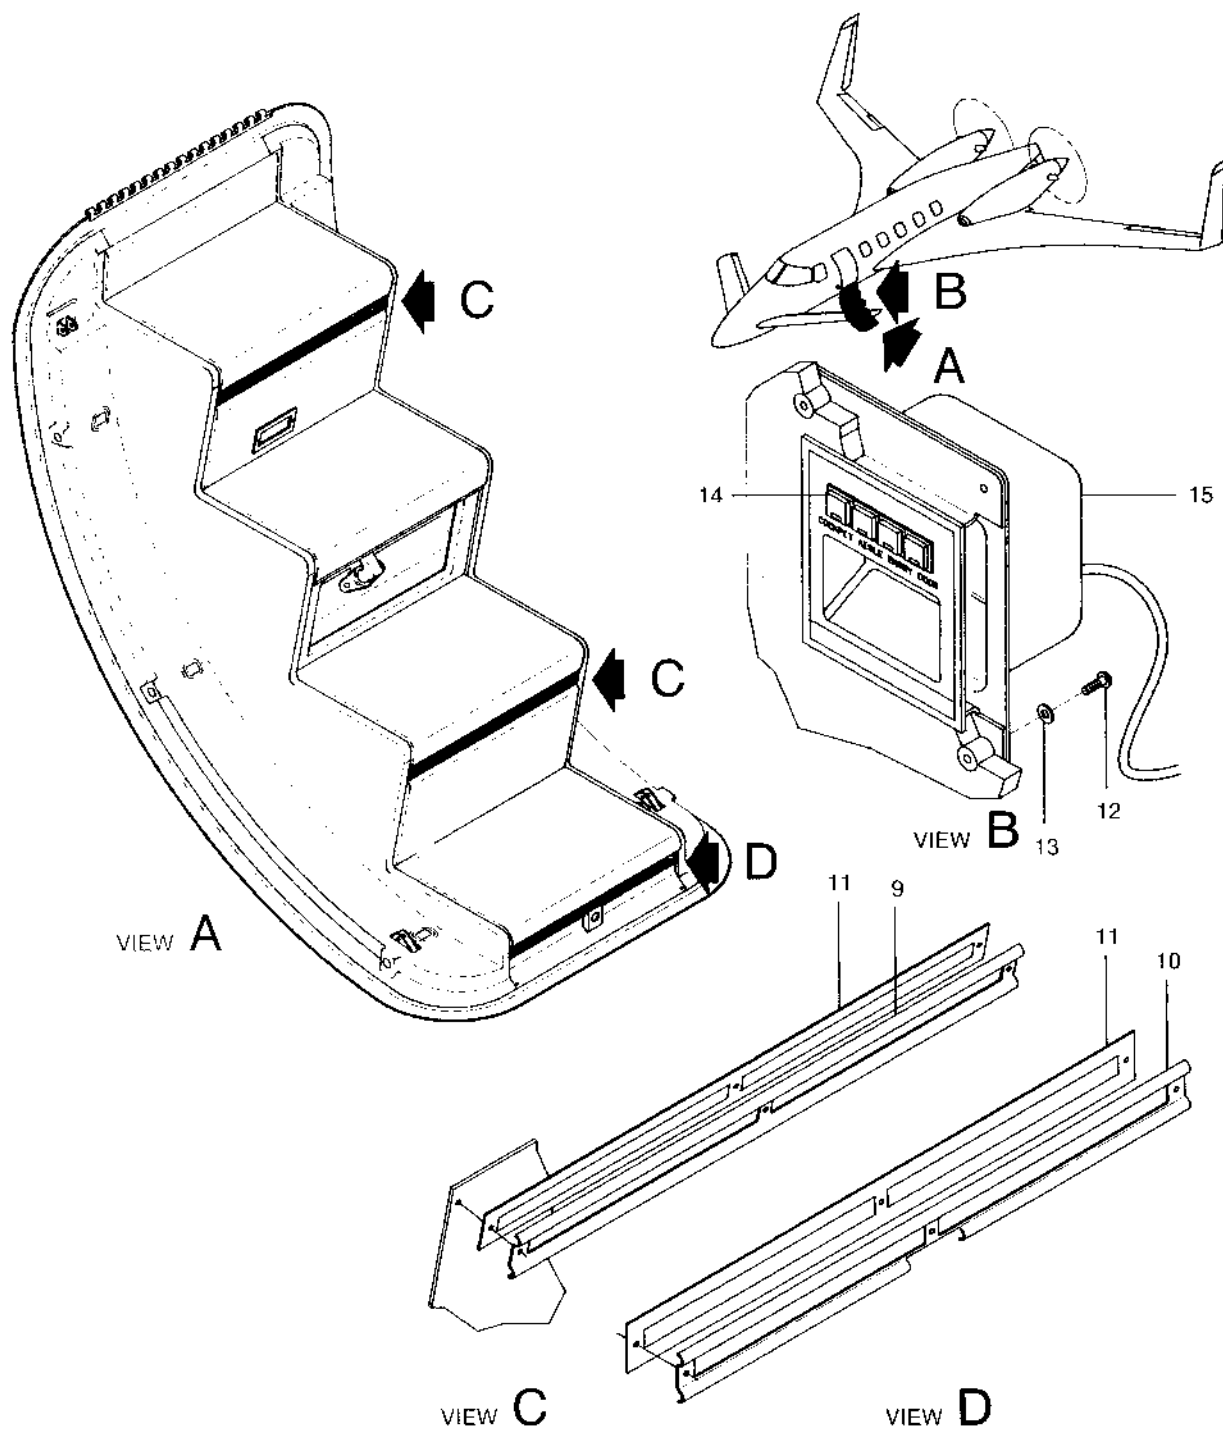

2000-352-11

FIGURE 20-10. CABIN AISLE & AIRSTAIR DOOR LIGHTS
/SHEET 2 OF 2 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10 - 9	122-530051-1	RETAINER, CABIN DOOR LIGHT PANEL & CARPET	2	
- 10	122-530051-7	RETAINER, CABIN DOOR LIGHT PANEL & CARPET	1	
- 11	122-384080-1	LIGHT PANEL, CABIN AIRSTAIR DOOR STEP	3	1
		/SEE NOTE/		
	122-384080-3	LIGHT PANEL, CABIN AIRSTAIR DOOR STEP	3	2
		/SEE NOTE/		
NOTE AT INSTL 122-384080-1 AND -3 SHOULD NOT BE INTERMIXED ON ANY ONE AIRCRAFT.				
	122-530311-1	SWITCH AND LIGHT INSTL, ENTRY	NP	3
	122-530311-3	SWITCH AND LIGHT INSTL, ENTRY	NP	4
- 12	MS35208-243	. SCREW	4	
- 13	AN960-8L	. WASHER	4	
- 14	122-384081-1	. SWITCH AND LIGHT ASSY, ENTRY	1	3
	122-384081-3	. SWITCH AND LIGHT ASSY, ENTRY	1	4
	MS15570-303	. . LAMP	1	
	122-382035-7	. . SWITCH	4	
	20701B-1	. . HOUSING, CONTACT PIN	1	
	66400-4	. . PIN, CONTACT	AR	
- 15	122-530311-5	. COVER ASSY	1	

CODES OF EFFECTIVITY


1	NC-4 THRU NC-30	2	NC-31 AND AFTER
3	NC-4 THRU NC-46	4	NC-47 AND AFTER

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-20-30
CABIN LIGHTING POWER SUPPLIES
NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

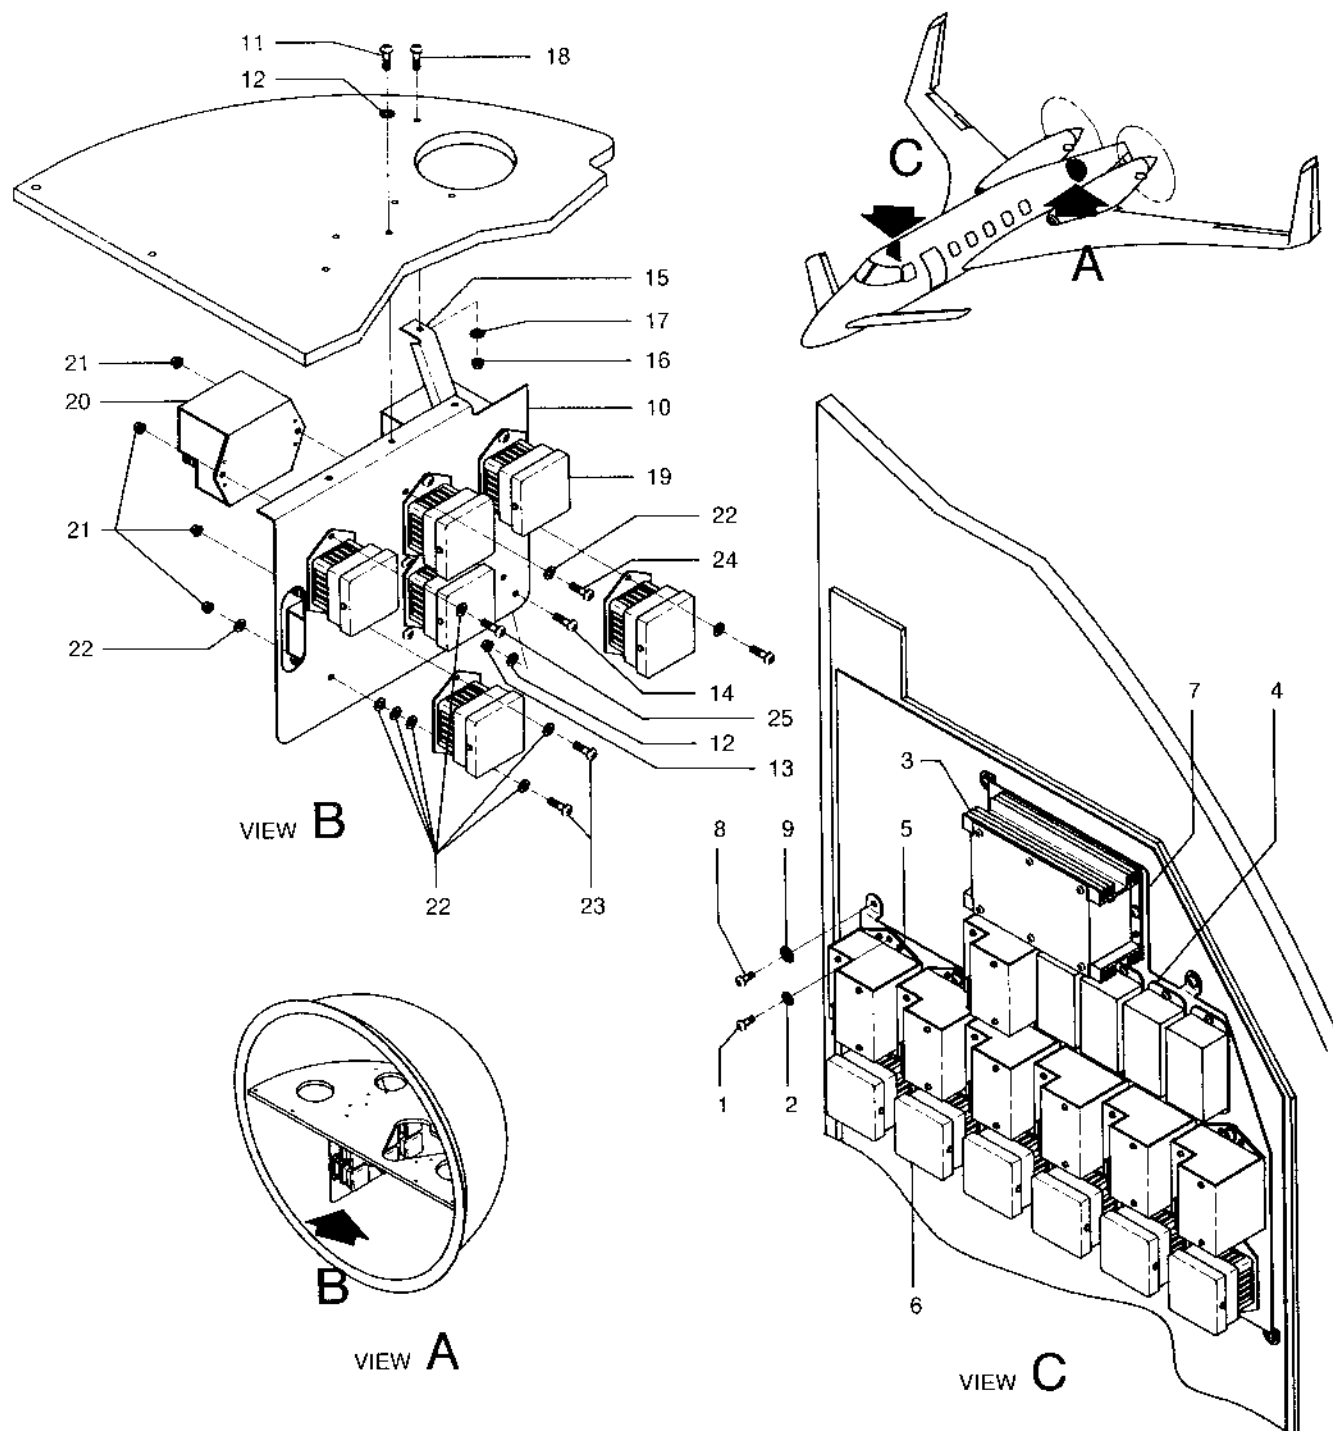

2000-350-04

FIGURE 20-30.CABIN LIGHTING POWER SUPPLIES

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-30	122-364000-5	FUSELAGE ELECTRICAL EQUIPMENT INSTALLATION	NP	1
	122-364000-7	.. FORWARD POWER SUPPLIES INSTALLATION	NP	1
- 1	MS35206-244	.. SCREW	28	1
- 2	AN960-8L	.. WASHER	36	1
- 3	18-996C	.. INVERTER	1	1
- 4	TR992	.. BALLAST	4	1
		/ATTACHING PARTS/		
	MS35206-216	.. SCREW	8	
	AN960-4L	.. WASHER	8	
		-----★-----		
- 5	18-95D	.. INVERTER	7	1
- 6	22-311A	.. DIMMER CONTROL	6	1
- 7	122-364000-11	.. MOUNTING PLATE ASSY	1	2
	122-364000-47	.. MOUNTING PLATE ASSY	1	3
		/ATTACHING PARTS/		
- 8	MS35206-244	.. SCREW	6	
- 9	MS35335-59	.. WASHER, LOCK	6	
		-----★-----		
	MS21075L08	.. NUTPLATE	36	1
	122-364000-35	.. AFT POWER SUPPLIES INSTALLATION	NP	1
- 10	122-364000-37	.. MOUNTING PLATE ASSEMBLY	1	1
		/ATTACHING PARTS/		
- 11	MS35206-247	.. SCREW	3	
- 12	AN960-8L	.. WASHER	4	
- 13	130909N28	.. NUT	1	
- 14	MS35206-242	.. SCREW	1	
		-----★-----		
	MS21075L08	.. NUTPLATE	4	1
- 15	122-364000-19	.. BRACE	1	1
		/ATTACHING PARTS/		
- 16	MS21042-08	.. NUT	1	
- 17	AN960-8L	.. WASHER	1	
- 18	MS35206-247	.. SCREW	1	
		-----★-----		
- 19	22-311A	.. DIMMER CONTROL	6	1
- 20	18-95D	.. INVERTER	6	1
- 21	130909N28	.. NUT	14	1
- 22	AN960-8L	.. WASHER	35	1
- 23	MS35206-331	.. SCREW	6	1
- 24	MS35206-243	.. SCREW	3	1
- 25	MS35206-244	.. SCREW	3	1

CODES OF EFFECTIVITY

1	NC-4 THRU NC-20	2	NC-4 THRU NC-13
3	NC-14 THRU NC-20		

-END-


02/25/94

33-20-30
PAGE 3

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-20-35
CABIN LIGHTING POWER SUPPLIES
NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

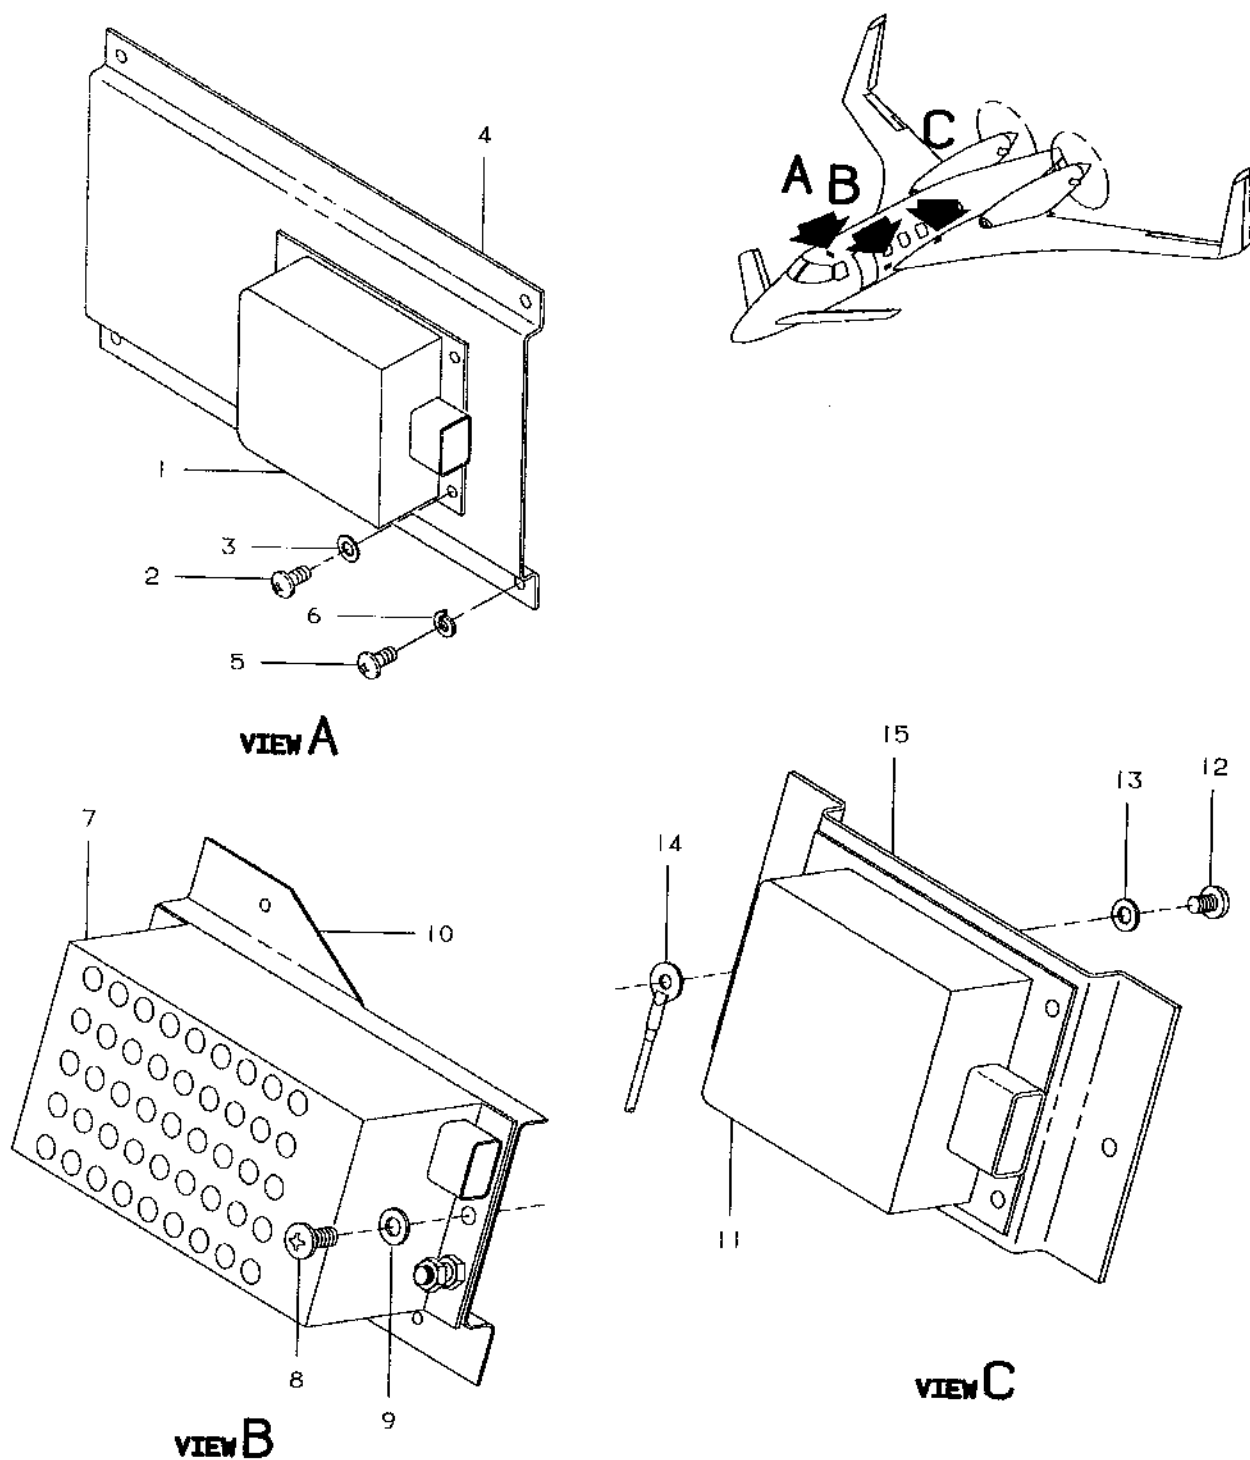


C93NC33A4648 C

FIGURE 20-35. CABIN LIGHTING POWER SUPPLIES
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-35	122-364066-1	CABIN FLUORESCENT LIGHT INSTL.....	NP	1
- 1	18-944	. INVERTER, RH/FS 159.691/ORDER 18-944-2 FOR.....	NP	2
		SPARES/.....		
	18-944-2	. INVERTER, RH/FS 159.691/.....	1	3
		/ATTACHING PARTS/.....		
- 2	MS35206-244	. SCREW.....	3	
- 3	AN960-8L	. WASHER.....	3	
		★.....		
- 4	122-364217-9	. BRACKET ASSY, RH.....	1	1
		/ATTACHING PARTS/.....		
- 5	MS35206-244	. SCREW.....	4	
- 6	MS35335-59	. WASHER.....	4	
		★.....		
- 7	18-1024-2	. INVERTER, LH AND RH.....	2	1
		/ATTACHING PARTS/.....		
- 8	MS35206-244	. SCREW.....	2	
- 9	AN960-8L	. WASHER.....	2	
		★.....		
- 10	122-364217-1	. BRACKET ASSY, LH.....	1	1
	122-364217-2	. BRACKET ASSY, RH.....	1	1
- 11	18-944	. INVERTER/4 LH AND 4 RH/ORDER 18-944-2 FOR.....	NP	2
		SPARES/.....		
	18-944-2	. INVERTER/4 LH AND 4 RH/.....	8	3
		/ATTACHING PARTS/.....		
- 12	MS35206-244	. SCREW.....	3	
- 13	AN960-8L	. WASHER.....	3	
		★.....		
- 14	51861-1	. TERMINAL.....	1	1
- 15	122-364066-3	. BRACKET ASSY/4 LH AND 4 RH/.....	8	1
	MS21075L08	. NUTPLATE.....	3	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

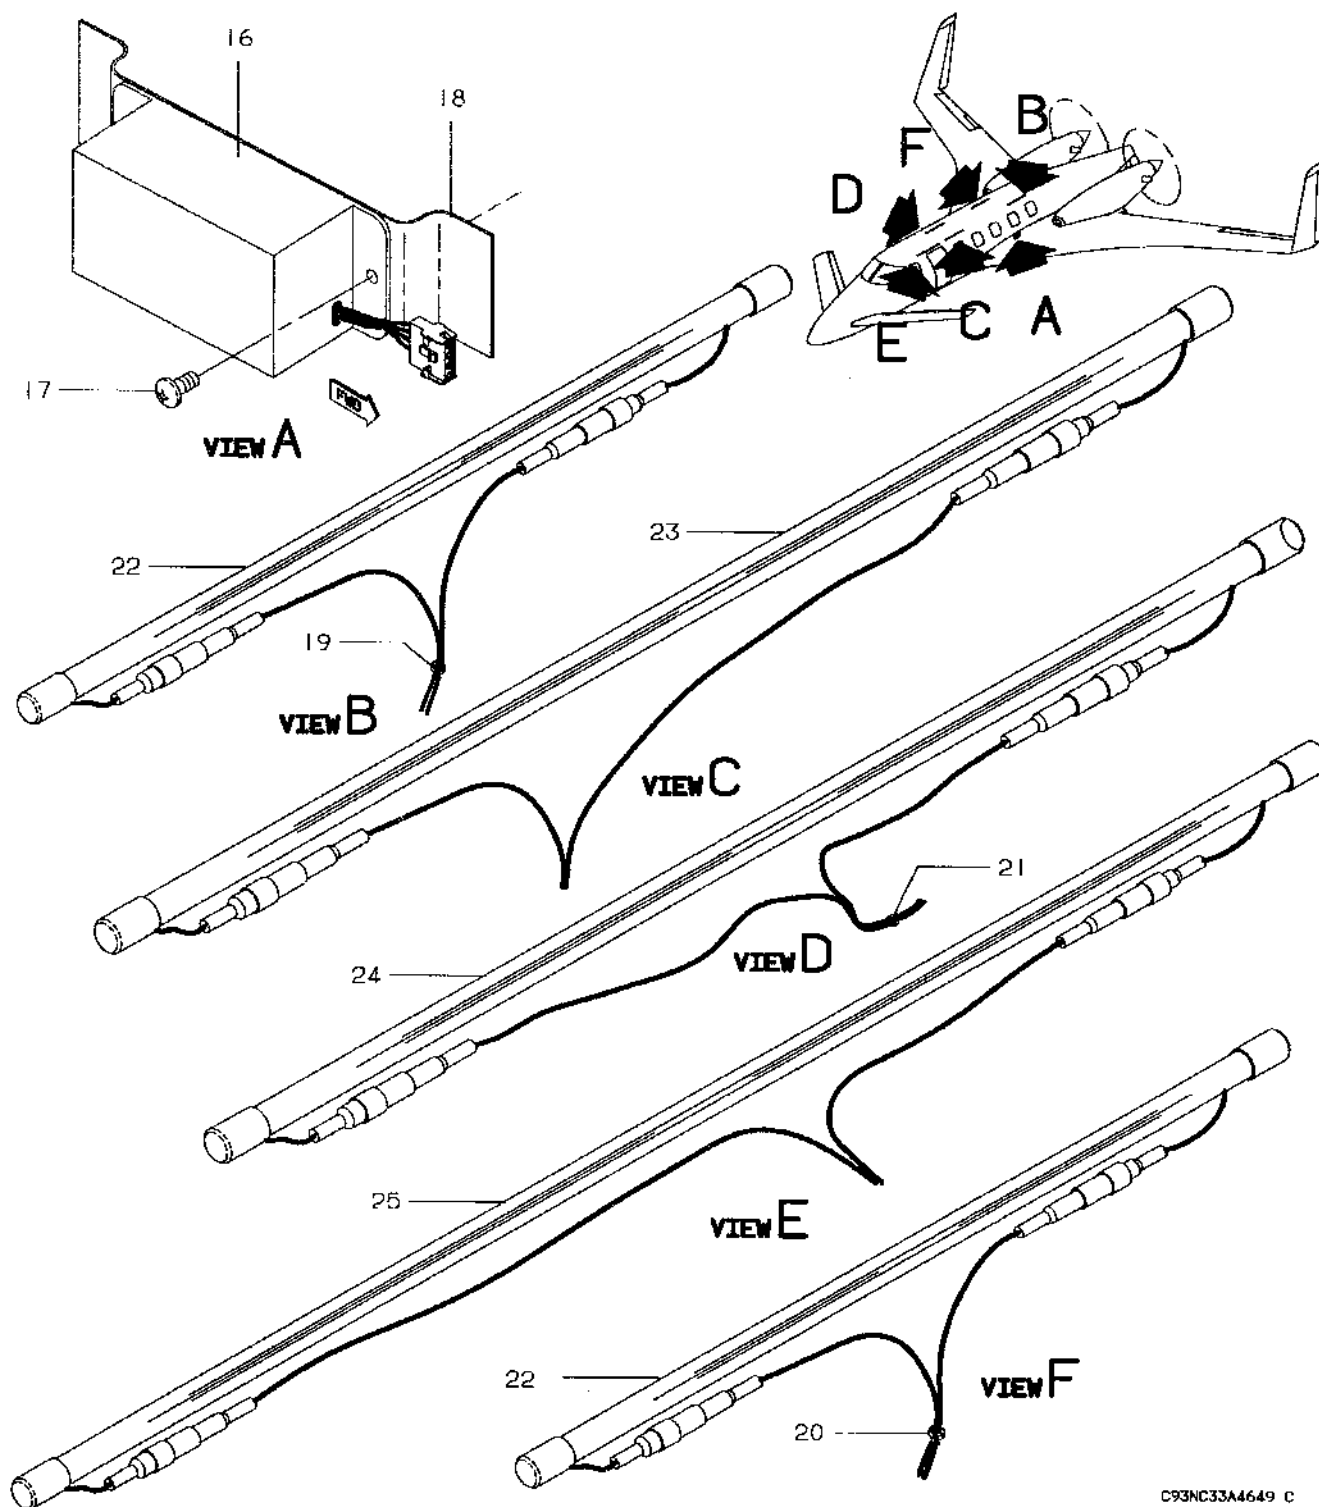

C93NC33A4649 C

FIGURE 20-35. CABIN LIGHTING POWER SUPPLIES
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-35 - 16	TR992-12	. POWER UNIT/3 LH AND 3 RH/ /ATTACHING PARTS/.....	6	1
- 17	MS35206-244	. SCREW..... -----★-----	2	
- 18	122-364217-5	. BRACKET ASSY/3 LH AND 3 RH/	8	1
- 19	PLT2I	. STRAP, TIE	AR	1
- 20	ABMS-A-D	. MOUNT	AR	1
- 21	ABMM-A-D	. MOUNT	AR	1
- 22	6335-430	. LAMP/6 LH AND 6 RH/	12	1
- 23	6635-510	. LAMP, LH	1	1
- 24	6335-560	. LAMP, RH.....	1	1
- 25	6335-750	. LAMP, RH.....	1	1
	132268-5W	. GROMMET, RH FWD TOILET	2	1
	132268-10WS	. GROMMET/7 LH AND 7 RH/	14	1


CODES OF EFFECTIVITY

1	NC-21 AND AFTER	2	NC-21 THRU NC-44
3	NC-45 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-30-00
AFT BAGGAGE COMPARTMENT LIGHTS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

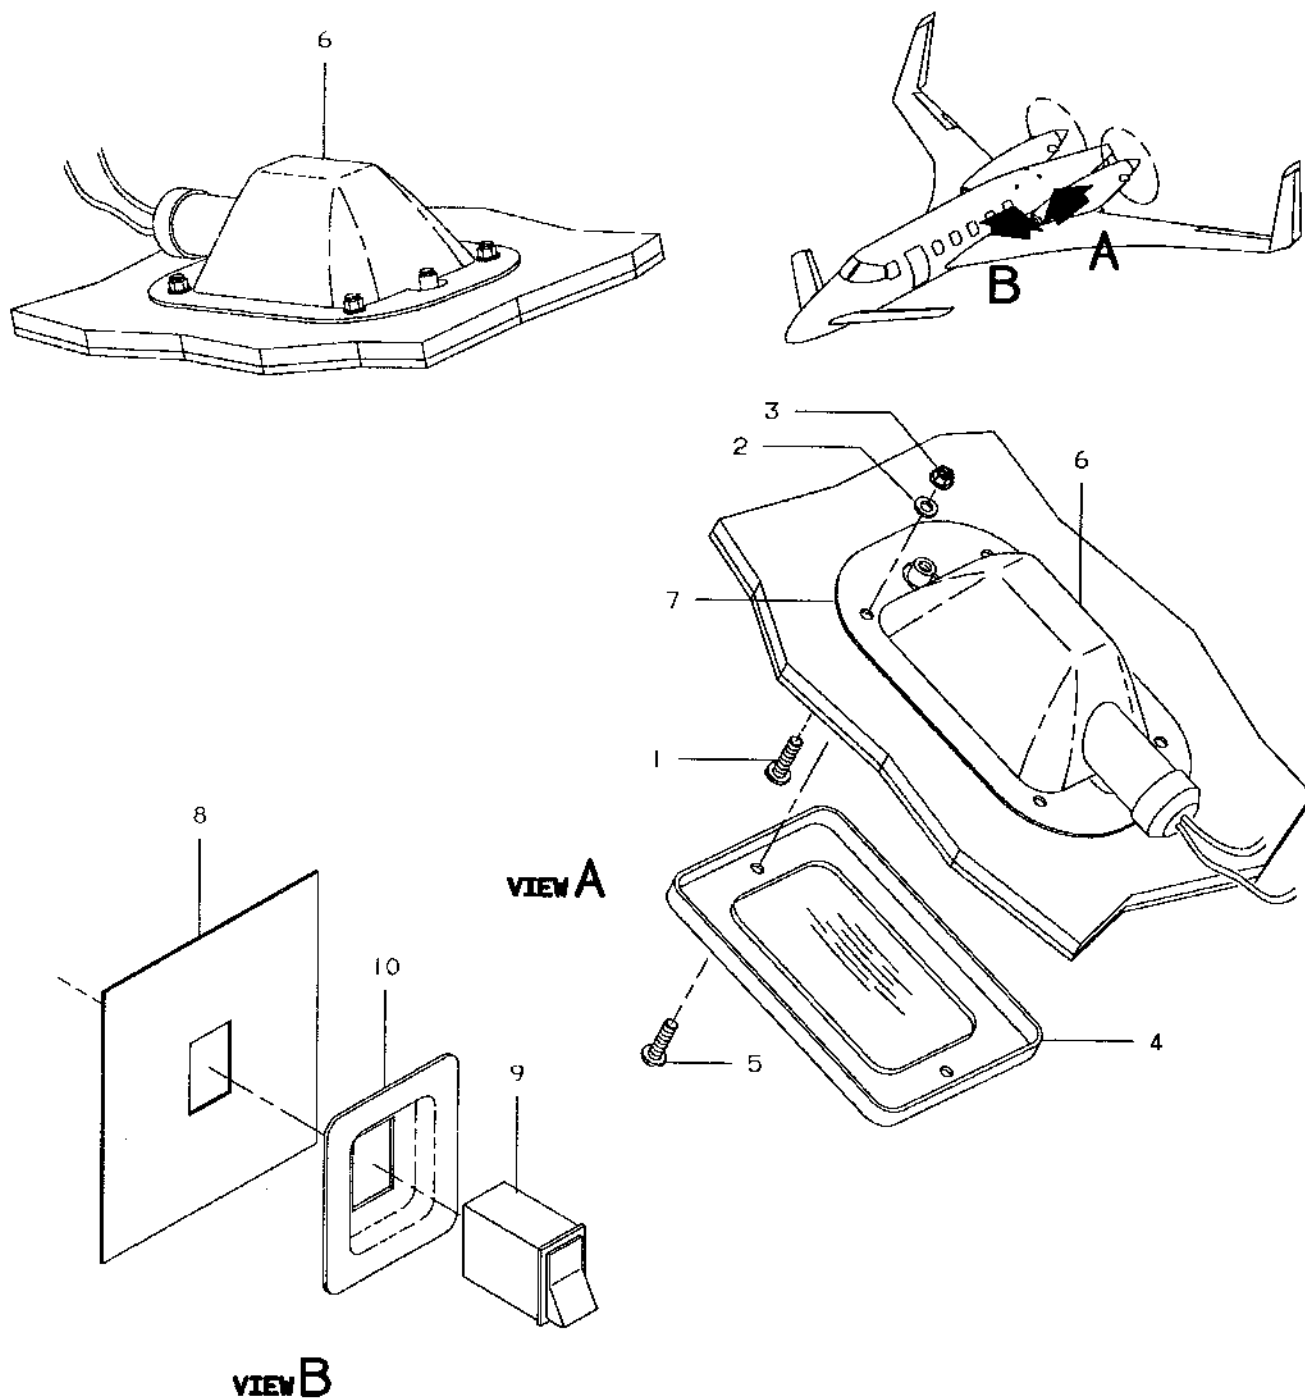

C94NC33A0038 C

FIGURE 30-00.AFT BAGGAGE COMPARTMENT LIGHTS

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00	122-530250-1	LIGHT INSTL, AFT BAGGAGE COMPARTMENT	NP	
	122-530250-5	. LIGHT ASSY, AFT BAGGAGE COMPARTMENT	2	
		/ATTACHING PARTS/		
- 1	MS35206-218	. SCREW.....	4	
- 2	AN960-4L	. WASHER	4	
- 3	MS21042L04	. NUT	4	
		-----★-----		
- 4	11-2764-1	. . LENS ASSY	1	
		/ATTACHING PARTS/		
- 5	NAS387-632-12P	. . SCREW	2	
		-----★-----		
- 6	A3552-1	. . REFLECTOR AND LAMPHOLDER ASSY	2	
	A3657A	. . GASKET	2	
	MS15570-303	. . LAMP	2	
- 7	122-530250-3	. PLATE	2	
	122-530327-1	. SWITCH INSTL, AFT BAGGAGE COMPARTMENT	NP	
- 8	122-530327-5	. . DOUBLER	1	
	85	. . LAMP	1	
	AML54F10W	. . ROCKER.....	1	
- 9	AML24FBA2CA01	. . SWITCH.....	1	
- 10	122-530327-3	. . ESCUTCHEON	1	

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-40-00
NOSE LANDING AND TAXI LIGHTS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

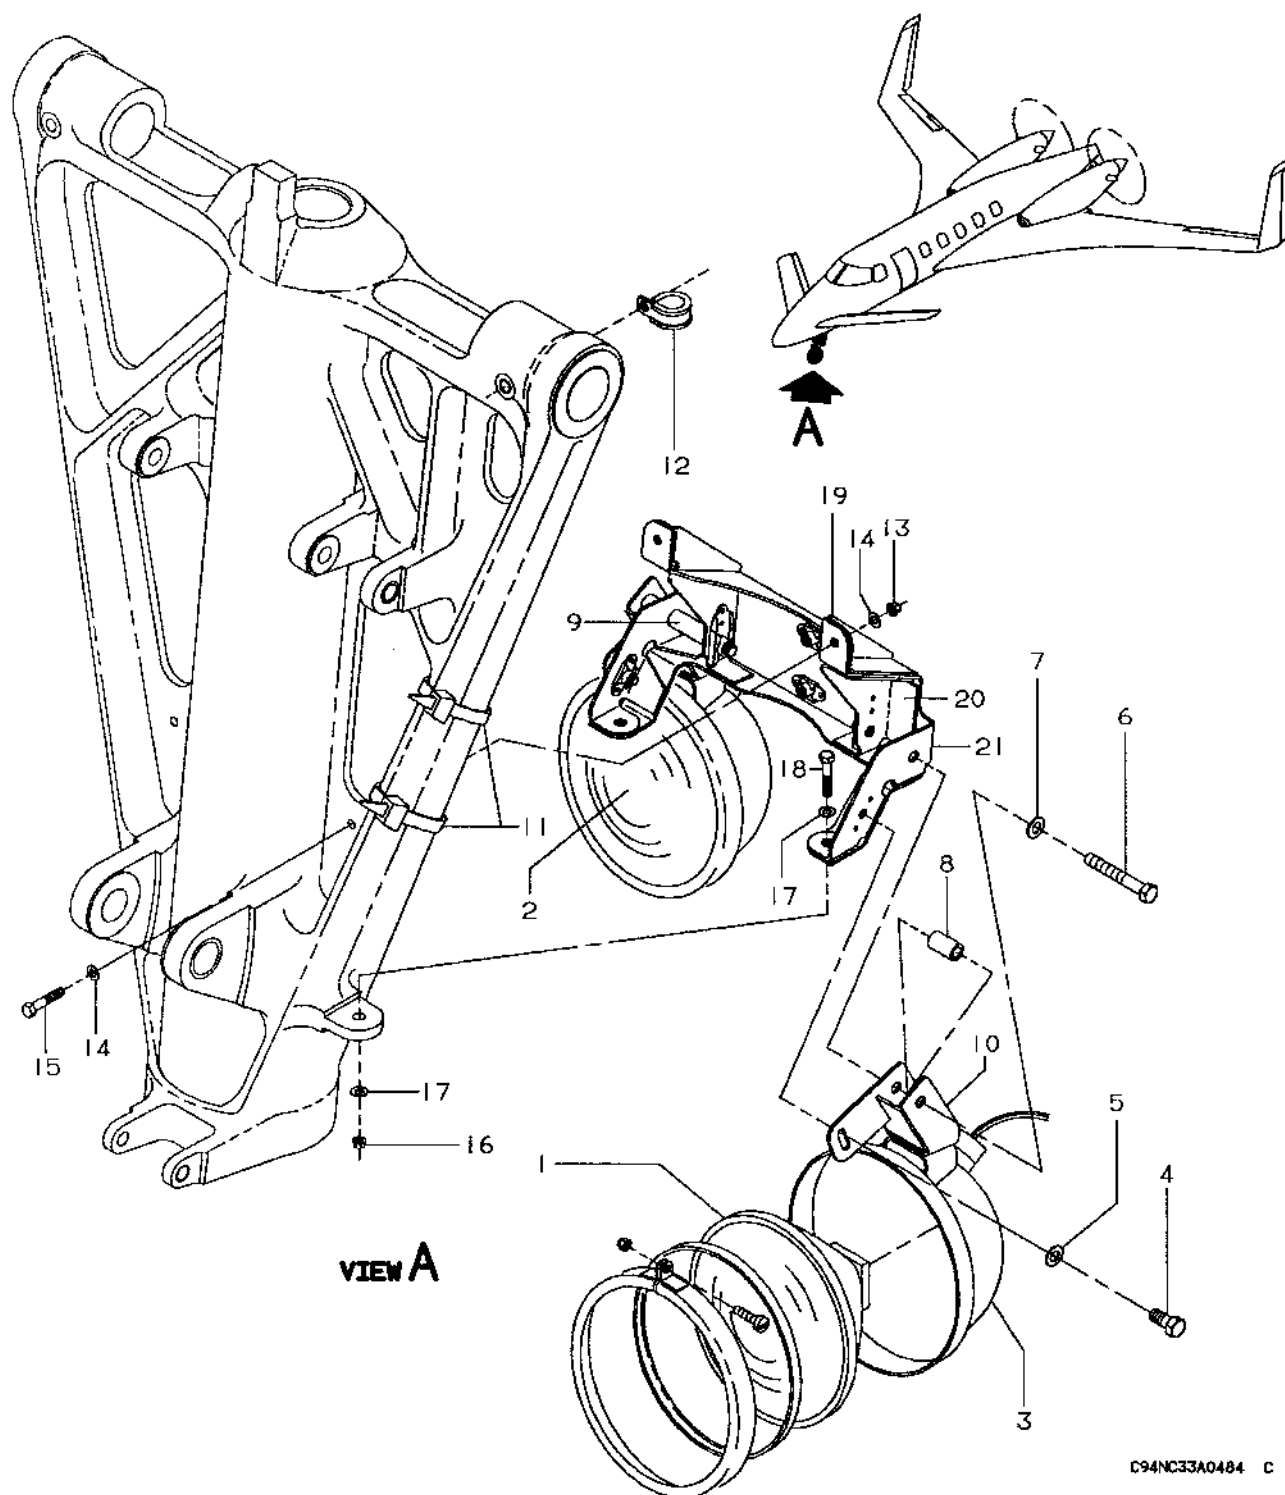


FIGURE 40-00.NOSE LANDING AND TAXI LIGHTS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00	122-364207-1	TAXI & LANDING LIGHT INSTL, NOSE.....	NP	
- 1	4596	. LAMP, LANDING LIGHT	1	
- 2	4587	. LAMP, TAXI LIGHT	1	
- 3	90-384040-1	. HOUSING ASSY, LANDING & TAXI LIGHT	2	
		. /ATTACHING PARTS/		
- 4	130909B14	. BOLT	2	
- 5	AN960C10	. WASHER	2	
- 6	AN4-24A	. BOLT	2	
- 7	AN960C416	. WASHER	2	
- 8	NAS43HT4-42	. SPACER	2	
- 9	NAS43HT4-78	. SPACER	2	
		---★---		
- 10	122-364206-15	. BRACKET ASSY, LANDING LIGHT	1	
	122-364206-16	. BRACKET ASSY, TAXI LIGHT	1	
- 11	PLT21	. CABLE TIE	3	
- 12	MS21919WDG4	. CLAMP, CABLE SECURING	1	
	2174	. BRAIDED SHIELD	AR	
	32545	. TERMINAL END	2	
	122-364206-1	. BRACKET ASSY	1	
		. /ATTACHING PARTS/		
- 13	MS21043-3	. NUT	2	
- 14	AN960C10	. WASHER	4	
- 15	130909B14	. BOLT	2	
- 16	MS21043-4	. NUT	2	
- 17	AN960C416	. WASHER	4	
- 18	130909B36	. BOLT	2	
		---★---		
	MS21059L3	. NUTPLATE	4	
	MS21062L4	. NUTPLATE	2	
- 19	122-364206-5	. SUPPORT, LH	1	
	122-364206-6	. SUPPORT, RH	1	
- 20	122-364206-7	. SUPPORT, LH	1	
	122-364206-8	. SUPPORT, RH	1	
- 21	122-364206-3	. BRACKET	1	

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-40-10
WING LANDING LIGHT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

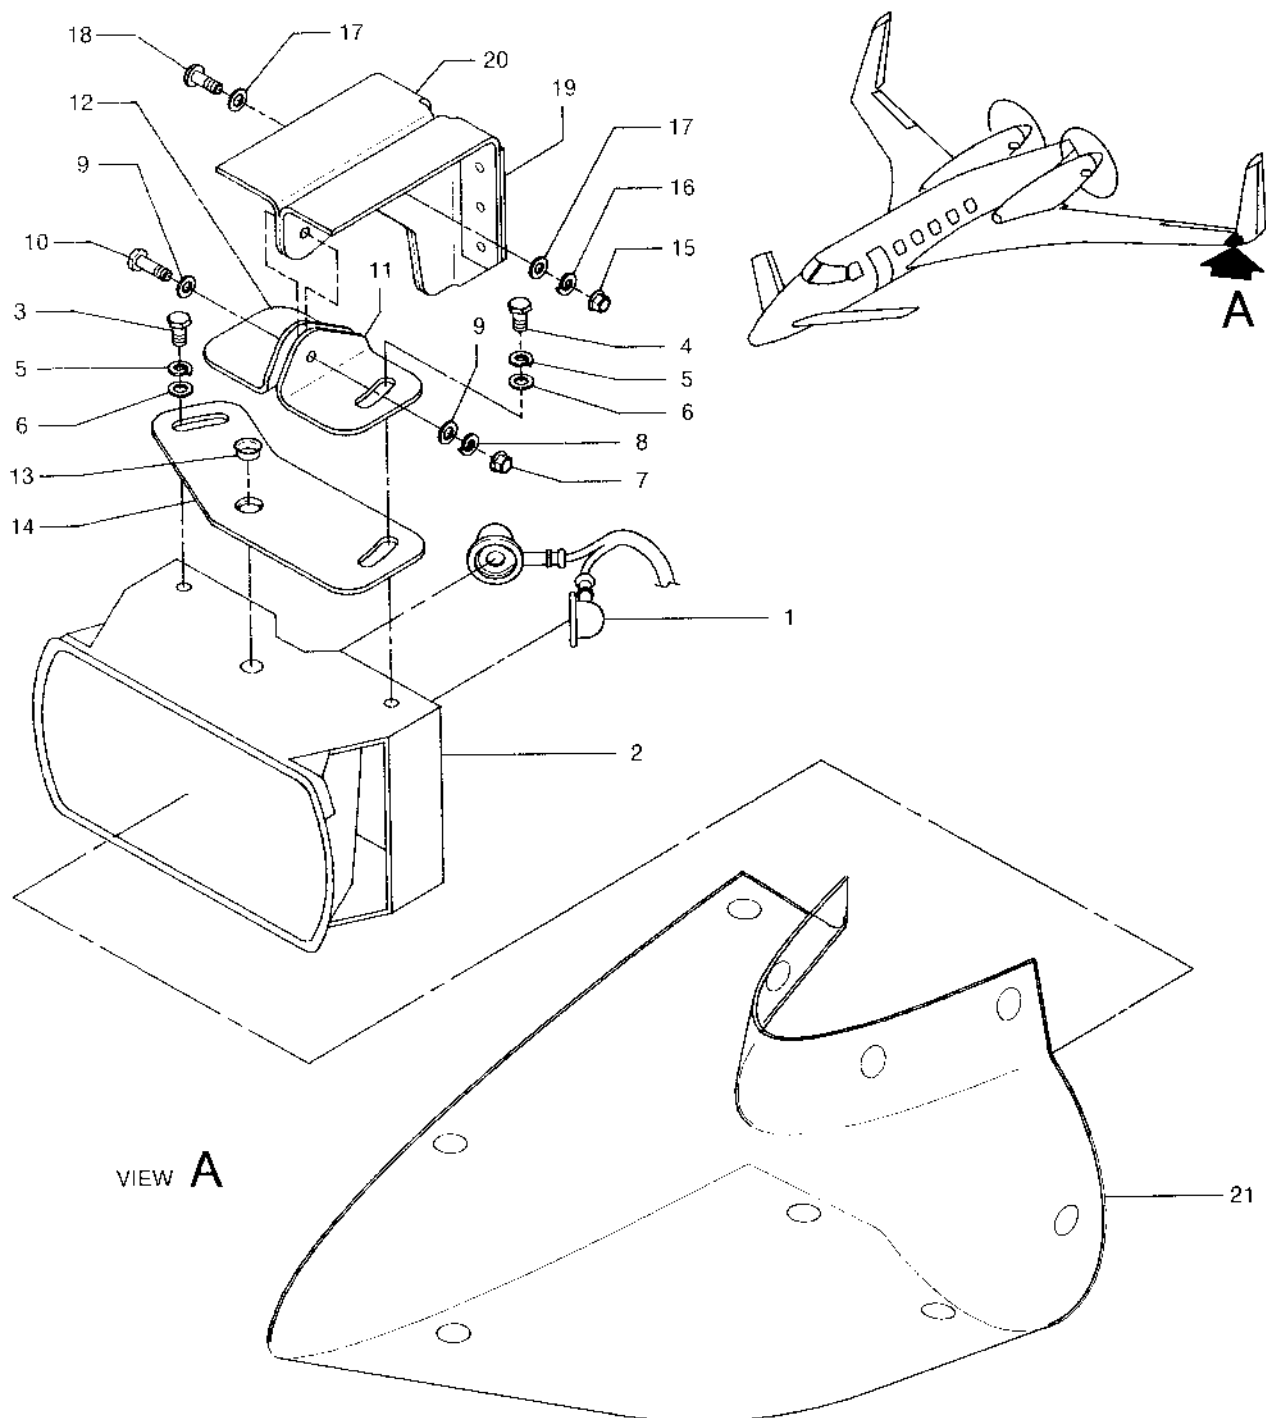

2000-360 02

FIGURE 40-10. WING LANDING LIGHT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-10	122-364210-1	LIGHT INSTL, LH WING LANDING	NP	
	122-364210-2	LIGHT INSTL, RH WING LANDING	NP	
- 1	MS25171-15	. NIPPLE	2	
- 2	122-364211-1	. LIGHT ASSY, LH WING LANDING	1	
		. /ATTACHING PARTS/		
- 3	130909B14	. BOLT	1	
- 4	130909B15	. BOLT	1	
- 5	MS35338-43	. WASHER, LOCK	2	
- 6	AN960-10L	. WASHER	2	
- 7	MS21043-3	. NUT	1	
- 8	MS35338-43	. WASHER, LOCK	1	
- 9	AN960-10L	. WASHER	2	
- 10	130909B17	. BOLT	1	
		★		
	4182271	. . BULB, LANDING LIGHT	1	
	122-364210-5	. SUPPORT ASSY, LH	1	
	122-364210-6	. SUPPORT ASSY, RH	1	
- 11	122-364210-13	. . SUPPORT, LH	1	
	122-364210-14	. . SUPPORT, RH	1	
- 12	122-364210-15	. . SUPPORT, LH	1	
	122-364210-16	. . SUPPORT, RH	1	
- 13	122-364210-7	. . PIN	1	
- 14	122-364210-17	. . BASE, LH	1	
	122-364210-18	. . BASE, RH	1	
- 15	MS21043-08	. NUT	1	
- 16	MS35338-42	. WASHER, LOCK	1	
- 17	AN960-8L	. WASHER	2	
- 18	MS27039-0808	. SCREW, GROUND	1	
	122-364210-3	. SUPPORT ASSY, LH	1	
	122-364210-4	. SUPPORT ASSY, RH	1	
- 19	122-364210-11	. . SUPPORT, LH	1	
	122-364210-12	. . SUPPORT, RH	1	
- 20	122-364210-9	. . SUPPORT, LH	1	
	122-364210-10	. . SUPPORT, RH	1	
- 21	R 122-640045-3	LENS, LH TIPSAIL LANDING LIGHT/SEE CH. 55/	1	1
	R 122-640045-5	LENS, LH TIPSAIL LANDING LIGHT/SEE CH. 55/	1	2
	R 122-640045-9	LENS, LH TIPSAIL LANDING LIGHT	NP	3
		. /ORDER 122-640045-11 FOR SPARES/SEE CH. 55/		
	R 122-640045-11	LENS, LH TIPSAIL LANDING LIGHT/SEE CH. 55/	1	4
	R 122-640045-4	LENS, RH TIPSAIL LANDING LIGHT/SEE CH. 55/	1	1
	R 122-640045-6	LENS, RH TIPSAIL LANDING LIGHT/SEE CH. 55/	1	2
	R 122-640045-10	LENS, RH TIPSAIL LANDING LIGHT	NP	3
		. /ORDER 122-640045-12 FOR SPARES/SEE CH. 55/		
	R 122-640045-12	LENS, RH TIPSAIL LANDING LIGHT/SEE CH. 55/	1	4


CODES OF EFFECTIVITY

1	NC-4 THRU NC-12	2	NC-13 THRU NC-18
3	NC-19 THRU NC-21	4	NC-22 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-40-20
WING INSPECTION LIGHT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

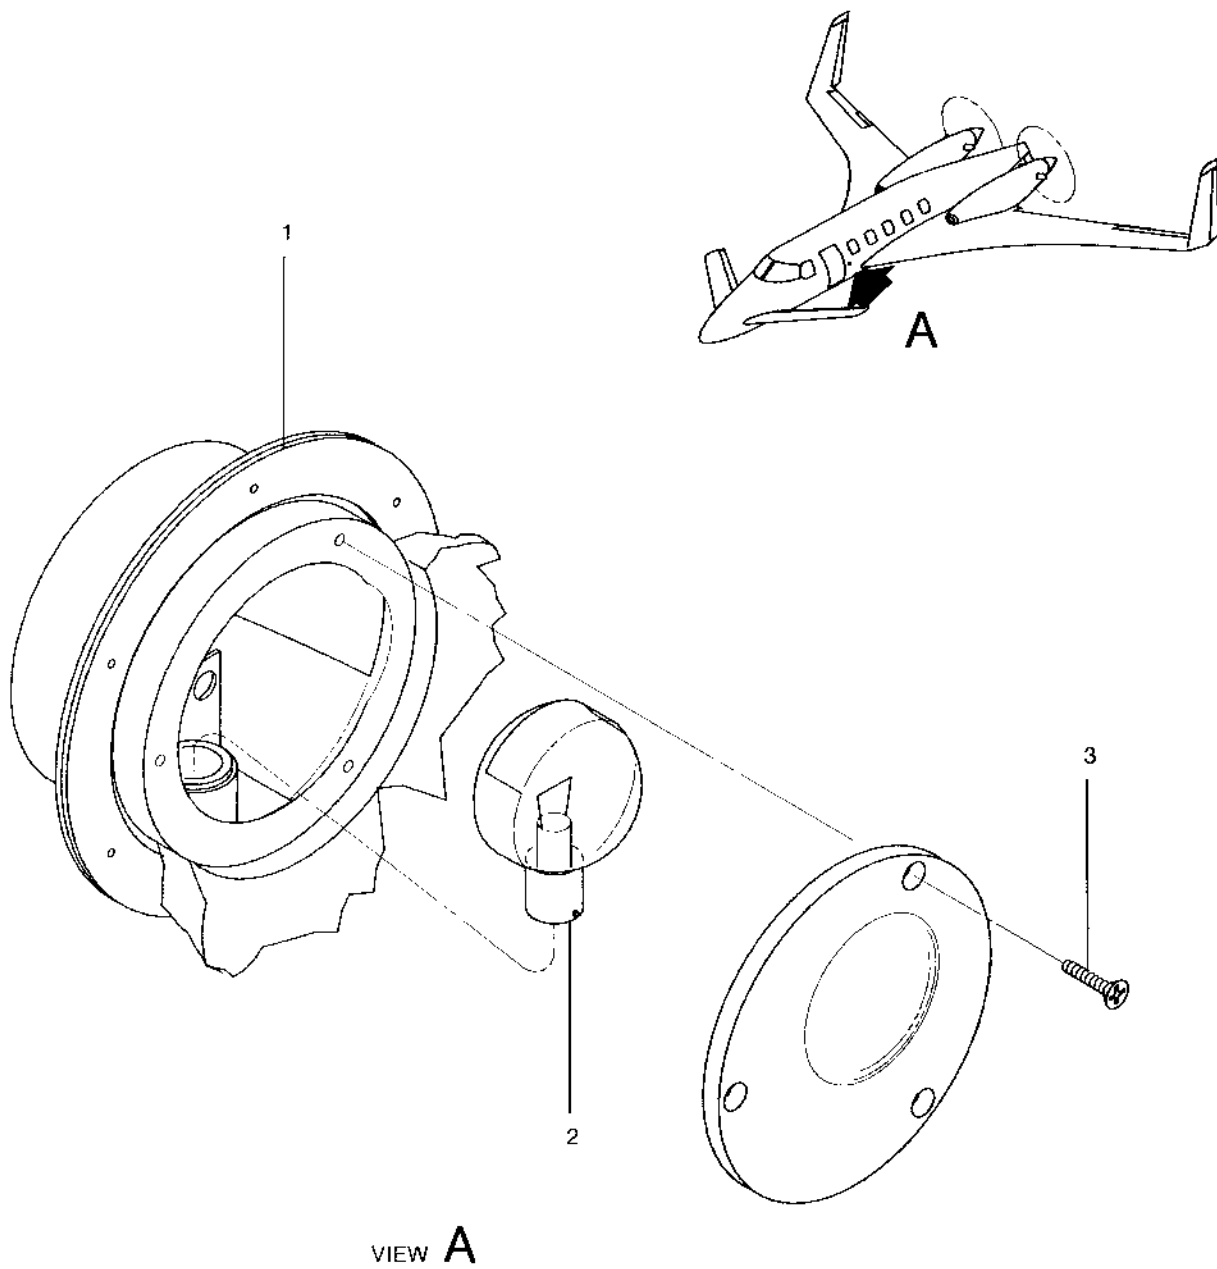

2000-367 03

FIGURE 40-20.WING INSPECTION LIGHT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-20	122-364020-1	LIGHT INSTL, LH WING INSPECTION/WITH ENTRANCE..... LIGHT REFLECTOR/	NP	
	122-364020-5	LIGHT INSTL, RH WING INSPECTION/OPTIONAL/.....	NP	
- 1	122-364189-1	. SPACER	AR	
	MS3416-10EN	. BACKSHELL	2	
	MS35842-11	. CLAMP	2	
	122-384078-1	. LIGHT, LH FLOOD/WITH ENTRANCE LIGHT	1	
		REFLECTOR/		
	122-384078-2	. LIGHT, RH FLOOD/OPTIONAL/	1	
- 2	BR7207-701	.. LIGHT, FLOOD	1	
- 3	8-32	... SCREW	3	
	MS25338-7079	... LAMP	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

33-40-50
ANTI-COLLISION LIGHTS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

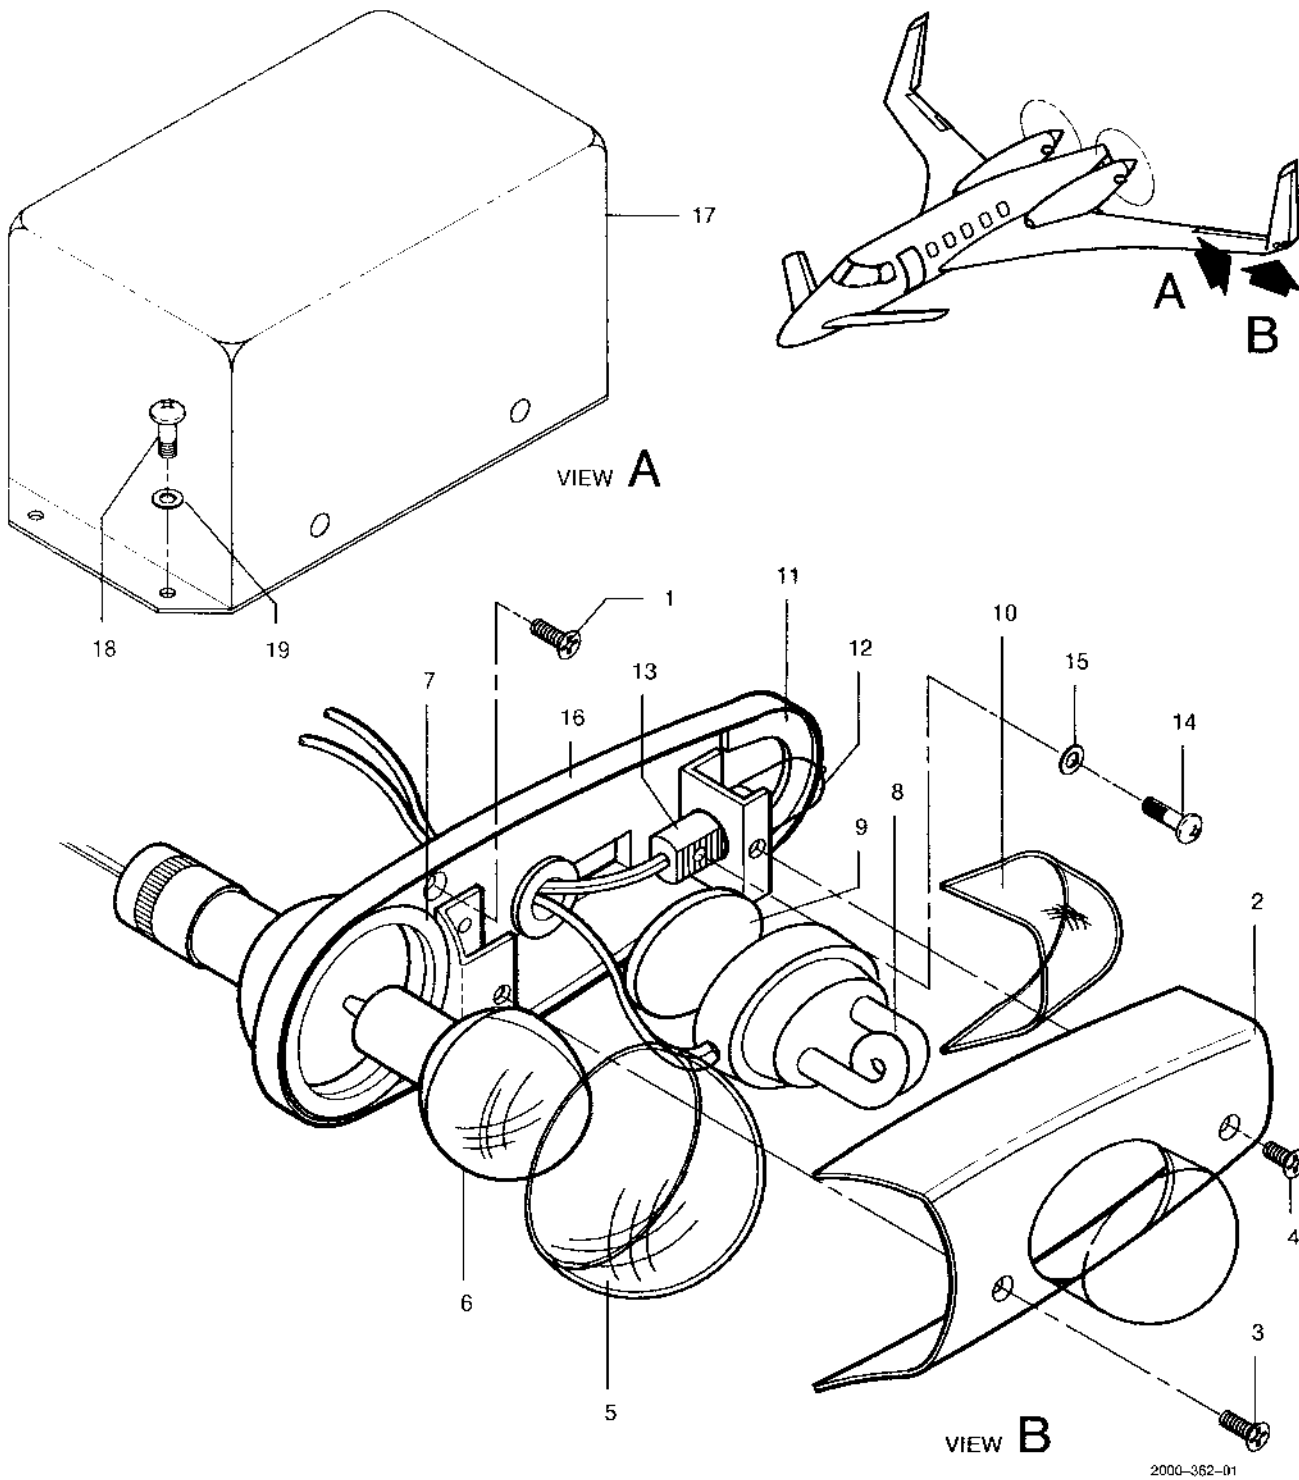



FIGURE 40-50.ANTI-COLLISION LIGHTS
/SHEET 1 OF 2 SHEETS/

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
40-50	122-364179-1		LIGHT INSTL, LH WING ANTI-COLLISION	NP	
	122-364179-2		LIGHT INSTL, RH WING ANTI-COLLISION	NP	
	A600PR-D28		. LIGHT ASSY, LH WING ANTI-COLLISION	1	
	A600PG-D28		. LIGHT ASSY, RH WING ANTI-COLLISION	1	
			(ATTACHING PARTS)		
1	MS24693-28		. SCREW	3	
			-----★-----		
2	A612D		. . RETAINER, LENS	1	
			(ATTACHING PARTS)		
3	14-062116-060		. . SCREW	1	
4	14-062116-040		. . SCREW	1	
			-----★-----		
5	W1284G		. . DOME, LH GREEN GLASS	1	
	W1284R		. . DOME, RH RED GLASS	1	
6	W1290-28		. . BULB, 28 VOLT	1	
7	W1283		. . GASKET	1	
8	A610		. . TUBE ASSY, FLASH	1	
9	A427-4		. . GASKET	1	
10	A-615 LENS		. . DOME, CLEAR GLASS	1	
11	A-616 GASKET		. . GASKET, TAIL LIGHT	1	
12	A508-28		. . LAMP, TAIL LIGHT	1	
13	33-07250060-0		. . SOCKET	1	
			(ATTACHING PARTS)		
14	14-038002-80		. . SCREW	1	
15	16-0320710D2		. . WASHER	1	
			-----★-----		
16	02-0250069-00		. . BASE PLATE ASSY	1	
	207016-1		. HOUSING, CONTACT PIN	1	
	66400-4		. PIN, CONTACT	AR	
17	01-0770347-00		. POWER SUPPLY, WING STROBE LIGHT	1	
			(ATTACHING PARTS)		
18	MS35206-245		. SCREW	4	
19	AN960-8L		. WASHER	4	
			-----★-----		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

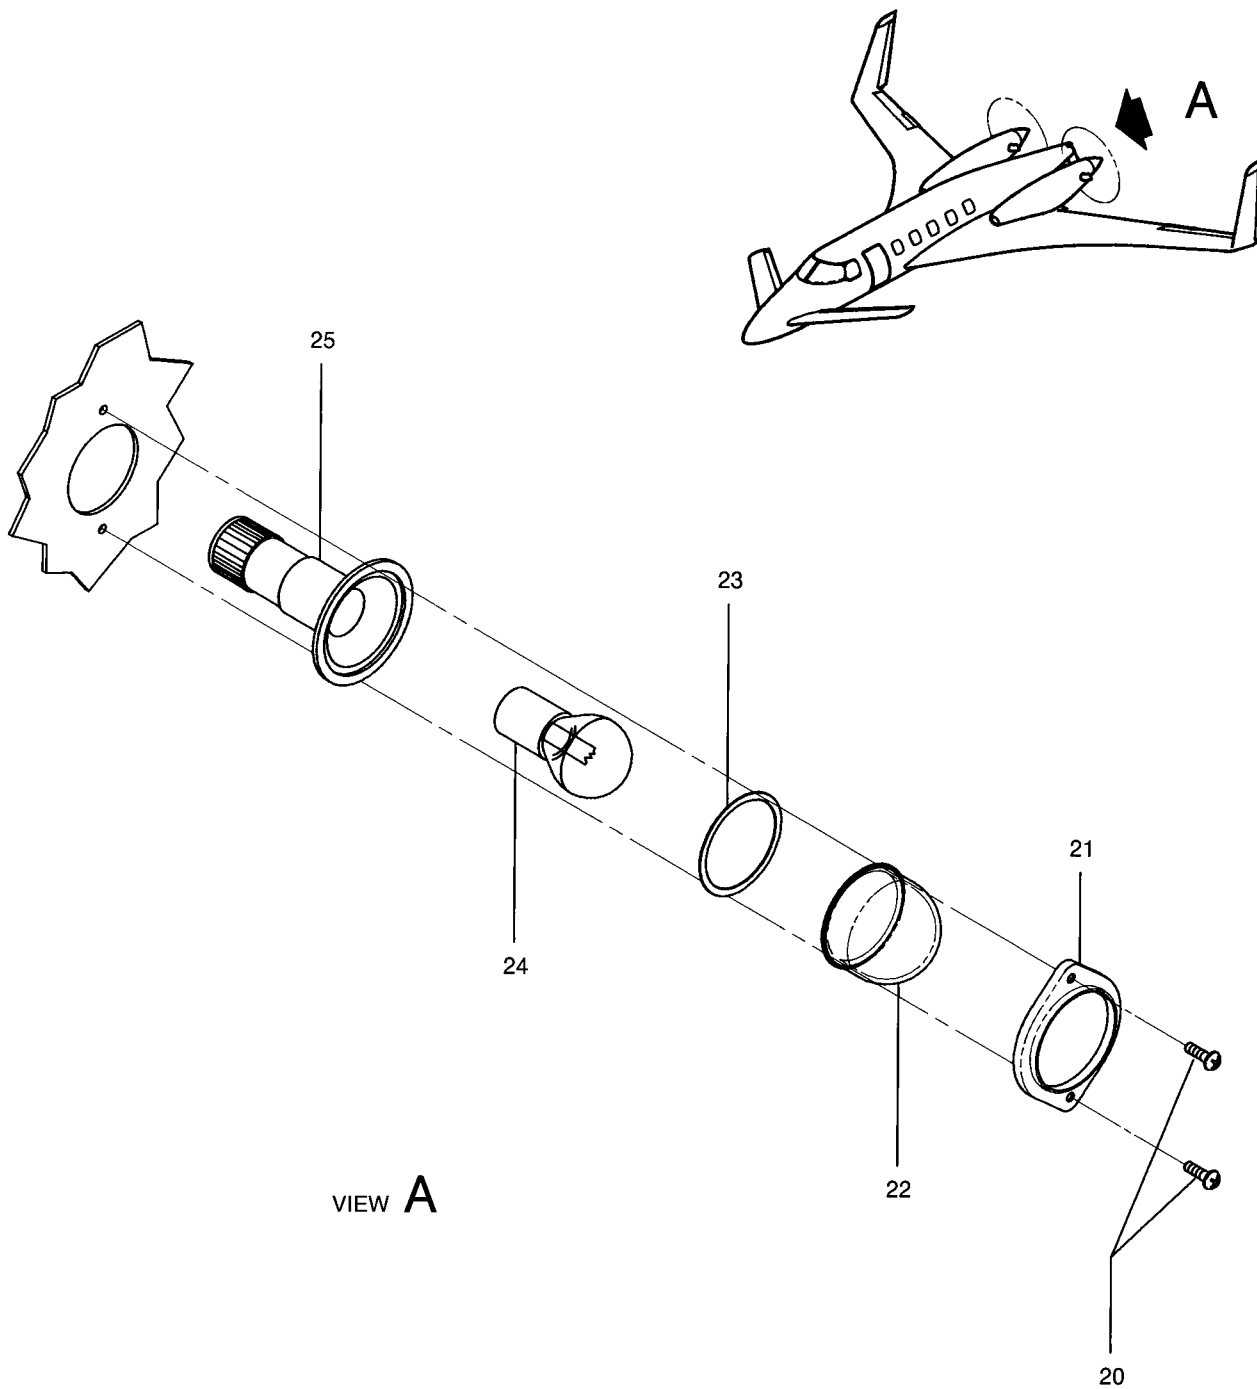

2000-362-02

FIGURE 40-50.ANTI-COLLISION LIGHTS
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-50	122-440011-47	TAIL CONE ASSY	1	
	101-360021-15	. LIGHT ASSY, TAIL NAV/COMPLETE WITH WIRING/	1	
	A2064-1683	. LIGHT ASSY, TAIL NAV/WITHOUT WIRING/	1	
		/ATTACHING PARTS/		
- 20	MS35206-218	. SCREW.....	2	
		---★---		
- 21	A2108	. . RETAINER, LENS	1	
- 22	A4513-1	. . LENS, CLEAR	1	
- 23	A2109-3	. . GASKET	1	
- 24	1683	. . BULB	1	
- 25	A3510	. . REFLECTOR AND SOCKET ASSY.....	1	

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 34-00-00 NAVIGATION, PITOT/STATIC

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
34-00-00	1	02/25/94	LIST OF PAGES & TABLE OF CONTENTS
34-00-00	2	02/25/94	
34-00-10	1	02/25/94	AVIONICS FEEDTHRU PLATE.....
34-00-10	2	02/25/94	
34-00-10	3	02/25/94	
34-10-00	1	02/25/94	PITOT AND STATIC PLUMBING
34-10-00	2	02/25/94	
34-10-00	3	02/25/94	
34-10-00	4	02/25/94	
34-10-00	5	02/25/94	
34-10-00	6	02/25/94	
34-10-00	7	02/25/94	
34-10-20	1	02/25/94	INSTRUMENT AIR PLUMBING.....
34-10-20	2	02/25/94	
34-10-20	3	02/25/94	
34-10-20	4	02/25/94	
34-10-20	5	02/25/94	
34-11-00	1	02/25/94	AIR DATA COMPUTER AND PLUMBING.....
34-11-00	2	02/25/94	
34-11-00	3	02/25/94	
34-20-00	1	02/25/94	MAGNETIC COMPASS
34-20-00	2	02/25/94	
34-20-00	3	02/25/94	
34-20-10	1	02/25/94	FLUX DETECTOR.....
34-20-10	2	02/25/94	
34-20-10	3	02/25/94	
34-20-20	1	02/25/94	ATTITUDE HEADING SYSTEM
34-20-20	2	02/25/94	
34-20-20	3	02/25/94	
34-20-20	4	02/25/94	
34-20-20	5	02/25/94	
34-30-00	1	02/25/94	GLIDESLOPE AND MARKER BEACON ANTENNAS
34-30-00	2	02/25/94	
34-30-00	3	02/25/94	
34-30-00	4	02/25/94	
34-30-00	5	02/25/94	
34-40-00	1	02/25/94	WEATHER RADAR TRANSCEIVER AND ANTENNA
34-40-00	2	02/25/94	
34-40-00	3	02/25/94	
34-50-00	1	02/25/94	NAVIGATION RECEIVER AND ANTENNA.....
34-50-00	2	02/25/94	
34-50-00	3	02/25/94	
34-50-10	1	02/25/94	VLF RECEIVER AND ANTENNA
34-50-10	2	02/25/94	
34-50-10	3	02/25/94	
34-50-20	1	02/25/94	ADF RECEIVER AND ANTENNA.....
34-50-20	2	02/25/94	
34-50-20	3	02/25/94	



Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 34-00-00 NAVIGATION, PITOT/STATIC

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
34-50-30	1	02/25/94	DME TRANSCEIVER AND ANTENNA
34-50-30	2	02/25/94	
34-50-30	3	02/25/94	
34-50-30	4	02/25/94	
34-50-30	5	02/25/94	
34-50-40	1	02/25/94	TRANSPONDER AND ANTENNA
34-50-40	2	02/25/94	
34-50-40	3	02/25/94	
34-50-50	1	02/25/94	RADIO ALTIMETER TRANSCEIVER AND ANTENNA
34-50-50	2	02/25/94	
34-50-50	3	02/25/94	
34-50-50	4	02/25/94	
34-50-50	5	02/25/94	
34-50-60	1	02/25/94	RADIO TUNING ADAPTER
34-50-60	2	02/25/94	NC-4 THRU NC-25
34-50-60	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-00-10
AVIONICS FEEDTHRU PLATE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

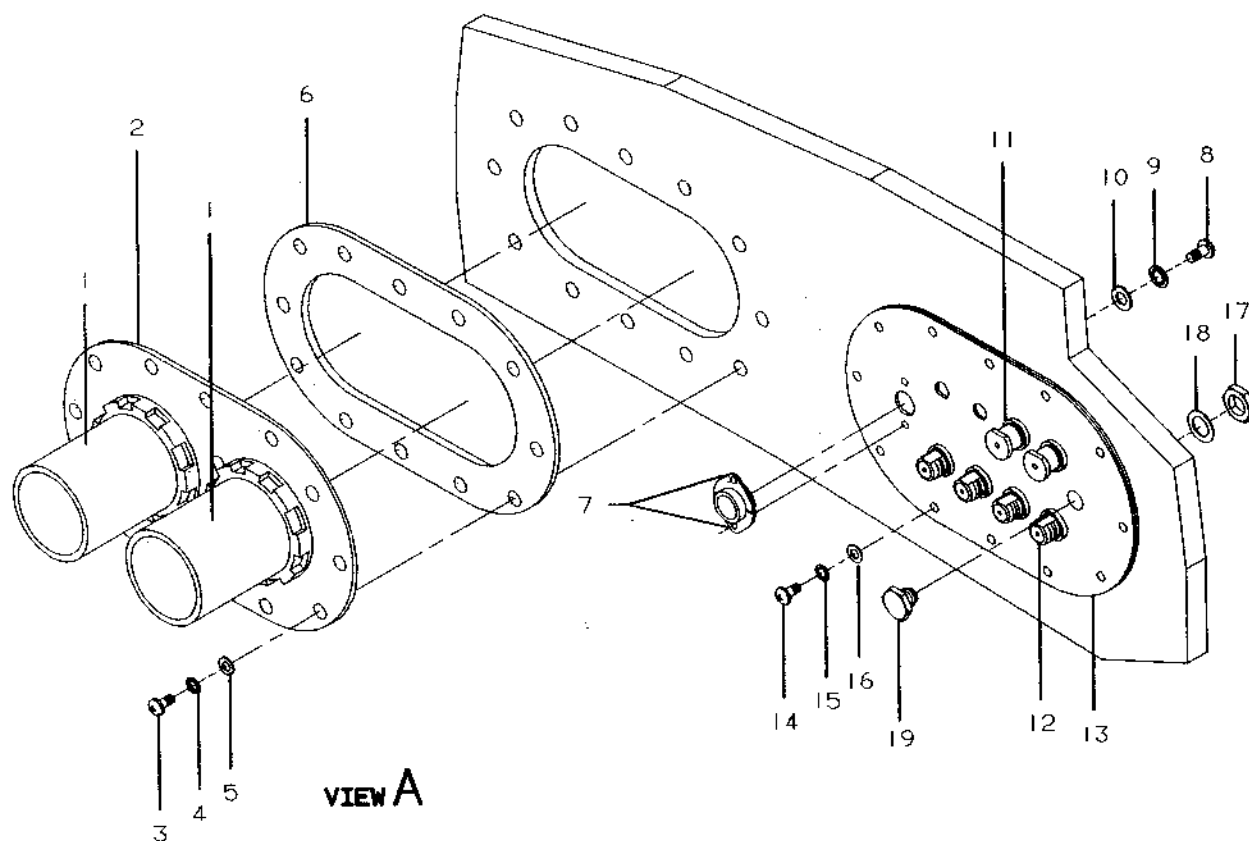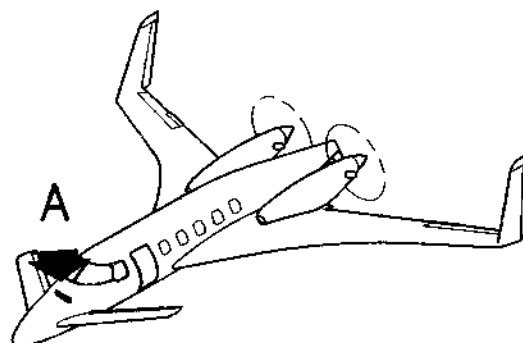

C93NC34A0459 C

FIGURE 00-10 AVIONICS FEEDTHRU PLATE

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-10	122-341045-1	PLATE INSTL, AVIONICS FEEDTHRU	NP	
- 1	207W256-3-01	. FEEDTHRU	2	
- 2	122-341044-3	. PLATE	1	
		/ATTACHING PARTS/		
- 3	MS35207-265	. SCREW	12	
- 4	MS35338-43	. WASHER, LOCK	12	
- 5	AN960-10L	. WASHER	12	
		---★---		
- 6	122-340135-9	. GASKET	1	
- 7	97-364064-7	. SEAL ASSY	2	
		/ATTACHING PARTS/		
- 8	MS35206-248	. SCREW	1	
- 9	MS35338-42	. WASHER, LOCK	1	
- 10	AN960-8L	. WASHER	1	
		---★---		
	NAS1329A08K75	. RIVNUT	1	
- 11	79100	. CONNECTOR, COAXIAL	2	
- 12	UG30/U	. CONNECTOR, COAXIAL	4	
- 13	122-341044-1	. PLATE	1	
		/ATTACHING PARTS/		
- 14	MS35207-265	. SCREW	12	
- 15	MS35338-43	. WASHER, LOCK	12	
- 16	AN960-10L	. WASHER	12	
		---★---		
- 17	AN924-12D	. NUT	1	1
- 18	AN960JD1716L	. WASHER	1	1
- 19	AN814-12D	. PLUG	1	1


CODES OF EFFECTIVITY

1 NC-33 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-10-00
PITOT AND STATIC PLUMBING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

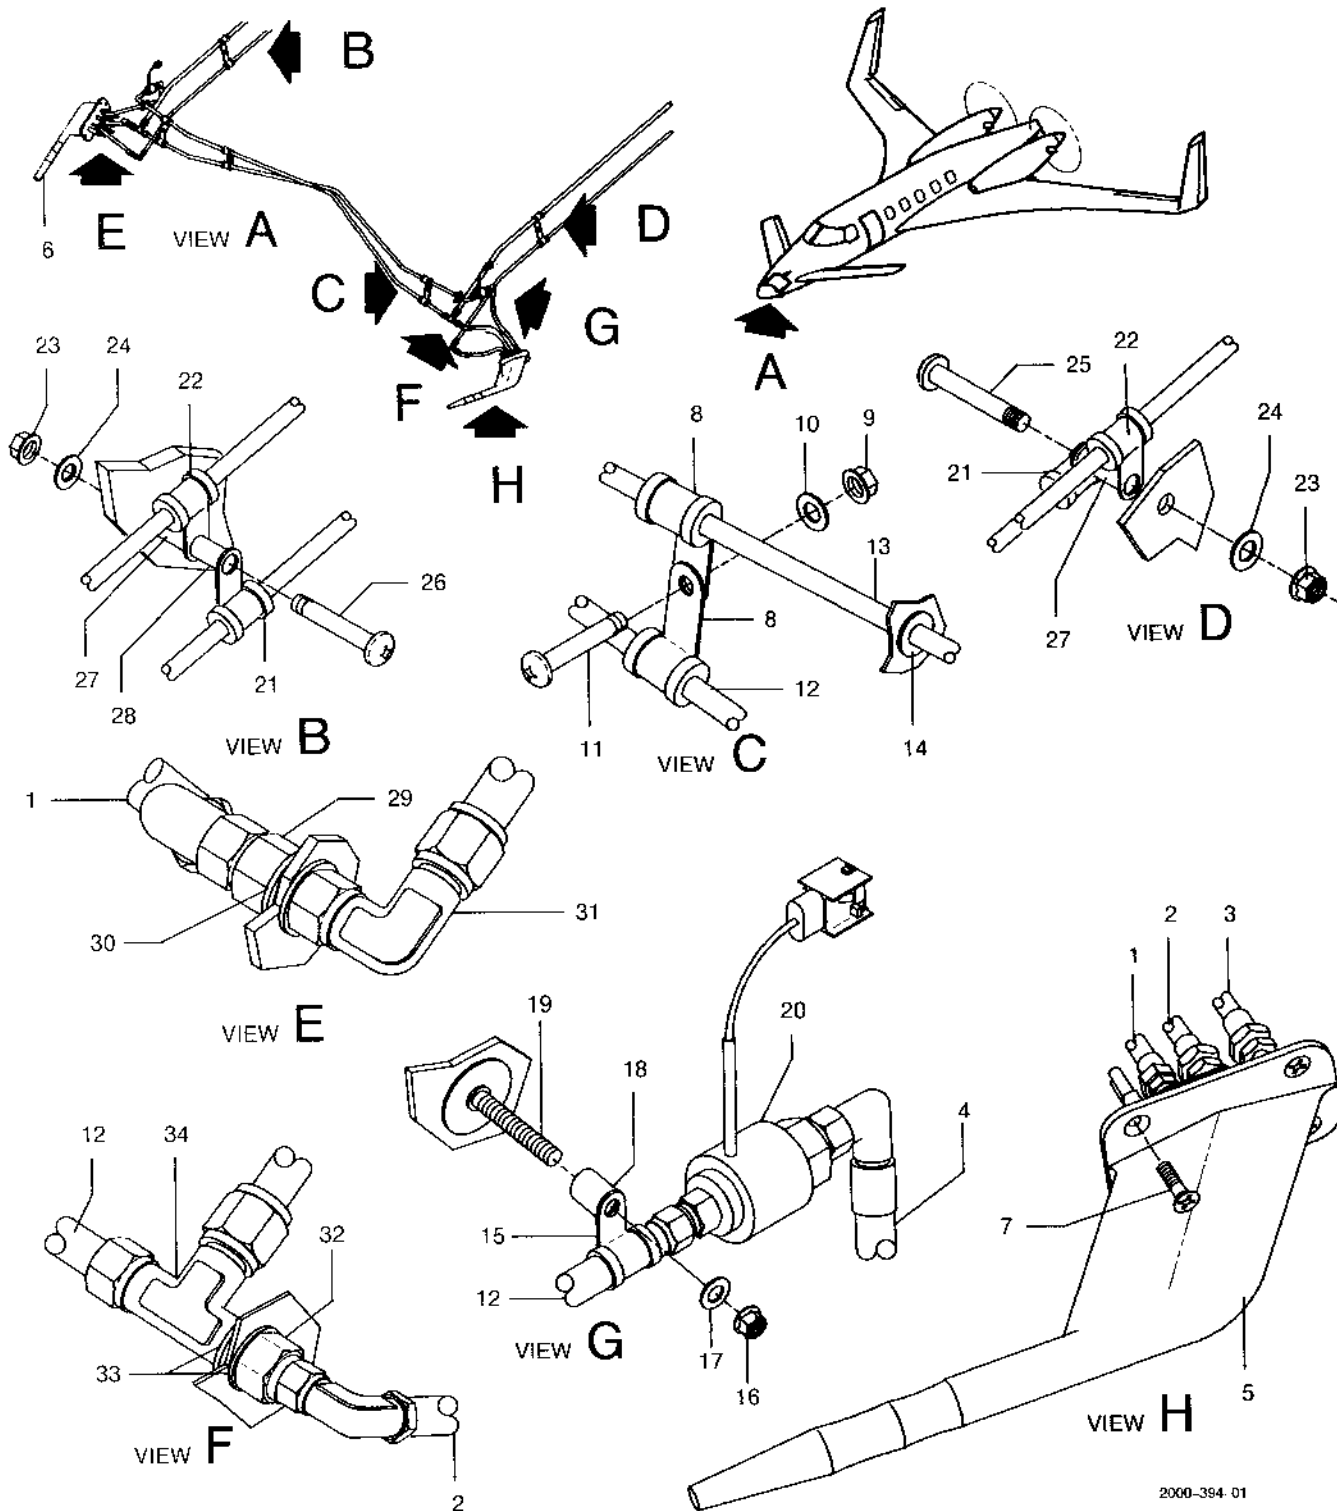

2000-394 01

FIGURE 10-00.PITOT AND STATIC PLUMBING
/SHEET 1 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-320000-3	PITOT AND STATIC INSTL.....	NP	
- 1	132001D4-065180	. HOSE ASSY, PITOT.....	2	
- 2	132001D6-077180	. HOSE ASSY, STATIC.....	2	
- 3	132001D6-074260	. HOSE ASSY, LH STATIC.....	1	
- 4	132001D6-074100	. HOSE ASSY, RH STATIC.....	1	
- 5	122-384001-3	. PROBE, LH PITOT AND STATIC PRESSURE.....	1	
- 6	122-384001-4	. PROBE, RH PITOT AND STATIC PRESSURE.....	1	
- 7	MS24694C53	. /ATTACHING PARTS/ . SCREW.....	4	
- 8	MS21919DG6	. CLAMP..... . /ATTACHING PARTS/	4	
- 9	130909N29	. NUT.....	1	
- 10	AN960-10L	. WASHER.....	1	
- 11	MS35207-264	. SCREW.....	1	
- 12	122-320020-1	. TUBE ASSY, STATIC.....	1	
- 13	122-320023-1	. TUBE ASSY, STATIC.....	1	
- 14	MS35489-16	. GROMMET.....	2	
- 15	MS21919DG6	. CLAMP..... . /ATTACHING PARTS/	2	
- 16	130909N31	. NUT.....	1	
- 17	AN960-10L	. WASHER.....	1	
- 18	NAS43DD3-60	. SPACER.....	1	
- 19	CB4000C3CR22	. STUD.....	1	
- 20	122-380046-1	. VALVE ASSY, STATIC SOLENOID.....	2	
- 21	MS21919DG6	. CLAMP.....	2	
- 22	MS21919DG4	. CLAMP..... . /ATTACHING PARTS/	2	
- 23	130909N29	. NUT.....	1	
- 24	AN960-10L	. WASHER.....	1	
- 25	MS27039-1-28	. SCREW.....	1	
- 26	MS27039-1-41	. SCREW.....	1	
- 27	NAS43DD3-32	. SPACER.....	1	
- 28	NAS43DD3-48	. SPACER.....	1	
- 29	AN924-4D	. NUT.....	2	
- 30	AN960D716L	. WASHER.....	2	
- 31	AN833-4D	. ELBOW, BULKHEAD.....	2	
- 32	AN924-6D	. NUT.....	2	
- 33	AN960D916L	. WASHER.....	6	
- 34	AN804-6D	. TEE, BULKHEAD.....	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


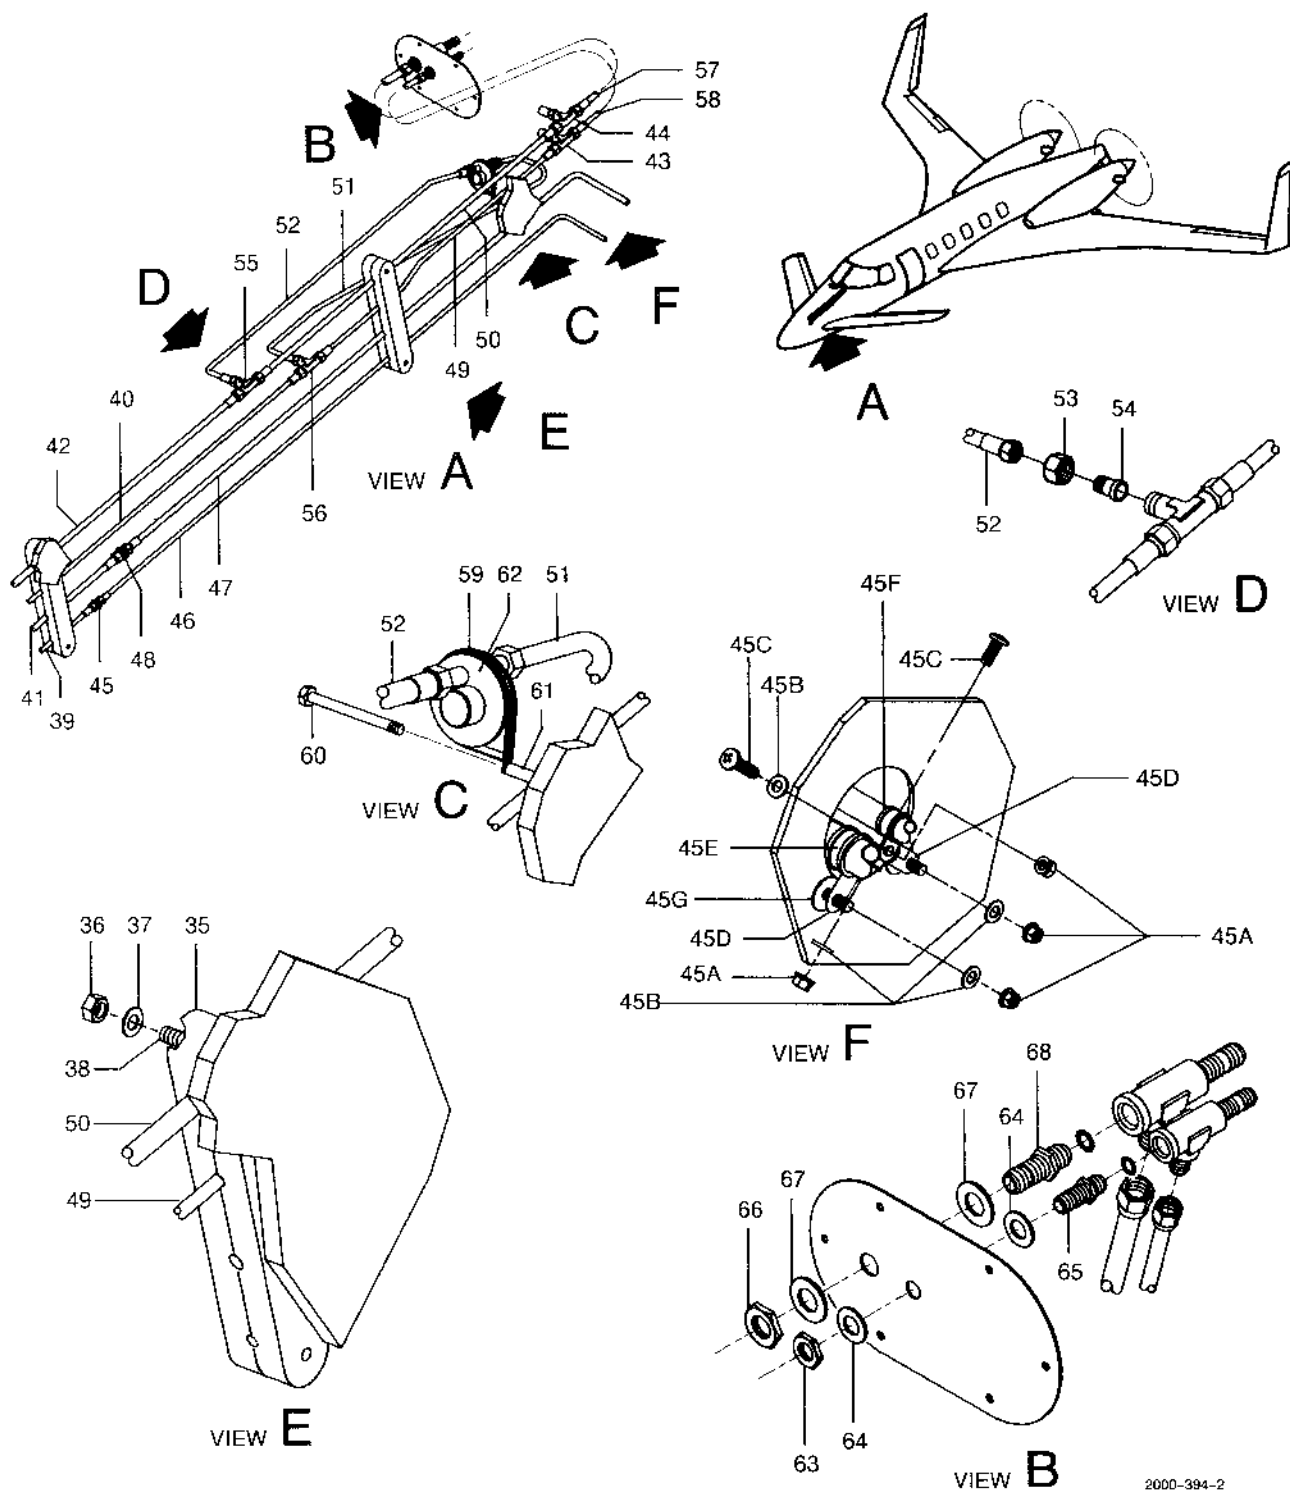


FIGURE 10-00.PITOT AND STATIC PLUMBING
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00 - 35	122-580036-17	. BLOCK	4	
		. /ATTACHING PARTS/		
- 36	130909N31	. NUT	2	
- 37	AN960-10L	. WASHER	2	
- 38	CB4000C3CR22	. STUD	2	
		-----★-----		
- 39	122-320022-1	. TUBE ASSY, LH PITOT	1	
- 40	122-320044-1	. TUBE ASSY, RH PITOT	1	
- 41	122-320027-1	. TUBE ASSY, LH STATIC	1	
- 42	122-320040-1	. TUBE ASSY, RH STATIC	1	
- 43	AN824-4D	. TEE, AIR DATA COMPUTER PITOT SOURCE	1	
	AN929-4	. CAP, TEE	1	
- 44	AN824-6D	. TEE, AIR DATA COMPUTER STATIC SOURCE	1	
	AN929-6	. CAP, TEE	1	
- 45	AN815-4D	. UNION, AIR DATA COMPUTER PITOT SOURCE	1	
- 45A	130909N29	. NUT	4	
- 45B	AN960-10L	. WASHER	4	
- 45C	MS35207-262	. SCREW	2	
- 45D	130864-1	. BRACKET	2	
- 45E	MS21919WDG6	. CLAMP	1	
- 45F	MS21919WDG4	. CLAMP	1	
- 45G	132131-3-11	. STUD	2	
- 46	122-320043-1	. TUBE ASSY, LH PITOT	1	
- 47	122-320042-1	. TUBE ASSY, LH STATIC	1	
- 48	AN815-6D	. UNION, AIR DATA COMPUTER STATIC SOURCE	1	
- 49	122-320041-1	. TUBE ASSY, RH PITOT	1	
- 50	122-320039-1	. TUBE ASSY, RH STATIC	1	
- 51	122-320029-5	. TUBE ASSY, RH PITOT TO LDG GR DIFFERENTIAL	1	
		. SWITCH		
- 52	122-320021-5	. TUBE ASSY, RH STATIC TO LDG GR DIFFERENTIAL	1	
		. SWITCH		
		NOTE BOND PLUMBING TUBES TO GROUND PLANE WITH MS25083-2BBX BONDING STRAP WITH AS SHORT A LEAD AS POSSIBLE USING AN735D6 OR AN735D4 CLAMP. SECURE WITH MS35207-265 SCREW, AN960-10L WASHER, 130909N29 NUT AND IF APPLICABLE MS35338-43 LOCK WASHER.		
- 53	AN818-6D	. NUT	1	
- 54	NAS1564D6-4	. REDUCER	1	
- 55	AN824-6D	. TEE	1	
- 56	AN824-4D	. TEE	1	
- 57	122-320036-1	. TUBE ASSY, RH STATIC	1	
- 58	122-320035-1	. TUBE ASSY, RH PITOT	1	
- 59	MS21919WDG42	. CLAMP	1	
		. /ATTACHING PARTS/		
- 60	AN3C27	. BOLT	1	
- 61	NAS43DD3-156	. SPACER	1	
		-----★-----		
- 62	101-384111-3	. SWITCH, LANDING GEAR WARNING DIFFERENTIAL	1	
		. PRESSURE		
- 63	AN924-4D	. NUT	1	
- 64	AN960D716L	. WASHER	2	
- 65	AN832-4D	. UNION, BULKHEAD	1	
- 66	AN924-6D	. NUT	1	
- 67	AN960D916L	. WASHER	2	
- 68	AN832-6D	. UNION, BULKHEAD	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

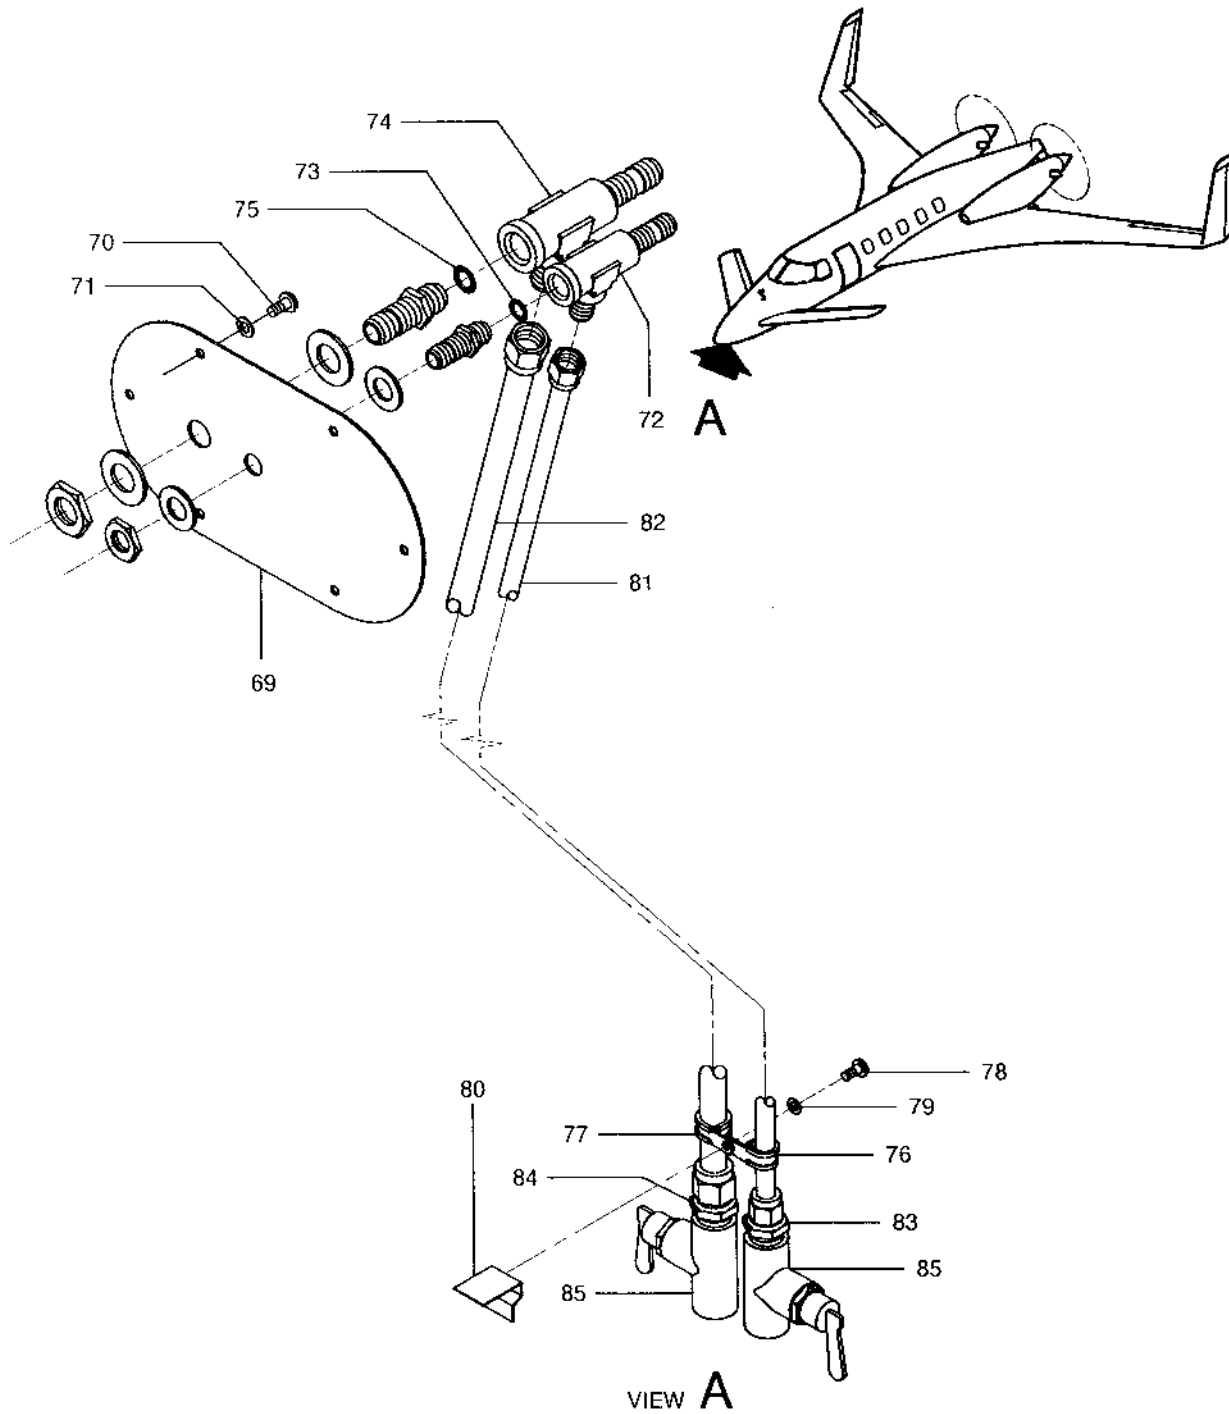

2000-394-06

FIGURE 10-00.PITOT AND STATIC PLUMBING
/SHEET 3 OF 3 SHEETS/


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00 - 69	122-320034-5	. PLATE	1	
		. /ATTACHING PARTS/		
- 70	MS27039-1-10	. SCREW	6	
- 71	AN960-10L	. WASHER	6	
		—★—		
- 72	AN784-4D	. TEE	1	
- 73	MS28778-4	. PACKING, PREFORMED	1	
- 74	AN784-6D	. TEE	1	
- 75	MS28778-6	. PACKING, PREFORMED	1	
- 76	MS21919DG4	. CLAMP	1	
- 77	MS21919DG6	. CLAMP	1	
- 78	MS35207-262	. SCREW	1	
- 79	AN960-10L	. WASHER	1	
- 80	122-320034-7	. BRACKET ASSY	1	
	NAS1474A3	. NUTPLATE	1	
- 81	122-320045-1	. TUBE ASSY, COPILOT PITOT	1	
- 82	122-320046-1	. TUBE ASSY, COPILOT STATIC	1	
- 83	AN816-4D	. ADAPTER	1	
- 84	AN816-6-20	. ADAPTER	1	
- 85	101-384184-3	. VALVE ASSY	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-10-20
INSTRUMENT AIR PLUMBING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

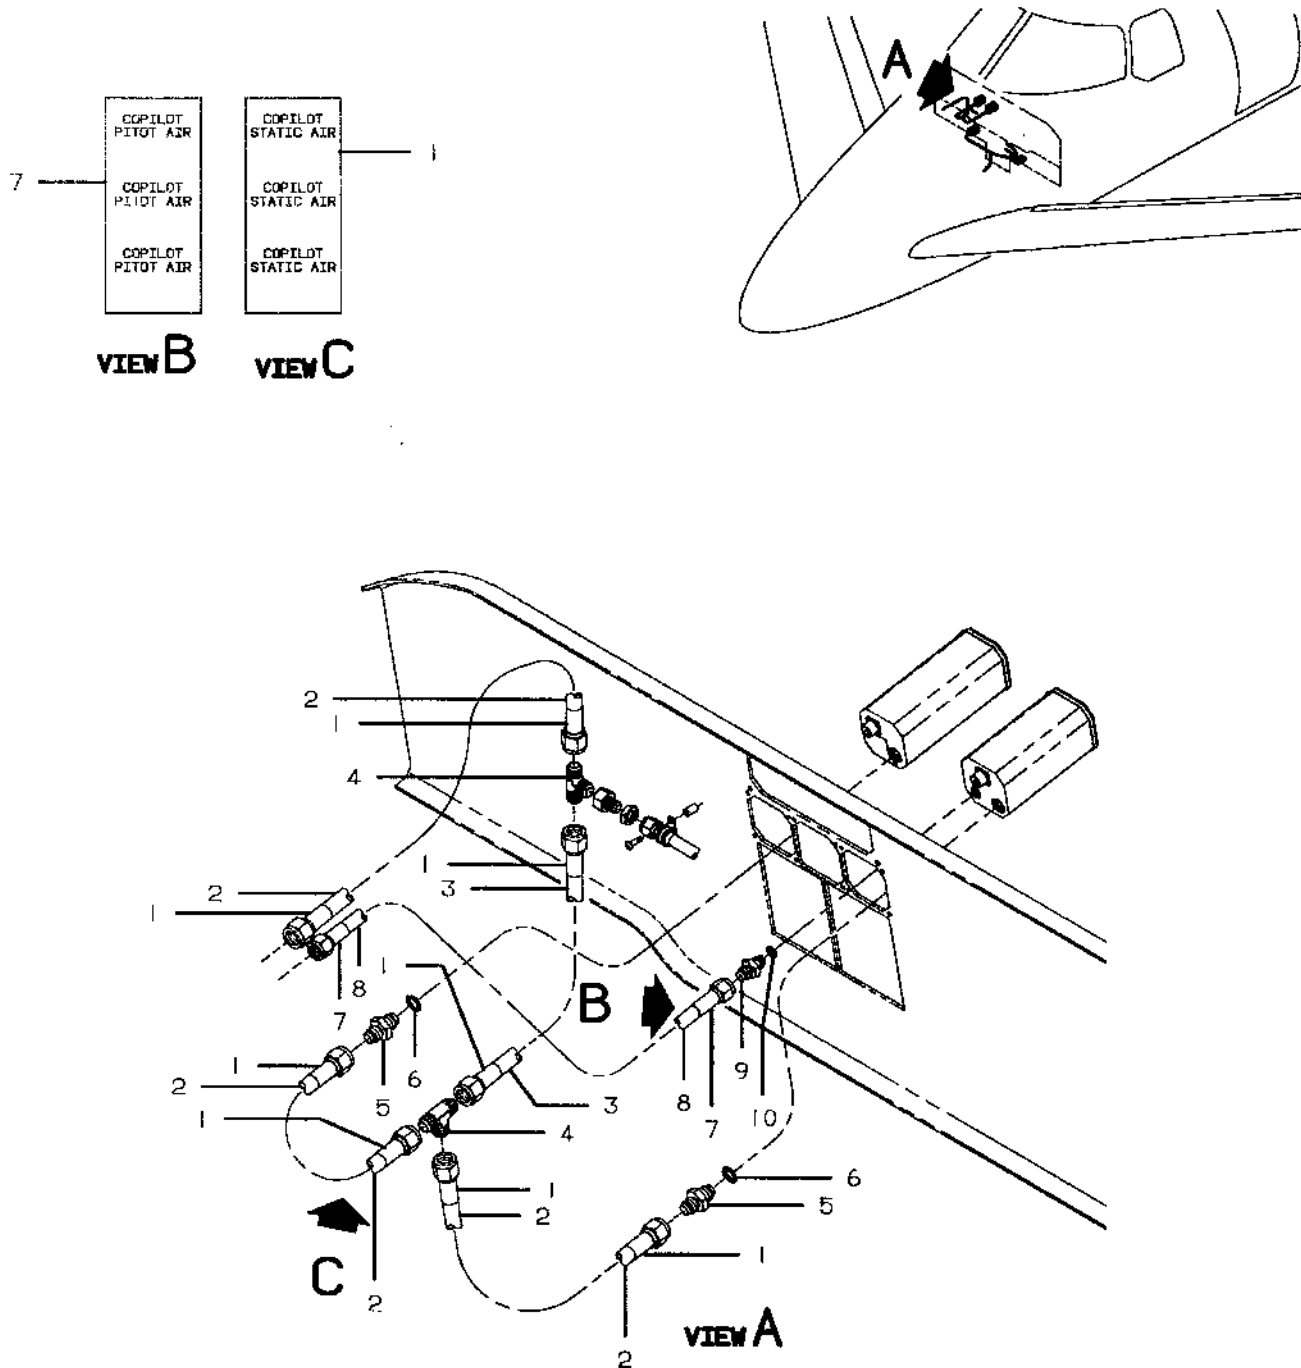


C93NC34A0468 C

FIGURE 10-20. INSTRUMENT AIR PLUMBING
/SHEET 1 OF 2 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20	122-322175-1	PLUMBING INSTL, INSTRUMENT PANEL	NP	
- 1	101-320234-11	. PLACARD, IDENTIFICATION/COPILOT STATIC AIR/	8	
- 2	36001-6-0080	. HOSE ASSY	3	
- 3	36001-6-0150	. HOSE ASSY, STATIC AIR	1	
- 4	AN824-6D	. TEE, PRESSURE CONTROLLER STATIC AIR SUPPLY	2	
		PORT		
- 5	AN919-7D	. UNION	2	
- 6	MS28778-5	. PACKING, PREFORMED	2	
- 7	101-320234-7	. PLACARD	2	
- 8	36001-4-0250	. HOSE	1	
- 9	AN815-4D	. UNION	1	
- 10	MS28778-4	. PACKING, PREFORMED	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

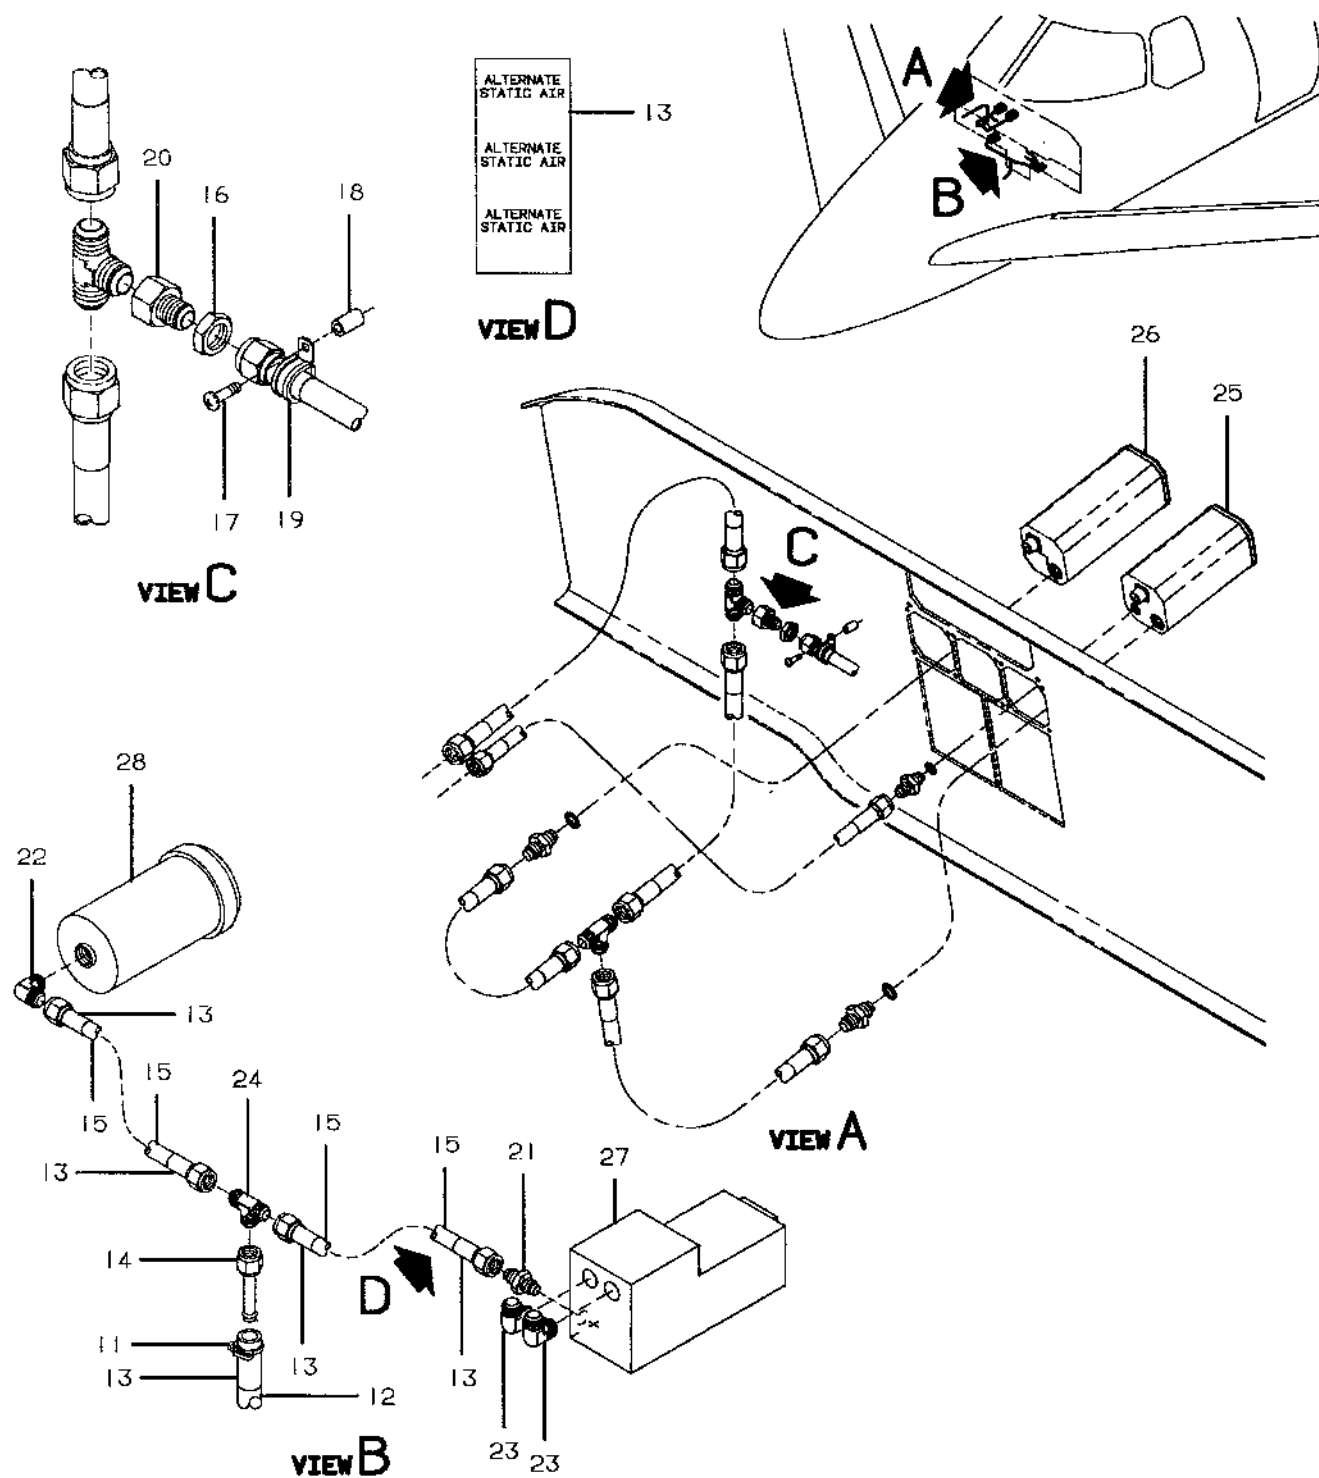

C93NC34A0469 C

FIGURE 10-20. INSTRUMENT AIR PLUMBING
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20 - 11	131466B1	. CLAMP	2	
- 12	131823E4A0480	. TUBE	1	
- 13	101-320234-13	. PLACARD	6	
- 14	122-540111-13	. TUBE ASSY	1	
- 15	36001-4-0100	. HOSE ASSY	2	
- 16	AN818-6D	. NUT	1	
- 17	MS35207-269	. SCREW	1	
- 18	NAS43DD3-48	. SPACER	1	
- 19	MS21919WDG12	. CLAMP	1	
- 20	NAS1564D6-4	. REDUCER	1	
- 21	AN816-4D	. NIPPLE	1	
- 22	AN822-4D	. ELBOW	1	
- 23	269-0FS04X02	. ELBOW, SWIVEL/MALE/	2	
- 24	AN824-4D	. TEE	1	
- 25	122-382104-1	INDICATOR, AIRSPEED/2 INCH/	1	
- 26	122-382142-5	INDICATOR, PNEUMATIC STANDBY/2 INCH/	1	
- 27	122-382143-1	INDICATOR, DEICE PRESSURIZATION	1	
- 28	122-382146-7	INDICATOR, CABIN ALTITUDE AND DIFFERENTIAL	1	
		PRESSURIZATION		

NOTE SEE CHAPTER 34-10-00 FOR THE INSTRUMENT
AIR PLUMBING FORWARD OF THE FIREWALL.

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-11-00
AIR DATA COMPUTER AND PLUMBING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

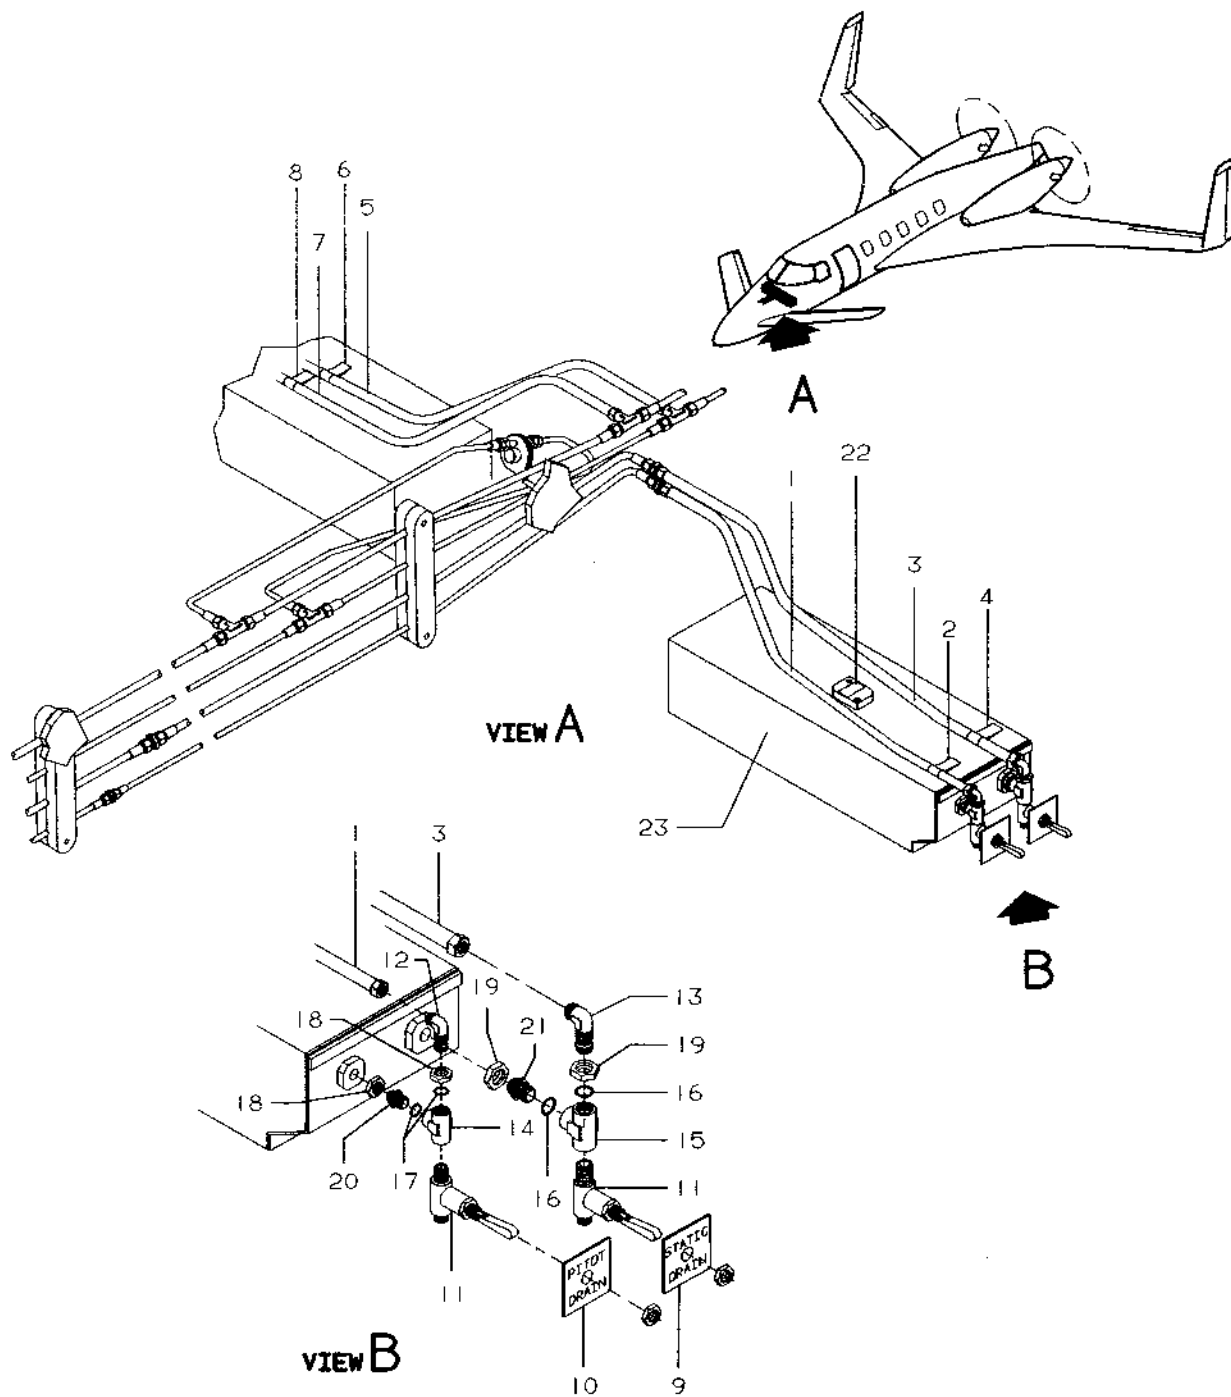

C93NC34A0471 C

FIGURE 11-00.AIR DATA COMPUTER AND PLUMBING

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
11-00	122-342051-1	PLUMBING INSTL, AIR DATA COMPUTER 1	NP	
	122-342051-3	PLUMBING INSTL, AIR DATA COMPUTER 2	NP	
- 1	36001-6-0200	. HOSE ASSY, COMPUTER PITOT AIR/PILOT/	1	
- 2	101-320234-5	. PLACARD, COMPUTER PITOT AIR/PILOT/	1	
- 3	36001-4-0200	. HOSE ASSY, COMPUTER STATIC AIR/PILOT/	1	
- 4	101-320234-9	. PLACARD, COMPUTER STATIC AIR/PILOT/	1	
- 5	36001-4-0220	. HOSE ASSY, COMPUTER PITOT AIR/COPILOT/	1	
- 6	101-320234-7	. PLACARD, COMPUTER PITOT AIR/COPILOT/	1	
- 7	36001-6-0220	. HOSE ASSY, COMPUTER STATIC AIR/COPILOT/	1	
- 8	101-320234-11	. PLACARD, COMPUTER STATIC AIR/COPILOT/	1	
- 9	122-342051-5	. PLACARD ASSY, STATIC DRAIN IDENTIFICATION	1	
	122-340041-19	. DECAL	1	
	122-342051-9	. BRACKET	1	
- 10	122-342051-7	. PLACARD ASSY, PITOT DRAIN IDENTIFICATION	1	
	122-340041-23	. DECAL	1	
	122-342051-11	. BRACKET	1	
- 11	101-384184-1	. VALVE, PITOT & STATIC DRAIN TOGGLE	2	
- 12	AN833-4D	. ELBOW	1	
- 13	AN833-6D	. ELBOW	1	
- 14	AA1282-1	. TEE	1	
- 15	AA1282-2	. TEE	1	
- 16	MS28775-112	. PACKING, PREFORMED	3	
- 17	MS28775-012	. PACKING, PREFORMED	3	
- 18	AN924-4D	. NUT	2	
- 19	AN924-6D	. NUT	2	
- 20	AN832-4D	. UNION	1	
- 21	AN832-6D	. UNION	1	
	122-342037-5	COMPUTER INSTL, AIR DATA	NP	
- 22	622-7737-001	. MODULE, AIR DATA/ADM-850/	1	1
		/ORDER 622-7737-006 FOR SPARES IF 2000A KIT IS INSTALLED/		
	622-7737-006	. MODULE, AIR DATA/ADM-850/	1	2
- 23	622-7208-001	. COMPUTER, AIR DATA/ADC-850/	1	
	122-341001-49	RACK ASSY	1	


CODES OF EFFECTIVITY

1 NC-4 THRU NC-28 2 NC-29 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-20-00
MAGNETIC COMPASS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

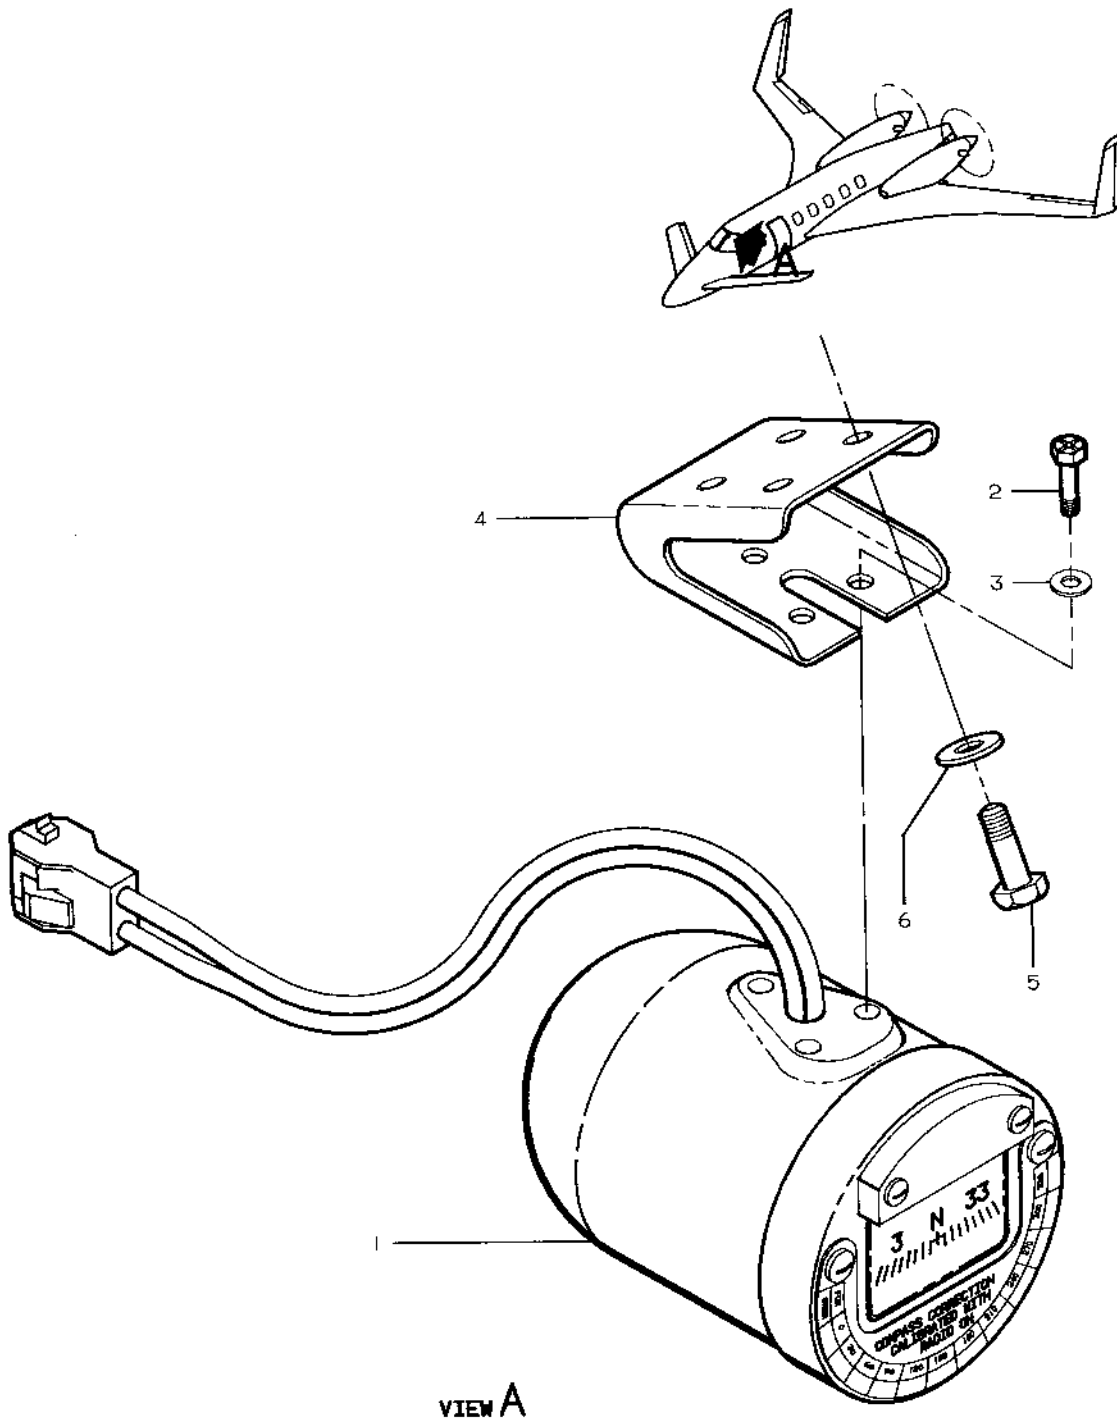

C9100912

FIGURE 20-00.MAGNETIC COMPASS


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-322015-3	COMPASS INSTL, MAGNETIC/CENTER POST/.....	NP	
- 1	122-382050-3	. COMPASS, MAGNETIC.....	1	
		/ATTACHING PARTS/		
- 2	MS27039C805	. SCREW.....	3	
- 3	AN960C8L	. WASHER.....	3	
		---★---		
- 4	122-322066-5	. BRACKET.....	1	
		/ATTACHING PARTS/		
- 5	AN3C4A	. BOLT.....	4	
- 6	AN960C10L	. WASHER.....	4	
		---★---		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-20-10
FLUX DETECTOR

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

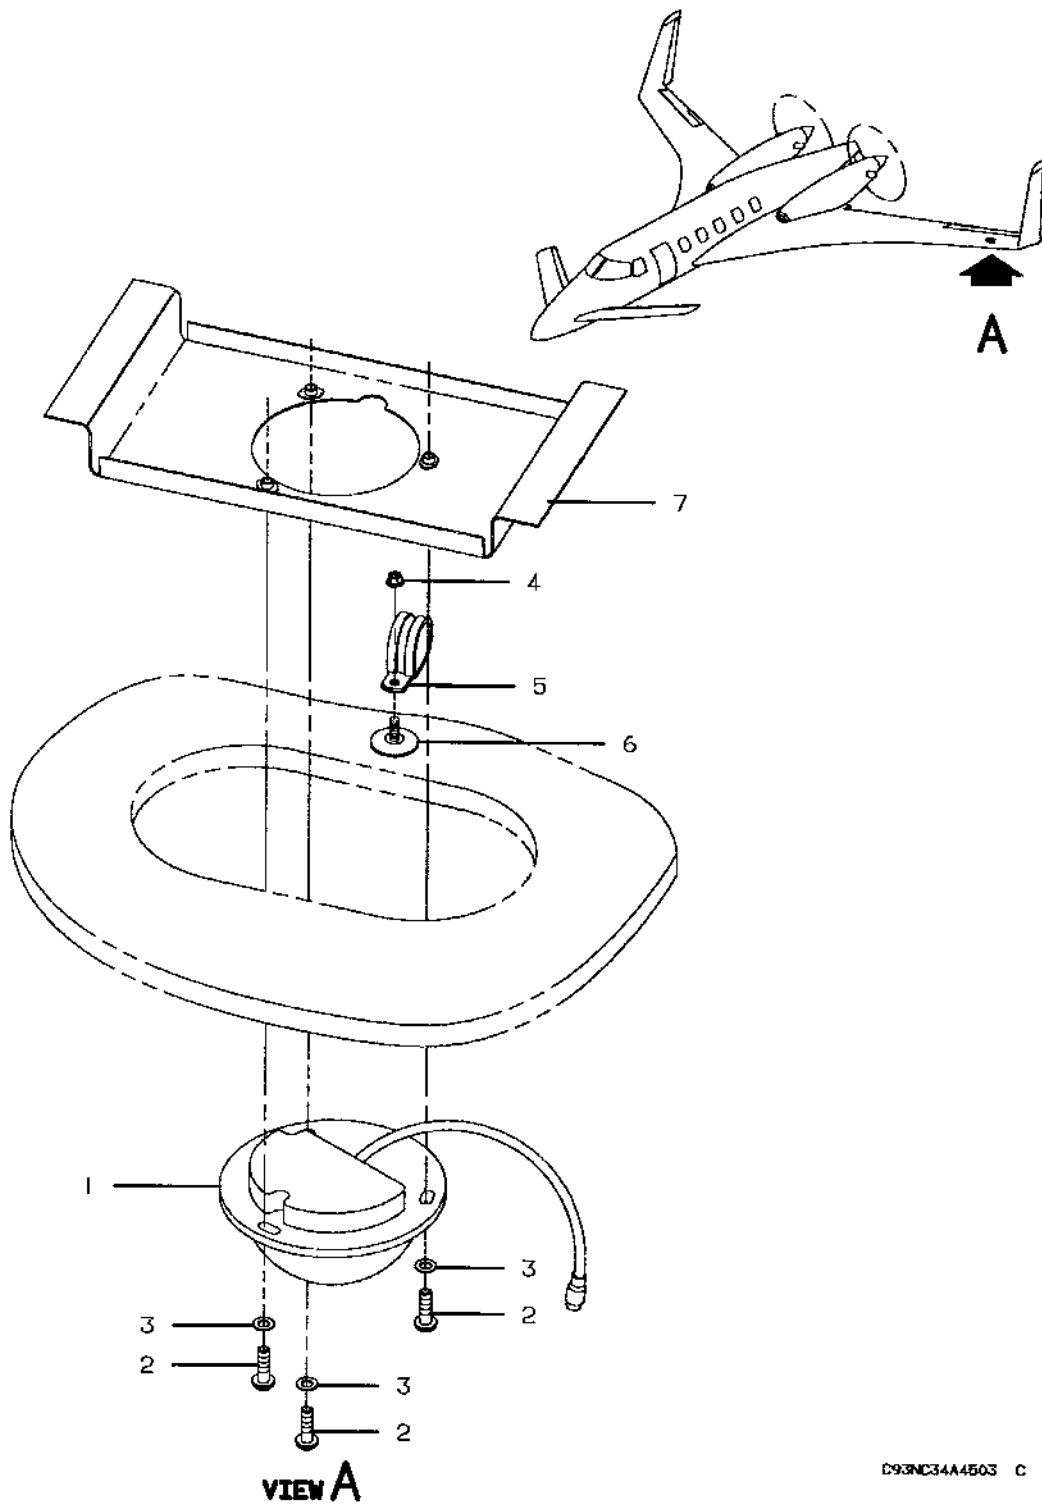

D93NC34A4503 C

FIGURE 20-10.FLUX DETECTOR

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10	122-342019-1	FLUX DETECTOR INSTL, LH	NP	
	122-342019-2	FLUX DETECTOR INSTL, RH	NP	
- 1	622-5812-001	. FLUX VALVE	1	
		. /ATTACHING PARTS/		
- 2	MS35214-27	. SCREW	3	
- 3	AN960B6	. WASHER	3	
		★		
- 4	MS21043-3	. NUT	1	
- 5	MS21919WDG14	. CLAMP	1	
- 6	CB4000C3CR8	. STUD	1	
- 7	122-341006-5	BRACKET ASSY, LH FLUX VALVE	1	
	122-341006-6	BRACKET ASSY, RH FLUX VALVE	1	
	NAS1068C06M	. NUTPLATE	3	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-20-20
ATTITUDE HEADING SYSTEM

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


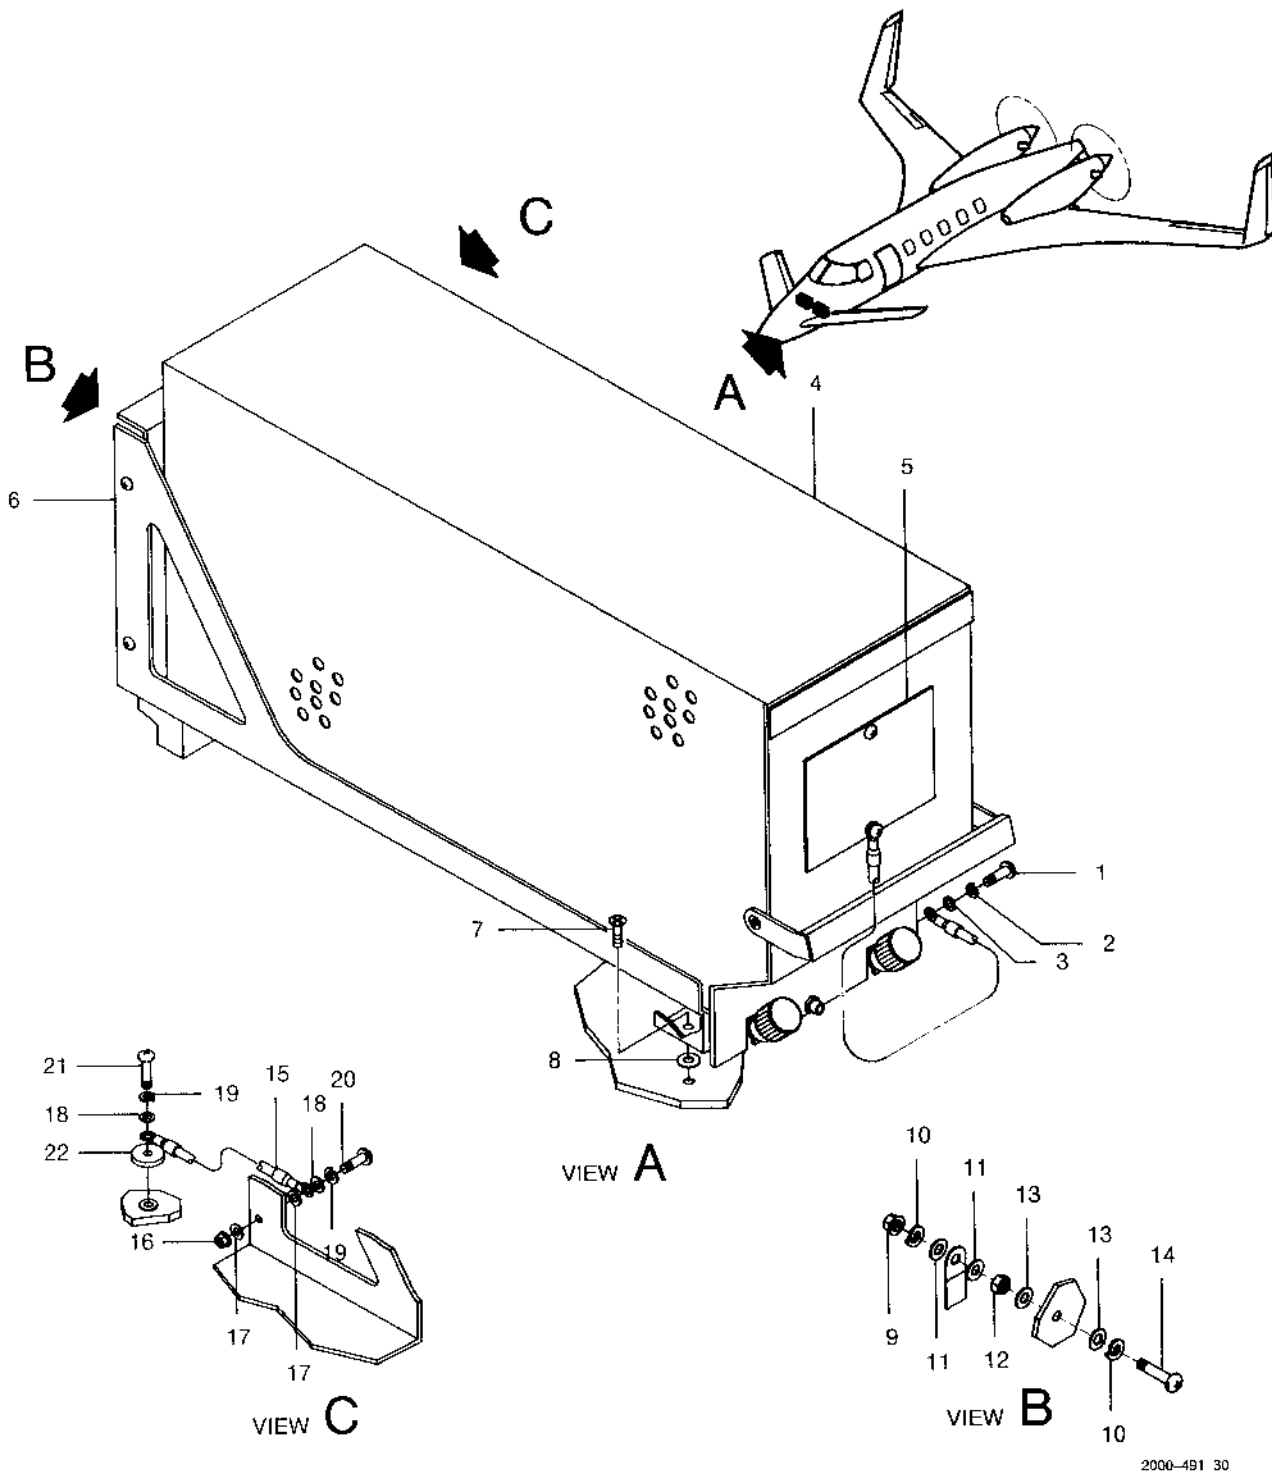


FIGURE 20-20.ATTITUDE HEADING SYSTEM
/SHEET 1 OF 2 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-20	122-342036-3	ATTITUDE HEADING REF SYSTEM INSTL.....	NP	
- 1	MS35206-213	. SCREW.....	1	
- 2	MS35338-40	. WASHER, LOCK.....	1	
- 3	AN960-4L	. WASHER.....	1	
- 4	622-7386-001	. COMPUTER, ATTITUDE HEADING/AHC-85D/.....	1	
- 5	622-6189-001	. COMPENSATION UNIT, INTERNAL/ICU-85/.....	1	
- 6	122-341001-71	. RACK ASSY.....	1	
		/ATTACHING PARTS/		
- 7	MS35191-276	. SCREW.....	4	
- 8	AN960JD716	. WASHER.....	4	
		-----★-----		
- 9	130909N28	. NUT.....	2	
- 10	MS35338-42	. WASHER, LOCK.....	4	
- 11	AN960-8L	. WASHER.....	4	
- 12	MS35649-282	. NUT.....	2	
- 13	AN960JD8	. WASHER.....	4	
- 14	MS35206-247	. SCREW.....	2	
	634-1116-001	. KEYWAY.....	4	
	324-2605-000	. SCREW.....	4	
	634-1117-001	. RING, CAPTIVE.....	4	
	634-1128-001	. SPACER.....	4	
	622-8304-002	. RACK.....	1	
NOTE THE FOLLOWING SHIMS ARE USED TO LEVEL THE RACK IF REQUIRED.				
	634-3020-001	. SHIM/BACK/.....	AR	
	634-3020-002	. SHIM/BACK/.....	AR	
	634-3020-003	. SHIM/BACK/.....	AR	
	634-3020-004	. SHIM/BACK/.....	AR	
	634-3020-005	. SHIM/BACK/.....	AR	
	634-3020-006	. SHIM/BACK/.....	AR	
	634-3021-001	. SHIM/FRONT/.....	AR	
	634-3021-002	. SHIM/FRONT/.....	AR	
	634-3021-003	. SHIM/FRONT/.....	AR	
	634-3021-005	. SHIM/FRONT/.....	AR	
	634-3021-006	. SHIM/FRONT/.....	AR	
- 15	MS25083-2BB8	. JUMPER ASSY.....	1	
		/ATTACHING PARTS/		
- 16	130909N29	. NUT.....	1	
- 17	AN960JD10L	. WASHER.....	2	
- 18	AN960-10L	. WASHER.....	2	
- 19	MS35338-43	. WASHER, LOCK.....	2	
- 20	MS27039-1-09	. SCREW.....	1	
- 21	MS35207-265	. SCREW.....	1	
- 22	122-340070-9	. WASHER.....	1	
		-----★-----		
	122-340069-1	. GROUND WIRE TERMINATION INSTL/SEE CHAPTER 23/.....	NP	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

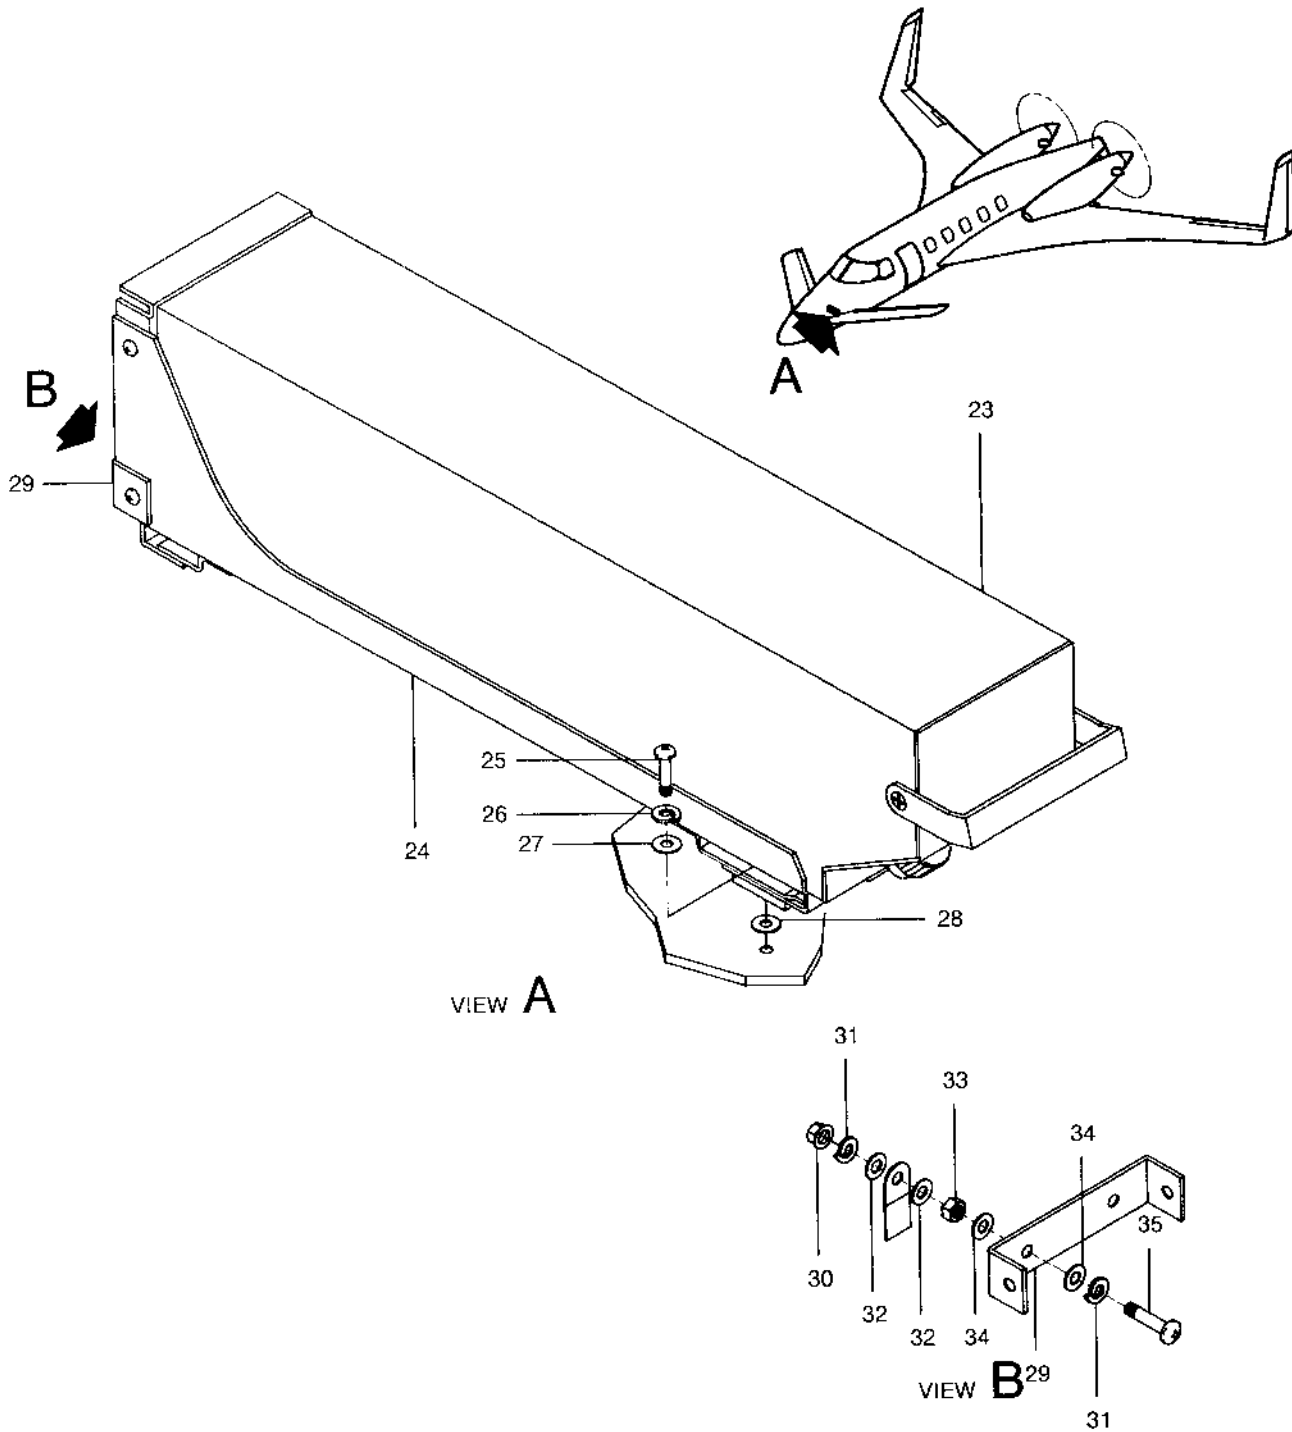

2000 491-31

FIGURE 20-20.ATTITUDE HEADING SYSTEM
/SHEET 2 OF 2 SHEETS/


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-20	122-340073-3	DRIVER INSTL, SENSOR DISPLAY	NP	
- 23	622-7207-002	. DRIVER, SENSOR DISPLAY/SDD640/ORDER	NP	1
		622-9347-001 FOR SPARES/		
	622-9347-001	. DRIVER, SENSOR DISPLAY/SDD640A/	1	2
- 24	122-341001-61	. RACK ASSY	1	1
	122-341001-79	. RACK ASSY	1	2
		/ATTACHING PARTS/		
- 25	MS35206-246	. SCREW	4	
- 26	MS35338-42	. WASHER, LOCK	4	
- 27	AN960JD8L	. WASHER	4	
- 28	AN960JD616	. WASHER	4	
		-----*		
	628-8205-006	. . PLATE ASSY	1	
	634-1116-001	. . KEYWAY	4	
	634-1117-001	. . RING, CAPTIVE	4	
	324-2604-000	. . SCREW	4	
	334-2117-010	. . FASTENER	4	
	634-1120-001	. . FLAT SPRING, GROUND	1	
- 29	122-340039-109	. . SUPPORT	1	
- 30	130909N28	. . NUT	2	
- 31	MS35338-42	. . WASHER, LOCK	4	
- 32	AN960-8L	. . WASHER	4	
- 33	MS35649-282	. . NUT	2	
- 34	AN960JD8	. . WASHER	4	1
	AN960JD10	. . WASHER	4	2
- 35	MS35206-247	. . SCREW	2	
	622-5211-003	. . RACK	1	
	122-340069-1	. GROUND TERMINAL INSTL/SEE CHAPTER 23/	NP	
	122-342019-1	FLUX DETECTOR INSTL, LH/SEE CHAPTER 34-20-10/	NP	
	122-342019-2	FLUX DETECTOR INSTL, RH/SEE CHAPTER 34-20-10/	NP	
	622-8336-001	DISPLAY UNIT, SENSOR/SEE CHAPTER 39/	2	

CODES OF EFFECTIVITY

1 NC-4 THRU NC-29 2 NC-30 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

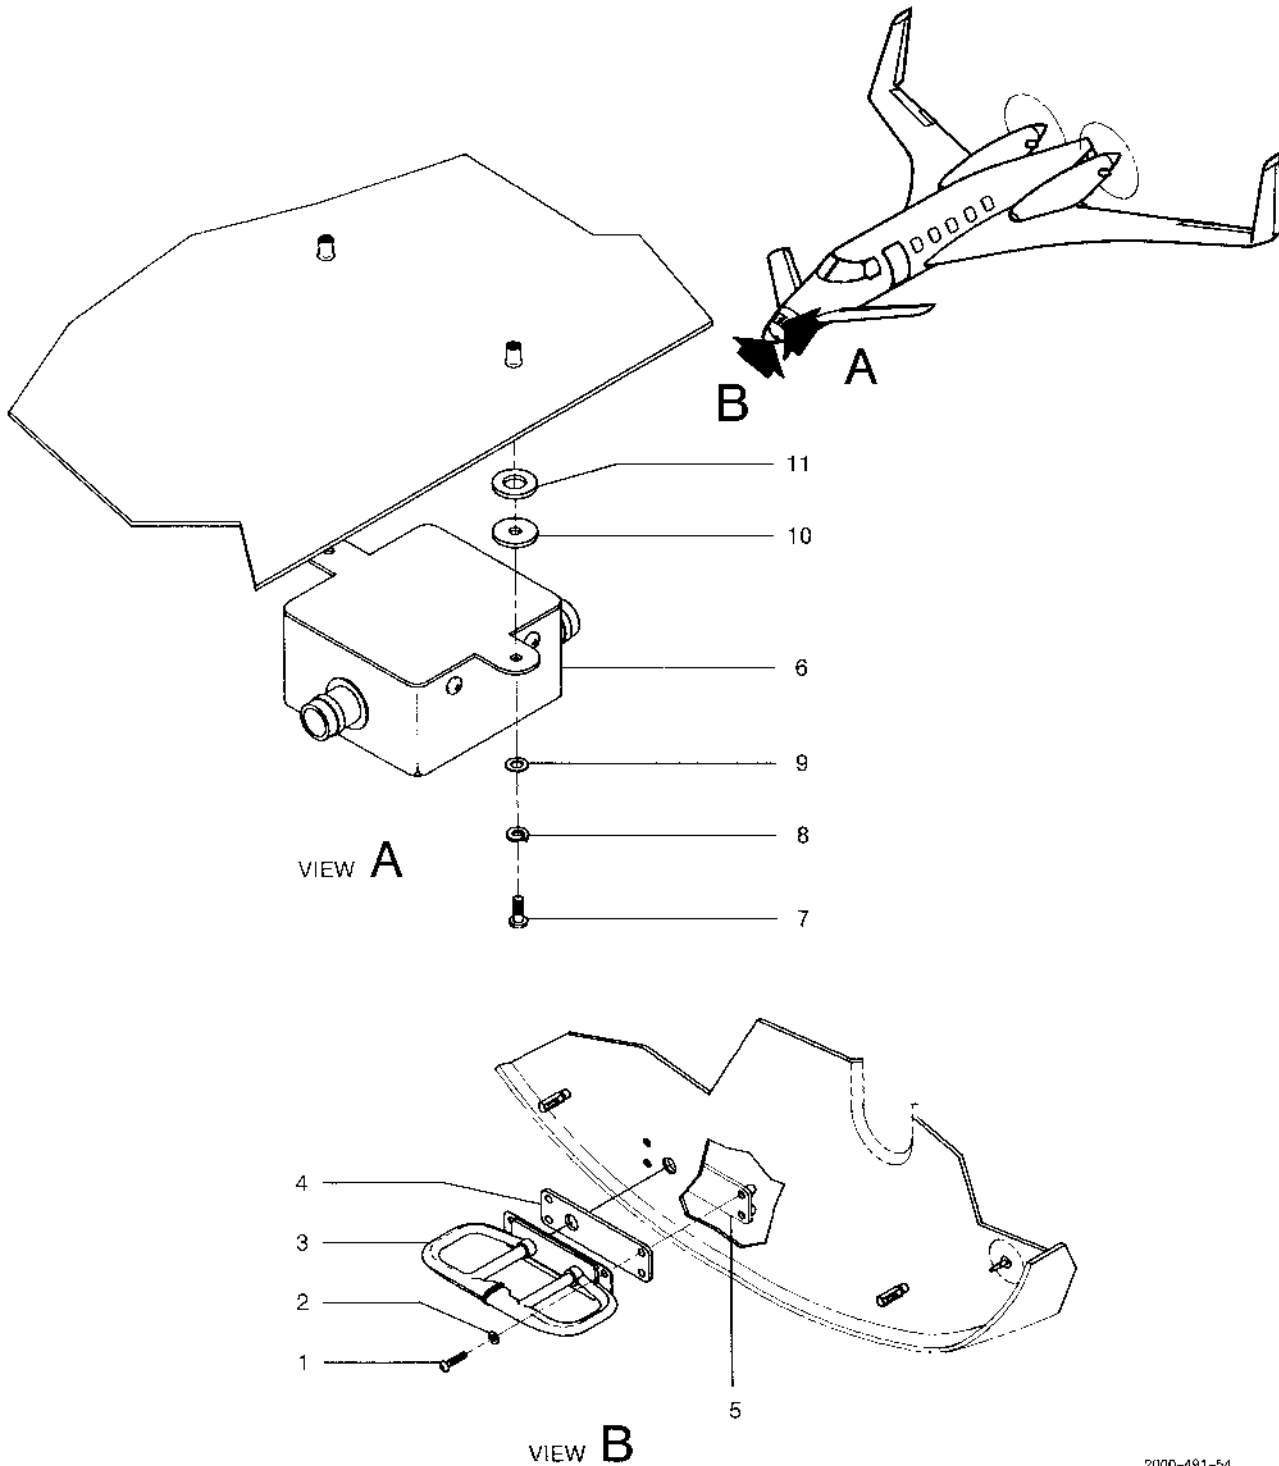


2000-491-54

FIGURE 30-00.GLIDESLOPE & MKR BEACON ANTENNAS
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00	122-342012-13	ANTENNA INSTL, GLIDESLOPE.....	NP	
- 1	MS27039-0811	. SCREW.....	4	
- 2	AN960-8L	. WASHER.....	4	
- 3	100-384128	. ANTENNA.....	1	
- 4	122-342012-3	. PLATE.....	1	
- 5	122-342012-9	. PLATE ASSY.....	1	
	MS21086L08	. NUTPLATE.....	4	
	122-340071-3	COUPLER INSTL.....	NP	
- 6	101-380043	. COUPLER/GLS/ /ATTACHING PARTS/.....	1	
- 7	MS35207-263	. SCREW.....	2	
- 8	MS35338-43	. WASHER, LOCK.....	2	
- 9	AN960-10L	. WASHER.....	2	
- 10	122-340070-1	. WASHER.....	2	
- 11	AN960JD716	. WASHER.....	2	
		---★---		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

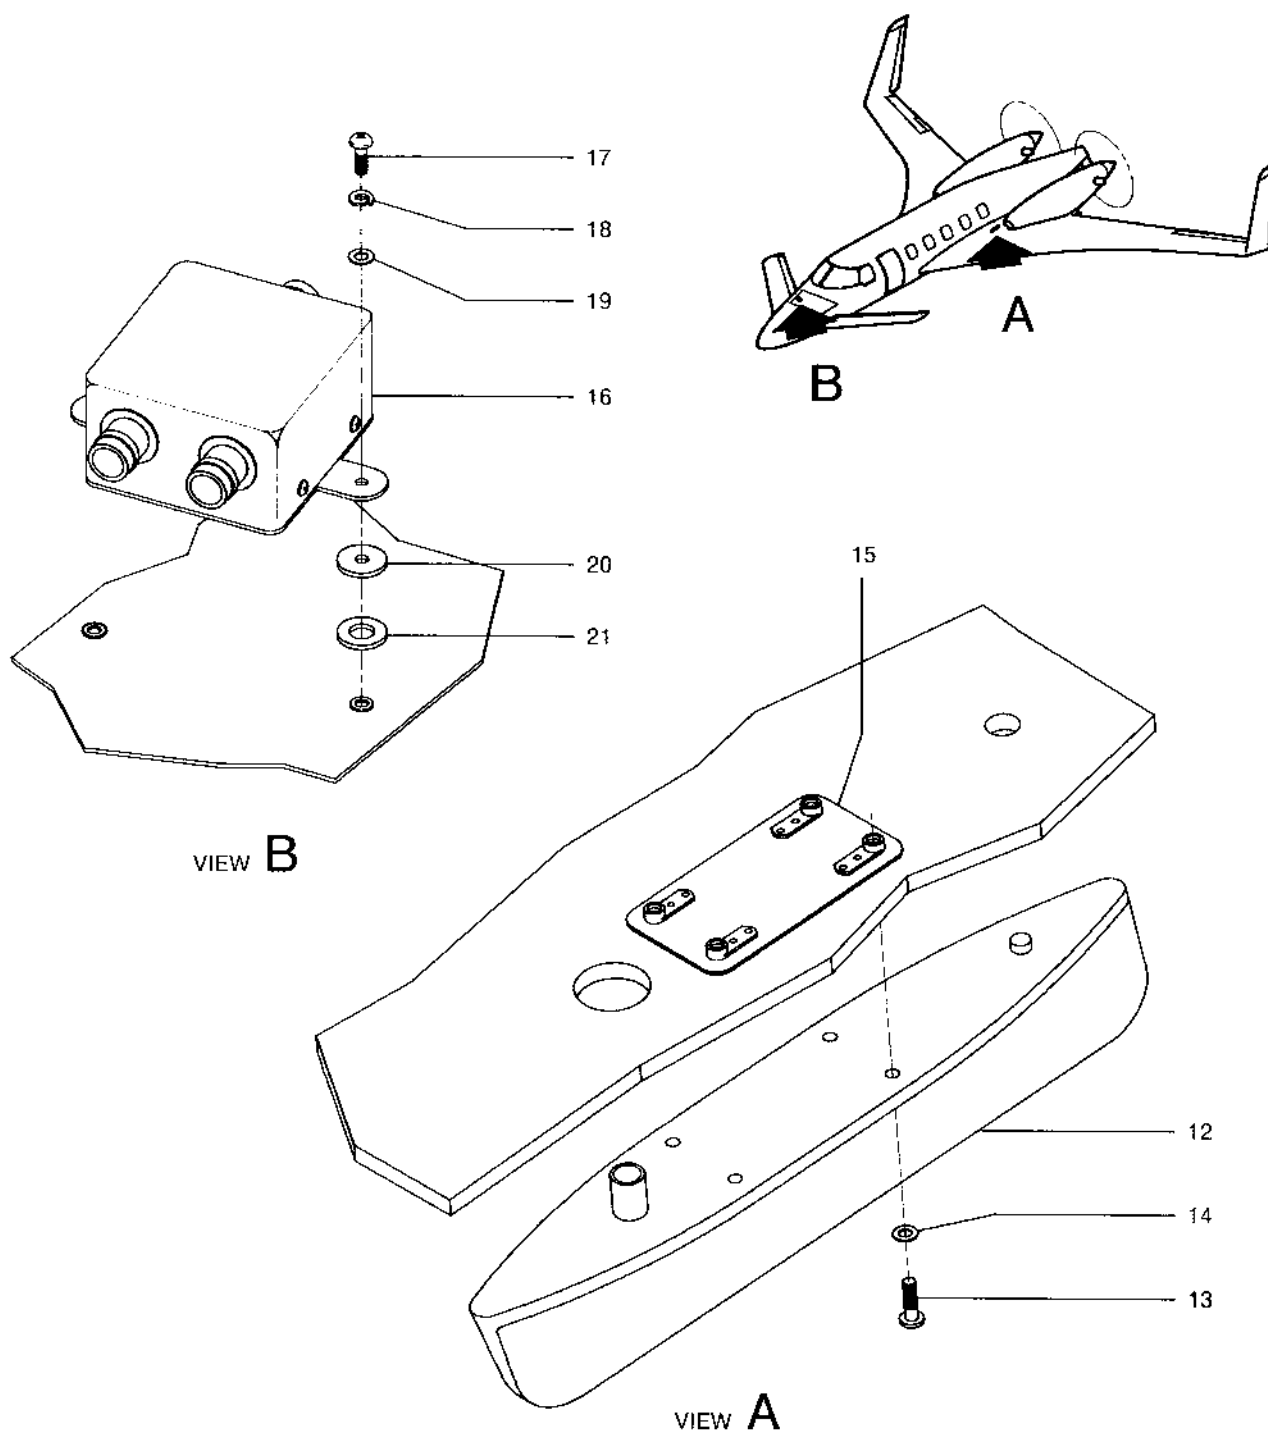

2000-491 55

FIGURE 30-00.GLIDESLOPE & MKR BEACON ANTENNAS
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00	122-341012-1	ANTENNA INSTL, MARKER BEACON.....	NP	
- 12	101-384179	. ANTENNA.....	1	
		. /ATTACHING PARTS/		
- 13	MS51958-69	. SCREW.....	4	
- 14	NAS620-10L	. WASHER.....	4	
		★		
- 15	122-340039-215	. REINFORCEMENT ASSY.....	1	
	MS21051L3	. NUTPLATE.....	4	
	122-340071-1	COUPLER INSTL.....	NP	
- 16	101-380042	. COUPLER/MKR BCN/.....	1	
		. /ATTACHING PARTS/		
- 17	MS35207-263	. SCREW.....	2	
- 18	MS35338-43	. WASHER, LOCK.....	2	
- 19	AN960-10L	. WASHER.....	2	
- 20	122-340070-1	. WASHER.....	2	
- 21	AN960JD716	. WASHER.....	2	
		★		

NOTE THE SENSOR RECEIVER FOR THE GLIDESLOPE
AND MARKER BEACON ANTENNAS IS THE
VIR-432 NAVIGATION RECEIVER. SEE CHAPTER
34-50-00.

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-40-00
WEATHER RADAR TRANSCEIVER AND ANTENNA

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

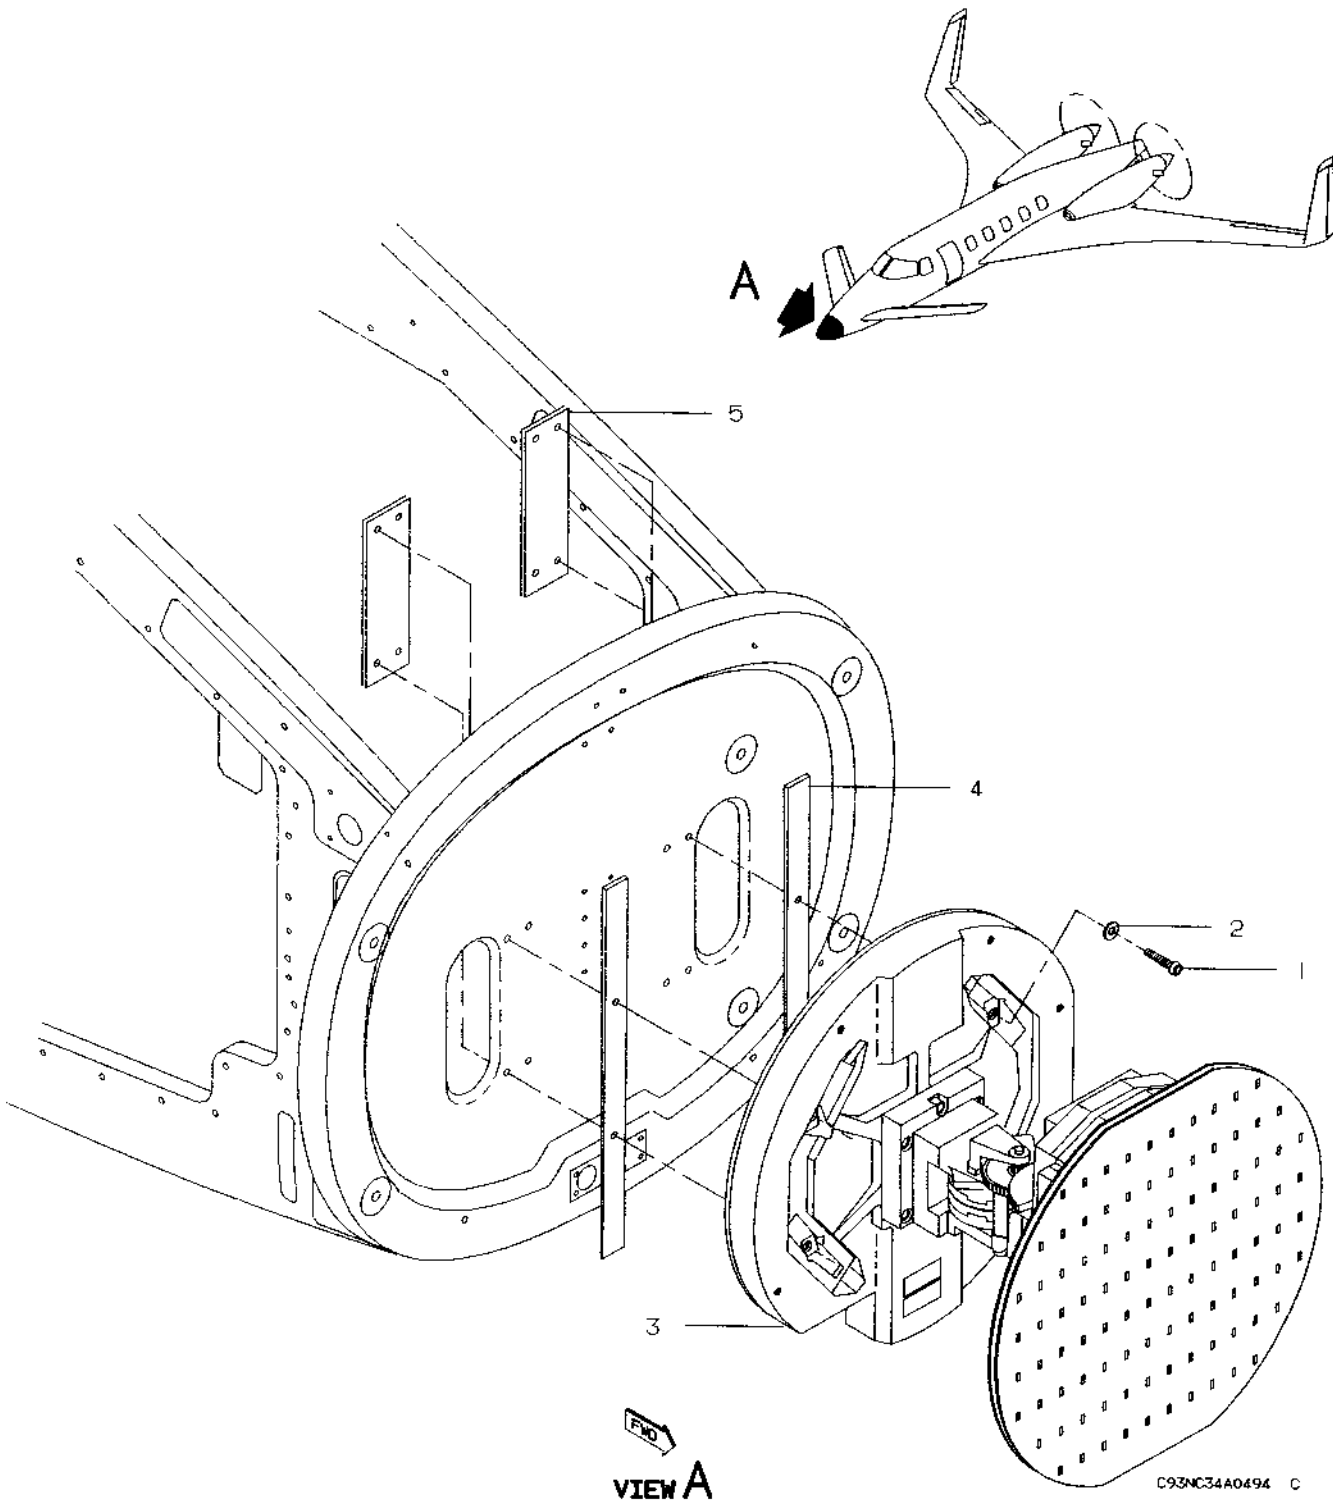


FIGURE 40-00.WEATHER RDR TRANSCEIVER & ANTENNA

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00	122-342042-3	ANTENNA INSTL, WEATHER RADAR.....	NP	
		/ATTACHING PARTS/		
- 1	130909B97	. BOLT	4	
- 2	AN980JD416	. WASHER	4	
		-----★-----		
- 3	622-8440-003	. ANTENNA, RECEIVER-TRANSMITTER/RTA-854/	1	2
	622-8440-001	. ANTENNA, RECEIVER-TRANSMITTER/ORDER	NP	1
		622-8440-003 FOR SPARES/		
- 4	122-340040-43	. SPACER	2	
	687-9728-001	. SHIM KIT	1	
- 5	122-340039-47	. REINFORCEMENT ASSY, LH	1	
	122-340039-48	. REINFORCEMENT ASSY, RH	1	
	NAS1474A4	. . NUTPLATE	4	


CODES OF EFFECTIVITY

1 NC-4 THRU NC-32 2 NC-33 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-50-00
NAVIGATION RECEIVER AND ANTENNA

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

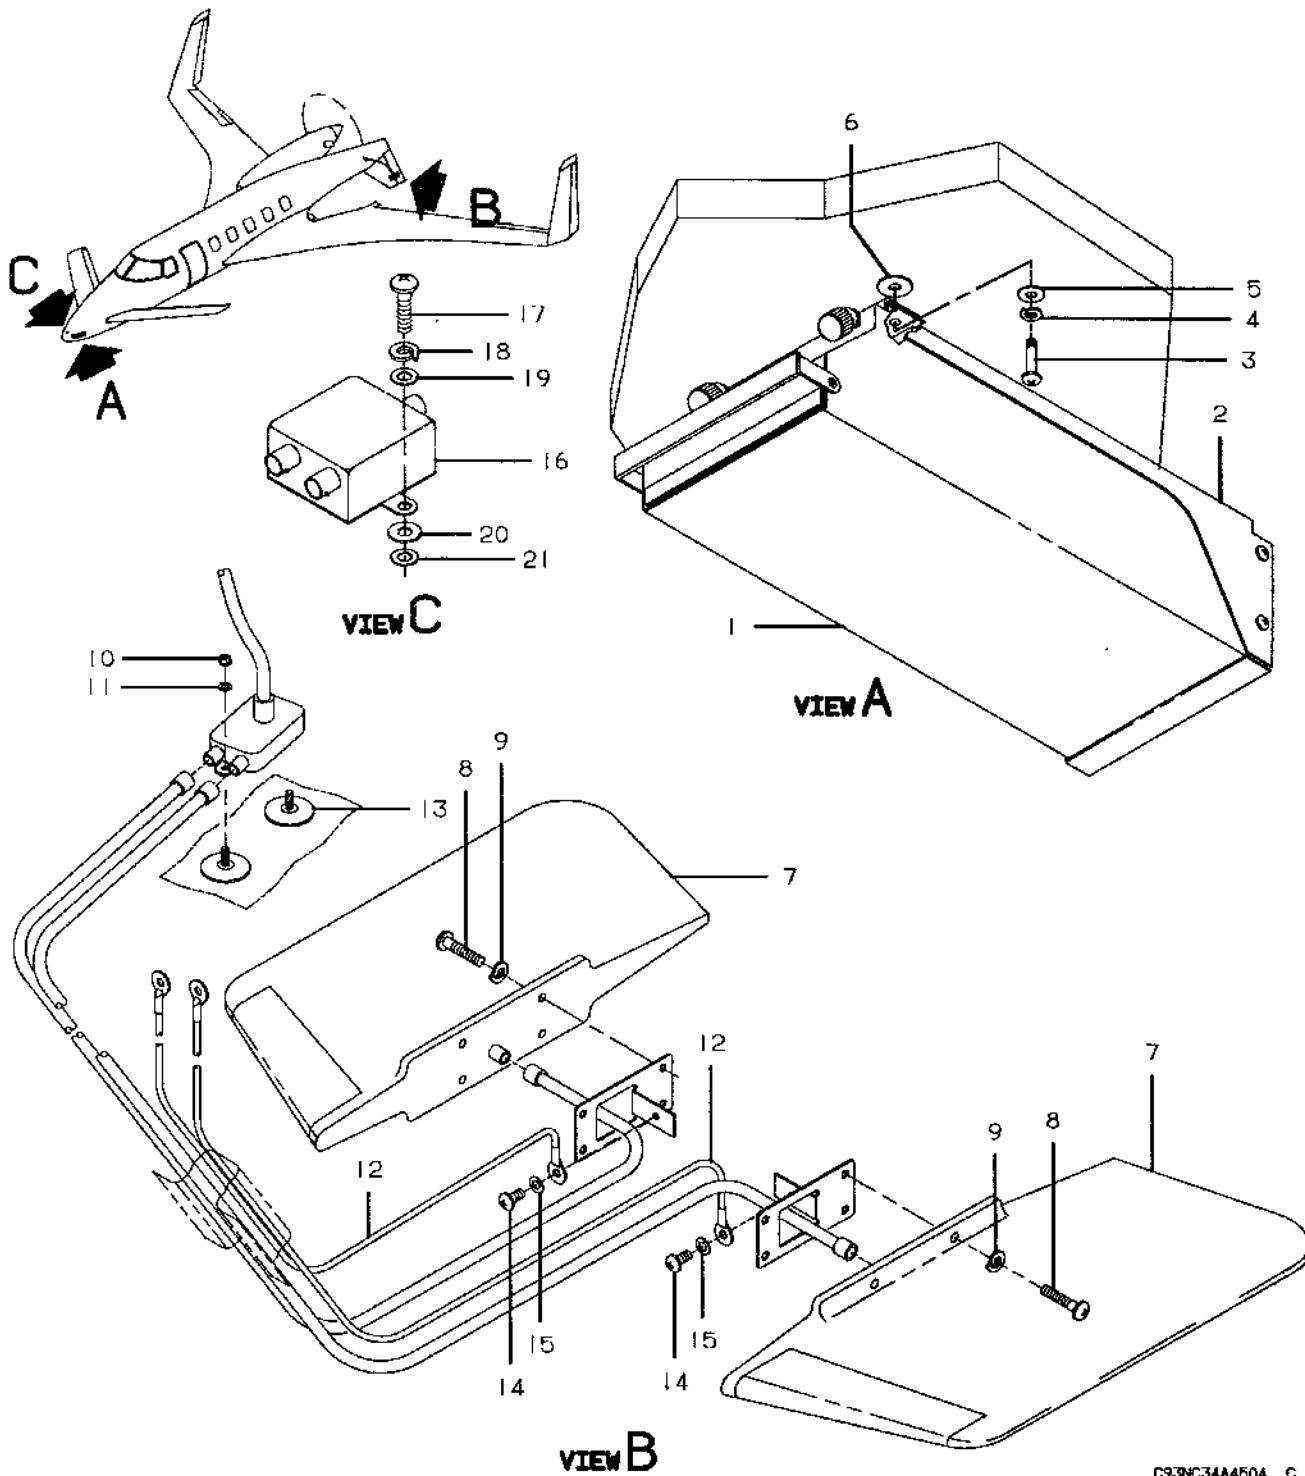

C93NC34A4504 C

FIGURE 50-00.NAVIGATION RECEIVER AND ANTENNA

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-00	122-342032-1	NAVIGATION INSTL	NP	
- 1	622-7194-001	. RECEIVER/VIR-432/	1	
- 2	122-341001-63	. RACK ASSY,	1	
		/ATTACHING PARTS/		
- 3	MS35206-246	. SCREW	4	
- 4	MS35338-42	. WASHER, LOCK	4	
- 5	AN960JD8L	. WASHER	4	
- 6	AN960JD616	. WASHER	4	
		---★---		
	628-8205-004	. PLATE ASSY	1	
	324-2604-000	. SCREW	4	
	634-1116-001	. KEYWAY	4	
	634-1117-001	. RING, CAPTIVE	4	
	334-2117-010	. FASTENER	4	
	634-1120-001	. FLAT SPRING, GROUND	2	
	622-5212-003	. RACK	1	
	122-340069-1	. GROUND WIRE TERMINATION INSTL/SEE CHAPTER 23/	NP	
	122-342008-5	ANTENNA INSTL, VHF NAVIGATION	NP	
- 7	58-380114	. ANTENNA/CONSISTS OF BLADES, COUPLER & CABLES/	2	
		/ATTACHING PARTS/		
- 8	MS35207-263	. SCREW/4 LH AND 4 RH/	8	
- 9	MS35338-43	. WASHER, LOCK/4 LH AND 4 RH/	8	
		---★---		
	122-340039-233	. FILLER/BETWEEN ANTENNA AND SKIN/	2	1
	122-340039-247	. FILLER/BETWEEN ANTENNA AND SKIN/	1	2
- 10	MS21042L08	. NUT/BONDING JUMPER/	2	
- 11	AN960-8L	. WASHER	2	
- 12	122-342008-7	. STRAP, BONDING	2	
- 13	132131-08-4	. STUD	2	
- 14	MS35207-263	. SCREW/BONDING JUMPER/	2	
- 15	AN960JD10L	. WASHER	2	
	122-340071-1	COUPLER INSTL	NP	
- 16	101-380042	. COUPLER/NAVIGATION/LOCATED ON AVIONICS	1	
		SHELF ABOVE VIR-432 NO.2 RECEIVER/ /ATTACHING PARTS/		
- 17	MS35207-263	. SCREW	2	
- 18	MS35338-43	. WASHER, LOCK	2	
- 19	AN960-10L	. WASHER	2	
- 20	122-340070-1	. WASHER	2	
- 21	AN960JD716	. WASHER	2	
		---★---		

CODES OF EFFECTIVITY


1 NC-4 THRU NC-53

2 NC-54 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-50-10
VLF RECEIVER AND ANTENNA

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

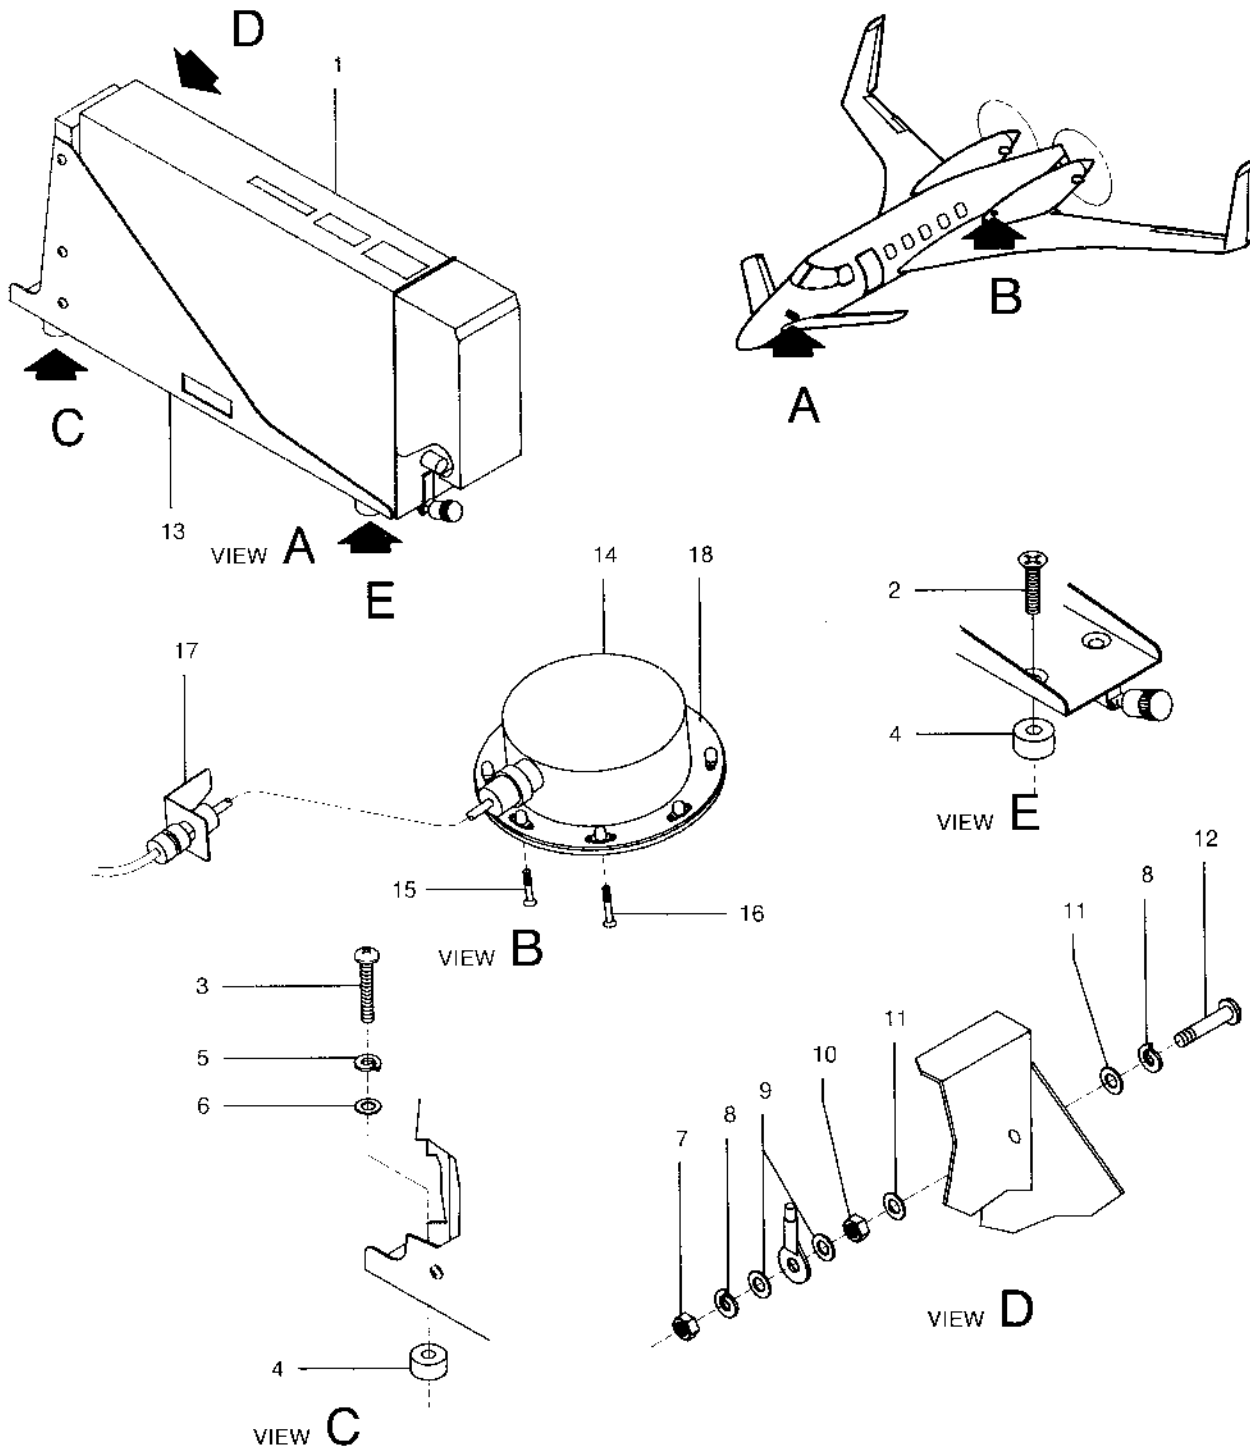

2000-491-69

FIGURE 50-10.VLF RECEIVER AND ANTENNA

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-10	122-342040-3	RECEIVER INSTL, VLF.....	NP	
- 1	270-1306-010	. RECEIVER, VLF/OMEGA/ORDER 270-1306-060 FOR.....	NP	1
		SPARES/		
	270-1306-060	. RECEIVER, VLF/OMEGA/	1	2
- 2	MS24693S58	. SCREW.....	2	
- 3	MS35206-251	. SCREW.....	2	
- 4	122-340070-27	. SPACER.....	4	
- 5	MS35338-42	. WASHER, LOCK.....	2	
- 6	AN960JD8L	. WASHER.....	2	
	122-341001-77	. RACK ASSY.....	1	
- 7	130909N28	. NUT.....	2	
- 8	MS35338-42	. WASHER, LOCK.....	4	
- 9	AN960-8L	. WASHER.....	4	
- 10	MS35649-282	. NUT.....	2	
- 11	AN960JD8	. WASHER.....	4	
- 12	MS35206-247	. SCREW.....	2	
- 13	270-1306-030	. MOUNT.....	1	
	AN960-6L	. WASHER, CONNECTOR.....	4	
	MS35206-229	. SCREW, CONNECTOR.....	4	
	122-340069-1	. GROUND WIRE TERMINATION INSTL/SEE CHAPTER 23/.....	NP	
	122-342044-3	. ANTENNA INSTL, VLF.....	NP	
- 14	270-1306-050	. ANTENNA.....	1	
		/ATTACHING PARTS/		
- 15	MS24694C59	. SCREW.....	1	
- 16	MS24694C62	. SCREW.....	7	
		★-----		
- 17	122-340039-165	. BRACKET.....	1	
- 18	122-340040-53	. DOUBLER ASSY.....	1	
	MS21047L3K	. NUTPLATE.....	1	
	NAS1473A3	. NUTPLATE.....	7	
	122-360011-1	. PLACARD.....	1	3
	MS21043-3	. NUT.....	1	
	AN960-10L	. WASHER.....	1	
	MS25036-115	. TERMINAL.....	1	
	MS35338-43	. WASHER, LOCK.....	1	
	MS35207-261	. SCREW.....	1	
	2174	. JUMPER, BONDING/BRAID/.....	1	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-25	2	NC-26 AND AFTER
3	NC-35 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-50-20
ADF RECEIVER AND ANTENNA

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

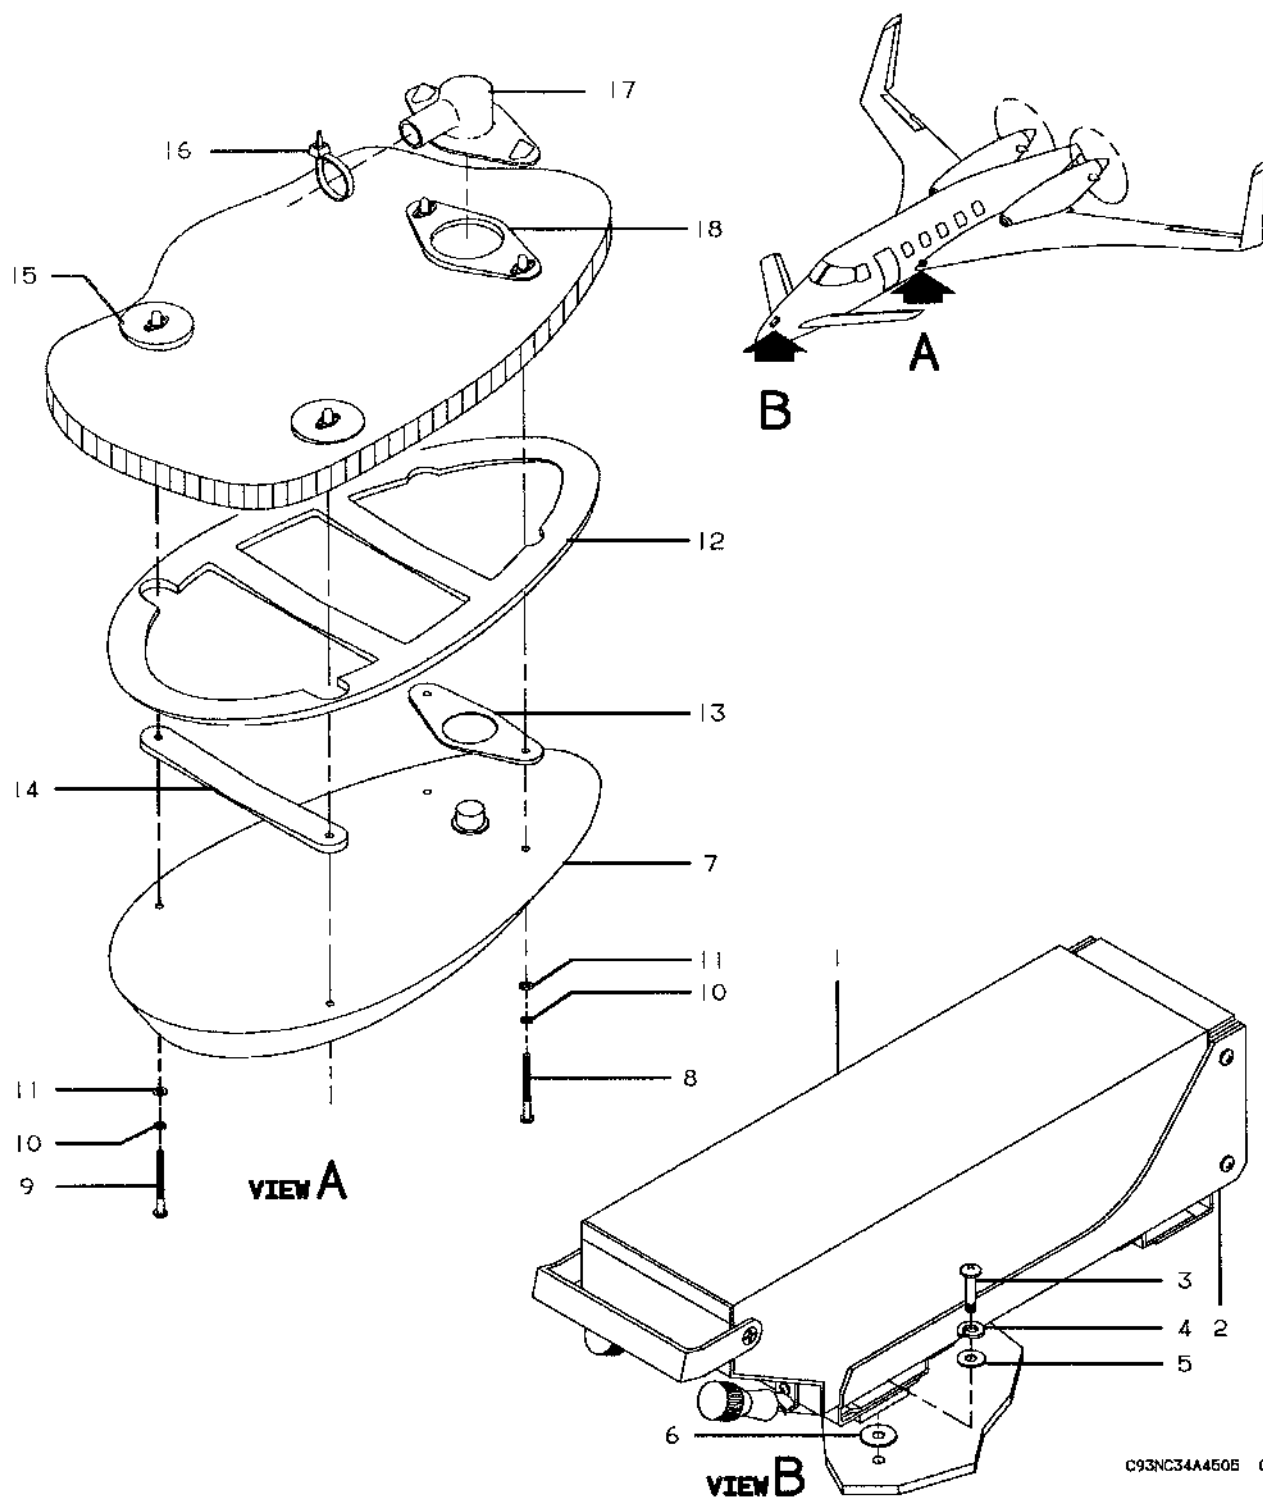

C93NC34A4505 C

FIGURE 50-20.ADF RECEIVER AND ANTENNA

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-20	122-342033-1	ADF INSTL	NP	
- 1	622-7382-001	. RECEIVER/ADF-462/.....	1	
- 2	122-341001-57	. RACK ASSY	1	
		/ATTACHING PARTS/		
- 3	MS35206-246	. SCREW.....	4	
- 4	MS35338-42	. WASHER, LOCK	4	
- 5	AN960JD8L	. WASHER	4	
- 6	AN960JD816	. WASHER	4	
		---★---		
	628-8205-002	.. PLATE ASSY	1	
	324-2604-000	.. SCREW.....	2	
	634-1116-001	.. KEYWAY.....	2	
	634-1117-001	.. RING, CAPTIVE.....	2	
	334-2117-010	.. FASTENER.....	2	
	634-1120-001	.. FLAT SPRING, GROUND.....	2	
	622-5212-003	.. RACK.....	1	
	122-340069-1	. GROUND WIRE TERMINATION INSTL/SEE CHAPTER 23/	NP	
	122-342005-7	ANTENNA INSTL, ADF	NP	
- 7	622-7383-001	. ANTENNA/ANT-462A/.....	1	
		/ATTACHING PARTS/		
- 8	MS27039C1-41	. SCREW.....	2	
- 9	MS27039C1-38	. SCREW.....	2	
- 10	MS35338-43	. WASHER, LOCK	4	
- 11	AN960-10L	. WASHER	4	
		---★---		
- 12	122-340135-13	. GASKET	1	
- 13	122-340040-13	. SPACER	1	
- 14	122-340040-11	. SPACER	1	
- 15	122-340040-49	. DOUBLER ASSY.....	2	
	NAS1474A3	.. NUTPLATE	1	
- 16	MS3367-4-9	. TIE	1	1
- 17	122-380087-3	. BOOT	1	1
- 18	122-340040-45	. DOUBLER ASSY.....	1	
	NAS1474A3	.. NUTPLATE	2	


CODES OF EFFECTIVITY

1 NC-54 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-50-30
DME TRANSCEIVER AND ANTENNA

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

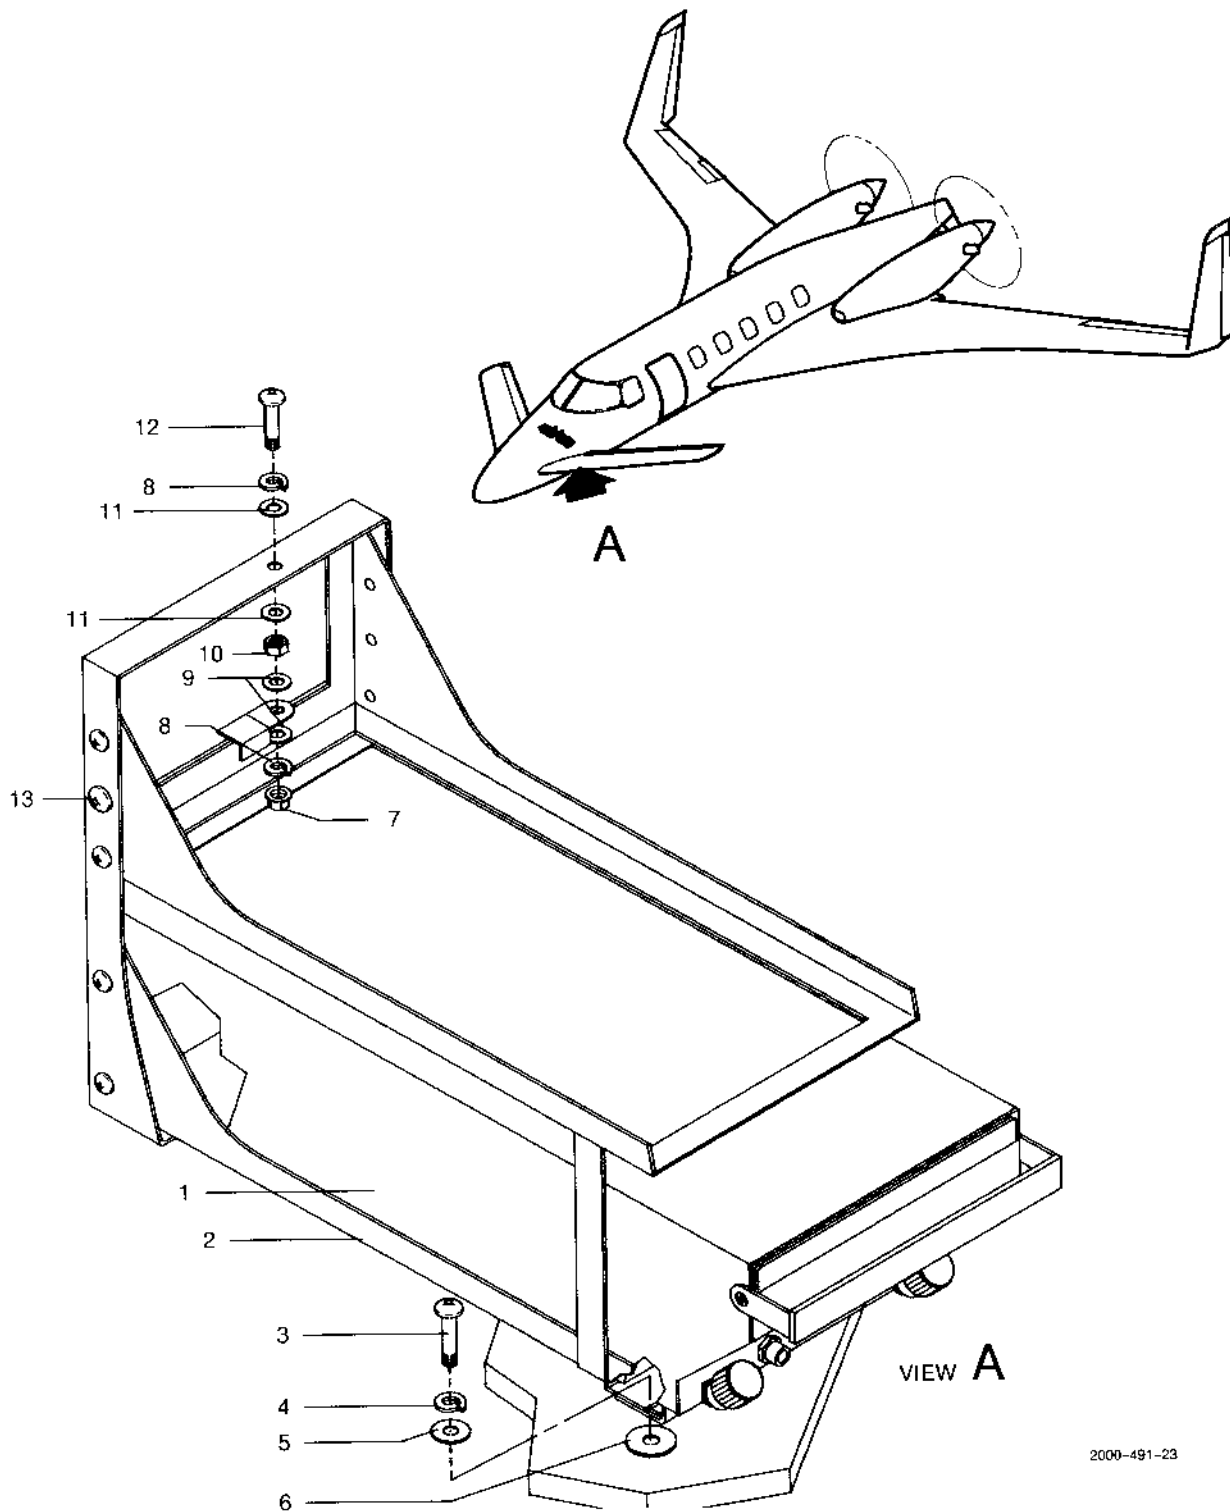



2000-491-23

FIGURE 50-30.DME TRANSCEIVER AND ANTENNA
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-30	122-342034-5	DME INSTL	NP	
- 1	622-7309-001	. TRANSCIVER/DME-442/	1	
- 2	122-341001-49	. RACK ASSY	1	
		/ATTACHING PARTS/		
- 3	MS35206-246	. SCREW	4	
- 4	MS35338-42	. WASHER, LOCK	4	
- 5	AN960JD8L	. WASHER	4	
- 6	AN960JD616	. WASHER, BONDING	4	
		★		
	622-5213-001	. . RACK, UPPER/ADC-850/	1	
	622-5213-003	. . RACK, LOWER/DME-442/	1	
	634-1103-004	. . KIT, MOUNTING	1	
	634-1094-002	. . BRACKET, FRONT	1	
	634-1077-004	. . BRACKET, REAR	1	
	342-1350-170	. . SCREW	2	
	333-0368-000	. . NUT	2	
	343-0187-000	. . SCREW	2	
	333-0381-000	. . NUT	2	
	628-8205-005	. . PLATE ASSY	1	
	324-2604-000	. . SCREW	8	
	634-1116-001	. . KEYWAY	8	
	634-1117-001	. . RING, CAPTIVE	8	
	334-2117-010	. . FASTENER	8	
	634-1120-001	. . FLAT SPRING, GROUND	1	
- 7	130909N28	. . NUT	3	
- 8	MS35338-42	. . WASHER, LOCK	6	
- 9	AN960-8L	. . WASHER	6	
- 10	MS35649-282	. . NUT	3	
- 11	AN960JD8	. . WASHER	6	
- 12	MS35206-247	. . SCREW	1	
- 13	MS35206-248	. . SCREW	2	
	122-340069-1	. GROUND WIRE TERMINATION INSTL/SEE CHAPTER 23/	NP	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

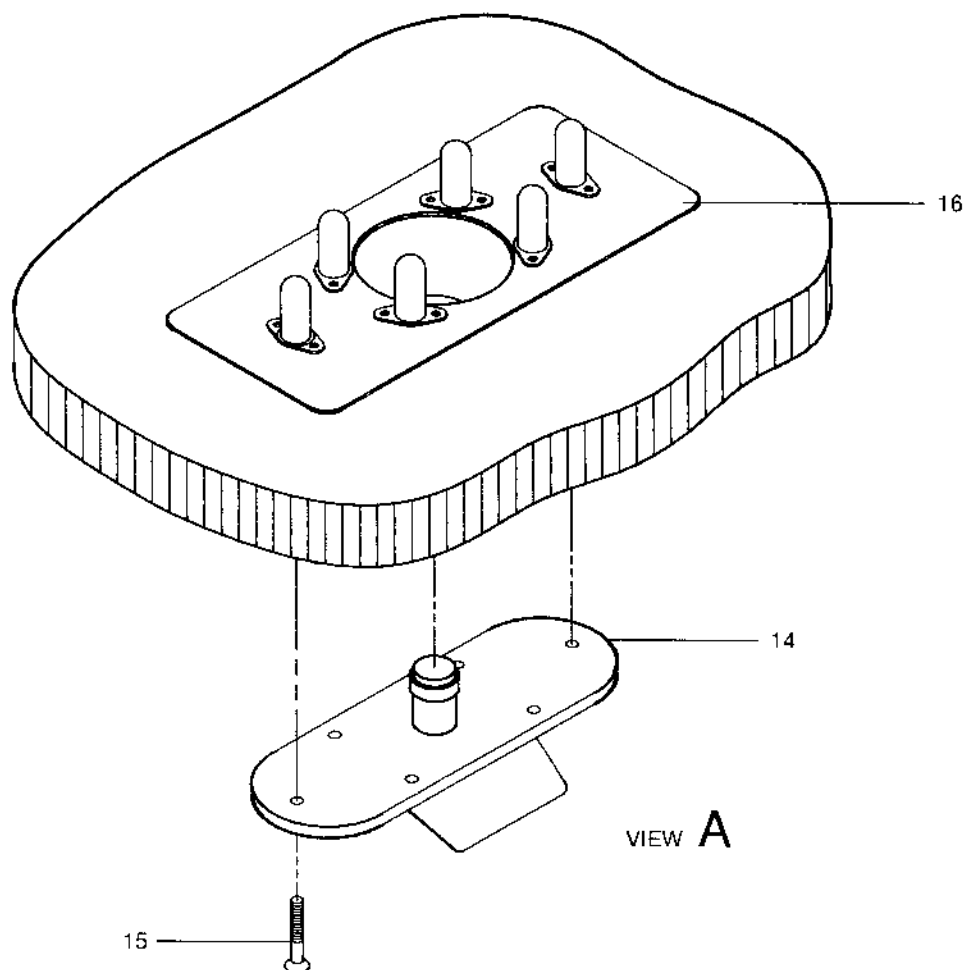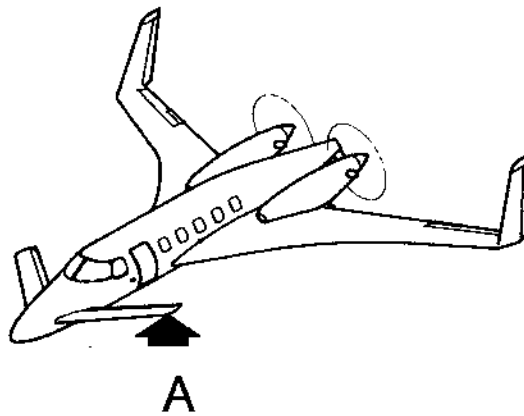

2000-491-24

FIGURE 50-30.DME TRANSCEIVER AND ANTENNA
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-30	122-342010-9	ANTENNA INSTL, DME 1	NP	
	122-342010-11	ANTENNA INSTL, DME 2	NP	
- 14	S65-5366-10L	. ANTENNA.....	1	
		. /ATTACHING PARTS/		
- 15	MS24693S36	. SCREW.....	6	
		—★—		
- 16	122-340039-203	. REINFORCEMENT ASSY	1	
	4660H62	. . NUT, DOME/TWO LUG/	6	
	MS3367-4-9	. TIE	1	1
	122-380087-3	. BOOT	1	1


CODES OF EFFECTIVITY

1 NC-54 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-50-40
TRANSPONDER AND ANTENNA

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

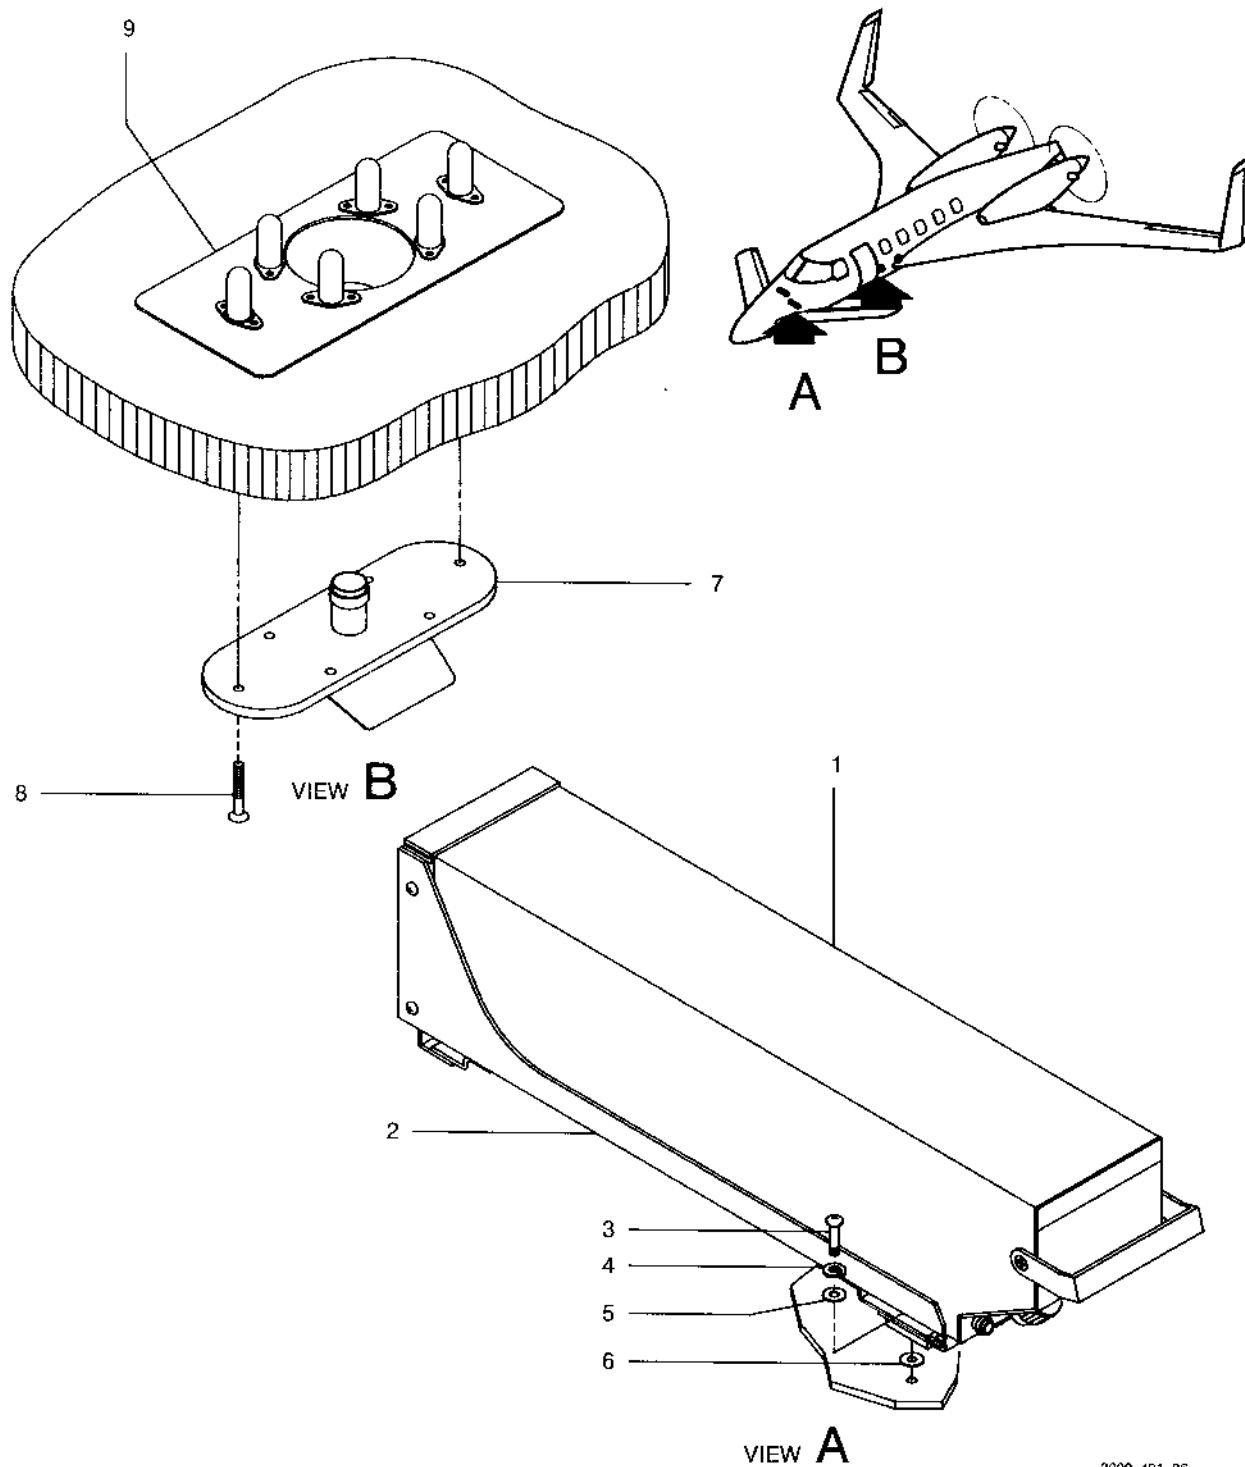

2000-491-26

FIGURE 50-40. TRANSPONDER AND ANTENNA

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-40	122-342035-1	TRANSPONDER INSTL.....	NP	1
	122-342035-9	TRANSPONDER INSTL.....	NP	2
- 1	622-1270-001	. TRANSPONDER/TDR90/.....	1	1
	622-9352-002	. RECEIVER/TDR94D/.....	1	3
	622-9352-003	. RECEIVER/TDR94/.....	1	4
- 2	122-341001-43	. RACK ASSY.....	1	1
	622-9672-003	. TRAY, MOUNTING.....	1	2
		/ATTACHING PARTS/		
- 3	MS35206-246	. SCREW.....	4	1
	324-2604-000	. SCREWLOCK ASSY, FEMALE.....	4	2
- 4	MS35338-42	. WASHER, LOCK.....	4	1
- 5	AN960JD8L	. WASHER.....	4	1
- 6	AN960JD616	. WASHER.....	4	1
		-----★-----		
	628-8205-001	. . PLATE ASSY.....	1	1
	324-2604-000	. . SCREW.....	2	1
	634-1116-001	. . KEYWAY.....	2	1
	634-1117-001	. . RING, CAPTIVE.....	2	1
	334-2117-010	. . FASTENER.....	2	1
	634-1120-001	. . FLAT SPRING, GROUND.....	1	1
	622-5211-003	. . RACK.....	1	1
	D20418-2	. SCREW.....	2	2
	101-344084-17	. SUPPORT.....	1	2
	634-1116-001	. KEYWAY.....	4	2
	334-2117-010	. FASTENER.....	4	2
	634-1117-001	. RETAINER.....	5	2
	628-8657-002	. PLATE, CONNECTOR.....	1	2
	122-340069-1	. GROUND WIRE TERMINATION INSTL/SEE CHAPTER 23/.....	NP	1
	129-340055-1	. PLUG ASSY, JUMPER.....	1	2
	122-342009-9	. ANTENNA INSTL, TRANSPONDER 1.....	NP	
	122-342009-11	. ANTENNA INSTL, TRANSPONDER 2.....	NP	
- 7	S65-5366-10L	. ANTENNA.....	1	
		/ATTACHING PARTS/		
- 8	MS24693C36	. SCREW.....	6	
		-----★-----		
- 9	122-340039-203	. REINFORCEMENT ASSY.....	1	
	4660H62	. . NUT, DOME/TWO LUG/.....	6	
	MS3367-4-9	. TIE.....	1	5
	122-380087-3	. BOOT.....	1	5


CODES OF EFFECTIVITY

1	NC-4 THRU NC-25	2	NC-26 AND AFTER
3	NC-26 THRU NC-37	4	NC-38 AND AFTER
5	NC-54 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-50-50
RADIO ALTIMETER TRANSCEIVER AND ANTENNA

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

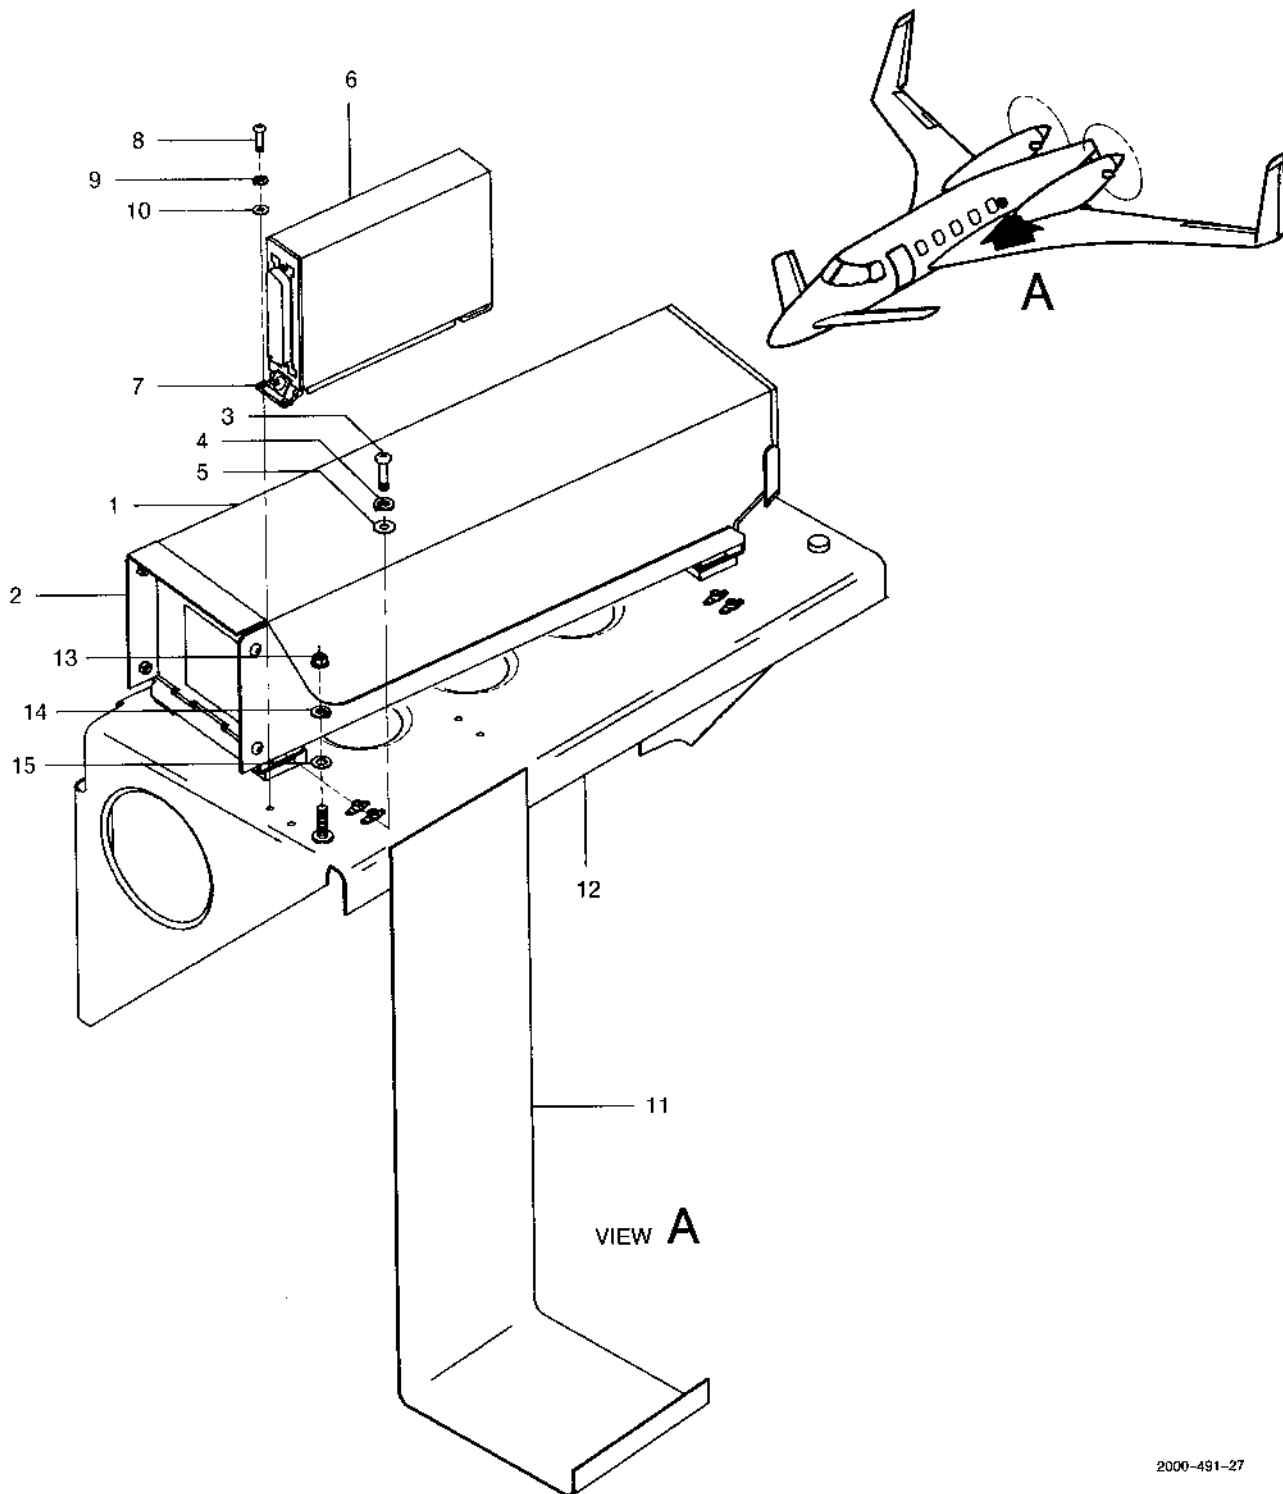



2000-491-27

FIGURE 50-50. RADIO ALTM TRANSCEIVER & ANTENNA
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-50	122-340099-1	TRANSCIVER INSTL, RADIO ALTIMETER	NP	
- 1	622-2855-001	. TRANSCIVER	1	
- 2	122-341001-51	. RACK ASSY	1	
		/ATTACHING PARTS/		
- 3	MS35206-245	. SCREW	4	
- 4	MS35338-42	. WASHER, LOCK	4	
- 5	AN960JD8	. WASHER, BONDING	4	
		-----★-----		
	628-8205-003	. . PLATE ASSY	1	
	324-2604-000	. . SCREW	2	
	634-1116-001	. . KEYWAY	2	
	634-1117-001	. . RING, CAPTIVE	2	
	334-2117-010	. . FASTENER	2	
	634-1120-001	. . FLAT SPRING, GROUND	2	
	622-5212-003	. . RACK	1	
- 6	622-7209-001	. CONVERTER/ORDER 622-7209-002 FOR SPARES/	NP	1
	622-7209-002	. CONVERTER	1	2
- 7	653-9015-001	. RACK	1	
		/ATTACHING PARTS/		
- 8	MS35206-229	. SCREW	4	
- 9	MS35338-41	. WASHER, LOCK	4	
- 10	AN960JD6	. WASHER, BONDING	4	
		-----★-----		
- 11	122-340043-19	. BONDING STRAP	1	
- 12	122-340161-1	. BRACKET ASSY	1	
	122-340070-23	. . SPACER ASSY	1	
	MS21047L08	. . NUTPLATE	4	
	122-340070-11	. . SPACER/LOCATED ON UNDERSIDE OF BRACKET/	3	
	MS21047L06	. . NUTPLATE	6	
	MS21071L06	. . NUTPLATE	4	
	131270-3	. . GROUNDING STUD	2	
- 13	130909N29	. NUT	1	
- 14	MS35338-43	. WASHER, LOCK	1	
- 15	AN960-10L	. WASHER	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

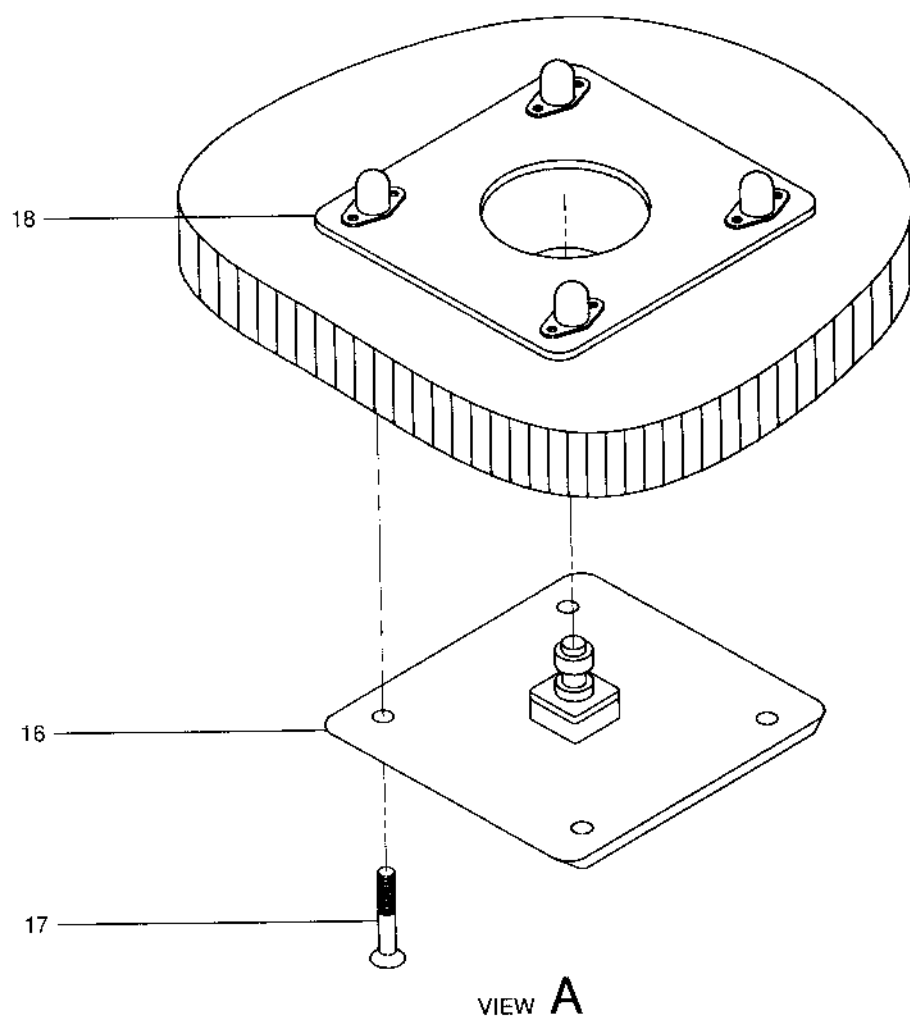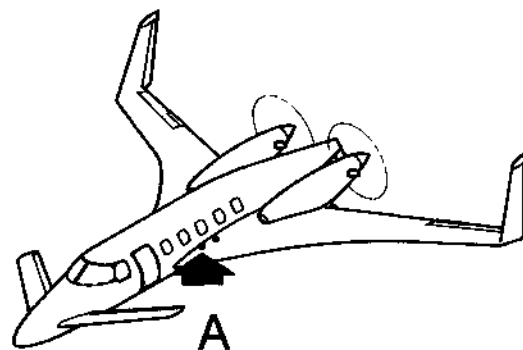

2000-491-28

FIGURE 50-50.RADIO ALTM TRANSCEIVER & ANTENNA
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-50	122-342006-11	ANTENNA INSTL, RADIO ALTIMETER TRANSMITTER.....	NP	
	122-342006-13	ANTENNA INSTL, RADIO ALTIMETER RECEIVER.....	NP	
- 16	S87-2002-14	. ANTENNA.....	1	
		. /ATTACHING PARTS/		
- 17	MS24694C65	. SCREW.....	4	
		—★—		
- 18	122-340039-207	. REINFORCEMENT ASSY.....	1	
	NAS1474A3	. . NUTPLATE.....	4	
	MS3367-4-9	. TIE.....	1	3
	122-380087-3	. BOOT.....	1	3



CODES OF EFFECTIVITY

1	NC-4 THRU NC-24	2	NC-25 AND AFTER
3	NC-54 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-50-60
RADIO TUNING ADAPTER
NC-4 THRU NC-25

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

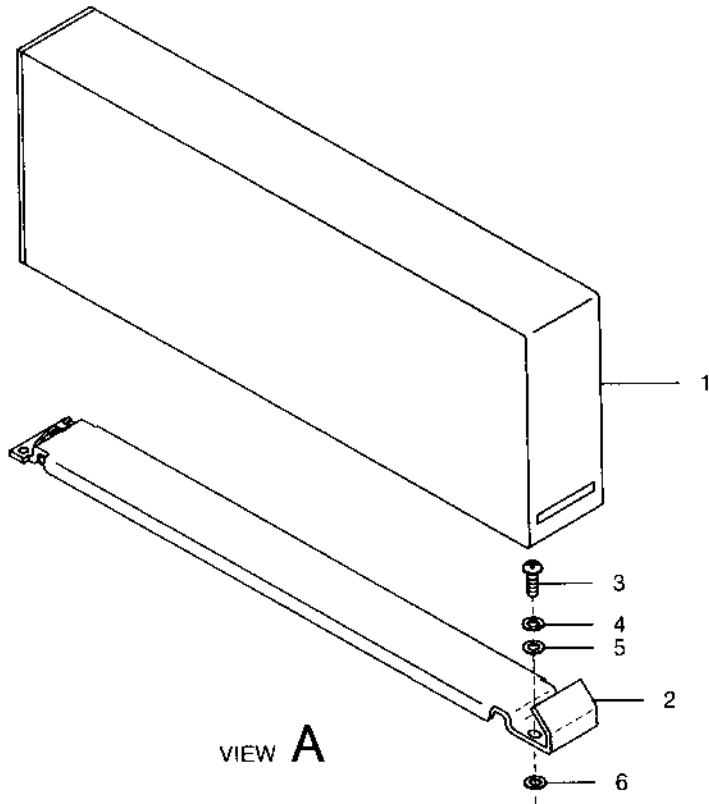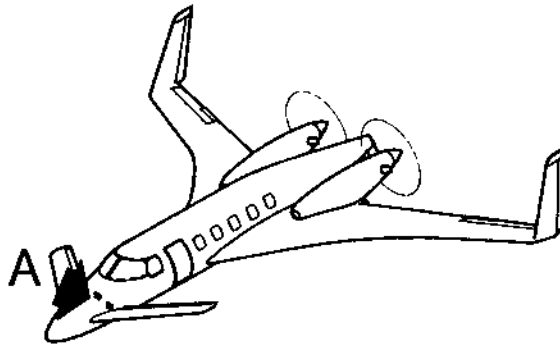

2900-491-32

FIGURE 50-60.RADIO TUNING ADAPTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-60	122-342046-1	ADAPTER INSTL, RADIO TUNING.....	NP	1
- 1	622-7346-001	. ADAPTER, RADIO TUNING/CAD-870/	1	1
- 2	653-9015-002	. RACK.....	1	1
		/ATTACHING PARTS/		
- 3	MS35206-228	. SCREW.....	4	
- 4	MS35338-41	. WASHER, LOCK	4	
- 5	AN960JD6L	. WASHER	4	
- 6	AN960JD516	. WASHER	4	
		---★---		
	122-340069-1	. GROUND WIRE TERMINATION INSTL/SEE CHAPTER 23/	NP	1

CODES OF EFFECTIVITY

1 NC-4 THRU NC-25

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 35-00-00 OXYGEN

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
35-00-00	1	11/04/94	LIST OF PAGES & TABLE OF CONTENTS
35-00-01	1	02/25/94	OXYGEN SYSTEM INSTALLATION.....
35-00-01	2	02/25/94	NC-4 THRU NC-20
35-00-01	3	02/25/94	
35-00-01	4	02/25/94	
35-00-01	5	02/25/94	
35-00-01	6	02/25/94	
35-00-01	7	11/04/94	
35-00-01	8	02/25/94	
35-00-01	9	11/04/94	
35-00-02	1	02/25/94	OXYGEN SYSTEM INSTALLATION.....
35-00-02	2	02/25/94	NC-21 AND AFTER
35-00-02	3	11/04/94	
35-00-02	4	02/25/94	
35-00-02	5	02/25/94	
35-00-02	6	02/25/94	
35-00-02	7	11/04/94	
35-00-02	8	02/25/94	
35-00-02	9	11/04/94	
35-00-02	10	02/25/94	
35-00-02	11	11/04/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

35-00-01
OXYGEN SYSTEM INSTALLATION
NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

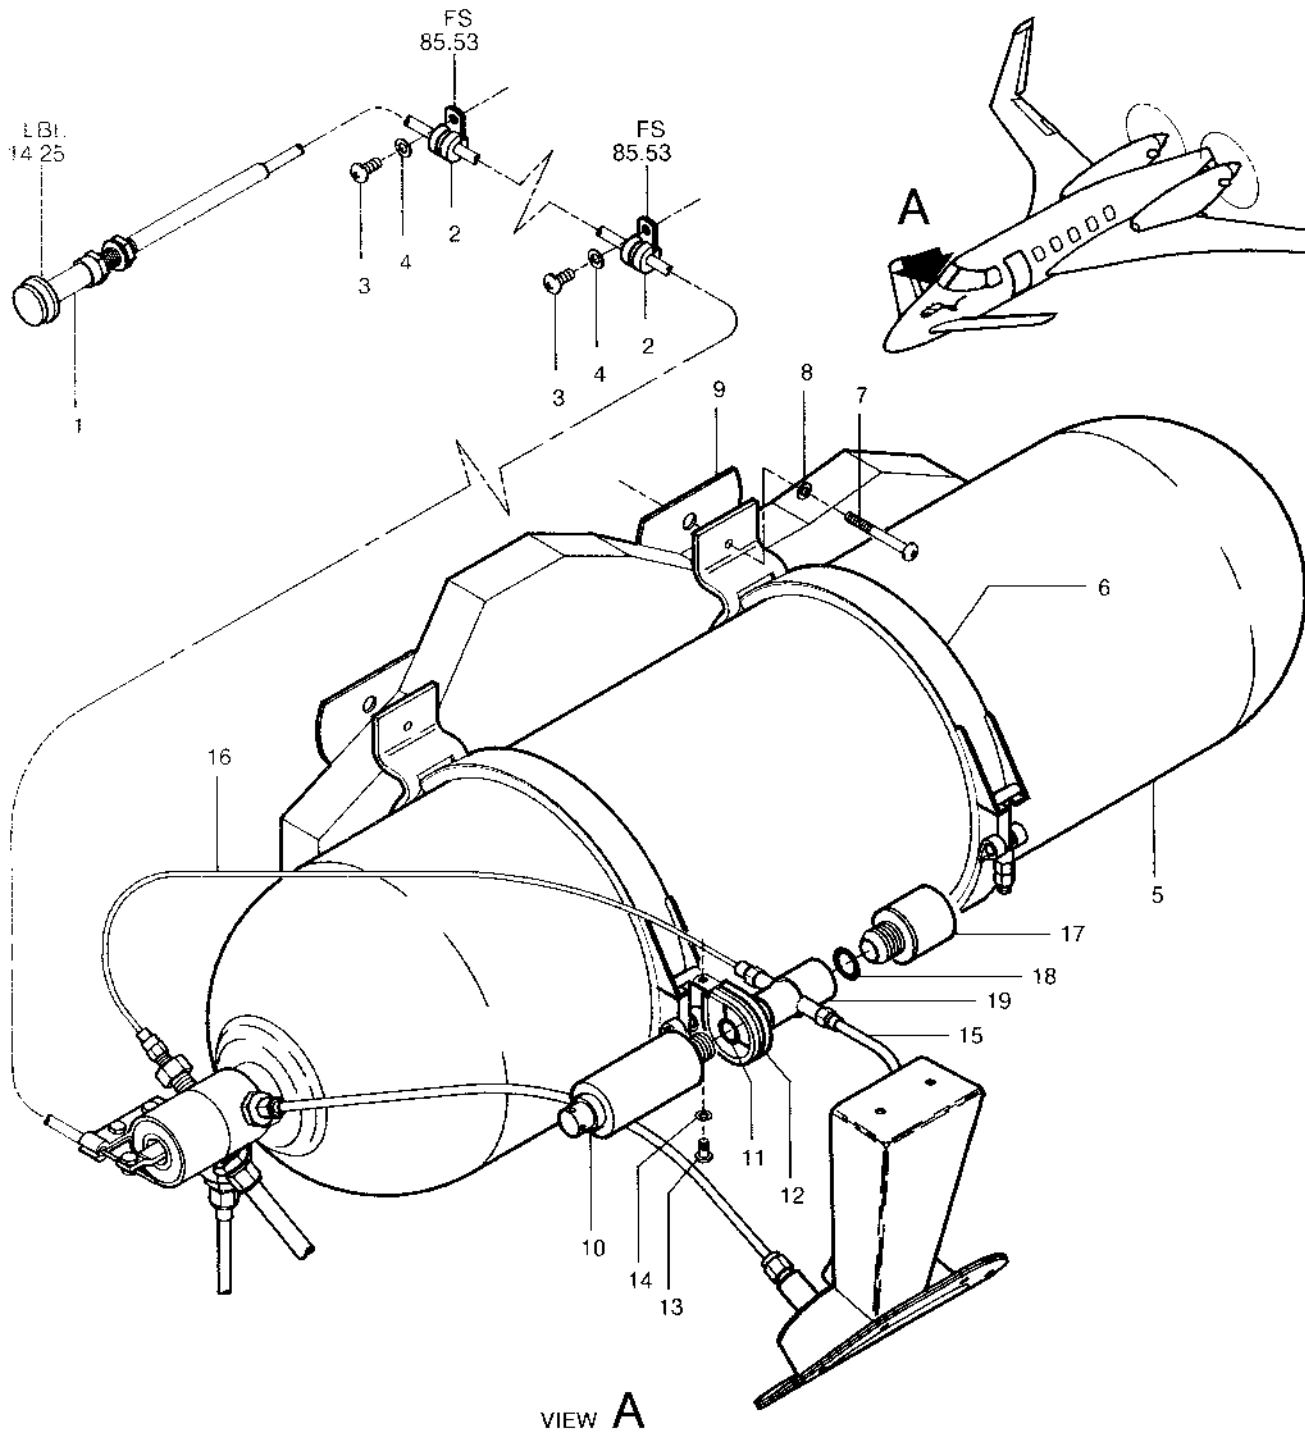

2000-341 01

FIGURE 00-01.OXYGEN SYSTEM INSTALLATION
/SHEET 1 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-01	122-560000-3	OXYGEN SYSTEM INSTL.....	NP	1
	122-560009-9	.. OXYGEN SYSTEM INSTL, NOSE/77 CU FT/STANDARD/.....	NP	1
	122-560009-11	.. OXYGEN SYSTEM INSTL, NOSE/115 CU FT/OPTIONAL/.....	NP	1
- 1	122-384061-1	.. CONTROL ASSY.....	1	1
- 2	MS21919WDG4	.. CLAMP.....	3	1
		.. /ATTACHING PARTS/		
- 3	MS27039DD1-08	.. SCREW.....	1	
- 4	AN960JD10L	.. WASHER.....	1	
		---★---		
- 5	101-384207-5	.. OXYGEN CYLINDER/77 CU FT/.....	1	1
	101-384207-7	.. OXYGEN CYLINDER/115 CU FT/.....	1	1
- 6	122-384072-1	.. BRACKET ASSY/77 CU FT/.....	2	1
	122-384072-3	.. BRACKET ASSY/115 CU FT/.....	2	1
		.. /ATTACHING PARTS/		
- 7	MS27039C1-21	.. SCREW.....	2	
- 8	AN960JD10L	.. WASHER.....	2	
		---★---		
- 9	122-560024-1	.. DOUBLER ASSY, LOWER.....	2	1
	122-560024-5	.. DOUBLER ASSY, UPPER.....	2	1
	130909N33	.. NUTPLATE.....	1	1
- 10	122-382008-3	.. TRANSDUCER, OXYGEN QUANTITY PRESSURE.....	1	1
- 11	MS28778-4	.. PACKING, PREFORMED.....	1	1
- 12	MS21919WDG24	.. CLAMP, TRANSDUCER MOUNTING/77 CU FT/.....	1	1
	MS21919WDG20	.. CLAMP, TRANSDUCER MOUNTING/115 CU FT/.....	1	1
		.. /ATTACHING PARTS/		
- 13	MS27039DD0809	.. SCREW.....	1	
- 14	AN960PD8L	.. WASHER.....	1	
		---★---		
- 15	122-560015-1	.. TUBE ASSY.....	1	1
- 16	101-380051-3	.. TUBE ASSY, CAPILLARY.....	1	1
- 17	101-384034-3	.. SWITCH, OXYGEN LOW PRESSURE.....	1	1
- 18	MS28778-6	.. PACKING, PREFORMED.....	1	1
- 19	122-560038-1	.. CONNECTOR ASSY.....	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

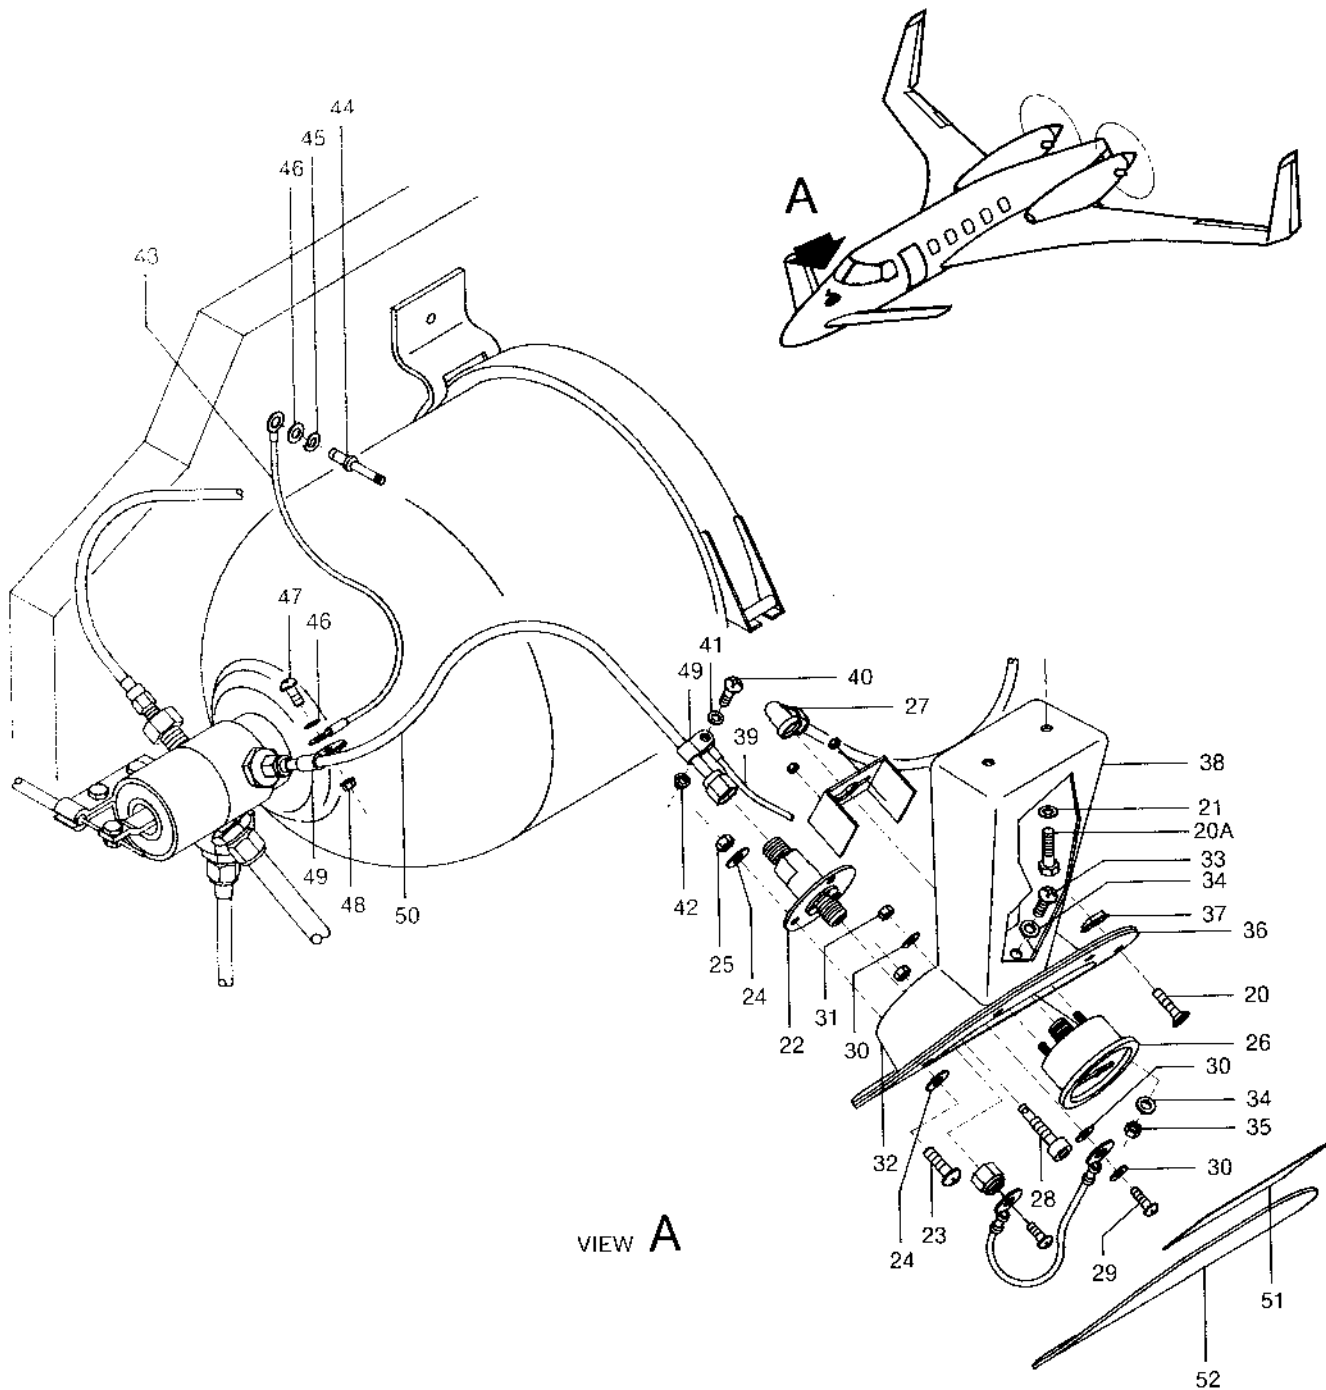


FIGURE 00-01.OXYGEN SYSTEM INSTALLATION
/SHEET 2 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-01	122-560018-1	.. BRACKET ASSY, FILLER	1	1
		.. /ATTACHING PARTS/		
- 20	MS24894S49	.. SCREW	4	
- 20A	AN3DD3A	.. BOLT	2	
- 21	AN960PD10L	.. WASHER	2	
		-----★-----		
- 22	101-384212-3	.. VALVE, OXYGEN FILL	1	1
		.. /ATTACHING PARTS/		
- 23	MS27039-1-07	.. SCREW	3	
- 24	AN960PD10L	.. WASHER	6	
- 25	MS21083D3	.. NUT	3	
		-----★-----		
- 26	99-384042-1	.. GAGE, OXYGEN PRESSURE/DIAL/	1	1
- 27	300-B-2	.. ELBOW	1	1
- 28	109	.. JACK, BANANA/GROUNDING/	1	1
	MS35338-44	.. WASHER, LOCK	1	1
- 29	MS35206-22B	.. SCREW/SAFETY STRAP TO PAN/	1	1
- 30	AN960PD6L	.. WASHER	3	1
- 31	MS21042L08	.. NUT	1	1
- 32	122-560018-5	.. PAN ASSY	1	1
		.. /ATTACHING PARTS/		
- 33	MS27039-0809	.. SCREW	2	
- 34	AN960PD8L	.. WASHER	4	
- 35	MS21083D08	.. NUT	2	
		-----★-----		
- 36	122-560018-9	.. SEAL	1	1
- 37	MS21060L3	.. NUTPLATE	10	1
- 38	122-560018-11	.. SUPPORT	1	1
- 39	MS25083-2BC6	.. JUMPER, BONDING/GROUND JACK TO FILL TUBE/	1	1
		.. /SEE NOTE/		
		.. /ATTACHING PARTS/		
- 40	MS35207-262	.. SCREW	1	
- 41	AN960-10L	.. WASHER	2	
- 42	130909N29	.. NUT	1	
		-----★-----		
- 43	MS25083-2BB9	.. JUMPER, BONDING/FILL TUBE TO GROUND STRIP/	1	1
		.. /77 CU FT/SEE NOTE/		
	MS25083-2BB12	.. JUMPER, BONDING/FILL TUBE TO GROUND STRIP/	1	1
		.. /115 CU FT/SEE NOTE/		
		.. /ATTACHING PARTS/		
- 44	MS21141P	.. RIVET	1	
- 45	MS35338-43	.. WASHER, LOCK	1	
- 46	AN960-10L	.. WASHER	2	
- 47	MS35207-262	.. SCREW	1	
- 48	130909N29	.. NUT	1	
		-----★-----		
- 49	AN735D3	.. CLAMP	2	1
- 50	122-560013-5	.. TUBE ASSY/CYLINDER TO FILLER/77 CU FT/	1	1
	122-560013-1	.. TUBE ASSY/CYLINDER TO FILLER/115 CU FT/	1	1
- 51	101-560096-7	.. DECAL, OXYGEN/INSIDE ACCESS DOOR/	1	1
- 52	50-560022-3	.. DECAL, OXYGEN SERVICE LOCATION	1	1

NOTE USE MS25083-XXXX BONDING JUMPER WITH
SHORTEST LEAD POSSIBLE. SECURE
AN735-XX CLAMP WITH MS35207-XXX
SCREW, AN960-10L WASHER, MS35338-43
LOCKWASHER AND MS21042L3 NUT.

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

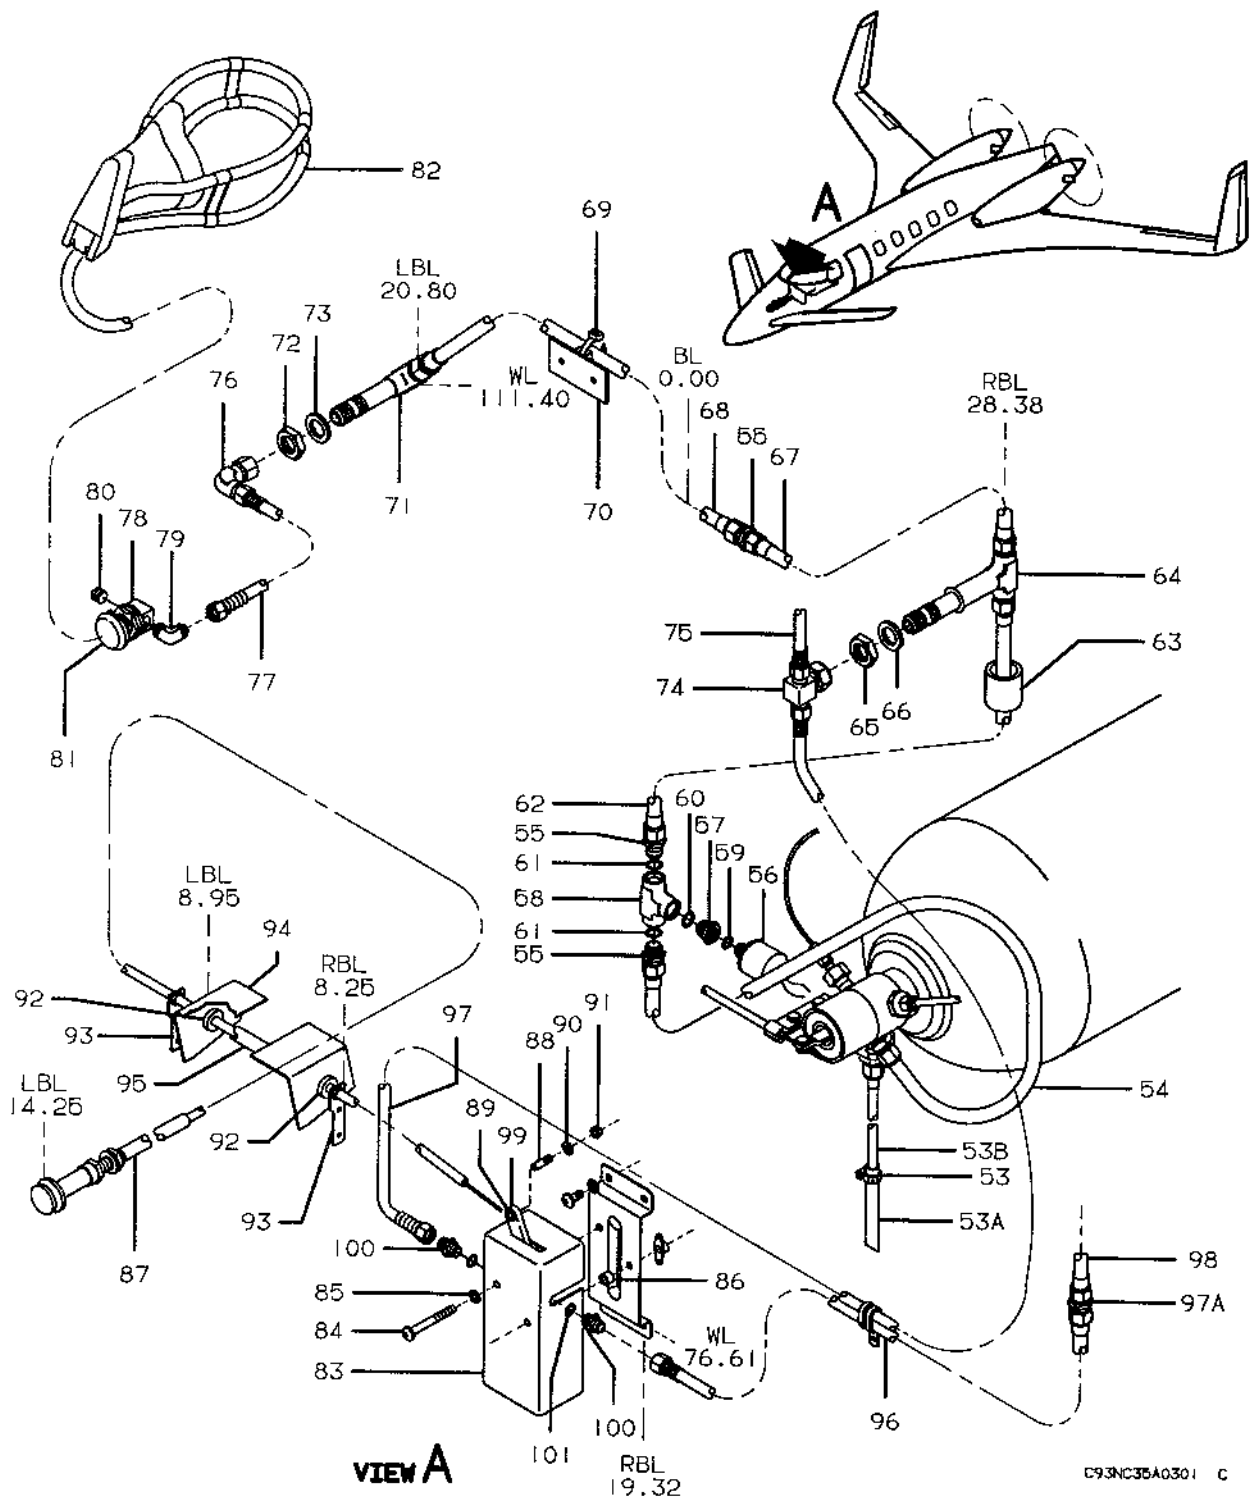


FIGURE 00-01.OXYGEN SYSTEM INSTALLATION
/SHEET 3 OF 4 SHEETS/

Deechcraft

STARSHIP 1

ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-01	- 53	GS4	.. CLAMP	1	1
	- 53A	122-560009-7	.. TUBE ASSY	1	1
	- 53B	122-560040-1	.. TUBE ASSY/77 CU FT/	1	1
		122-560039-1	.. TUBE ASSY/115 CU FT/	1	1
	- 54	R 122-560014-1	.. TUBE ASSY, HIGH PRESSURE OXYGEN	NP	1
			/ORDER 122-560035-1 FOR SPARES/		
		R 122-560035-1	.. TUBE ASSY, HIGH PRESSURE OXYGEN	1	1
	- 55	AN815-6D	.. UNION	3	1
	- 56	101-384034-1	.. SWITCH, ARM PRESSURE	1	1
	- 57	AN893-2D	.. REDUCER	1	1
	- 58	AN938-6D	.. TEE	1	1
	- 59	MS28778-6	.. PACKING, PREFORMED	1	1
	- 60	MS28778-4	.. PACKING, PREFORMED	1	1
	- 61	MS28778-5	.. PACKING, PREFORMED	2	1
	- 62	R 122-560016-1	.. TUBE ASSY, HIGH PRESSURE OXYGEN	NP	1
			/ORDER 122-560034-1 FOR SPARES/		
		R 122-560034-1	.. TUBE ASSY, HIGH PRESSURE OXYGEN	1	1
	- 63	122-560009-5	.. TUBE	2	1
	- 64	122-384017-1	.. TEE, BULKHEAD	1	1
	- 65	R AN924-6D	.. NUT	1	
	- 66	R AN960PD916L	.. WASHER	2	
	- 67	R 122-560041-1	.. TUBE ASSY, PILOT OXYGEN	NP	1
			/ORDER 122-560027-1 FOR SPARES/		
		R 122-560027-1	.. TUBE ASSY, PILOT OXYGEN	1	1
	- 68	R 122-560042-1	.. TUBE ASSY, PILOT OXYGEN	NP	1
			/ORDER 122-560026-1 FOR SPARES/		
		R 122-560026-1	.. TUBE ASSY, PILOT OXYGEN	1	1
	- 69	MS3367-5-9	.. CABLE TIE	3	1
	- 70	TM2S6	.. CABLE TIE MTG BASE	3	1
	- 71	122-384015-1	.. ELBOW	1	1
	- 72	R AN924-6D	.. NUT	1	
	- 73	R AN960PD916L	.. WASHER	2	
		122-560030-1	.. OXYGEN SYSTEM INSTL, CABIN	NP	1
	- 74	203102-6-6S	.. ADAPTER	1	1
	- 75	122-560047-1	.. TUBE ASSY/COPILOT TO OXYGEN OUTLET/	1	1
	- 76	MS51521B6	.. ELBOW	1	1
	- 77	122-560048-1	.. TUBE ASSY/PILOT/	1	1
	- 78	101-384226-1	.. VALVE, OXYGEN OUTLET	2	1
	- 79	AN822-6-2D	.. ELBOW	2	1
	- 80	MS20913-1D	.. PLUG	2	1
	- 81	MXP129-2	.. LID ASSY, COCKPIT OXYGEN OUTLET	2	1
	- 82	101-384220-7	.. OXYGEN MASK, CREW	2	1
	- 83	122-560032-3	.. COVER, SHUTOFF VALVE	1	1
			/ATTACHING PARTS/		
	- 84	MS35207-269	.. SCREW	2	
	- 85	AN960-10L	.. WASHER	2	
	- 86	NAS43DD3-12	.. SPACER	2	1
	- 87	122-384061-9	.. CONTROL CABLE	1	1
	- 88	35-550520-3	.. PIN	1	1
	- 89	100801D4-0218	.. BUSHING	1	1
	- 90	AN960-10L	.. WASHER	1	1
	- 91	130909N29	.. NUT	1	1
	- 92	MS35489-7	.. GROMMET	2	1
	- 93	122-560030-5	.. SUPPORT	2	1
	- 94	122-560020-7	.. CLOSURE, LH	1	1
		122-560020-8	.. CLOSURE, RH	1	1
	- 95	131545SG6-016-0	.. SLEEVE, FIRE	1	1
	- 96	R 122-560044-1	.. TUBE ASSY	1	1
	- 97	R 122-560043-1	.. TUBE ASSY	1	1
	- 97A	AN815-5D	.. UNION	1	1
	- 98	122-560045-1	.. TUBE ASSY	1	1
	- 99	101-384032-7	.. VALVE, CABIN OXYGEN SHUTOFF	1	1
	- 100	AN919-7D	.. REDUCER	2	1
	- 101	MS28778-5	.. PACKING, PREFORMED	2	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

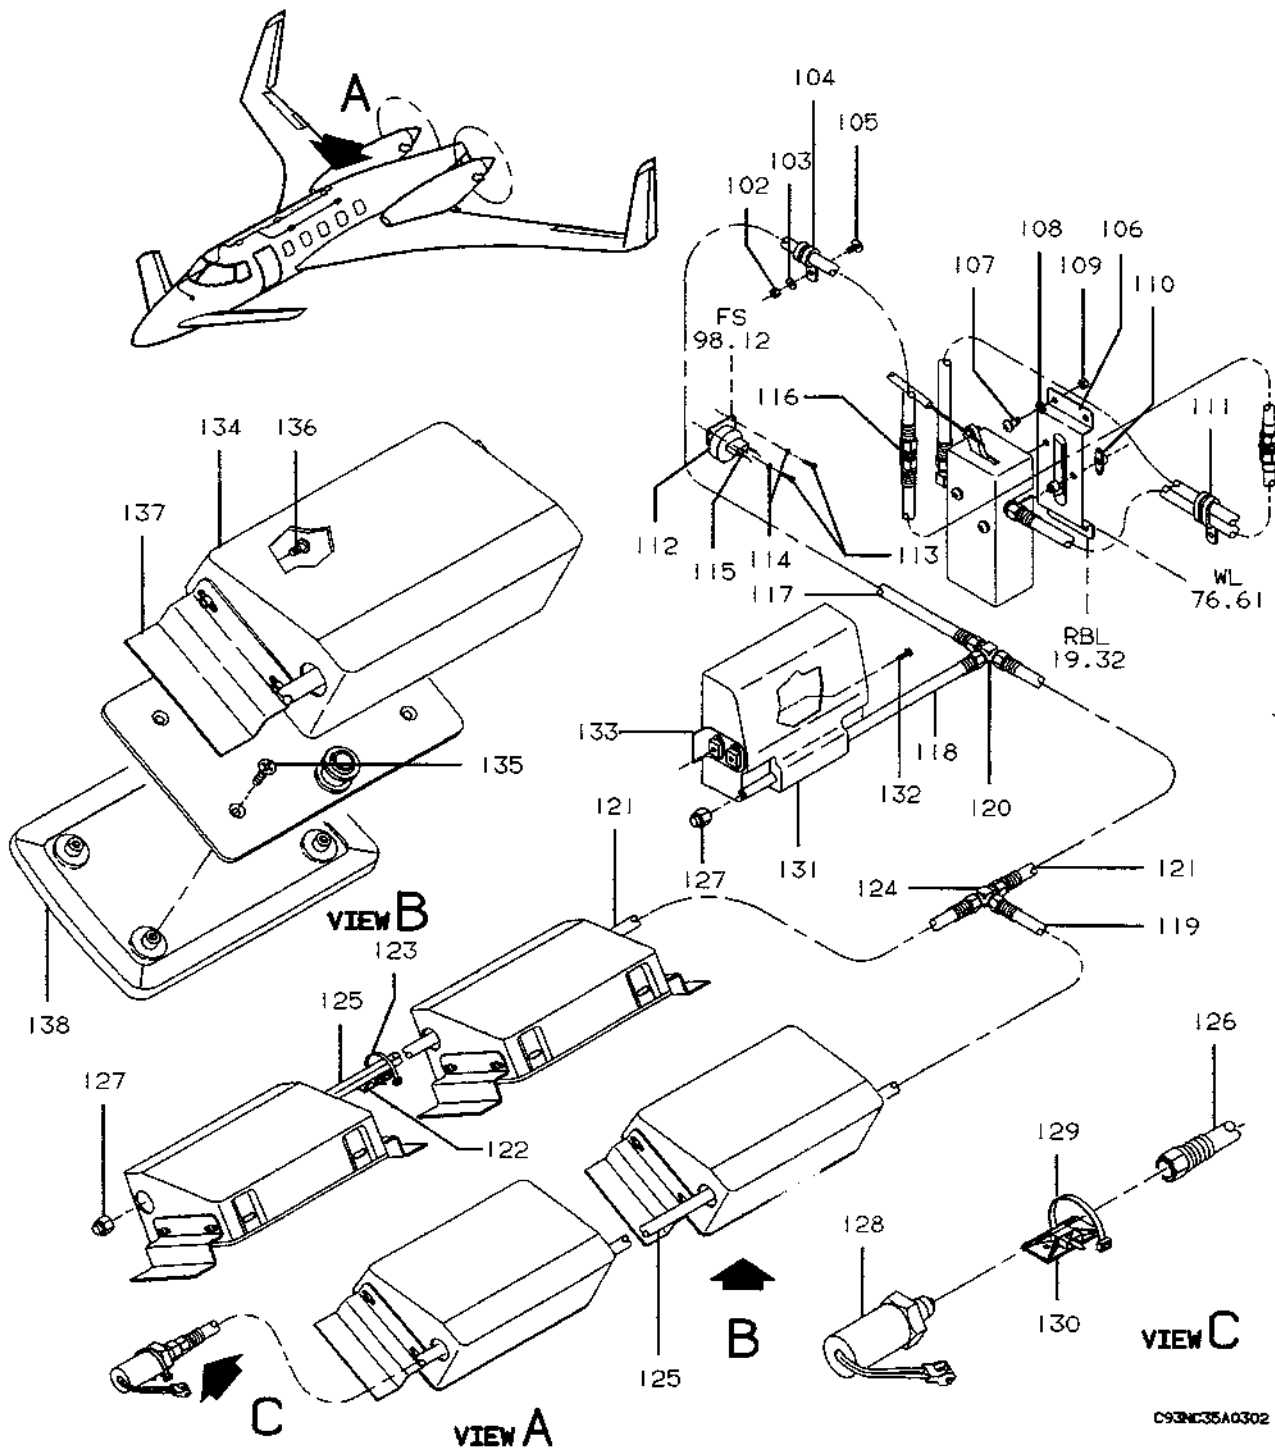


FIGURE 00-01.OXYGEN SYSTEM INSTALLATION
/SHEET 4 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-01	-102	130909N29	.. NUT	6	1
	-103	AN960-10L	.. WASHER	6	1
	-104	MS21919WDG7	.. CLAMP	6	1
	-105	132131-3-4	.. STUD	6	1
	-106	122-560031-5	.. BRACKET ASSY	1	1
			/ATTACHING PARTS/		
	-107	MS27039-1-25	.. SCREW	4	
	-108	AN960-10	.. WASHER	8	
	-109	130909N29	.. NUT	4	
			---★---		
	-110	130909N33	.. NUTPLATE	2	1
	-111	444-6-2-8	.. CLAMP	1	1
	-112	101-384028-1	.. SWITCH, CABIN ALTITUDE PRESSURE	1	1
			/ATTACHING PARTS/		
	-113	MS35206-233	.. SCREW	2	
	-114	AN960-6L	.. WASHER	2	
			---★---		
	-115	60939-2	.. RECEPTACLE, PIN	2	1
	-116	AN815-5D	.. UNION	1	1
	-117	122-560046-19	.. HOSE ASSY	1	1
	-118	101-380049-13	.. HOSE ASSY	1	1
	-119	122-560046-1	.. HOSE ASSY	1	1
	-120	AN824-5D	.. TEE	1	1
	-121	122-560046-1	.. HOSE ASSY	3	1
	-122	ABMM-A	.. MOUNT, TIE	6	1
	-123	MS3367-5-9	.. STRAP	6	1
	-124	AN824-5D	.. TEE	1	1
	-125	122-560046-5	.. HOSE ASSY	2	1
	-126	101-380049-15	.. HOSE ASSY	1	1
	-127	AN929-5	.. CAP ASSY	2	1
	-128	101-384034-1	.. SWITCH, OXYGEN PRESSURE SENSE	1	1
	-129	PLT2S	.. CABLE TIE	1	1
	-130	SMS-A15	.. MOUNT	1	1
		122-530107-7	OXYGEN PROVISIONS, CABIN BAGGAGE	1	1
	-131	R 122-382051-13	.. CONTAINER ASSY, OXYGEN MASK	1	1
			/ATTACHING PARTS/		
	-132	MS24693S25	.. SCREW	4	
			---★---		
	-133	122-530107-3	.. BRACKET ASSY	2	1
		MS21060-06	.. NUTPLATE	2	1
		122-530246-1	OXYGEN BOX LID INSTALLATION	NP	1
	-134	122-380071-1	.. CONTAINER ASSY, DUAL AUTO-DEPLOY OXYGEN	4	1
	-135	MS24693S4	.. SCREW	16	1
	-136	MS35206-228	.. SCREW	16	1
	-137	122-530246-11	.. SUPPORT ASSY	8	1
		MS21069L06K	.. NUTPLATE	8	1
		122-530138-22	.. BRACKET ASSY/4 EA REQ. FOR OPT HDLNR/	3	1
	-138	122-530246-3	.. LID, OXYGEN CONTAINER	4	2
		122-530246-19	.. LID, OXYGEN CONTAINER	4	3


CODES OF EFFECTIVITY

1	NC-4 THRU NC-20	2	NC-4 THRU NC-14
3	NC-15 THRU NC-20		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

35-00-02
OXYGEN SYSTEM INSTALLATION
NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

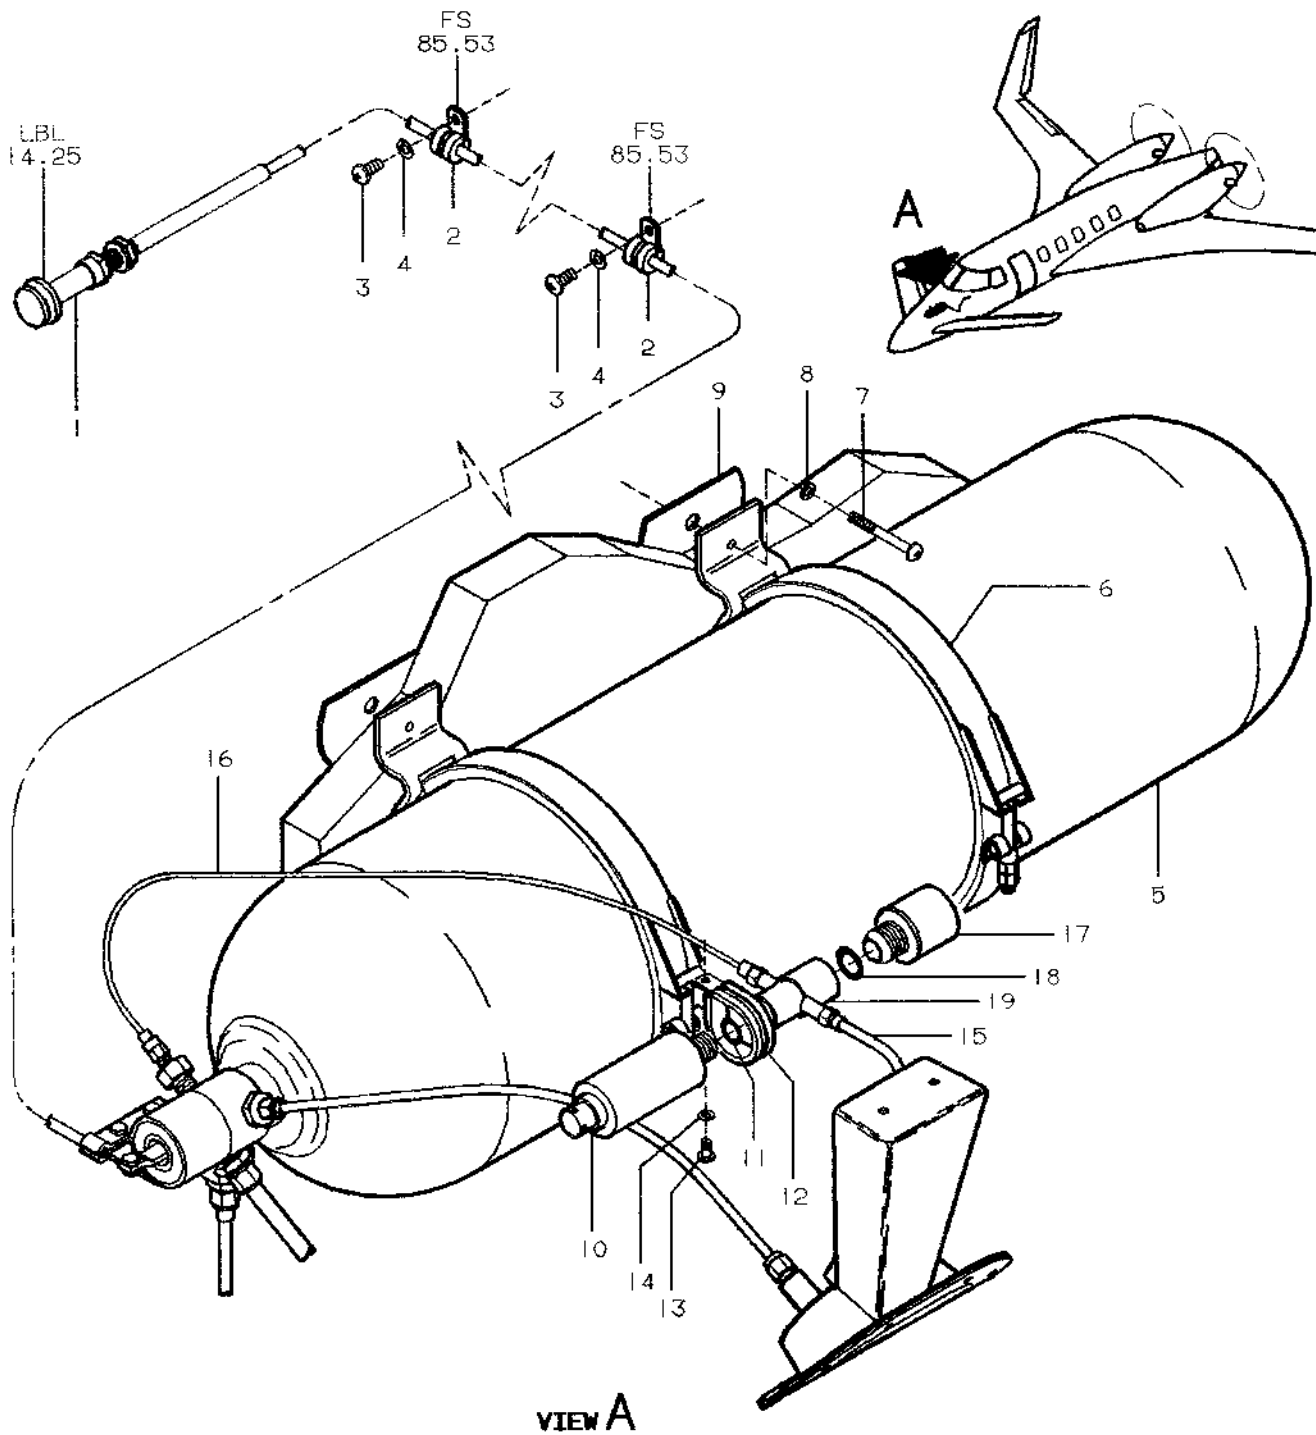


2000-341-01

FIGURE 00-02.OXYGEN SYSTEM INSTALLATION
/SHEET 1 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-02	122-560000-3	OXYGEN SYSTEM INSTL.....	NP	1
	122-560009-9	.. OXYGEN SYSTEM INSTL, NOSE/77 CU FT/STANDARD/.....	NP	1
	122-560009-11	.. OXYGEN SYSTEM INSTL, NOSE/115 CU FT/OPTIONAL/	NP	1
- 1	122-384061-1	.. CONTROL ASSY.....	1	1
- 2	MS21919WDG4	.. CLAMP	3	1
		.. /ATTACHING PARTS/		
- 3	MS27039DD1-08	.. SCREW.....	1	
- 4	AN960JD10L	.. WASHER.....	1	
		---★---		
- 5	101-384207-5	.. OXYGEN CYLINDER/77 CU FT/.....	1	1
	101-384207-7	.. OXYGEN CYLINDER/115 CU FT/.....	1	1
- 6	122-384072-1	.. BRACKET ASSY/77 CU FT/.....	2	1
	122-384072-3	.. BRACKET ASSY/115 CU FT/.....	2	1
		.. /ATTACHING PARTS/		
- 7	MS27039C1-21	.. SCREW.....	2	
- 8	AN960JD10L	.. WASHER.....	2	
		---★---		
- 9	122-560024-1	.. DOUBLER ASSY, LOWER.....	2	1
	122-560024-5	.. DOUBLER ASSY, UPPER.....	2	1
	130909N33	.. NUTPLATE	1	1
-10	122-382008-3	.. TRANSDUCER, OXYGEN QUANTITY PRESSURE	1	5
R	122-382008-3	.. TRANSDUCER, OXYGEN QUANTITY PRESSURE	1	6
		.. /ALTERNATE FOR 122-382008-5/		
	122-382008-5	.. TRANSDUCER, OXYGEN QUALITY PRESSURE	1	6
		.. /ALTERNATE FOR 122-382008-3/		
-11	MS28778-4	.. PACKING, PREFORMED	1	1
-12	R MS21919WDG24	.. CLAMP, TRANSDUCER MOUNTING	1	5
		.. /USED WITH 122-382008-3/		
	R MS21919WDG24	.. CLAMP, TRANSDUCER MOUNTING	1	6
		.. /USED WITH 122-382008-3/		
	R MS21919WDG20	.. CLAMP, TRANSDUCER MOUNTING	1	6
		.. /USED WITH 122-382008-5/		
		.. /ATTACHING PARTS/		
-13	MS27039-1-10	.. SCREW.....	1	
-14	AN960-10L	.. WASHER.....	1	
		---★---		
-15	122-560015-1	.. TUBE ASSY.....	1	1
-16	101-380051-3	.. TUBE ASSY, CAPILLARY.....	1	1
-17	101-384034-3	.. SWITCH, OXYGEN LOW PRESSURE	1	1
-18	MS28778-6	.. PACKING, PREFORMED	1	1
-19	122-560038-1	.. CONNECTOR ASSY	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

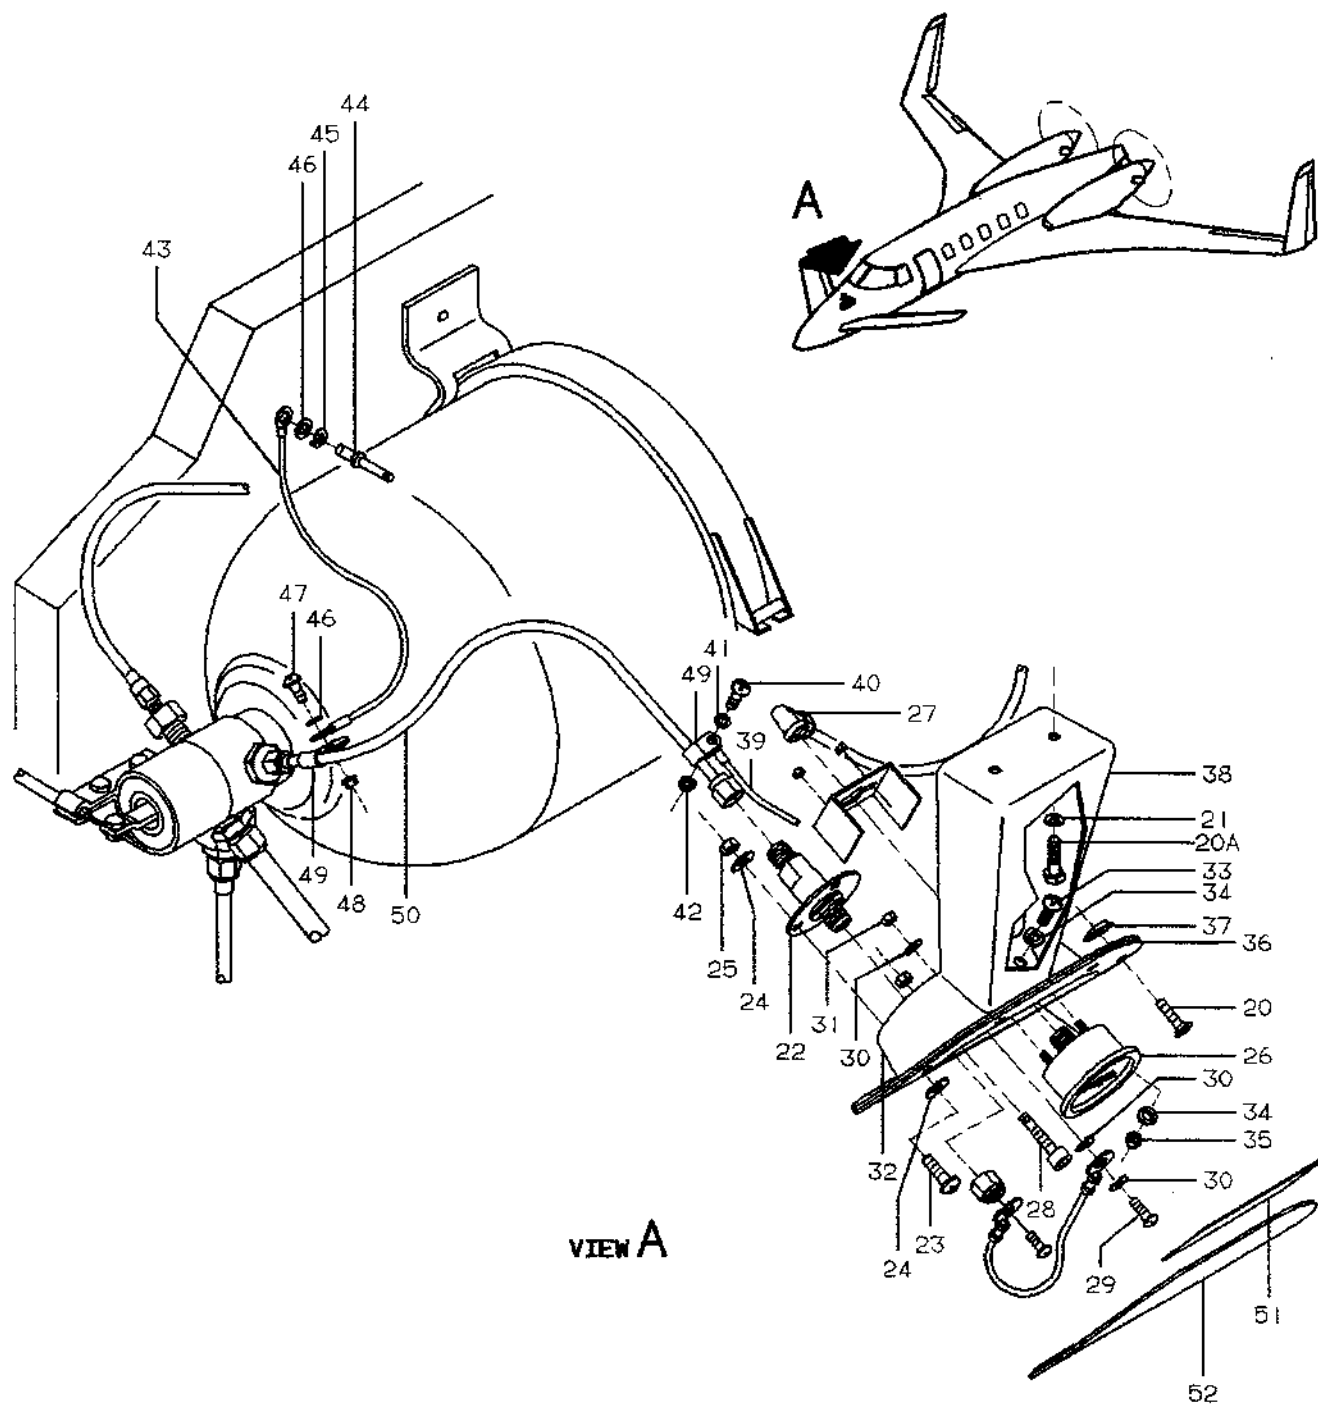

2000-341-02

FIGURE 00-02.OXYGEN SYSTEM INSTALLATION
/SHEET 2 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-02	122-560018-1	.. BRACKET ASSY, FILLER	1	1
		.. /ATTACHING PARTS/		
-20	MS24694S49	.. SCREW	4	
-20A	AN3DD3A	.. BOLT	2	
-21	AN960PD10L	.. WASHER	2	
		---★---		
-22	101-384212-3	.. VALVE, OXYGEN FILL	1	1
		.. /ATTACHING PARTS/		
-23	MS27039-1-07	.. SCREW	3	
-24	AN960PD10L	.. WASHER	6	
-25	MS21083D3	.. NUT	3	
		---★---		
-26	99-384042-1	.. GAGE, OXYGEN PRESSURE/DIAL/	1	1
-27	300-8-2	.. ELBOW	1	1
-28	109	.. JACK, BANANA/GROUNDING/	1	1
	MS35338-44	.. WASHER, LOCK	1	1
-29	MS35206-228	.. SCREW/SAFETY STRAP TO PAN/	1	1
-30	AN960PD6L	.. WASHER	3	1
-31	MS21042L06	.. NUT	1	1
-32	122-560018-5	.. PAN ASSY	1	1
		.. /ATTACHING PARTS/		
-33	MS27039-0809	.. SCREW	2	
-34	AN960PD8L	.. WASHER	4	
-35	MS21083D08	.. NUT	2	
		---★---		
-36	122-560018-9	.. SEAL	1	1
-37	MS21060L3	.. NUTPLATE	10	1
-38	122-530018-11	.. SUPPORT	1	1
-39	MS25083-2BC6	.. JUMPER, BONDING/GROUND JACK TO FILL TUBE/	1	1
		.. /SEE NOTE/		
		.. /ATTACHING PARTS/		
-40	MS35207-262	.. SCREW	1	
-41	AN960-10L	.. WASHER	2	
-42	130909N29	.. NUT	1	
		---★---		
-43	MS25083-2BB9	.. JUMPER, BONDING/FILL TUBE TO GROUND STRIP/	1	1
		.. /77 CU FT/SEE NOTE/		
	MS25083-2BB12	.. JUMPER, BONDING/FILL TUBE TO GROUND STRIP/	1	1
		.. /115 CU FT/SEE NOTE/		
		.. /ATTACHING PARTS/		
-44	MS21141P	.. RIVET	1	
-45	MS35338-43	.. WASHER, LOCK	1	
-46	AN960-10L	.. WASHER	2	
-47	MS35207-262	.. SCREW	1	
-48	130909N29	.. NUT	1	
		---★---		
-49	AN735-3	.. CLAMP	2	1
-50	122-560013-5	.. TUBE ASSY/CYLINDER TO FILLER/77 CU FT/	1	1
	122-560013-1	.. TUBE ASSY/CYLINDER TO FILLER/115 CU FT/	1	1
-51	101-560096-7	.. DECAL, OXYGEN/INSIDE ACCESS DOOR/	1	1
-52	50-560022-3	.. DECAL, OXYGEN SERVICE LOCATION	1	1

NOTE USE MS25083-XXXX BONDING JUMPER WITH
SHORTEST LEAD POSSIBLE. SECURE
AN735-XX CLAMP WITH MS35207-XXX
SCREW, AN960-10L WASHER, MS35338-43
LOCKWASHER AND MS21042L3 NUT.

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

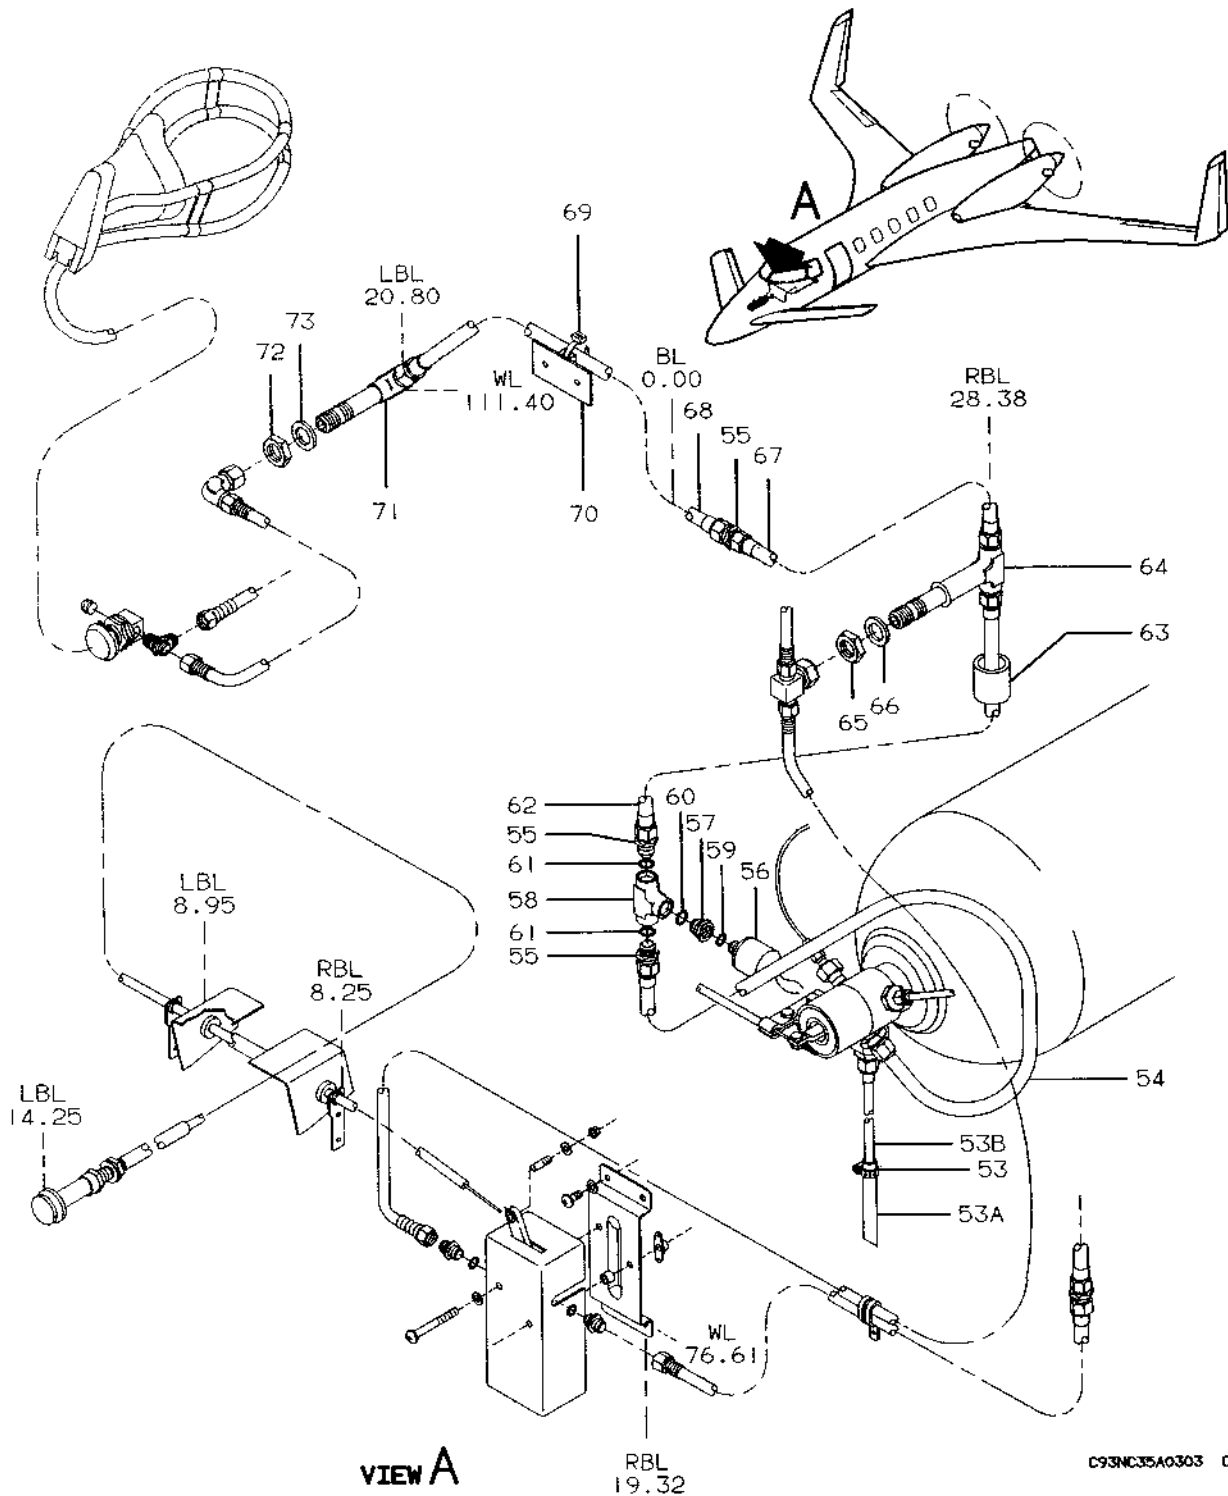


FIGURE 00-02.OXYGEN SYSTEM INSTALLATION
/SHEET 3 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-02 - 53	GS4	.. CLAMP	1	1
- 53A	122-560009-7	.. TUBE ASSY	1	1
- 53B	122-560040-1	.. TUBE ASSY/77 CU FT/	1	1
	122-560039-1	.. TUBE ASSY/115 CU FT/	1	1
- 54	122-560014-1	.. TUBE ASSY, HIGH PRESSURE OXYGEN	NP	3
		/ORDER 122-560035-1 FOR SPARES/		
	122-560035-1	.. TUBE ASSY, HIGH PRESSURE	1	4
- 55	AN815-6D	.. UNION	3	1
- 56	101-384034-1	.. SWITCH, ARM PRESSURE	1	1
- 57	AN893-2D	.. REDUCER	1	1
- 58	AN938-6D	.. TEE	1	1
- 59	MS28778-6	.. PACKING, PREFORMED	1	1
- 60	MS28778-4	.. PACKING, PREFORMED	1	1
- 61	MS28778-5	.. PACKING, PREFORMED	2	1
- 62	122-560016-1	.. TUBE ASSY, HIGH PRESSURE OXYGEN	NP	3
		/ORDER 122-560034-1 FOR SPARES/		
	122-560034-1	.. TUBE ASSY, HIGH PRESSURE OXYGEN	1	4
- 63	122-560009-5	.. TUBE	2	1
- 64	122-384017-1	.. TEE, BULKHEAD	1	1
- 65	AN924-6D	.. NUT	1	
- 66	AN960PD916L	.. WASHER	2	
- 67	R 122-530041-1	.. TUBE ASSY, PILOT OXYGEN	NP	3
		/ORDER 122-560027-1 FOR SPARES/		
	R 122-560027-1	.. TUBE ASSY, PILOT OXYGEN	1	4
- 68	R 122-530042-1	.. TUBE ASSY, PILOT OXYGEN	NP	3
		/ORDER 122-560026-1 FOR SPARES/		
	R 122-560026-1	.. TUBE ASSY, PILOT OXYGEN	1	4
- 69	MS3367-5-9	.. CABLE TIE	3	1
- 70	TM256	.. CABLE TIE MTG BASE	3	1
- 71	122-384015-1	.. ELBOW	1	1
- 72	AN924-6D	.. NUT	1	
- 73	AN960PD916L	.. WASHER	2	

ILLUSTRATED PARTS CATALOG




/SHEET 4 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-02	122-560030-7	. OXYGEN SYSTEM INSTL, CABIN	NP	1
- 74	203102-6-6S	. . ADAPTER	2	1
- 75	122-560047-1	. . TUBE ASSY/COPILOT TO OXYGEN OUTLET/	1	1
- 76	MS51521B6	. . ELBOW	1	1
- 77	122-560048-1	. . TUBE ASSY/PILOT/.....	1	1
- 78	101-384226-1	. . VALVE, OXYGEN OUTLET	2	1
- 79	AN822-6-2D	. . ELBOW	2	1
- 80	MS20913-1D	. . PLUG	2	1
- 81	MXP129-2	. . LID ASSY, COCKPIT OXYGEN OUTLET	2	1
- 82	101-384220-9	. . MASK, CREW OXYGEN/SPARES FOR 101-384220-5	2	1
		AND 101-384220-7/		
- 83	122-560032-3	. . COVER, SHUTOFF VALVE	1	1
- 84	MS35207-269	. . SCREW	2	1
- 85	AN960-10L	. . WASHER	2	1
- 86	NAS43DD3-12	. . SPACER	2	1
- 86A	MS21042L3	. . NUT	1	2
- 86B	AN960-10L	. . WASHER	1	2
- 86C	MS35207-263	. . SCREW	1	2
- 86D	MS21919DG7	. . CLAMP	1	2
- 86E	122-420029-71	. . SUPPORT, CONTROL CABLE	1	2
- 87	122-384061-9	. . CABLE, CONTROL	1	1
- 88	35-550520-3	. . PIN	1	1
- 89	100801D4-0218	. . BUSHING	1	1
- 90	AN960-10L	. . WASHER	1	1
- 91	130909N29	. . NUT	1	1
- 92	MS35489-7	. . GROMMET	2	1
- 93	122-560030-5	. . SUPPORT	2	1
- 94	122-560020-7	. . CLOSURE, LH	1	7
	122-560020-9	. . CLOSURE, LH	1	8
	122-560020-8	. . CLOSURE, RH	1	7
	122-560020-10	. . CLOSURE, RH	1	8
- 95	131545G6-016-0	. . SLEEVE, FIRE	1	1
- 96	R 122-560044-1	. . TUBE ASSY	1	1
- 97	R 122-560043-1	. . TUBE ASSY	1	1
- 97A	AN815-5D	. . UNION	1	1
- 98	122-560045-1	. . TUBE ASSY	1	1
- 99	101-384032-7	. . VALVE, CABIN OXYGEN SHUTOFF	1	1
- 100	AN919-7D	. . REDUCER	2	1
- 101	MS28778-5	. . PACKING, PREFORMED	2	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

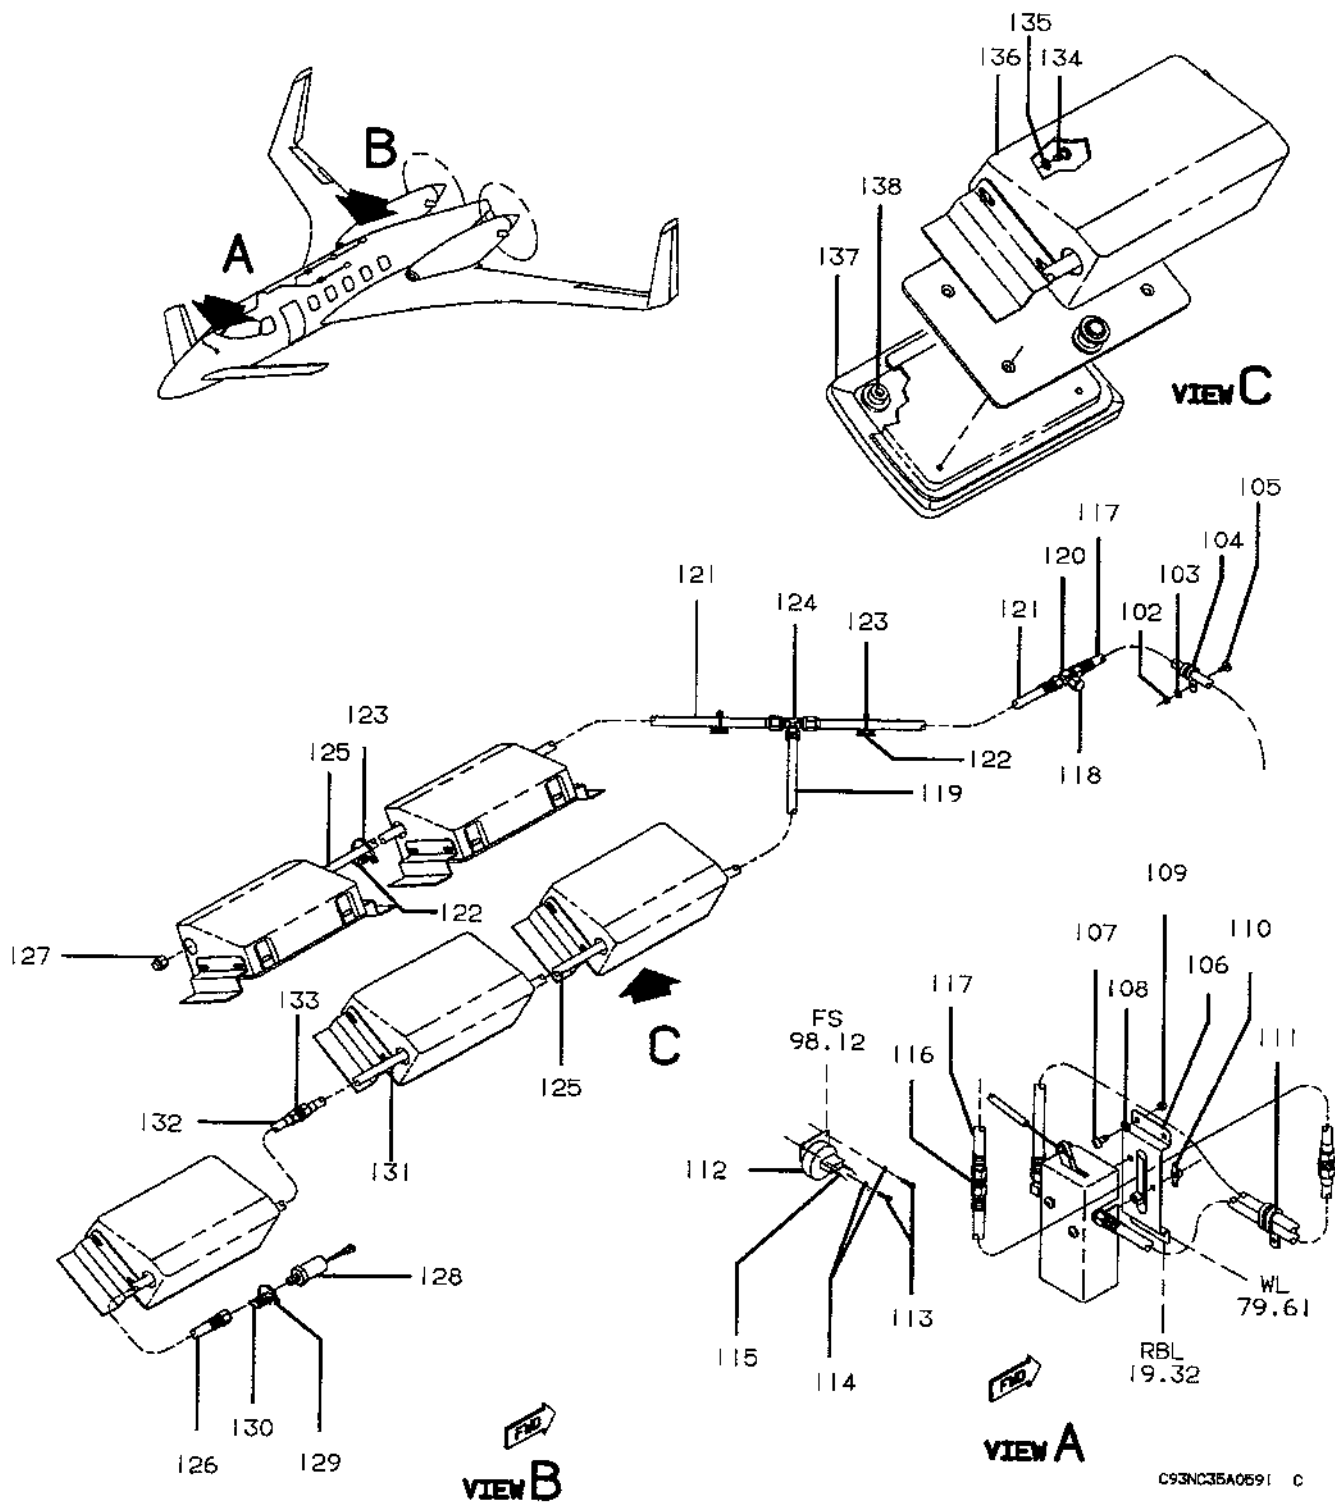

C93NC35A0591 C

FIGURE 00-02.OXYGEN SYSTEM INSTALLATION
/SHEET 5 OF 5 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-02 -102	130909N29	.. NUT	6	1
-103	AN960-10L	.. WASHER	6	1
-104	MS21919DG7	.. CLAMP	6	1
-105	132131-3-4	.. STUD	6	1
-106	122-560031-5	.. BRACKET ASSY	1	1
		.. /ATTACHING PARTS/		
-107	MS27039-1-25	.. SCREW	4	
-108	AN960-10	.. WASHER	8	
-109	130909N29	.. NUT	4	
		★		
-110	130909N33	.. NUTPLATE	2	1
-111	444-6-2-8	.. CLAMP	1	1
-112	101-384028-1	.. SWITCH, CABIN ALTITUDE PRESSURE	1	1
		.. /ATTACHING PARTS/		
-113	MS35206-233	.. SCREW	2	
-114	AN960-6L	.. WASHER	2	
		★		
-115	60939-2	.. RECEPTACLE, PIN	2	1
-116	AN815-5D	.. UNION	1	1
-117	122-560046-19	.. HOSE ASSY	1	1
-118	AN929-5	.. CAP ASSY	1	1
-119	122-560046-1	.. HOSE ASSY	1	1
-120	AN824-5D	.. TEE	1	1
-121	122-560046-1	.. HOSE ASSY	3	1
-122	ABMM-A	.. MOUNT, TIE	6	1
-123	MS3367-5-9	.. STRAP	6	1
-124	AN824-5D	.. TEE	1	1
-125	122-560046-21	.. HOSE ASSY	2	1
-126	101-380049-15	.. HOSE ASSY	1	1
-127	AN929-5	.. CAP ASSY	1	1
-128	101-384034-1	.. SWITCH, OXYGEN PRESSURE SENSER	1	1
-129	PLT2S	.. CABLE TIE	1	1
-130	SMS-A15	.. MOUNT	1	1
-131	122-560046-9	.. HOSE	1	1
-132	122-560036-1	.. TUBE	1	1
-133	AN919-7D	.. REDUCER	1	1
-134 R	MS35206-228	.. SCREW/WITHOUT KIT 122-5025-3 INSTALLED/	16	7
	AN525-832R7	.. SCREW/WITH KIT 122-5025-3 INSTALLED/	20	7
	AN525-832R7	.. SCREW	20	8
-135 R	AN960-6L	.. WASHER/WITHOUT KIT 122-5025-3 INSTALLED/	16	7
-136 R	122-380071-1	.. CONTAINER ASSY, AUTO-DEPLOY OXYGEN	5	7
		.. /WITHOUT KIT 122-5025-3 INSTALLED/		
	R 122-380071-3	.. CONTAINER ASSY, AUTO-DEPLOY OXYGEN	5	7
		.. /WITH KIT 122-5025-3 INSTALLED/		
	R 122-380071-3	.. CONTAINER ASSY, AUTO-DEPLOY OXYGEN	5	8
-137 R	122-530246-19	LID ASSY, OXYGEN BOX/CABIN/	4	7
	R 122-530246-31	LID ASSY, OXYGEN BOX/CABIN/	4	8
	R 122-530246-21	LID ASSY, OXYGEN BOX/TOILET COMPARTMENT/	1	7
	R 122-530246-33	LID ASSY, OXYGEN BOX/TOILET COMPARTMENT/	1	8
		.. /ATTACHING PARTS/		
	R MS24693S4	.. SCREW	4	
		★		
-138 R	NAS43DD5-14	.. SPACER	4	1

CODES OF EFFECTIVITY

1	NC-21 AND AFTER	2	NC-29 AND AFTER
3	NC-21 THRU NC-38	4	NC-39 AND AFTER
5	NC-21 THRU NC-50	6	NC-51 AND AFTER
7	NC-21 THRU NC-40	8	NC-41 AND AFTER


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 36-00-00 PNEUMATIC

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
36-00-00	1	02/25/94	LIST OF PAGES & TABLE OF CONTENTS
36-00-10	1	02/25/94	PRESSURIZATION SYSTEM.....
36-00-10	2	02/25/94	
36-00-10	3	02/25/94	
36-00-10	4	02/25/94	
36-00-10	5	02/25/94	
36-00-10	6	02/25/94	
36-00-10	7	02/25/94	
36-00-10	8	02/25/94	
36-00-10	9	02/25/94	
36-00-10	10	02/25/94	
36-00-10	11	02/25/94	
36-00-20	1	02/25/94	WING PRESSURIZATION SYSTEM
36-00-20	2	02/25/94	
36-00-20	3	02/25/94	
36-00-20	4	02/25/94	
36-00-20	5	02/25/94	
36-10-00	1	02/25/94	ENGINE COMPARTMENT BLEED AIR.....
36-10-00	2	02/25/94	
36-10-00	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

36-00-10
PRESSURIZATION SYSTEM

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

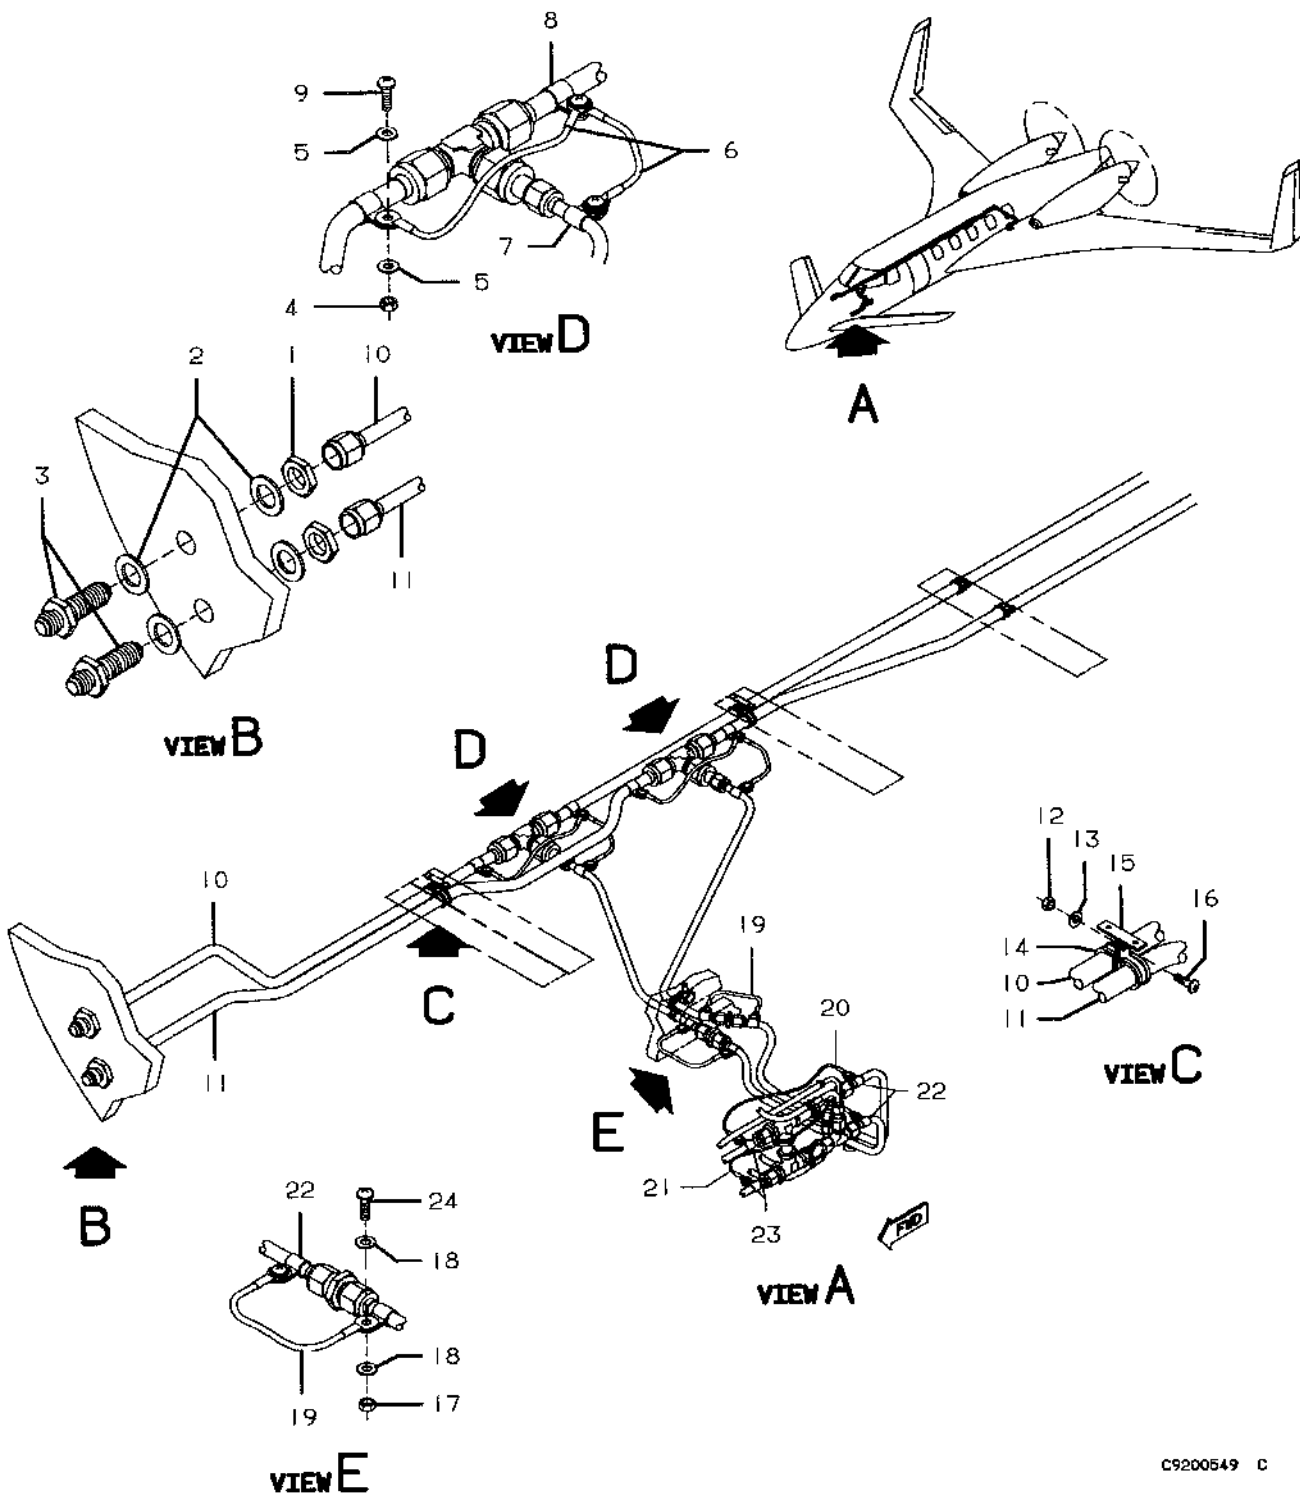


C9200549 C

FIGURE 00-10. PRESSURIZATION SYSTEM
/SHEET 1 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-10	122-540114-1	PRESSURIZATION SYSTEM	NP	
- 1	AN924-10D	. NUT	2	
- 2	AN960PD1416	. WASHER	4	
- 3	122-970084-7	. ORIFICE ASSY	2	
- 4	130909N29	. NUT	8	
- 5	AN960-10L	. WASHER	16	
- 6	MS25083-2BB5	. JUMPER, BONDING	4	
- 7	AN735D6	. CLAMP	2	
- 8	AN735D10	. CLAMP	6	
- 9	MS35207-263	. SCREW	8	
-10	122-540101-1	. TUBE ASSY	1	
-11	122-540073-1	. TUBE ASSY	1	
-12	130909N29	. NUT	1	
-13	AN960-10L	. WASHER	1	
-14	105933-10	. CLAMP	2	
-15	122-555068-5	. BRACKET ASSY	1	
-16	MS35207-264	. SCREW	1	
-17	130909N29	. NUT	8	
-18	AN960-10L	. WASHER	16	
-19	MS25083-2BB4	. JUMPER, BONDING	2	
-20	MS25083-2BB10	. JUMPER, BONDING	1	
-21	MS25083-2BB9	. JUMPER, BONDING	1	
-22	AN735D6	. CLAMP	6	
-23	AN735D4	. CLAMP	2	
-24	MS35207-263	. SCREW	8	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

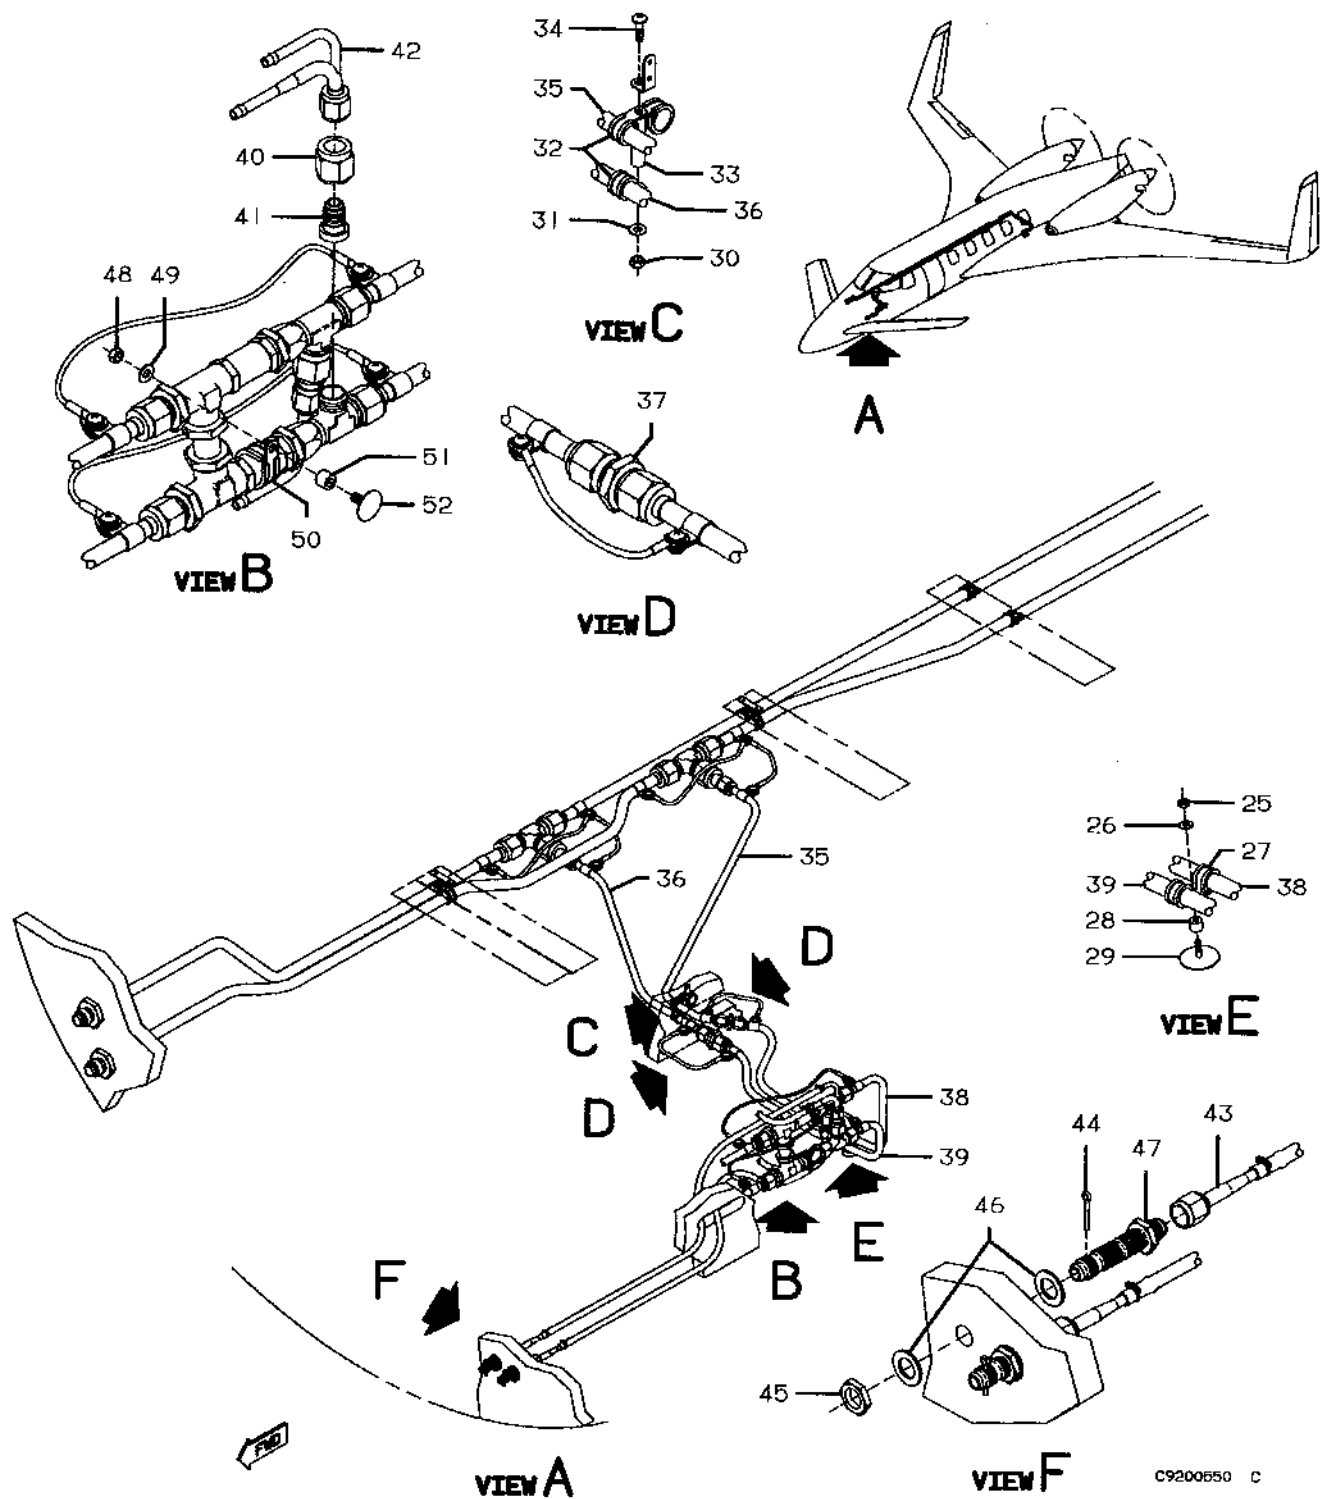


C9200550 C

FIGURE 00-10.PRESSURIZATION SYSTEM
/SHEET 2 OF 5 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-10 -25	130909N29	. NUT	1	
-26	AN960-10L	. WASHER	1	
-27	MS21919WDG6	. CLAMP	2	
-28	NAS43DD3-32	. SPACER	1	
-29	132131-3-8	. STUD	1	
-30	130909N29	. NUT	1	
-31	AN960-10L	. WASHER	1	
-32	MS21919WDG6	. CLAMP	2	
-33	NAS43DD3-64	. SPACER	1	
-34	MS35207-270	. SCREW	1	
-35	122-540099-1	. TUBE ASSY	1	
-36	122-540072-1	. TUBE ASSY	1	
-37	AN815-6D	. UNION	2	
-38	122-540118-1	. TUBE ASSY	1	
-39	122-540119-1	. TUBE ASSY	1	
-40	AN818-6D	. NUT	2	
-41	NAS1564D6-4	. REDUCER	2	
-42	122-540111-5	. TUBE ASSY	2	
-43	122-540111-13	. TUBE ASSY	2	
-44	MS24665-174	. PIN,COTTER	2	
-45	AN924-4D	. NUT	2	
-46	AN960-716L	. WASHER	4	
-47	122-322253-1	. FITTING	2	
-48	130909N29	. NUT	1	
-49	AN960-10L	. WASHER	1	
-50	MS21919WDG12	. CLAMP	1	
-51	NAS43DD3-12	. SPACER	1	
-52	132131-3-8	. STUD	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

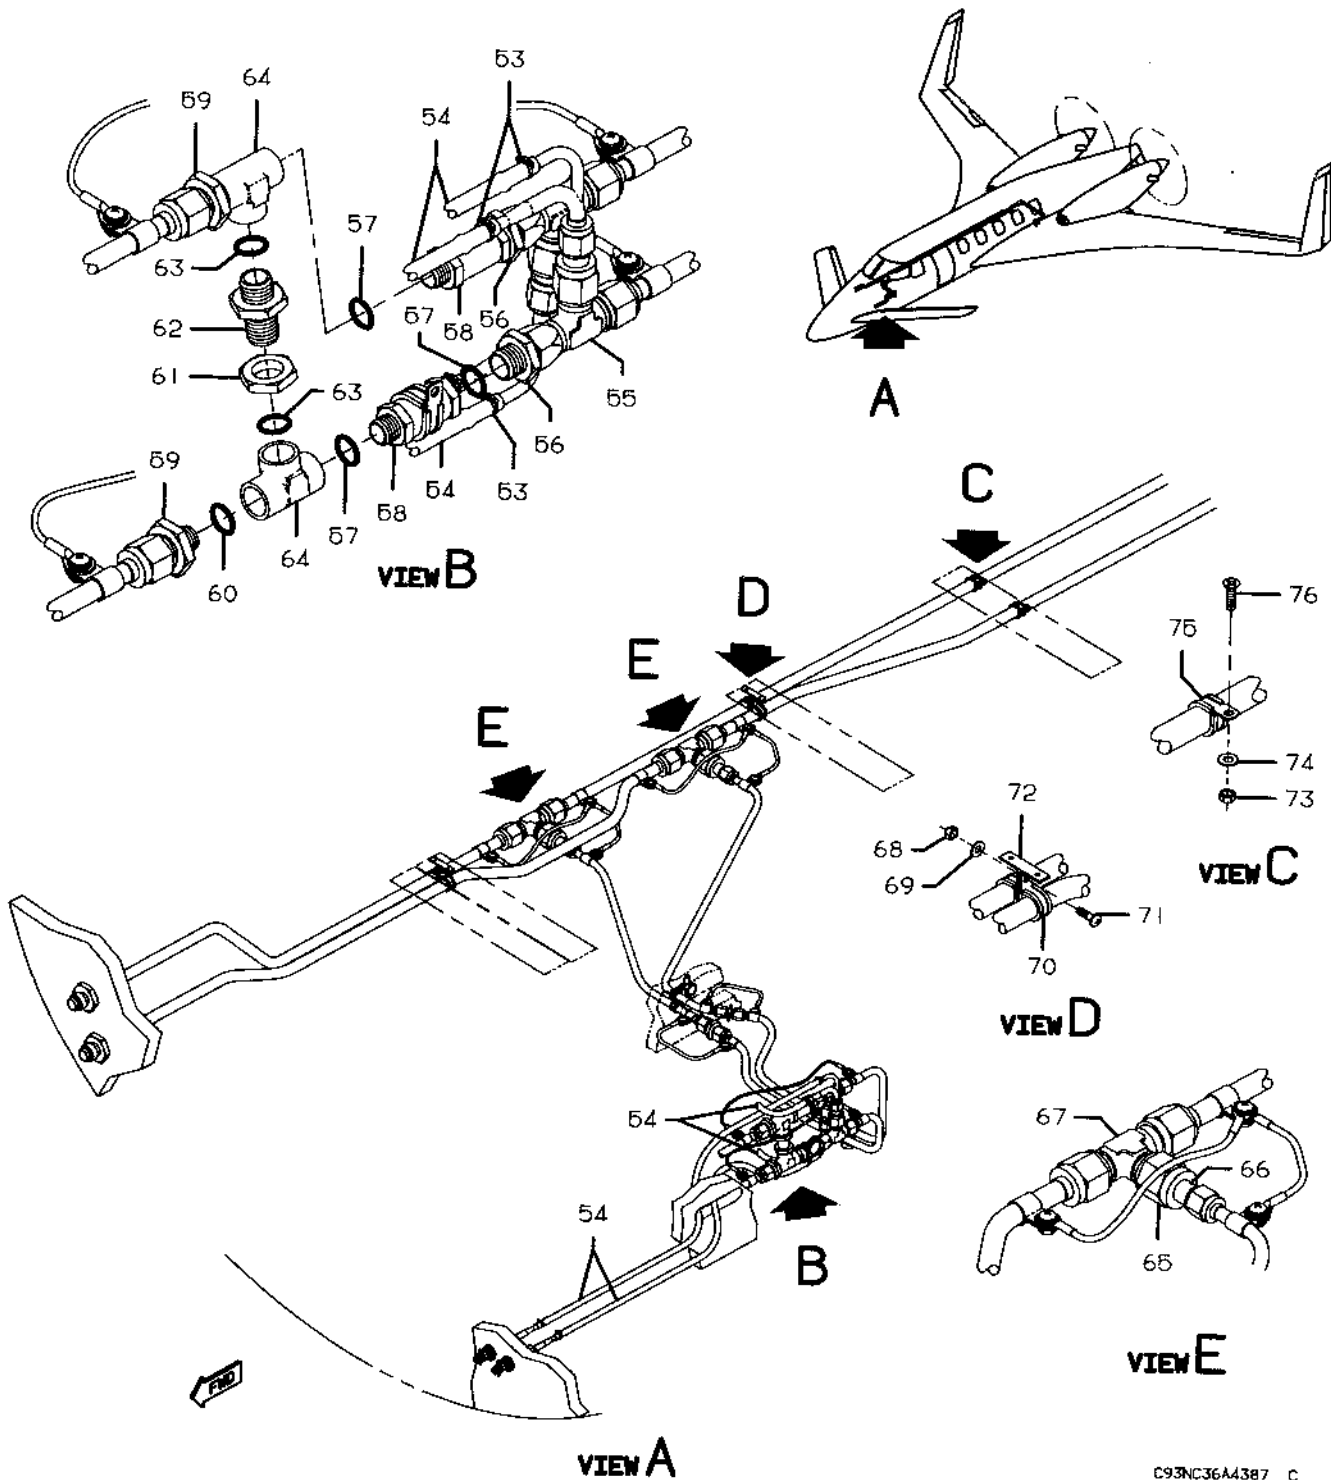


C93NC36A4387 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
00-10 -53	131466B1	. CLAMP	6	
-54	131823E4M0380	. TUBE	4	
-55	6R6X-S	. TEE/FOR SPARES ORDER MS51523B6S OR 6R6X-SS/	NP	1
	MS51523B6S	. TEE/ALTERNATE FOR 6R6X-SS/	2	2
	6R6X-SS	. TEE/ALTERNATE FOR MS51523B6S/	2	2
-56	AN919-6D	. REDUCER	2	
-57	MS28778-4	. PACKING, PREFORMED	4	
-58	101-389011-65	. VALVE, CHECK	2	
-59	AN815-4D	. UNION	2	
-60	MS28778-4	. PACKING, PREFORMED	2	
-61	AN924-4D	. NUT	2	
-62	AN832-4D	. UNION	1	
-63	MS28778-4	. PACKING, PREFORMED	2	
-64	AN938-4D	. TEE	2	
-65	AN818-10D	. NUT	2	
-66	NAS1564D10-6	. REDUCER	2	
-67	AN824-10D	. TEE	2	
-68	130909N29	. NUT	1	
-69	AN960-10L	. WASHER	1	
-70	105933-10	. CLAMP	2	
-71	MS35207-264	. SCREW	1	
-72	122-555068-5	. BRACKET ASSY	1	
-73	130909N28	. NUT	2	
-74	AN960-8L	. WASHER	2	
-75	105933-10	. CLAMP	2	
-76	MS24693S50	. SCREW	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

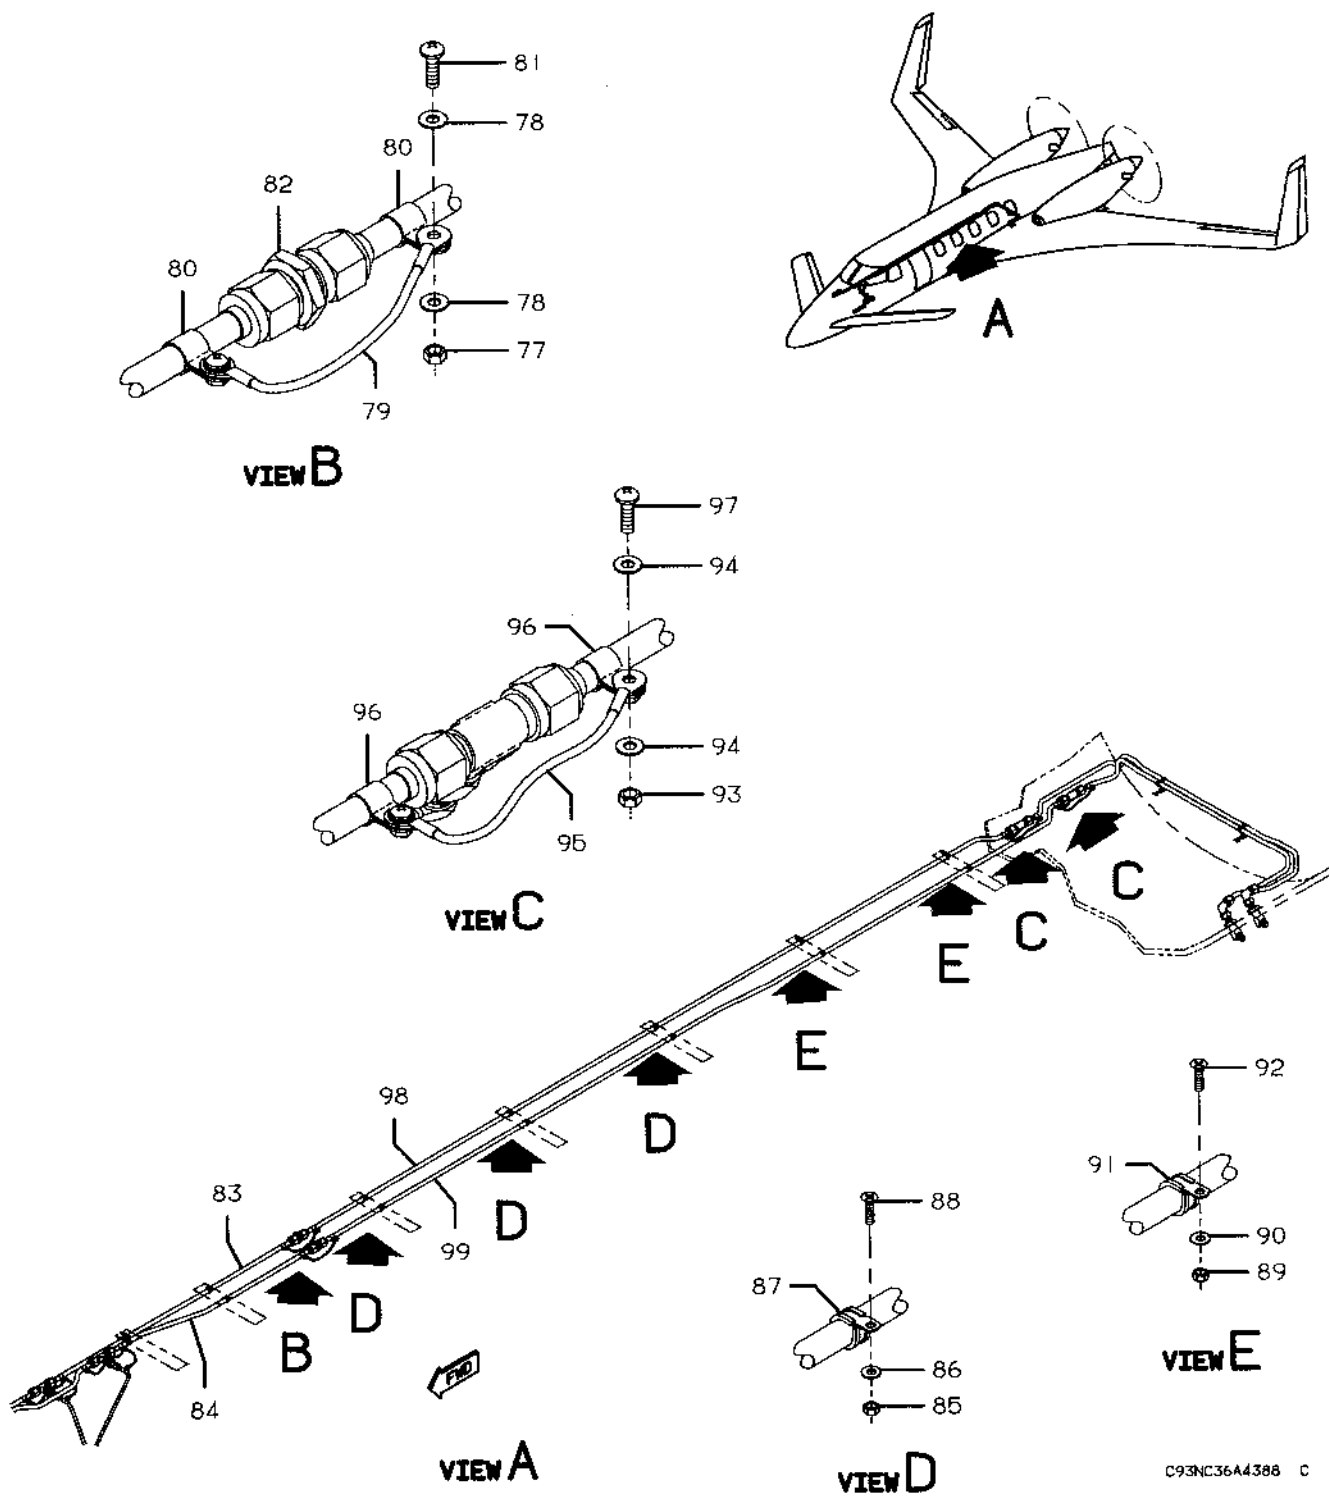


C93NC36A4388 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-10 -77	130909N29	. NUT	4	
-78	AN960-10L	. WASHER	8	
-79	MS25083-2BB5	. JUMPER, BONDING	2	
-80	AN735D10	. CLAMP	4	
-81	MS35207-263	. SCREW	4	
-82	AN815-10D	. UNION	2	
-83	122-540071-1	. TUBE ASSY	1	
-84	122-540098-1	. TUBE ASSY	1	
-85	130909N28	. NUT	2	
-86	AN960-8L	. WASHER	2	
-87	105933-10	. CLAMP	2	
-88	MS24693S50	. SCREW	2	
-89	130909N28	. NUT	4	
-90	AN960-8L	. WASHER	4	
-91	105933-10	. CLAMP	4	
-92	MS24693S50	. SCREW	4	
-93	130909N29	. NUT	4	
-94	AN960-10L	. WASHER	8	
-95	MS25083-2BB6	. JUMPER, BONDING	2	
-96	AN735D10	. CLAMP	4	
-97	MS35207-263	. SCREW	4	
-98	122-540070-1	. TUBE ASSY	1	
-99	122-540097-1	. TUBE ASSY	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

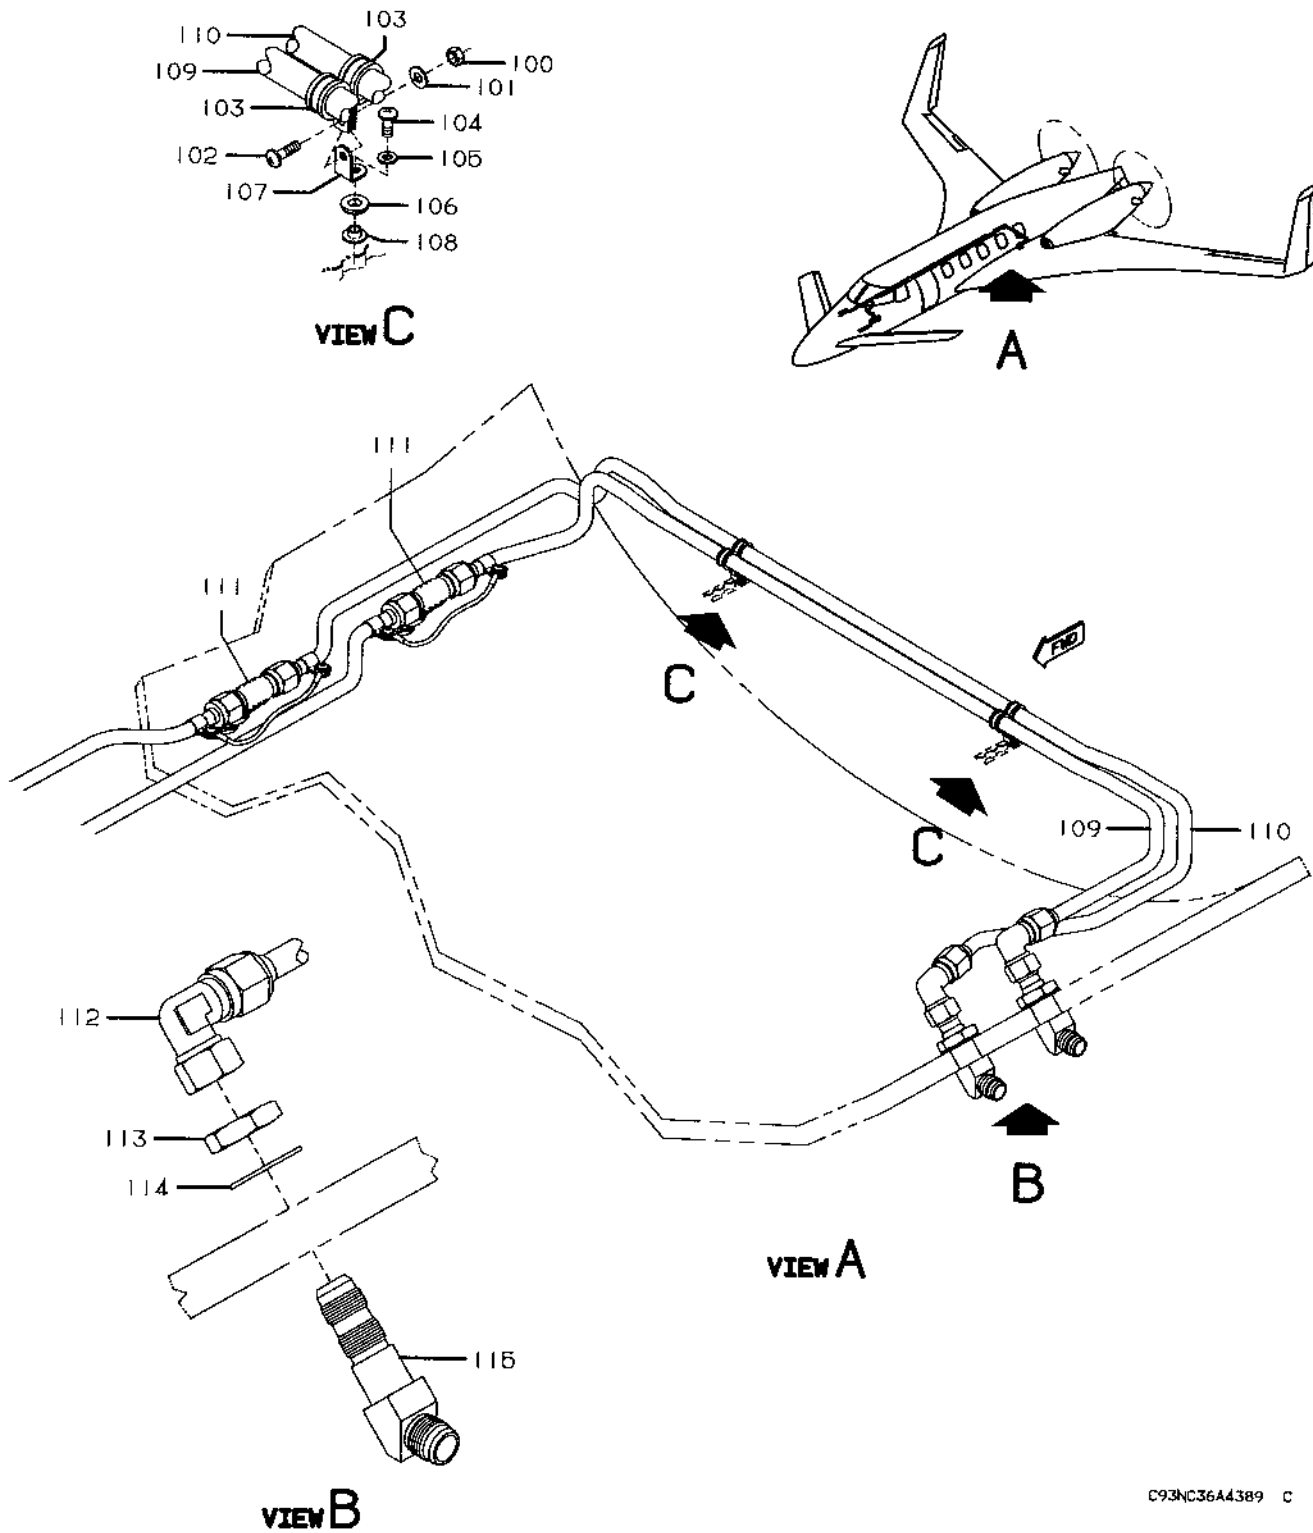

C93NC36A4389 C

FIGURE 00-10.PRESSURIZATION SYSTEM
/SHEET 5 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-10 -100	130909N29	. NUT	2	
-101	AN960-10L	. WASHER	2	
-102	MS35207-264	. SCREW	2	
-103	105933-10	. CLAMP	4	
-104	MS27039-4-06	. SCREW	2	
-105	AN960-416L	. WASHER	2	
-106	122-530297-3	. SPACER	2	
-107	122-540114-3	. CLIP	2	
-108	122-530297-1	. RETAINER	2	
-109	122-540120-1	. TUBE ASSY	1	
-110	122-540121-1	. TUBE ASSY	1	
-111	MS51524B10	. TEE, SWIVEL/FOR SPARES ORDER MS51524B10S OR 10S6X-SS/	NP	1
	MS51524B10S	. TEE, SWIVEL/ALTERNATE FOR 10S6X-SS/	2	2
	10S6X-SS	. TEE, SWIVEL/ALTERNATE FOR MS51524B10S/	2	2
-112	MS51521B10	. ELBOW, SWIVEL/FOR SPARES ORDER MS51524B10S OR 10C6X-SS/	NP	1
	MS51521B10S	. ELBOW, SWIVEL/ALTERNATE FOR 10C6X-SS/	2	2
	10C6X-SS	. ELBOW, SWIVEL/ALTERNATE FOR MS51521B10S/	2	2
-113	AN924-10D	. NUT	4	
-114	AN960JD1416	. WASHER	4	
-115	122-540113-1	. FITTING, DEICE SYSTEM/SEE CHAPTER 30/	4	
	122-540115-1	. PLUMBING INSTL, LH WING/SEE CHAPTER 36-00-20/	NP	
	122-540115-3	. PLUMBING INSTL, RH WING/SEE CHAPTER 36-00-20/	NP	


CODES OF EFFECTIVITY

1 NC-4 THRU NC-46 2 NC-47 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

36-00-20
WING PRESSURIZATION SYSTEM

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

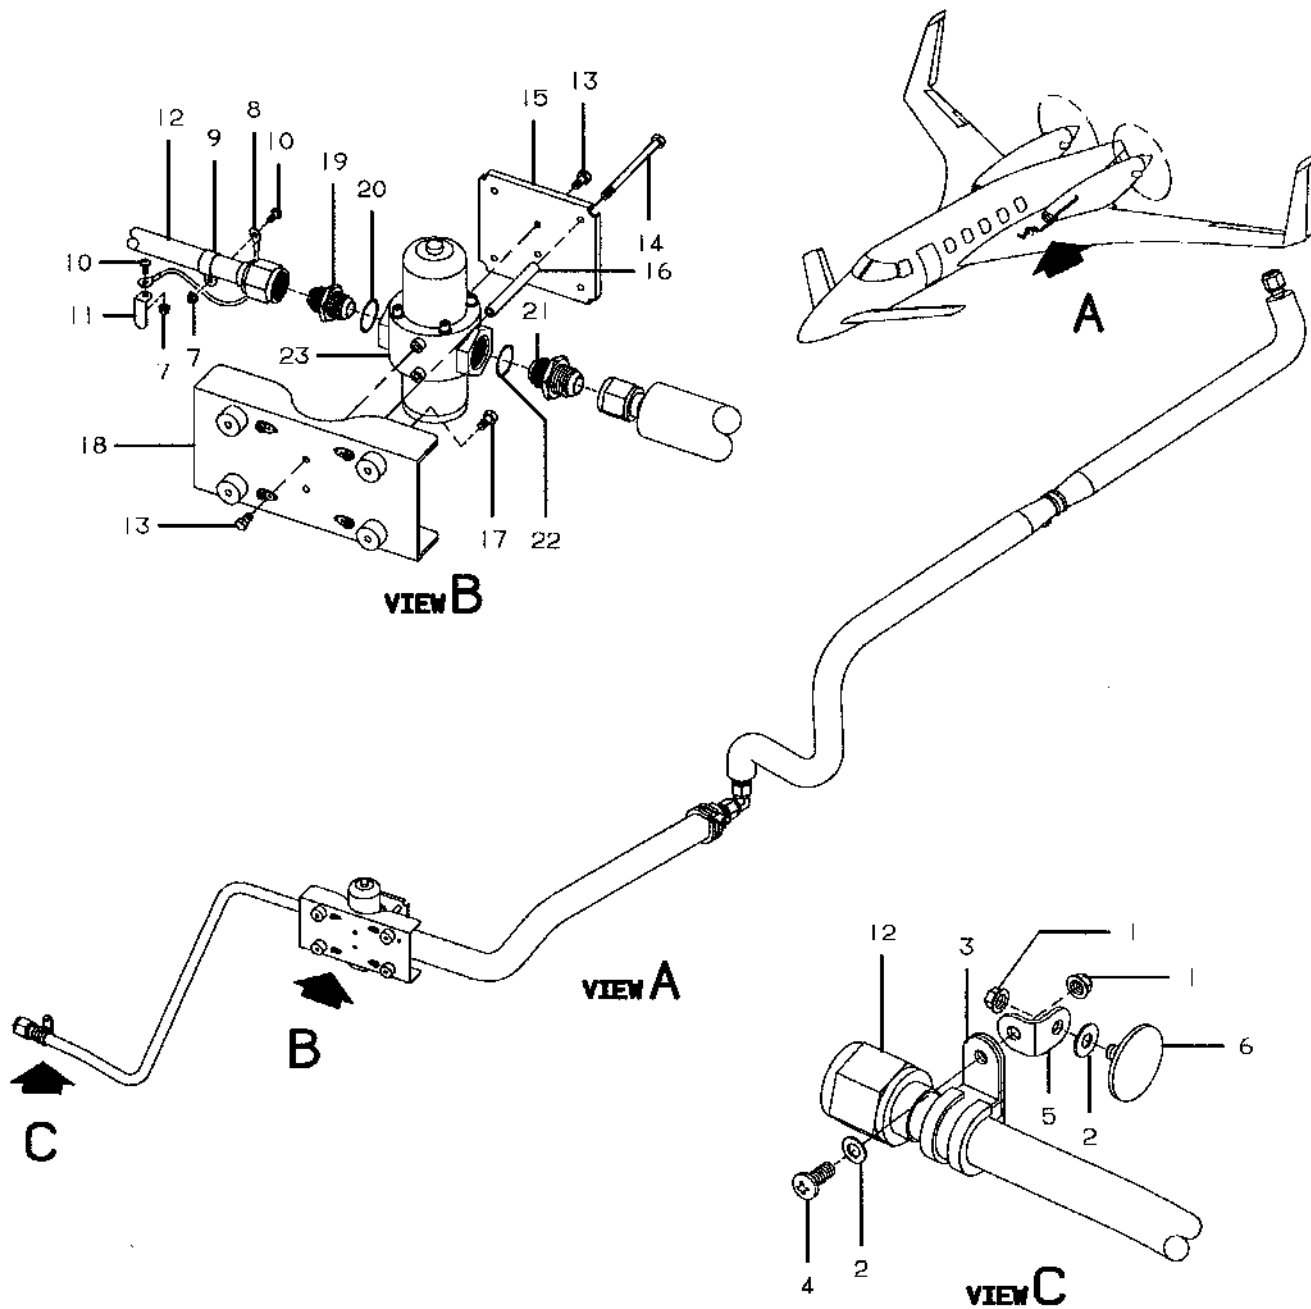


C9200554 C

FIGURE 00-20. WING PRESSURIZATION SYSTEM
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-20	122-540115-1	PRESSURE SYSTEM, LH WING	NP	
	122-540115-3	PRESSURE SYSTEM, RH WING	NP	
- 1	130909N29	. NUT	2	
- 2	AN960-10L	. WASHER	2	
- 3	MS21919WCH10	. CLAMP	1	
- 4	MS35207-261	. SCREW	1	
- 5	AN743-12	. BRACKET	1	
- 6	132131-3-3	. STUD	1	
- 7	130909N29	. NUT	2	
- 8	MS25083-2BB4	. JUMPER, BONDING	1	
- 9	AN735D10	. CLAMP	1	
- 10	MS35207-263	. SCREW	2	
- 11	122-920002-133	. BRACKET	1	
- 12	122-540115-5	. TUBE ASSY, LH/TO PNEUMATIC DEICE SYSTEM/	1	
	122-540115-9	. TUBE ASSY, RH/TO PNEUMATIC DEICE SYSTEM/	1	
- 13	130909B12	. BOLT	4	
- 14	AN3-32A	. BOLT	4	
- 15	122-540117-5	. BRACKET, PRESSURE REGULATOR VALVE	1	
- 16	NAS43DD3-180	. SPACER	4	
- 17	AN3C7A	. BOLT	4	
- 18	122-540117-1	. BRACKET, PRESSURE REGULATOR VALVE	1	
- 19	AN919-20J	. REDUCER	1	
- 20	MS9387-12	. PACKING, PREFORMED	1	
- 21	AN815-10J	. UNION	1	
- 22	MS9387-10	. PACKING, PREFORMED	1	
- 23	122-380075-3	. REGULATOR	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

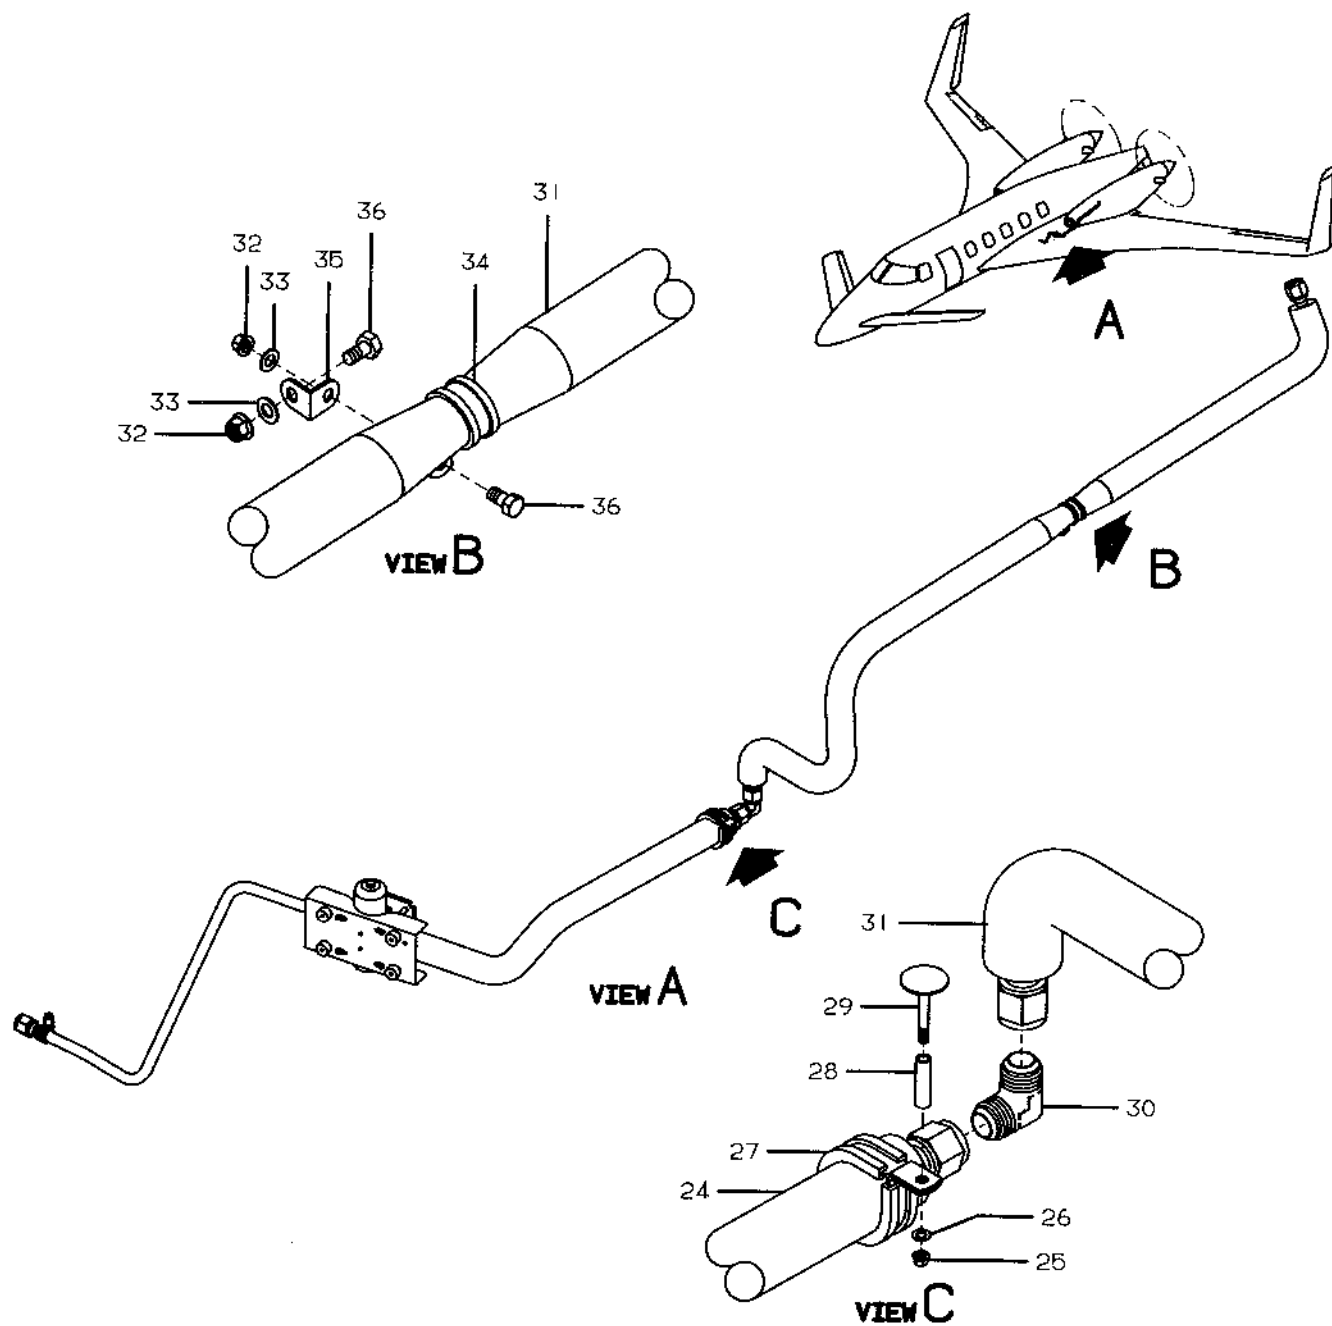

C93NC36A4363 C

FIGURE 00-20. WING PRESSURIZATION SYSTEM
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-20 -24	122-540115-13	. TUBE ASSY, LH.....	1	
	122-540115-17	. TUBE ASSY, RH.....	1	
-25	130909N29	. NUT.....	1	
-26	AN960-10L	. WASHER.....	1	
-27	MS21919WH20	. CLAMP.....	1	
-28	NAS43DD3-74	. SPACER.....	1	
-29	132131-3-13	. STUD.....	1	
-30	AN821-10J	. ELBOW.....	1	
-31	122-540115-21	. TUBE ASSY, LH.....	1	1
	122-540115-29	. TUBE ASSY, LH/FOR OPTIONAL BRAKE DEICE/.....	1	2
	122-540115-25	. TUBE ASSY, RH.....	1	1
	122-540115-33	. TUBE ASSY, RH/FOR OPTIONAL BRAKE DEICE/.....	1	2
-32	130909N29	. NUT.....	2	
-33	AN960-10L	. WASHER.....	2	
-34	MS21919WH20	. CLAMP.....	1	
-35	MS9592-008	. BRACKET.....	1	
-36	130909B12	. BOLT.....	2	


CODES OF EFFECTIVITY

1 NC-4 THRU NC-29 2 NC-30 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

36-10-00
ENGINE COMPARTMENT BLEED AIR

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

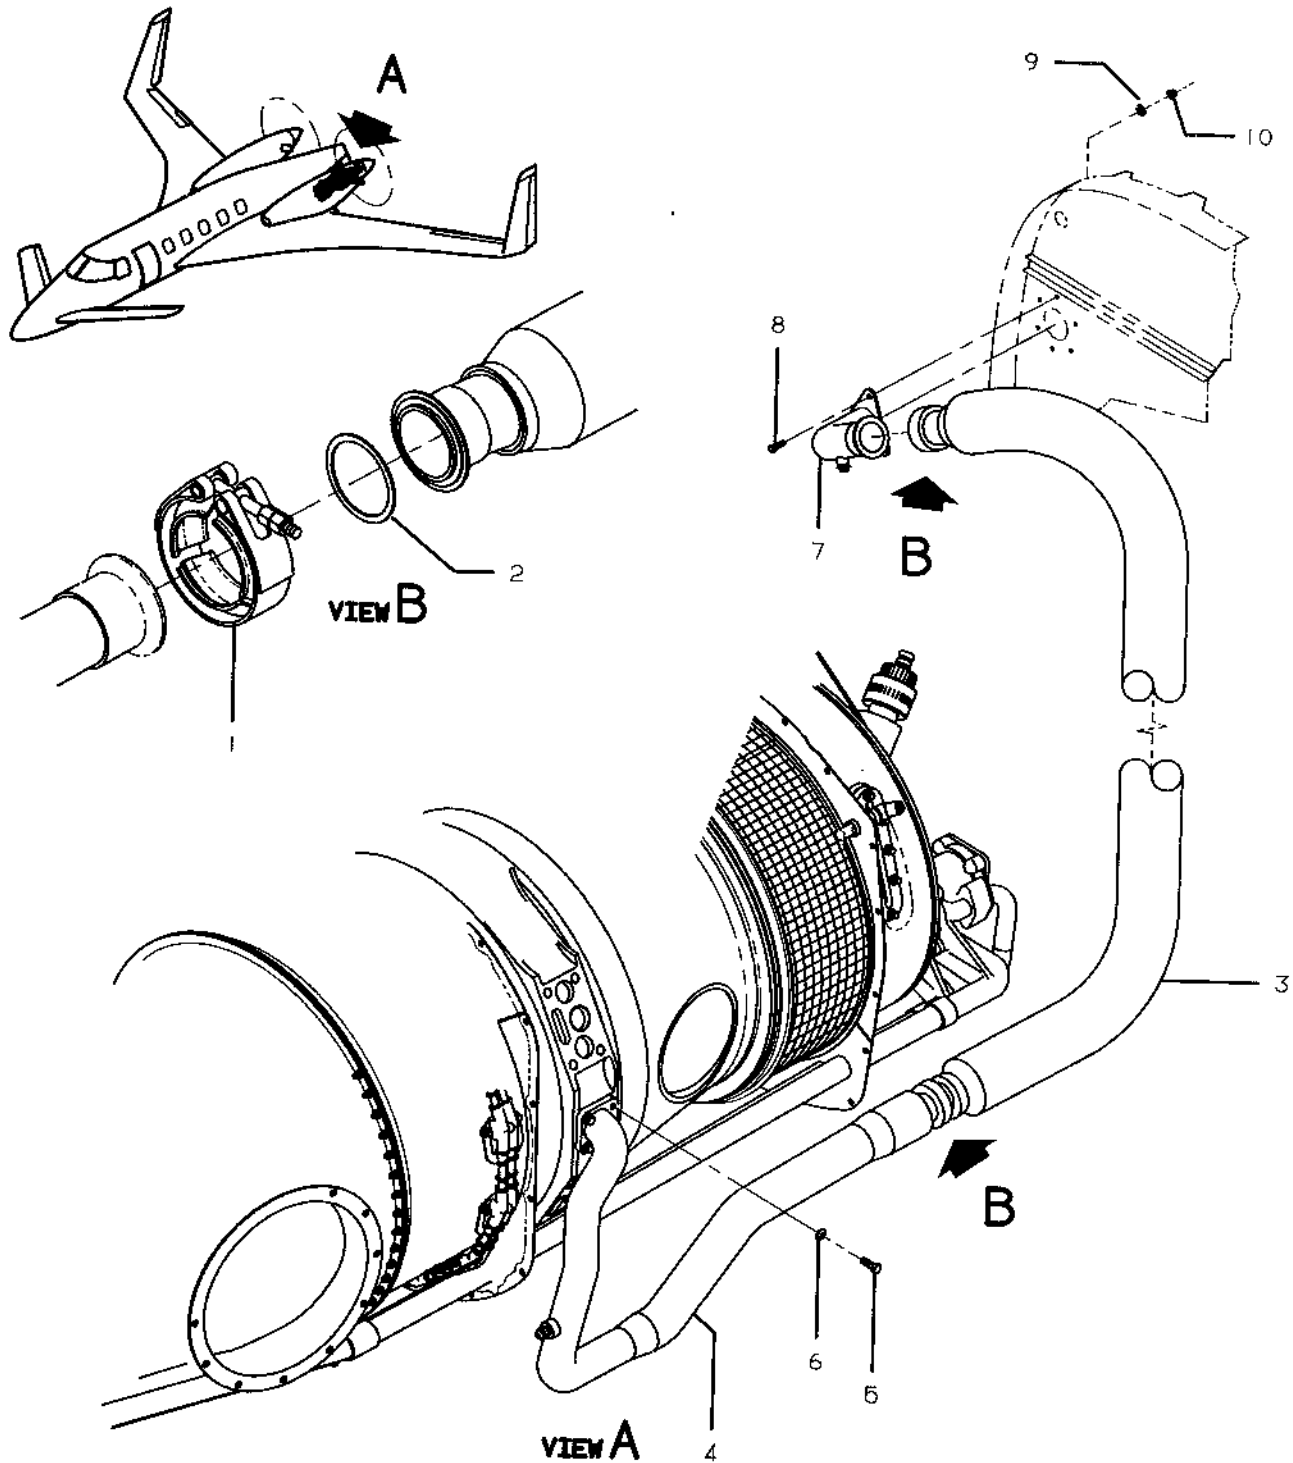

C93NC36A4390 C

FIGURE 10-00.ENGINE COMPARTMENT BLEED AIR

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-910064-1	POWER PLANT INSTL, LH.....	NP	1
	122-910064-15	POWER PLANT INSTL, LH.....	NP	2
	122-910064-3	POWER PLANT INSTL, RH.....	NP	1
	122-910064-17	POWER PLANT INSTL, RH.....	NP	2
- 1	18276-125	. COUPLING.....	2	
- 2	24346-125C	. GASKET.....	2	
- 3	122-389008-11	. HOSE ASSY, LH BLEED AIR.....	1	
	122-389008-13	. HOSE ASSY, RH BLEED AIR.....	1	
- 4	122-970017-21	. TUBE, BLEED AIR.....	1	
		/ATTACHING PARTS/		
- 5	NAS1304-2H	. BOLT.....	4	
- 6	AN960-416L	. WASHER.....	4	
		---★---		
- 7	122-550157-17	TUBE ASSY, LH BLEED AIR.....	1	
	122-550157-13	TUBE ASSY, RH BLEED AIR.....	1	
		/ATTACHING PARTS/		
- 8	AN4C7A	BOLT.....	3	
- 9	AN960C416L	WASHER.....	6	
- 10	MS21043-4	NUT.....	3	
		---★---		

CODES OF EFFECTIVITY

1 NC-4 THRU NC-28 2 NC-29 AND AFTER


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 38-00-00 WATER/WASTE

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
38-00-00	1	02/25/94	LIST OF PAGES & TABLE OF CONTENTS
38-30-00	1	02/25/94	RH FORWARD TOILET
38-30-00	2	02/25/94	NC-4 THRU NC-20
38-30-00	3	02/25/94	
38-30-05	1	02/25/94	AFT TOILET AND RELIEF TUBE
38-30-05	2	02/25/94	NC-21 AND AFTER
38-30-05	3	02/25/94	
38-30-05	4	02/25/94	
38-30-05	5	02/25/94	
38-30-10	1	02/25/94	COCKPIT RELIEF TUBE
38-30-10	2	02/25/94	NC-4 THRU NC-20
38-30-10	3	02/25/94	
38-30-12	1	02/25/94	CABIN RELIEF TUBE
38-30-12	2	02/25/94	NC-4 THRU NC-20
38-30-12	3	02/25/94	
38-30-15	1	02/25/94	AFT TOILET PLUMBING
38-30-15	2	02/25/94	NC-21 AND AFTER
38-30-15	3	02/25/94	
38-30-15	4	02/25/94	
38-30-15	5	02/25/94	
38-30-30	1	02/25/94	OVERBOARD DRAIN PLUMBING
38-30-30	2	02/25/94	NC-4 THRU NC-20
38-30-30	3	02/25/94	
38-30-30	4	02/25/94	
38-30-30	5	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

38-30-00
RH FORWARD TOILET
NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

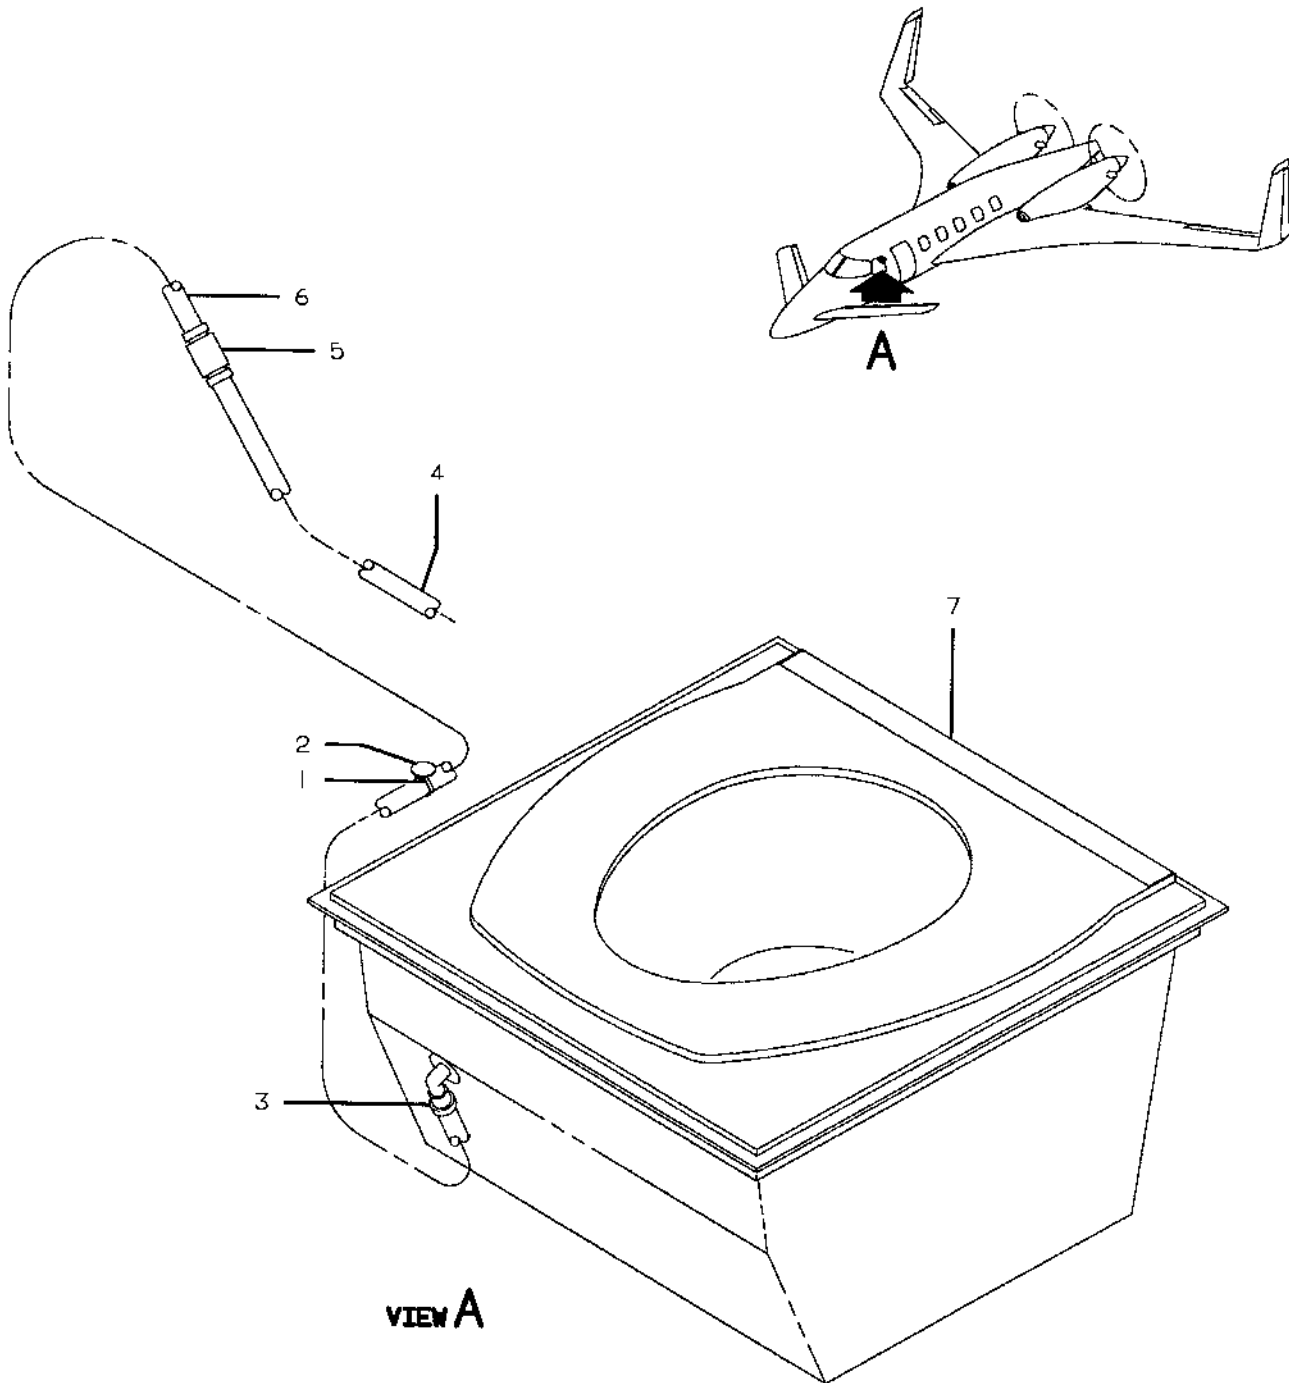

C93NC38A4519 C

FIGURE 30-00.RH FORWARD TOILET

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00	122-530105-1	TOILET INSTL, RH FWD.....	NP	1
- 1	MS3367-5-9	. STRAP.....	AR	1
- 2	SL6207C1-1	. PLATE.....	3	1
- 3	SNP6	. CLAMP.....	6	1
- 4	122-530105-7	. TUBE/TO OVERBOARD DRAIN/.....	1	1
- 5	219822	. CHECK VALVE.....	1	1
- 6	122-530105-5	. TUBE.....	1	1
- 7	MODEL 500-31A	TOILET ASSY.....	1	1

CODES OF EFFECTIVITY

1 NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

38-30-05
AFT TOILET AND RELIEF TUBE
NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG





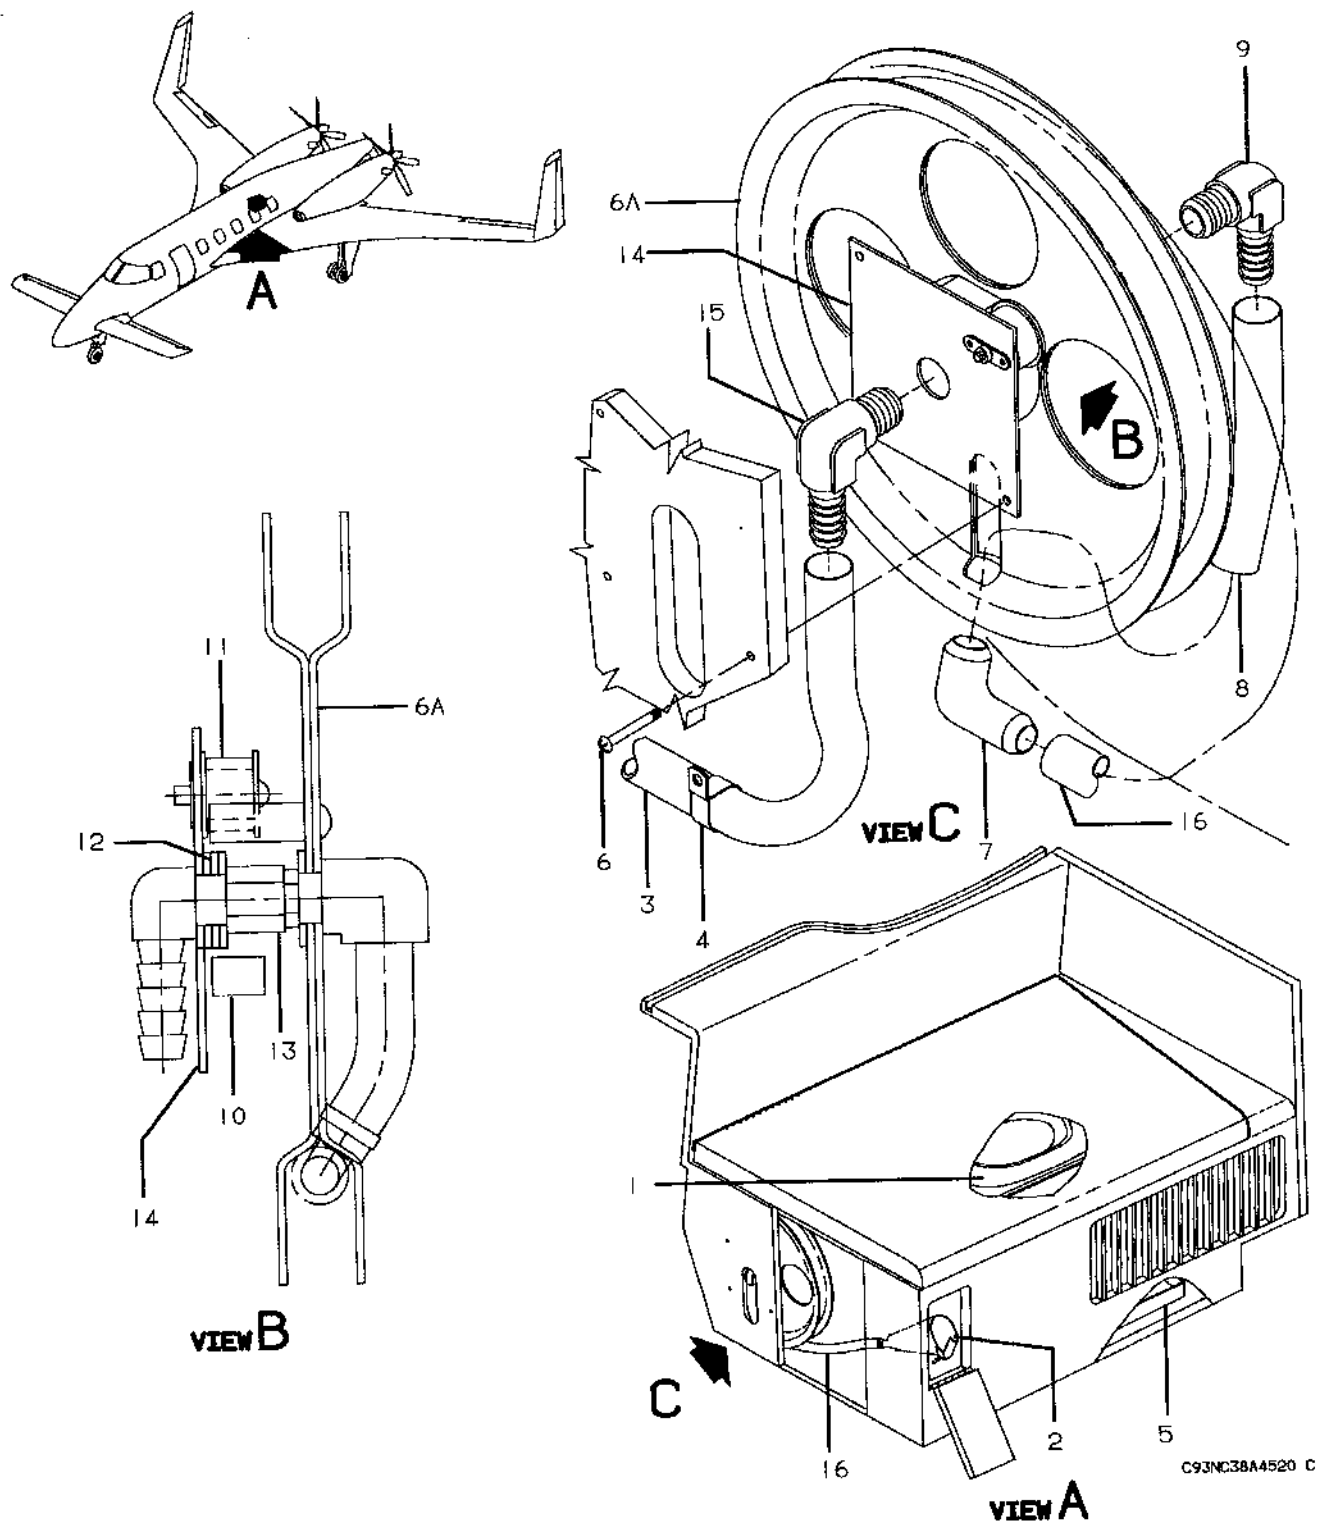


FIGURE 30-05.AFT TOILET AND RELIEF TUBE
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-05	122-384128-1	CABINET ASSY, AFT TOILET	NP	1
	122-384128-19	CABINET ASSY, AFT TOILET	NP	2
- 1	500-31A	. TOILET/ORDER 500-31A-1 FOR SPARES/	NP	4
	500-31A-1	. TOILET	1	5
	60145-1	. TOILET ASSY, AFT	1	1
	60145-5	. TOILET ASSY, AFT	1	2
- 2	WM203	. RELIEF TUBE ASSY	1	3
- 3	S1014-8-12.0	. HOSE	1	3
- 4	3241-3	. CLAMP	1	1
	CCH62S10C	. CLAMP	1	2
		. /ATTACHING PARTS/		
	NAS601-5	. SCREW	1	1
	NAS602-5	. SCREW	1	2
		---★---		
- 5	122-384128-15	. DRIP TRAY	1	3
	12006-13	. REEL ASSY, RELIEF TUBE	1	1
		. /ATTACHING PARTS/		
- 6	NAS601-8	. SCREW	3	
	NAS43DD1-12	. SPACER	3	
		---★---		
- 6A	12006-15	. REEL HALF	2	1
	A042BS	. RIVET	4	1
	AN960-6L	. WASHER	4	1
- 7	P6EUB6	. ELBOW	1	1
- 8	S1014-8-3.8	. TUBING	1	1
	S1023-1	. TIE WRAP	2	1
- 9	23400X4	. ELBOW	1	1
- 10	12006-9	. HUB	1	1
		. /ATTACHING PARTS/		
	S1012-6-4	. SCREW	3	
		---★---		
- 11	3X50SH08G28	. SPRING	2	1
		. /ATTACHING PARTS/		
	NAS601-14	. SCREW	1	
	S1012-6-4	. SCREW	1	
	AN970-3	. WASHER	2	
	AN960D6L	. WASHER	1	
	10806-5	. SPACER	1	
		---★---		
- 12	AN960B916	. WASHER	4	1
- 13	4480K11	. SWIVEL, HOSE	1	1
- 14	12006-5	. PLATE ASSY	1	1
	MS21069L06	. NUTPLATE	1	1
- 15	KF06-04PS90	. ELBOW	1	1
- 16	S1014-8-31.5	. TUBING	1	1
	1360	. SLEEVE/31.5 LENGTH/	1	1
	FIT221-1	. TUBING, SHRINK/2.0 LENGTH/	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

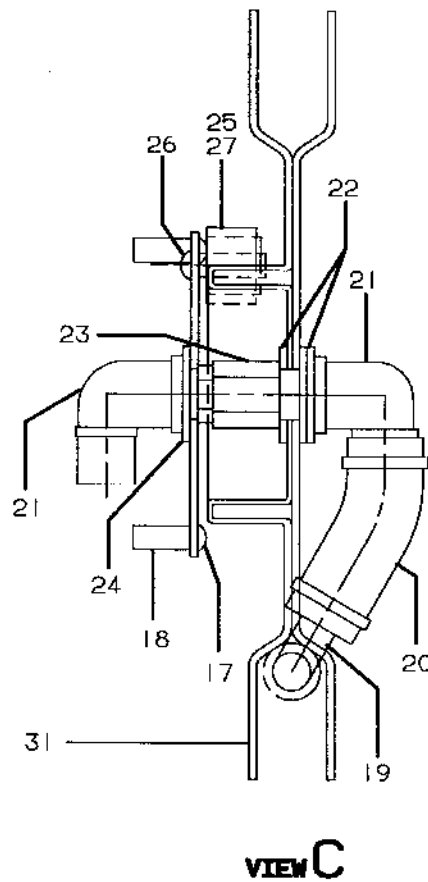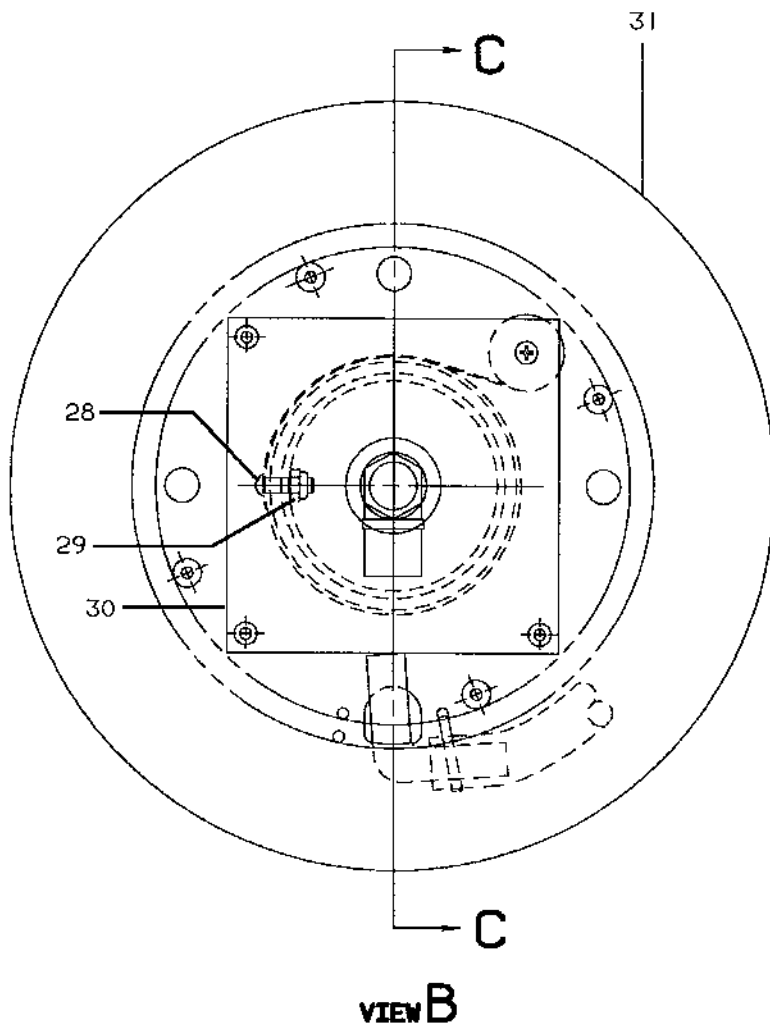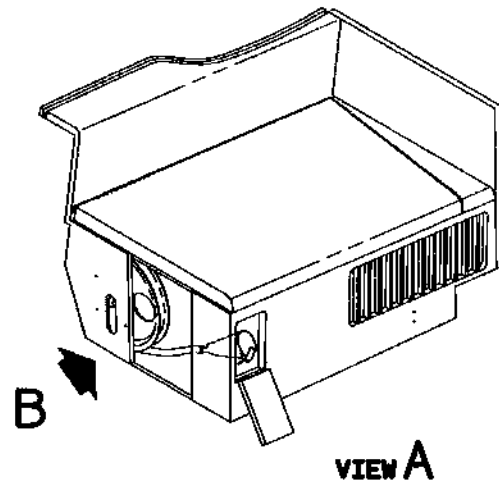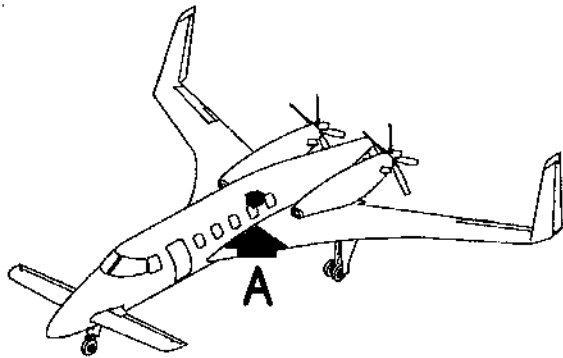

C94NC38A0352 C

FIGURE 30-05.AFT TOILET AND RELIEF TUBE
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-05	12131-1	. REEL ASSY, RELIEF TUBE.....	1	2
		. /ATTACHING PARTS/.....		
- 17	NAS601-5	. SCREW.....	3	2
	AN936A6	. WASHER, LOCK/BETWEEN SPACER & PLATE/.....	3	2
- 18	P541M04F02-632	. SPACER.....	3	2
		-----★-----		
- 19	P6EUB6	. ELBOW.....	1	2
- 20	S1014-8-2.0	. TUBING.....	1	2
	S1023-1	. TIE WRAP.....	2	2
- 21	S1087-1	. ELBOW.....	2	2
- 22	AN960PD916	. WASHER.....	3	2
- 23	4480K11	. SWIVEL, HOSE.....	1	2
	212400	. NIPPLE, CLOSE.....	1	2
- 24	AN960PD916L	. WASHER.....	1	2
- 25	12131-11	. DRUM, SPRING.....	1	2
		. /ATTACHING PARTS/.....		
- 26	NAS601-5	. SCREW.....	1	2
	AN936A6	. WASHER, LOCK/BETWEEN SPACER & PLATE/.....	1	2
	P541M04F02-632	. SPACER.....	1	2
		-----★-----		
- 27	3X50SH08G28	. SPRING.....	1	2
		. /ATTACHING PARTS/.....		
- 28	NAS601-8	. SCREW.....	1	2
- 29	MS21044N06	. NUT.....	1	2
		-----★-----		
- 30	12131-9	. PLATE.....	1	2
- 31	12131-3	. REEL ASSY.....	1	2


CODES OF EFFECTIVITY

1	NC-21 THRU NC-26	2	NC-27 AND AFTER
3	NC-21 AND AFTER	4	NC-21 THRU NC-25
5	NC-26 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

38-30-10
COCKPIT RELIEF TUBE
NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

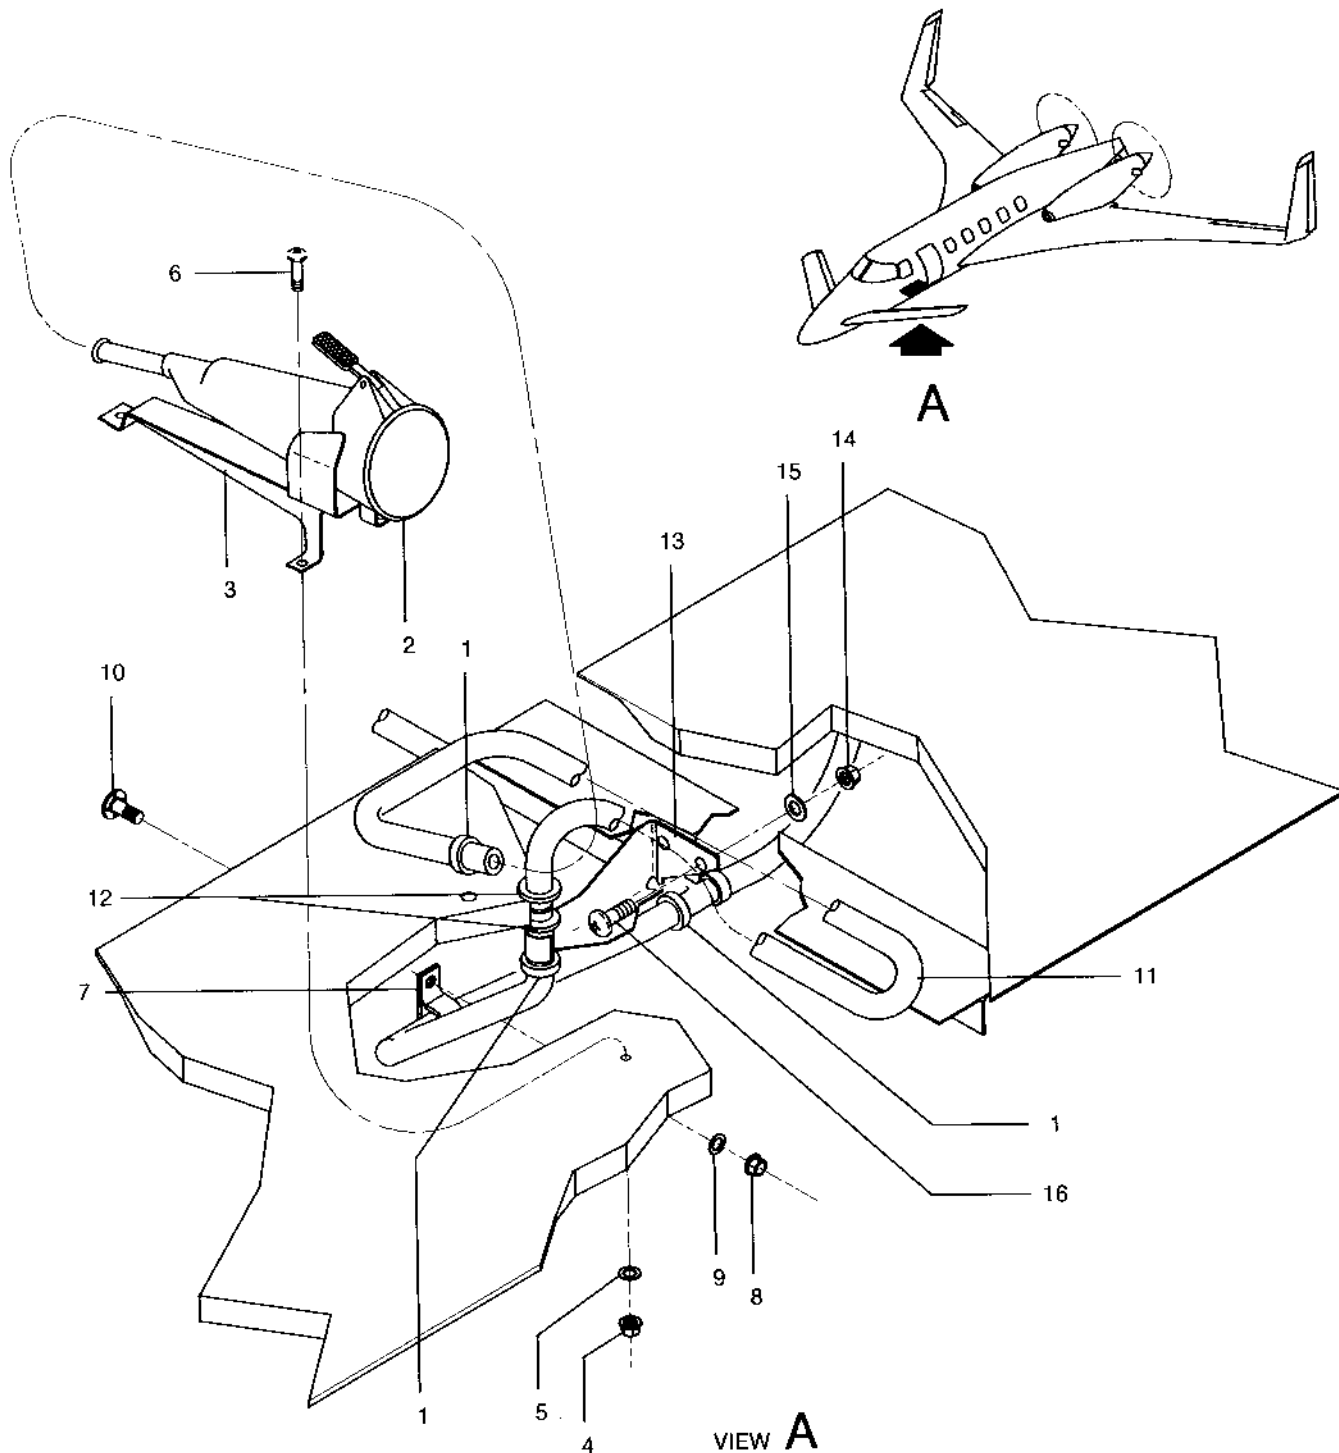

2000-323-03

FIGURE 30-10. COCKPIT RELIEF TUBE

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-10	122-530180-1	RELIEF TUBE INSTL, COCKPIT.....	NP	1
- 1	SNP6	. CLAMP.....	3	1
- 2	90-530034-3	. HORN.....	1	1
- 3	122-530180-11	. BRACKET.....	1	1
		/ATTACHING PARTS/		
- 4	130909N29	. NUT.....	3	
- 5	AN960-10L	. WASHER.....	3	
- 6	NAS1096-3-6	. SCREW.....	3	
		-----★-----		
- 7	105933-10	. CLIP.....	1	1
		/ATTACHING PARTS/		
- 8	130909N29	. NUT.....	1	1
- 9	AN960-3L	. WASHER.....	1	1
- 10	SL8172-3-4B	. STUD.....	1	1
		-----★-----		
	122-530180-5	. TUBE ASSY.....	1	1
- 11	122-530180-7	. TUBING.....	1	1
- 12	122-530180-9	. SLEEVE.....	1	1
- 13	122-530180-3	. BRACKET.....	1	1
		/ATTACHING PARTS/		
- 14	130909N28	. NUT.....	2	
- 15	AN960-8L	. WASHER.....	4	
- 16	MS27039-0807	. SCREW.....	2	
		-----★-----		


CODES OF EFFECTIVITY

1 NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

38-30-12
CABIN RELIEF TUBE
NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

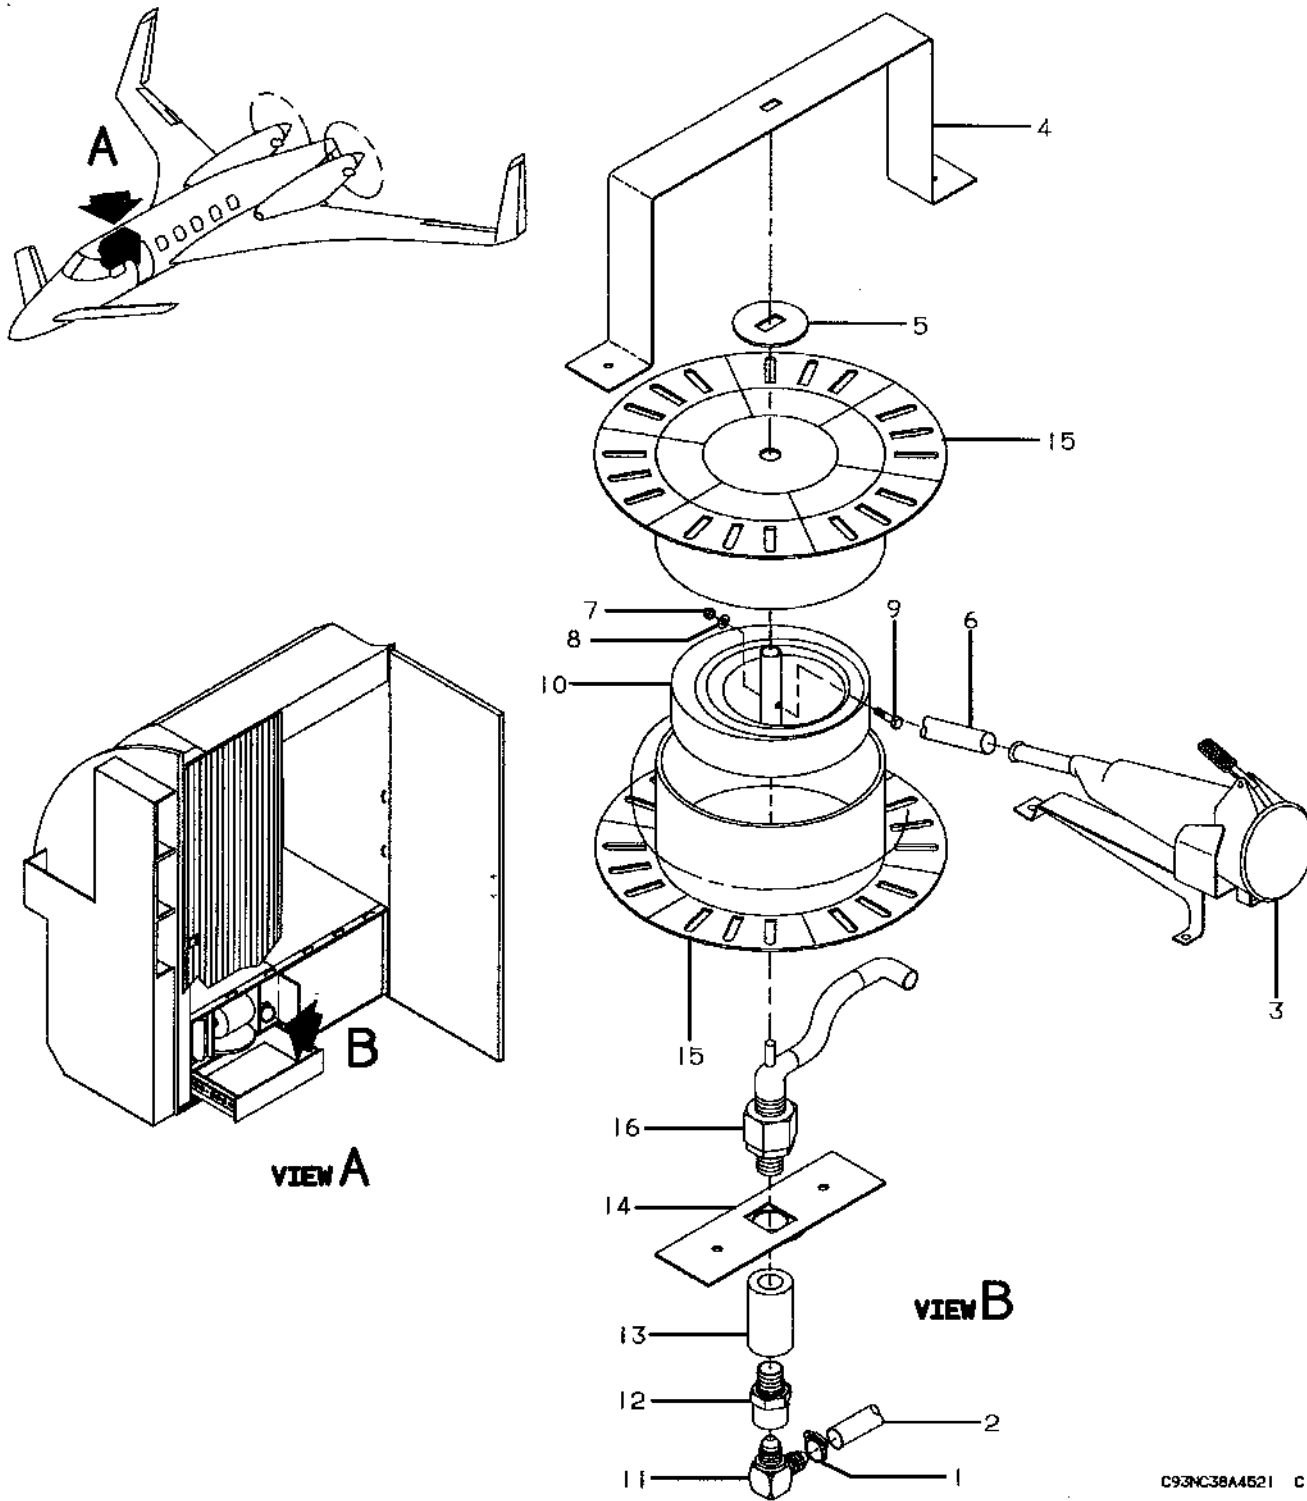

C93NC38A4521 C

FIGURE 30-12. CABIN RELIEF TUBE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
- 1	122-530293-1	PLUMBING INSTL, CABIN RELIEF TUBE	NP	1
- 2	SNP6	. CLAMP	2	1
- 2	114693-3-04800	. TUBE	1	1
	122-384125-37	TOILETRY MODULE, RH BAGGAGE COMPARTMENT	1	1
	81028-1	. REEL ASSY, HOSE	1	1
- 3	WM203	. . HORN, RELIEF TUBE	1	1
- 4	81028-5	. . BRACKET	1	1
- 5	81028-17	. . SHIM	1	1
- 6	S50HL	. . TUBING	1	1
- 7	130909N23	. . NUT	1	1
- 8	AN960-6	. . WASHER	1	1
- 9	NAS602-14	. . BOLT	1	1
- 10	81028-13	. . SPRING	1	1
- 11	LCD230-06	. . ELBOW	1	1
- 12	LCD100-06	. . COUPLING	1	1
- 13	S1050-1	. . COUPLING	1	1
- 14	81028-3	. . PLATE	1	1
- 15	81028-11	. . REEL, PLASTIC	1	1
- 16	81029-9	. . PIPE FITTING ASSY	1	1


CODES OF EFFECTIVITY

1 NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

38-30-15
AFT TOILET PLUMBING
NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

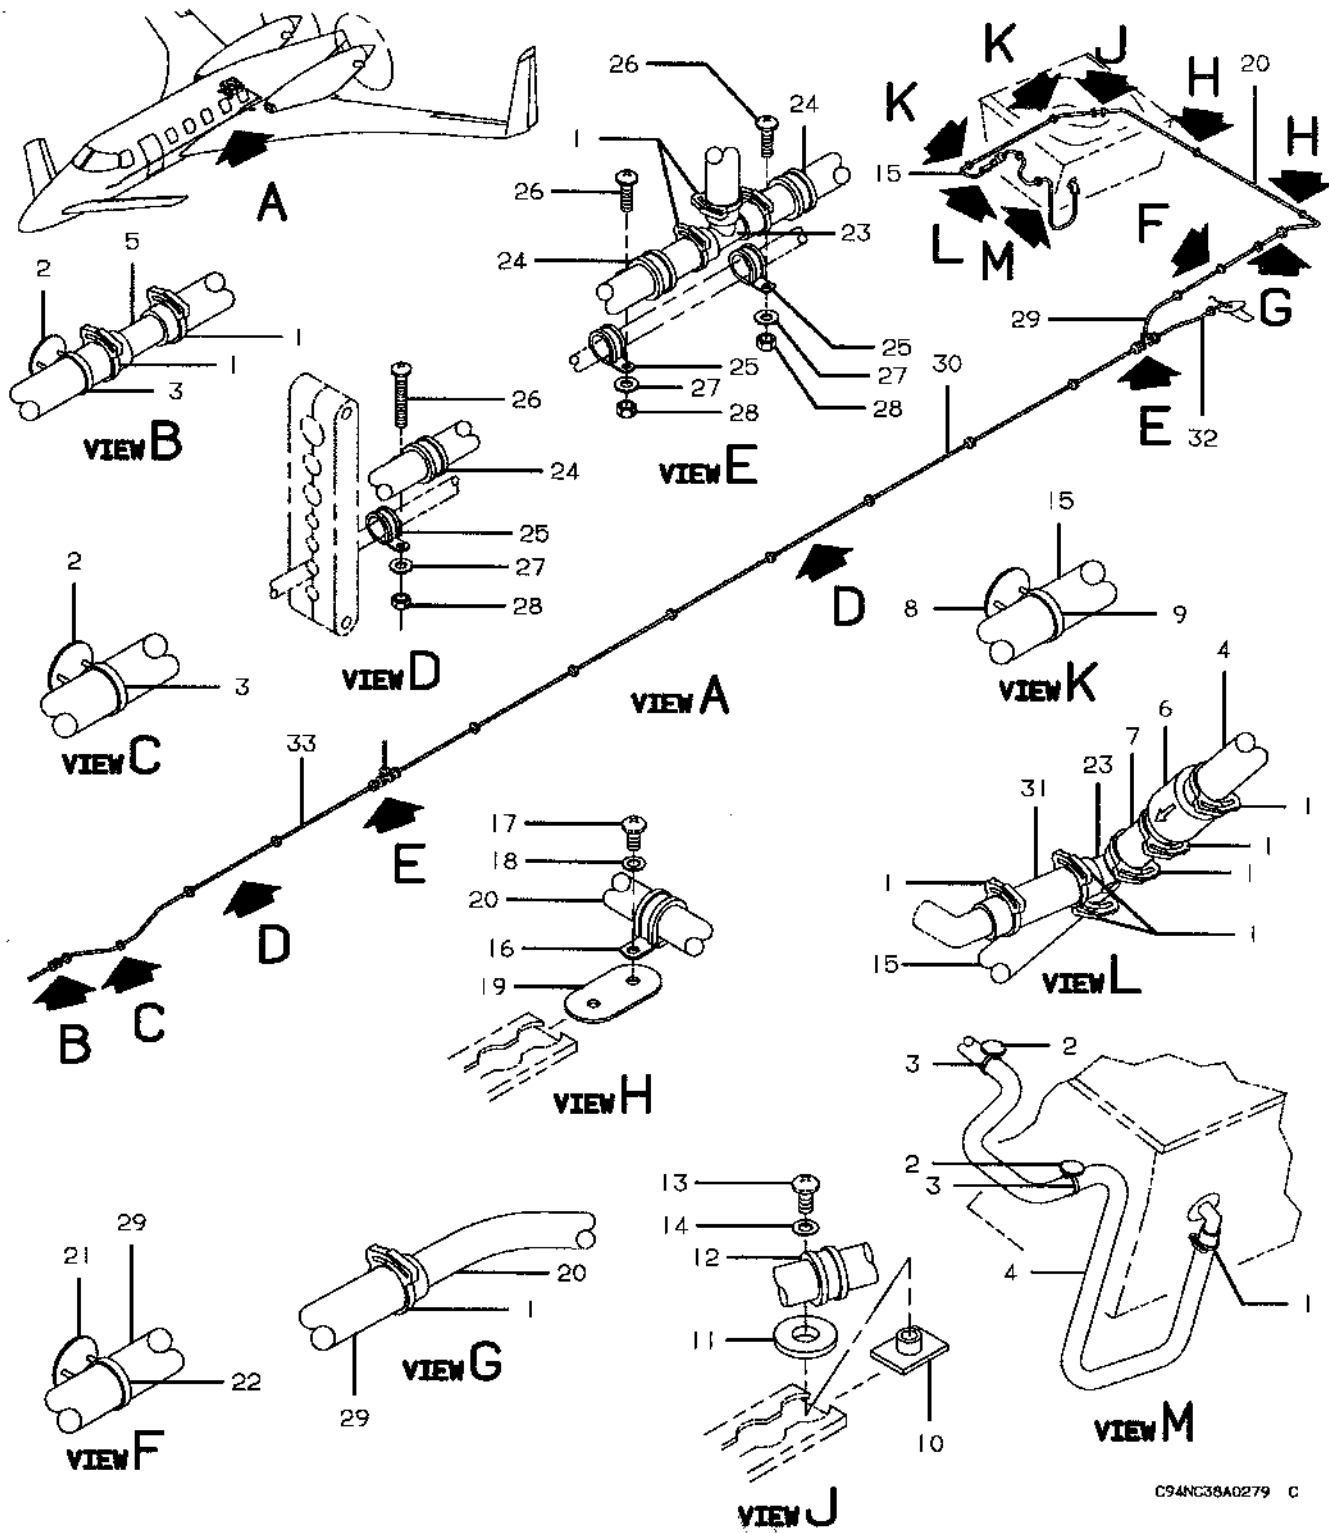



C94NC38A0279 C

FIGURE 30-15.AFT TOILET PLUMBING
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
30-15	122-530373-1	PLUMBING INSTL, AFT TOILET	NP	1
- 1	SNP8	. CLAMP	15	1
- 2	SL6207C1-1	. PLATE	4	1
- 3	MS3367-5-9	. STRAP	4	1
- 4	122-530373-15	. TUBE ASSY	1	1
- 5	P6UCB6	. UNION	1	1
- 6	219822	. VALVE, CHECK	1	1
- 7	122-530373-13	. TUBE ASSY	1	1
- 8	SL6207C1-1	. PLATE	2	1
- 9	MS3367-5-9	. STRAP	2	1
-10	90-530029-7	. PLATE	1	1
-11	122-530297-3	. SPACER	1	1
-12	MS21919WDG6	. CLAMP	1	1
		/ATTACHING PARTS/		
-13	MS35207-262	. SCREW	1	
-14	AN960PD10L	. WASHER	1	
		★		
-15	122-530373-11	. TUBE ASSY	1	1
-16	MS21919WDG6	. CLAMP	2	1
		/ATTACHING PARTS/		
-17	MS35207-262	. SCREW	1	
-18	AN960PD10L	. WASHER	1	
		★		
-19	122-530373-5	. PLATE ASSY	1	1
	MS21073L3	. NUTPLATE	1	1
-20	122-530373-3	. TUBE ASSY	1	1
-21	SL6207C1-1	. PLATE	3	1
-22	MS3367-5-9	. STRAP	3	1
-23	P6TUB6	. TEE	3	1
-24	HP-9N	. CLAMP	13	1
-25	HP-7N	. CLAMP	13	1
		/ATTACHING PARTS/		
-26	MS35206-245	. SCREW	1	
-27	AN960PD8L	. WASHER	1	
-28	MS21042L08	. NUT	1	
		★		
-29	122-530373-9	. TUBE	1	1
-30	122-530373-21	. TUBE	1	1
-31	122-530373-17	. TUBE	1	1
-32	122-530373-19	. TUBE	1	1
-33	122-530373-23	. TUBE	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

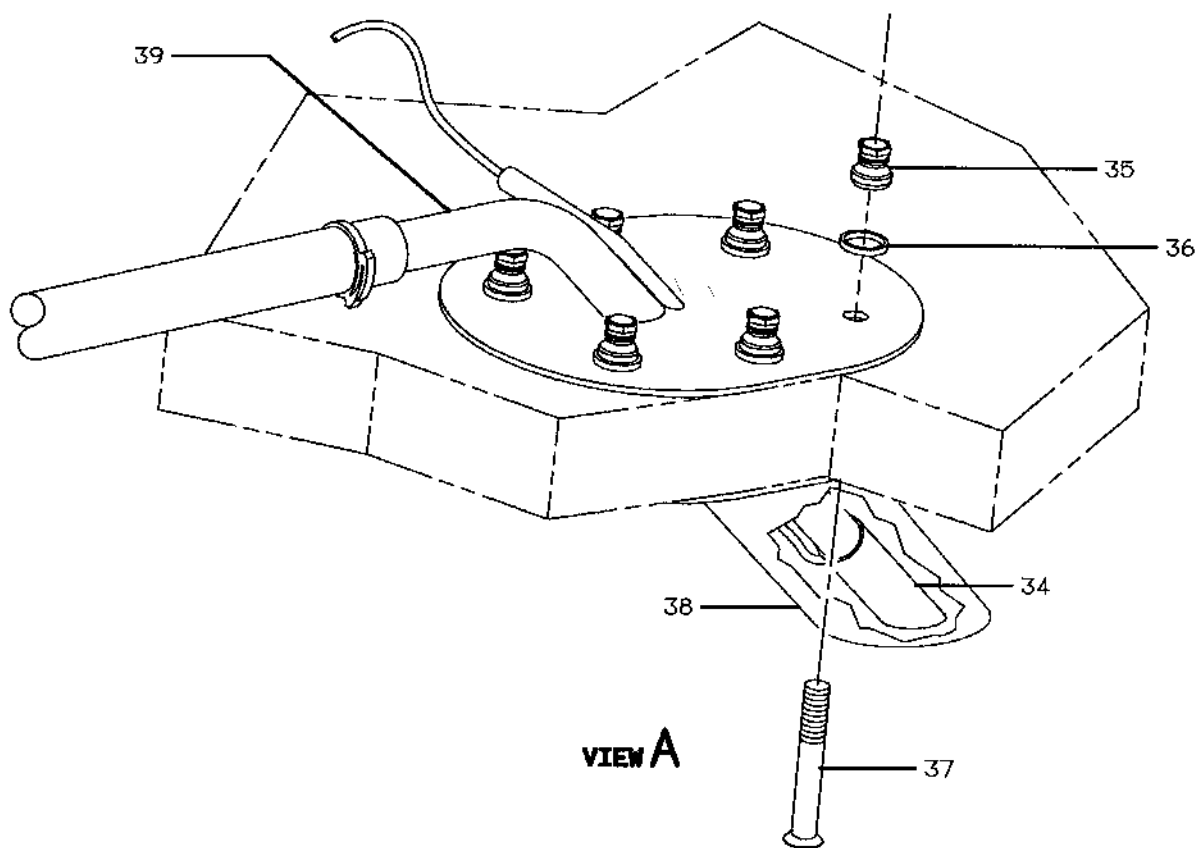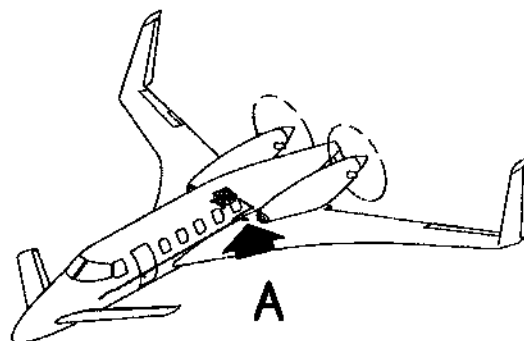

C94NC38A0280 C

FIGURE 30-15.AFT TOILET PLUMBING
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-15	122-530071-3	DRAIN INSTL, OVERBOARD	NP	1
- 34	122-384070-3	. HEATER ELEMENT	1	1
- 35	HL82-6A	. COLLAR	6	1
- 36	HL82-6CU	. WASHER	6	1
- 37	HL11V6-15	. PIN	6	1
- 38	122-530154-15	. SHIELD ASSY	1	1
- 39	122-530154-1	. DRAIN ASSY	1	1


CODES OF EFFECTIVITY

1 NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

38-30-30
OVERBOARD DRAIN PLUMBING
NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

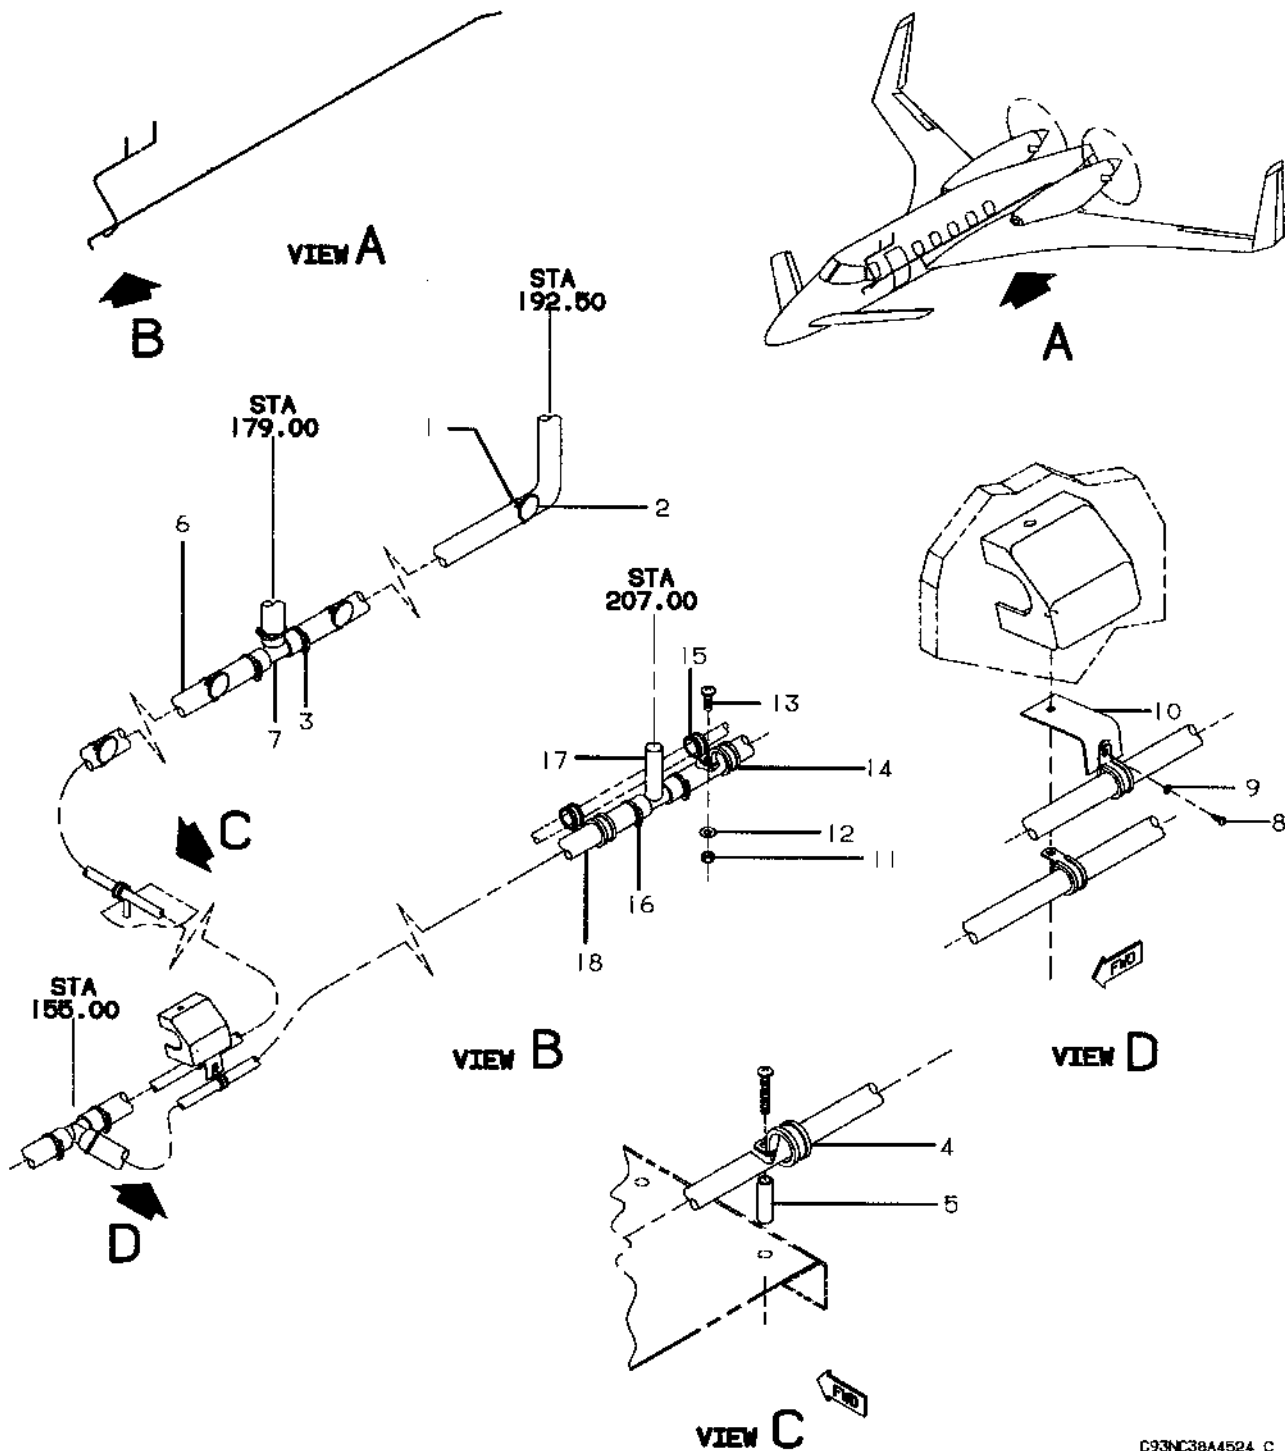


C93NC38A4524 C

FIGURE 30-30.OVERBOARD DRAIN PLUMBING
/SHEET 1 OF 2 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
	122-530320-1	PLUMBING INSTL, OVERBOARD DRAIN	NP	1
- 1	MS3367-5-9	. STRAP	4	1
- 2	SL6207C1-1	. PLATE, TIEDOWN	4	1
- 3	SNP8	. CLAMP	3	1
- 4	HP9N	. CLAMP	2	1
- 5	NAS43DD1-64	. SPACER	2	1
- 6	122-530320-11	. TUBE	1	1
- 7	P6TUB6	. TEE	2	1
- 8	MS35206-245	. SCREW	1	1
- 9	AN960-8L	. WASHER	1	1
- 10	122-530320-3	. BRACKET ASSY	1	1
	130290-1	. CLIP NUT	1	1
- 11	130909N28	. NUT	4	1
- 12	AN960-8L	. WASHER	4	1
- 13	MS35206-245	. SCREW	4	1
- 14	HP9N	. CLAMP	4	1
- 15	HP7N	. CLAMP	4	1
- 16	SNP8	. CLAMP	2	1
- 17	P6TUB6	. TEE	1	1
- 18	122-530320-9	. TUBE	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

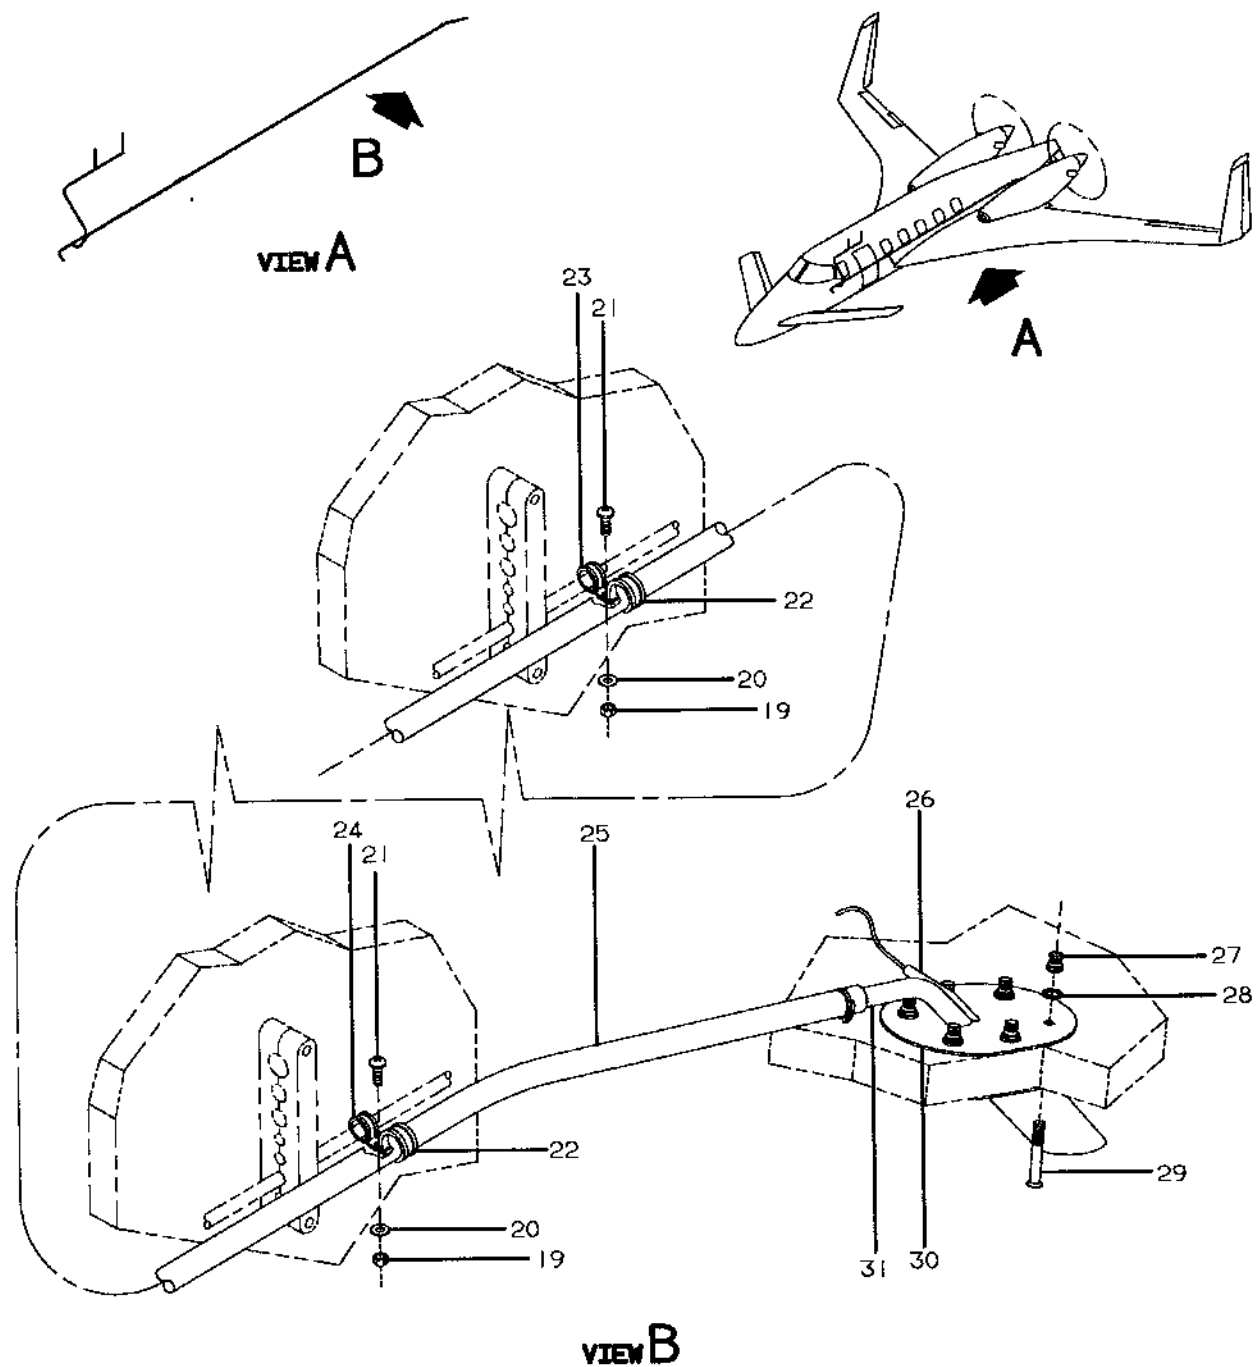

C93NC38A4325 C

FIGURE 30-30.OVERBOARD DRAIN PLUMBING
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-30 -19	130909N28	. NUT	8	1
- 20	AN960-8L	. WASHER	8	1
- 21	MS35208-245	. SCREW	8	1
- 22	HP9N	. CLAMP	8	1
- 23	HP7N	. CLAMP	7	1
- 24	HP5N	. CLAMP	1	1
- 25	122-530320-7	. TUBE	1	1
	122-530071-3	DRAIN INSTL, OVERBOARD	NP	1
- 26	122-384070-3	. HEATER ELEMENT	1	1
- 27	HL82-6A	. COLLAR	6	1
- 28	HL82-6CU	. WASHER	6	1
- 29	HL11V6-15	. PIN	6	1
- 30	122-530154-15	. SHIELD ASSY	1	1
- 31	122-530154-1	. DRAIN ASSY	1	1

CODES OF EFFECTIVITY

1 NC-4 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 39-00-00 ELEC PANELS,PARTS,INST.

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
39-00-00	1	06/30/95	LIST OF PAGES & TABLE OF CONTENTS
39-00-00	2	06/30/95	
39-10-00	1	02/25/94	OVERHEAD LIGHT CONTROL PANEL
39-10-00	2	02/25/94	
39-10-00	3	06/30/95	
39-10-00	4	06/30/95	
39-10-00	5	06/30/95	
39-10-10	1	02/25/94	CONTROL PEDESTAL ASSEMBLY
39-10-10	2	02/25/94	
39-10-10	3	06/30/95	
39-10-10	4	02/25/94	
39-10-10	5	06/30/95	
39-10-10	6	02/25/94	
39-10-10	7	06/30/95	
39-10-20	1	02/25/94	LEFT CIRCUIT BREAKER PANEL
39-10-20	2	02/25/94	
39-10-20	3	06/30/95	
39-10-20	4	02/25/94	
39-10-20	5	06/30/95	
39-10-20	6	02/25/94	
39-10-20	7	06/30/95	
39-10-20	8	02/25/94	
39-10-20	9	02/25/94	
39-10-30	1	02/25/94	RIGHT CIRCUIT BREAKER PANEL
39-10-30	2	06/30/95	
39-10-30	3	06/30/95	
39-10-30	4	02/25/94	
39-10-30	5	06/30/95	
39-10-30	6	06/30/95	
39-10-30	7	06/30/95	
39-10-40	1	02/25/94	AUXILLIARY CIRCUIT BREAKER PANEL
39-10-40	2	02/25/94	
39-10-40	3	06/30/95	
39-10-50	1	02/25/94	AFT FUSELAGE CIRCUIT BREAKER PANEL
39-10-50	2	02/25/94	
39-10-50	3	06/30/95	
39-10-50	4	02/25/94	
39-10-50	5	06/30/95	
39-10-60	1	02/25/94	MAIN INSTRUMENT PANEL
39-10-60	2	06/30/95	
39-10-60	3	06/30/95	
39-10-60	4	06/30/95	
39-10-60	5	06/30/95	
39-10-70	1	02/25/94	INSTRUMENT SUBPANEL
39-10-70	2	02/25/94	NC-4 THRU NC-28
39-10-70	3	06/30/95	
39-10-70	4	02/25/94	
39-10-70	5	06/30/95	
39-10-70	6	02/25/94	
39-10-70	7	06/30/95	
39-10-70	8	02/25/94	
39-10-70	9	06/30/95	
39-10-70	10	06/30/95	
39-10-70	11	06/30/95	
39-10-70	12	02/25/94	
39-10-70	13	06/30/95	
39-10-70	14	06/30/95	
39-10-70	15	06/30/95	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 39-00-00 ELEC PANELS,PARTS,INST.

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
39-10-70	16	02/25/94	
39-10-70	17	06/30/95	
39-10-71	1	02/25/94	INSTRUMENT SUBPANEL
39-10-71	2	02/25/94	NC-29 AND AFTER
39-10-71	3	06/30/95	
39-10-71	4	02/25/94	
39-10-71	5	06/30/95	
39-10-71	6	02/25/94	
39-10-71	7	06/30/95	
39-10-71	8	02/25/94	
39-10-71	9	06/30/95	
39-10-71	10	06/30/95	
39-10-71	11	06/30/95	
39-10-71	12	02/25/94	
39-10-71	13	06/30/95	
39-10-71	14	06/30/95	
39-10-71	15	06/30/95	
39-10-71	16	02/25/94	
39-10-71	17	06/30/95	
39-10-80	1	02/25/94	REVERSIONARY PANELS.....
39-10-80	2	02/25/94	
39-10-80	3	06/30/95	
39-10-80	4	02/25/94	
39-10-80	5	06/30/95	
39-20-00	1	02/25/94	COCKPIT SIDEWALL ELECTRICAL EQUIPMENT.....
39-20-00	2	06/30/95	
39-20-00	3	06/30/95	
39-20-00	4	06/30/95	
39-20-00	5	06/30/95	
39-20-00	6	06/30/95	
39-20-00	7	06/30/95	
39-20-00	8	06/30/95	
39-20-00	9	06/30/95	
39-20-10	1	02/25/94	COCKPIT LOWER ELECTRICAL EQUIPMENT.....
39-20-10	2	06/30/95	
39-20-10	3	06/30/95	
39-20-10	4	02/25/94	
39-20-10	5	06/30/95	
39-20-10	6	02/25/94	
39-20-10	7	06/30/95	
39-20-20	1	02/25/94	AFT STEP ELECTRICAL EQUIPMENT.....
39-20-20	2	06/30/95	
39-20-20	3	06/30/95	
39-20-30	1	02/25/94	AFT FUSELAGE ELECTRICAL EQUIPMENT
39-20-30	2	02/25/94	
39-20-30	3	02/25/94	
39-20-30	4	06/30/95	
39-20-30	5	06/30/95	
39-20-30	6	06/30/95	
39-20-30	7	06/30/95	
39-21-00	1	02/25/94	CENTER SECTION ELECTRICAL EQUIPMENT
39-21-00	2	02/25/94	
39-21-00	3	06/30/95	
39-21-00	4	06/30/95	
39-21-00	5	06/30/95	
39-21-00	6	02/25/94	
39-21-00	7	06/30/95	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-10-00
OVERHEAD LIGHT CONTROL PANEL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

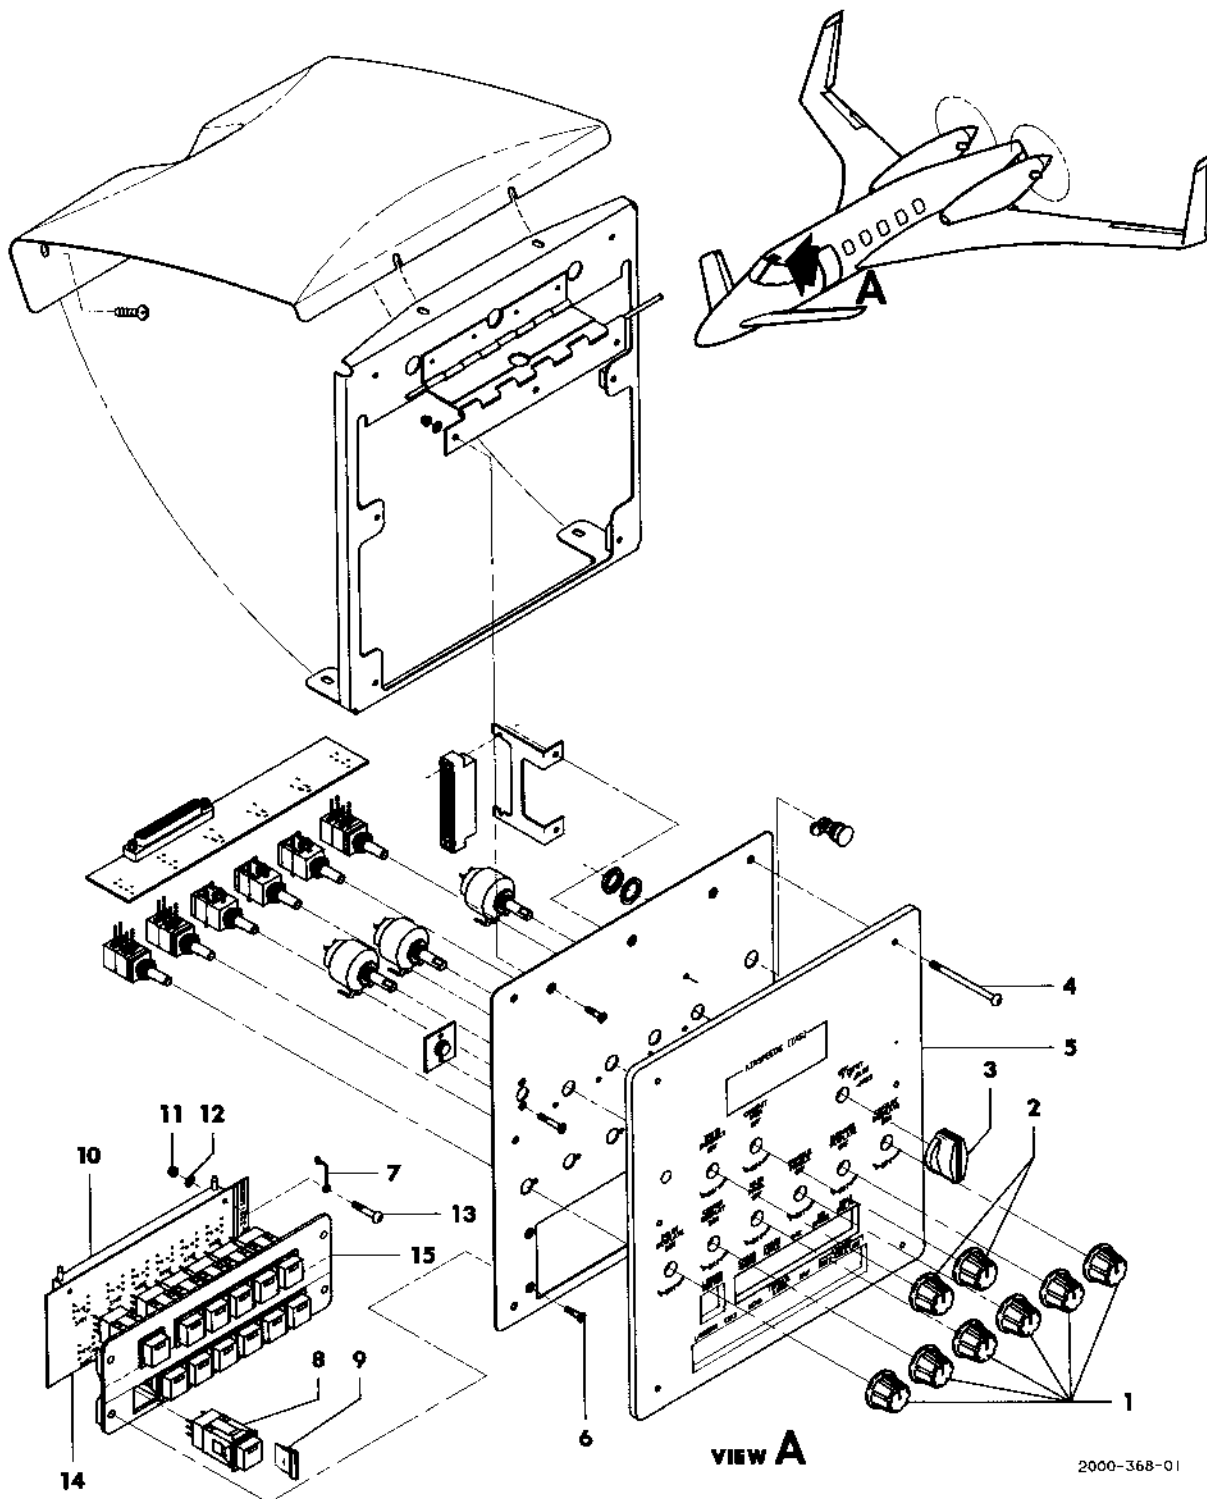


FIGURE 10-00.OVERHEAD LIGHT CONTROL PANEL
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-322016-5	PANEL INSTL, OVERHEAD.....	NP	
- 1	122-382036-23	. KNOB.....	6	
- 2	R 122-382036-13	. KNOB/3 WITH STORM FLOOD LIGHTS/.....	2	
- 3	122-382036-9	. KNOB, WINDSHIELD WIPER CONTROL.....	1	
- 4	MS35214-30	. SCREW.....	8	
- 5	R 122-382058-5	. PANEL ASSY, EL.....	1	1
	R 122-382058-23	. PANEL ASSY, EL.....	1	2
	R 122-382058-9	. PANEL ASSY, EL/WITH TIPSAIL LOGO LIGHTS/.....	1	1
	R 122-382058-27	. PANEL ASSY, EL/WITH TIPSAIL LOGO LIGHTS/.....	1	2
	R 122-382058-13	. PANEL ASSY, EL/WITH STORM FLOOD LIGHTS/.....	1	1
	R 122-382058-21	. PANEL ASSY, EL/WITH STORM FLOOD LIGHTS/.....	1	2
	R 122-382058-17	. PANEL ASSY, EL/WITH STORM FLOOD LIGHTS &.....	1	1
		TIPSAIL LOGO LIGHTS/.....		
	R 122-382058-25	. PANEL ASSY, EL/WITH STORM FLOOD LIGHTS &.....	1	2
		TIPSAIL LOGO LIGHTS/.....		
	122-322140-5	. MODULE ASSY, LIGHT CONTROL SWITCH.....	1	
	122-322140-1	. MODULE ASSY, LIGHT CONTROL SWITCH/WITH.....	1	
		TIPSAIL LOGO LIGHTS/.....		
		/ATTACHING PARTS/.....		
- 6	MS24693S27	. SCREW.....	4	
- 7	103727-1	.. CLIP, SWITCH RETAINER.....	2	
- 8	R 122-382035-1	.. SWITCH ASSY, LIGHT/14 WITH TIPSAIL LOGO.....	13	
- 9	R 122-382035-5	.. LIGHTS/.....		
- 10	1-531580-8	.. BARRIER, SWITCH SEPARATING/11 WITH TIPSAIL.....	10	
		LOGO LIGHTS/.....		
- 11	MS21042L04	.. CONNECTOR.....	1	
- 12	AN960-4L	.. /ATTACHING PARTS/.....		
- 13	MS35206-218	.. NUT.....	2	
		.. WASHER.....	2	
		.. SCREW.....	2	
- 14	122-322142-13	.. PRINTED CIRCUIT BOARD, LIGHT CONTROL.....	1	
	122-322142-33	.. PRINTED CIRCUIT BOARD, LIGHT CONTROL/WITH.....	1	
		TIPSAIL LOGO LIGHTS/.....		
- 15	122-322147-9	.. PANEL ASSY, SWITCH.....	1	
	122-322147-1	.. PANEL ASSY, SWITCH/WITH TIPSAIL.....	1	
		LOGO LIGHTS/.....		
	MS21061L06	... NUTPLATE.....	4	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

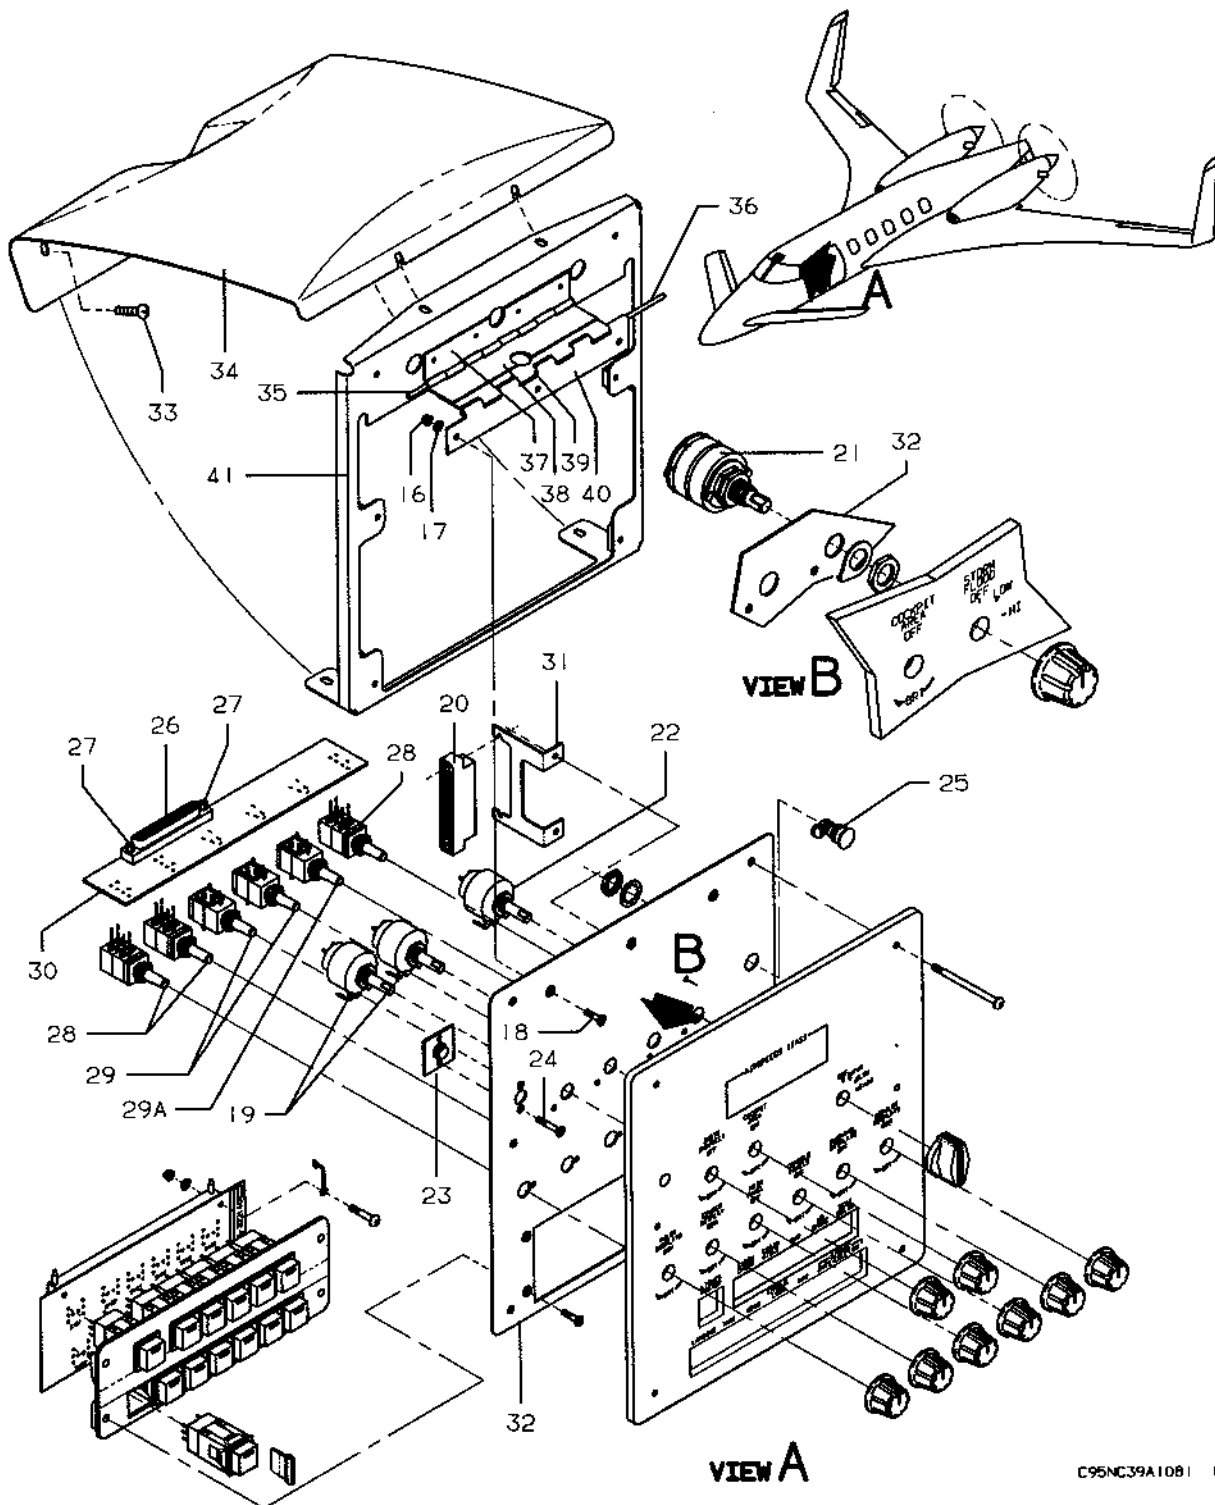


FIGURE 10-00.OVERHEAD LIGHT CONTROL PANEL
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00 - 16	MS21042L06	. NUT	3	
- 17	AN960-6L	. WASHER	3	
- 18	MS24693S25	. SCREW	3	
	122-322094-603	. PANEL ASSY, SWITCH/STANDARD/	1	
- 19	CM42873	. . RESISTOR	2	
	AN960-616	. . WASHER/BETWEEN CM42873 RESISTOR & PANEL/	2	
	200874-1	. . JACK SCREW, CONNECTOR BLOCK	1	
	200875-1	. . JACK SCREW, CONNECTOR BLOCK	1	
	66103-4	. . PIN, CONNECTOR CONTACT	41	
- 20	201301-3	. . CONNECTOR BLOCK	1	
- 21	122-382076-7	. . SWITCH, STORM FLOOD LIGHT	1	
- 22	122-382076-19	. . SWITCH, WINDSHIELD WIPER CONTROL	1	
- 23	101-364179-1	. . SENSOR ASSY, AMBIENT LIGHT	1	
		/ATTACHING PARTS/		
- 24	MS24693S3	. . SCREW	2	
		★-----		
	50-380048-1	. . RELAY	3	
		/ATTACHING PARTS/		
	MS21042L08	. . NUT	2	
	AN960-6L	. . WASHER	2	
	MS24693S27	. . SCREW	2	
		★-----		
	1N4007	. . DIODE	3	
- 25 R	MS90335-6	. . RECEPTACLE, EL PANEL	1	
	122-322163-3	. . MODULE ASSY, POTENTIOMETER	1	
- 26	207829-3	. . CONNECTOR	1	
- 27	207719-1	. . KIT, SCREWLOCK/DISCARD FLAT WASHER/	1	
- 28	122-382083-1	. . POTENTIOMETER, PILOT DISPLAYS, CENTER	3	
		DISPLAY & COPILOT DISPLAYS		
- 29	122-382083-3	. . POTENTIOMETER, MAIN PANEL AND CONSOLE	2	
		PANELS		
- 29A R	122-382083-7	. . POTENTIOMETER, PRESSURE INDICATOR LIGHTS	1	
		/WITH SWITCH/		
- 30	122-322141-29	. . PRINTED CIRCUIT BOARD	1	
	122-322095-5	. . PANEL ASSY	1	
- 31	122-322146-1	. . BRACKET, CONNECTOR SUPPORT	1	
- 32	122-322095-3	. . PANEL	1	
- 33	MS35206-244	. SCREW	4	
- 34	122-322185-1	. . SHIELD	1	
	122-322145-1	. BRACKET ASSY, OVERHEAD	1	
	122-322057-1	. . HINGE ASSY	1	
- 35	105774C-ZE00428	. . PIN	1	
- 36	105774C-ZE00516	. . PIN	1	
- 37	122-322057-3	. . HINGE HALF	1	
- 38	122-322057-5	. . HINGE HALF	1	
- 39	122-322057-7	. . HINGE HALF	1	
- 40	122-322057-9	. . HINGE HALF	1	
	MS21061L06	. . NUTPLATE	4	
	MS21075L06	. . NUTPLATE	2	
- 41	122-322145-3	. . BRACKET	1	

CODES OF EFFECTIVITY


1 NC-4 ONLY

2 NC-5 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-10-10
CONTROL PEDESTAL ASSEMBLY

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

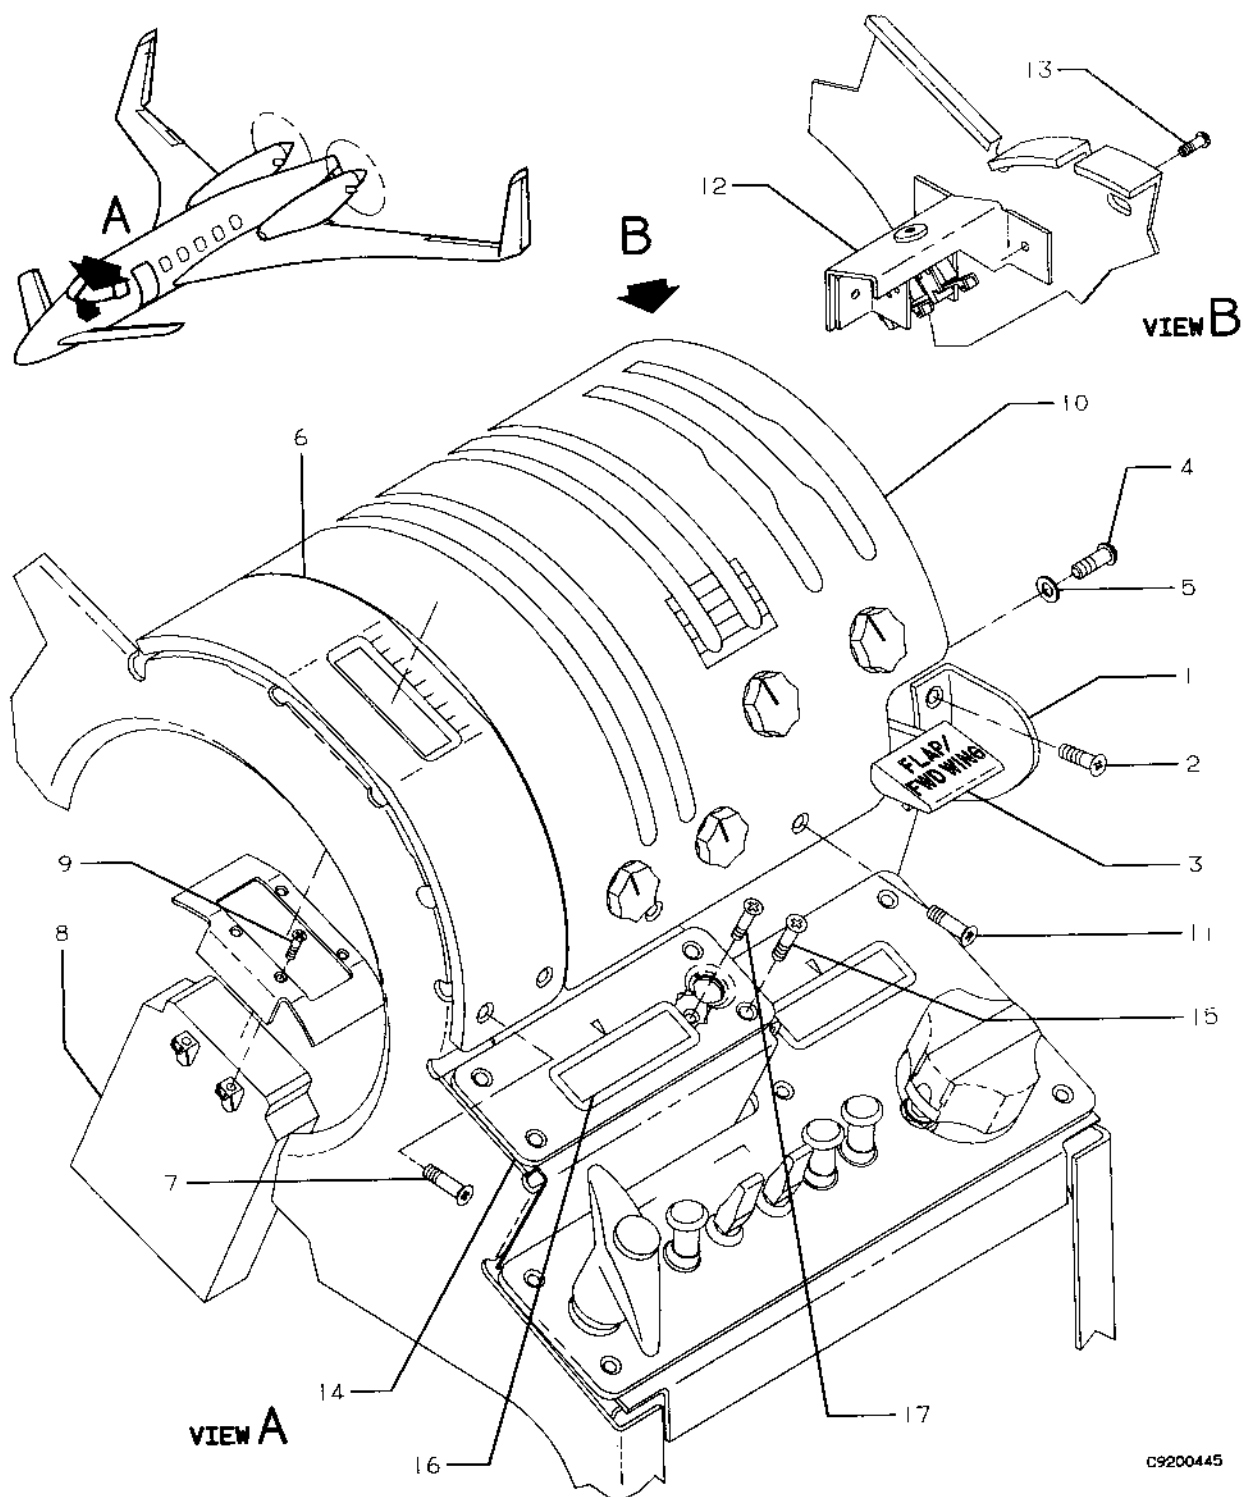


C9200445

FIGURE 10-10. CONTROL PEDESTAL ASSEMBLY
/SHEET 1 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	122-522012-5	PEDESTAL INSTL, CONTROL	NP	
- 1	122-522086-1	. GUARD, FLAP/FWD WING CONTROL SWITCH	1	
		. /ATTACHING PARTS/		
- 2	MS35206-246	. SCREW	2	
		-----★-----		
- 3	122-382037-1	. SWITCH ASSY, FLAP/FWD WING CONTROL	1	
		. /ATTACHING PARTS/		
- 4	MS35206-226	. SCREW	3	
- 5	AN936A6	. WASHER	3	
	R AN960-06L	. WASHER	3	
		-----★-----		
- 6	R 122-382108-5	. PANEL ASSY, EL/PITCH TRIM INDICATOR/	1	
		. /ATTACHING PARTS/		
- 7	MS35214-28	. SCREW	4	
		-----★-----		
- 8	122-382113-3	. INDICATOR, PITCH TRIM	1	
		. /ATTACHING PARTS/		
- 9	MS24693S4	. SCREW	4	
		-----★-----		
- 10	R 122-382110-3	. PANEL ASSY, EL/ENGINE CONTROLS/	1	
		. /ATTACHING PARTS/		
- 11	MS35214-28	. SCREW	7	
		-----★-----		
	R 122-522066-1	. SWITCH INSTL, THROTTLE GO AROUND	NP	
		. /SEE CHAPTER 76/		
	R 122-522098-3	. MECHANISM INSTL, ENGINE CONTROLS UPPER	NP	
		. /SEE CHAPTER 76/		
	R 122-522035-5	. QUADRANT INSTL, ENGINE CONTROLS LOWER	NP	
		. /SEE CHAPTER 76/		
- 12	99-524043	. SWITCH ASSY, CONDITION LEVER FUEL CUTOFF	1	
		. /SEE CHAPTER 73/		
		. /ATTACHING PARTS/		
- 13	MS35206-243	. SCREW	2	
		-----★-----		
- 14	R 122-382112-5	. PANEL ASSY, EL/ROLL TRIM/	1	
		. /ATTACHING PARTS/		
- 15	MS35214-28	. SCREW	4	
		-----★-----		
	R MS90335-6	. RECEPTACLE, EL PANEL	1	
- 16	122-382005-9	. INDICATOR, ROLL TRIM	1	
		. /ATTACHING PARTS/		
- 17	MS24693S4	. SCREW	2	
		-----★-----		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

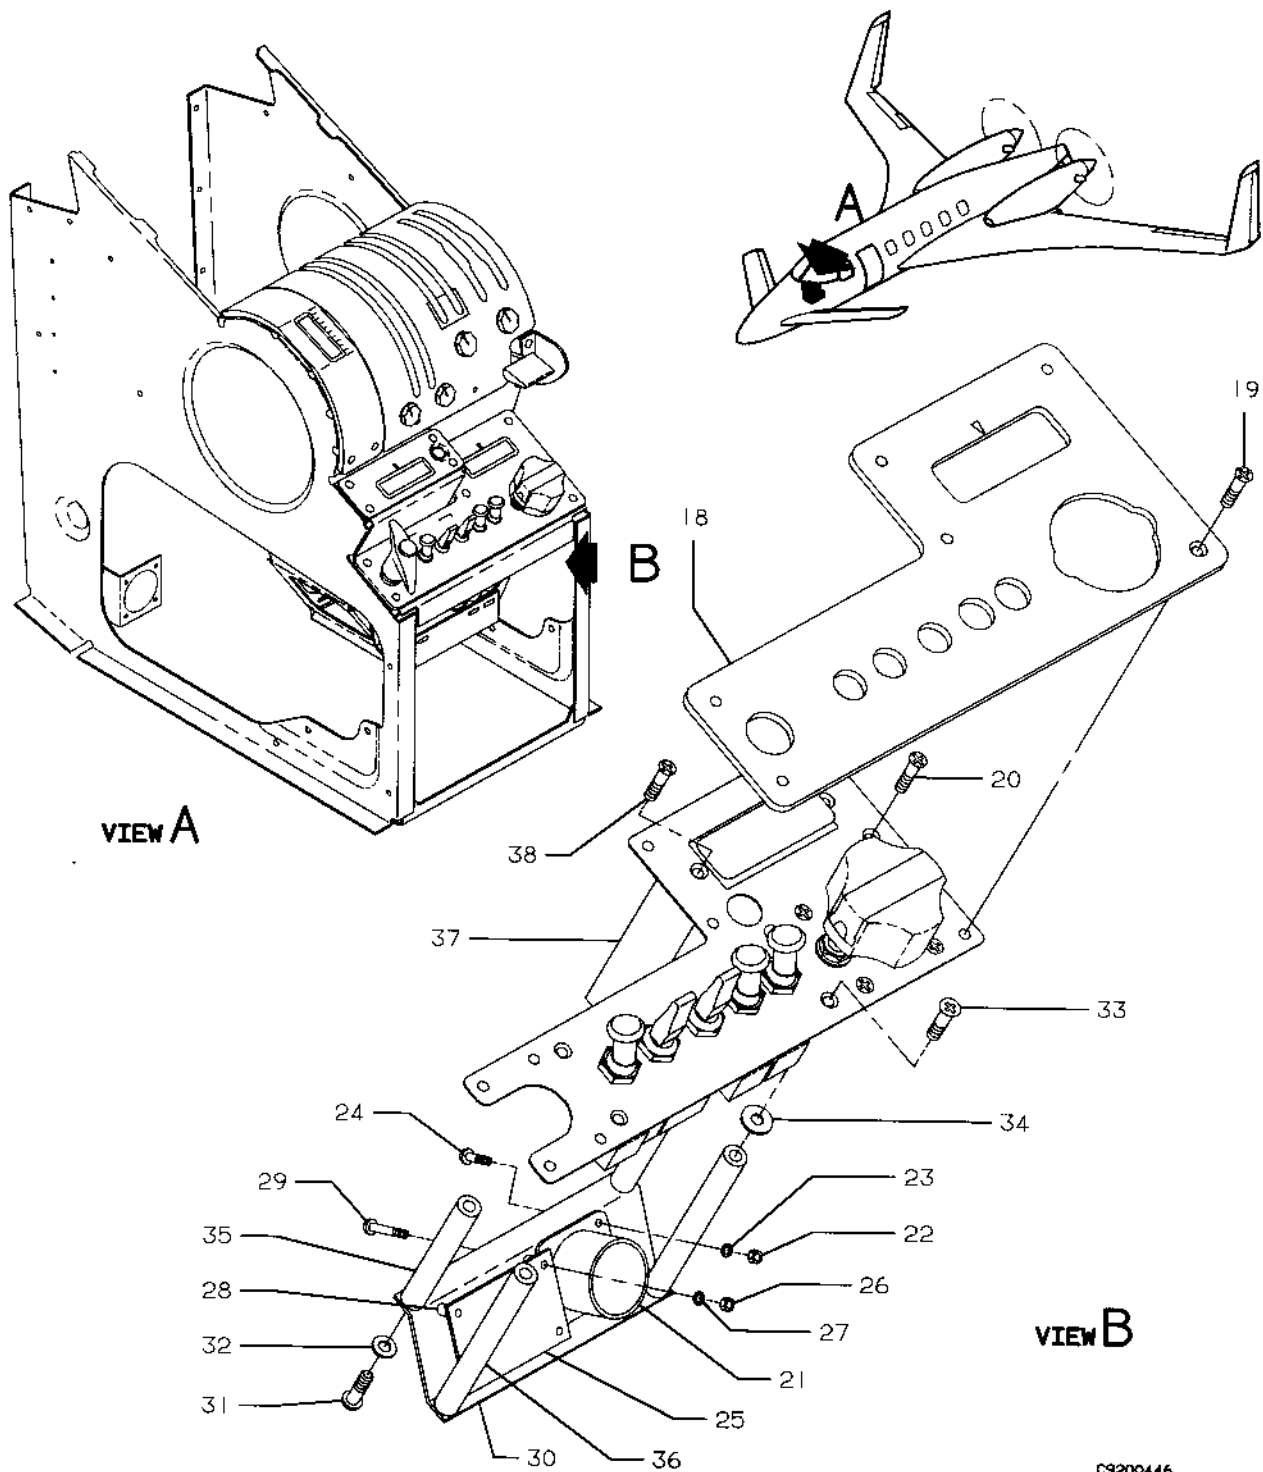

C9200446

FIGURE 10-10. CONTROL PEDESTAL ASSEMBLY
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 - 18	R 122-382111-7	. PANEL ASSY, EL/TRIM SWITCHES & RUDDER TRIM..... INDICATOR/ /ATTACHING PARTS/	1	
- 19	MS35214-28	. SCREW..... -----★-----	6	
	R 122-522104-3	. PANEL ASSY, EL/TRIM SWITCHES & RUDDER TRIM..... INDICATOR/ /ATTACHING PARTS/	1	
- 20	R MS24693S26	. SCREW..... -----★-----	4	
- 21	MS3470L20-41P	. RECEPTACLE..... /ATTACHING PARTS/	1	
- 22	MS21042L04	. NUT.....	4	
- 23	AN960-4L	. WASHER.....	4	
- 24	MS35206-213	. SCREW..... -----★-----	4	
- 25	R 122-340169-1	. PRINTED CIRCUIT BOARD ASSY, STBY TRIM..... /ATTACHING PARTS/	1	
- 26	MS21042L04	. NUT.....	4	
- 27	AN960-4L	. WASHER.....	4	
- 28	NAS43DD0-16	. SPACER.....	4	
- 29	MS35206-218	. SCREW..... -----★-----	4	
- 30	122-322039-15	. PLATE, CONNECTOR..... /ATTACHING PARTS/	1	
- 31	MS35206-228	. SCREW.....	4	
- 32	NAS620-6L	. WASHER..... -----★-----	4	
- 33	MS24693S26	. SCREW.....	4	
- 34	AN960-6	. WASHER.....	4	
- 35	1711-632A0	. SPACER.....	2	
- 36	1718-632A0	. SPACER.....	2	
- 37	122-382005-9	. INDICATOR, RUDDER TRIM..... /ATTACHING PARTS/	1	
- 38	MS24693S4	. SCREW..... -----★-----	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

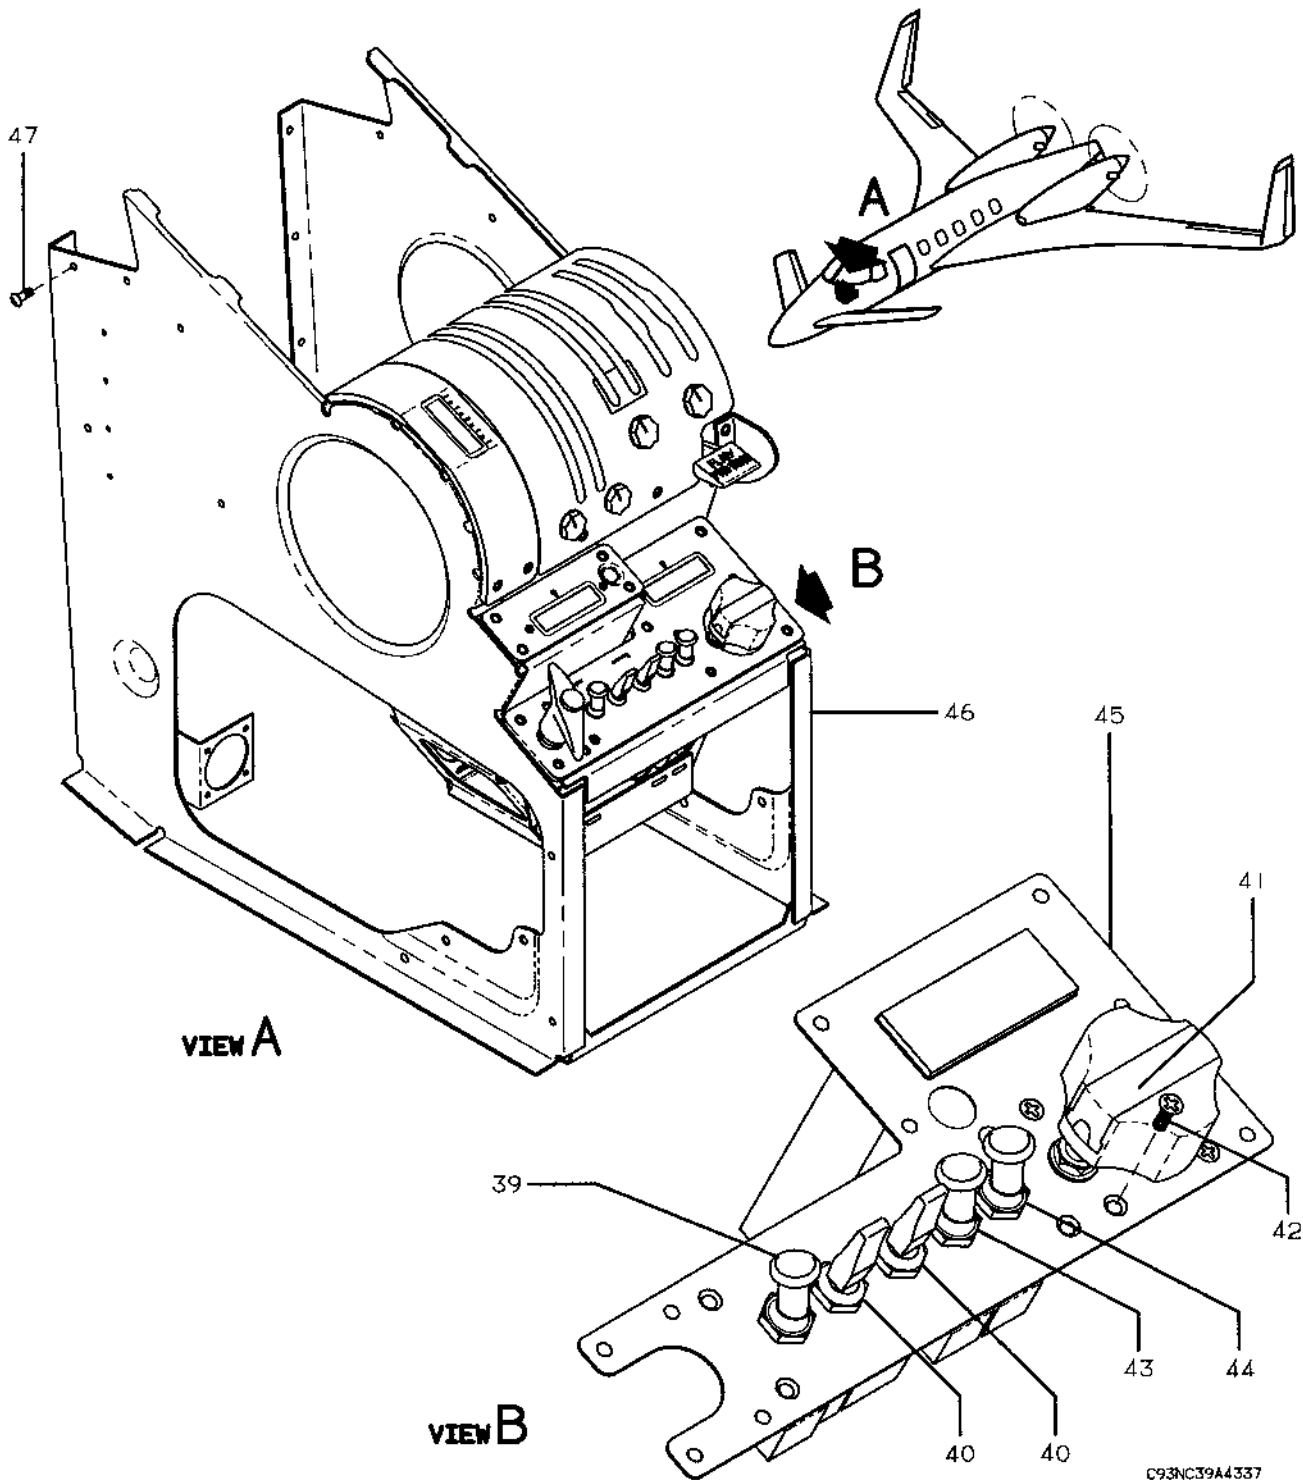


FIGURE 10-10. CONTROL PEDESTAL ASSEMBLY
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 -39	R A3-1228	.. SWITCH, PITCH TRIM OFF/RESET, STBY/SEE NOTE/	1	
	R 64AT59-1A	.. SWITCH, PITCH TRIM OFF/RESET, STBY/SEE NOTE/	1	
		.. /ALTERNATE FOR 64AT59-1A/		
- 40	R 2TL119-7A02	.. SWITCH, STBY PITCH TRIM/SEE NOTE/	2	
	R 8567K2M27	.. SWITCH, STBY PITCH TRIM/SEE NOTE/	2	
		.. /ALTERNATE FOR 8567K2M27/		
- 41	122-382145-1	.. SWITCH, RUDDER TRIM	1	
		.. /ATTACHING PARTS/		
- 42	MS35206-243	.. SCREW	4	
		-----★-----		
- 43	R A3-1227	.. SWITCH, ROLL TRIM OFF/RESET/SEE NOTE/	1	
	R 62AT59-3D	.. SWITCH, ROLL TRIM OFF/RESET/SEE NOTE/	1	
		.. /ALTERNATE FOR A3-1227/		
- 44	R A3-1227	.. SWITCH, RUDDER TRIM OFF/RESET/SEE NOTE/	1	
	R 62AT59-3D	.. SWITCH, RUDDER TRIM OFF/RESET/SEE NOTE/	1	
		.. /ALTERNATE FOR 62AT59-3D/		
	R MS90335-6	.. RECEPTACLE, EL PANEL	1	
- 45	122-522105-9	.. PANEL	1	
	122-322219-1	.. HARNESS ASSY, WIRING	1	
	R 130909N29	.. NUT	3	
	R AN960JD10L	.. WASHER	3	
	R MS35207-264	.. SCREW	3	
	MS25083-2BB8	.. JUMPER, BONDING	2	
- 46	122-522094-3	.. STRUCTURE ASSY, CONTROL PEDESTAL	1	
		.. /SEE CHAPTER 53/		
		.. /ATTACHING PARTS/		
- 47	AN525-10R7	.. SCREW	12	
		-----★-----		

NOTE DO NOT INTERMIX VENDOR PARTS ON ANY ONE
AIRCRAFT/DO NOT CROSS CODE/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-10-20
LEFT CIRCUIT BREAKER PANEL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG



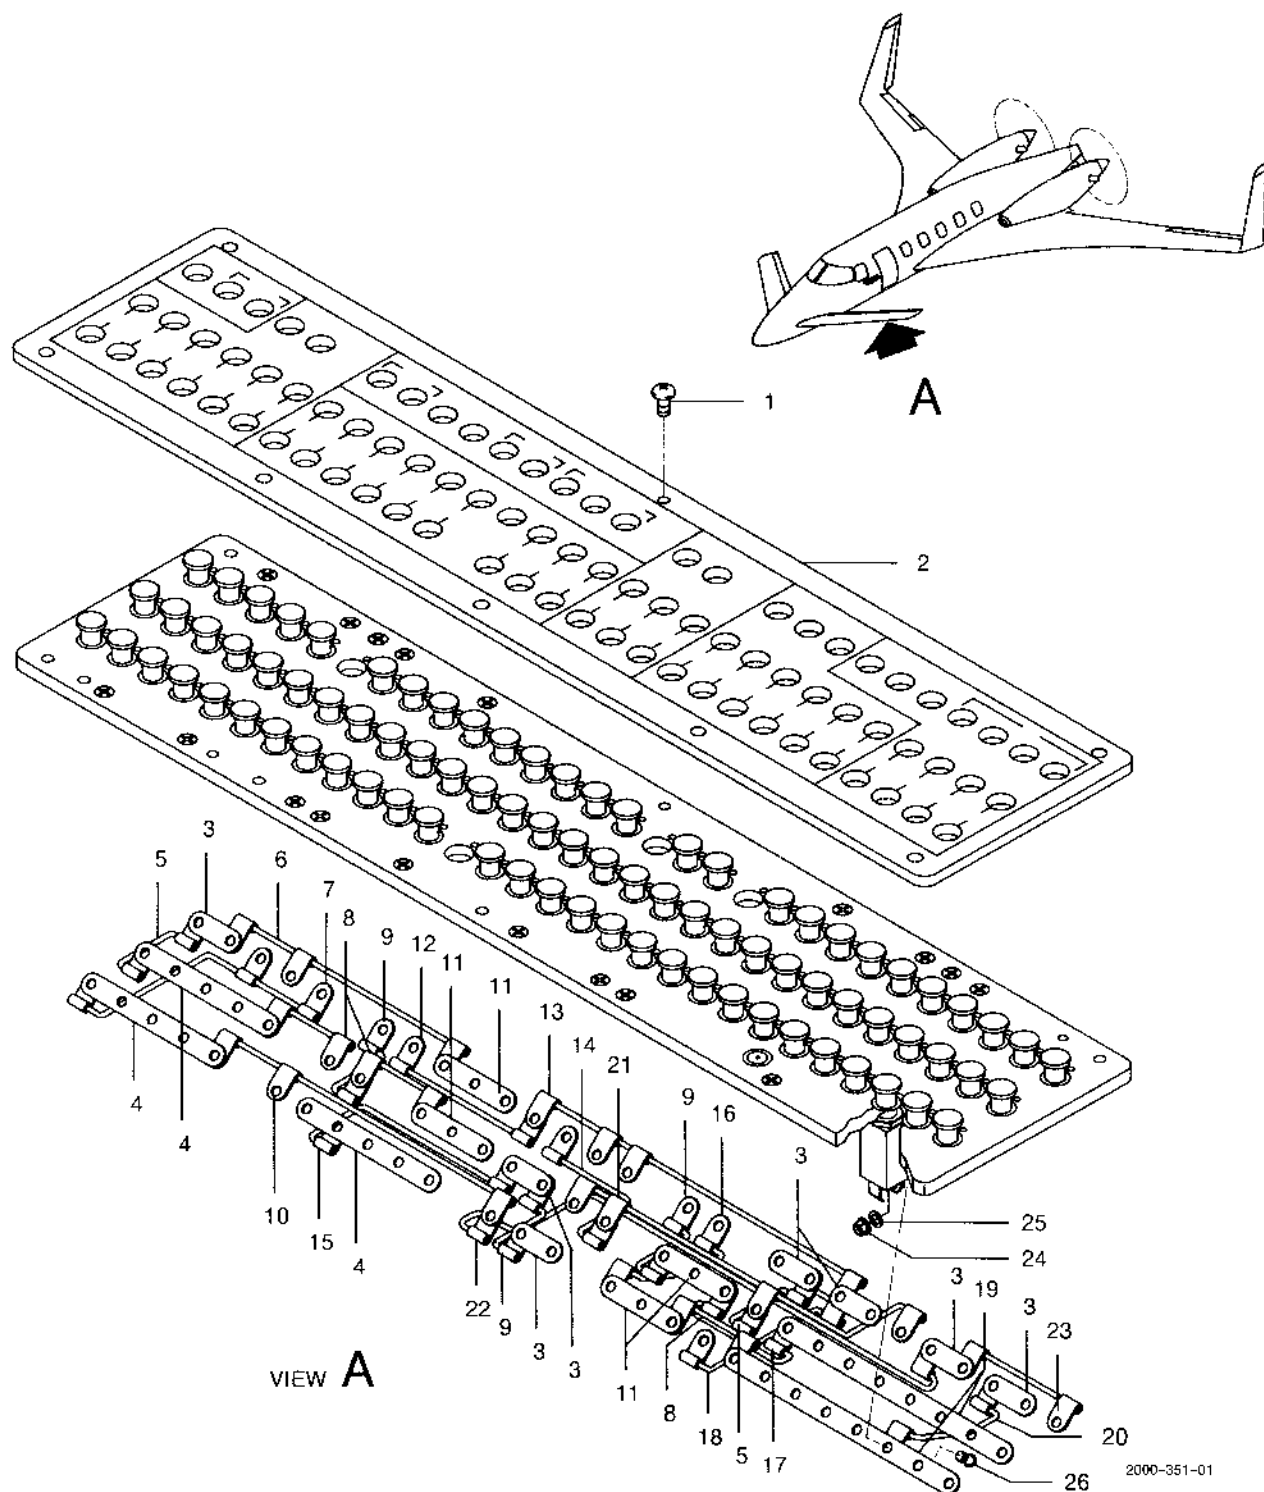


FIGURE 10-20.LEFT CIRCUIT BREAKER PANEL
/SHEET 1 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC								UNITS	USABLE
UNIT &	PART	DESCRIPTION						PER	ON
ITEM NO	NO.	1 2 3 4 5 6 7						ASSY	CODE
10-20	122-322064-5	PANEL INSTL, LEFT CIRCUIT BREAKER						NP	
- 1	MS35214-28	. SCREW.....						10	
- 2	R 122-382105-11	. PANEL ASSY, EL/STANDARD/.....						1	
	R 122-382105-9	. PANEL ASSY, EL/OPTIONAL/BRAKE DEICE/						1	
	122-322239-1	. PANEL ASSY, CIRCUIT BREAKER.....						1	
- 3	50-369101-205	. . BUS BAR.....						7	
- 4	50-369101-225	. . BUS BAR.....						3	
- 5	122-322184-43	. . BUS BAR.....						2	
- 6	122-322184-123	. . BUS BAR.....						1	
- 7	122-322184-125	. . BUS BAR.....						1	
- 8	122-322184-31	. . BUS BAR.....						3	
- 9	122-322184-33	. . BUS BAR.....						3	
- 10	122-322184-121	. . BUS BAR.....						1	
- 11	50-369101-207	. . BUS BAR.....						4	
- 12	122-322184-25	. . BUS BAR.....						1	
- 13	122-322184-113	. . BUS BAR.....						1	
- 14	122-322184-129	. . BUS BAR.....						1	
- 15	122-322184-127	. . BUS BAR.....						1	
- 16	122-322184-115	. . BUS BAR.....						1	
- 17	122-322184-119	. . BUS BAR.....						1	
- 18	122-322184-73	. . BUS BAR.....						1	
- 19	50-369101-235	. . BUS BAR.....						2	
- 20	122-322184-115	. . BUS BAR.....						1	
- 21	122-322184-135	. . BUS BAR.....						1	
- 22	122-322184-131	. . BUS BAR.....						1	
- 23	122-322184-27	. . BUS BAR.....						1	
- 24	MS21042L06	. . NUT						AR	
- 25	AN960-6L	. . WASHER						AR	
- 26	MS35206-227	. . SCREW.....						AR	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

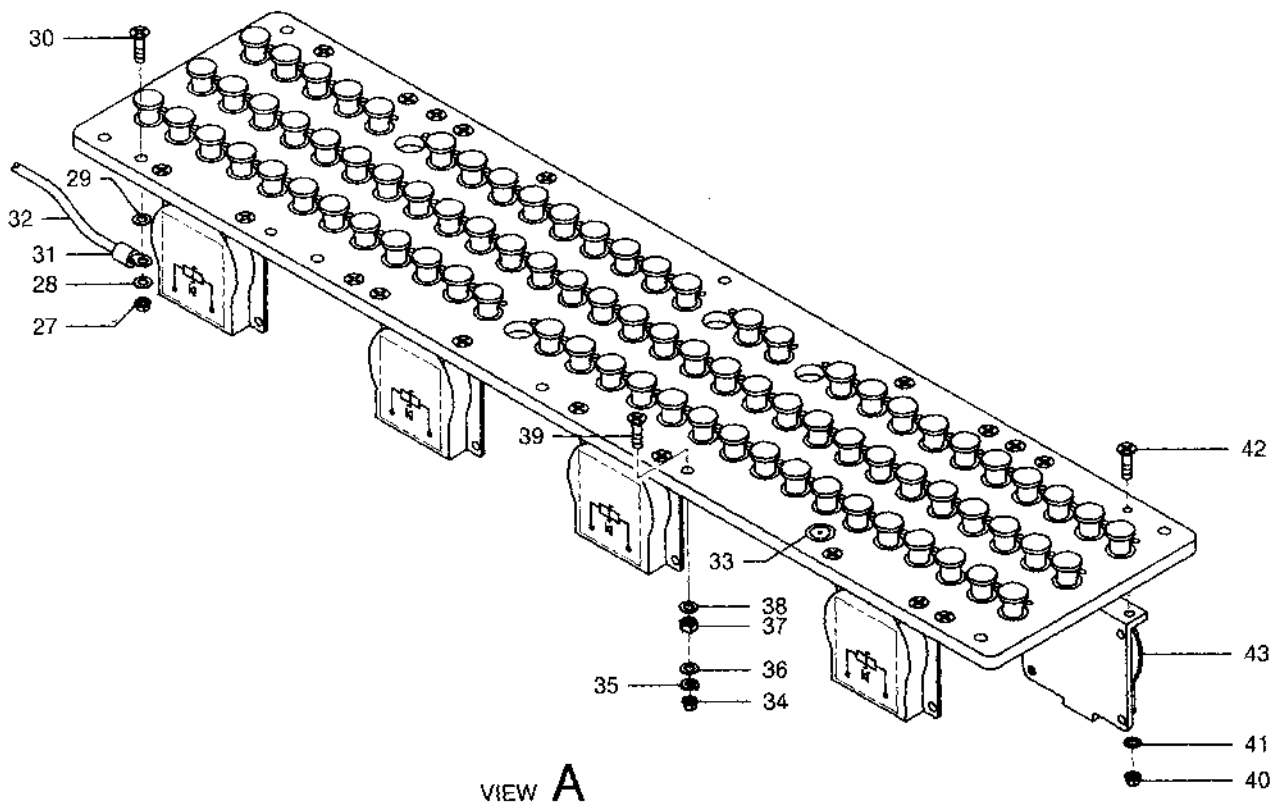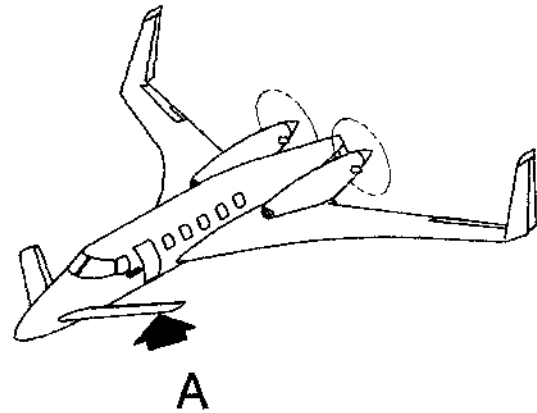



2000-351-02

FIGURE 10-20. LEFT CIRCUIT BREAKER PANEL
/SHEET 2 OF 4 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20 - 27	MS21042L06	.. NUT	1	
- 28	AN960-6L	.. WASHER	1	
- 29 R	AN960D8	.. WASHER	1	
- 30	MS24693S28	.. SCREW	1	
- 31	MS25083-2AA6	.. JUMPER, BONDING	1	
- 32	106242C31-00600	.. TUBING, HEAT SHRINK	AR	
- 33	MS90335-6	.. RECEPTACLE	1	
- 34	MS21042L06	.. NUT	6	
- 35	MS35338-41	.. WASHER, LOCK	6	
- 36	AN960-6L	.. WASHER	6	
- 37	MS35649-262	.. NUT	6	
- 38	AN960D8	.. WASHER	6	
- 39	MS24693S28	.. SCREW	6	
- 40 R	MS21042L06	.. NUT	18	
- 41	AN960-6L	.. WASHER	18	
- 42	MS24693S28	.. SCREW	18	
- 43	122-380062-1	.. VARISTOR	9	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

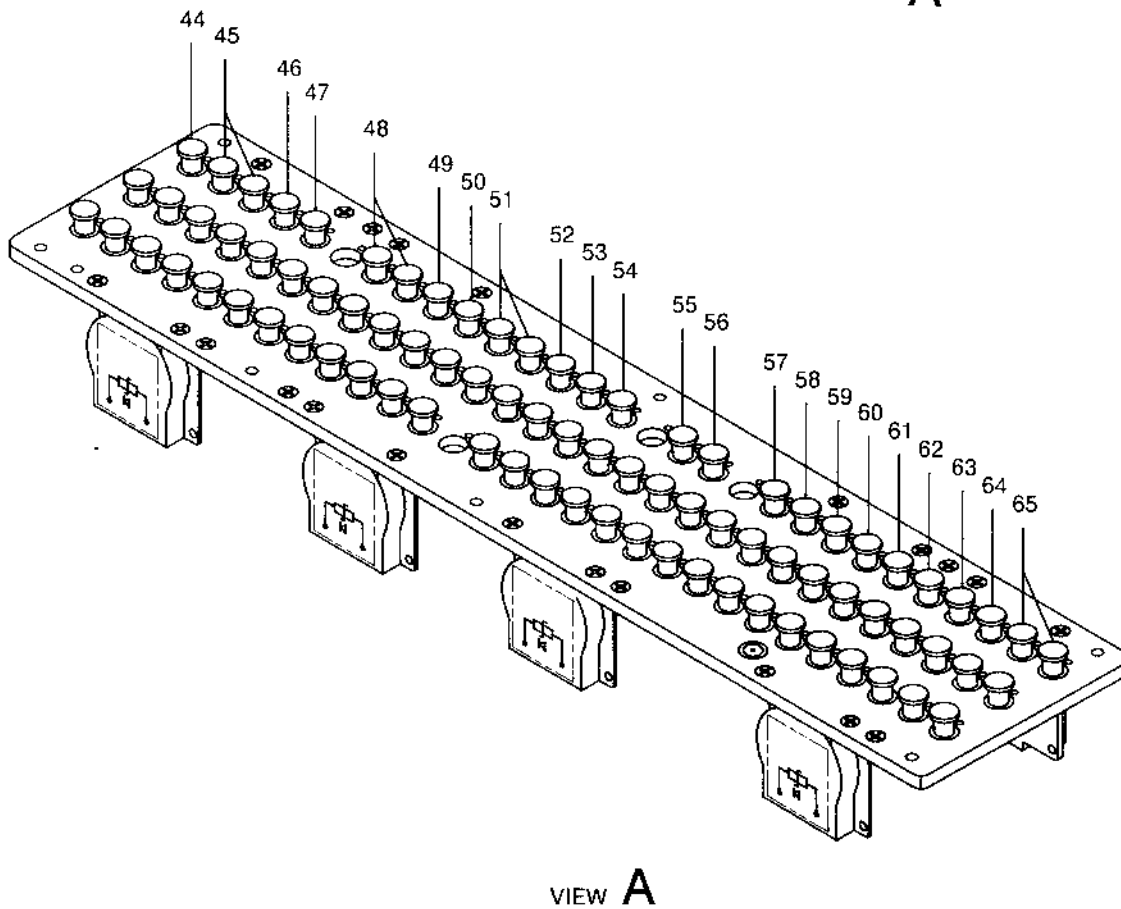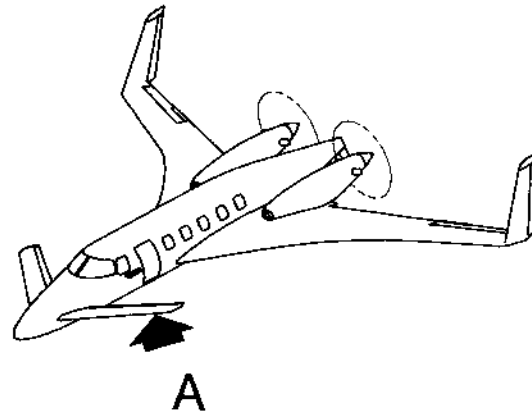



VIEW **A**

2000-351-21

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20	- 44	131984-5	.. CIRCUIT BREAKER, GEN RESET	1	
	- 45	131984-5	.. CIRCUIT BREAKER, BUS TIE CONTROL LEFT AND RIGHT	2	
	- 46	131984-5	.. CIRCUIT BREAKER, CABIN DIFF	1	
	- 47	131984-5	.. CIRCUIT BREAKER, LANDING GEAR	1	
	- 48	131984-5	.. CIRCUIT BREAKER, PNEU IND LEFT AND RIGHT	2	
	- 49	131984-5	.. CIRCUIT BREAKER, PRESS SYS	1	
	- 50	131984-5	.. CIRCUIT BREAKER, OXY CONTROL	1	
	- 51	131984-7	.. CIRCUIT BREAKER, BLEED AIR LEFT AND RIGHT	2	
	- 52	131984-5	.. CIRCUIT BREAKER, BLOWER CONT CKPT	1	
	- 53	131984-5	.. CIRCUIT BREAKER, BLOWER CONT CABIN	1	
	- 54	131984-5	.. CIRCUIT BREAKER, BLOWER CONT COND	1	
	- 55	131984-5	.. CIRCUIT BREAKER, FUEL TEMP	1	
	- 56	R 131984-5	.. CIRCUIT BREAKER, FUEL TRANSFER	1	
	- 57	131984-5	.. CIRCUIT BREAKER, AUTO FEATHER	1	
	- 58	131984-10	.. CIRCUIT BREAKER, PROP GOV TEST	1	
	- 59	131984-5	.. CIRCUIT BREAKER, PROP SYNC	1	
	- 60	131984-5	.. CIRCUIT BREAKER, ANTI SKID	1	
	- 61	131984-5	.. CIRCUIT BREAKER, WSHLD WIPER CONTROL	1	
	- 62	131984-5	.. CIRCUIT BREAKER, STATIC SOURCE SELECTOR	1	
	- 63	131984-5	.. CIRCUIT BREAKER, FLAP IND	1	
	- 64	131984-5	.. CIRCUIT BREAKER, FLAP CONTROL	1	
	- 65	131984-5	.. CIRCUIT BREAKER, FLAP MONITOR LEFT AND RIGHT	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

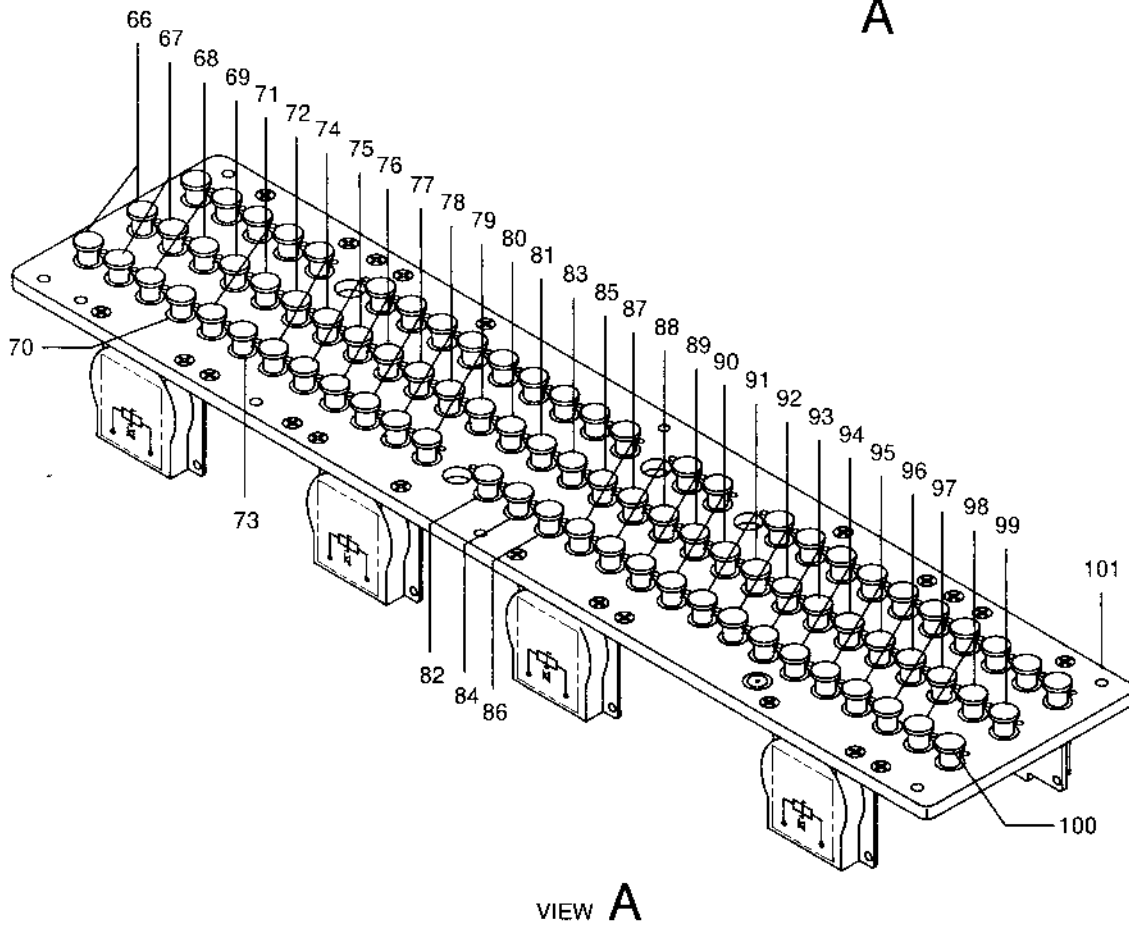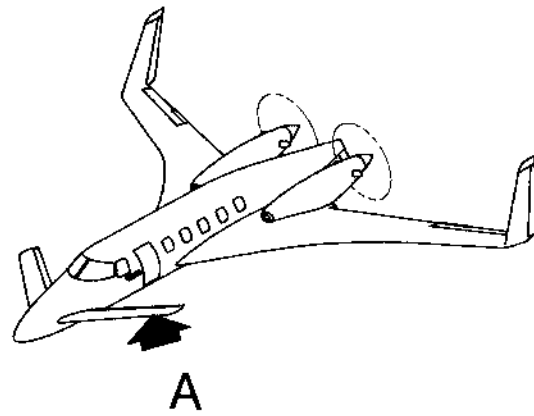

2000-351-42

FIGURE 10-20.LEFT CIRCUIT BREAKER PANEL
/SHEET 4 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20 -66	131984-5	.. CIRCUIT BREAKER, FUEL QTY LEFT AND RIGHT	2	
-67	131984-5	.. CIRCUIT BREAKER, FUEL PRESS LEFT AND RIGHT	2	
-68	131984-5	.. CIRCUIT BREAKER, OIL PRESS LEFT AND RIGHT	2	
-69	131984-5	.. CIRCUIT BREAKER, BLEED AIR FAIL	1	
-70	131984-5	.. CIRCUIT BREAKER, CABIN ALT	1	
-71	131984-5	.. CIRCUIT BREAKER, STALL LEFT AND RIGHT	2	
-72	131984-5	.. CIRCUIT BREAKER, CONTROL COLUMN MOTOR	1	
		PUSHER		
-73	131984-5	.. CIRCUIT BREAKER, CONTROL COLUMN CLUTCH	1	
		PUSHER		
-74	131984-5	.. CIRCUIT BREAKER, MAIN ENG LEFT AND RIGHT	2	
-75	131984-5	.. CIRCUIT BREAKER, STBY ENG LEFT AND RIGHT	2	
-76	131984-15	.. CIRCUIT BREAKER, PITOT STATIC LEFT AND	2	
		RIGHT		
-77	131984-5	.. CIRCUIT BREAKER, FUEL VENT LEFT AND RIGHT	2	
-78	131984-7	.. CIRCUIT BREAKER, STALL WARNING LEFT AND	2	
		RIGHT		
-79	131984-5	.. CIRCUIT BREAKER, WSHLD CONT LEFT AND RIGHT	2	
-80	131984-5	.. CIRCUIT BREAKER, STBY WSHLD LEFT	1	
-81	131984-5	.. CIRCUIT BREAKER, SURFACE DEICE MONITOR	1	
-82	131984-7	.. CIRCUIT BREAKER, SURFACE DEICE MANUAL	1	
-83	131984-7	.. CIRCUIT BREAKER, SURFACE DEICE MAIN	1	
-84	131984-7	.. CIRCUIT BREAKER, SURFACE DEICE STBY	1	
-85	131984-15	.. CIRCUIT BREAKER, ICE DETR MAIN	1	
-86	131984-15	.. CIRCUIT BREAKER, ICE DETR STBY	1	
-87	131984-5	.. CIRCUIT BREAKER, F/W VALVE LEFT AND RIGHT	2	
-88	131984-5	.. CIRCUIT BREAKER, FUEL QTY LEFT AND RIGHT	2	
-89	131984-15	.. CIRCUIT BREAKER, STBY PUMP LEFT AND RIGHT	2	
-90	131984-5	.. CIRCUIT BREAKER, EDC CH A LEFT AND RIGHT	2	
-91	131984-5	.. CIRCUIT BREAKER, CHIP DETR LEFT AND RIGHT	2	
-92	131984-5	.. CIRCUIT BREAKER, FIRE DETR LEFT AND RIGHT	2	
-93	131984-5	.. CIRCUIT BREAKER, OIL PRESS LEFT AND RIGHT	2	
-94	131984-5	.. CIRCUIT BREAKER, IGNTR POWER LEFT AND	2	
		RIGHT		
-95	131984-5	.. CIRCUIT BREAKER, START CONTROL LEFT AND	2	
		RIGHT		
-96	131984-5	.. CIRCUIT BREAKER, ROLL TRIM A AND B	2	
-97	131984-5	.. CIRCUIT BREAKER, PITCH TRIM A AND B	2	
-98	131984-5	.. CIRCUIT BREAKER, RUDDER TRIM A AND B	2	
-99	131984-5	.. CIRCUIT BREAKER, LANDING GEAR IND	1	
-100	131984-5	.. CIRCUIT BREAKER, LANDING GEAR CONTROL	1	
-101	122-322060-43	.. PANEL	1	

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-10-30
RIGHT CIRCUIT BREAKER PANEL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

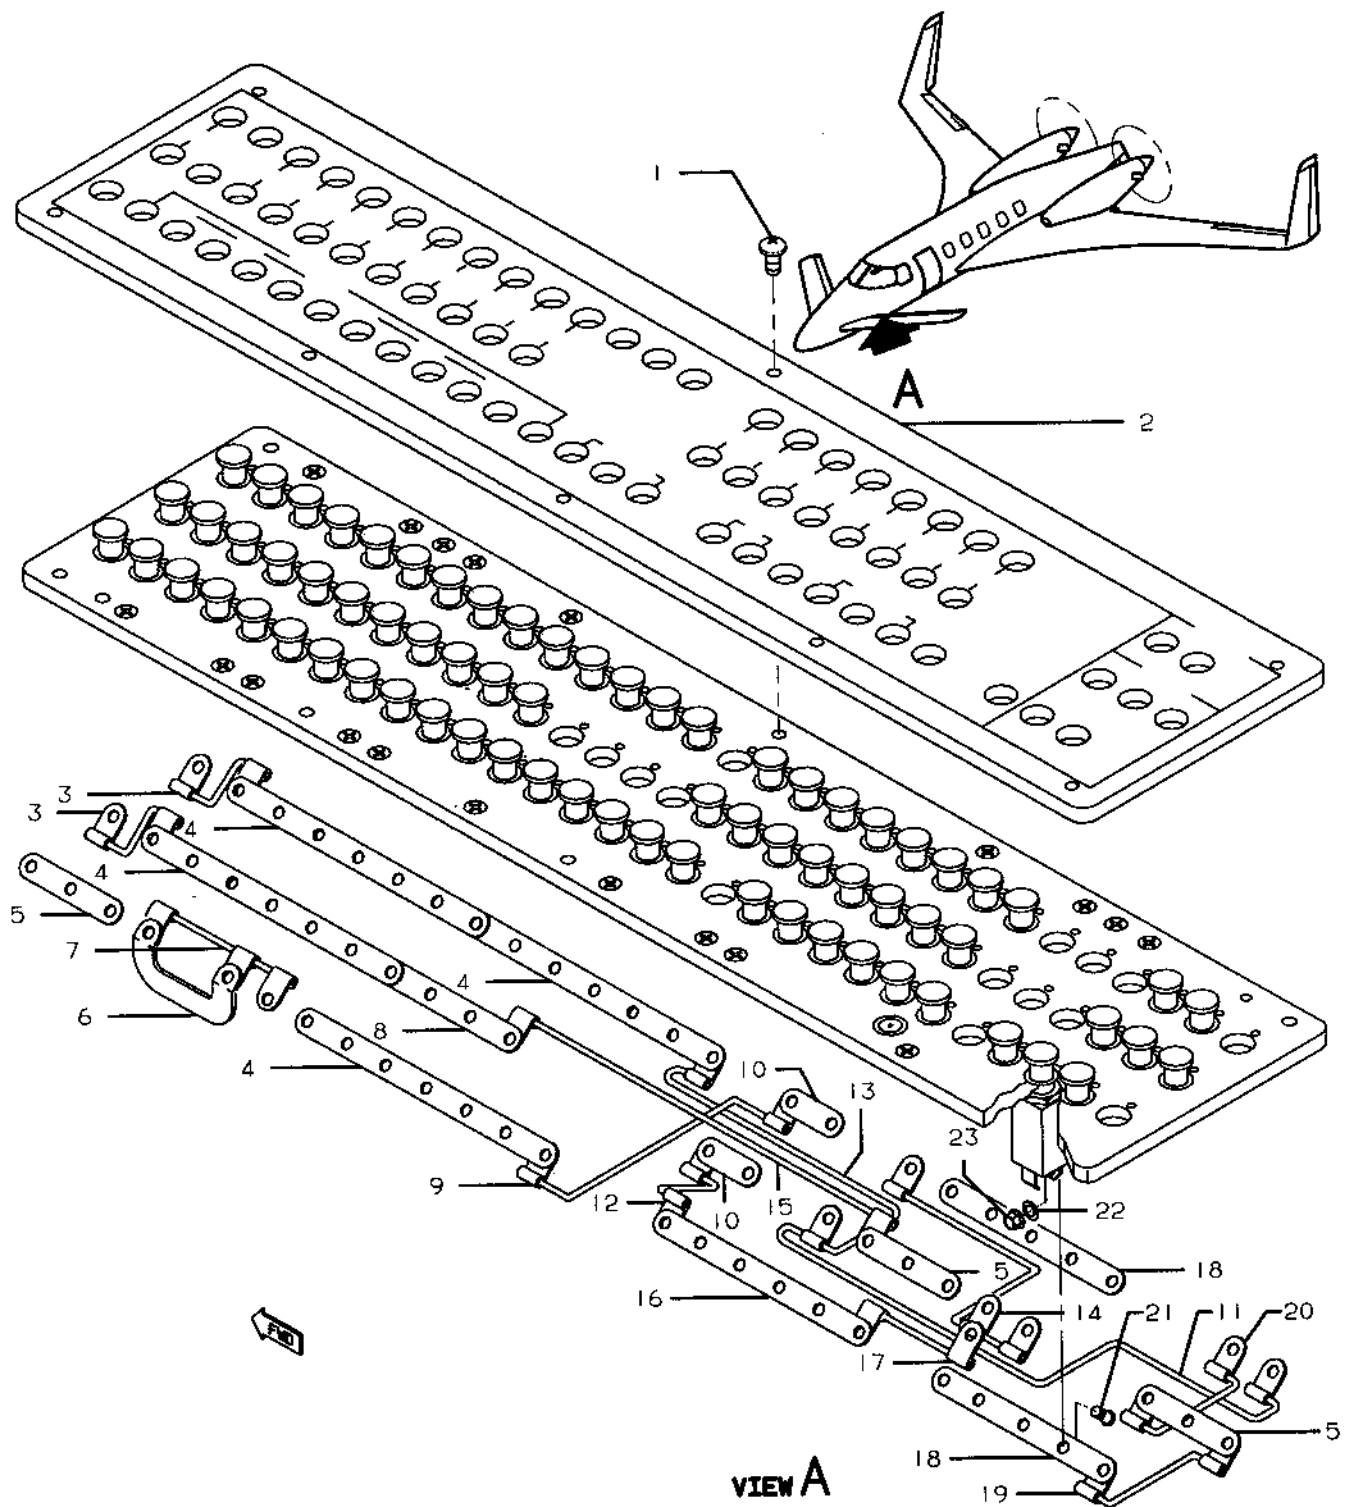

C93NC39A4347 C


FIGURE 10-30. RIGHT CIRCUIT BREAKER PANEL
/SHEET 1 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-30	122-342026-3	PANEL INSTL, RIGHT CIRCUIT BREAKER	NP	
- 1	MS35214-28	. SCREW	8	
	NAS451-43	. BUTTON, PLUG/USE IN OPEN HOLES/	AR	
- 2	R 122-382106-9	. PANEL ASSY, EL/STANDARD/	1	1
	R 122-382106-11	. PANEL ASSY, EL/STANDARD/	1	2
	R 122-382106-7	. PANEL ASSY, EL/FLIGHT PHONE, STEREO/	1	1
	R 122-382106-13	. PANEL ASSY, EL/FLIGHT PHONE, STEREO/	1	2
	R 122-382106-15	. PANEL ASSY, EL/FLIGHT PHONE/	1	
	R 122-382106-17	. PANEL ASSY, EL/FLIGHT PHONE, CABIN BRIEF/	1	
	R 122-382106-19	. PANEL ASSY, EL/FLIGHT PHONE, STEREO,	1	
		FLIGHT DATA-RCDR/		
	R 122-382106-21	. PANEL ASSY, EL/FLIGHT PHONE, STEREO,	1	
		COCKPIT VOICE-RCDR/		
	R 122-382106-23	. PANEL ASSY, EL/FLIGHT PHONE, STEREO, FLIGHT	1	
		DATA-RCDR, COCKPIT-RCDR, NO 1-ADF-NO 2/		
	R 122-382106-25	. PANEL ASSY, EL/FLIGHT PHONE, STEREO, FLIGHT	1	
		DATA-RCDR, COCKPIT-RCDR, CABIN BRIEF,		
		NO 1-ADF-NO 2/		
	R 122-382106-27	. PANEL ASSY, EL/FLIGHT PHONE, COCKPIT	1	
		VOICE-RCDR/		
	122-342084-5	. PANEL ASSY, CIRCUIT BREAKER	1	1
	122-342084-7	. PANEL ASSY, CIRCUIT BREAKER	1	2
- 3	122-322184-81	.. BUS BAR	2	
- 4	50-369101-233	.. BUS BAR	4	
- 5	50-369101-207	.. BUS BAR	3	
- 6	122-361014-69	.. BUS BAR	1	
- 7	122-322184-89	.. BUS BAR	1	
- 8	50-369101-227	.. BUS BAR	1	
- 9	122-322184-91	.. BUS BAR	1	
- 10	R 50-369101-205	.. BUS BAR	2	
- 11	R 122-322184-139	.. BUS BAR	1	2
- 12	122-322184-87	.. BUS BAR	1	
- 13	122-322184-133	.. BUS BAR	1	
- 14	122-322184-83	.. BUS BAR	1	
- 15	122-322184-19	.. BUS BAR	1	
- 16	50-369101-231	.. BUS BAR	1	
- 17	122-322184-97	.. BUS BAR	1	
- 18	50-369101-225	.. BUS BAR	2	
- 19	122-322184-29	.. BUS BAR	1	
- 20	R 122-322184-1	.. BUS BAR	1	
		/ATTACHING PARTS/		
- 21	MS35206-227	.. SCREW	AR	
- 22	AN960-6L	.. WASHER	AR	
- 23	MS21042L06	.. NUT	AR	

---★---

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

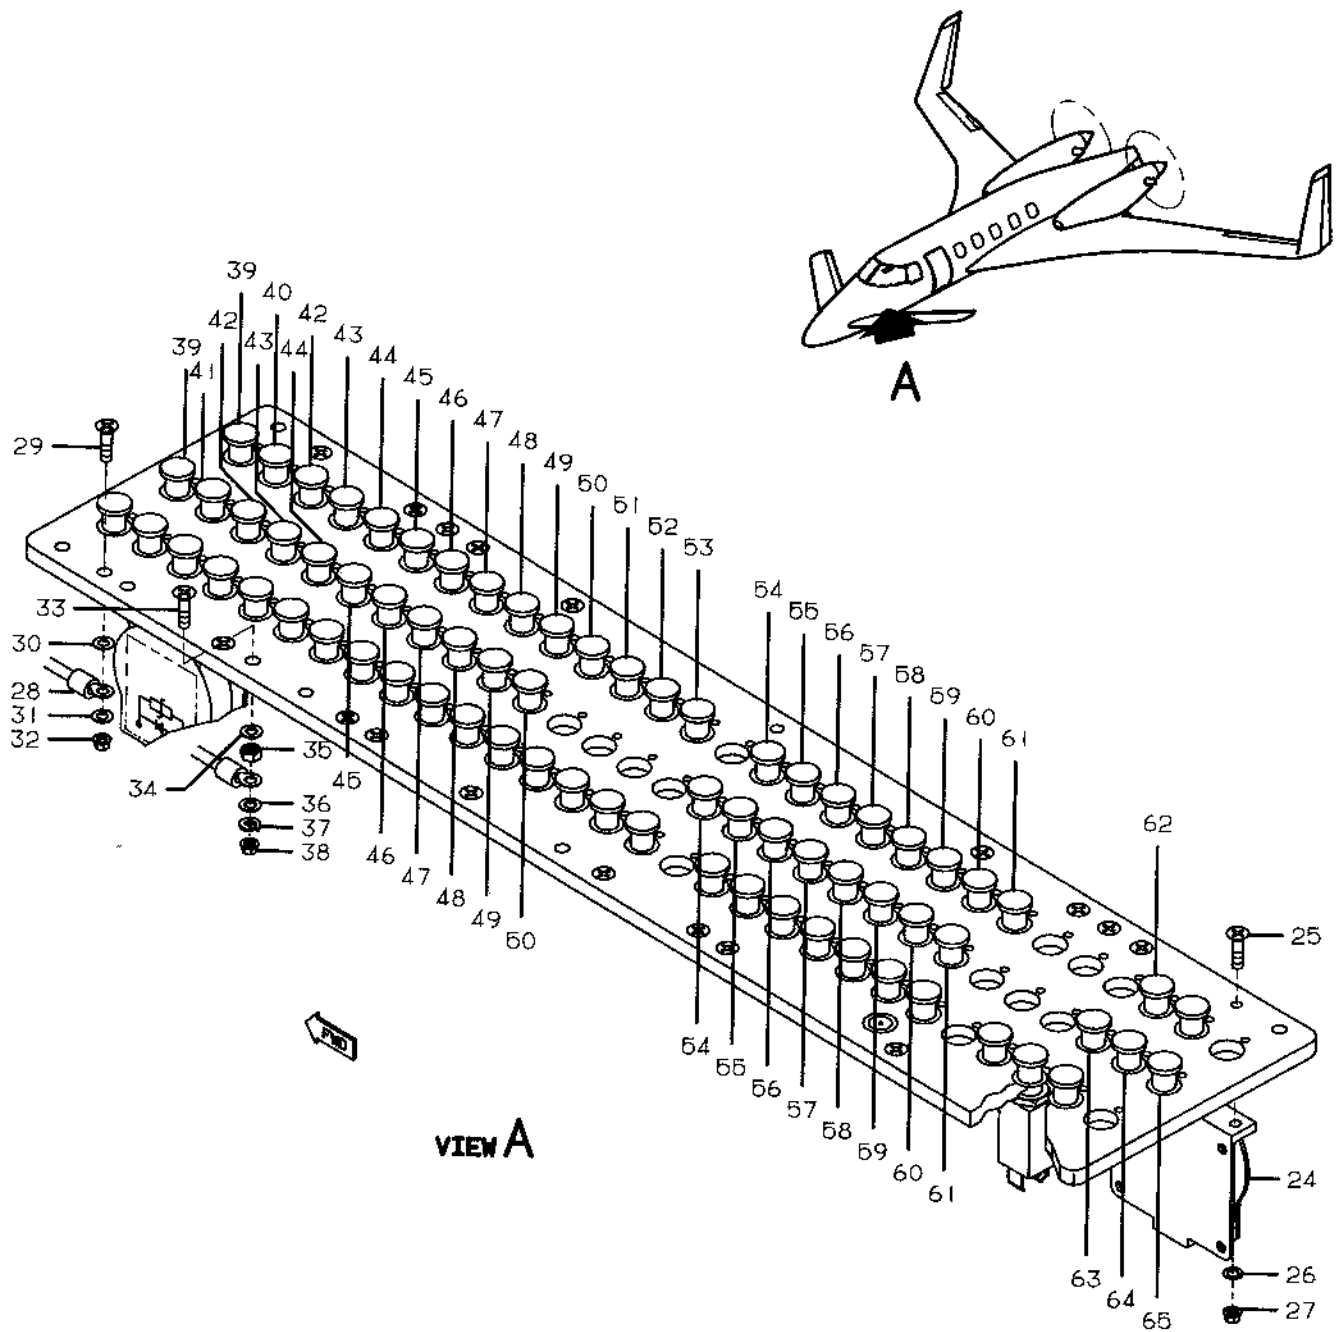



C93NC39A4348 C

FIGURE 10-30. RIGHT CIRCUIT BREAKER PANEL
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-30 - 24	122-380062-1	.. VARISTOR ASSY/ALTERNATE FOR 122-360023-1/	8	
	122-360023-1	.. VARISTOR ASSY/ALTERNATE FOR 122-380062-1/	8	
		.. /ATTACHING PARTS/		
- 25	MS24693S28	.. SCREW	2	
- 26	AN960-6L	.. WASHER	2	
- 27	MS21042L06	.. NUT	2	
		---★---		
	R 10824C31-00600	.. TUBING, HEATSHRINK	AR	
- 28	R MS25083-2AB6	.. JUMPER, BONDING	1	
		.. /ATTACHING PARTS/		
- 29	MS24693S28	.. SCREW	1	
- 30	AN960D8	.. WASHER	1	
- 31	AN960-6L	.. WASHER	1	
- 32	MS21042L06	.. NUT	1	
		---★---		
- 33	MS24693S28	.. SCREW	6	
- 34	AN960D8	.. WASHER	6	
- 35	MS35650-362	.. NUT	6	
- 36	AN960-6L	.. WASHER	6	
- 37	MS35338-41	.. WASHER, LOCK	6	
- 38	MS21042L06	.. NUT	6	
- 39	700-001-50	.. CIRCUIT BREAKER, LEFT GENERATOR BUS FEEDER	2	
- 40	131984-5	.. CIRCUIT BREAKER, RADAR	1	
- 41	131984-10	.. CIRCUIT BREAKER, MFD	1	
- 42	131984-10	.. CIRCUIT BREAKER, ND NO. 1 & 2	2	
- 43	131984-10	.. CIRCUIT BREAKER, PFD NO. 1 & 2	2	
- 44	131984-5	.. CIRCUIT BREAKER, ASI NO. 1 & 2	2	
- 45	131984-5	.. CIRCUIT BREAKER, ALT NO. 1 & 2	2	
- 46	131984-3	.. CIRCUIT BREAKER, CDU NO. 1 & 2	2	
- 47	131984-3	.. CIRCUIT BREAKER, DME NO. 1 & 2	2	
- 48	131984-7	.. CIRCUIT BREAKER, FCS NO. 1 & 2	2	
- 49	131984-7	.. CIRCUIT BREAKER, FMS NO. 1 & 2	2	
- 50	131984-3	.. CIRCUIT BREAKER, ADC NO. 1 & 2	2	
- 51	131984-2	.. CIRCUIT BREAKER, ADF	1	
- 52	131984-5	.. CIRCUIT BREAKER, VLF	1	
- 53	131984-2	.. CIRCUIT BREAKER, RAD ALT	1	
- 54	131984-5	.. CIRCUIT BREAKER, RTU NO. 1 & 2	2	
- 55	131984-3	.. CIRCUIT BREAKER, AHRN NO. 1 & 2	2	
- 56	131984-3	.. CIRCUIT BREAKER, SDU NO. 1 & 2	2	
- 57	R 131984-2	.. CIRCUIT BREAKER, ATC NO. 1 & 2	2	
- 58	R 131984-10	.. CIRCUIT BREAKER, COMM NO. 1 & 2	2	
- 59	R 131984-3	.. CIRCUIT BREAKER, NAV NO. 1 & 2	2	
- 60	131984-1	.. CIRCUIT BREAKER, PLT & COPLT CLOCK	2	
- 61	131984-10	.. CIRCUIT BREAKER, PLT & COPLT TRIP FED BUS	2	
- 62	131984-5	.. CIRCUIT BREAKER, FURNISHINGS MASTER CNTRL	1	
- 63	131984-5	.. CIRCUIT BREAKER, ANNUN 1	1	
- 64	131984-5	.. CIRCUIT BREAKER, ANNUN 2	1	
- 65	131984-5	.. CIRCUIT BREAKER, ANNUN 3	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

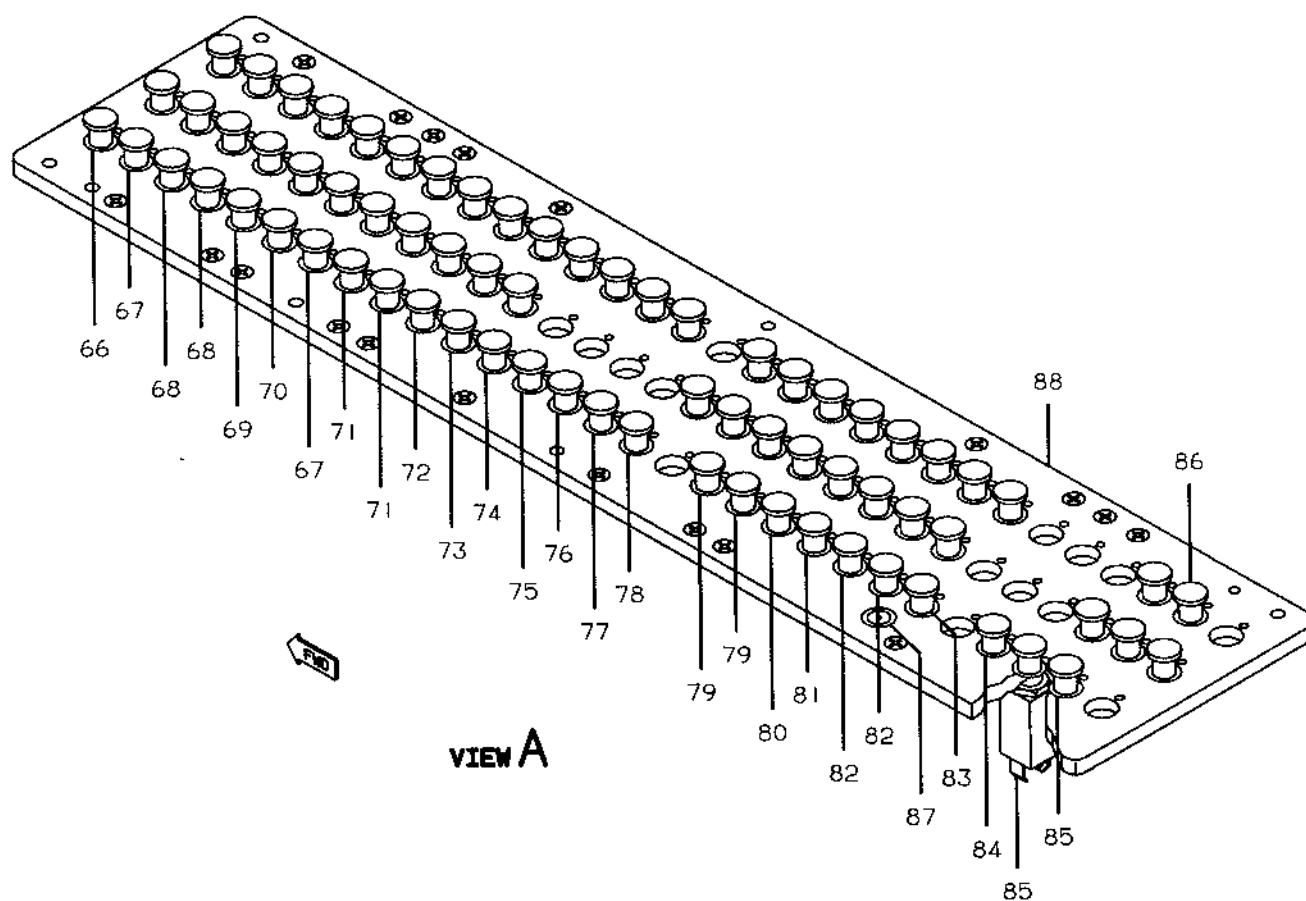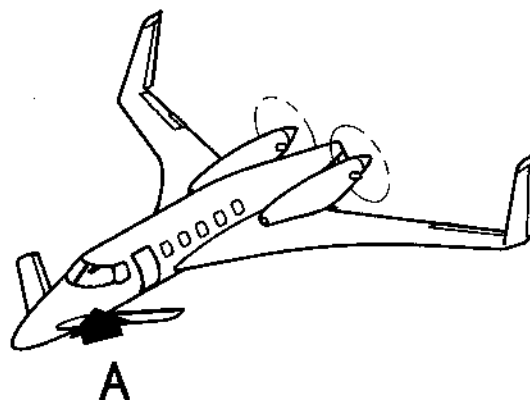

C93NC39A4349 C

FIGURE 10-30. RIGHT CIRCUIT BREAKER PANEL
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-30 -66	131984-3	.. CIRCUIT BREAKER, NOSE AVION BLOWER.....	1	
-67	131984-10	.. CIRCUIT BREAKER, EICAS L & R GEN BUS.....	2	
-68	131984-3	.. CIRCUIT BREAKER, FLIGHT DAU A & B.....	2	
-69	131984-10	.. CIRCUIT BREAKER, FLIGHT DISPLAY.....	1	
-70	131984-10	.. CIRCUIT BREAKER, FLIGHT REV DISPLAY.....	1	
-71	131984-3	.. CIRCUIT BREAKER, GND DUA A & B.....	2	
-72	131984-10	.. CIRCUIT BREAKER, GND DISPLAY.....	1	
-73	131984-10	.. CIRCUIT BREAKER, GND REV DISPLAY.....	1	
-74	131984-15	.. CIRCUIT BREAKER, EICAS AUX BATT.....	1	
-75	131984-25	.. CIRCUIT BREAKER, CTR FED BUS.....	1	
-76	131984-15	.. CIRCUIT BREAKER, STBY IND AUX BATT.....	1	
-77	131984-05	.. CIRCUIT BREAKER, STBY IND GYRO.....	1	
-78	131984-05	.. CIRCUIT BREAKER, STBY IND ALT VIB.....	1	
-79	131984-3	.. CIRCUIT BREAKER, AP/FLAP DISC A & B.....	2	
-80	131984-2	.. CIRCUIT BREAKER, AURAL WARNING.....	1	
-81	131984-4	.. CIRCUIT BREAKER, CABIN AUDIO.....	1	
-82	131984-2	.. CIRCUIT BREAKER, PLT & COPLT AUDIO.....	2	
-83	131984-10	.. CIRCUIT BREAKER, TRIP FED BUS.....	1	
-84	131984-5	.. CIRCUIT BREAKER, AVIONICS MASTER.....	1	
-85 R	131984-5	.. CIRCUIT BREAKER, ANNUN 4 & 5.....	2	
-86	131984-7	.. CIRCUIT BREAKER, READING TABLE LIGHT.....	1	2
-87 R	MS90335-6	.. RECEPTACLE, EL PANEL.....	1	
-88	122-322060-45	.. PANEL ASSY.....	1	1
	122-322060-47	.. PANEL ASSY.....	1	2
	R 122-342072-13	.. DECAL.....	1	1
	122-342072-17	.. DECAL.....	1	2
	131984-5	CIRCUIT BREAKER, STEREO.....	1	
	131984-5	CIRCUIT BREAKER, CABIN BRIEF.....	1	
	131984-5	CIRCUIT BREAKER, COCKPIT VOICE RCDR.....	1	
	131984-5	CIRCUIT BREAKER, FLIGHT DATA RCDR.....	1	
	131984-5	CIRCUIT BREAKER, FLIGHT PHONE.....	1	


CODES OF EFFECTIVITY

1 NC-4 THRU NC-12 2 NC-13 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-10-40
AUXILLIARY CIRCUIT BREAKER PANEL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

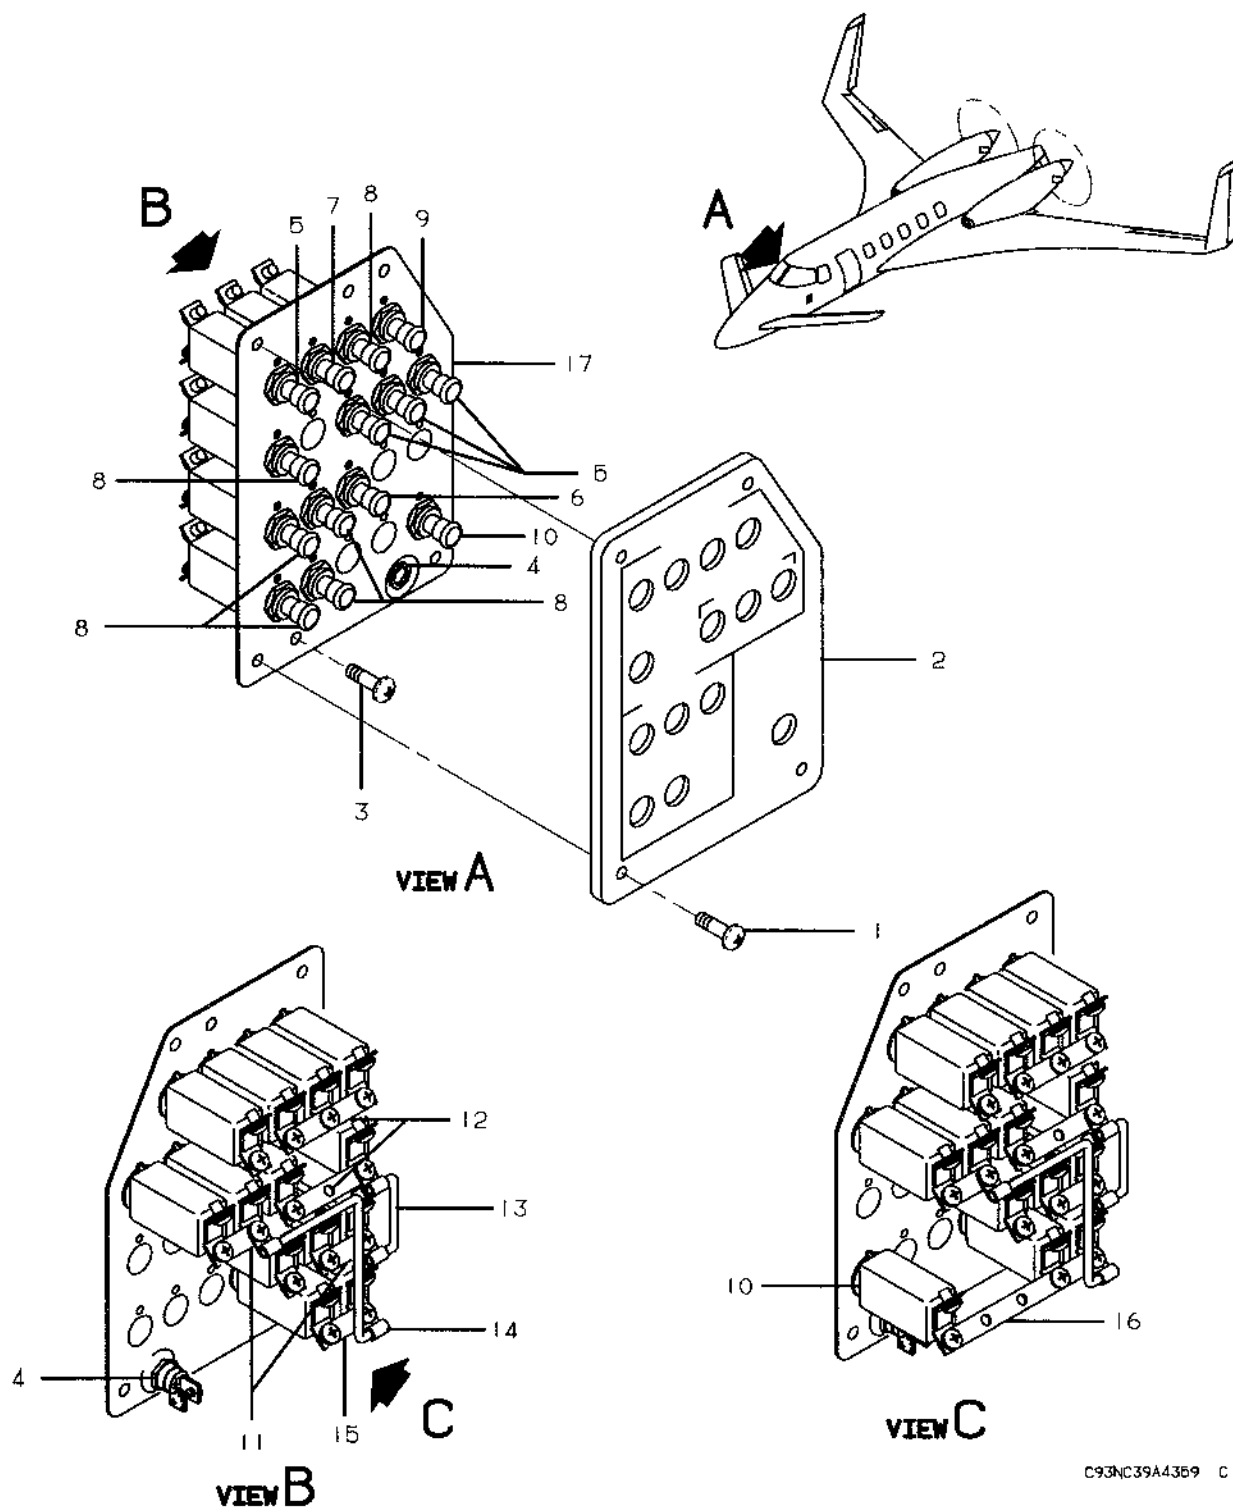

C93NC39A4359 C

FIGURE 10-40.AUXILLIARY CIRCUIT BREAKER PANEL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-40	122-322244-1	AUXILLIARY CIRCUIT BREAKER PANEL INSTL	NP	
- 1	MS35214-28	. SCREW	4	
- 2	R 122-382148-13	. PANEL ASSY, EL/STANDARD/READING TABLE LIGHT/	1	2
		/IF KIT 122-5024-1 HAS BEEN INSTALLED ORDER 122-382148-17 FOR SPARES/		
	R 122-382148-17	. PANEL ASSY, EL/STANDARD/READING TABLE LIGHT	1	2
		AND GROUND ICE DETR/		
	R 122-382148-9	. PANEL ASSY, EL/STANDARD/	1	3
	R 122-382148-15	. PANEL ASSY, EL/GROUND ICE DETR/	1	3
	R 122-382148-11	. PANEL ASSY, EL/LOGO LIGHT/	1	
- 3	MS35206-229	. SCREW	2	
	122-322245-7	. PANEL ASSY	1	2
	122-322245-5	. PANEL ASSY	1	3
- 4	MS90335-6	. RECEPTACLE, EL PANEL	1	
- 5	131984-15	. CIRCUIT BREAKER, TAXI LT, LH & RH LDG LT	4	
		AND NOSE LDG LT		
- 6	131984-15	. CIRCUIT BREAKER, GROUND ICE DETR /USED	1	1
		WITH KIT 101-5024-1 OR 122-382148-17/		
- 7	131984-10	. CIRCUIT BREAKER, WING LIGHT	1	
- 8	131984-7	. CIRCUIT BREAKER, STROBE LT, NAV LT,	6	
		LH AND RH DEICE VALVE HEATER, LH AND RH POWER CABLE HEATER		
- 9	R 131984-5	. CIRCUIT BREAKER, LANDING LIGHT CONTROL	1	
- 10	R 131984-5	. CIRCUIT BREAKER, READING TABLE LIGHTS	1	3
- 11	50-369101-205	. BAR, BUS	2	
- 12	50-369101-207	. BAR, BUS	2	
- 13	122-322184-43	. BAR, BUS	1	
- 14	122-322184-69	. BAR, BUS	1	
- 15	50-369101-205	. BAR, BUS	1	2
- 16	50-369101-225	. BAR, BUS	1	3
- 17	122-322180-15	. PANEL, SCREENED	1	
	122-322181-15	. . . DECAL	1	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-9 NC-11 AND AFTER	2	NC-4 THRU NC-12 NC-13 AND AFTER
---	-----------------------------------	---	------------------------------------

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-10-50
AFT FUSELAGE CIRCUIT BREAKER PANEL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

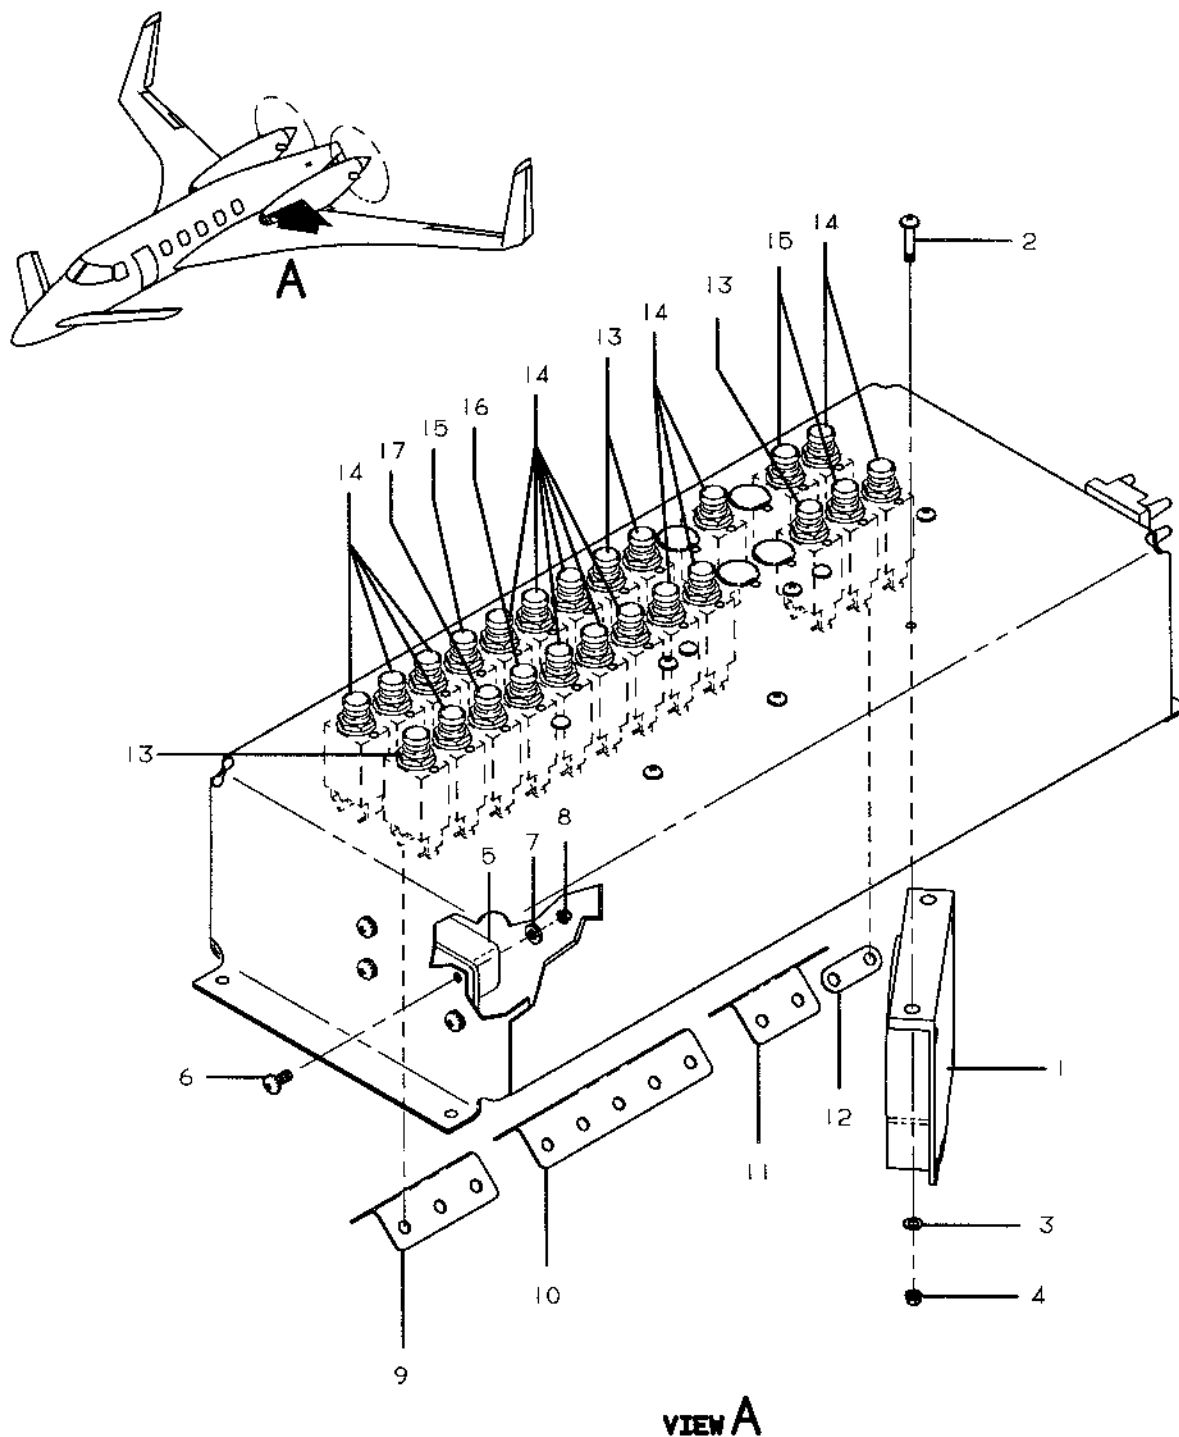


C93NC39A4379 C

FIGURE 10-50. AFT FUSELAGE CIRCUIT BREAKER PANEL
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-50	122-361013-55	PANEL ASSY, CIRCUIT BREAKER.....	1	1
	122-361013-79	PANEL ASSY, CIRCUIT BREAKER.....	1	2
- 1	122-380062-1	. VARISTOR, METAL OXIDE	3	
		/ATTACHING PARTS/		
- 2	MS35206-247	. SCREW.....	2	
- 3	AN960-8L	. WASHER.....	2	
- 4	R MS21044N08	. NUT.....	2	
		-----★-----		
	1N4007	. DIODE, RELAY.....	1	
- 5	FCA325-45	. RELAY.....	1	
		/ATTACHING PARTS/		
- 6	MS35206-229	. SCREW.....	4	
- 7	AN960-6L	. WASHER.....	4	
- 8	MS21042-08	. NUT.....	4	
		-----★-----		
- 9	122-361014-75	. BAR, BUS.....	1	
- 10	122-361014-35	. BAR, BUS.....	1	
- 11	122-361014-73	. BAR, BUS.....	1	
- 12	122-361014-21	. BAR, BUS.....	1	
- 13	R 131984-7 1/2	. CIRCUIT BREAKER.....	4	
		/STORM LIGHT/		
		/FLIGHT INSTRUMENT LIGHTS/		
		/AC CLUTCH/		
		/AVIONICS COPILOT BUS FEEDER/		
- 14	R 131984-5	. CIRCUIT BREAKER.....	15	
		/READING LIGHTS/		
		/TOILET/		
		/CIGARETTE LIGHTER/		
		/OVERBOARD HEATED DRAIN/		
		/DC TEST JACK/		
		/CABIN LIGHTS/		
		/OVERHEAD FLOOD LIGHTS/		
		/INSTRUMENT INDICATOR LIGHTS/		
		/LEFT & RIGHT EDC POWER/		
		/LEFT & RIGHT SQUAT SWITCH/		
		/LCD DISPLAY LIGHTS/		
		/OVERHEAD, SUBPANEL & CONSOLE LIGHTS/		
		/ALT BLOWER CONTROL/		
- 15	R 131984-15	. CIRCUIT BREAKER.....	3	
		/ALT BLOWER POWER/		
		/LEFT & RIGHT WINDSHIELD WIPER/		
- 16	R 131984-5	. CIRCUIT BREAKER/WINDOW SHADING/.....	1	1
- 17	R 131984-7 1/2	. CIRCUIT BREAKER/CABIN FLOOR/	1	2
	R NAS451-11	. BUTTON, PLUG-IN HOLES WITHOUT CIRCUIT	5	
		BREAKER INSTALLED/		
	122-361060-25	. DECAL.....	1	1
	122-361060-29	. DECAL.....	1	2

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

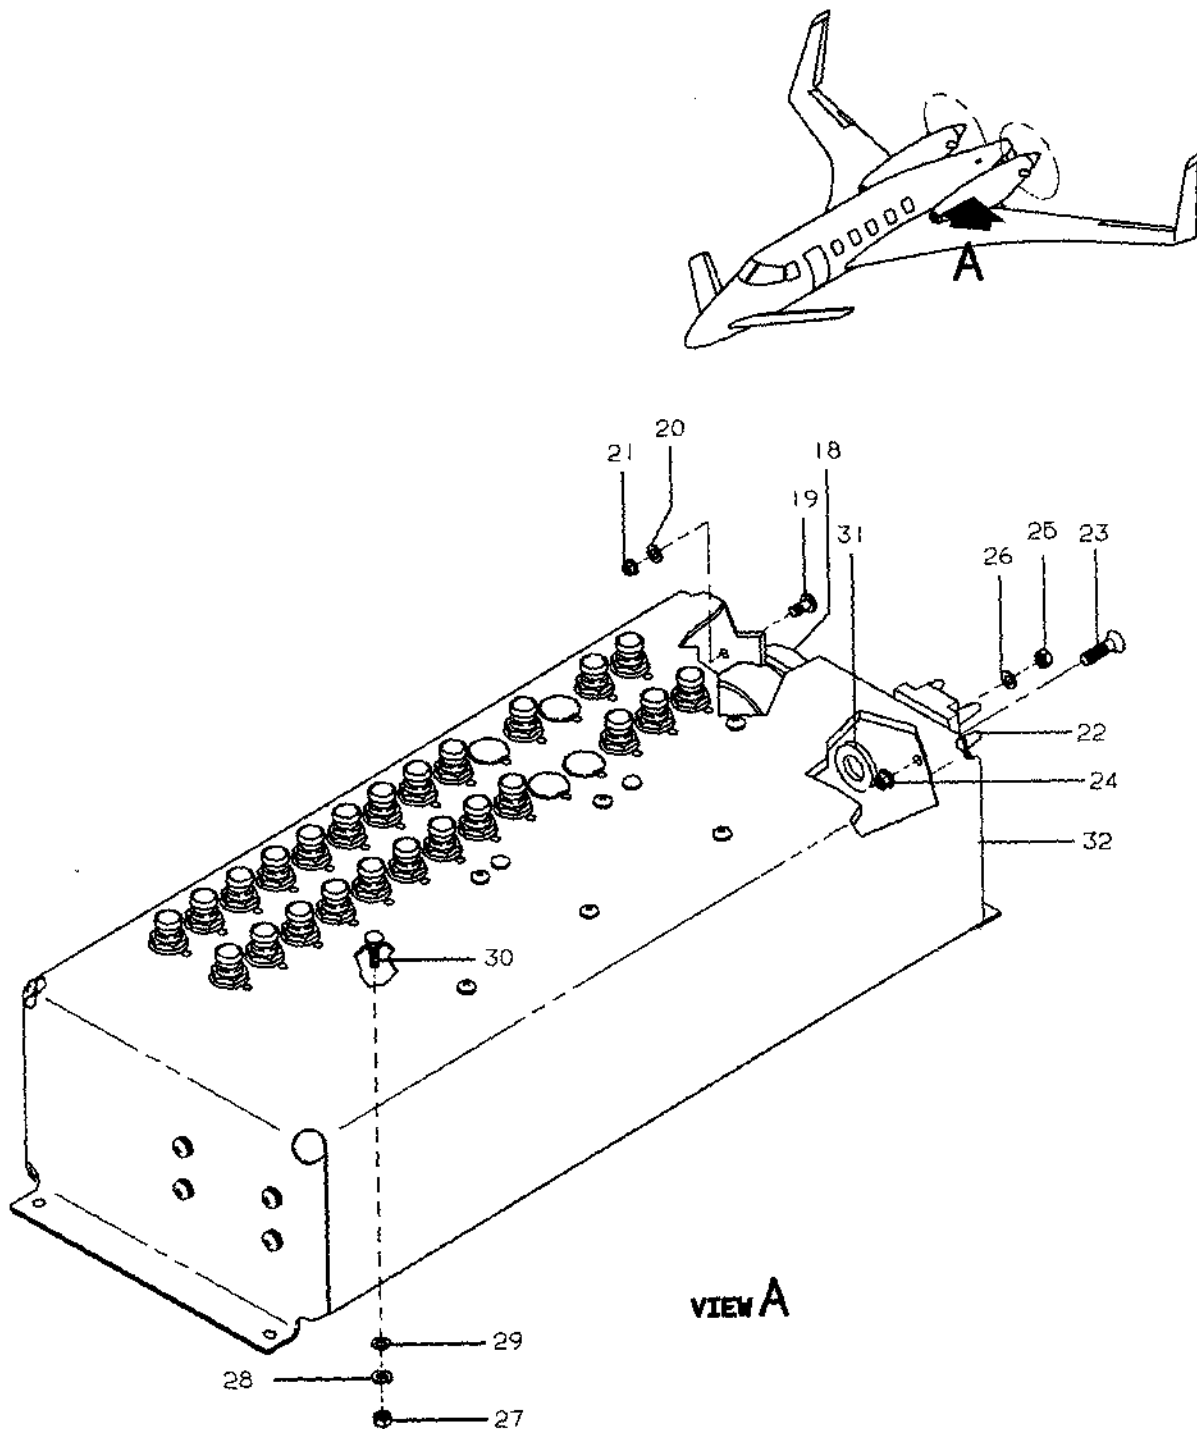

C93NC39A4380 C

FIGURE 10-50. AFT FUSELAGE CIRCUIT BREAKER PANEL
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-50 - 18	MS3472L22-41P	. CONNECTOR.....	1	
		. /ATTACHING PARTS/.....		
- 19	MS35206-229	. SCREW.....	4	
- 20	AN960-6L	. WASHER.....	4	
- 21	MS21042-06	. NUT.....	4	
		-----★-----		
- 22	MS27212-1-4	. TERMINAL BOARD ASSY.....	1	
		. /ATTACHING PARTS/.....		
- 23 R	MS35206-214	. SCREW.....	2	
- 24	MS21044N04	. NUT.....	2	
		-----★-----		
- 25	MS21042L06	. NUT.....	4	
- 26	AN960-6L	. WASHER.....	4	
	MS18029-1S4	. COVER ASSY.....	1	
- 27	130909N29	. NUT.....	3	
- 28	MS35338-43	. WASHER, LOCK.....	3	
- 29	AN960JD10L	. WASHER.....	3	
- 30	131270-3	. STUD, GROUND.....	3	
- 31	MS35489-9	. GROMMET.....	1	
- 32	122-381013-57	. PANEL.....	1	



CODES OF EFFECTIVITY

1 NC-4 THRU NC-20 2 NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-10-60
MAIN INSTRUMENT PANEL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

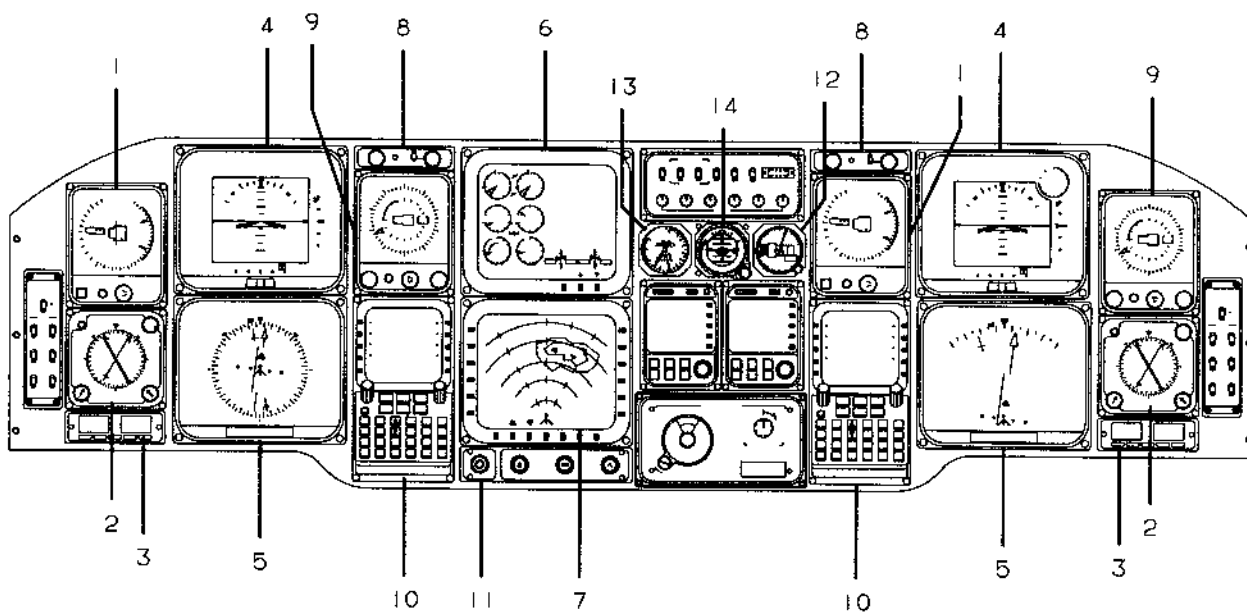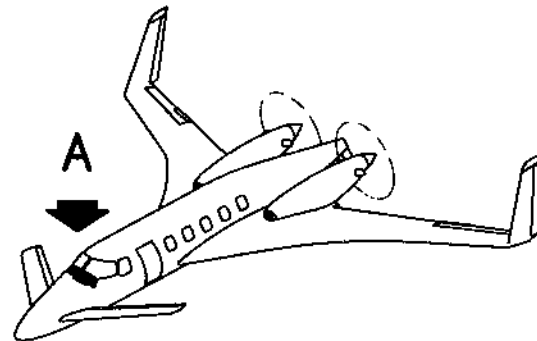



VIEW A

C93NC39A4434

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-60	122-322229-1	PANEL INSTL, MAIN INSTRUMENT/BROWN/	NP	1
	122-322229-3	PANEL INSTL, MAIN INSTRUMENT/BLACK/	NP	2
- 1	R 622-8335-010	. INDICATOR, AIRSPEED/ASI-850A/	2	1
	R 622-8335-011	. INDICATOR, AIRSPEED/ASI-850A/	2	3
	R 622-8335-031	. INDICATOR, AIRSPEED/ASI-850A/	2	4
		/ATTACHING PARTS/		
	R 132002-6-7BN	. SCREW	4	1
	R 132002-6-7BK	. SCREW	4	2
		★-----		
- 2	R 622-8336-010	. DISPLAY UNIT, SENSOR/SDU-640A/	2	1
	R 622-8336-011	. DISPLAY UNIT, SENSOR/SDU-640A/	NP	5
		/ORDER 622-9735-001 FOR SPARES/		
	R 622-9735-001	. DISPLAY UNIT, SENSOR/SDU-640B/	2	6
		/ATTACHING PARTS/		
	R 132002-6-7BN	. SCREW	4	1
	R 132002-6-7BK	. SCREW	4	2
		★-----		
- 3	R 122-382011-11	. CLOCK/ORDER 122-382011-15 FOR SPARES/	NP	7
	R 122-382011-15	. CLOCK	2	8
- 4	R 622-8526-002	. DISPLAY UNIT, PRIMARY FLIGHT/PFD-870/	2	1
	R 622-8526-003	. DISPLAY UNIT, PRIMARY FLIGHT/PFD-870/	2	2
- 5	R 622-8527-002	. DISPLAY UNIT, NAVIGATION/ND-870/	2	1
	R 622-8527-003	. DISPLAY UNIT, NAVIGATION/ND-870/	2	2
- 6	R 622-8529-005	. DISPLAY UNIT, ENGINE CAUTION/ECD-870/BROWN/	1	9
	R 622-8529-014	. DISPLAY UNIT, ENGINE CAUTION/ECD-870/BROWN/	1	10
	R 622-8529-015	. DISPLAY UNIT, ENGINE CAUTION/ECD-870/BLACK/	1	2
- 7	R 622-8528-005	. DISPLAY UNIT, MULTIFUNCTION/MFD-870/	1	9
	R 622-8528-014	. DISPLAY UNIT, MULTIFUNCTION/MFD-870/	1	10
	R 622-8528-015	. DISPLAY UNIT, MULTIFUNCTION/MFD-870/	1	2
- 8	R 622-7398-001	. PANEL, ALTITUDE AWARENESS/AAP850/	2	1
	R 622-7398-002	. PANEL, ALTITUDE AWARENESS/AAP-850/	2	2
- 9	R 622-8334-001	. INDICATOR, ALTITUDE/ALI-850A/	2	1
	R 622-8334-002	. INDICATOR, ALTITUDE/ALI-850A/	2	2
		/ATTACHING PARTS/		
	R 132002-6-7BN	. SCREW	4	1
	R 132002-6-7BK	. SCREW	4	2
		★-----		
- 10	R 622-8363-004	. DISPLAY UNIT, CONTROL/CDU-850A/	2	1
	R 622-8363-002	. DISPLAY UNIT, CONTROL/CDU-850A/	2	2
		/ATTACHING PARTS/		
	R 132002-6-7BN	. SCREW	4	1
	R 132002-6-7BK	. SCREW	4	2
		★-----		
- 11	R 622-7397-001	. PANEL, COURSE HEADING/CHP-850/	1	1
	R 622-7397-002	. PANEL, COURSE HEADING/CHP-850/	1	2
- 12	R 122-382142-5	. ALTIMETER/2 IN/	1	
		/ATTACHING PARTS/		
	R 122-2222H	. CLAMP	1	
		★-----		
- 13	R 122-382139-3	. INDICATOR, AIRSPEED/2 IN/	1	11
	R 122-382139-5	. INDICATOR, AIRSPEED/2 IN/	1	4
		/ATTACHING PARTS/		
	R 123-2222H	. CLAMP	1	
		★-----		
- 14	R 122-382015-9	. INDICATOR, GYRO HORIZON/ELECTRIC/2 IN/	1	
		/ATTACHING PARTS/		
	R MS35214-29	. SCREW	3	
		★-----		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

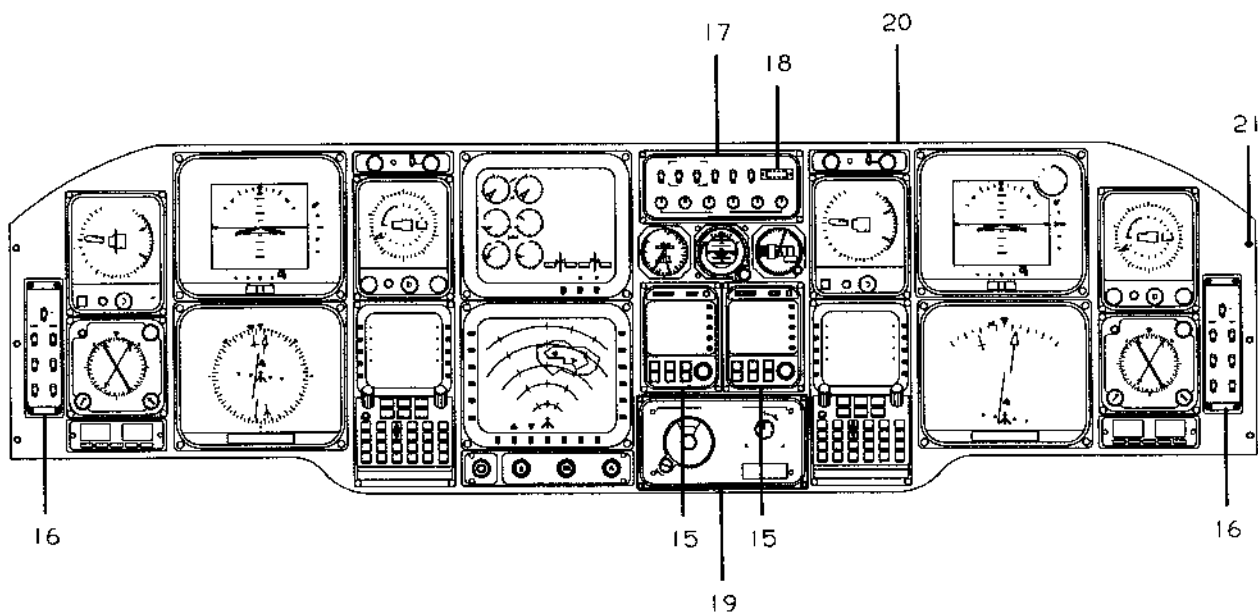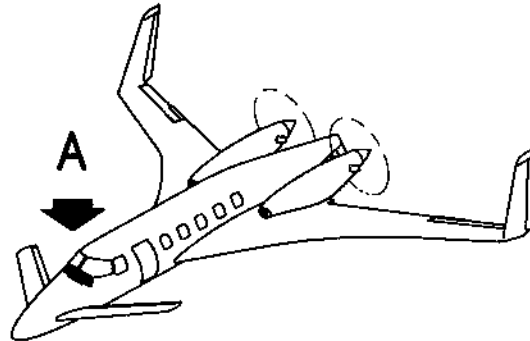

VIEW A

C95NC39A1082 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-60 - 15	R 622-7356-001	. RADIO TUNING UNIT/RTU-870A/.....	2	1
	R 622-9346-012	. RADIO TUNING UNIT/RTU-870A/ORDER..... 622-9346-022 FOR SPARES/	NP	12
- 16	R 622-9346-022	. RADIO TUNING UNIT/RTU-870A/.....	2	13
	R 122-342021-17	. PANEL ASSY, REVERSIONARY..... /SEE CHAPTER 39-10-80/	2	1
	R 122-342021-21	. PANEL ASSY, REVERSIONARY..... /SEE CHAPTER 39-10-80/ /ATTACHING PARTS/	2	2
	R 132002-6-7BN	. SCREW.....	4	1
	R 132002-6-7BK	. SCREW.....	4	2
- 17	R 122-342023-9	. PANEL ASSY, ENGINE REVERSIONARY AND VOLUME..... CONTROL/BROWN/SEE CHAPTER 39-10-80/	1	1
	R 122-342023-13	. PANEL ASSY, ENGINE REVERSIONARY AND VOLUME..... CONTROL/BLACK/SEE CHAPTER 39-10-80/ /ATTACHING PARTS/	1	2
	R 132002-6-7BN	. SCREW.....	4	1
	R 132002-6-7BK	. SCREW.....	4	2
- 18	R 132015-9	. PLATE, RADIO CALL IDENTIFICATION..... /ATTACHING PARTS/	1	
	R NAS662C2R2	. SCREW.....	2	
- 19	R 122-322242-1	. PANEL ASSY, PRESSURIZATION CONTROL/BROWN/.....	1	1
	R 122-322242-3	. PANEL ASSY, PRESSURIZATION CONTROL/BLACK/..... /ATTACHING PARTS/	1	2
	R 132002-6-7BN	. SCREW.....	4	1
	R 132002-6-7BK	. SCREW.....	4	2
- 20	R 122-322077-5	. PANEL ASSY, MAIN INSTRUMENT/SEE CHAPTER 53/..... /ATTACHING PARTS/	1	
- 21	R MS27039-1-09	. SCREW.....	8	


CODES OF EFFECTIVITY

1 NC-4 THRU NC-27	2 NC-28 AND AFTER
3 NC-28	4 NC-29 AND AFTER
5 NC-28 AND NC-29	6 NC-30 AND AFTER
7 NC-4 THRU NC-14	8 NC-15 AND AFTER
9 NC-4 THRU NC-20	10 NC-21 THRU NC-27
11 NC-4 THRU NC-28	12 NC-28 THRU NC-32
13 NC-33 AND AFTER	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-10-70
INSTRUMENT SUBPANEL
NC-4 THRU NC-28

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

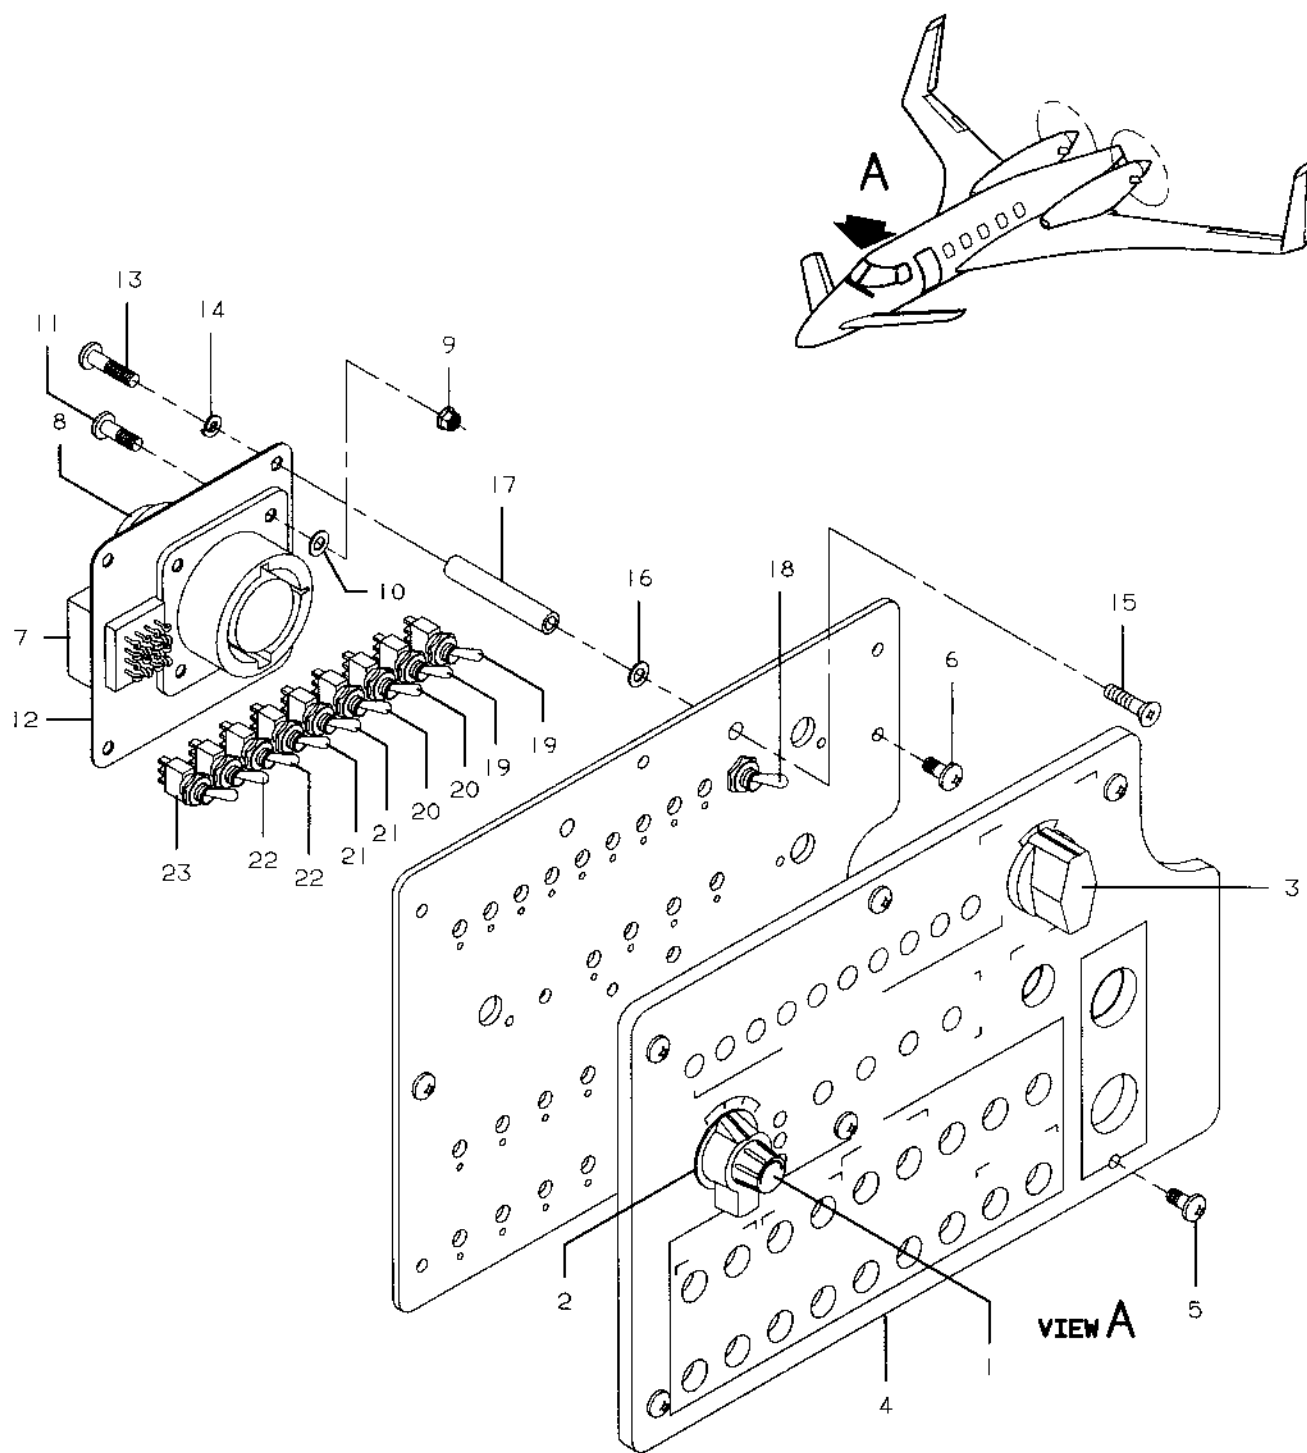


C9200144

FIGURE 10-70. INSTRUMENT SUBPANEL
/SHEET 1 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-70	122-322018-5	SUBPANEL INSTL, INSTRUMENT	NP	1
- 1	122-382036-15	. KNOB, COMM VOL CONTROL	1	1
- 2	122-382036-19	. KNOB, COMM SELECTOR.....	1	1
- 3	122-382036-9	. KNOB, MIC SELECTOR.....	1	1
- 4	R 122-382053-15	. PANEL ASSY, EL/LEFT OUTBD/	NP	3
		/ORDER 122-382053-17 FOR SPARES/		
	R 122-382053-17	. PANEL ASSY, EL/LEFT OUTBD/	1	4
		/ATTACHING PARTS/		
- 5	MS35214-27	. SCREW.....	5	
		★-----		
	R 122-322209-5	. PANEL ASSY, LEFT OUTBD SWITCH	1	1
		/ATTACHING PARTS/		
- 6	MS35206-230	. SCREW.....	2	
		★-----		
- 7	M6106/28-023	. . RELAY	1	1
	451120-061	. . SOCKET, RELAY	1	1
- 8	MS3470L24-61P	. . CONNECTOR.....	1	1
		/ATTACHING PARTS/		
- 9	R MS21042L06	. . NUT	4	
- 10	AN960-6L	. . WASHER	4	
- 11	MS35206-228	. . SCREW.....	4	
		★-----		
- 12	122-322039-9	. . PLATE, CONNECTOR.....	1	1
		/ATTACHING PARTS/		
- 13	MS35206-228	. . SCREW.....	4	
- 14	MS35338-41	. . WASHER, LOCK	4	
- 15	MS24693S26	. . SCREW.....	4	
- 16	AN960-6L	. . WASHER	4	
- 17	1713-632A0	. . SPACER.....	4	
		★-----		
- 18	MST105D	. . SWITCH, ADF.....	1	1
- 19	MST105D	. . SWITCH, DME 1 & 2.....	2	1
- 20	MST105D	. . SWITCH, MKR BCN 1 & 2.....	2	1
- 21	MST105D	. . SWITCH, NAV 1 & 2	2	1
- 22	MST105D	. . SWITCH, COMM 1 & 2.....	2	1
- 23	MST105D	. . SWITCH, AUTO COMM	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

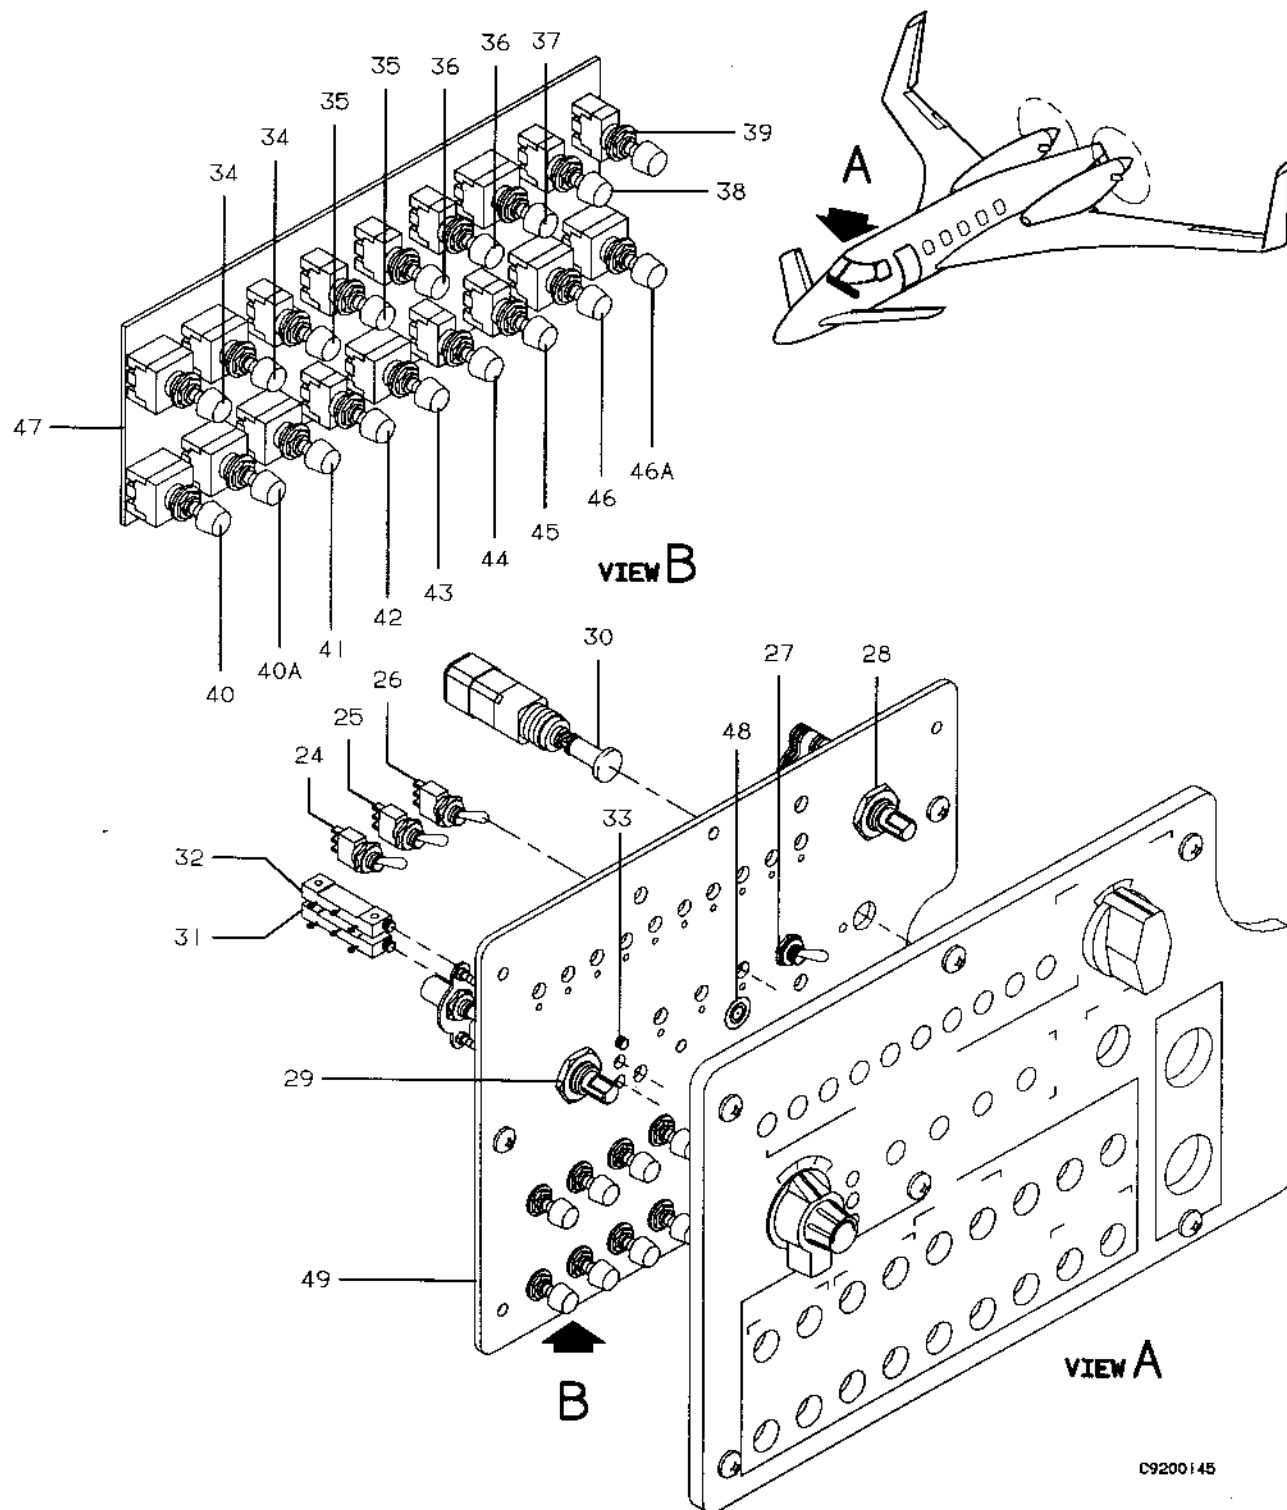


C9200145

FIGURE 10-70. INSTRUMENT SUBPANEL
/SHEET 2 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-70	-24	MST405N	.. SWITCH, INTPH	1	1
	-25	MST105D	.. SWITCH, AUDIO SPKR	1	1
	-26	R MTL208N	.. SWITCH, AUDIO EMER	1	1
	-27	MST105E	.. SWITCH, VOICE	1	1
	-28	122-382076-1	.. SWITCH, MIC SELECT ROTARY	1	1
	-29	122-382076-13	.. SWITCH, COMM SELECT ROTARY	1	1
	-30	112TW59-3D	.. SWITCH, STATIC SOURCE	1	1
	-31	3059J1-103M	.. TRIMPOT, INTPH SQUELCH	1	1
	-32	3059J1-103M	.. TRIMPOT, INTPH VOL	1	1
	-33	3059J1-103M	.. TRIMPOT, INTPH SIDETONE	1	1
		R 122-322207-9	.. MODULE ASSY, TEST SWITCH	1	1
	-34	MB2061SW06BK	... SWITCH, LEFT & RIGHT FIRE EXT TEST	2	1
	-35	MB2011SW06BK	... SWITCH, LEFT & RIGHT FIRE DETECTOR TEST	2	1
	-36	R MB2011SW06BK	... SWITCH, LEFT & RIGHT FLAP MONITOR	2	1
	-37	MB2061SW06BK	... SWITCH, AUX BATT TEST	1	1
	-38	MB2011SW06BK	... SWITCH, BATT MONITOR TEST	1	1
	-39	MB2011SW06BK	... SWITCH, PRESS TEST	1	1
	-40	MB2061SW06BK	... SWITCH, FUEL LO WARN	1	1
	-40A	MB2061SW06BK	... SWITCH, STALL WARN	1	1
	-41	R MB2011SW06BK	... SWITCH, VMO/MMO TEST	1	1
	-42	MB2011SW06BK	... SWITCH, LDG GR TEST	1	1
	-43	MB2061SW06BK	... SWITCH, ANNUN TEST	1	1
	-44	MB2011SW06BK	... SWITCH, BLEED AIR TEST	1	1
	-45	R MB2011SW06BK	... SWITCH, SURF DEICE VAC	1	1
	-46	R MB2061SW06BK	... SWITCH, SURF DEICE/STBY/	1	1
	-46A	R MB2061SW06BK	... SWITCH, SURF DEICE/MAIN/	1	1
		R DDMM50PE	... CONNECTOR, MODULE	1	1
			/ATTACHING PARTS/		
		R 207719-3	... KIT, FEMALE SCREWLOCK	2	
		R NAS43DD0-14	... SPACER	2	
			★		
	-47	122-322208-37	... PRINTED CIRCUIT BOARD, SWITCH TEST MODULE	1	1
	-48	R MS90335-6	.. RECEPTACLE, EL PANEL	1	1
	-49	122-322041-13	.. PANEL, SWITCH	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

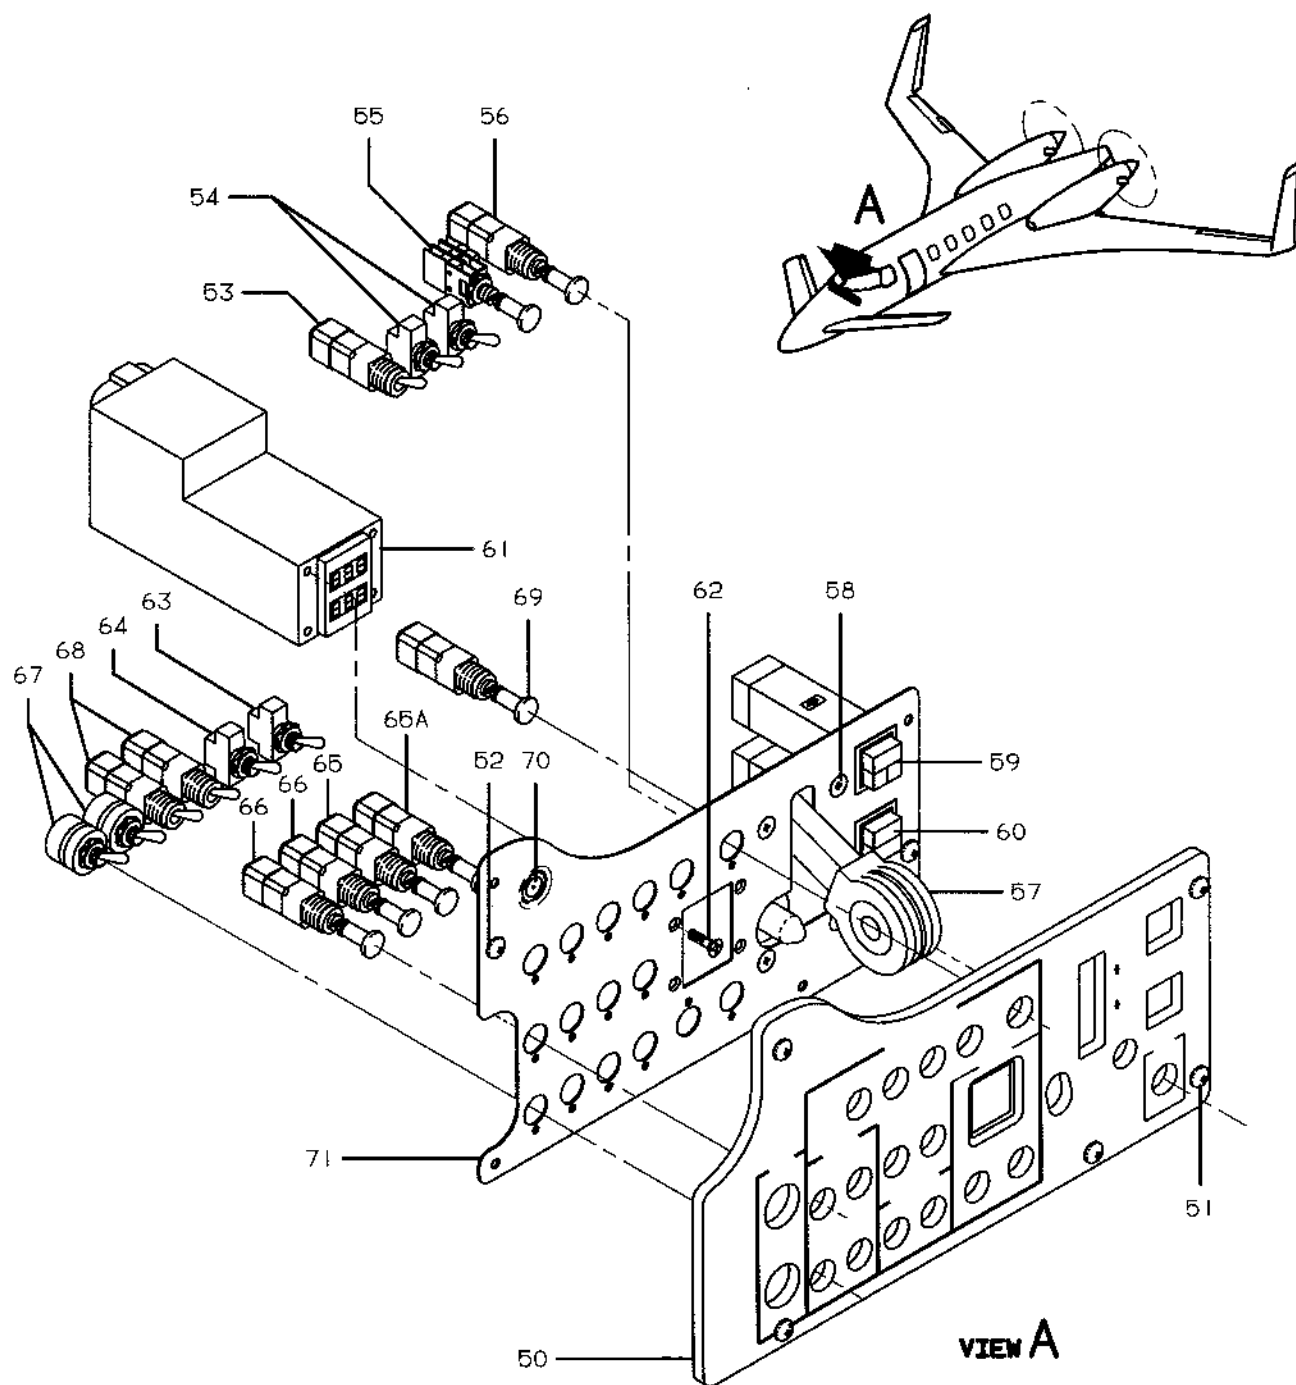

C93NC39A4396 C

FIGURE 10-70. INSTRUMENT SUBPANEL
/SHEET 3 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-70 - 50	R 122-382137-9	. PANEL ASSY, EL/LEFT INBD/WITHOUT BRAKE DEICE, WITHOUT GND ICE DETR TEST/	1	1
	R 122-382137-11	. PANEL ASSY, EL/LEFT INBD/WITH BRAKE DEICE, WITHOUT GND ICE DETR TEST/	1	1
	R 122-382137-13	. PANEL ASSY, EL/LEFT INBD/WITHOUT BRAKE DEICE, WITH GND ICE DETR TEST/	1	1
	R 122-382137-15	. PANEL ASSY, EL/LEFT INBD/WITH BRAKE DEICE, WITH GND ICE DETR TEST/ /ATTACHING PARTS/	1	1
- 51	MS35214-27	. SCREW	5	
	122-322226-1	. PANEL ASSY, LEFT INBD SWITCH /ATTACHING PARTS/	1	1
- 52	MS35206-230	. SCREW	2	
- 53	112TW91-3	. SWITCH, STALL WARN ANTI-ICE/ALTERNATE FOR MS21347-731/	1	1
	MS21347-731	. SWITCH, STALL WARN ANTI-ICE/ALTERNATE FOR 112TW91-3/	1	1
- 54	MS24523-23	. SWITCH, PILOT & COPILOT PITOT-STATIC HEAT	2	1
- 55	13AT236S-N	. SWITCH, PILOT WINDSHIELD ANTI-ICE	1	1
- 56	112TW59-10N	. SWITCH, COPILOT WINDSHIELD ANTI-ICE	1	1
- 57	122-382038-1	. SWITCH ASSY, LDG GEAR CONTROL /ATTACHING PARTS/	1	1
- 58	MS24693S273	. SCREW	4	
- 59	R 122-382034-11	. LIGHT ASSY, GEAR DOWN/ALTERNATE FOR 122-382034-15/SEE NOTE/	1	1
	R 122-382034-15	. LIGHT ASSY, GEAR DOWN/ALTERNATE FOR 122-382034-11/SEE NOTE/	1	1
- 60	R 122-382034-13	. LIGHT ASSY, FLAPS-FWD WING TRANS-EXTEND /ALTERNATE FOR 122-382034-17/SEE NOTE/	1	1
	R 122-382034-17	. LIGHT ASSY, FLAPS-FWD WING TRANS-EXTEND /ALTERNATE FOR 122-382034-13/SEE NOTE/	1	1
NOTE INSTALL 122-382034-11, -15 AND 122-382034-13, -17 AS MATCHED SETS DO NOT INTERMIX VENDOR PARTS				
- 61	122-382143-1	. DISPLAY, PNEU PRESS /ATTACHING PARTS/	1	1
- 62	MS24693S26	. SCREW	4	
- 63	R MS24523-27	. SWITCH, MAIN WING MANUAL	1	1
- 64	R MS24523-27	. SWITCH, FWD WING MANUAL	1	1
- 65	R 112TW59-3D	. SWITCH, PILOT WSHLD CONTROL/STBY/	1	1
- 65A	112TW91-8	. SWITCH, GROUND ICE DETECTOR /WITH KIT 122-5024-1 INSTALLED/	1	6
- 66	R 112TW59-3D	. SWITCH, LEFT & RIGHT ENGINE ACTUATOR/STBY/	2	1
- 67	R 64AT46-3	. SWITCH, LEFT & RIGHT ENGINE ACTUATOR/MAIN/ /ALTERNATE FOR 21649T10109/	2	1
	R 21649T10109	. SWITCH, LEFT & RIGHT ENGINE ACTUATOR/MAIN/ /ALTERNATE FOR 64AT46-3/	2	1
- 68	R 62AT46-3	. SWITCH, LEFT & RIGHT FUEL VENT/PWR CABLE/ /ALTERNATE FOR 21649T10109/	2	1
	R 21649T10109	. SWITCH, LEFT & RIGHT FUEL VENT/PWR CABLE/ /ALTERNATE FOR 62AT46-3/	2	1
- 69	112TW59-3D	. SWITCH, ANTI SKID	1	1
- 70	R MS90335-6	. RECEPTACLE, EL PANEL	1	1
- 71	122-322227-1	. PANEL, SWITCH	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


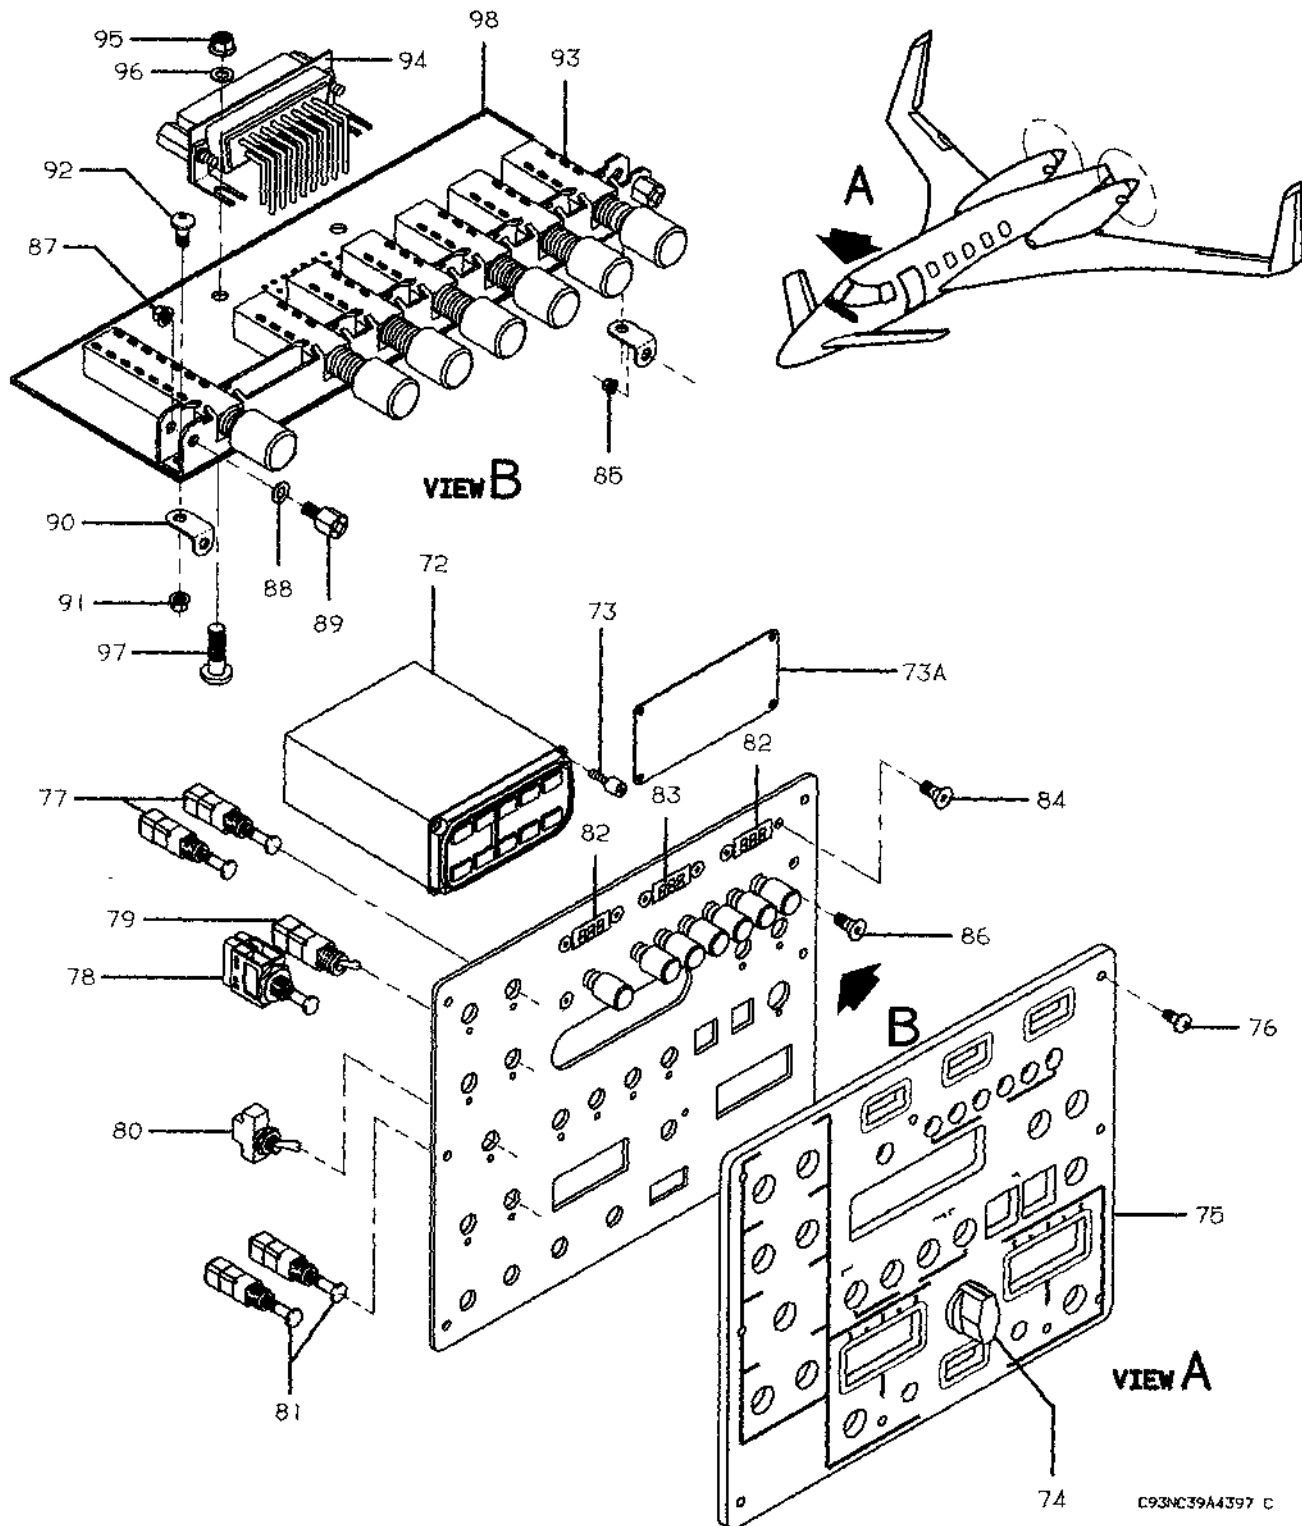


FIGURE 10-70. INSTRUMENT SUBPANEL
/SHEET 4 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-70 -72	622-8330-002	. PANEL, AUTOPILOT MODE/MSP-850A/..... /ORDER 622-8330-005 FOR SPARES/	NP	5
	R 622-8330-005	. PANEL, AUTOPILOT MODE/MSP-850A/..... /ATTACHING PARTS/	2	2
-73	132002-06-12BK	. SCREW, CAP	4	
		-----★-----		
-73A	122-322220-1	. COVER, AUTOPILOT MODE PANEL	1	1
-74	122-382036-29	. KNOB, FUEL TRANSFER FLOW	1	1
-75	R 122-382107-5	. PANEL ASSY, EL/CENTER/..... /ATTACHING PARTS/	1	1
-76	MS35214-27	. SCREW.....	6	
		-----★-----		
	122-322204-1	. PANEL ASSY, CENTER SWITCH.....	1	1
-77	112TW59-3D	. SWITCH, LEFT & RIGHT AUTO IGNITION	2	1
		/ALTERNATE FOR 8906K3928/		
	8906K3928	. SWITCH, LEFT & RIGHT AUTO IGNITION	2	1
		/ALTERNATE FOR 112TW59-3D/		
-78	64AT59-514P	. SWITCH, AUTOFEATHER	1	1
-79	112TW91-3	. SWITCH, PROP SYNC/ALTERNATE FOR	1	1
		MS21347-731/		
	MS21347-731	. SWITCH, PROP SYNC/ALTERNATE FOR 112TW91-3/	1	1
-80	MS24524-27	. SWITCH, PROP OVERSPEED GOV	1	1
-81	112TW59-5M	. SWITCH, LEFT & RIGHT ENGINE START	2	1
		/ALTERNATE FOR 8906K3916/		
	8906K3916	. SWITCH, LEFT & RIGHT ENGINE START	2	1
		/ALTERNATE FOR 112TW59-5M/		
-82	R 122-382045-9	. DISPLAY, LCD/LEFT & RIGHT DC LOAD/	2	1
		/ALTERNATE FOR 122-382045-11/		
	R 122-382045-11	. DISPLAY, LCD/LEFT & RIGHT DC LOAD/	2	1
		/ALTERNATE FOR 122-382045-9/		
-83	R 122-382047-7	. DISPLAY, LCD/DC VOLTS/	1	1
		/ATTACHING PARTS/		
-84	MS24693S4	. SCREW.....	2	
		-----★-----		
	122-322169-1	. SWITCH ASSY, VOLTMETER SELECT	1	1
		/ATTACHING PARTS/		
-85	R MS21042L04	. NUT	2	
-86	R MS24693S6	. SCREW.....	4	
		-----★-----		
-87	MS21042L04	. . . NUT.....	2	1
-88	AN980-4L	. . . WASHER	2	1
-89	4571-440S1	. . . STANDOFF	2	1
-90	122-322039-7	. . . SUPPORT	2	1
		/ATTACHING PARTS/		
-91	MS21042L04	. . . NUT.....	1	
-92	MS35206-213	. . . SCREW.....	1	
		-----★-----		
-93	122-382084-1	. . . SWITCH ASSY-GANGED, VOLTAGE SELECT	1	1
-94	MD15M59R40TX5311	. . . CONNECTOR.....	1	1
		/ATTACHING PARTS/		
-95	MS21042L04	. . . NUT.....	2	
-96	AN980-4L	. . . WASHER	2	
-97	MS35206-213	. . . SCREW.....	2	
		-----★-----		
-98	122-322170-1	. . . PRINTED CIRCUIT BOARD, VOLTMETER SELECT	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

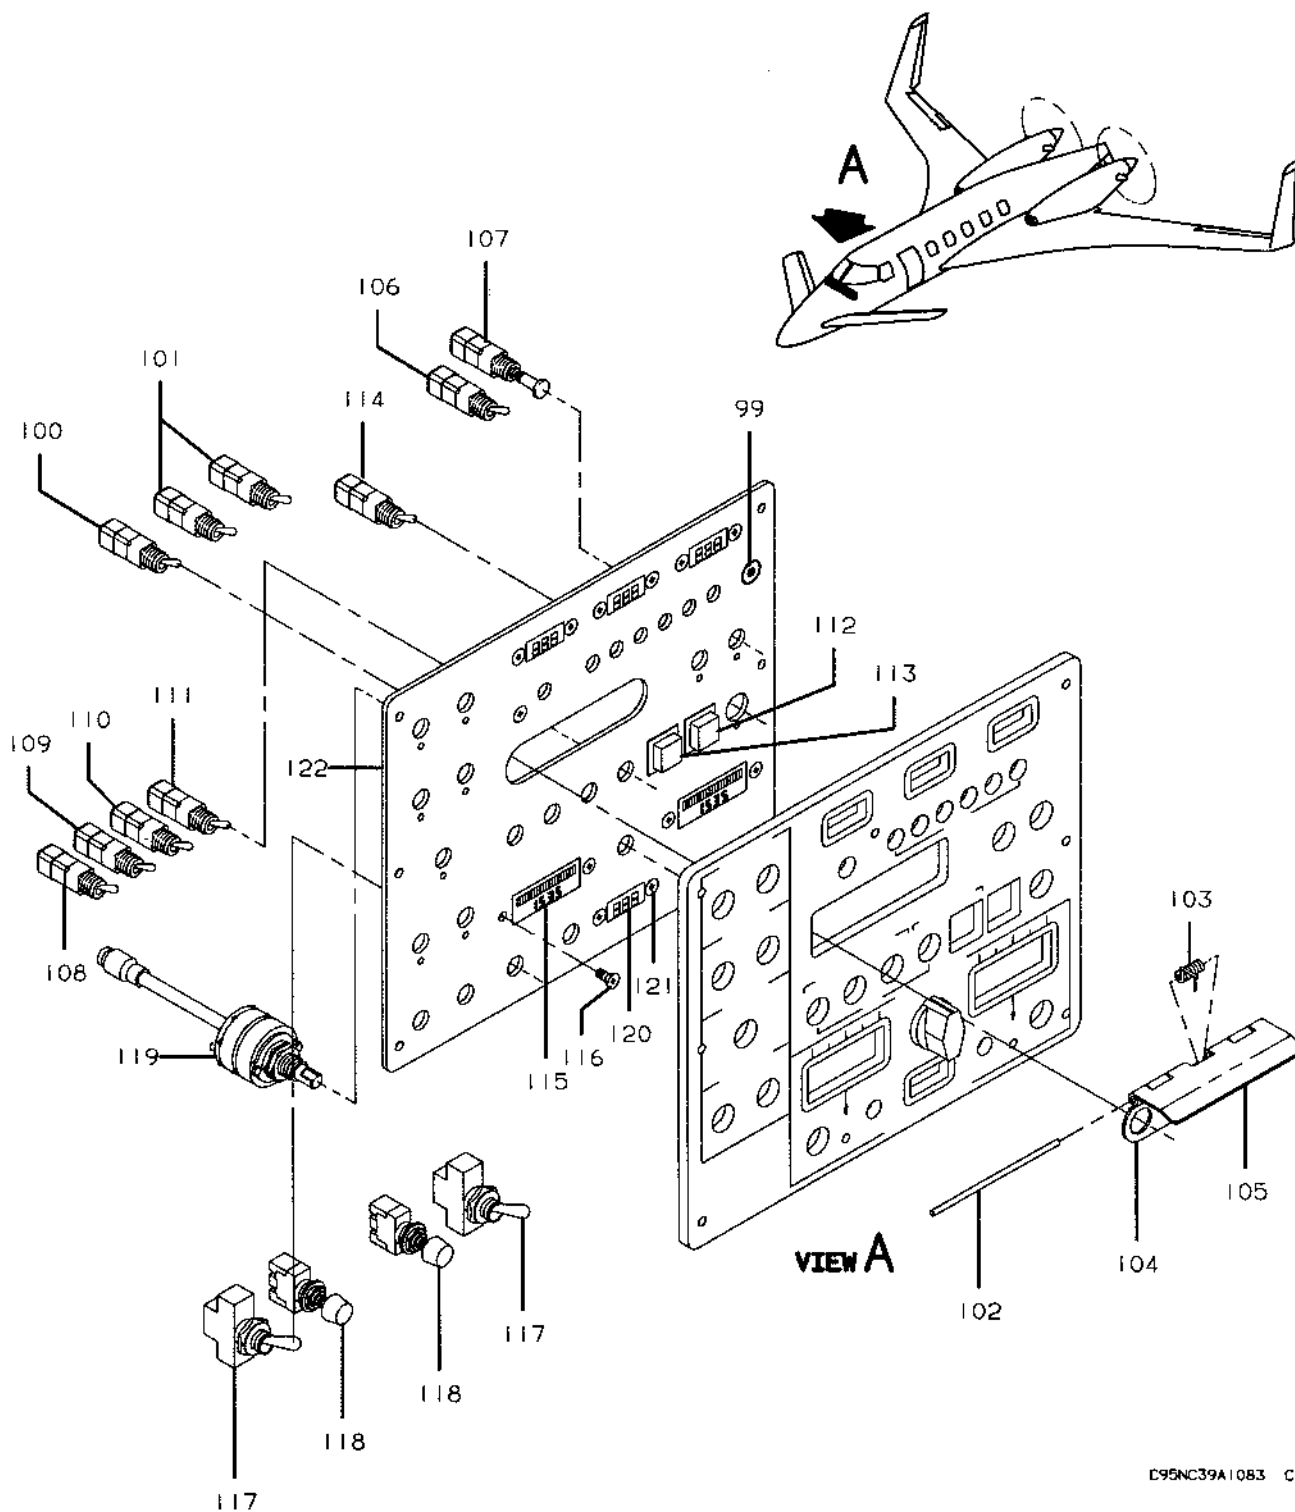



C95NC39A1083 C

FIGURE 10-70. INSTRUMENT SUBPANEL
/SHEET 5 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-70 -99	MS90335-6	.. RECEPTACLE, ELECTROLUMINESCENT PANEL.....	1	1
-100	112TW91-3	.. SWITCH, BATT MASTR/ALTERNATE FOR.....	1	1
		MS21347-731/		
-101	MS21347-731	.. SWITCH, BATT MASTR/ALTERNATE FOR 112TW91-3/.....	1	1
	31AT46S	.. SWITCH, L & R GEN	2	1
	122-322129-1	.. ACTUATOR ASSY, MASTER SWITCH.....	1	1
-102	106774M-ZE00301	.. PIN, HINGE.....	1	1
-103	50-320140	.. SPRING	1	1
-104	122-322129-3	.. HINGE.....	1	1
	50-320139-1	.. DECAL, MASTER SWITCH IDENTIFICATION.....	1	1
-105	122-322129-5	.. THROW	1	1
-106	112TW91-3	.. SWITCH, EXT PWR/ALTERNATE FOR MS21347-731/.....	1	1
	MS21347-731	.. SWITCH, EXT PWR/ALTERNATE FOR 112TW91-3/.....	1	1
-107	112TW59-10A	.. SWITCH, BUS TIE/ALTERNATE FOR 8906K3914/.....	1	1
	8906K3914	.. SWITCH, BUS TIE/ALTERNATE FOR 112TW59-10A/.....	1	1
-108	112TW91-3	.. SWITCH, EICAS DISPLAY/ALTERNATE FOR.....	1	1
		MS21347-731/		
	MS21347-731	.. SWITCH, EICAS DISPLAY/ALTERNATE FOR	1	1
		112TW91-3/		
-109 R	112TW91-3	.. SWITCH, PILOT AVIONICS DISPLAY/ALTERNATE.....	1	1
		FOR MS21347-731/		
	R MS21347-731	.. SWITCH, PILOT AVIONICS DISPLAY/ALTERNATE.....	1	1
		FOR 112TW91-3/		
-110	112TW91-3	.. SWITCH, COPILOT AVIONICS DISPLAY/ALTERNATE	1	1
		FOR MS21347-731/		
	MS21347-731	.. SWITCH, COPILOT AVIONICS DISPLAY/ALTERNATE	1	1
		FOR 112TW91-3/		
-111	112TW91-3	.. SWITCH, ATTD GYRO/ALTERNATE FOR	1	1
		MS21347-731/		
	MS21347-731	.. SWITCH, ATTD GYRO/ALTERNATE FOR 112TW91-3/	1	1
-112	122-382085-1	.. SWITCH LIGHT ASSY, GND COMM PUSH ON/OFF	1	1
-113	122-382085-3	.. SWITCH LIGHT ASSY, ATTD GYRO BATT PWR ON	1	1
-114	112TW91-3	.. SWITCH, AVIONIC ALTN BLWR/ALTERNATE FOR	1	1
		FOR MS21347-731/		
	MS21347-731	.. SWITCH, AVIONIC ALTN BLWR/ALTERNATE	1	1
		FOR 112TW91-3/		
-115 R	122-382009-7	.. DISPLAY, LCD/LEFT & RIGHT FUEL QTY/	2	1
		/ATTACHING PARTS/		
-116	MS24693S4	.. SCREW.....	2	
		★-----		
-117	MS24523-23	.. SWITCH, LEFT & RIGHT STANDBY PUMP	2	1
-118	M82011SW01BK	.. SWITCH, LEFT & RIGHT AFT TANK FUEL QTY	2	1
-119	122-322171-1	.. SWITCH ASSY, FUEL TRANSFER	1	1
-120	122-382100-7	.. DISPLAY, FUEL TEMP.....	1	1
		/ATTACHING PARTS/		
-121	MS24693S4	.. SCREW.....	2	
		★-----		
-122	122-322205-1	.. PANEL, SWITCH	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

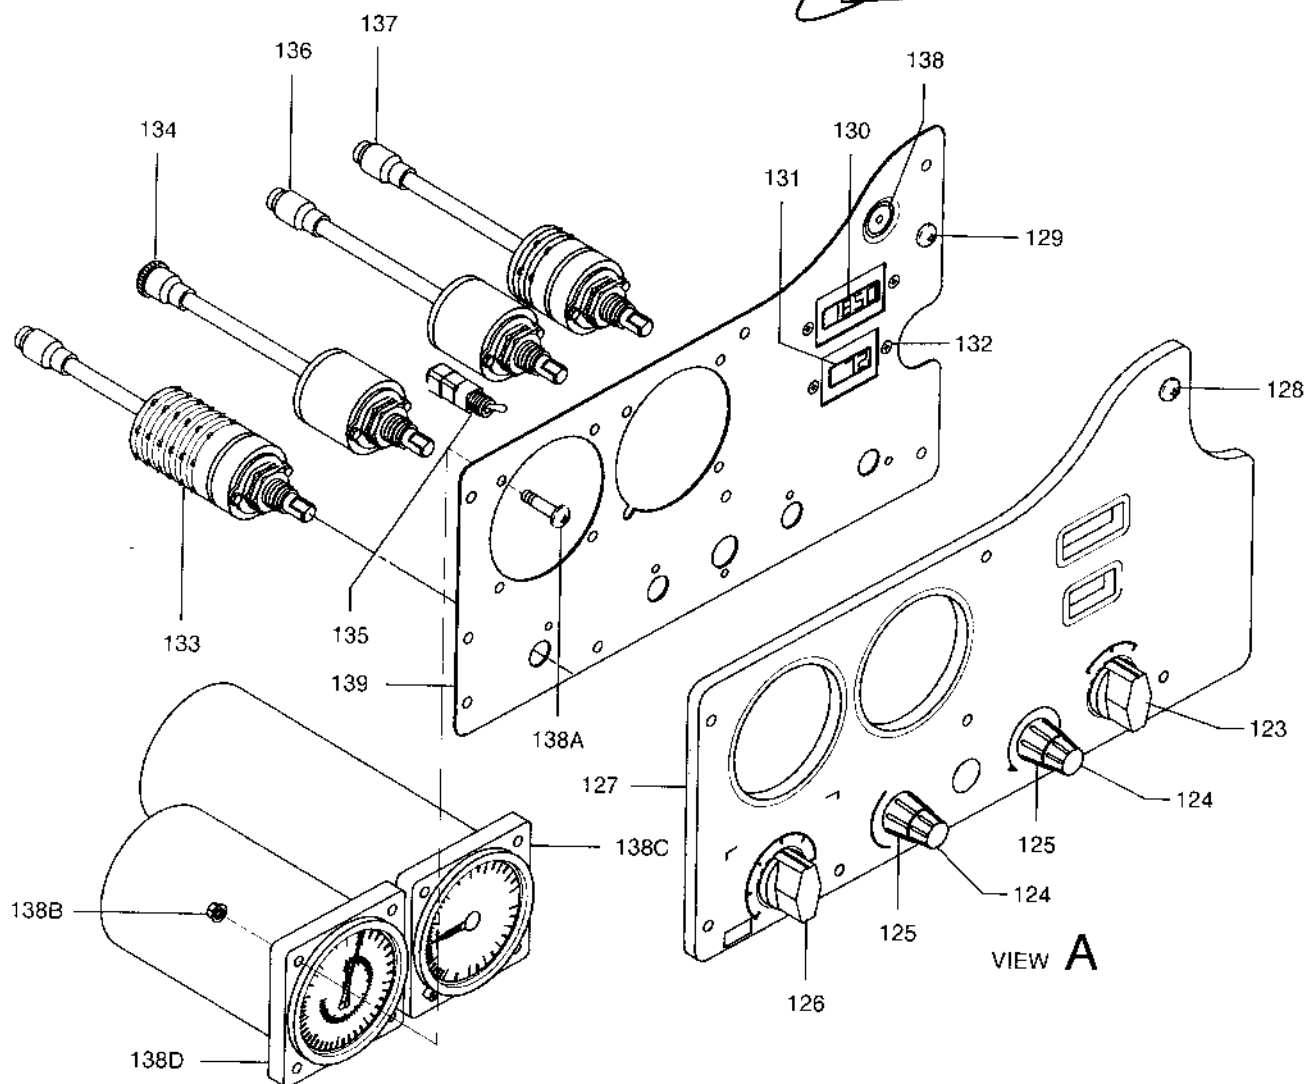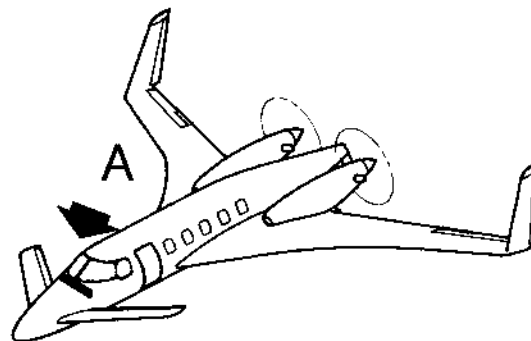


2800 395-06

FIGURE 10-70. INSTRUMENT SUBPANEL
/SHEET 6 OF 8 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-70 -123	122-382036-11	. KNOB, TEMPERATURE MODE SELECTOR	1	1
		SWITCH CONTROL		
-124	122-382036-17	. KNOB, AUTO TEMP & BLWR SPEED SWITCH CONTROL	2	1
-125	122-382036-21	. KNOB, AUTO TEMP & BLWR SPEED SWITCH CONTROL	2	1
-126	122-382036-11	. KNOB, BLEED AIR VALVE SELECTOR	1	1
		SWITCH CONTROL		
-127 R	122-382149-1	. PANEL ASSY, EL/RIGHT INBD/.....	1	1
		/ATTACHING PARTS/.....		
-128	MS35214-27	. SCREW.....	7	
		-----★-----		
	122-322240-1	. PANEL ASSY, RIGHT INBD SWITCH.....	1	1
		/ATTACHING PARTS/.....		
-129	MS35206-230	. SCREW.....	2	
		-----★-----		
-130	122-382134-1	. . DISPLAY, OXYGEN PRESS.....	1	1
-131	122-382133-1	. . DISPLAY, CABIN TEMPERATURE.....	1	1
		/ATTACHING PARTS/.....		
-132	MS24693-4B	. . SCREW.....	2	
		-----★-----		
-133	122-322172-5	. . SWITCH ASSY, BLEED AIR VALVE SELECT	1	1
-134	122-322173-9	. . SWITCH ASSY, BLOWER SPEED.....	1	1
-135	112TW91-7	. . SWITCH, MANUAL TEMP CONTROL	1	1
-136	122-322173-1	. . SWITCH ASSY, AUTO TEMP CONTROL.....	1	1
-137	122-322174-1	. . SWITCH ASSY, TEMP MODE SELECTOR	1	1
-138 R	MS90335-6	. . RECEPTACLE, EL PANEL.....	1	1
-138A	MS35214-29	. . SCREW.....	7	1
-138B	MS33737-16	. . NUT	7	1
-138C	122-382147-3	. . INDICATOR, CABIN CLIMB.....	1	1
-138D	122-382146-7	. . INDICATOR, CABIN ALT & DIFF PRESS	1	1
-139	122-322241-1	. . PANEL, SWITCH	1	1
	R MS21071L06	. . . NUTPLATE	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

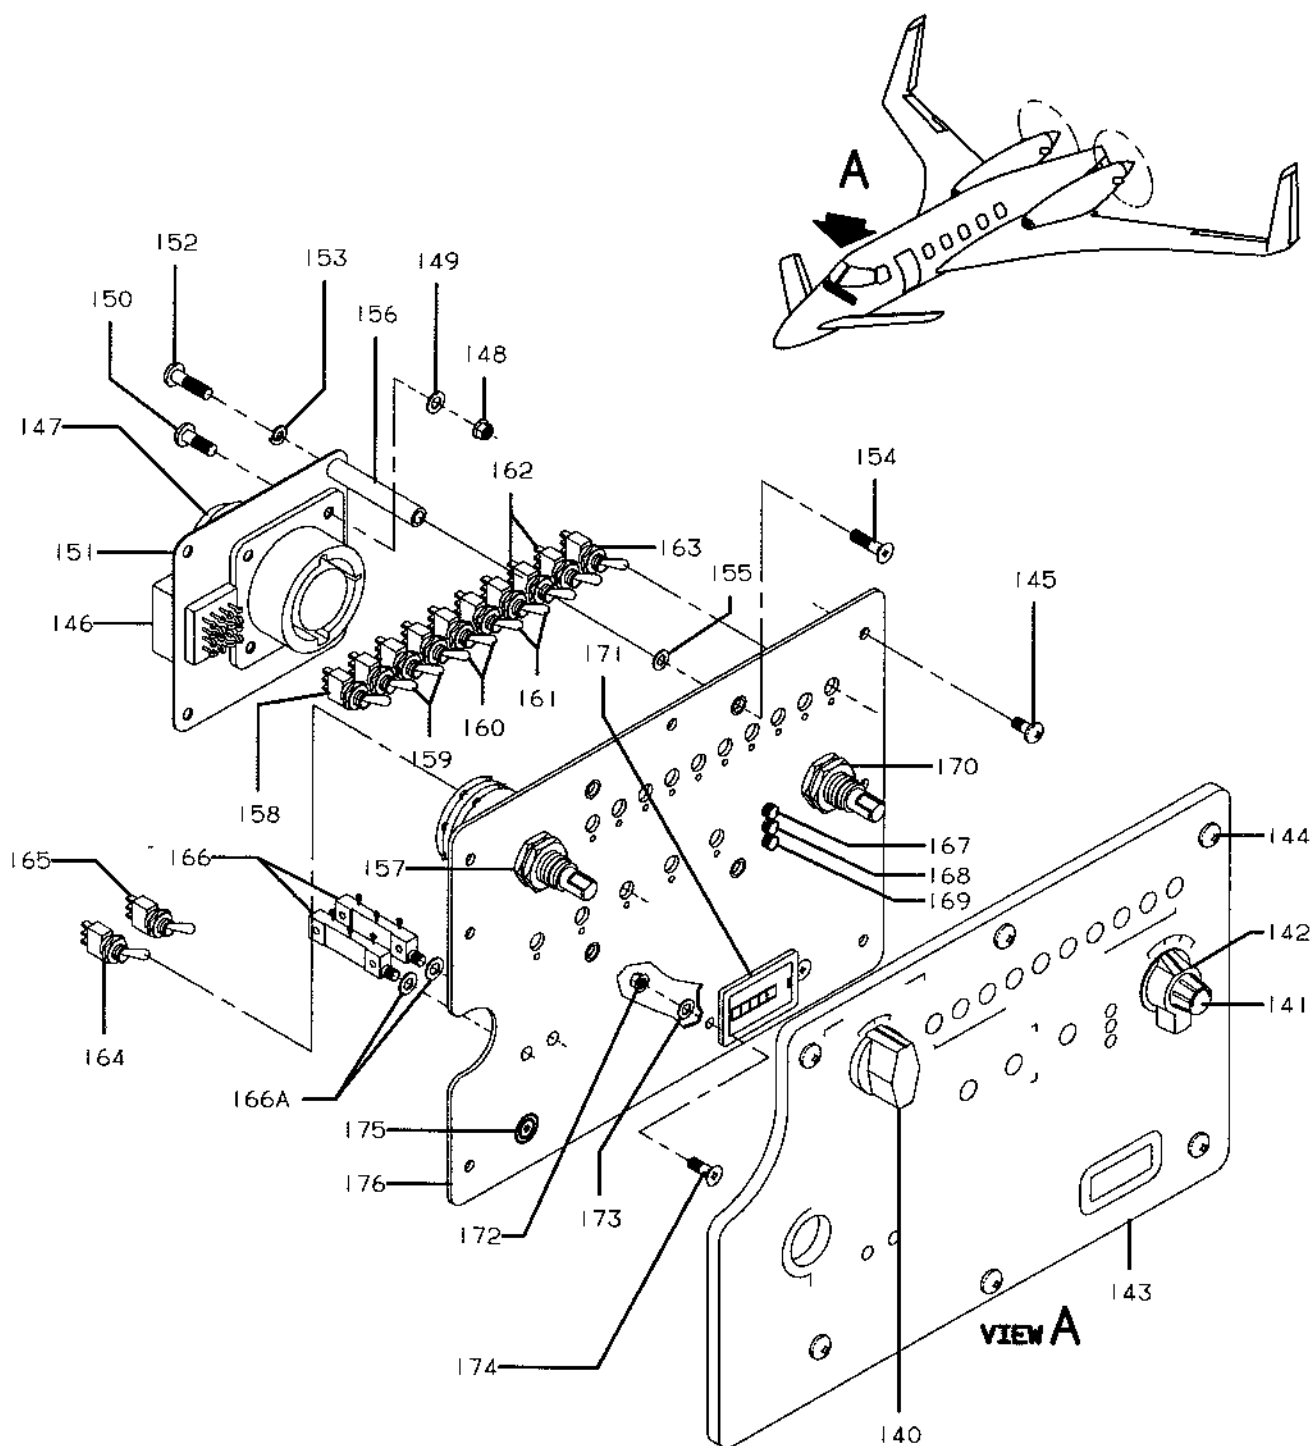

C95NC39A1084 C


Beechcraft

STARSHIP 1

ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-70	-140	122-382036-9	. KNOB, MIC SELECT SWITCH	1	1
	-141	122-382036-15	. KNOB, MSTR PH VOL CONTROL SWITCH.....	1	1
	-142	122-382036-19	. KNOB, COMM SELECT SWITCH.....	1	1
	-143 R	122-382057-5	. PANEL ASSY, EL/RIGHT OUTBD/.....	1	1
			/ATTACHING PARTS/		
	-144	MS35214-27	. SCREW.....	6	
			-----★-----		
		122-322090-3	. PANEL ASSY, RIGHT OUTBD SWITCH.....	1	1
			/ATTACHING PARTS/		
	-145	MS35206-230	. SCREW.....	2	
			-----★-----		
	-146	M6106/28-023	. RELAY	1	1
		451120-061	. SOCKET, RELAY	1	1
	-147	MS3470L24-61P	. CONNECTOR.....	1	1
			/ATTACHING PARTS/		
	-148	MS21042L04	. NUT	4	
	-149	AN960-4L	. WASHER.....	4	
	-150	MS35206-215	. SCREW.....	4	
			-----★-----		
	-151	122-322039-9	. PLATE, CONNECTOR.....	1	1
			/ATTACHING PARTS/		
	-152	MS35209-206	. SCREW.....	4	
	-153	MS35338-41	. WASHER, LOCK	4	
	-154	MS24693S26	. SCREW.....	4	
	-155	AN960-6L	. WASHER.....	4	
	-156	1713-632A0	. SPACER.....	4	
			-----★-----		
	-157	122-382076-1	. SWITCH ASSY, MIC SELECT ROTARY	1	1
	-158	MST105D	. SWITCH, AUTO COMM	1	1
	-159	MST105D	. SWITCH, COMM 1 & 2	2	1
	-160	MST105D	. SWITCH, NAV 1 & 2	2	1
	-161	MST105D	. SWITCH, MKR BCN 1 & 2.....	2	1
	-162	MST105D	. SWITCH, DME 1 & 2.....	2	1
	-163	MST105D	. SWITCH, ADF.....	1	1
	-164	MST105D	. SWITCH, AUDIO SPKR.....	1	1
	-165	MST105E	. SWITCH, VOICE	1	1
	-166	3059J1-103M	. TRIMPOT, LH & RH STALL WARN ELEV POSITION.....	2	1
	-166A R	AN960-10L	. WASHER	2	1
	-167	3059J1-103M	. TRIMPOT, INTPH SIDETONE.....	1	1
	-168	3059J1-103M	. TRIMPOT, INTPH VOL.....	1	1
	-169	3059J1-103M	. TRIMPOT, INTPH SQUELCH.....	1	1
	-170	122-382076-13	. SWITCH ASSY, COMM SELECT & MSTR PH VOL	1	1
	-171	122-382089-1	. METER, FLIGHT HOUR	1	1
			/ATTACHING PARTS/		
	-172	MS21042L04	. NUT	2	
	-173	AN960-4L	. WASHER	2	
	-174	MS24693-4B	. SCREW.....	2	
			-----★-----		
	-175 R	MS90335-6	. RECEPTACLE, EL PANEL	1	1
	-176	122-322053-7	. PANEL, SWITCH.....	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

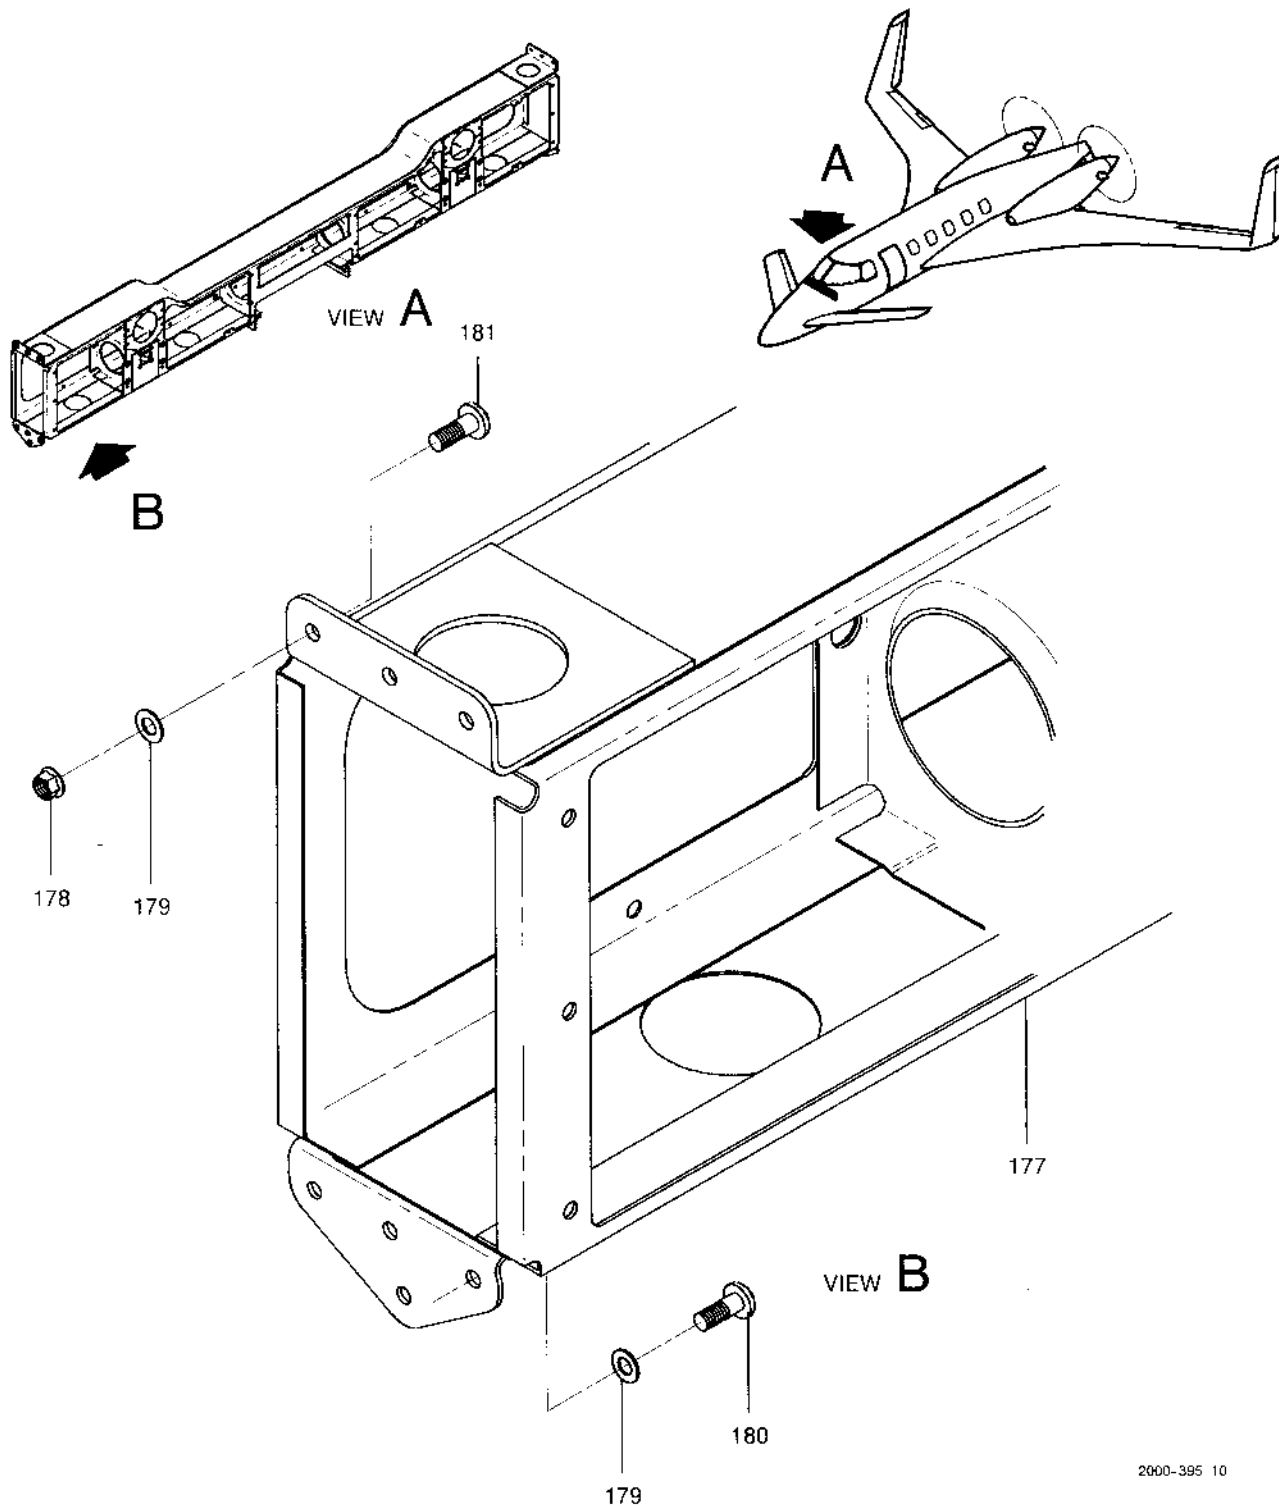

2000-395 10

FIGURE 10-70. INSTRUMENT SUBPANEL
/SHEET 8 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-70 -177	122-322020-3	. STRUCTURE ASSY, SUBPANEL/SEE CHAPTER 53/ /ATTACHING PARTS/	1	1
-178 R	MS21045L3	. NUT	6	
-179	AN960-10L	. WASHER	12	
-180	MS27039-1-07	. SCREW	6	
-181	MS27039-1-12	. SCREW	6	

---★---


CODES OF EFFECTIVITY

1	NC-4 THRU NC-28	2	NC-23 THRU NC-28
3	NC-4 THRU NC-26	4	NC-27 AND NC-28
5	NC-4 THRU NC-22	6	NC-10 ONLY

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-10-71
INSTRUMENT SUBPANEL
NC-29 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

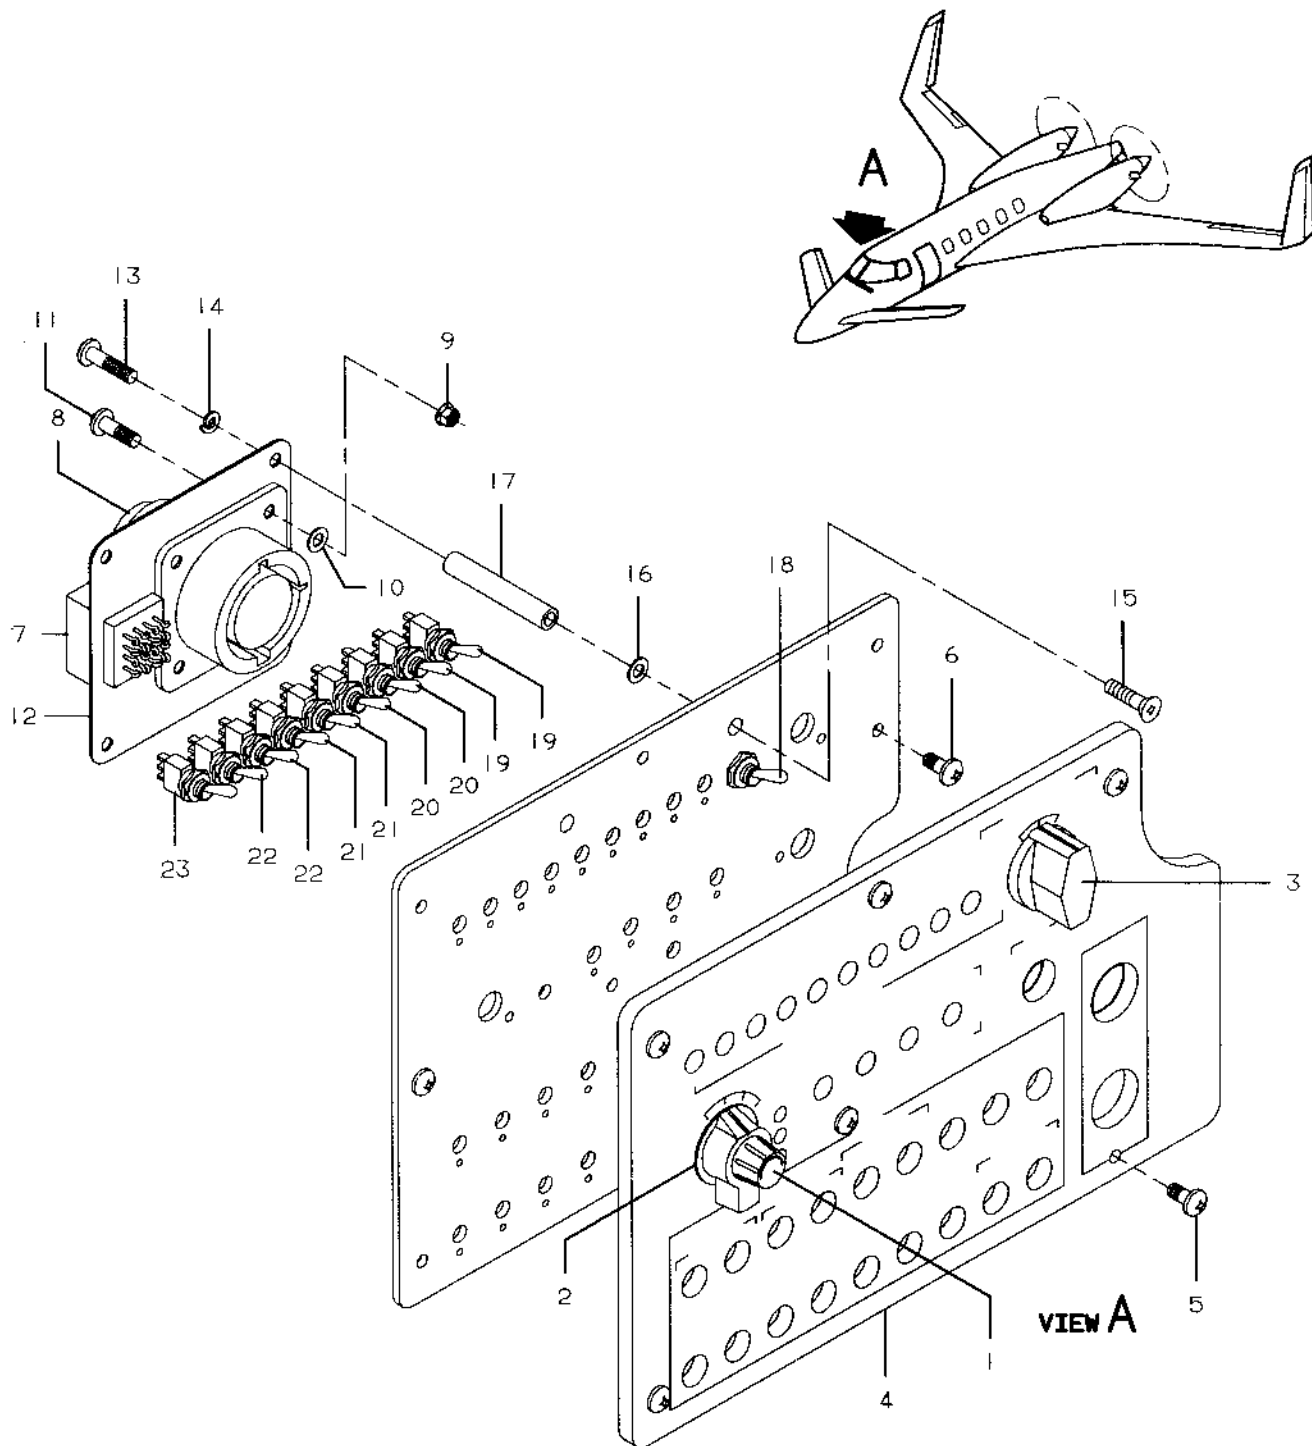


C9200144

FIGURE 10-71. INSTRUMENT SUBPANEL
/SHEET 1 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-71	122-322018-5	SUBPANEL INSTL, INSTRUMENT	NP	1
- 1	122-382036-15	. KNOB, COMM VOL CONTROL	1	1
- 2	122-382036-19	. KNOB, COMM SELECTOR.....	1	1
- 3	122-382036-9	. KNOB, MIC SELECTOR.....	1	1
- 4	R 122-382053-17	. PANEL ASSY, EL/LEFT OUTBD/	1	1
		/ATTACHING PARTS/		
- 5	MS35214-27	. SCREW.....	6	
		-----★-----		
	122-322209-5	. PANEL ASSY, LEFT OUTBD SWITCH	1	3
	122-322209-9	. PANEL ASSY, LEFT OUTBD SWITCH	1	4
		/ATTACHING PARTS/		
- 6	MS35206-230	. SCREW.....	2	
		-----★-----		
- 7	M6106/28-023	. RELAY	1	1
	451120-061	. SOCKET, RELAY	1	1
- 8	MS3470L24-61P	. CONNECTOR.....	1	1
		/ATTACHING PARTS/		
- 9	R MS21042L06	. NUT	4	
- 10	AN960-6L	. WASHER	4	
- 11	MS35206-228	. SCREW.....	4	
		-----★-----		
- 12	122-322039-9	. PLATE, CONNECTOR.....	1	1
		/ATTACHING PARTS/		
- 13	MS35206-228	. SCREW.....	4	
- 14	MS35338-41	. WASHER, LOCK	4	
- 15	MS24693S26	. SCREW.....	4	
- 16	AN960-6L	. WASHER	4	
- 17	1713-632A0	. SPACER	4	
		-----★-----		
- 18	MST105D	. SWITCH, ADF.....	1	1
- 19	MST105D	. SWITCH, DME 1 & 2.....	2	1
- 20	MST105D	. SWITCH, MKR BCN 1 & 2.....	2	1
- 21	MST105D	. SWITCH, NAV 1 & 2	2	1
- 22	MST105D	. SWITCH, COMM 1 & 2	2	1
- 23	MST105D	. SWITCH, AUTO COMM	1	1
	MST105D	. SWITCH, HF	1	4
	MST105D	. SWITCH, ADF2.....	1	4

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

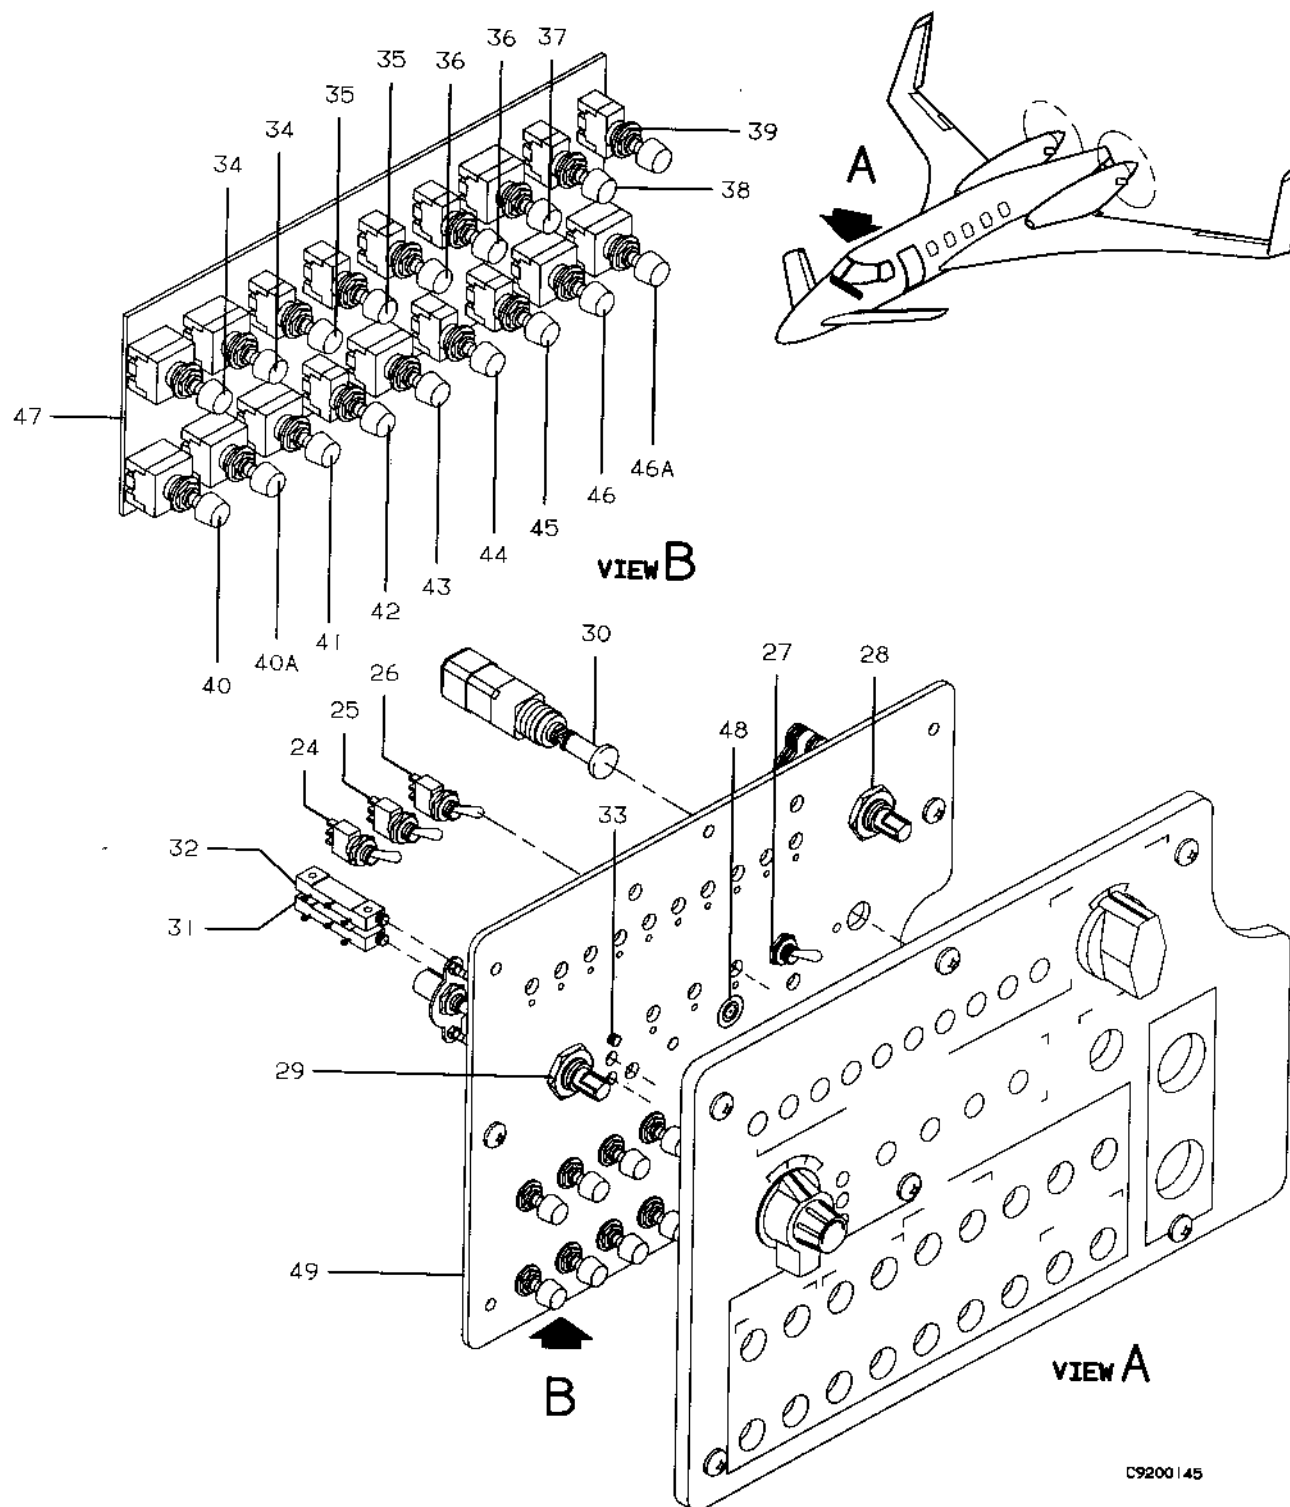


C9200145

FIGURE 10-71. INSTRUMENT SUBPANEL
/SHEET 2 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-71	-24	MST406N	.. SWITCH, INTPH	1	1
	-25	MST105D	.. SWITCH, AUDIO SPKR	1	1
	-26	R MTL206N	.. SWITCH, AUDIO EMER	1	1
	-27	MST105E	.. SWITCH, VOICE	1	1
	-28	122-382076-1	.. SWITCH, MIC SELECT ROTARY	1	1
	-29	122-382076-13	.. SWITCH, COMM SELECT ROTARY	1	3
		122-382076-25	.. SWITCH, COMM SELECT ROTARY	1	4
	-30	112TW59-3D	.. SWITCH, STATIC SOURCE	1	1
	-31	3059J1-103M	.. TRIMPOT, INTPH SQUELCH	1	1
	-32	3059J1-103M	.. TRIMPOT, INTPH VOL	1	1
	-33	3059J1-103M	.. TRIMPOT, INTPH SIDETONE	1	1
		122-322207-9	.. MODULE ASSY, TEST SWITCH	1	1
	-34	MB2061SW06BK	... SWITCH, LEFT & RIGHT FIRE EXT TEST	2	1
	-35	MB2011SW06BK	... SWITCH, LEFT & RIGHT FIRE DETECTOR TEST	2	1
	-36	R MB2011SW06BK	... SWITCH, LEFT & RIGHT FLAP MONITOR	2	1
	-37	MB2061SW06BK	... SWITCH, AUX BATT TEST	1	1
	-38	MB2011SW06BK	... SWITCH, BATT MONITOR TEST	1	1
	-39	MB2011SW06BK	... SWITCH, PRESS TEST	1	1
	-40	MB2061SW06BK	... SWITCH, FUEL LO WARN	1	1
	-40A	MB2061SW06BK	... SWITCH, STALL WARN	1	1
	-41	R MB2011SW06BK	... SWITCH, VMO/MMO TEST	1	1
	-42	MB2011SW06BK	... SWITCH, LDG GR TEST	1	1
	-43	MB2061SW06BK	... SWITCH, ANNUN TEST	1	1
	-44	MB2011SW06BK	... SWITCH, BLEED AIR TEST	1	1
	-45	MB2011SW06BK	... SWITCH, SURF DEICE VAC	1	1
	-46	R MB2061SW06BK	... SWITCH, SURF DEICE/STBY/	1	1
	-46A	R MB2061SW06BK	... SWITCH, SURF DEICE/MAIN/	1	1
		DDMM50PE	... CONNECTOR, MODULE	1	1
			/ATTACHING PARTS/		
		R 207719-3	... KIT, FEMALE SCREWLOCK	2	
		R NAS43DD0-14	... SPACER	2	
			-----★-----		
	-47	122-322208-37	... PRINTED CIRCUIT BOARD, SWITCH TEST MODULE	1	1
	-48	MS90335-6	.. RECEPTACLE, ELECTROLUMINESCENT PANEL	1	1
	-49	122-322041-13	.. PANEL, SWITCH	1	3
		122-322041-25	.. PANEL, SWITCH	1	4

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

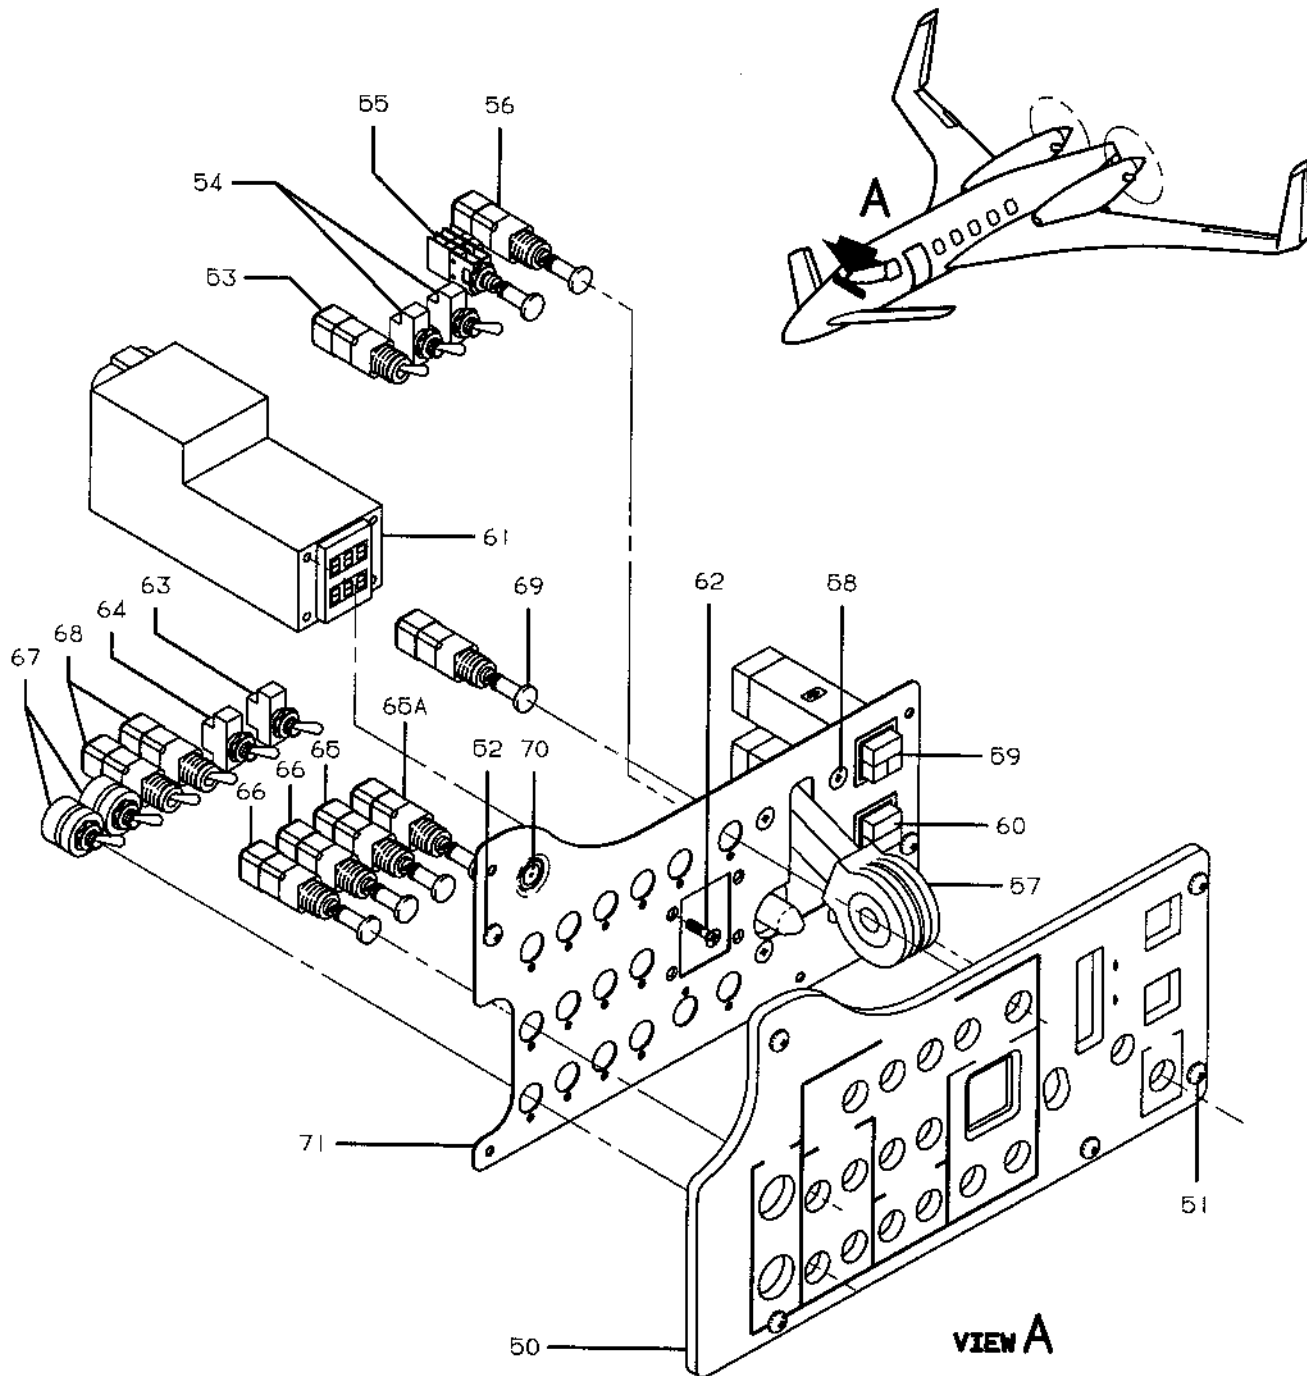

C93NC39A4396 C

FIGURE 10-71. INSTRUMENT SUBPANEL
/SHEET 3 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-71 -50	R 122-382137-9	. PANEL ASSY, EL/LEFT INBD/WITHOUT BRAKE DEICE, WITHOUT GND ICE DETR TEST/	1	1
	R 122-382137-11	. PANEL ASSY, EL/LEFT INBD/WITH BRAKE DEICE, WITHOUT GND ICE DETR TEST/	1	1
	R 122-382137-13	. PANEL ASSY, EL/LEFT INBD/WITHOUT BRAKE DEICE, WITH GND ICE DETR TEST/	1	1
	R 122-382137-15	. PANEL ASSY, EL/LEFT INBD/WITH BRAKE DEICE, WITH GND ICE DETR TEST/ /ATTACHING PARTS/	1	1
- 51	MS35214-27	. SCREW	5	
	122-322226-1	. PANEL ASSY, LEFT INBD SWITCH /ATTACHING PARTS/	1	1
- 52	MS35206-230	. SCREW	2	
- 53	112TW91-3	. . SWITCH, STALL WARN ANTI-ICE/ALTERNATE FOR MS21347-731/	1	1
	MS21347-731	. . SWITCH, STALL WARN ANTI-ICE/ALTERNATE FOR 112TW91-3/	1	1
- 54	MS24523-23	. . SWITCH, PILOT & COPILOT PITOT-STATIC HEAT	2	1
- 55	13AT236S-N	. . SWITCH, PILOT WINDSHIELD ANTI-ICE	1	1
- 56	112TW59-10N	. . SWITCH, COPILOT WINDSHIELD ANTI-ICE	1	1
- 57	122-382038-1	. . SWITCH ASSY, LDG GEAR CONTROL /ATTACHING PARTS/	1	1
- 58	MS24693S273	. . SCREW	4	
- 59	R 122-382034-11	. . LIGHT ASSY, GEAR DOWN/ALTERNATE FOR 122-382034-15/SEE NOTE/	1	1
	R 122-382034-15	. . LIGHT ASSY, GEAR DOWN/ALTERNATE FOR 122-382034-11/SEE NOTE/	1	1
- 60	R 122-382034-13	. . LIGHT ASSY, FLAPS/FWD WING TRANS-EXTEND /ALTERNATE FOR 122-382034-17/SEE NOTE/	1	1
	R 122-382034-17	. . LIGHT ASSY, FLAPS/FWD WING TRANS-EXTEND /ALTERNATE FOR 122-382034-13/SEE NOTE/	1	1
NOTE INSTALL 122-382034-11, -15 AND 122-382034-13, -17 AS MATCHED SETS DO NOT INTERMIX VENDOR PARTS				
- 61	122-382143-1	. . DISPLAY, PNEU PRESS /ATTACHING PARTS/	1	1
- 62	MS24693S26	. . SCREW	4	
- 63	R MS24523-27	. . SWITCH, MAIN WING MANUAL	1	1
- 64	R MS24523-27	. . SWITCH, FWD WING MANUAL	1	1
- 65	R 112TW59-3D	. . SWITCH, PILOT WSHLD CONTROL/STBY/	1	1
- 65A	112TW91-8	. . SWITCH, GROUND ICE DETECTOR /WITH KIT 122-5024-1 INSTALLED/	1	2
- 66	R 112TW59-3D	. . SWITCH, LEFT & RIGHT ENGINE ACTUATOR/STBY/	2	1
- 67	R 64AT46-3	. . SWITCH, LEFT & RIGHT ENGINE ACTUATOR/MAIN/ /ALTERNATE FOR 21649TI0109/	2	1
	R 21649TI0109	. . SWITCH, LEFT & RIGHT ENGINE ACTUATOR/MAIN/ /ALTERNATE FOR 64AT46-3/	2	1
- 68	R 62AT46-3	. . SWITCH, LEFT & RIGHT FUEL VENT/PWR CABLE/ /ALTERNATE FOR 21649TI0109/	2	1
	R 21649TI0109	. . SWITCH, LEFT & RIGHT FUEL VENT/PWR CABLE/ /ALTERNATE FOR 64AT46-3/	2	1
- 69	112TW59-3D	. . SWITCH, ANTI SKID	1	1
- 70	R MS90335-6	. . RECEPTACLE, EL PANEL	1	1
- 71	122-322227-1	. . PANEL, SWITCH	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


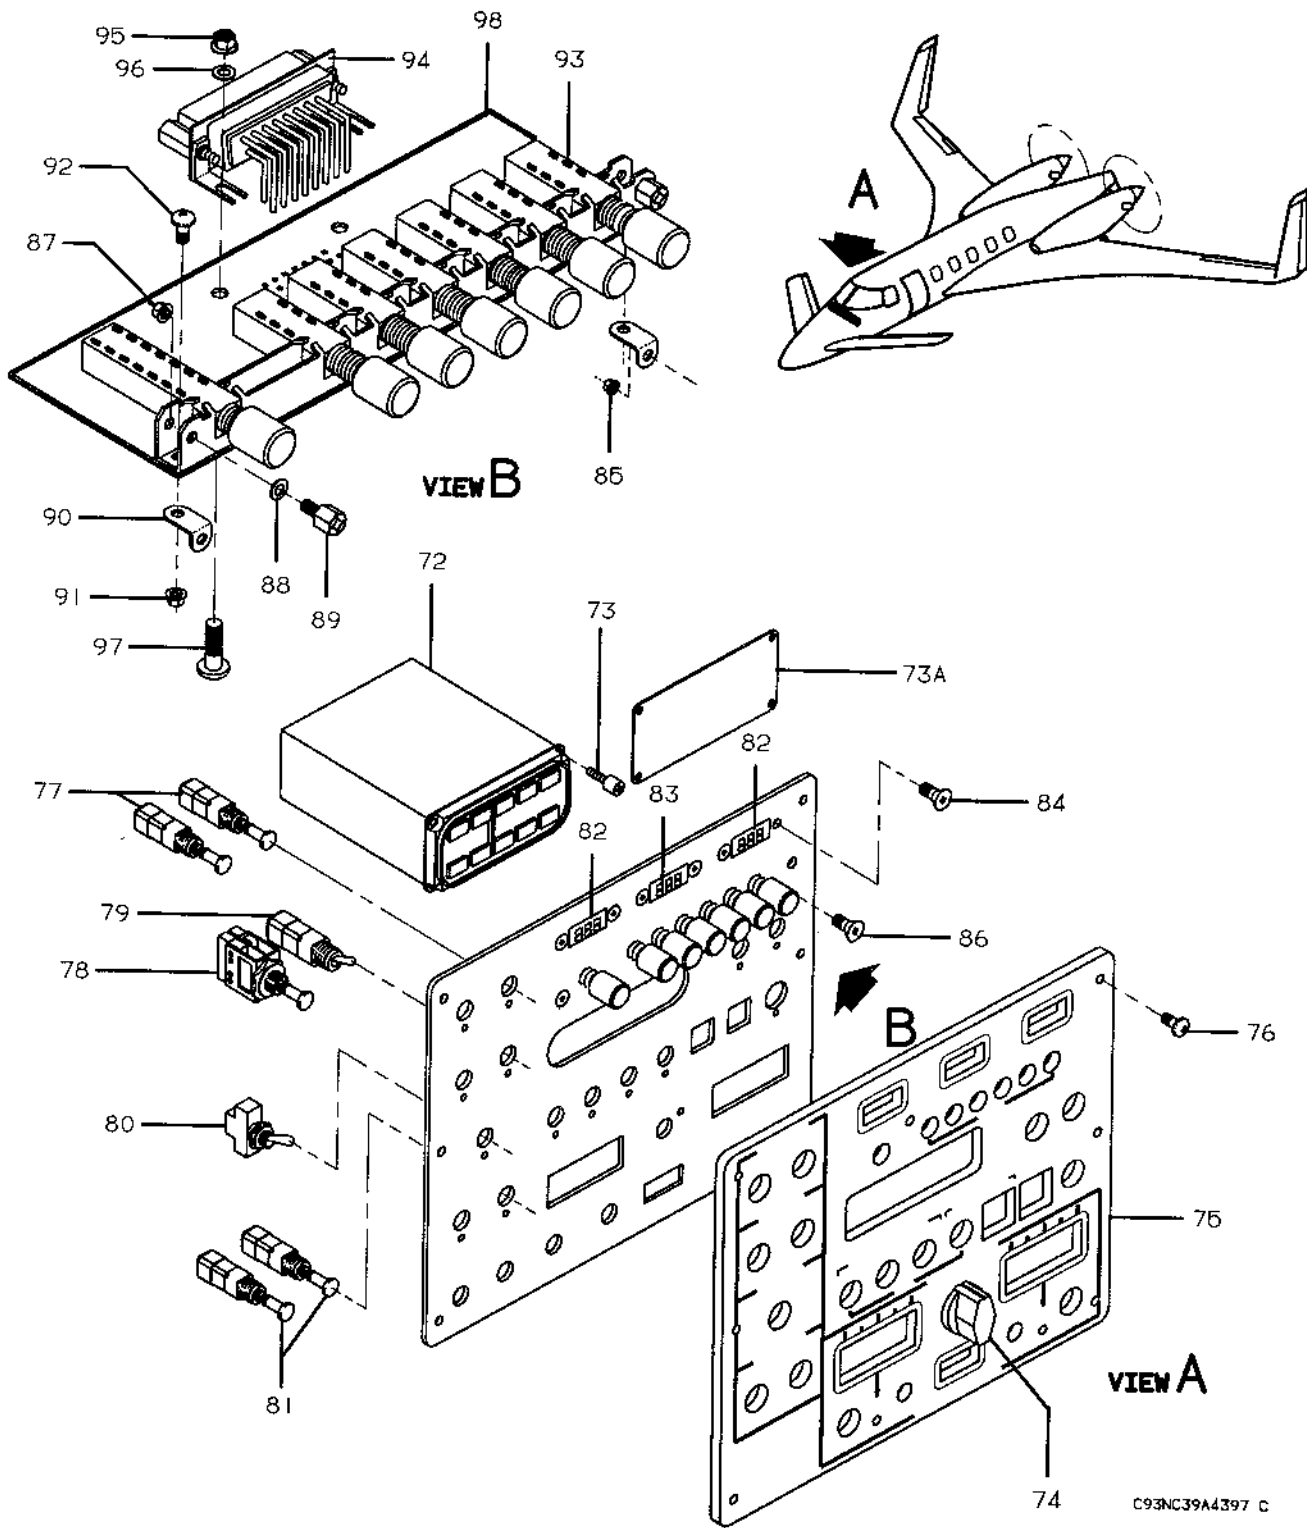


FIGURE 10-71. INSTRUMENT SUBPANEL
/SHEET 4 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
- 72	R 622-8330-005	. PANEL, AUTOPILOT MODE/MSP-850A/.....	2	1
		/ATTACHING PARTS/		
- 73	132002-06-12BK	. SCREW, CAP	4	
		---★---		
- 73A	122-322220-1	. COVER, AUTOPILOT MODE	1	1
- 74	122-382036-29	. KNOB, FUEL TRANSFER FLOW	1	1
- 75	R 122-382107-9	. PANEL ASSY, EL/CENTER/	1	1
		/ATTACHING PARTS/		
- 76	MS35214-27	. SCREW	6	
		---★---		
	122-322204-1	. PANEL ASSY, CENTER SWITCH	1	1
- 77	112TW59-3D	. SWITCH, LEFT & RIGHT AUTO IGNITION	2	1
		/ALTERNATE FOR 8906K3928/		
	8906K3928	. SWITCH, LEFT & RIGHT AUTO IGNITION	2	1
		/ALTERNATE FOR 112TW59-3D/		
- 78	64AT59-514P	. SWITCH, AUTOFEATHER	1	1
- 79	112TW91-3	. SWITCH, PROP SYNC/ALTERNATE FOR	1	1
		MS21347-731/		
	MS21347-731	. SWITCH, PROP SYNC/ALTERNATE FOR 112TW91-3/	1	1
- 80	MS24524-27	. SWITCH, PROP OVERSPEED GOV	1	1
- 81	112TW59-5M	. SWITCH, LEFT & RIGHT ENGINE START	2	1
		/ALTERNATE FOR 8906K3916/		
	8906K3916	. SWITCH, LEFT & RIGHT ENGINE START	2	1
		/ALTERNATE FOR 112TW59-5M/		
- 82	R 122-382045-9	. DISPLAY, LCD/LEFT & RIGHT DC LOAD/	2	1
		/ALTERNATE FOR 122-382045-11/		
	R 122-382045-11	. DISPLAY, LCD/LEFT & RIGHT DC LOAD/	2	1
		/ALTERNATE FOR 122-382045-9/		
- 83	R 122-382047-7	. DISPLAY, LCD/DC VOLTS/	1	1
		/ATTACHING PARTS/		
- 84	MS24693S4	. SCREW	2	
		---★---		
	122-322169-1	. SWITCH ASSY, VOLTMETER SELECT	1	1
		/ATTACHING PARTS/		
- 85	R MS21042L04	. NUT	2	
- 86	R MS24693S6	. SCREW	4	
		---★---		
- 87	MS21042L04	. . . NUT	2	1
- 88	AN960-4L	. . . WASHER	2	1
- 89	4571-440S1	. . . STANDOFF	2	1
- 90	122-322039-7	. . . SUPPORT	2	1
		/ATTACHING PARTS/		
- 91	MS21042L04	. . . NUT	1	
- 92	MS35206-213	. . . SCREW	1	
		---★---		
- 93	122-382084-1	. . . SWITCH ASSY-GANGED, VOLTAGE SELECT	1	1
- 94	MD15M59R40TX5311	. . . CONNECTOR	1	1
		/ATTACHING PARTS/		
- 95	MS21042L04	. . . NUT	2	
- 96	AN960-4L	. . . WASHER	2	
- 97	MS35206-213	. . . SCREW	2	
		---★---		
- 98	122-322170-1	. . . PRINTED CIRCUIT BOARD, VOLTMETER SELECT	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

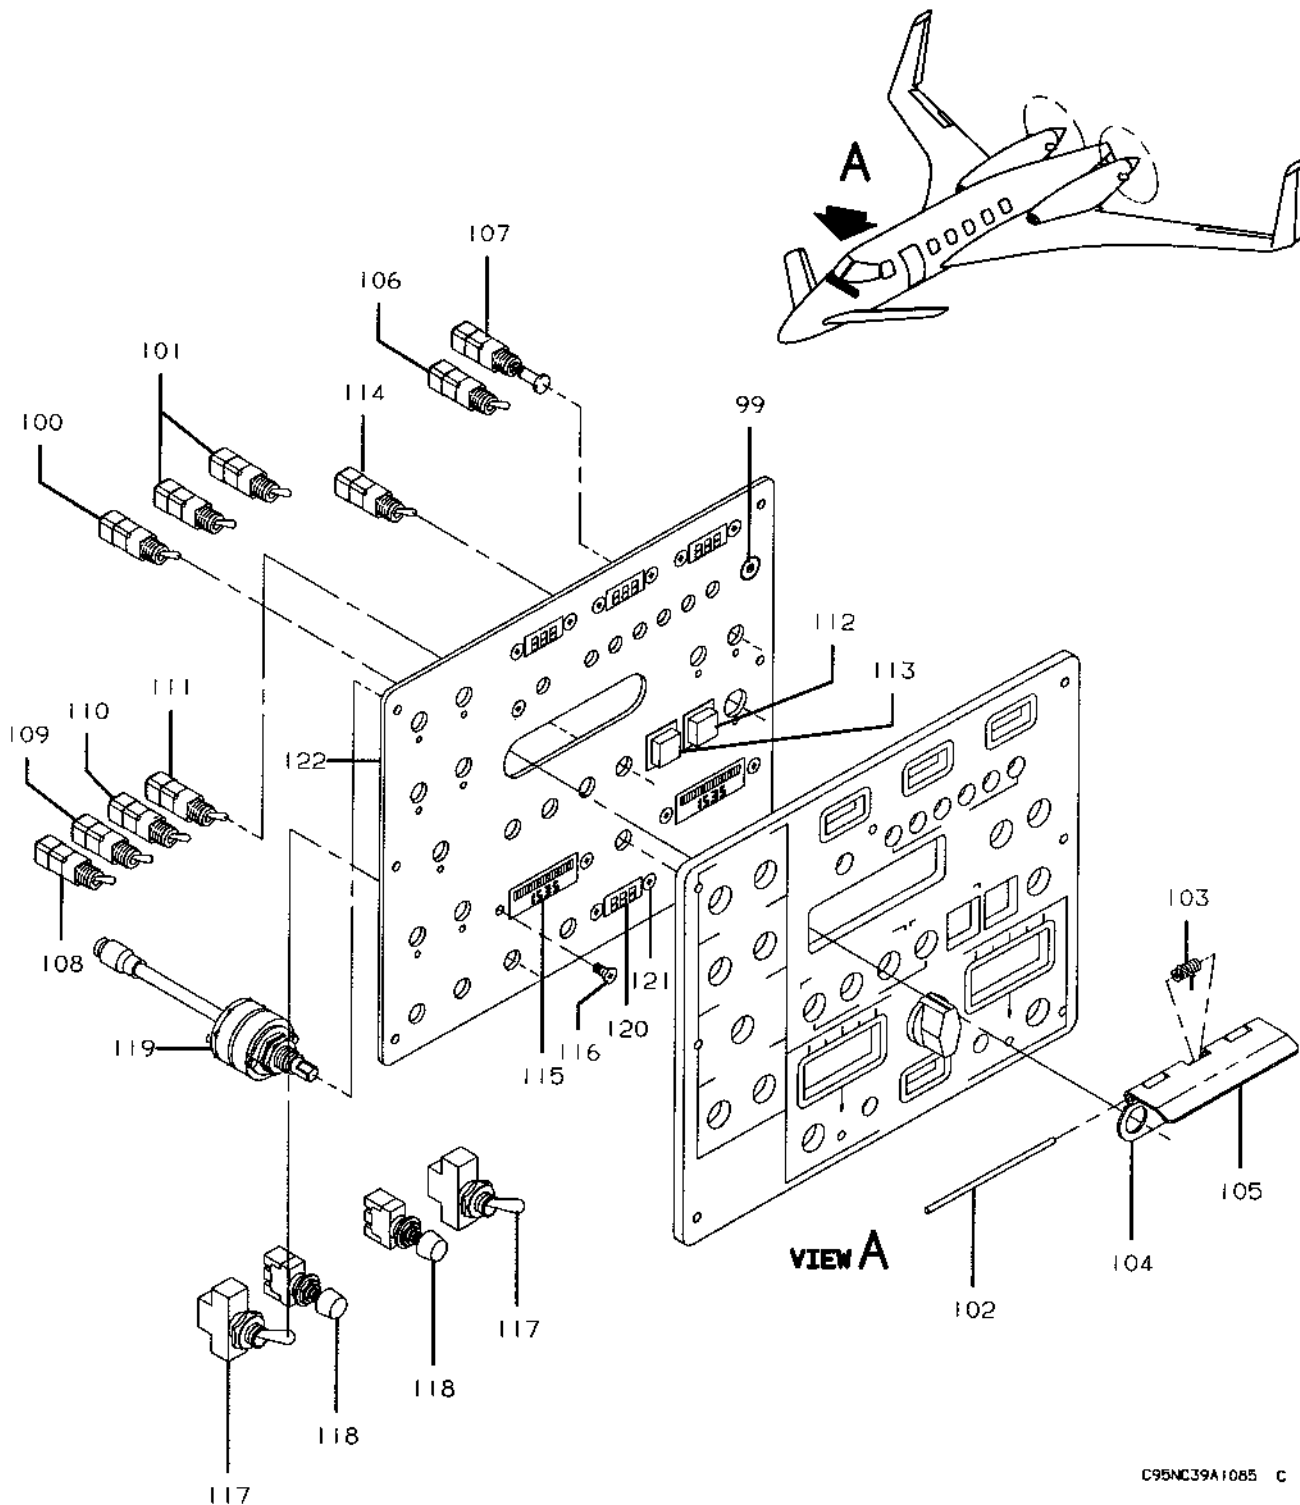


C95NC39A1085 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-71 -99	R MS90335-6	.. RECEPTACLE, EL PANEL.....	1	1
-100	112TW91-3	.. SWITCH, BATT MASTR/ALTERNATE FOR..... MS21347-731/	1	1
	MS21347-731	.. SWITCH, BATT MASTR/ALTERNATE FOR 112TW91-3/.....	1	1
-101	31AT46S	.. SWITCH, L & R GEN	2	1
	122-322129-1	.. ACTUATOR ASSY, MASTER SWITCH.....	1	1
-102	105774M-ZE00301	.. PIN, HINGE.....	1	1
-103	50-320140	.. SPRING	1	1
-104	122-322129-3	.. HINGE.....	1	1
	50-320139-1	.. DECAL, MASTER SWITCH IDENTIFICATION.....	1	1
-105	122-322129-5	.. THROW	1	1
-106	112TW91-3	.. SWITCH, EXT PWR/ALTERNATE FOR MS21347-731/.....	1	1
	MS21347-731	.. SWITCH, EXT PWR/ALTERNATE FOR 112TW91-3/.....	1	1
-107	112TW59-10A	.. SWITCH, BUS TIE/ALTERNATE FOR 8906K3914/.....	1	1
	8906K3914	.. SWITCH, BUS TIE/ALTERNATE FOR 112TW59-10A/.....	1	1
-108	112TW91-3	.. SWITCH, EICAS DISPLAY/ALTERNATE FOR..... MS21347-731/	1	1
	MS21347-731	.. SWITCH, EICAS DISPLAY/ALTERNATE FOR..... 112TW91-3/	1	1
-109	R 112TW91-3	.. SWITCH, PILOT AVIONICS DISPLAY/ALTERNATE..... FOR MS21347-731/	1	1
	R MS21347-731	.. SWITCH, PILOT AVIONICS DISPLAY/ALTERNATE..... FOR 112TW91-3/	1	1
-110	112TW91-3	.. SWITCH, COPILOT AVIONICS DISPLAY/ALTERNATE..... FOR MS21347-731/	1	1
	MS21347-731	.. SWITCH, COPILOT AVIONICS DISPLAY/ALTERNATE..... FOR 112TW91-3/	1	1
-111	R 112TW91-3	.. SWITCH, ATTD GYRO/ALTERNATE FOR..... MS21347-731/	1	1
	R MS21347-731	.. SWITCH, ATTD GYRO/ALTERNATE FOR..... 112TW91-3/	1	1
-112	122-382085-1	.. SWITCH LIGHT ASSY, GND COMM PUSH ON/OFF.....	1	1
-113	R 122-382085-3	.. SWITCH LIGHT ASSY, ATTD GYRO BATT PWR ON.....	1	1
-114	112TW91-3	.. SWITCH, AVIONIC ALTN BLWR/ALTERNATE FOR..... FOR MS21347-731/	1	1
	MS21347-731	.. SWITCH, AVIONIC ALTN BLWR/ALTERNATE..... FOR 112TW91-3/	1	1
-115	R 122-382009-7	.. DISPLAY, LCD/LEFT & RIGHT FUEL QTY/..... /ATTACHING PARTS/	2	1
-116	MS24693S4	.. SCREW..... ★	2	
-117	MS24523-23	.. SWITCH, LEFT & RIGHT STANDBY PUMP	2	1
-118	MB2011SW01BK	.. SWITCH, LEFT & RIGHT AFT TANK FUEL QTY	2	1
-119	122-322171-1	.. SWITCH ASSY, FUEL TRANSFER.....	1	1
-120	122-382100-7	.. DISPLAY, FUEL TEMP..... /ATTACHING PARTS/	1	1
-121	MS24693S4	.. SCREW..... ★	2	
-122	122-322205-1	.. PANEL, SWITCH.....	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

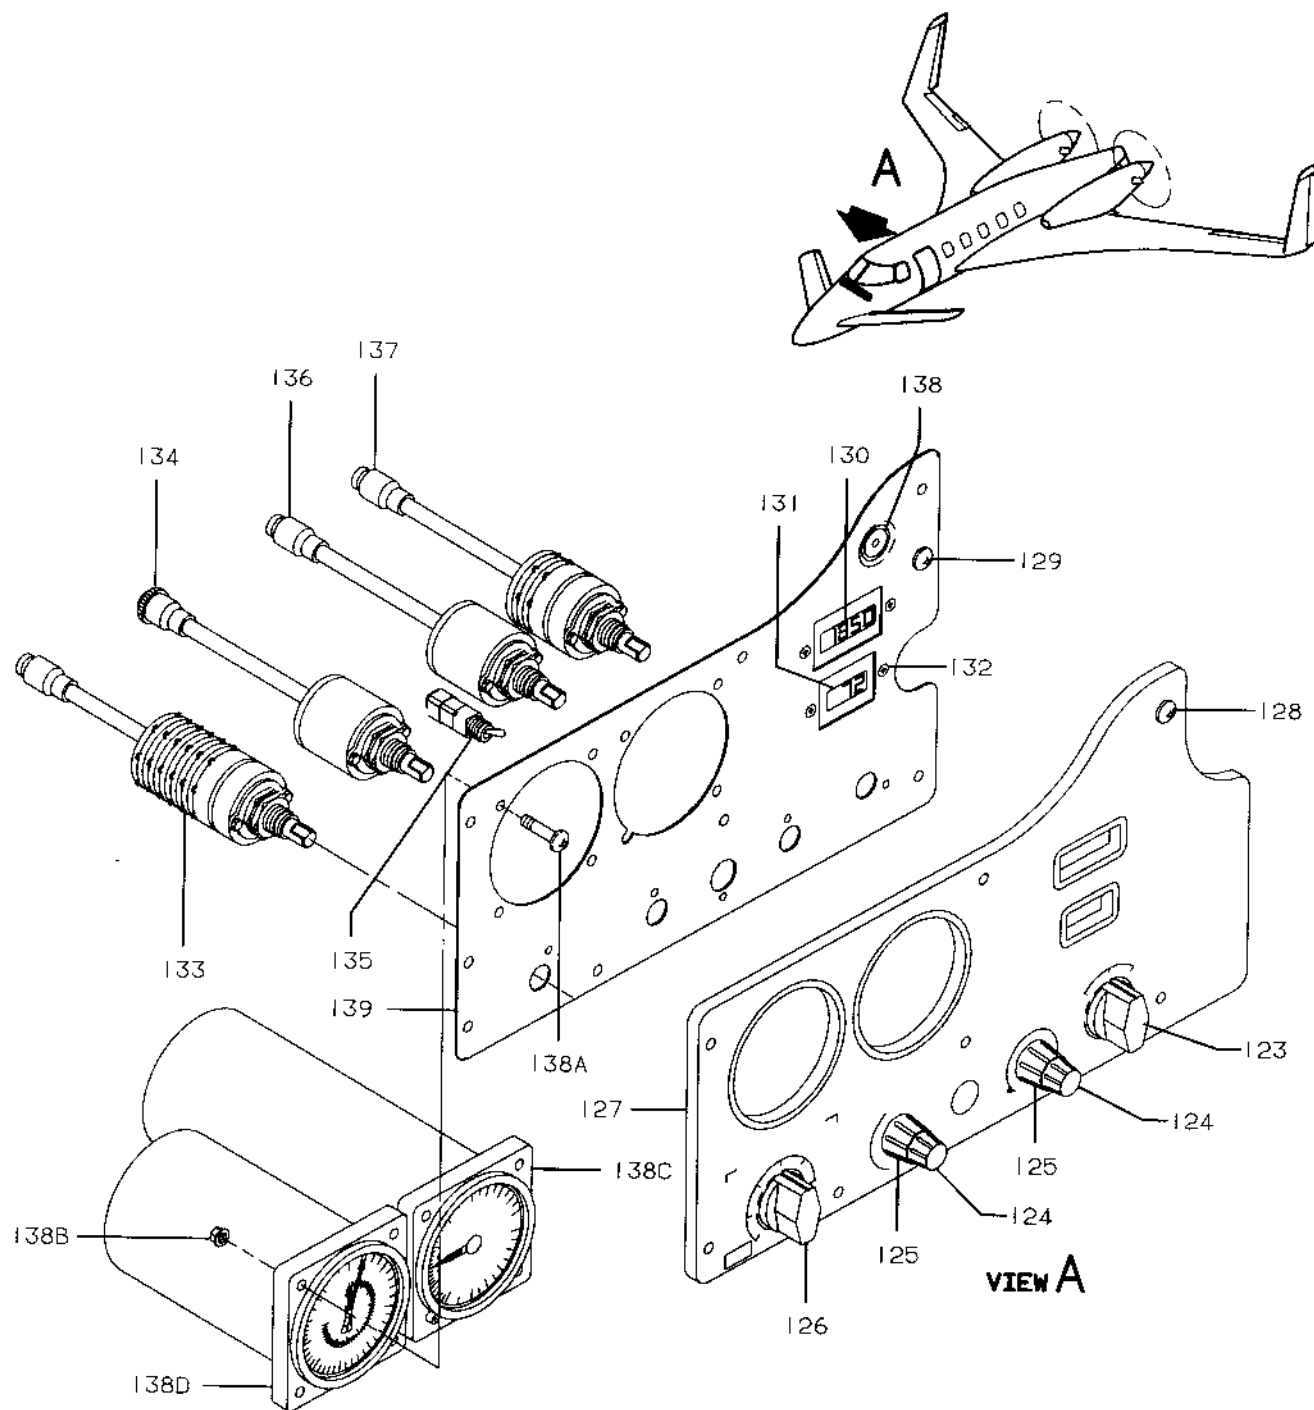


2000-395-06

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-71 -123	122-382036-11	. KNOB, TEMPERATURE MODE SELECTOR	1	1
		SWITCH CONTROL		
-124	122-382036-17	. KNOB, AUTO TEMP & BLWR SPEED SWITCH CONTROL	2	1
-125	122-382036-21	. KNOB, AUTO TEMP & BLWR SPEED SWITCH CONTROL	2	1
-126	122-382036-11	. KNOB, BLEED AIR VALVE SELECTOR SWITCH CONTROL	1	1
-127 R	122-382149-1	. PANEL ASSY, EL/RIGHT INBD/..... /ATTACHING PARTS/.....	1	1
-128	MS35214-27	. SCREW..... ---★---	7	
	122-322240-1	. PANEL ASSY, RIGHT INBD SWITCH..... /ATTACHING PARTS/.....	1	1
-129	MS35206-230	. SCREW..... ---★---	2	
-130	122-382134-1	. . DISPLAY, OXYGEN PRESS.....	1	1
-131	122-382133-1	. . DISPLAY, CABIN TEMPERATURE..... /ATTACHING PARTS/.....	1	1
-132	MS24693-4B	. . SCREW..... ---★---	2	
-133	122-322172-5	. . SWITCH ASSY, BLEED AIR VALVE SELECT	1	1
-134	122-322173-9	. . SWITCH ASSY, BLOWER SPEED	1	1
-135	112TW91-7	. . SWITCH, MANUAL TEMP CONTROL	1	1
-136	122-322173-1	. . SWITCH ASSY, AUTO TEMP CONTROL	1	1
-137	122-322174-1	. . SWITCH ASSY, TEMP MODE SELECTOR	1	1
-138 R	MS90335-6	. . RECEPTACLE, EL PANEL.....	1	1
-138A	MS35214-29	. . SCREW.....	7	1
-138B	MS33737-16	. . NUT	7	1
-138C	122-382147-3	. . INDICATOR, CABIN CLIMB	1	1
-138D	122-382146-7	. . INDICATOR, CABIN ALT & DIFF PRESS	1	1
-139	122-322241-1	. . PANEL, SWITCH	1	1
R	MS21071L06	. . . NUTPLATE	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

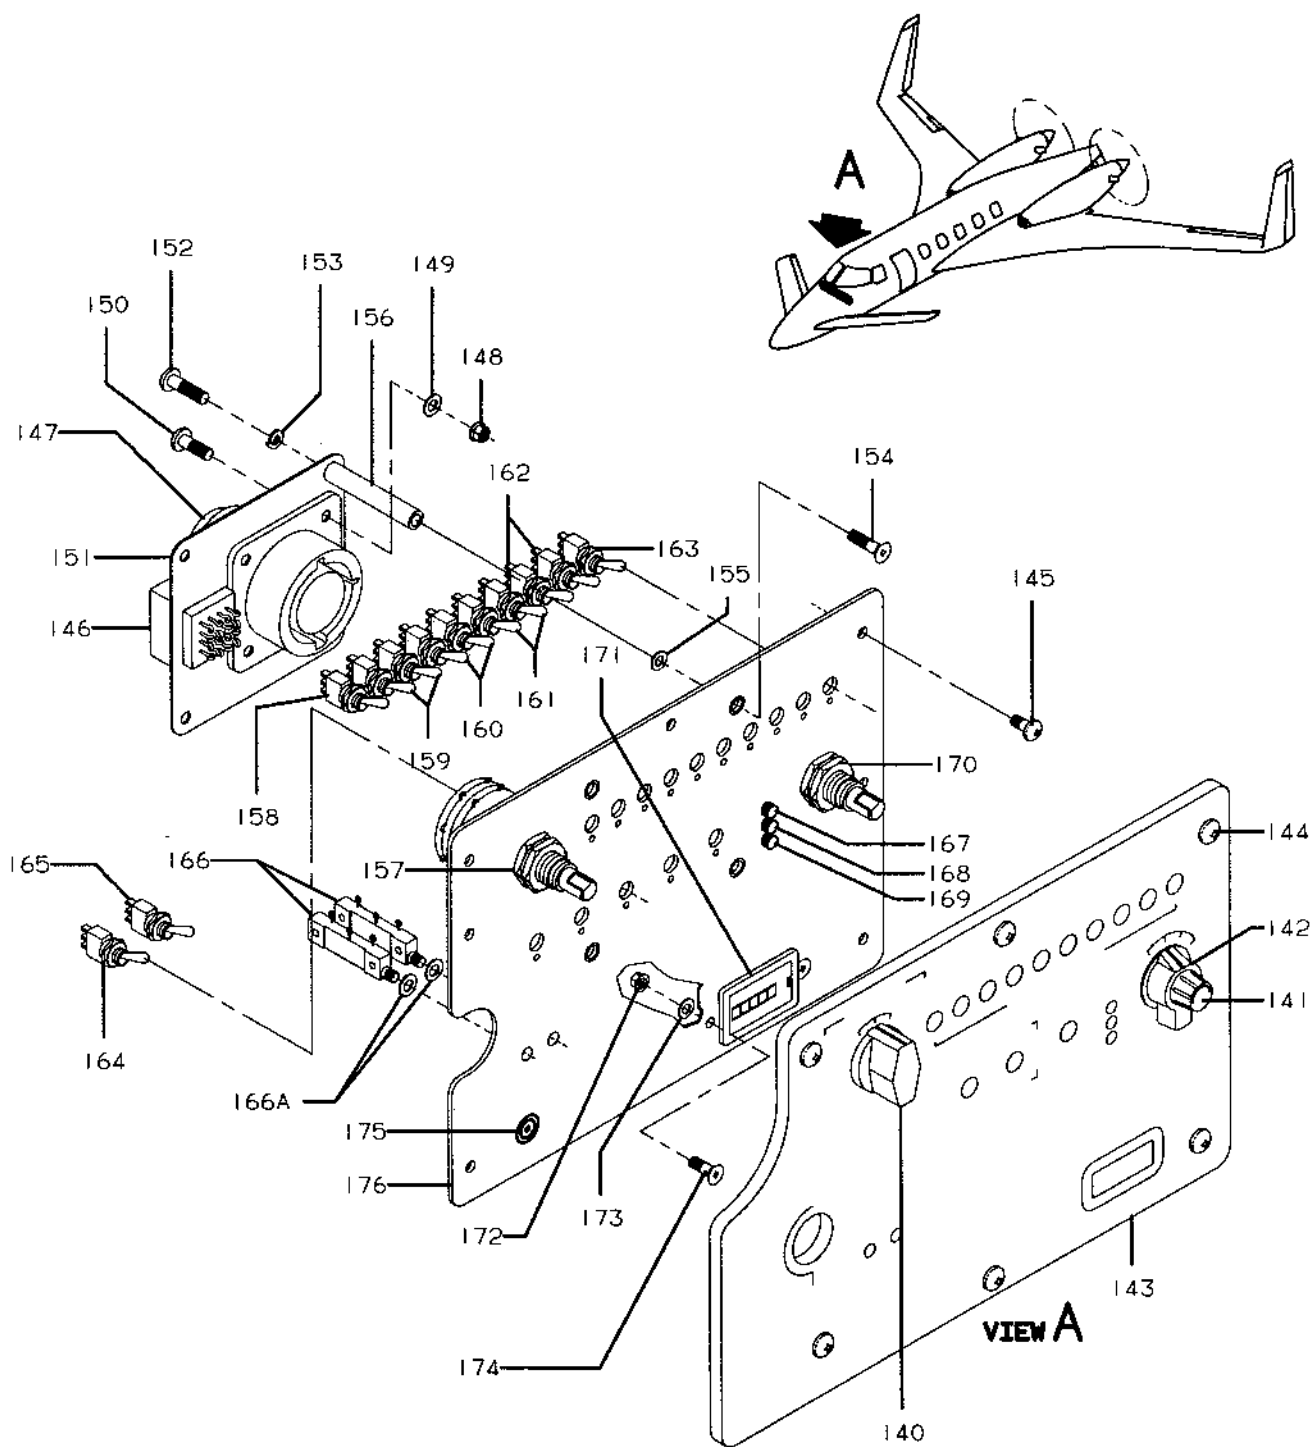


C95NC39A1086 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-71	-140	122-382036-9 . KNOB, MIC SELECT SWITCH.....	1	1
	-141	122-382036-15 . KNOB, MSTR PH VOL CONTROL SWITCH.....	1	1
	-142	122-382036-19 . KNOB, COMM SELECT SWITCH.....	1	1
	-143 R	122-382057-5 . PANEL ASSY, EL/RIGHT OUTBD/.....	1	1
		/ATTACHING PARTS/		
	-144	MS35214-27 . SCREW.....	6	
		★-----		
		122-322090-3 . PANEL ASSY, RIGHT OUTBD SWITCH.....	1	1
		/ATTACHING PARTS/		
	-145	MS35206-230 . SCREW.....	2	
		★-----		
	-146	M6106/28-023 . . RELAY.....	1	1
		451120-081 . . SOCKET, RELAY.....	1	1
	-147	MS3470L24-61P . . CONNECTOR.....	1	1
		/ATTACHING PARTS/		
	-148	MS21042L04 . . NUT.....	4	
	-149	AN960-4L . . WASHER.....	4	
	-150	MS35206-215 . . SCREW.....	4	
		★-----		
	-151	122-322039-9 . . PLATE, CONNECTOR.....	1	1
		/ATTACHING PARTS/		
	-152	MS35209-206 . . SCREW.....	4	
	-153	MS35338-41 . . WASHER, LOCK.....	4	
	-154	MS24693S26 . . SCREW.....	4	
	-155	AN960-6L . . WASHER.....	4	
	-156	1713-632A0 . . SPACER.....	4	
		★-----		
	-157	122-382076-1 . . SWITCH ASSY, MIC SELECT ROTARY.....	1	1
	-158	MST105D . . SWITCH, AUTO COMM.....	1	1
	-159	MST105D . . SWITCH, COMM 1 & 2.....	2	1
	-160	MST105D . . SWITCH, NAV 1 & 2.....	2	1
	-161	MST105D . . SWITCH, MKR BCN 1 & 2.....	2	1
	-162	MST105D . . SWITCH, DME 1 & 2.....	2	1
	-163	MST105D . . SWITCH, ADF.....	1	1
	-164	MST105D . . SWITCH, AUDIO SPKR.....	1	1
	-165	MST105E . . SWITCH, VOICE.....	1	1
	-166	3059J1-103M . . TRIMPOT, LH & RH STALL WARN ELEV POSITION.....	2	1
	-166A R	AN960-10L . . WASHER.....	2	1
	-167	3059J1-103M . . TRIMPOT, INTPH SIDETONE.....	1	1
	-168	3059J1-103M . . TRIMPOT, INTPH VOL.....	1	1
	-169	3059J1-103M . . TRIMPOT, INTPH SQUELCH.....	1	1
	-170	122-382076-13 . . SWITCH ASSY, COMM SELECT & MSTR PH VOL.....	1	1
	-171	122-382089-1 . . METER, FLIGHT HOUR.....	1	1
		/ATTACHING PARTS/		
	-172	MS21042L04 . . NUT.....	2	
	-173	AN960-4L . . WASHER.....	2	
	-174	MS24693-4B . . SCREW.....	2	
		★-----		
	-175 R	MS90335-6 . . RECEPTACLE, EL PANEL.....	1	1
	-176	122-322053-7 . . PANEL, SWITCH.....	1	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

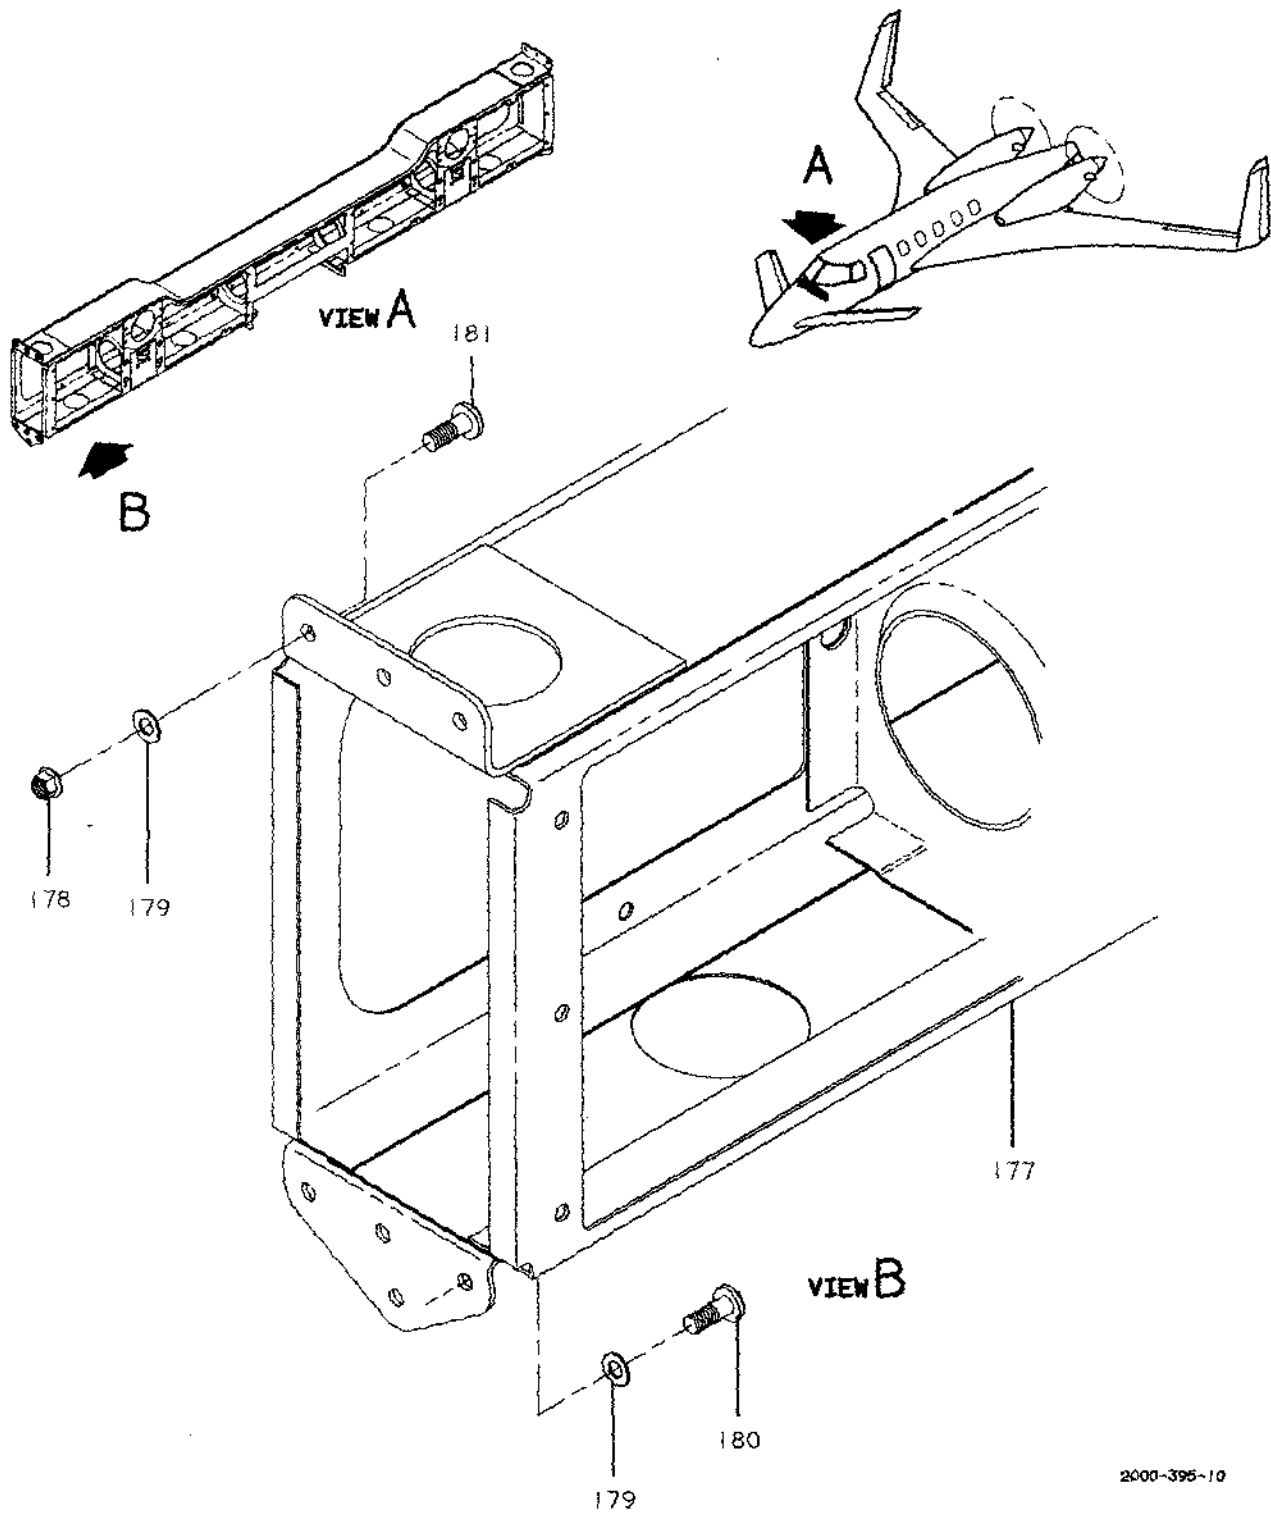

2000-395-10

FIGURE 10-71. INSTRUMENT SUBPANEL
/SHEET 8 OF 8 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-71 -177	122-322020-3	. STRUCTURE ASSY, SUBPANEL/SEE CHAPTER 53/	1	1
		/ATTACHING PARTS/		
-178 R	MS21045L3	. NUT	6	
-179	AN960-10L	. WASHER	12	
-180	MS27039-1-07	. SCREW	6	
-181	MS27039-1-12	. SCREW	6	
		-----★-----		

CODES OF EFFECTIVITY

1	NC-29 AND AFTER	2	NC-44 AND AFTER
3	NC-29 THRU NC-53	4	NC-54 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-10-80
REVERSIONARY PANELS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

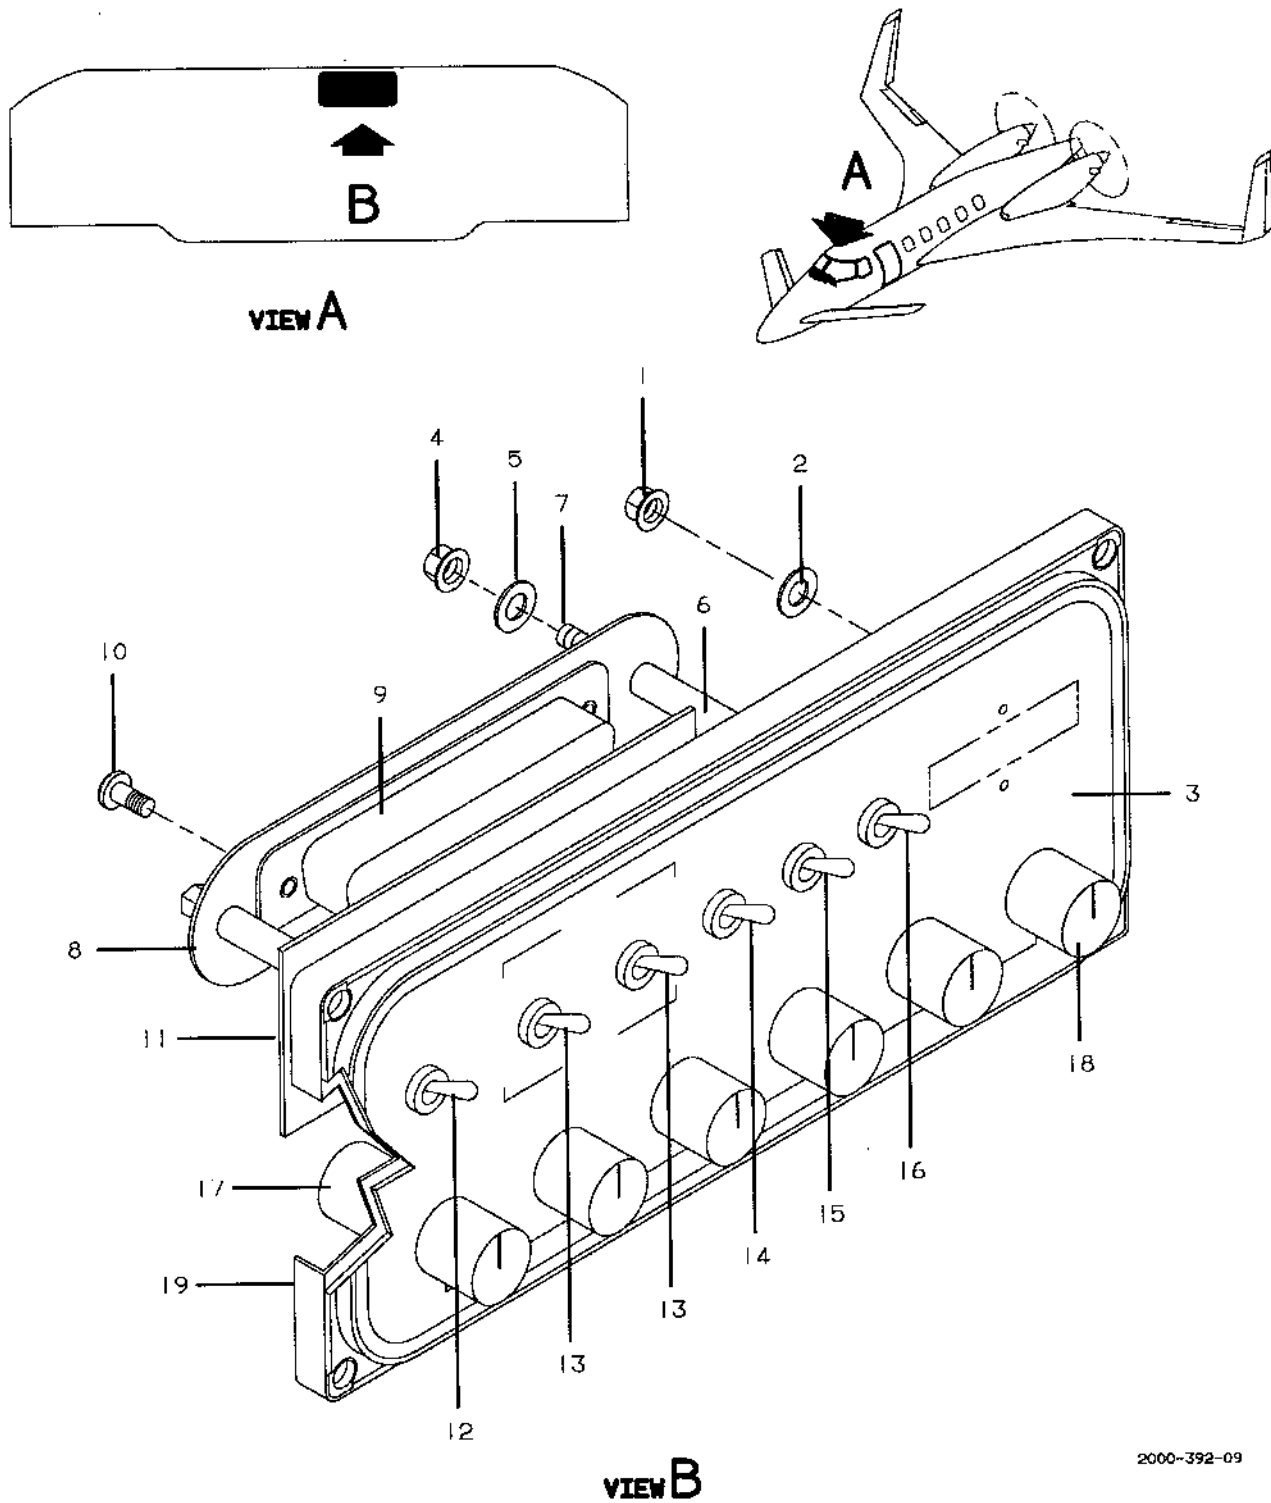


FIGURE 10-80. REVERSIONARY PANELS
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-80	R 122-342023-9	PANEL ASSY, ENGINE REVERSIONARY AND VOLUME	1	1
	R 122-342023-13	PANEL ASSY, ENGINE REVERSIONARY AND VOLUME	1	2
	R 132002-6-7BN	SCREW	4	1
	R 132002-6-7BK	SCREW	4	2
		★-----		
- 1	MS21042L06	.. NUT	2	
- 2	AN960-6L	.. WASHER	2	
- 3	R 122-382092-5	.. PANEL ASSY, EL	1	
	122-342023-11	.. SWITCH ASSY	1	1
	122-342023-15	.. SWITCH ASSY	1	2
- 4	MS21042L06	.. NUT	2	
- 5	AN960-6L	.. WASHER	2	
- 6	NAS43DD1-141	.. SPACER	2	
- 7	MS24693S42	.. SCREW	2	
- 8	122-322039-5	.. PLATE	1	
- 9	RD37M1100V30	.. CONNECTOR/ALTERNATE FOR RD37M1100V30/	1	
	RD37M1100V30	.. CONNECTOR/ALTERNATE FOR RD37M1100V30/	1	
		.. ATTACHING PARTS/		
- 10	MS35214-12	.. SCREW	2	
		★-----		
- 11	122-342085-11	.. PRINTED CIRCUIT BOARD	1	
	RCD125-1 3K-J	.. RESISTOR, WIREWOUND POWER	4	
	R RLR20C3901GS	.. RESISTOR, POWER	1	
- 12	M2122TYP516	.. SWITCH ASSY, EICAS/ALTERNATE FOR	1	
		M2122TEW03-561/		
	M2122TEW03-516	.. SWITCH ASSY, EICAS/ALTERNATE FOR	1	
		M2122TEW03-516/		
- 13	R M2123TYYP	.. SWITCH ASSY, RTU ENG DATA 1 & 2/ALTERNATE	2	
		FOR M2123TEW03/		
	R M2123TEW03	.. SWITCH ASSY, RTU ENG DATA 1 & 2/ALTERNATE	2	
		FOR M2123TYYP/		
- 14	M2122TMP516	.. SWITCH ASSY, RAD RMT/ALTERNATE FOR	1	
		M2122TFW03-516/		
	M2122TFW03-516	.. SWITCH ASSY, RAD RMT/ALTERNATE FOR	1	
		M2122TMP516/		
- 15	M2122TYP516	.. SWITCH ASSY, MKR BCN/ALTERNATE FOR	1	
		M2122TEW03-516/		
	M2122TEW03-516	.. SWITCH ASSY, MKR BCN/ALTERNATE FOR	1	
		M2122TYP516/		
- 16	M2022PSW01	.. SWITCH ASSY, ATC/ALTERNATE FOR	1	
		M2022PS1W01/		
	M2022PS1W01	.. SWITCH ASSY, ATC/ALTERNATE FOR	1	
		M2022PSW01/		
- 17	GA2G048F501UA	.. POTENTIOMETER	6	
- 18	122-382036-3	.. KNOB	6	
- 19	R 122-342070-3	.. BEZEL/BROWN/	1	1
	R 122-342070-5	.. BEZEL/BLACK/	1	2

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

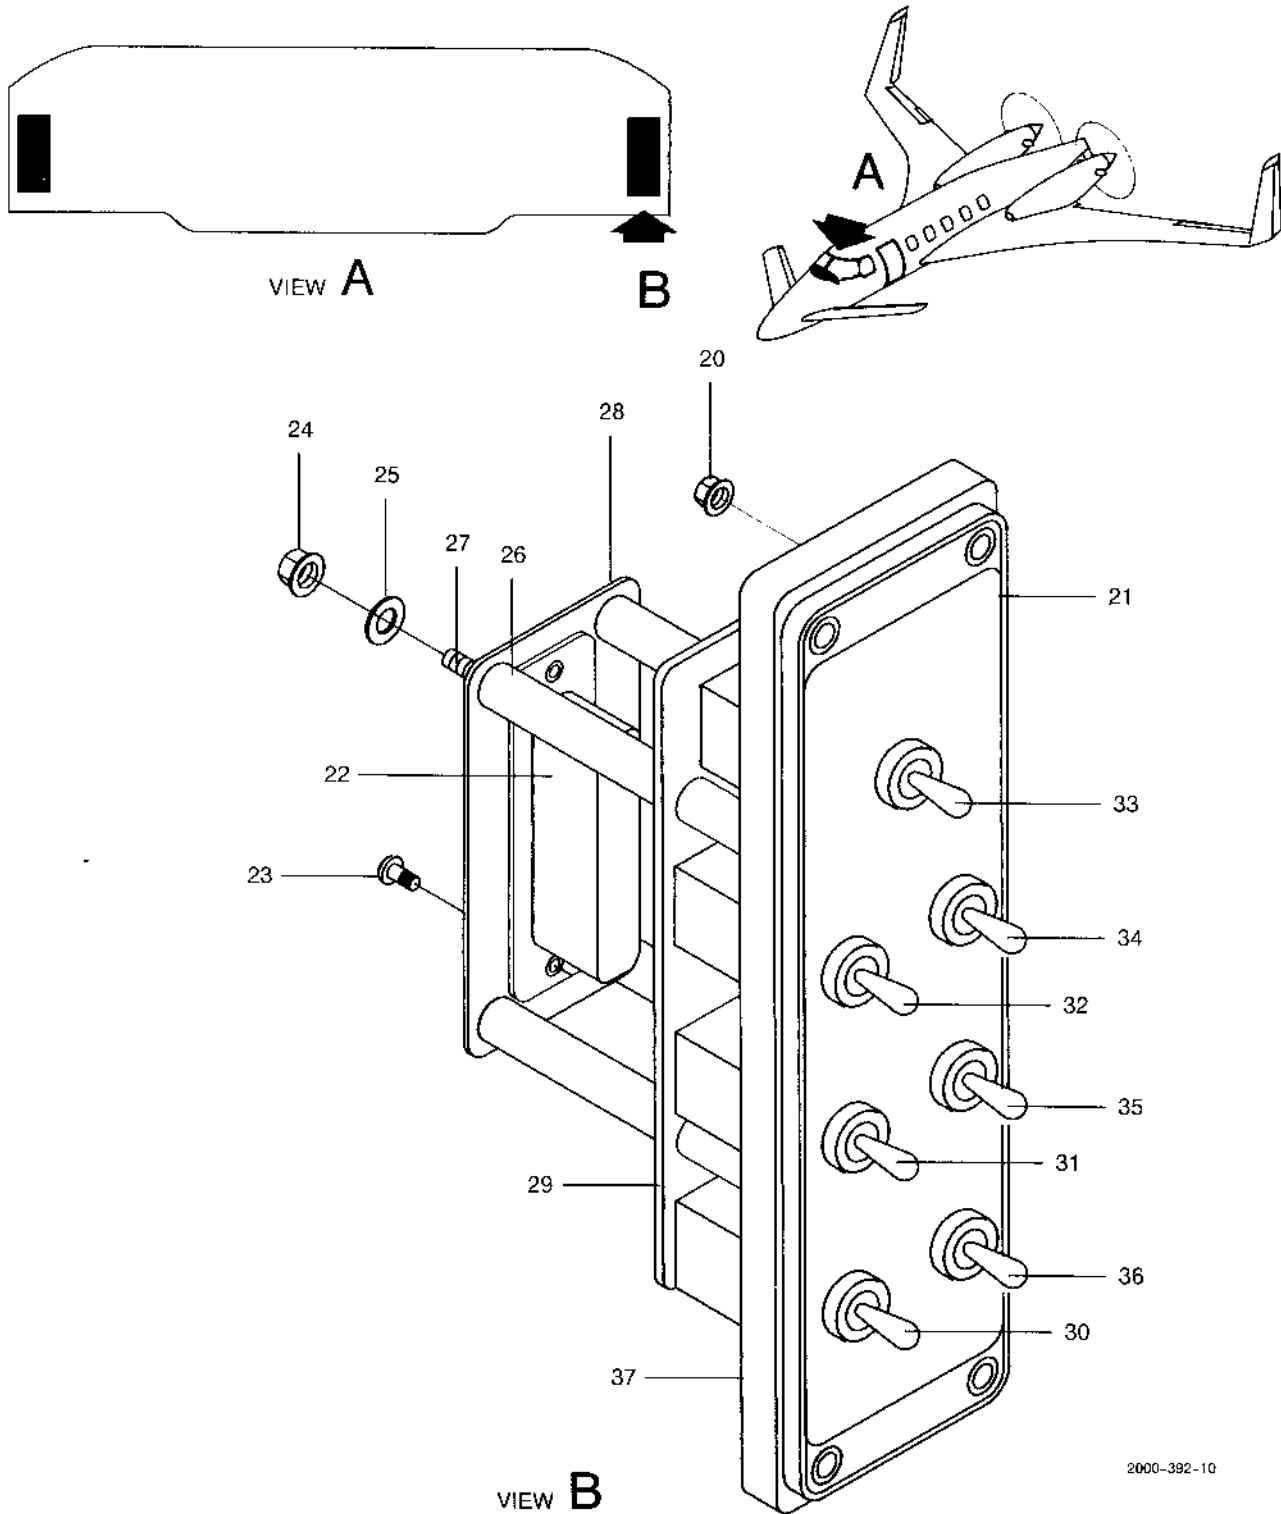


FIGURE 10-80. REVERSIONARY PANELS
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-80	R 122-342021-17	PANEL ASSY, REVERSIONARY/BROWN/	2	1
	R 122-342021-21	PANEL ASSY, REVERSIONARY/BLACK/	2	2
		/ATTACHING PARTS/		
	R 132002-6-7BN	SCREW	4	1
	R 132002-6-7BK	SCREW	4	2
		---★---		
-20	MS21042L06	.. NUT	2	
	122-342021-19	.. SWITCH ASSY	1	1
	122-342021-23	.. SWITCH ASSY	1	2
-21	R 122-382091-11	.. PANEL ASSY, EL	1	
-22	R RD25M1100V30	.. CONNECTOR/ALTERNATE FOR RD25M1100V30/	1	
	R RD25M1100V30	.. CONNECTOR/ALTERNATE FOR RD25M1100V30/	1	
		/ATTACHING PARTS/		
-23	MS35214-12	.. SCREW	2	
		---★---		
-24	MS21042L06	.. NUT	4	
-25	AN960-6L	.. WASHER	4	
-26	NAS43DD1-141	.. SPACER	4	
-27	MS24693S42	.. SCREW	4	
	R NAS1169D6E	.. WASHER	AR	
-28	122-322039-3	.. PLATE	1	
-29	122-342024-29	.. PRINTED CIRCUIT BOARD	1	
	RCD125-1 3K-J	.. RESISTOR, WIREWOUND POWER	3	
	ROR20G392JS	.. RESISTOR, POWER	2	
-30	M2015LLW01	.. SWITCH ASSY, AHRS REINIT	1	
		/ALTERNATE FOR M2015LL1W01/		
	M2015LL1W01	.. SWITCH ASSY, AHRS REINIT	1	
		/ALTERNATE FOR M2015LLW01/		
-31	M2122TYP03-516	.. SWITCH ASSY, CDU X-SIDE	1	
		/ALTERNATE FOR M2122TEW03-516/		
	M2122TEW03-516	.. SWITCH ASSY, RAD RMT	1	
		/ALTERNATE FOR M2122TYP03-516/		
-32	R M2122TYP516	.. SWITCH ASSY, AHRS X-SIDE	1	
		/ALTERNATE FOR M2122TEW03-516/		
	R M2122TEW03-516	.. SWITCH ASSY, AHRS X-SIDE	1	
		/ALTERNATE FOR M2122TYP516/		
-33	R M2123TYYP	.. SWITCH ASSY, CMPST	1	
		/ALTERNATE FOR M2123TEW03/		
	R M2123TEW03	.. SWITCH ASSY, CMPST	1	
		/ALTERNATE FOR M2123TYYP/		
-34	M2015PSW01	.. SWITCH ASSY, FAST SLAVE	1	
		/ALTERNATE FOR M2015PS1W01/		
	M2015PS1W01	.. SWITCH ASSY, FAST SLAVE	1	
		/ALTERNATE FOR M2015PSW01/		
-35	M2112TM-P	.. SWITCH ASSY, BARO	1	
		/ALTERNATE FOR M2112TFW03/		
	M2112TFW03	.. SWITCH ASSY, BARO	1	
		/ALTERNATE FOR M2112TM-P/		
-36	M2112TM-P	.. SWITCH ASSY, FL 180 DISABLE	1	
		/ALTERNATE FOR M2112TFW03/		
	M2112TFW03	.. SWITCH ASSY, FL 180 DISABLE	1	
		/ALTERNATE FOR M2112TM-P/		
-37	R 122-342069-1	.. BEZEL/BROWN/	1	1
	R 122-342069-3	.. BEZEL/BLACK/	1	2


CODES OF EFFECTIVITY

1 NC-4 THRU NC-27 2 NC-28 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-20-00
COCKPIT SIDEWALL ELECTRICAL EQUIPMENT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

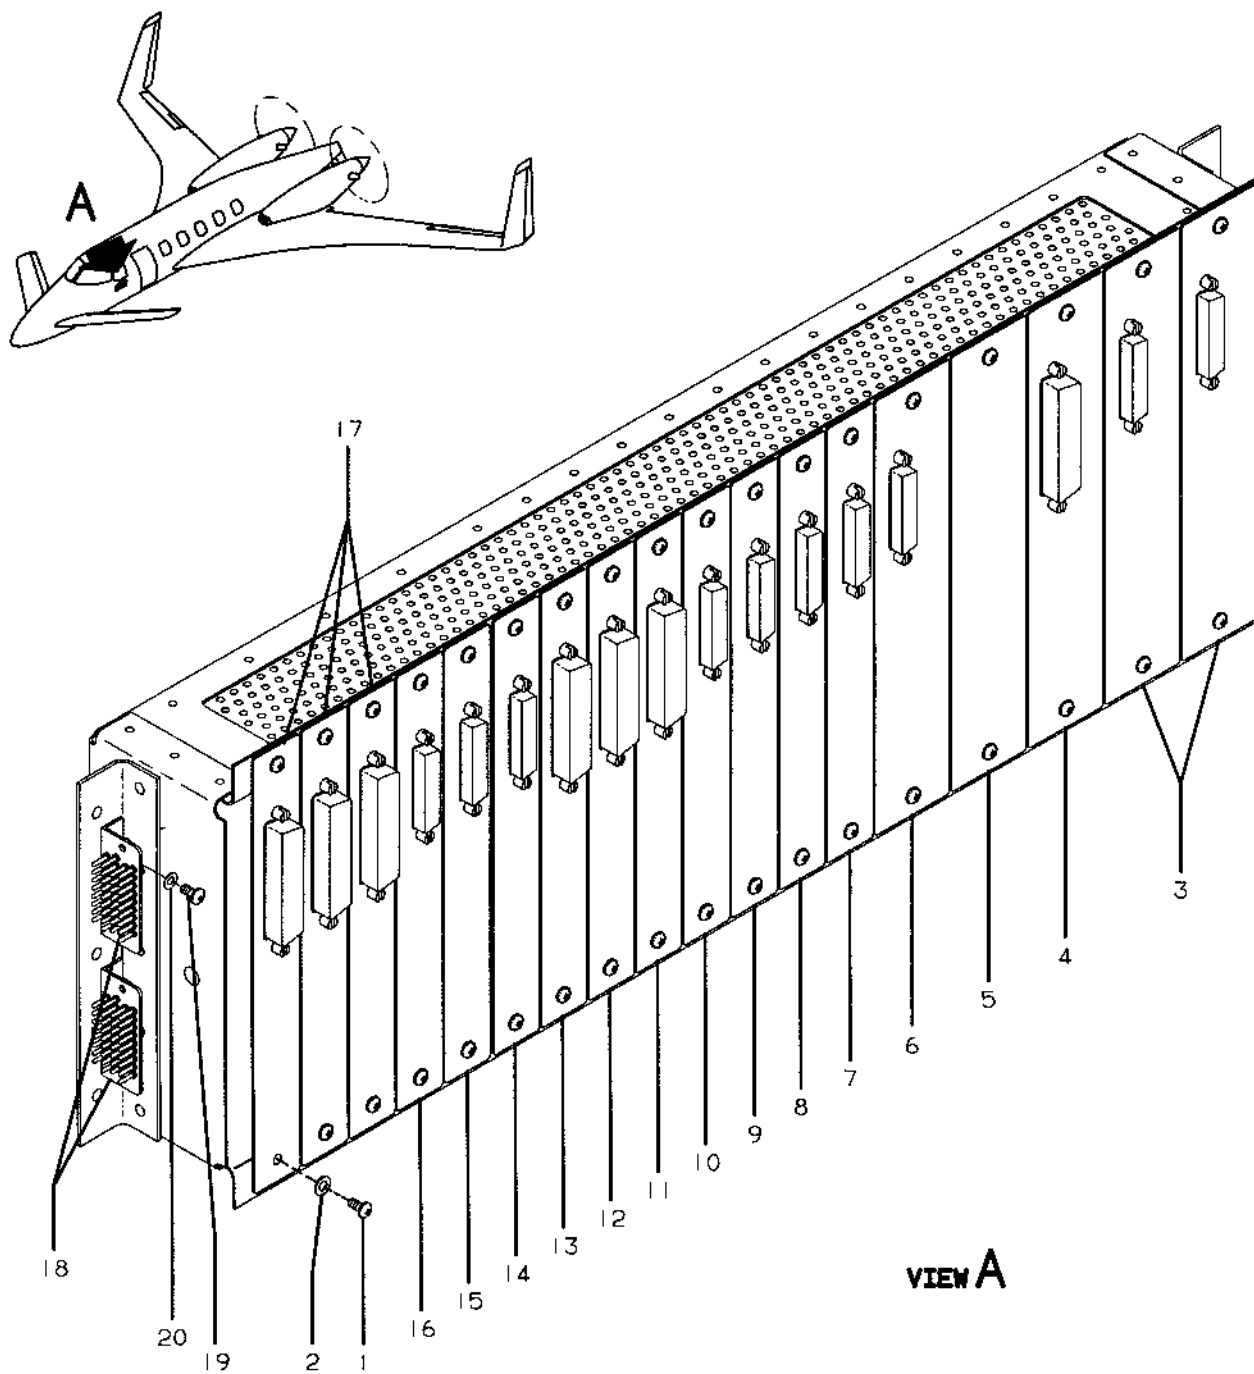


C95NC39A1183 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-364155-3	ELECTRICAL EQUIPMENT INSTL, LH SIDEWALL	NP	
- 1	MS35206-230	. SCREW	36	
- 2	AN960-6L	. WASHER	36	
- 3	122-364166-17	. PRINTED CIRCUIT BOARD ASSY, FLAP & FWD WING..... MONITOR & MONITOR TEST	2	
- 4	122-364166-9	. PRINTED CIRCUIT BOARD ASSY, FLAP & FWD WING..... CONTROLLER & ANNUNCIATOR/ORDER 122-364166-19 FOR SPARES/	NP	3
	122-364166-15	. PRINTED CIRCUIT BOARD ASSY, FLAP & FWD WING..... CONTROLLER & ANNUNCIATOR/ORDER 122-364166-19 FOR SPARES/	NP	4
	122-364166-19	. PRINTED CIRCUIT BOARD ASSY, FLAP & FWD WING..... CONTROLLER & ANNUNCIATOR	1	9
- 5	122-364154-85	. PLATE/SPARE/.....	1	
- 6	122-364173-17	. PRINTED CIRCUIT BOARD ASSY, POWER DISTRI- BUTION CONTROL/ORDER 122-364173-21 FOR SPARES/	NP	10
	122-364173-21	. PRINTED CIRCUIT BOARD ASSY, POWER DISTRI- BUTION CONTROL	1	11
- 7	122-364030-5	. PRINTED CIRCUIT BOARD ASSY, WINDSHIELD DE- ICE & EXTERNAL POWER	1	
- 8	122-364028-11	. PRINTED CIRCUIT BOARD ASSY, LANDING GEAR CONTROL/ORDER 122-364028-27 FOR SPARES/	NP	7
	122-364028-27	. PRINTED CIRCUIT BOARD ASSY, LANDING GEAR CONTROL	1	8
- 9	122-364060-9	. PRINTED CIRCUIT BOARD ASSY, BRAKE DEICE TIMER AND TIME DELAY.	1	
- 10	122-364028-21	. PRINTED CIRCUIT BOARD ASSY, LANDING GEAR INDICATOR	1	
- 11	122-364180-1	. PRINTED CIRCUIT BOARD ASSY, ANNUNCIATOR CONTROL	1	
- 12	122-364038-5	. PRINTED CIRCUIT BOARD ASSY, ANNUNCIATOR TEST & FIRE EXTINGUISHER TEST	1	
- 13	122-364139-5	. PRINTED CIRCUIT BOARD ASSY, ANNUNCIATOR FAULT DETECTOR	1	
- 14	122-364176-1	. PRINTED CIRCUIT BOARD ASSY, LIGHTING CONTROL	1	
- 15	122-364054-9	. PRINTED CIRCUIT BOARD ASSY, N1 SPEED & ICE..... VANE/ORDER 122-364054-13 FOR SPARES/	NP	1
	122-364054-13	. PRINTED CIRCUIT BOARD ASSY, N1 SPEED & ICE VANE	1	2
- 16	122-364182-5	. PRINTED CIRCUIT BOARD ASSY, BATTERY MONITOR..... /ORDER 122-364182-7 FOR SPARES/	NP	5
	122-364182-7	. PRINTED CIRCUIT BOARD ASSY, BATTERY MONITOR.....	1	6
- 17 R	122-364156-1	. PRINTED CIRCUIT BOARD ASSY, LOGIC RELAY	3	
- 18 R	204814-1	. CONNECTOR..... /ATTACHING PARTS/	2	
- 19 R	MS35206-246	. SCREW	2	
- 20 R	AN960-8L	. WASHER	2	

---★---

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

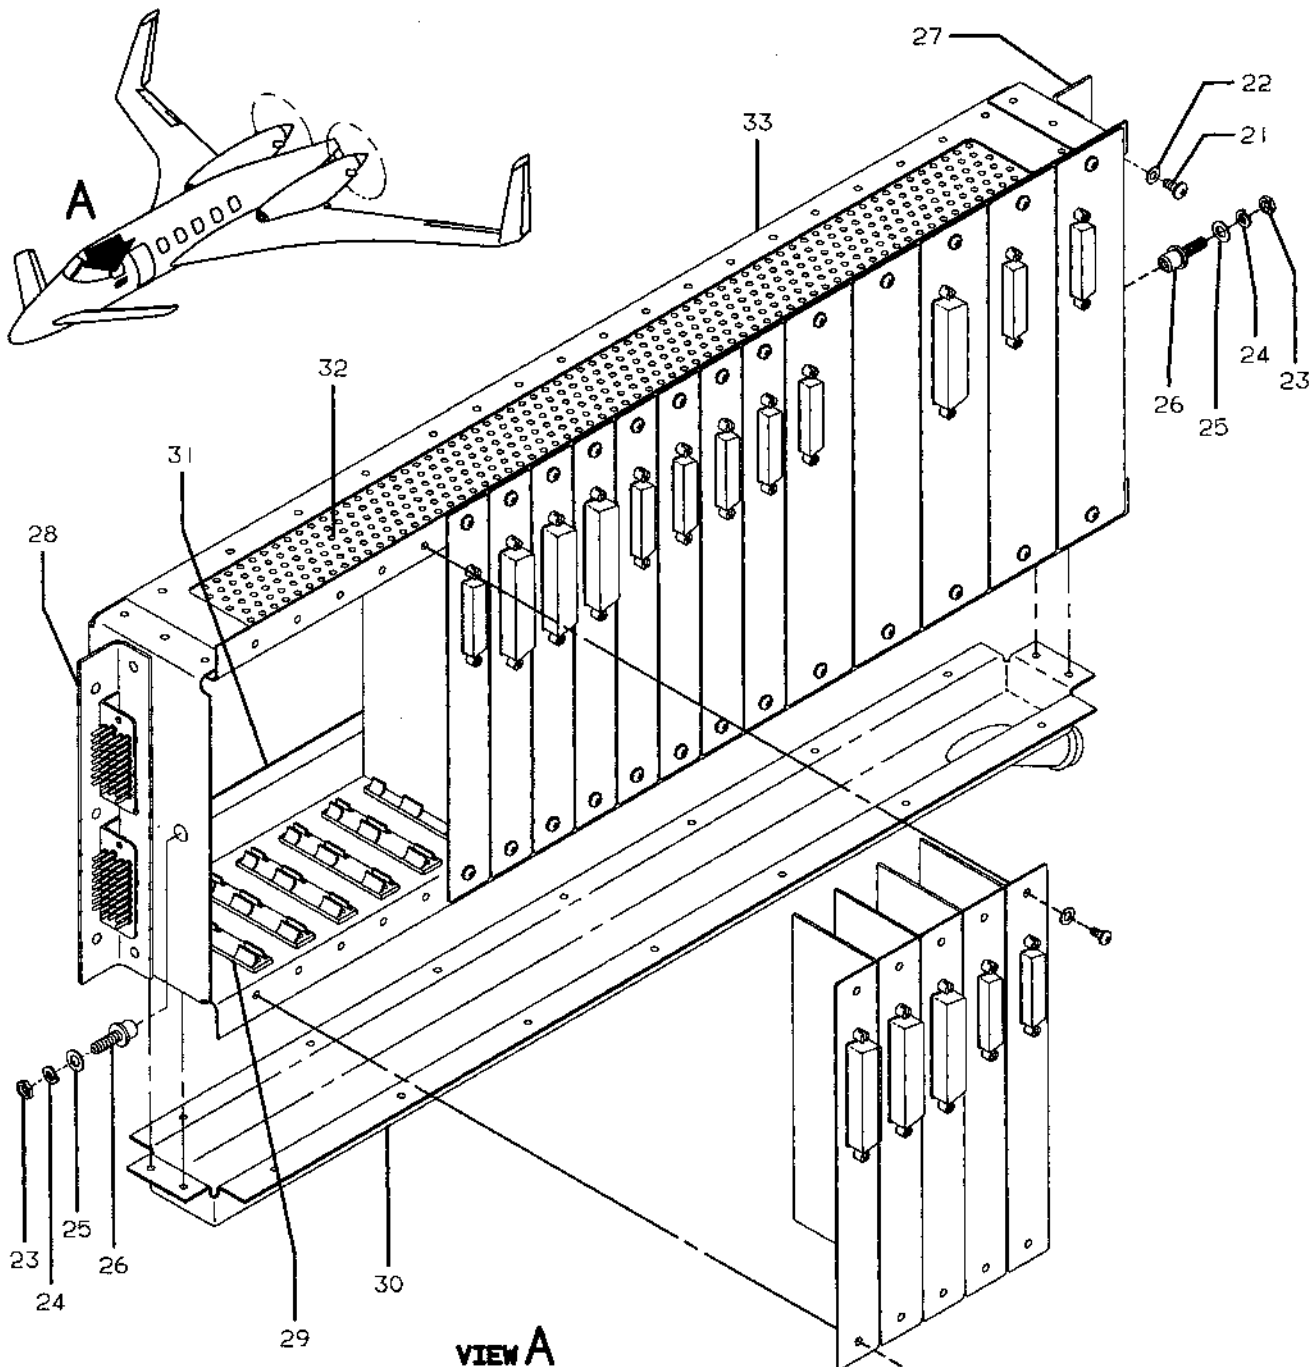

C95NC39A11B4 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-364184-1	. BOX ASSY, CIRCUIT CARD	1	
		/ATTACHING PARTS/		
- 21	R MS27039-1-10	. SCREW	5	
- 22	R AN960-10L	. WASHER	5	
		-----★-----		
- 23	R 130909N49	. . NUT	2	
- 24	R MS35338-43	. . WASHER, LOCK	2	
- 25	R AN960-10L	. . WASHER	2	
- 26	R 131270-3	. . STUD, BLIND GROUNDING	2	
- 27	R 122-364184-17	. . ANGLE	1	
- 28	R 122-364184-9	. . ANGLE	1	
- 29	R 2500-38-4	. . GUIDE, PRINTED CIRCUIT BOARD	36	
- 30	R 122-364184-7	. . PLENUM ASSY	1	
- 31	R 122-364184-13	. . RUBBER STRIP	2	
- 32	R 122-364184-5	. . SHEET, PERFORATED	1	
- 33	R 122-364184-3	. . BOX	1	
	MS21075L06	. . NUTPLATE	36	

ILLUSTRATED PARTS CATALOG




**REVISED
06/30/95**

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00 - 34	R 101-380012-7	. POWER SUPPLY, DIMMER CONTROL	1	
		/ATTACHING PARTS/		
- 35	R MS35207-285	. SCREW	2	
- 36	R AN960-10L	. WASHER	2	
		-----★-----		
	122-364148-3	. PANEL ASSY, LIGHT DIMMING TRANSISTOR	1	
		/ATTACHING PARTS/		
- 37	R MS35207-264	. SCREW	2	
- 38	R AN960-10L	. WASHER	2	
		-----★-----		
- 39	R AN530-6R8	.. SCREW	12	
- 40	R AN960-6L	.. WASHER	12	
- 41	R MJ11014	.. TRANSISTOR, DIMMING	6	
- 42	R LA394B7CB	.. HEAT SINK	6	
- 43	R 7403-09FR04	.. INSULATOR	6	
- 44	R MS51858-3	.. NUT	12	
- 45	R MS24693S25	.. SCREW	12	
- 46	R 11693	.. SOCKET, TRANSISTOR	6	
- 47	R 122-364149-5	.. PRINTED CIRCUIT BOARD ASSY, LIGHT DIMMING	1	
		/ATTACHING PARTS/		
- 48	R MS21042L06	.. NUT	2	
- 49	R AN960-6L	.. WASHER	2	
- 50	R NAS43DD1-44	.. SPACER	2	
- 51	R MS24693S32	.. SCREW	2	
		-----★-----		
	R 207443-1	.. CONNECTOR	1	
- 52	R 122-322136-9	.. SUPPORT ASSY	1	
	MS21047-3	... NUTPLATE	3	
	122-364151-3	... DECAL, REFERENCE DESIGNATOR	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

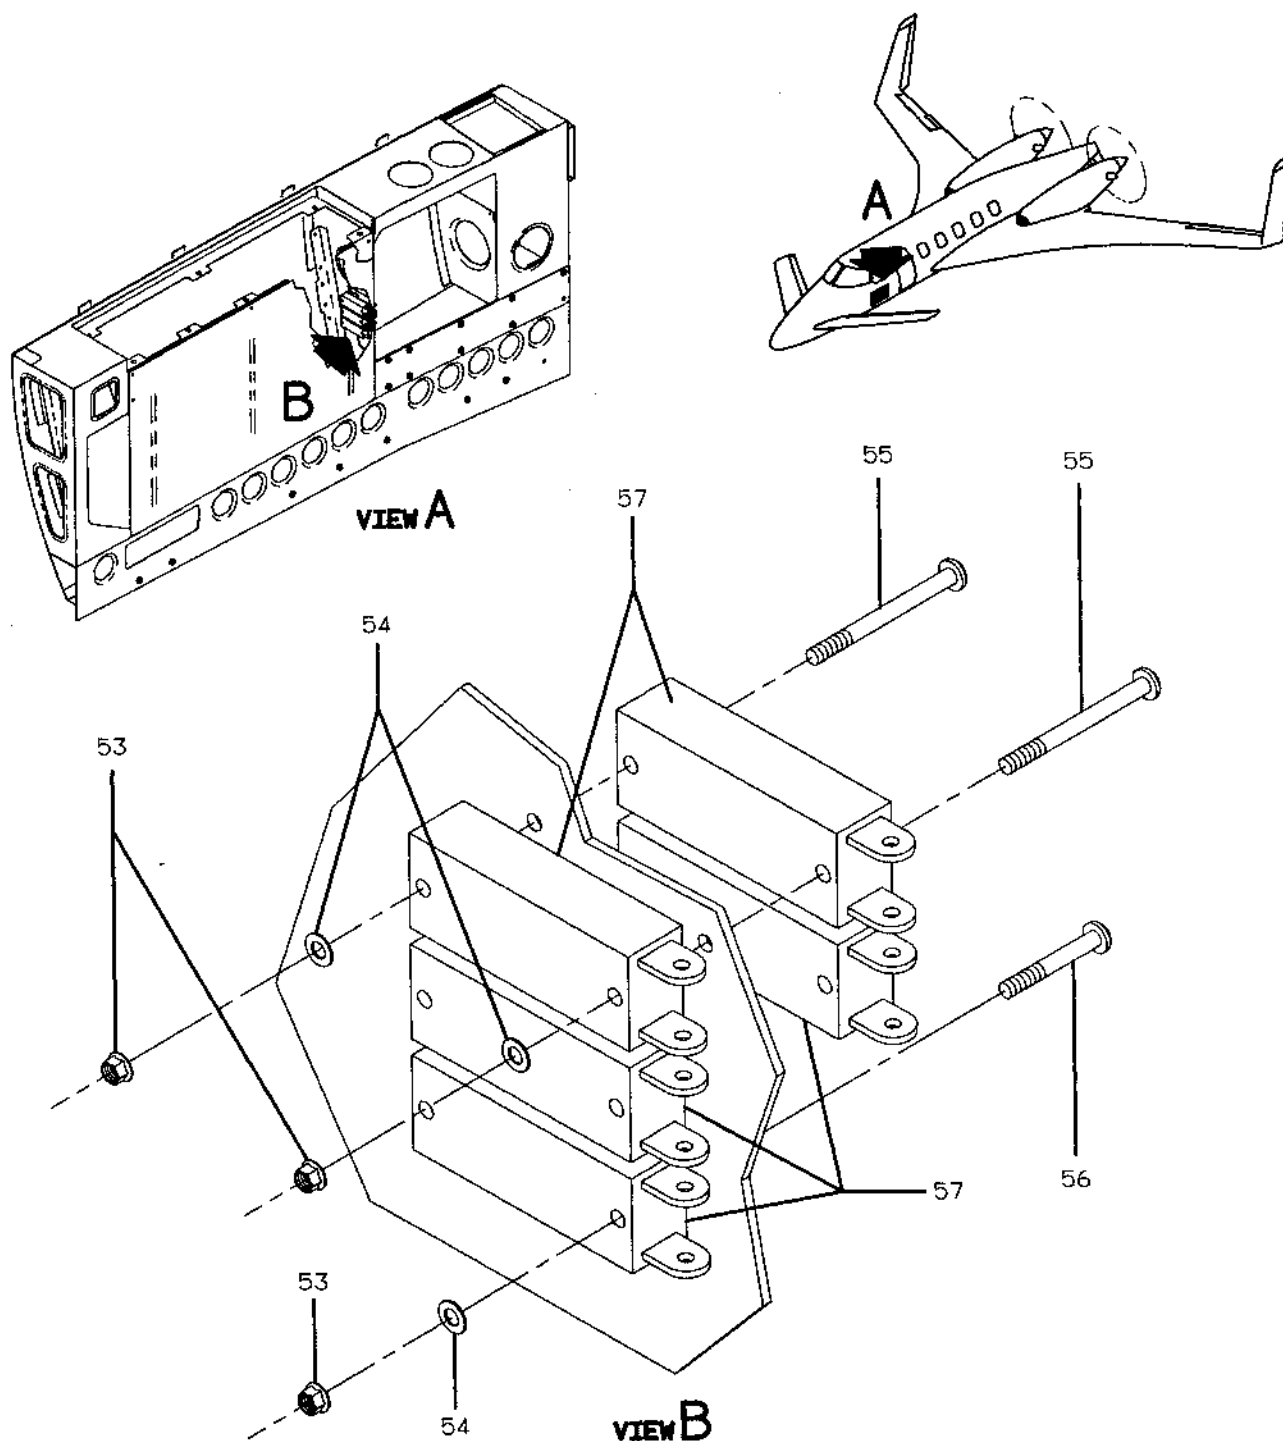

C95NC39A1245 C

FIGURE 20-00. COCKPIT SIDEWALL ELEC EQUIPMENT
/SHEET 4 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00 -53	R MS21042L04	. NUT	6	
-54	R AN960-4L	. WASHER	6	
-55	R MS35206-222	. SCREW	4	
-56	R MS35206-220	. SCREW	2	
-57	R 704-15K36	. TRANSORB	5	
	106242C1900100	. TUBING, HEAT SHRINK	AR	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-17	2	NC-18 AND AFTER
3	NC-4 THRU NC-13	4	NC-14 THRU NC-21
5	NC-4 THRU NC-19	6	NC-20 AND AFTER
7	NC-4 THRU NC-16	8	NC-17 AND AFTER
9	NC-22 AND AFTER	10	NC-4 THRU NC-15
11	NC-16 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-20-10
COCKPIT LOWER ELECTRICAL EQUIPMENT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

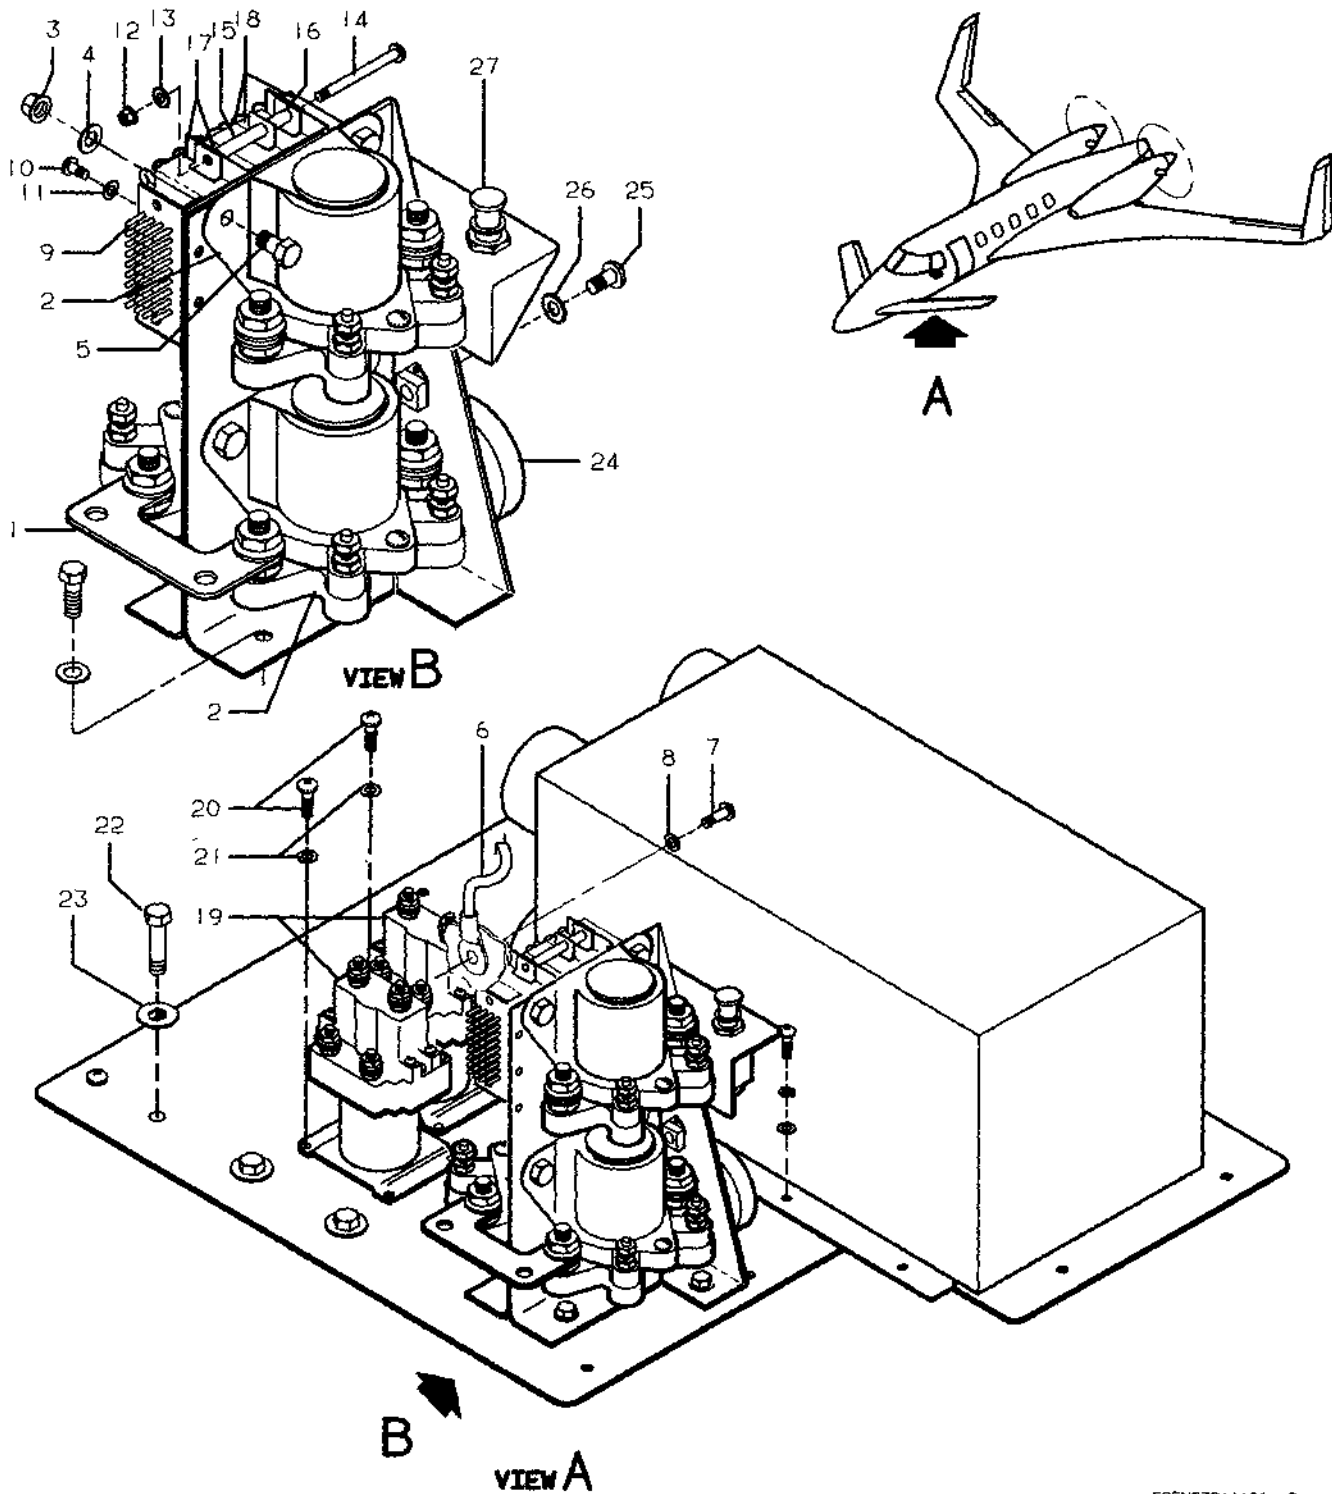


C95NC39A1186 C

FIGURE 20-10. COCKPIT LOWER ELECT EQUIPMENT
/SHEET 1 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10	122-364005-1	ELECTRICAL EQUIPMENT INSTL, FLIGHT COMPT LOWER	NP	
- 1	122-361014-63	. BUS BAR.....	1	
	100-361045-1	. SUPPRESSOR ASSY, RELAY.....	3	
- 2	6041H80A	. RELAY, WINDSHIELD DEICE.....	3	
		. /ATTACHING PARTS/		
- 3	130909N30	. NUT.....	2	
- 4	AN960-416	. WASHER.....	2	
- 5	130909B34	. BOLT.....	2	
		-----★-----		
	R MS25171-1S	. NIPPLE.....	4	
	R MS25171-2S	. NIPPLE.....	4	
- 6	MS25083-2BC10	. JUMPER, BONDING.....	2	
		. /ATTACHING PARTS/		
- 7	MS35206-245	. SCREW.....	2	
- 8	AN960-8L	. WASHER.....	2	
		-----★-----		
- 9	204814-1	. CONNECTOR.....	1	
		. /ATTACHING PARTS/		
- 10	MS35206-245	. SCREW.....	2	
- 11	AN960-8L	. WASHER.....	2	
		-----★-----		
	1N4007	. DIODE, RELAY.....	5	
- 12	MS21042L06	. NUT.....	2	
- 13	AN960-8L	. WASHER.....	2	
- 14	MS35206-238	. SCREW.....	2	
- 15	NAS43DD1-64	. SPACER.....	2	
- 16	NAS43DD1-32	. SPACER.....	2	
- 17	50-380048-1	. RELAY, LEFT & RIGHT PITOT HEAT.....	2	
- 18	FCA125-14	. RELAY, LEFT, RIGHT & NOSE LANDING LIGHT.....	3	
	100-361045-1	. SUPPRESSOR ASSY, RELAY.....	2	
- 19	SM150D5	. RELAY.....	2	
		. /ATTACHING PARTS/		
- 20	MS35207-263	. SCREW.....	4	
- 21	AN960-10L	. WASHER.....	4	
		-----★-----		
- 22	130909B35	. BOLT.....	3	
- 23	AN960D416	. WASHER.....	3	
- 24	101-384028-7	. SWITCH, BAROMETRIC PRESSURE.....	1	
		. /ATTACHING PARTS/		
- 25	MS35206-227	. SCREW.....	2	
- 26	AN960-6L	. WASHER.....	2	
		-----★-----		
- 27	131984-15	. CIRCUIT BREAKER, WINDSHIELD HEAT.....	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

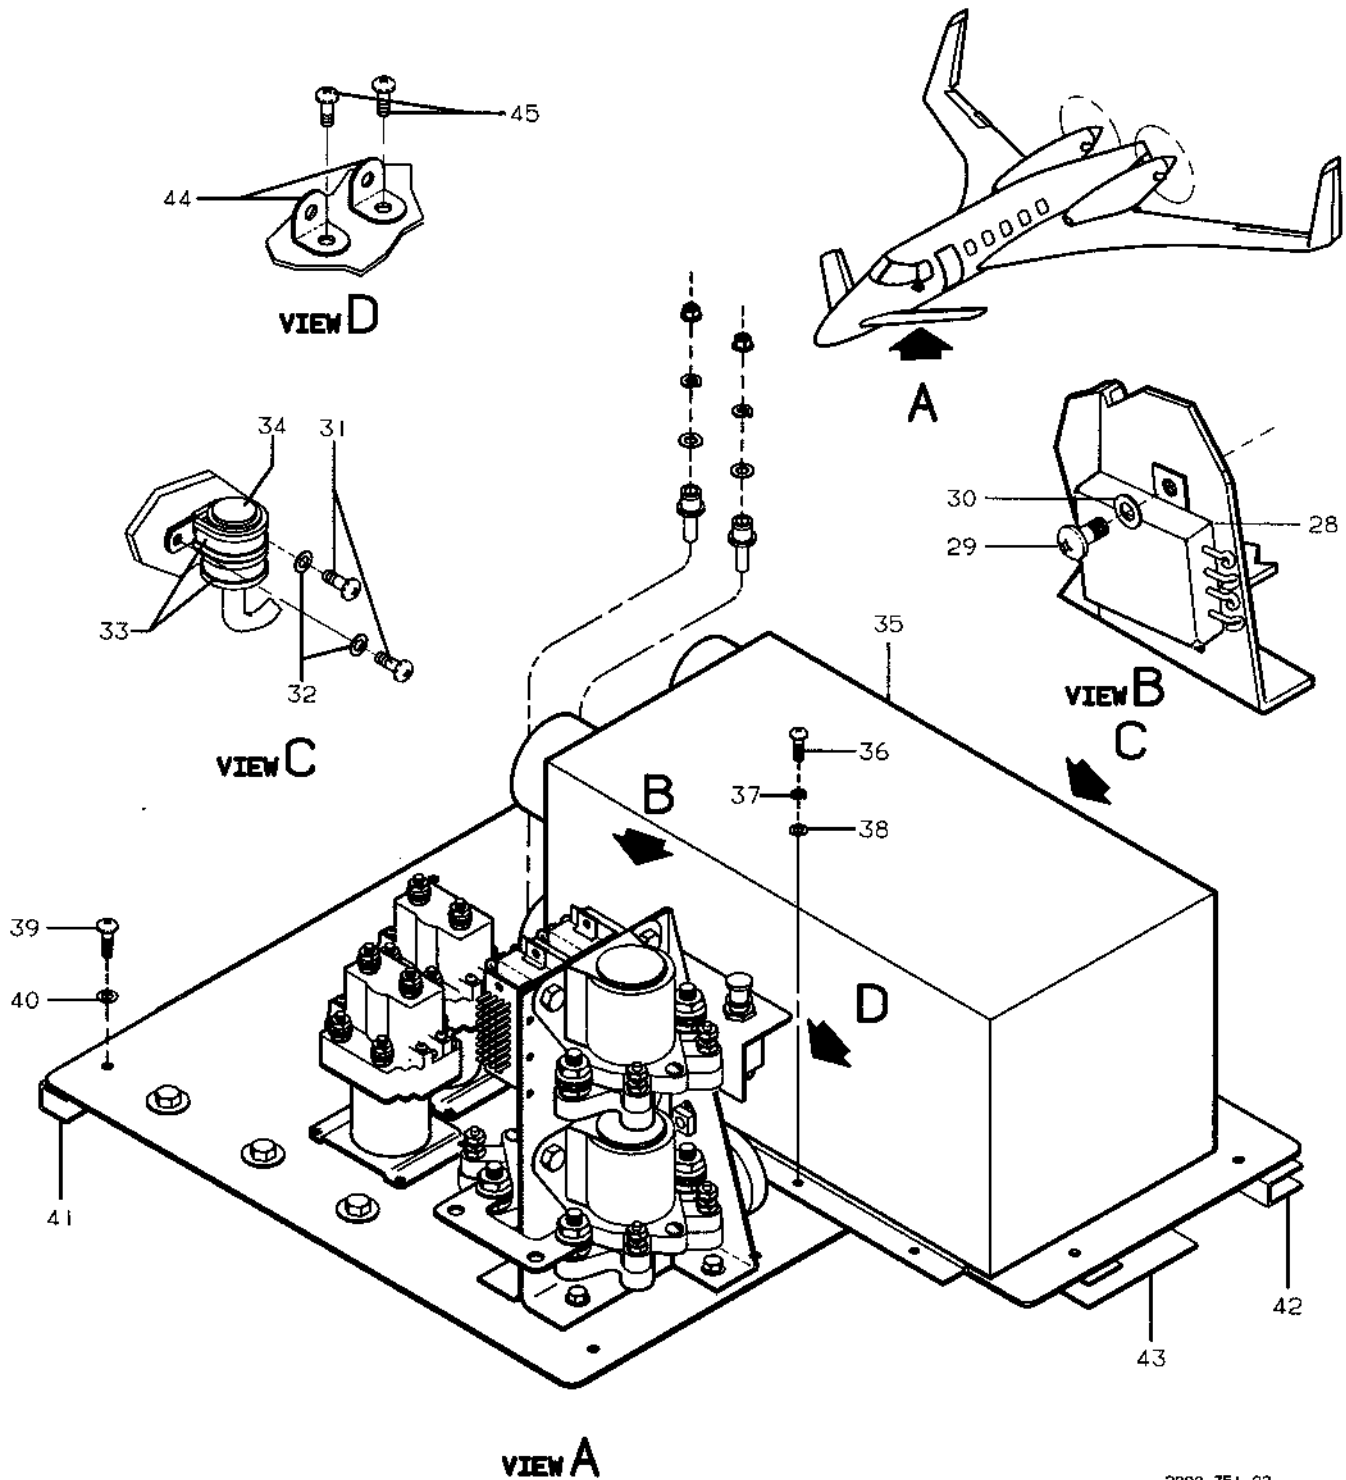


2000-351-22

FIGURE 20-10. COCKPIT LOWER ELECT EQUIPMENT
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10 -28	R FCA125-14	. RELAY, TAXI LIGHT.....	1	
		/ATTACHING PARTS/		
-29	MS35206-227	. SCREW.....	2	
-30	AN960-6L	. WASHER.....	2	
		★		
-31	MS35207-261	. SCREW.....	2	
-32	AN960-10L	. WASHER.....	2	
-33	R MS21919WCH8	. CLAMP.....	2	
-34	STL20	. G SWITCH.....	1	
-35	622-7414-002	. DATA ACQUISITION UNIT/DAU850/.....	1	
		/ATTACHING PARTS/		
-36	R NAS1096-1-7	. SCREW.....	7	
-37	R MS35338-41	. WASHER, LOCK.....	7	
-38	R AN960-6	. WASHER.....	7	
		★		
	122-364133-75	. PANEL ASSY.....	1	
		/ATTACHING PARTS/		
-39	R MS35206-251	. SCREW.....	8	
-40	R AN960-8	. WASHER.....	8	
		★		
-41	122-364133-57	. BRACKET, SUPPORT.....	1	
-42	122-364133-59	. BRACKET, SUPPORT.....	1	
-43	122-364133-61	. BRACKET, SUPPORT.....	1	
-44	AN743-12	. BRACKET.....	2	
		/ATTACHING PARTS/		
-45	R MS27039-1-06	. SCREW.....	1	
		★		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

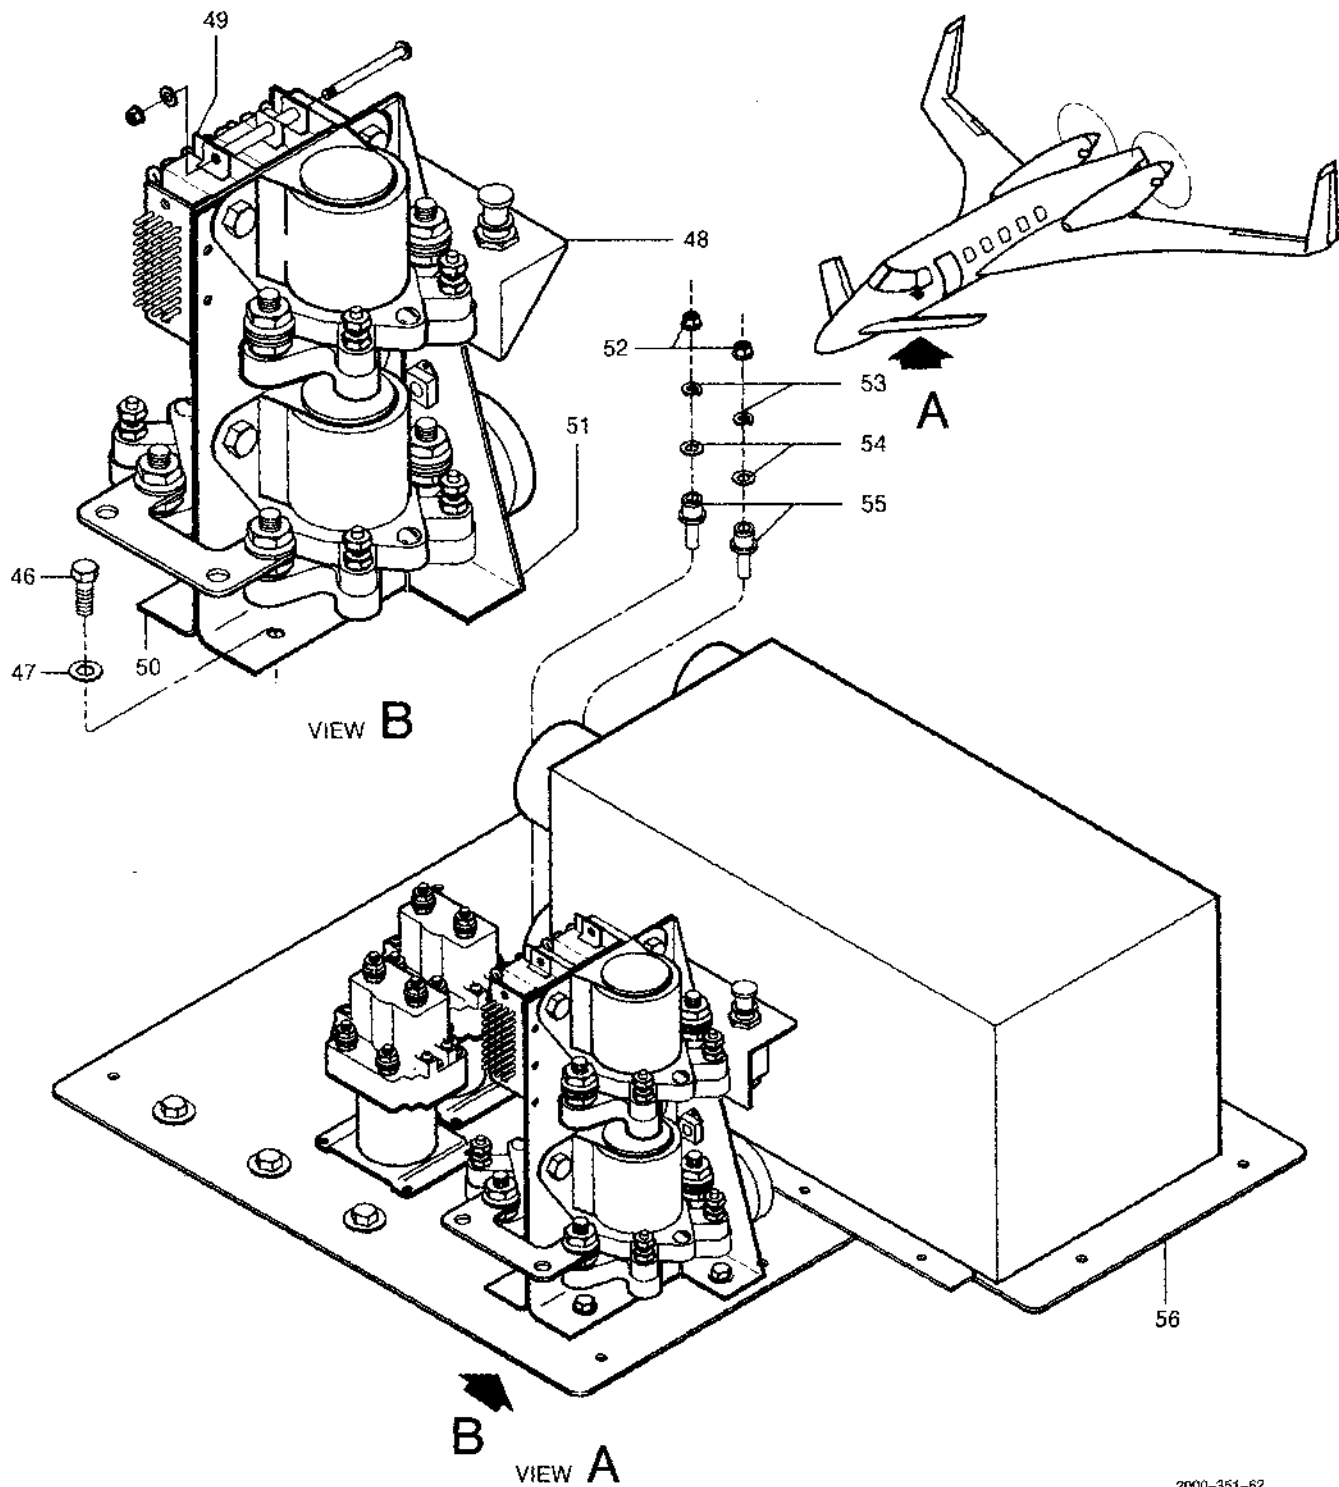

2000-351-62

FIGURE 20-10. COCKPIT LOWER ELECT EQUIPMENT
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10	122-364133-73	.. BRACKET ASSY	1	
		.. /ATTACHING PARTS/		
- 46	NAS1096-3	.. SCREW.....	6	
- 47	AN960-10L	.. WASHER.....	6	
		-----★-----		
- 48	122-364133-23	.. BRACKET ASSY	1	
- 49	122-364133-71	.. BRACKET.....	1	
- 50	122-364133-67	.. BRACKET ASSY	1	
	R MS21075L06	.. NUTPLATE.....	2	
- 51	122-364133-68	.. BRACKET ASSY	1	
	R MS21075L06	.. NUTPLATE.....	2	
- 52	130909N29	.. NUT.....	2	
- 53	MS35338-43	.. WASHER, LOCK	2	
- 54	AN960-10L	.. WASHER.....	2	
- 55	131270-3	.. STUD, BLIND GROUND.....	2	
	MS21047L06	.. NUTPLATE.....	7	
	R MS21070L3	.. NUTPLATE.....	8	
	R MS21070L4	.. NUTPLATE.....	3	
	R 130909N33	.. NUTPLATE.....	6	
- 56	122-364133-45	.. PANEL.....	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-20-20
AFT STEP ELECTRICAL EQUIPMENT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

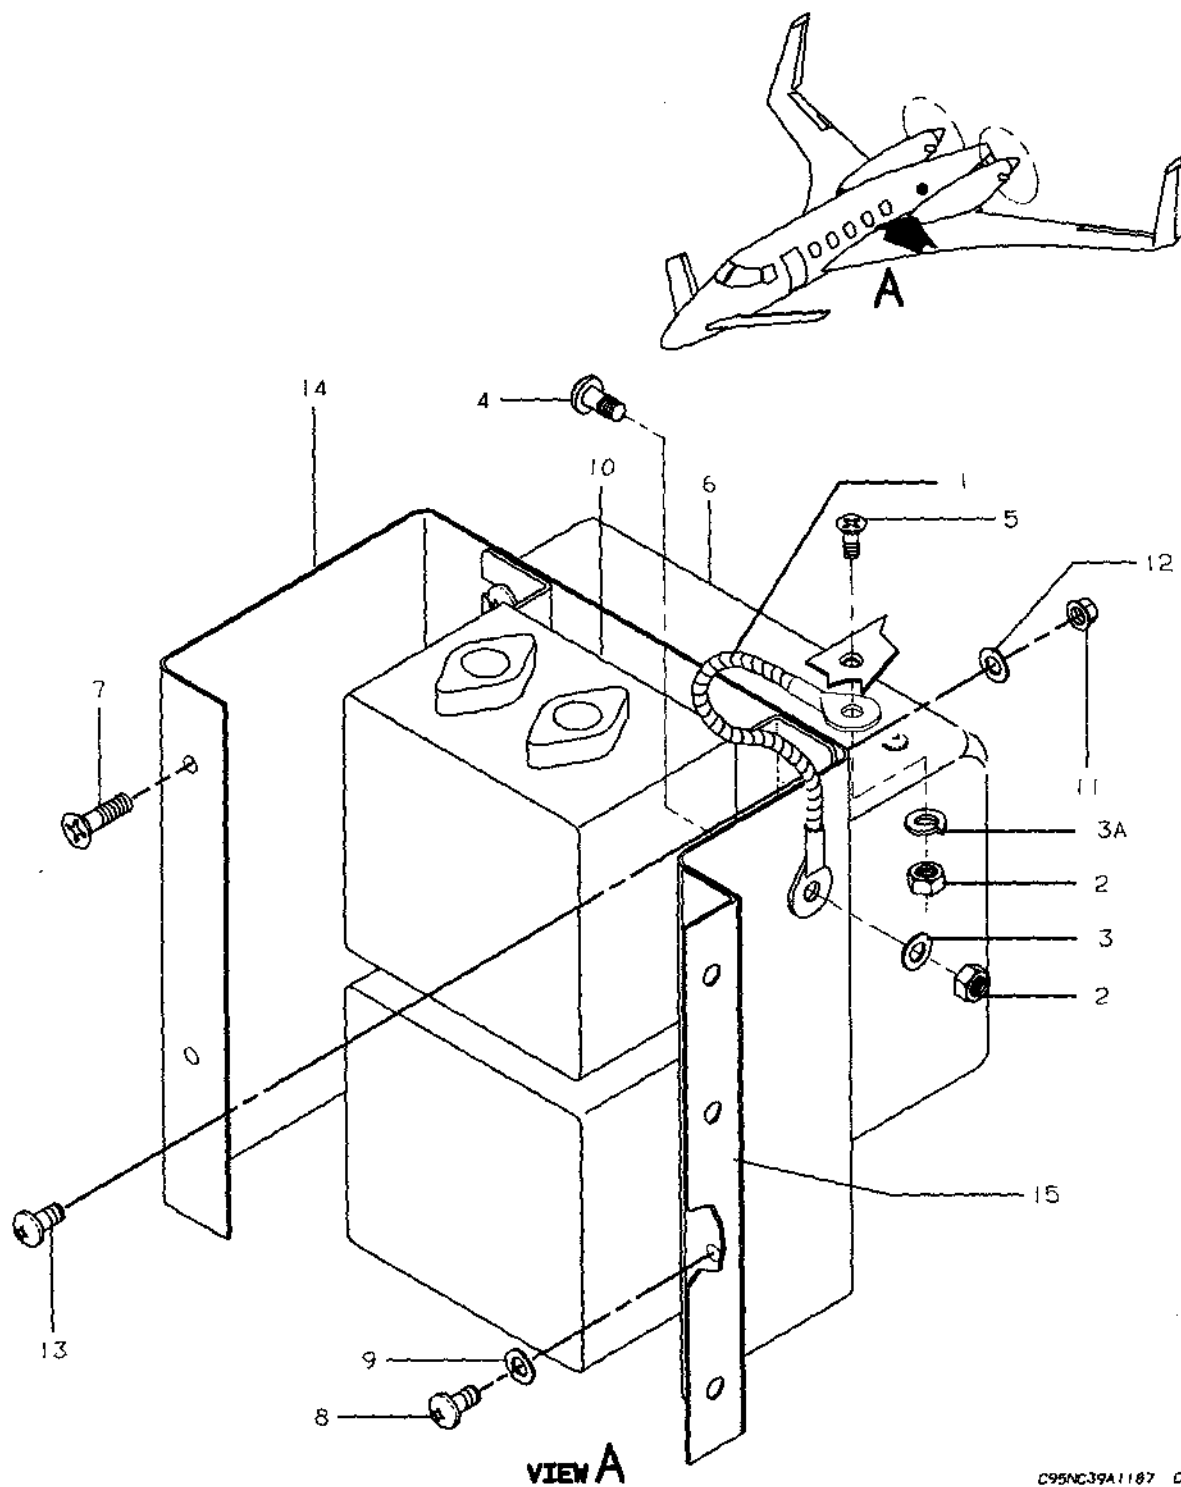


FIGURE 20-20.AFT STEP ELECTRICAL EQUIPMENT


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-20		ELECTRICAL EQUIPMENT INSTL, AFT STEP	NP	
- 1	R MS25083-2BB5	. JUMPER, BONDING	2	
		. /ATTACHING PARTS/		
- 2	130909N28	. NUT	2	
- 3	R AN960-8L	. WASHER	3	
- 3A	R MS35338-42	. WASHER, LOCK	1	
- 4	R MS35206-245	. SCREW	1	
- 5	R MS24693S50	. SCREW	1	
		-----★-----		
	MS21049L08	. . NUTPLATE	2	
- 6	122-364165-25	. MONITOR BOX ASSY, FLAP & FWD WING	1	
	122-364144-13	. SHELF ASSY	1	
		. /ATTACHING PARTS/		
- 7	MS24694S57	. SCREW	2	
- 8	MS35207-264	. SCREW	2	
- 9	AN960-10L	. WASHER	4	
		-----★-----		
- 10	R 122-384101-1	. . INVERTER, EL PANEL	2	
		. /ATTACHING PARTS/		
- 11	130909N29	. . NUT	4	
- 12	AN960-10L	. . WASHER	4	
- 13	MS35207-264	. . SCREW	4	
		-----★-----		
- 14	R 122-364144-15	. . SHELF ASSY	1	
	130909N33	. . . NUTPLATE	8	
- 15	122-430023-21	ANGLE, SUPPORT	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-20-30
AFT FUSELAGE ELECTRICAL EQUIPMENT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

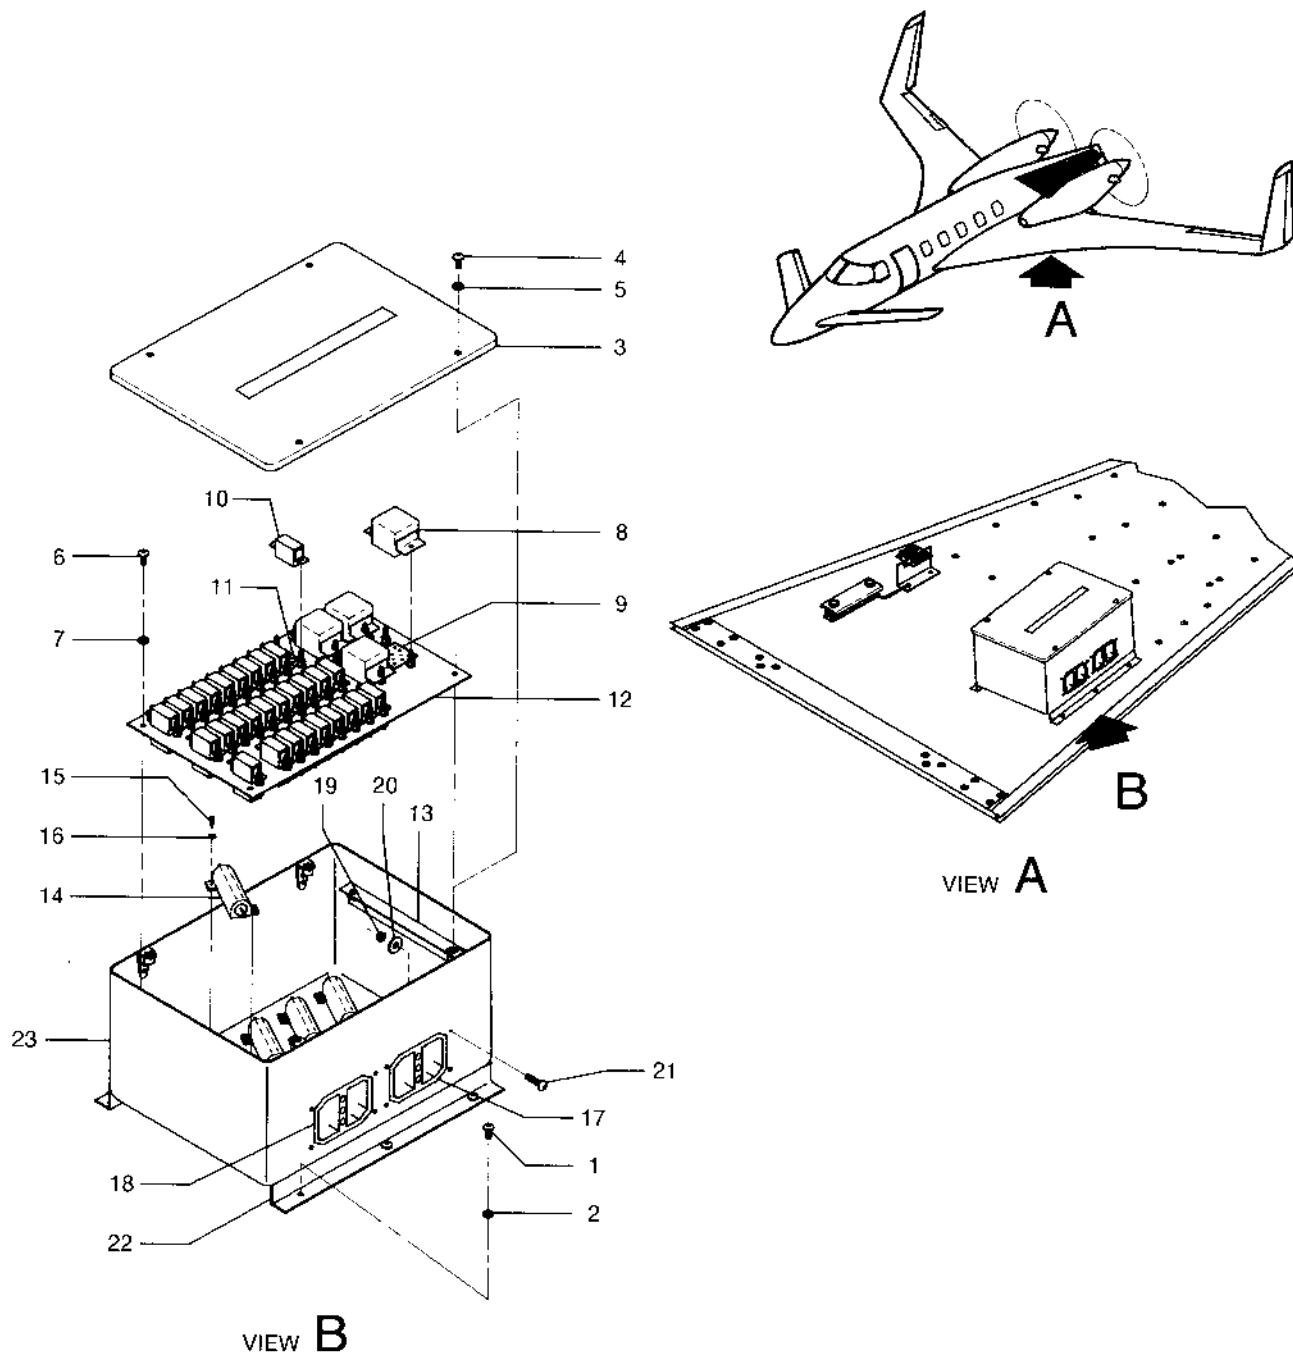



2000-353-01

FIGURE 20-30.AFT FUSELAGE ELECTRICAL EQUIPMENT
/SHEET 1 OF 3 SHEETS/


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-30	122-366001-1	ELECTRICAL EQUIPMENT INSTL, AFT FUSELAGE	NP	
	122-364131-19	. PANEL ASSY, LOGIC RELAY.....	1	
		/ATTACHING PARTS/		
- 1	MS35206-262	. SCREW.....	6	1
	AN3C3A	. BOLT.....	6	2
- 2	AN960-10L	. WASHER.....	6	
		★-----		
- 3	122-364131-11	. COVER ASSY.....	1	
		/ATTACHING PARTS/		
- 4	MS35206-245	. SCREW.....	4	
- 5	AN960-8L	. WASHER.....	4	
		★-----		
	122-364131-21	. BOX ASSY.....	1	
	122-364131-7	. SHELF ASSY.....	1	
		/ATTACHING PARTS/		
- 6	MS35206-245	. SCREW.....	4	
- 7	AN960-10L	. WASHER.....	4	
		★-----		
- 8	MS27743-18	. RELAY.....	4	
- 9	451116-182	. SOCKET, RELAY.....	4	
	1N4007	. DIODE, RELAY.....	16	
-10	M6106/27-023	. RELAY.....	29	
-11	451120-051	. SOCKET, RELAY.....	29	
	122-364132-7	. DECAL, RELAY IDENTIFICATION	1	
-12	122-364131-9	. SHELF.....	1	
-13	122-364131-15	. ANGLE ASSY.....	2	
	MS21075L08	. NUTPLATE.....	2	
-14	RE75G24R9	. RESISTOR.....	4	
		/ATTACHING PARTS/		
-15	MS35206-215	. SCREW.....	2	
-16	AN960-4L	. WASHER.....	2	
		★-----		
-17	RME2R67P26P5002	. CONNECTOR.....	1	
-18	RME2R67P67P5001	. CONNECTOR.....	1	
		/ATTACHING PARTS/		
-19	MS21042L04	. NUT.....	4	
-20	AN960-4L	. WASHER.....	4	
-21	MS35206-217	. SCREW.....	4	
		★-----		
-22	122-364131-23	. ANGLE.....	2	
	AN256-8	. NUTPLATE.....	4	
	MS21047L04	. NUTPLATE.....	8	
-23	122-364131-5	. BOX.....	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

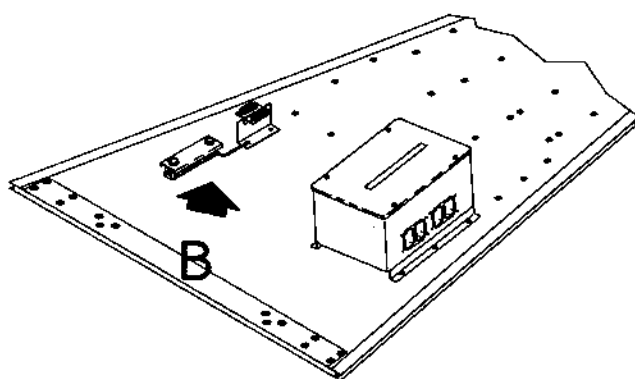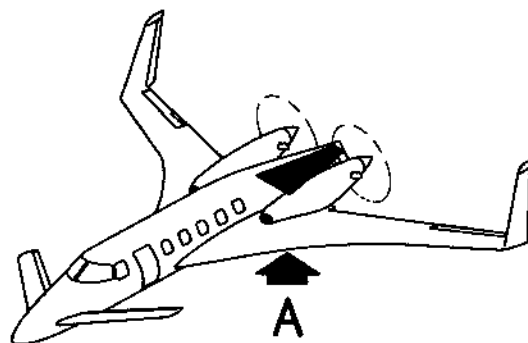

VIEW A

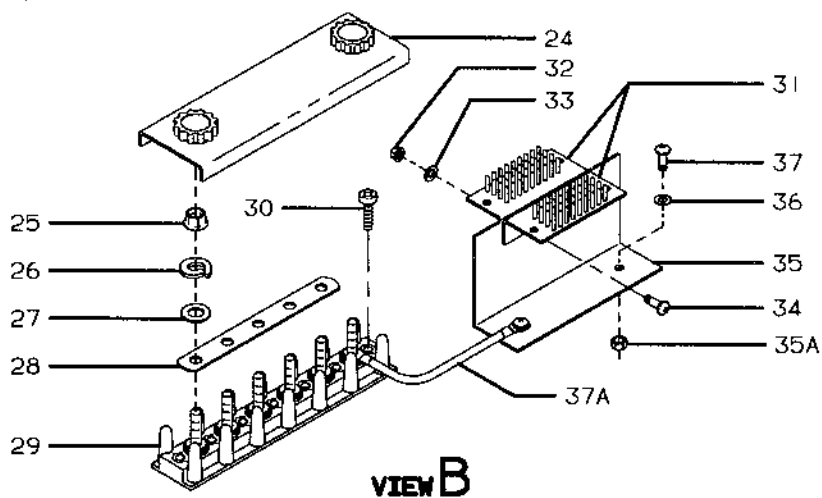


VIEW B

C95NC39A1188 C

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-30 - 24	MS18029-256	. COVER ASSY, TERMINAL BLOCK	1	
- 25	MS35650-304	. NUT	6	
- 26	MS35338-138	. WASHER, LOCK	6	
- 27	AN960C10L	. WASHER	6	
- 28	MS25226-4-5	. BUS BAR	1	
	131033R1-6	. STRIP, TERMINAL IDENTIFICATION	1	
- 29	MS27212-2-6	. BOARD, TERMINAL	1	
		. /ATTACHING PARTS/		
- 30	MS35206-217	. SCREW	2	
		-----★-----		
- 31	204814-1	. CONNECTOR ASSY, GROUND	2	
		. /ATTACHING PARTS/		
- 32	130909N28	. NUT	2	
- 33	AN960-8L	. WASHER	2	
- 34	MS35206-244	. SCREW	2	
		-----★-----		
- 35	122-364133-11	. BRACKET	1	
		. /ATTACHING PARTS/		
- 35A R	130909N28	. NUT	2	
- 36 R	AN960-8L	. WASHER	2	
- 37 R	MS35206-244	. SCREW	2	
		-----★-----		
- 37A	MS25083-2BB5	. JUMPER, BONDING/TERMINAL BOARD TO GROUND	1	
		. CONNECTOR/		
	MS25083-2BB4	. JUMPER, BONDING/GROUND BRACKET TO CIRCUIT	1	
		. BREAKER PANEL/		
	MS25083-2BB5	. JUMPER, BONDING/CIRCUIT BREAKER PANEL TO	1	
		. RELAY BOX/		
	MS25083-2BB6	. JUMPER, BONDING/RELAY BOX TO ENVIRONMENTAL	1	
		. CONTROL BOX/		
	MS25083-2BB4	. JUMPER, BONDING/ENVIRONMENTAL CONTROL BOX TO ..	1	
		. RELAY BOX/		
	MS25083-2BB9	. JUMPER, BONDING/RELAY BOX TO BLEED AIR LEAK	1	
		. DETECTION CONTROLLER/		
R	MS25083-2BB15	. JUMPER, BONDING/BLEED AIR LEAK DETECTION	1	
		. CONTROLLER TO EMERGENCY LOCATOR		
		. TRANSMITTER/		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

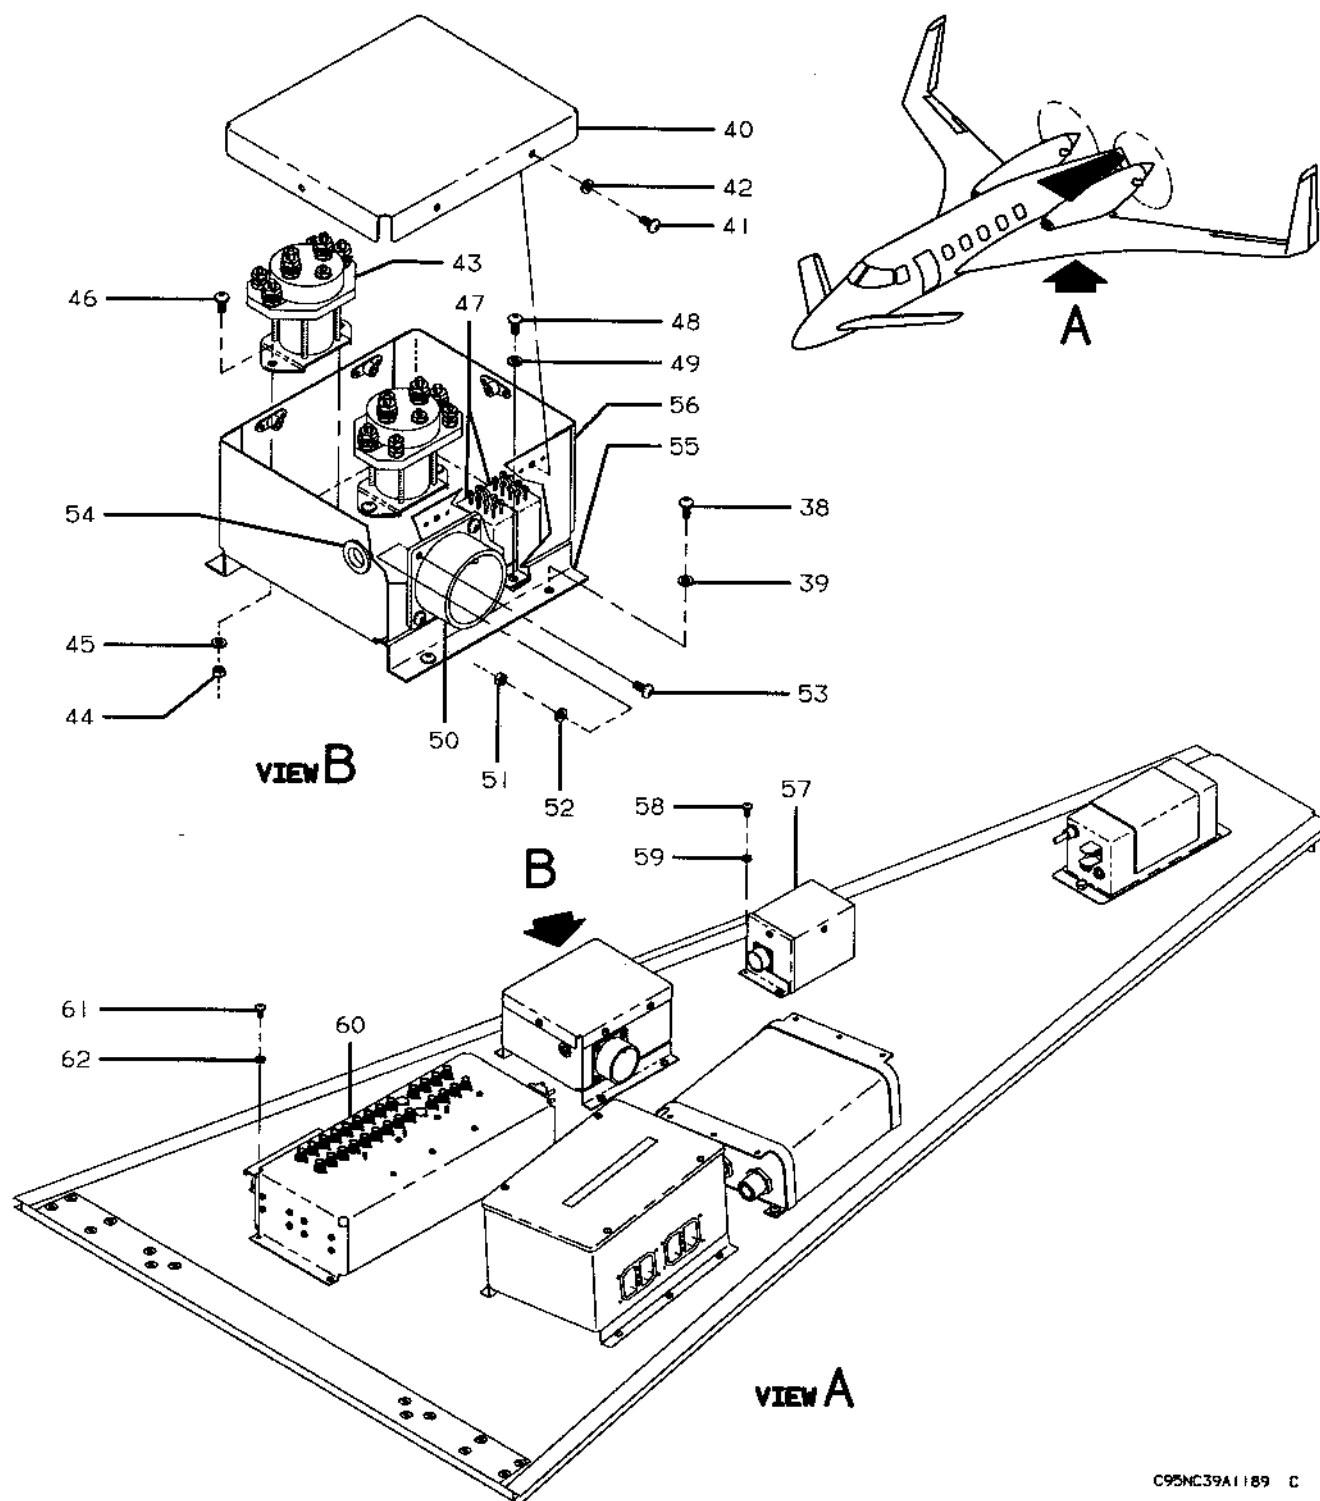

C95NC39A1189 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-30	122-364064-13	. RELAY PANEL ASSY.....	1	
		/ATTACHING PARTS/		
- 38	MS35206-244	. SCREW.....	4	
- 39	AN960-8L	. WASHER.....	4	
		-----★-----		
- 40	122-364064-7	. COVER.....	1	
		/ATTACHING PARTS/		
- 41	MS35206-244	. SCREW.....	6	
- 42	AN960-8L	. WASHER.....	6	
		-----★-----		
	100-361045-1	. SUPPRESSOR ASSY, TRANSORB.....	2	
- 43	6041H220	. RELAY.....	2	
		/ATTACHING PARTS/		
- 44	130909N29	. NUT.....	2	
- 45	AN960-10L	. WASHER.....	2	
- 46	MS35207-262	. SCREW.....	2	
		-----★-----		
- 47	50-380048-1	. RELAY.....	2	
		/ATTACHING PARTS/		
- 48	MS35206-229	. SCREW.....	2	
- 49	AN960-4	. WASHER.....	2	
		-----★-----		
	1N4007	. DIODE.....	2	
- 50	MS3472114-12P	. CONNECTOR.....	1	
		/ATTACHING PARTS/		
- 51	MS21042L06	. NUT.....	4	
- 52	AN960-6	. WASHER.....	4	
- 53	MS35206-229	. SCREW.....	4	
		-----★-----		
- 54	MS35489-11	. GROMMET.....	1	
	122-364064-15	. BOX ASSY.....	1	
- 55	122-364064-9	. ZEE.....	2	
	MS21047L08	. NUTPLATE.....	6	
- 56	122-364064-17	. BOX.....	1	
	MS21070L06	. NUTPLATE.....	4	
	207359-1	. CONNECTOR.....	1	
	66099-4	. PIN.....	2	
- 57	472184-04	. LEAK DETECTION CONTROLLER, BLEED AIR.....	1	
		/ATTACHING PARTS/		
- 58	MS35207-244	. SCREW.....	4	
- 59	AN960-8L	. WASHER.....	4	
		-----★-----		
- 60	122-361013-55	. PANEL ASSY, CIRCUIT BREAKER/SEE CHAPTER 39-10-50/.....	1	3
	122-361013-79	. PANEL ASSY, CIRCUIT BREAKER/SEE CHAPTER 39-10-50/.....	1	4
		/ATTACHING PARTS/		
- 61	MS35207-262	. SCREW.....	4	
- 62	AN960-10L	. WASHER.....	4	
		-----★-----		

NOTE FOR EMERGENCY LOCATOR TRANSMITTER, SEE
CHAPTER 25. FOR ENVIRONMENTAL CONTROL
BOX, SEE CHAPTER 21.


CODES OF EFFECTIVITY

1	NC-4 THRU NC-53	2	NC-54 AND AFTER
3	NC-4 THRU NC-20	4	NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

39-21-00
CENTER SECTION ELECTRICAL EQUIPMENT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

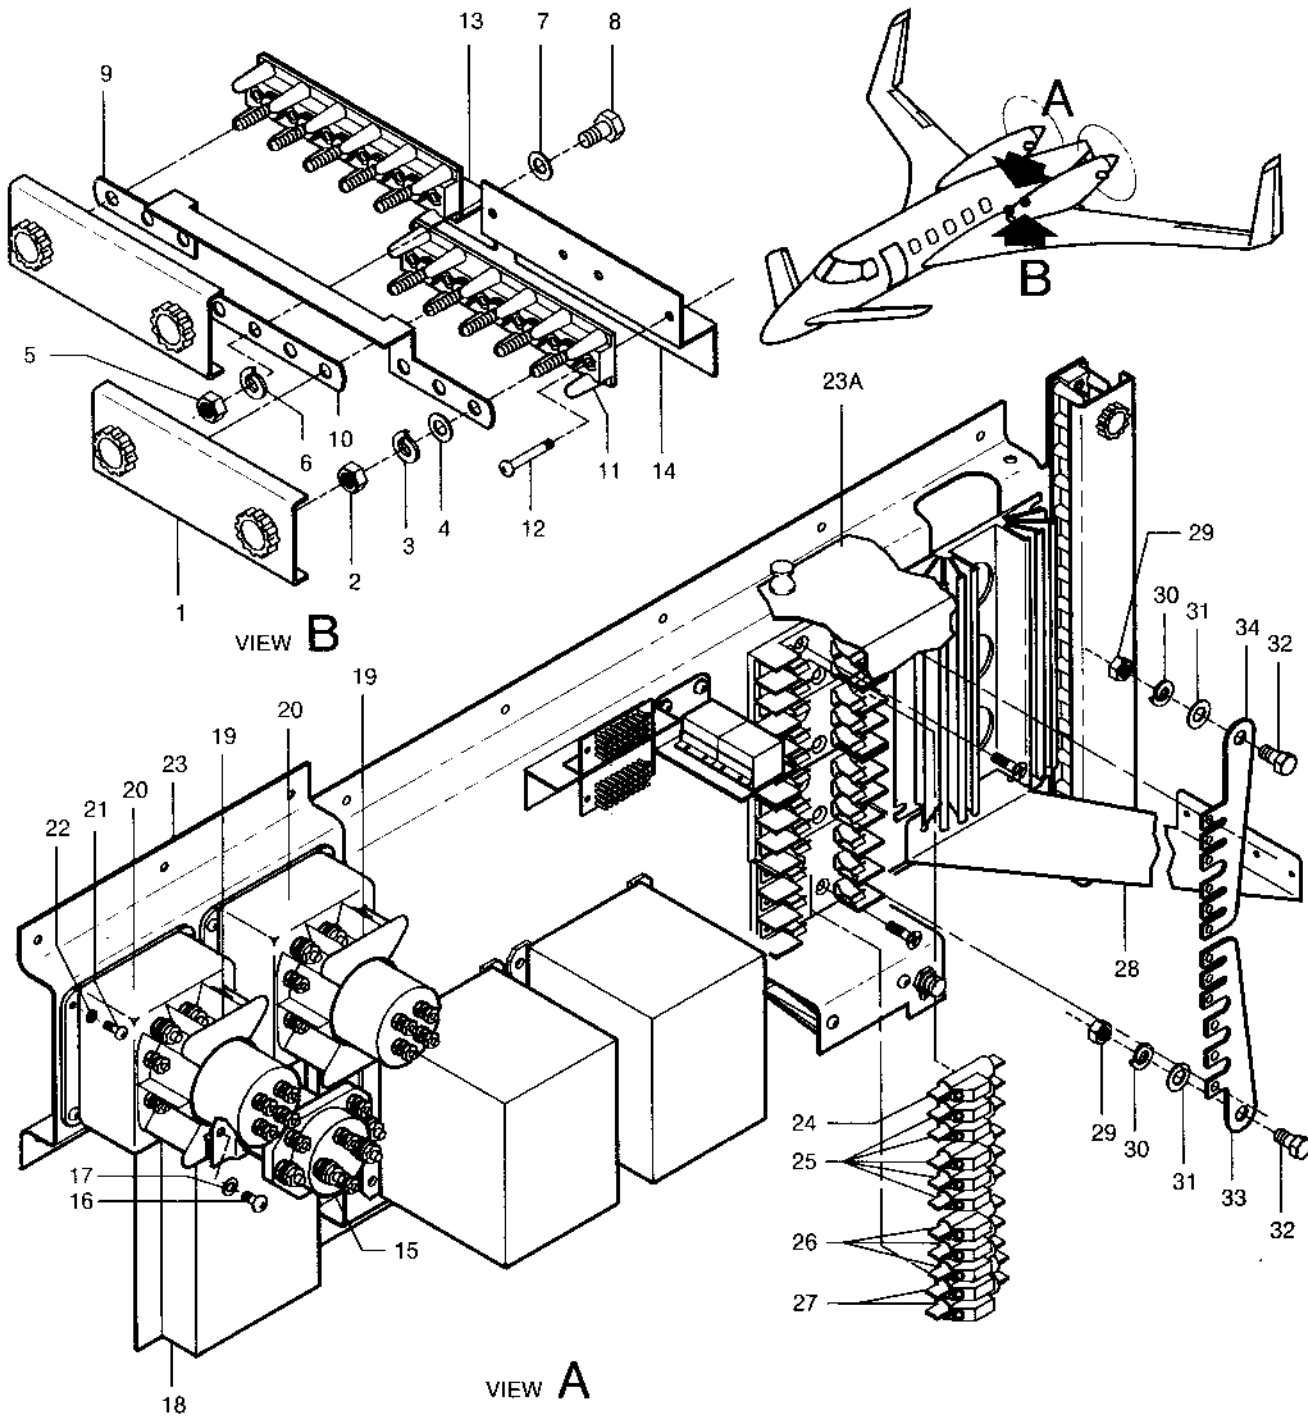


2000-355-14

FIGURE 21-00. CENTER SECTION ELECT EQUIPMENT
/SHEET 1 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21-00	122-361016-15	ELECTRICAL EQUIPMENT INSTL, WING CTR SECTION	NP	
- 1	MS18029-5S5	. COVER ASSY	2	
- 2	MS35650-3384	. NUT	10	
- 3	MS35338-141	. WASHER, LOCK	10	
- 4	AN960C616	. WASHER	10	
- 5	AN316-5	. NUT	1	
- 6	R MS35338-45	. WASHER, LOCK	1	
- 7	AN960C516L	. WASHER	1	
- 8	AN5-4A	. BOLT	1	
- 9	122-361014-57	. BUS BAR	1	
-10	122-361014-55	. BUS BAR	1	
-11	MS27212-5-5	. TERMINAL BOARD	2	
		/ATTACHING PARTS/		
-12	MS35206-230	. SCREW	4	
		-----★-----		
-13	122-361016-31	. BRACKET ASSY	1	
-14	122-361016-35	. BRACKET ASSY	1	
	R MS21075L06	. NUTPLATE	4	
	R 122-361016-13	. PANEL ASSY	1	
	R 100-361045-1	. TRANZORB ASSY, SUPPRESSOR	2	
-15	109-381002-1	. RELAY, FWD WING	1	
		/ATTACHING PARTS/		
-16	MS27039-1-07	. SCREW	2	
-17	AN960-10L	. WASHER	2	
		-----★-----		
-18	122-361016-11	. BRACKET ASSY	1	
	MS21060-3	. NUTPLATE	4	
	122-361016-21	. PANEL ASSY, FLAP MONITOR RELAY	1	
-19	49-2661	. COVER, TERMINAL	2	
	100-361045-1	. TRANZORB ASSY, SUPPRESSOR	2	
-20	MS24376D2	. RELAY, FLAP MONITOR	2	
		/ATTACHING PARTS/		
-21	MS27039-1-07	. SCREW	4	
-22	AN960-10L	. WASHER	4	
		-----★-----		
-23	122-361016-19	. BRACKET ASSY	1	
	MS21060-3	. NUTPLATE	8	
-23A	122-361058-55	. COVER ASSY	1	
	HN5P52-1-1	. PLUNGER	3	
	HN5G52-1	. GROMMET	3	
	122-361059-29	. DECAL	1	
-24	ACH15	. LIMITER, NO. 1 AVIONICS BUS	1	
-25	FIL25	. LIMITER, NO. 1, 2, 3, 4 & 5 SUB BUS FEEDER	5	
-26	FIL20	. LIMITER, FWD & AFT SUB BUS FEEDER & FWD WING	3	
		MOTOR		
-27	FIL35	. LIMITER, FLAP & EICAS POWER	2	
-28	122-361033-51	. STRAP, BOND	1	
	122-361019-9	. PANEL ASSY, ELECTRICAL EQUIPMENT	1	
-29	MS35650-3254	. NUT	2	
-30	MS35338-139	. WASHER, LOCK	2	
-31	AN960C416	. WASHER	2	
-32	AN4C5A	. BOLT	2	
-33	122-361014-85	. BUS BAR	1	
-34	122-361014-83	. BUS BAR	1	

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

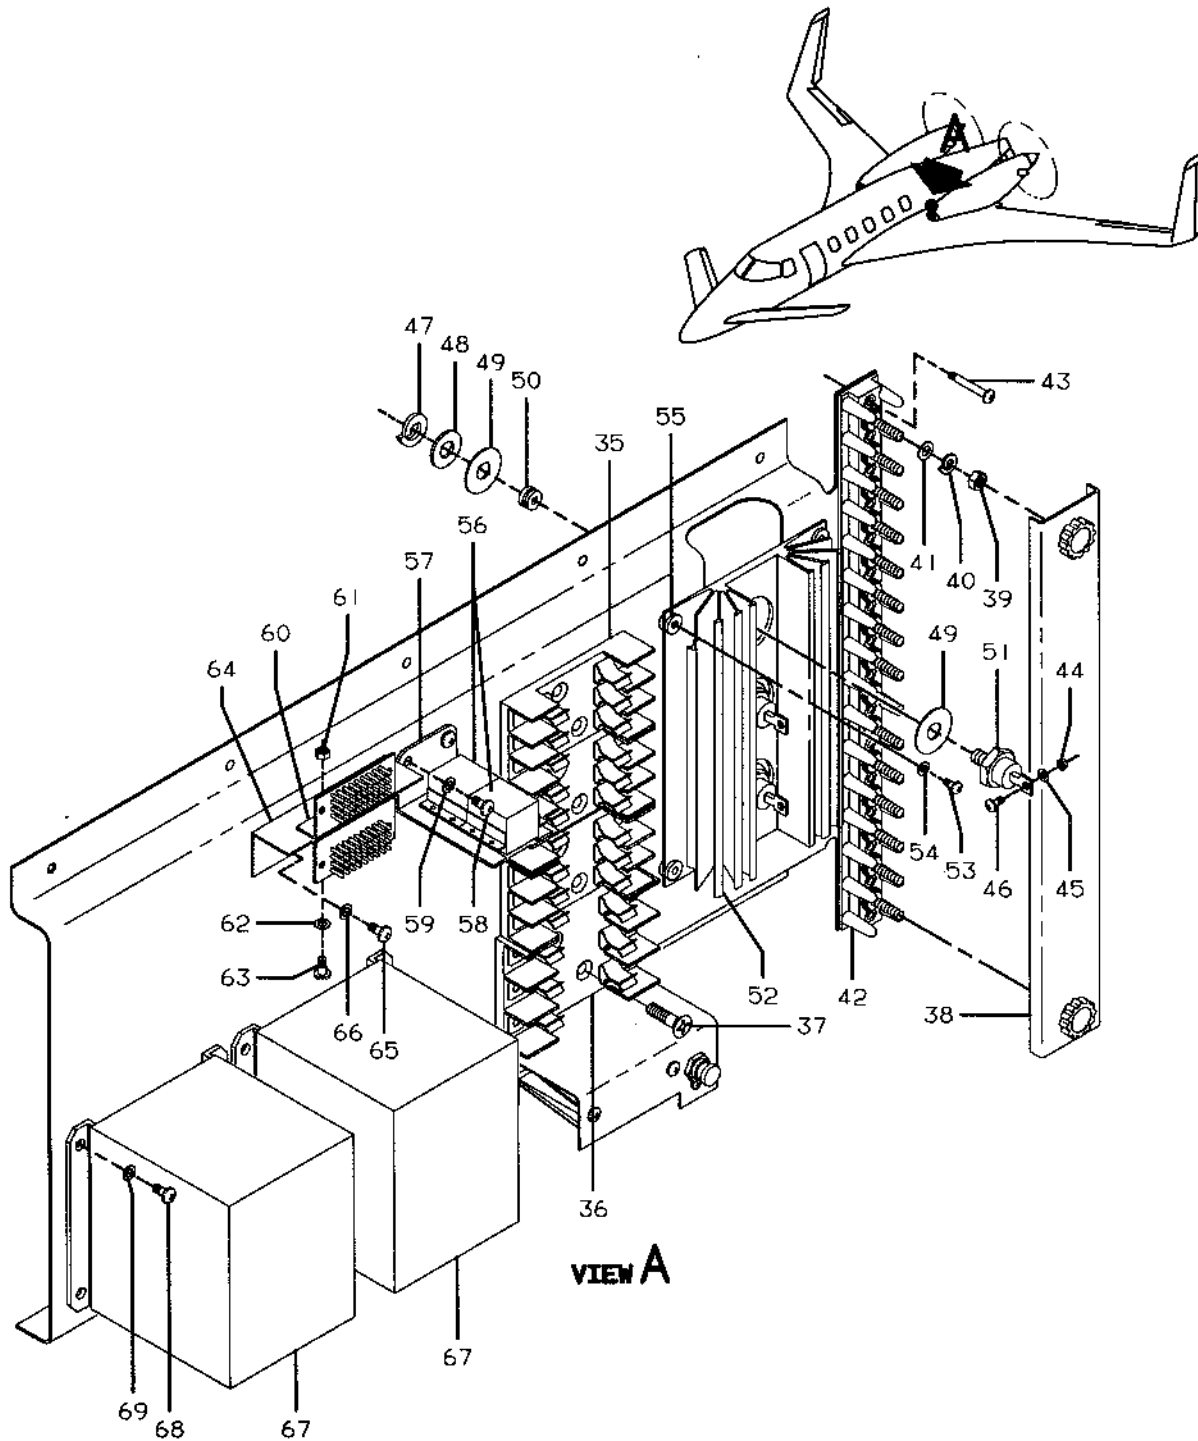


C95NC39A1190 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21-00 -35	3967	.. HOLDER, LIMITER FUSE	3	
-36	3968	.. HOLDER, LIMITER FUSE	1	
		/ATTACHING PARTS/		
-37	MS24693S274	.. SCREW	2	
		-----★-----		
	MS35206-243	.. SCREW/USE WITH 3967 FUSE HOLDER/	9	
	AN508-10-6	.. SCREW/USE WITH 3968 FUSE HOLDER/	3	
-38	MS18029-2S15	.. COVER ASSY, TERMINAL BOARD	1	
-39	130909N29	.. NUT	15	
-40	MS35338-138	.. WASHER, LOCK	15	
-41	AN960C10	.. WASHER	15	
	131033R1-15	.. STRIP, TERMINAL IDENTIFICATION	1	
-42	MS27212-2-15	.. TERMINAL BOARD	1	
		/ATTACHING PARTS/		
-43	MS35206-217	.. SCREW	4	
		-----★-----		
-44	MS21042L06	.. NUT	3	
-45	AN960-8L	.. WASHER	3	
-46	R NAS1096-1-6	.. SCREW	3	
-47	MS35338-44	.. WASHER, LOCK	3	
-48	R 100951S016ZZ	.. WASHER	15	
-49	7403-09FR25	.. INSULATOR	6	
-50	DF3H	.. INSULATOR	3	
-51	85HF100	.. DIODE/NUT FURNISHED WITH DIODE/	3	
-52	B4949	.. HEAT SINK	1	
		/ATTACHING PARTS/		
-53	MS35206-230	.. SCREW	4	
-54	AN960-8L	.. WASHER	4	
		-----★-----		
-55	103	.. INSULATOR	4	
-56	M6106/29-023	.. RELAY	2	
-57	122-361019-7	.. BRACKET, RELAY	1	
		/ATTACHING PARTS/		
-58	MS35206-245	.. SCREW	2	
-59	AN960-8L	.. WASHER	2	
		-----★-----		
-60	204814-1	.. CONNECTER, GROUND	2	
		/ATTACHING PARTS/		
-61	130909N28	.. NUT	2	
-62	AN960-8L	.. WASHER	2	
-63	MS35206-245	.. SCREW	2	
		-----★-----		
-64	122-364133-11	.. BRACKET	1	
		/ATTACHING PARTS/		
-65	MS35206-245	.. SCREW	2	
-66	AN960-8L	.. WASHER	2	
		-----★-----		
-67	51538-001B	.. CONTROL UNIT, GENERATOR	2	
		/ATTACHING PARTS/		
-68	MS35206-245	.. SCREW	4	
-69	AN960-8L	.. WASHER	4	
		-----★-----		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

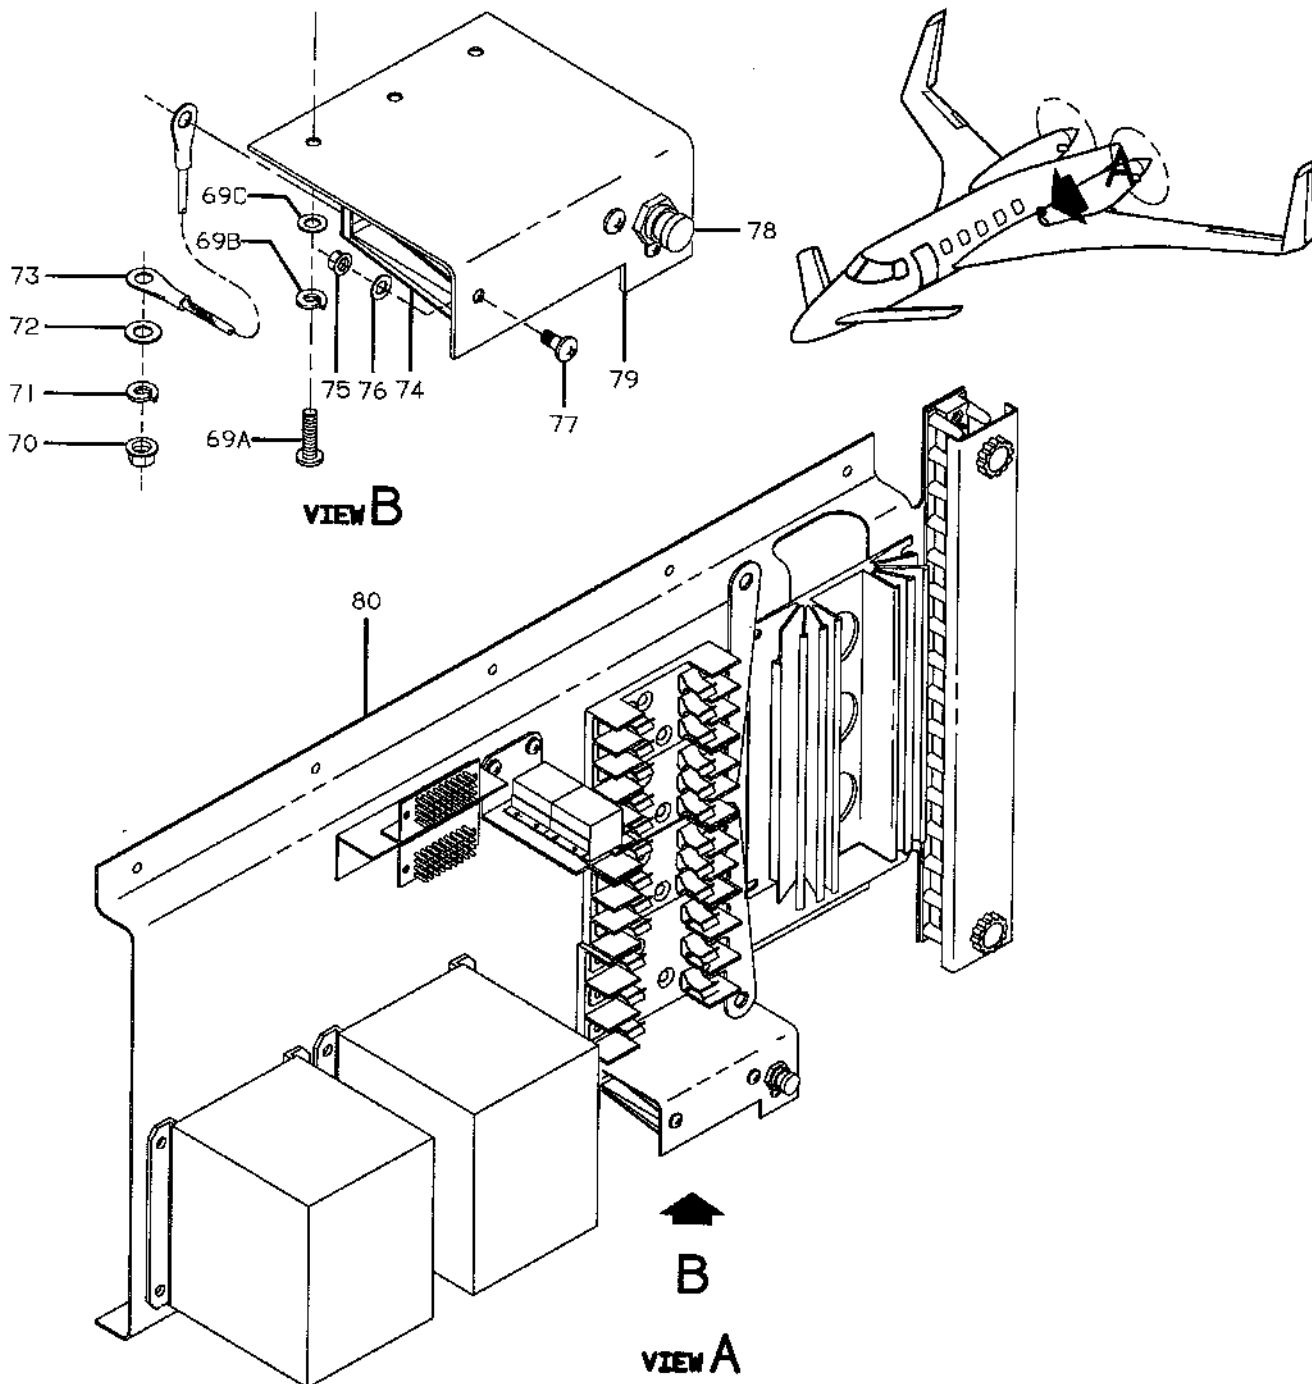

C93NC39A4449 C

FIGURE 21-00.CENTER SECTION ELECT EQUIPMENT
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21-00 -69A	R MS35206-228	.. SCREW.....	3	
-69B	R MS35338-41	.. WASHER, LOCK.....	3	
-69C	R AN960-6L	.. WASHER.....	3	
	R 122-361019-11	.. PANEL ASSY.....	1	
-70	R 130909N49	.. NUT.....	2	
-71	R MS35338-43	.. WASHER, LOCK.....	2	
-72	R AN960-10L	.. WASHER.....	2	
	R AN960JD10	.. WASHER.....	2	
-73	MS25083-2BB5	.. JUMPER, BONDING.....	1	
-74	122-380062-5	.. VARISTOR, METAL OXIDE.....	1	
		/ATTACHING PARTS/		
-75	MS21042L06	.. NUT.....	2	
-76	AN960-6L	.. WASHER.....	4	
-77	MS35206-231	.. SCREW.....	2	
		---★---		
-78	131984-5	.. CIRCUIT BREAKER.....	1	
-79	122-361057-57	.. BRACKET.....	1	
	MS21060-04	.. NUTPLATE.....	4	
	MS21060-06	.. NUTPLATE.....	4	
	R MS21060-08	.. NUTPLATE.....	14	
	MS21060-3	.. NUTPLATE.....	8	
	MS21069L06	.. NUTPLATE.....	3	
	R 130909N29	.. NUT.....	2	
	R MS35338-43	.. WASHER, LOCK.....	2	
	R AN960-10L	.. WASHER.....	2	
	R MS35207-265	.. SCREW.....	1	
	131270-3	.. GROUND STUD, BLIND.....	3	
-80	122-361019-13	.. PANEL.....	1	

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG


LIST OF PAGES & TABLE OF CONTENTS FOR CHAPTER 52-00-00 DOORS

CHAP/SUB- SECT & UNIT	PAGE NUMBER	EFFECTIVE DATE	TABLE OF CONTENTS
52-00-00	1	10/27/00	LIST OF PAGES & TABLE OF CONTENTS
52-10-00	1	02/25/94	CABIN AIRSTAIR DOOR
52-10-00	2	02/25/94	
52-10-00	3	02/25/94	
52-10-00	4	02/25/94	
52-10-00	5	02/25/94	
52-10-00	6	02/25/94	
52-10-00	7	02/25/94	
52-10-00	8	02/25/94	
52-10-00	9	02/25/94	
52-10-10	1	02/25/94	CABIN AIRSTAIR DOOR LATCH MECHANISM
52-10-10	2	02/25/94	
52-10-10	3	02/25/94	
52-10-10	4	02/25/94	
52-10-10	5	02/25/94	
52-10-10	6	02/25/94	
52-10-10	7	02/25/94	
52-10-10	8	02/25/94	
52-10-10	9	02/25/94	
52-10-20	1	02/25/94	AIRSTAIR DOOR SEAL PLUMBING
52-10-20	2	02/25/94	
52-10-20	3	02/25/94	
52-20-00	1	02/25/94	EMERGENCY EXIT DOOR
52-20-00	2	02/25/94	
52-20-00	3	02/25/94	
52-20-00	4	10/27/00	
52-20-00	5	10/27/00	
52-40-00	1	02/25/94	NOSE AVIONICS ACCESS DOORS
52-40-00	2	02/25/94	
52-40-00	3	02/25/94	
52-70-00	1	02/25/94	CABIN DOOR WARNING SWITCHES
52-70-00	2	02/25/94	
52-70-00	3	02/25/94	
52-80-10	1	02/25/94	MAIN LANDING GEAR DOORS
52-80-10	2	02/25/94	
52-80-10	3	02/25/94	
52-80-10	4	02/25/94	
52-80-10	5	02/25/94	
52-80-20	1	02/25/94	NOSE LANDING GEAR DOORS
52-80-20	2	02/25/94	
52-80-20	3	02/25/94	
52-80-30	1	02/25/94	NOSE LANDING GEAR AFT DOORS
52-80-30	2	02/25/94	
52-80-30	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

52-10-00
CABIN AIRSTAIR DOOR

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

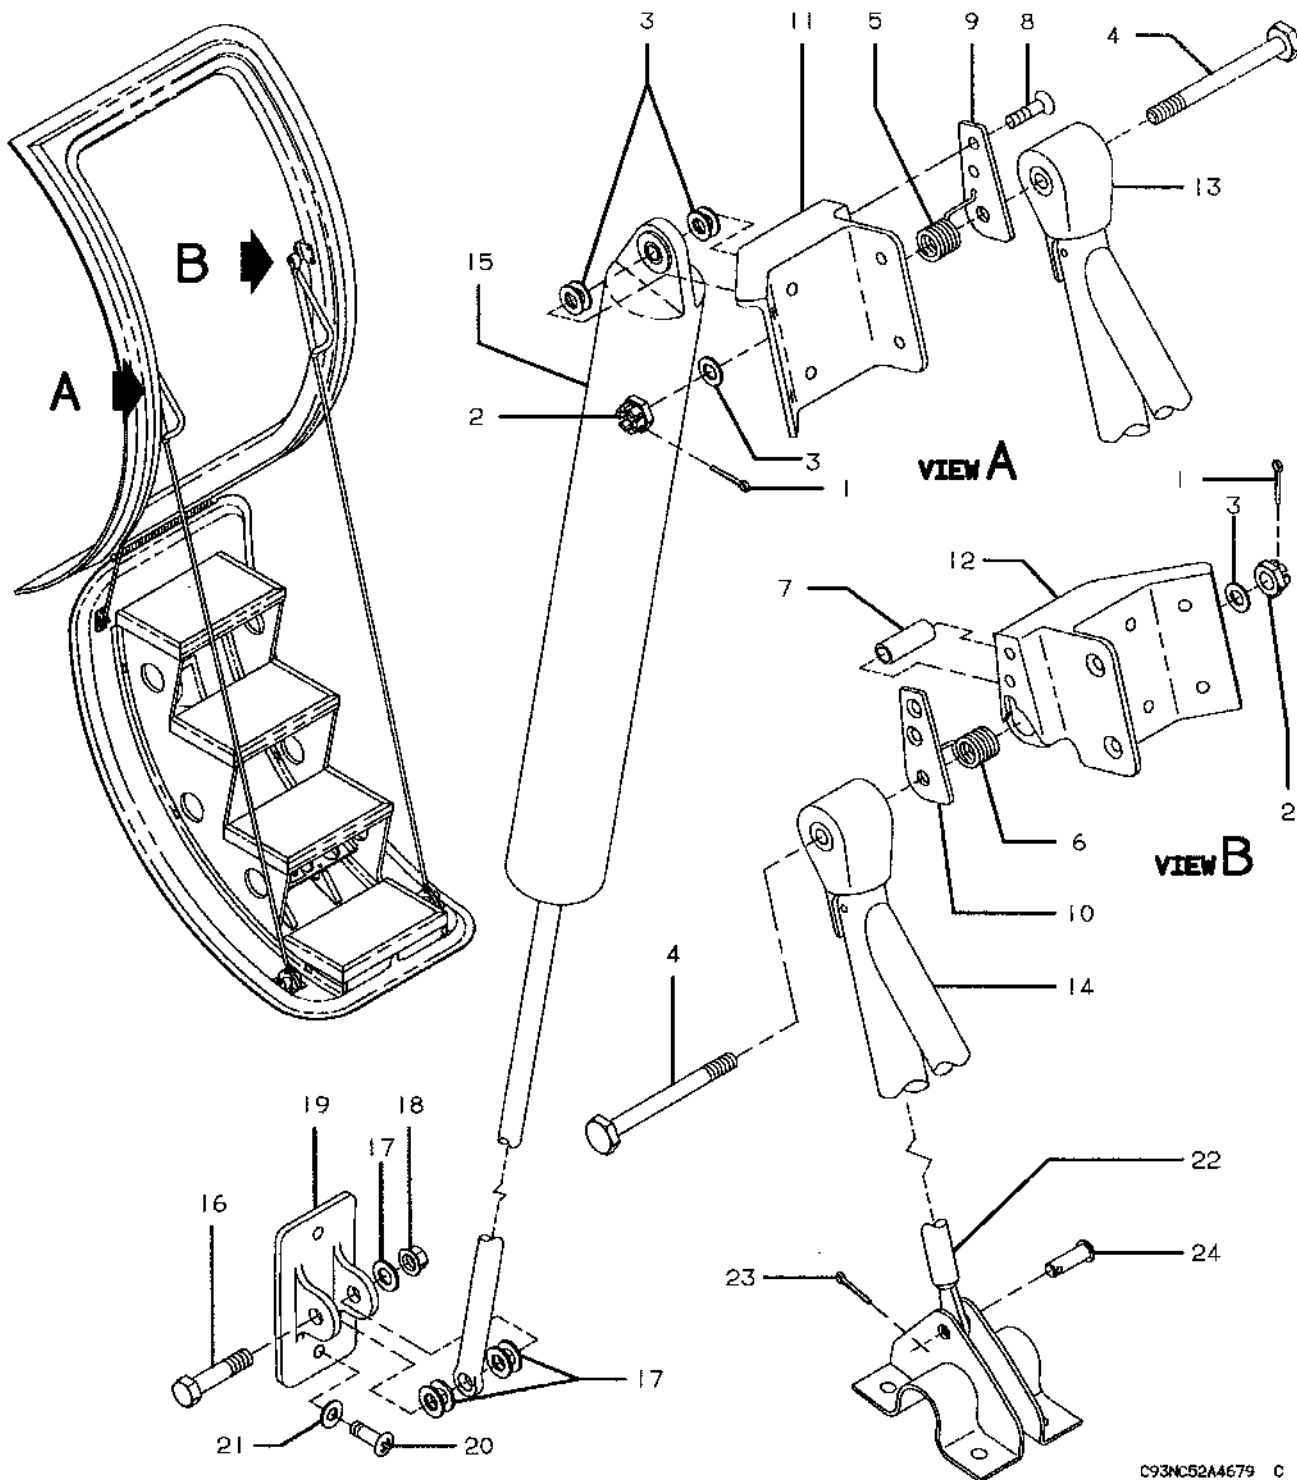


C93NC52A4679 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
10-00	122-430100-1	DOOR INSTL, CABIN AIRSTAIR	NP	
- 1	MS24665-132	. PIN, COTTER	2	
- 2	MS17828-4	. NUT	2	
- 3	AN960-416	. WASHER	6	
- 4	122-430100-21	. BOLT/ALTERNATE FOR NAS1304-44DW/	2	
	NAS1304-44DW	. BOLT/ALTERNATE FOR 122-430100-21/	2	
- 5	RR1071L	. SPRING	1	
- 6	RR1071R	. SPRING	1	
- 7	NAS43DD4-38	. SPACER	1	
- 8	MS24694S5	. SCREW	4	
- 9	122-430100-5	. PLATE, FWD SUPPORT	1	
- 10	122-430100-6	. PLATE, AFT SUPPORT	1	
- 11	122-430059-1	. FITTING ASSY, FWD HANDRAIL SUPPORT	1	
- 12	122-430059-2	. FITTING ASSY, AFT HANDRAIL SUPPORT	1	
- 13	122-430045-15	. HANDRAIL ASSY, FWD	1	
- 14	122-430045-16	. HANDRAIL ASSY, AFT	1	
	KP4A	. BEARING	2	
- 15	122-380023-1	. DAMPER ASSY, GAS SPRING/ORDER 122-380023-3	NP	3
		FOR SPARES/		
	122-380023-3	. DAMPER ASSY, GAS SPRING	1	4
		/ATTACHING PARTS/		
- 16	122-430100-19	. BOLT/ALTERNATE FOR NAS1304-14W/	1	
	NAS1304-14W	. BOLT/ALTERNATE FOR 122-430100-19/	1	
- 17	AN960C416	. WASHER	5	
- 18	22K1-048	. NUT/INSTALL ON STEP SIDE/	1	
		★		
- 19	122-430100-13	. FITTING, DAMPER ASSY SUPPORT	1	
		/ATTACHING PARTS/		
- 20	MS27039-1-07	. SCREW	2	
- 21	AN960-10L	. WASHER	2	
		★		
- 22	122-382070-3	. CABLE ASSY, HANDRAIL/ORDER 122-382070-5 FOR	NP	5
		SPARES/		
	122-382070-5	. CABLE ASSY, HANDRAIL	2	6
		/ATTACHING PARTS/		
- 23	MS24665-132	. PIN, COTTER	1	5
- 24	MS20392-3C19	. PIN, CLEVIS/ORDER 122-430100-17 BOLT OR	NP	5
		NAS1304-9W BOLT, AN960C416L WASHER AND		
		22K1-048 NUT/		
	122-430100-17	. BOLT/ALTERNATE FOR NAS1304-9W/	2	6
	NAS1304-9W	. BOLT/ALTERNATE FOR 122-430100-17/	2	6
	AN960C416L	. WASHER	2	6
	22K1-048	. NUT/INSTALL ON STEP SIDE/	2	6
		★		
	122-430100-15	. SEAL, COMPRESSIVE/AIRSTAIR DOOR/	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

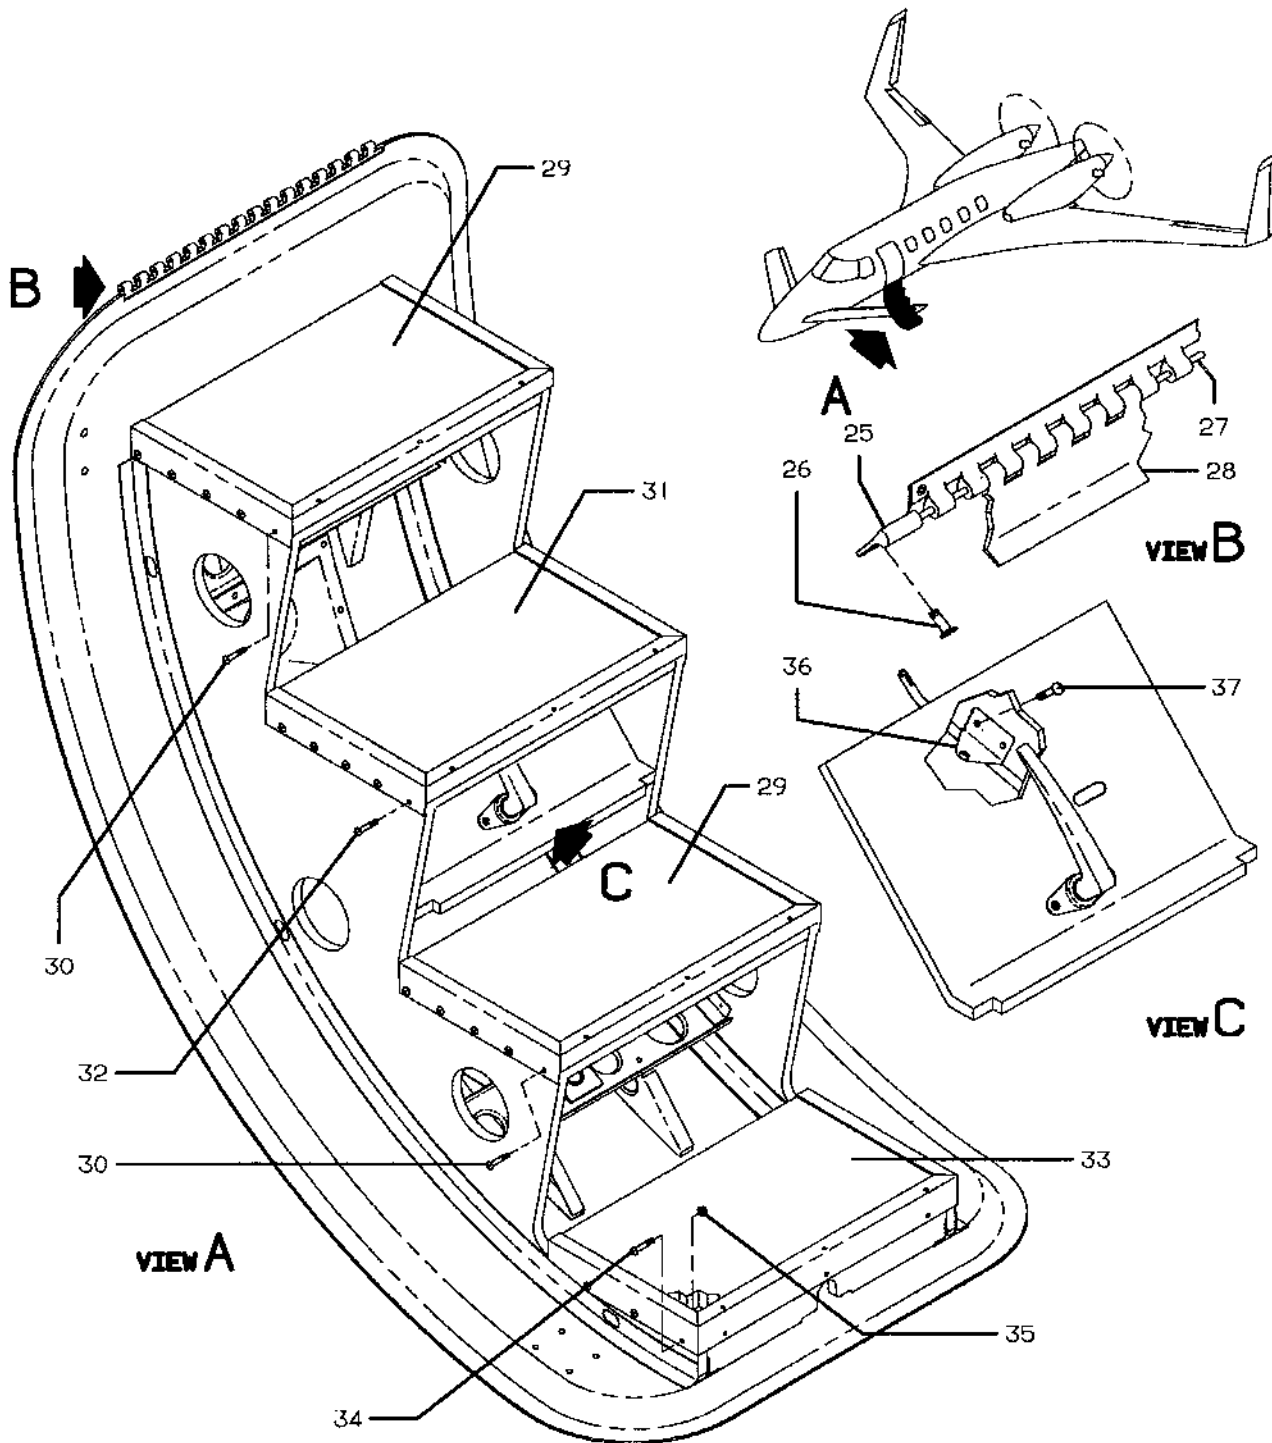


C93NC52A4680 C

FIGURE 10-00.CABIN AIRSTAIR DOOR
/SHEET 2 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00 -25	122-430058-1	. RETAINER, HINGE PIN FWD.....	1	
	122-430058-2	. RETAINER, HINGE PIN AFT.....	1	
		/ATTACHING PARTS/		
-26	MS24694S55	. SCREW.....	1	
		-----★-----		
	2R2329	. PLUSNUT.....	2	
-27	122-430100-3	. PIN, HINGE.....	1	
-28	122-430113-5	. HINGE HALF/MAY USE 122-430113-9 FOR SPARES/.....	1	1
	122-430113-9	. HINGE HALF.....	1	2
	122-430100-601	. DOOR ASSY, CABIN AIRSTAIR.....	1	
	122-430050-1	. . MECHANISM INSTL, DOOR LATCH/SEE CHAPTER.....	NP	
		52-10-10/		
	122-430040-1	. . STRUCTURE ASSY, CABIN AIRSTAIR DOOR.....	1	
-29	122-430060-47	. . STEP ASSY, BONDED.....	2	
		/ATTACHING PARTS/		
-30	AN525-10R16	. . SCREW.....	10	
		-----★-----		
	2R2329	. . . PLUSNUT.....	3	
-31	122-430060-49	. . STEP ASSY, BONDED.....	1	
		/ATTACHING PARTS/		
-32	AN525-10R16	. . SCREW.....	10	
		-----★-----		
	2R2329	. . . PLUSNUT.....	3	
	2R2330	. . . PLUSNUT.....	2	
-33	122-430060-45	. . STEP ASSY, BONDED.....	1	
		/ATTACHING PARTS/		
-34	AN525-10R16	. . SCREW.....	6	
-35	130909N49	. . NUT.....	6	
		-----★-----		
	2R2329	. . . PLUSNUT.....	3	
	2R2330	. . . PLUSNUT.....	2	
-36	122-430043-17	. . BRACKET, SUPPORT/PRESSURE LOCK RELEASE/.....	1	
		/ATTACHING PARTS/		
-37	MS27039-1-05	. . SCREW.....	2	
		-----★-----		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

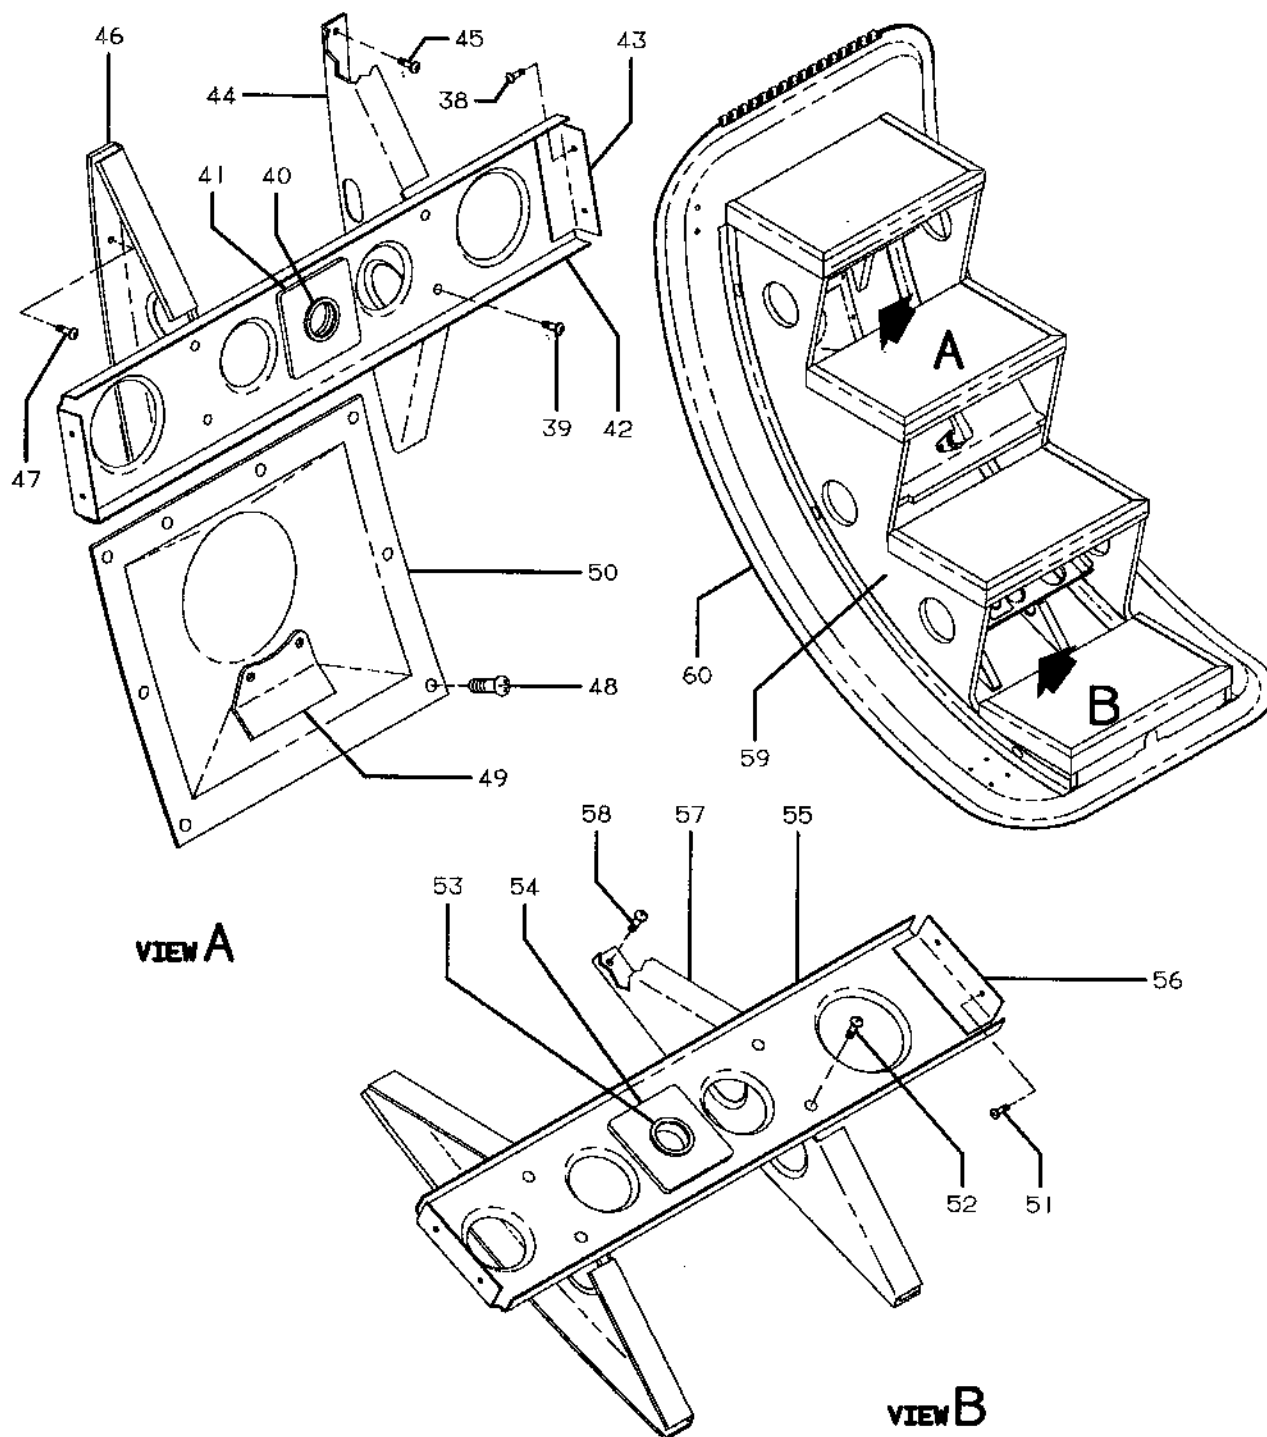


C93NC62M4681 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-430043-59	... SUPPORT ASSY	1	
		/ATTACHING PARTS/		
- 38	MS27039-1-05	... SCREW	4	
- 39	MS27039-1-07	... SCREW	4	
		-----★-----		
- 40	NAS77A12-25	... BUSHING	1	
- 41	122-430043-29	... PLATE	1	
- 42	122-430043-61	... CHANNEL	1	
- 43	122-430043-15	... ANGLE	2	
- 44	122-430043-5	... SUPPORT ASSY	1	
		/ATTACHING PARTS/		
- 45	MS27039-1-05	... SCREW	6	
		-----★-----		
	MS21069L3	... NUTPLATE	2	
- 46	122-430043-43	... SUPPORT ASSY	1	
		/ATTACHING PARTS/		
- 47	MS27039-1-05	... SCREW	4	
		-----★-----		
	MS21069L3	... NUTPLATE	2	
	122-430043-39	... PAN ASSY, AIRSTAIR DOOR PRESSURE LOCK	1	11
	122-430043-601	... PAN ASSY, AIRSTAIR DOOR PRESSURE LOCK	1	12
		/ATTACHING PARTS/		
- 48	MS27039-1-05	... SCREW	10	
		-----★-----		
- 49	122-430043-33	... ANGLE ASSY	1	
	MS21073-3	... NUTPLATE	2	
- 50	122-430043-37	... PAN	1	
	122-430044-621	... LOCK ASSY	1	12
	122-430043-55	... SUPPORT ASSY	1	
		/ATTACHING PARTS/		
- 51	MS27039-1-05	... SCREW	4	
- 52	MS27039-1-07	... SCREW	4	
		-----★-----		
- 53	NAS77A12-25	... BUSHING	1	
- 54	122-430043-29	... PLATE	1	
- 55	122-430043-57	... CHANNEL	1	
- 56	122-430043-15	... ANGLE	2	
- 57	122-430043-13	... SUPPORT ASSY	2	
		/ATTACHING PARTS/		
- 58	MS27039-1-05	... SCREW	6	
		-----★-----		
	MS21069L3	... NUTPLATE	2	
- 59	122-430042-1	... SUPPORT ASSY, STEP/BONDED/	1	
	SL607-06-8CM	... INSERT	1	
	SL607-08-6CM	... INSERT	4	
	465HE1032-07	... INSERT	8	
	E632	... WELLNUT	8	
	2R230	... PLUSNUT	4	
	2R2329	... PLUSNUT	2	
	MS21051L06	... NUTPLATE	2	
- 60	122-430041-17	... SHELL ASSY, CABIN AIRSTAIR DOOR/BONDED/	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

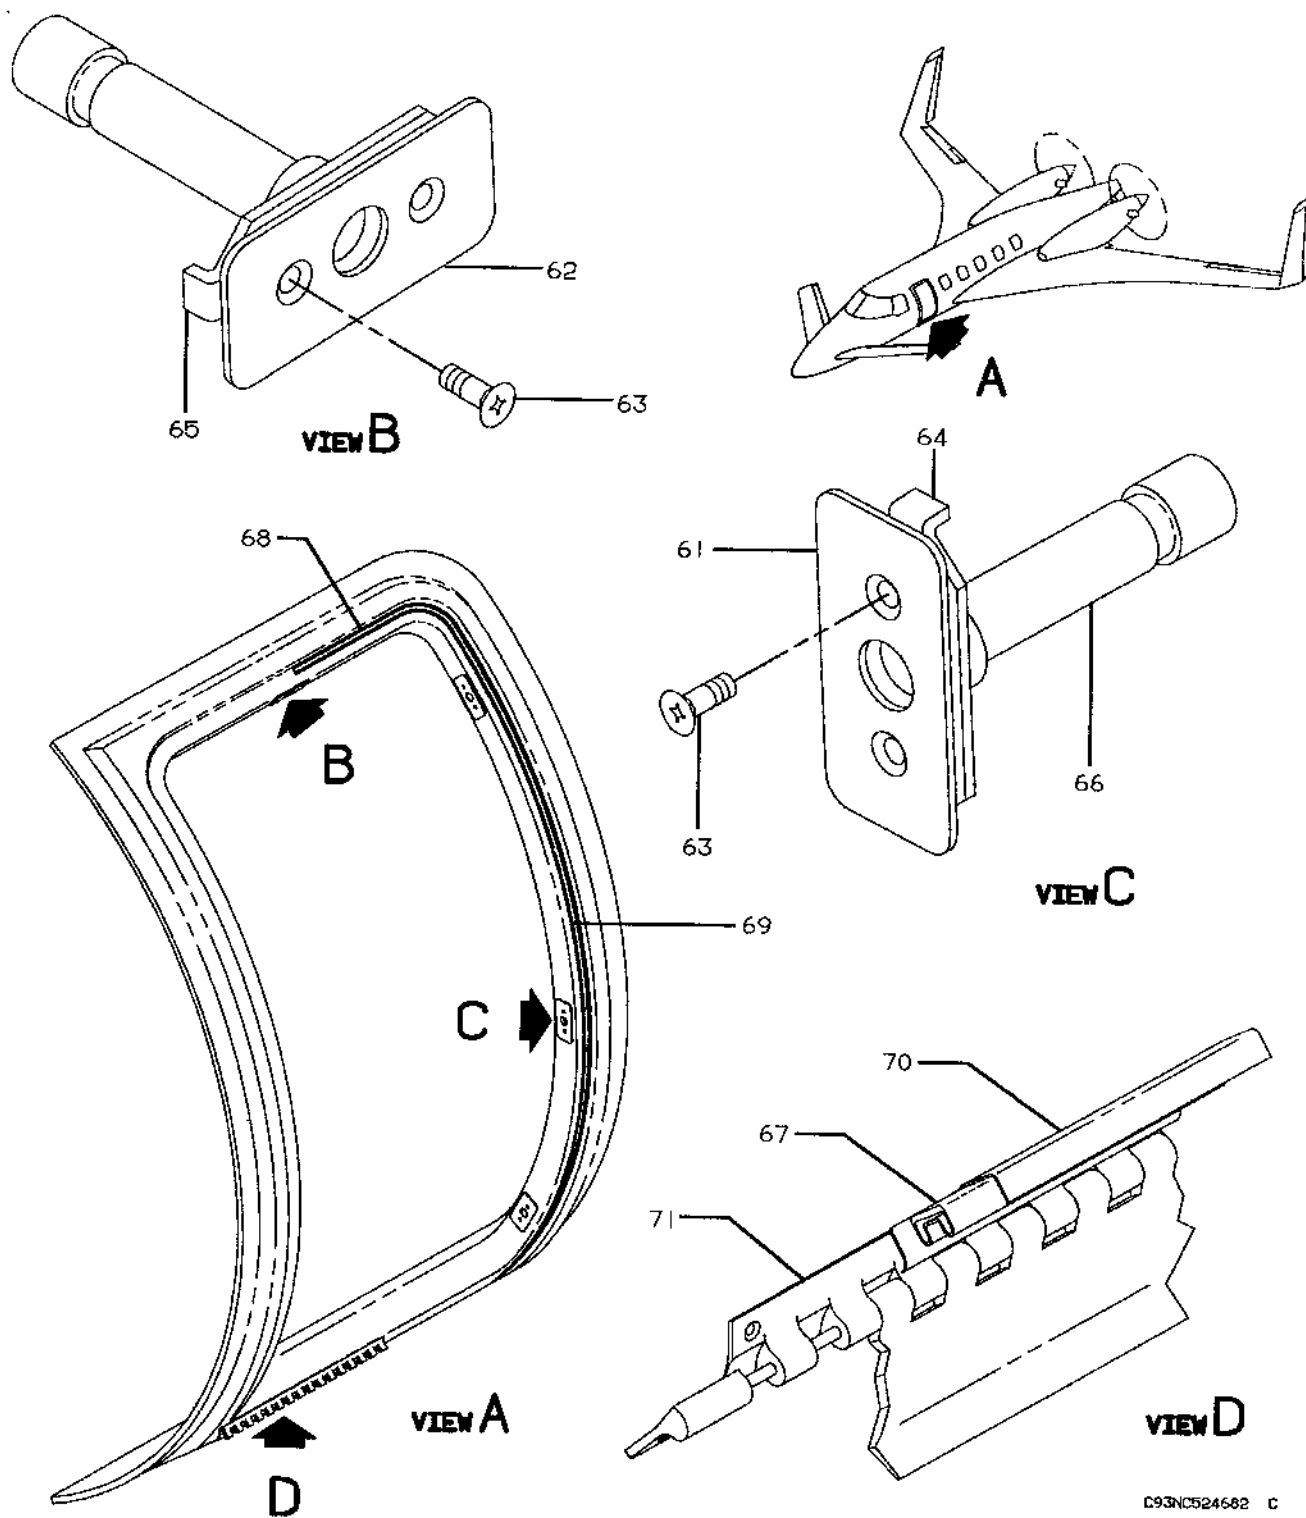

C93NC524682 C

FIGURE 10-00.CABIN AIRSTAIR DOOR
/SHEET 4 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-430110-1	FRAME INSTL, CABIN AIRSTAIR DOOR/BONDED/.....	NP	9
	122-430110-25	FRAME INSTL, CABIN AIRSTAIR DOOR/BONDED/.....	NP	10
- 61	122-430112-31	. STRIKER, SERRATED/ORDER 122-430112-59	NP	7
		FOR SPARES/.....		
	122-430112-59	. STRIKER, SERRATED.....	6	8
- 62	122-430112-35	. STRIKER, SERRATED/UPPER CENTER/ORDER	NP	7
		122-430112-61 FOR SPARES/.....		
	122-430112-61	. STRIKER, SERRATED/UPPER CENTER/	1	8
		/ATTACHING PARTS/.....		
- 63	MS24694S102	. SCREW.....	2	9
	MS24694C103	. SCREW.....	2	10
		-----★-----		
	122-430112-37	. PLATE, SERRATED.....	7	9
	122-430112-57	. PLATE, SERRATED.....	7	10
- 64	122-430112-43	. RETAINER ASSY.....	6	
- 65	122-430112-45	. RETAINER ASSY/UPPER CENTER/.....	1	
	MS21075L4	. NUTPLATE.....	2	
- 66	122-430112-17	. TUBE, PIN LOCK INDICATION SWITCH.....	6	13
	122-430112-55	. TUBE, PIN LOCK INDICATION SWITCH.....	6	14
- 67	122-380067-1	. SEAL, DOOR/INFLATABLE/	1	
- 68	122-430115-7	. RETAINER, SEAL/TOP/.....	1	
- 69	122-430115-11	. RETAINER, SEAL/SIDE/.....	2	
- 70	122-430115-9	. RETAINER, SEAL/BOTTOM/.....	1	
- 71	122-430113-3	. HINGE HALF.....	1	1
	122-430113-7	. HINGE HALF.....	1	2


CODES OF EFFECTIVITY

1	NC-4 THRU NC-26	2	NC-27 AND AFTER
3	NC-4 THRU NC-18	4	NC-19 AND AFTER
5	NC-4 THRU NC-21	6	NC-22 AND AFTER
7	NC-4 THRU NC-32	8	NC-33 AND AFTER
9	NC-4 THRU NC-53	10	NC-54 AND AFTER
11	NC-4 THRU NC-11	12	NC-12 AND AFTER
13	NC-4 THRU NC-24	14	NC-25 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

52-10-10
CABIN AIRSTAIR DOOR LATCH MECHANISM

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

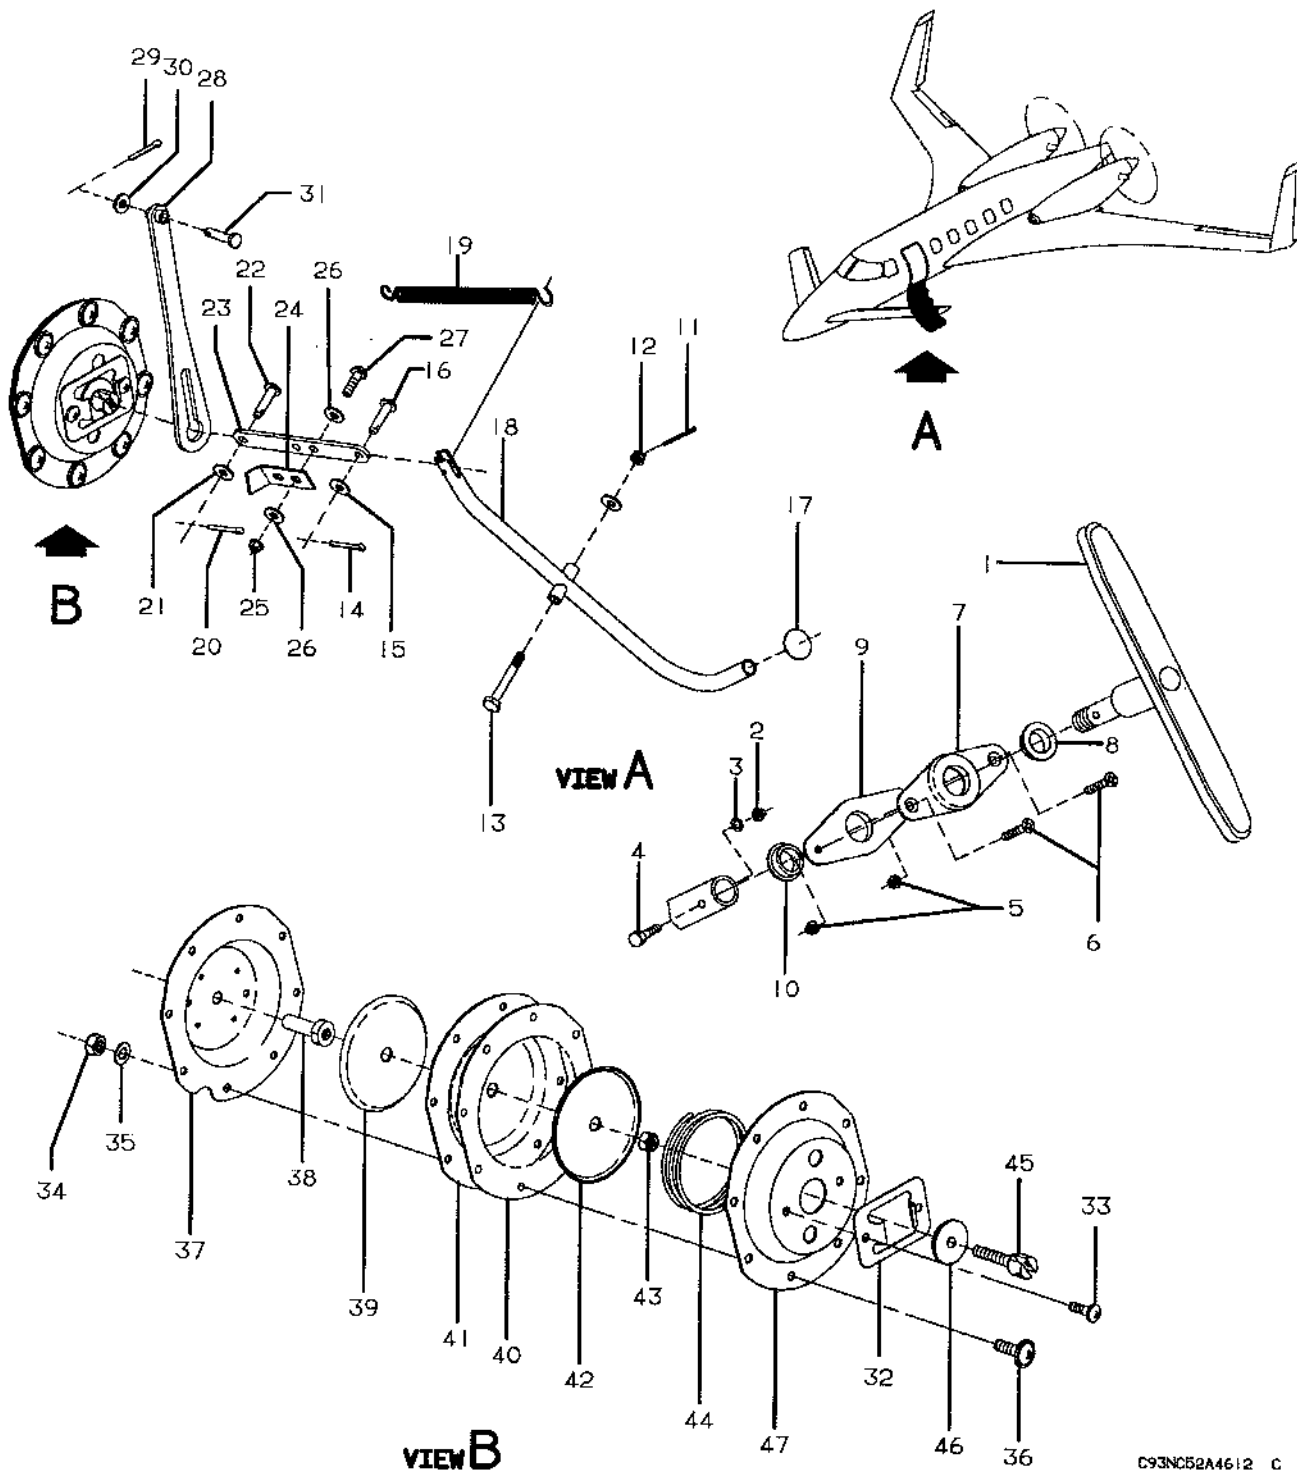


C93NC52A4612 C

FIGURE 10-10. CABIN AIRSTR DOOR LATCH MECHANISM
/SHEET 1 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	122-430050-21	MECHANISM INSTL, CABIN AIRSTAIR DOOR LATCH	NP	
- 1	122-430050-23	. HANDLE, INSIDE DOOR.....	1	
		/ATTACHING PARTS/		
- 2	130909N49	. NUT	2	
- 3	AN960-10	. WASHER	2	
- 4	130909B23	. BOLT	2	
		---★---		
- 5	130909N49	. NUT	2	
- 6	MS24694S61	. SCREW	2	
- 7	122-430062-5	. SUPPORT ASSY	1	
- 8	NAS77A10-18	. BUSHING	1	
- 9	122-430062-3	. SUPPORT ASSY	1	
- 10	NAS77A12-21	. BUSHING	1	
- 11	MS24665-132	. PIN, COTTER	1	
- 12	MS17825-3	. NUT	1	
- 13	AN3-14	. BOLT	1	
- 14	MS24665-132	. PIN, COTTER	1	
- 15	AN960-4L	. WASHER	1	
- 16	MS20392-1C17	. PIN	1	
- 17	122-430050-29	. BUTTON	1	
- 18	122-430065-25	. TUBE ASSY, WELDED	1	
- 19	100942L0200-48	. SPRING	2	
	122-430065-13	. LINK ASSY	1	
		/ATTACHING PARTS/		
- 20	MS24665-132	. PIN, COTTER	1	
- 21	AN960-4L	. WASHER	1	
- 22	MS20392-1C17	. PIN	1	
		---★---		
- 23	122-430065-9	. LINK	1	
- 24	122-430065-15	. CLIP	1	
		/ATTACHING PARTS/		
- 25	130909N28	. NUT	2	
- 26	AN960-8	. WASHER	4	
- 27	MS27039-0809	. SCREW	2	
		---★---		
- 28	122-430066-7	. LINK ASSY	1	
- 29	MS24665-172	. PIN, COTTER	1	
- 30	AN960-10L	. WASHER	AR	
- 31	MS20392-2C23	. PIN, CLEVIS	1	
- 32	122-430044-17	. GUIDE	1	
		/ATTACHING PARTS/		
- 33	MS35206-227	. SCREW	2	
		---★---		
	122-430044-21	. LOCK ASSY, AIR PRESSURE ACTUATED	1	
		/ATTACHING PARTS/		
	AN525-10R8	. SCREW	2	
		---★---		
- 34	130909N29	. NUT	6	
- 35	AN960PD10	. WASHER	6	
- 36	AN525-10R8	. SCREW	6	
- 37	50-430168-13	. COVER	1	
- 38	122-430044-23	. NUT	1	
- 39	50-430024-7	. SUPPORT	1	
- 40	122-430044-13	. SPACER	1	
- 41	50-430026-3	. SEAL	1	
- 42	50-430024-9	. SUPPORT	1	
- 43	AN316-4R	. NUT	1	
- 44	111504YZ0200-1*	1/2 . SPRING	1	
- 45	122-430044-5	. BOLT	1	
- 46	102-430284-7	. BUSHING	1	
	MS21075L06	. NUTPLATE	2	
- 47	122-430044-3	. COVER	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

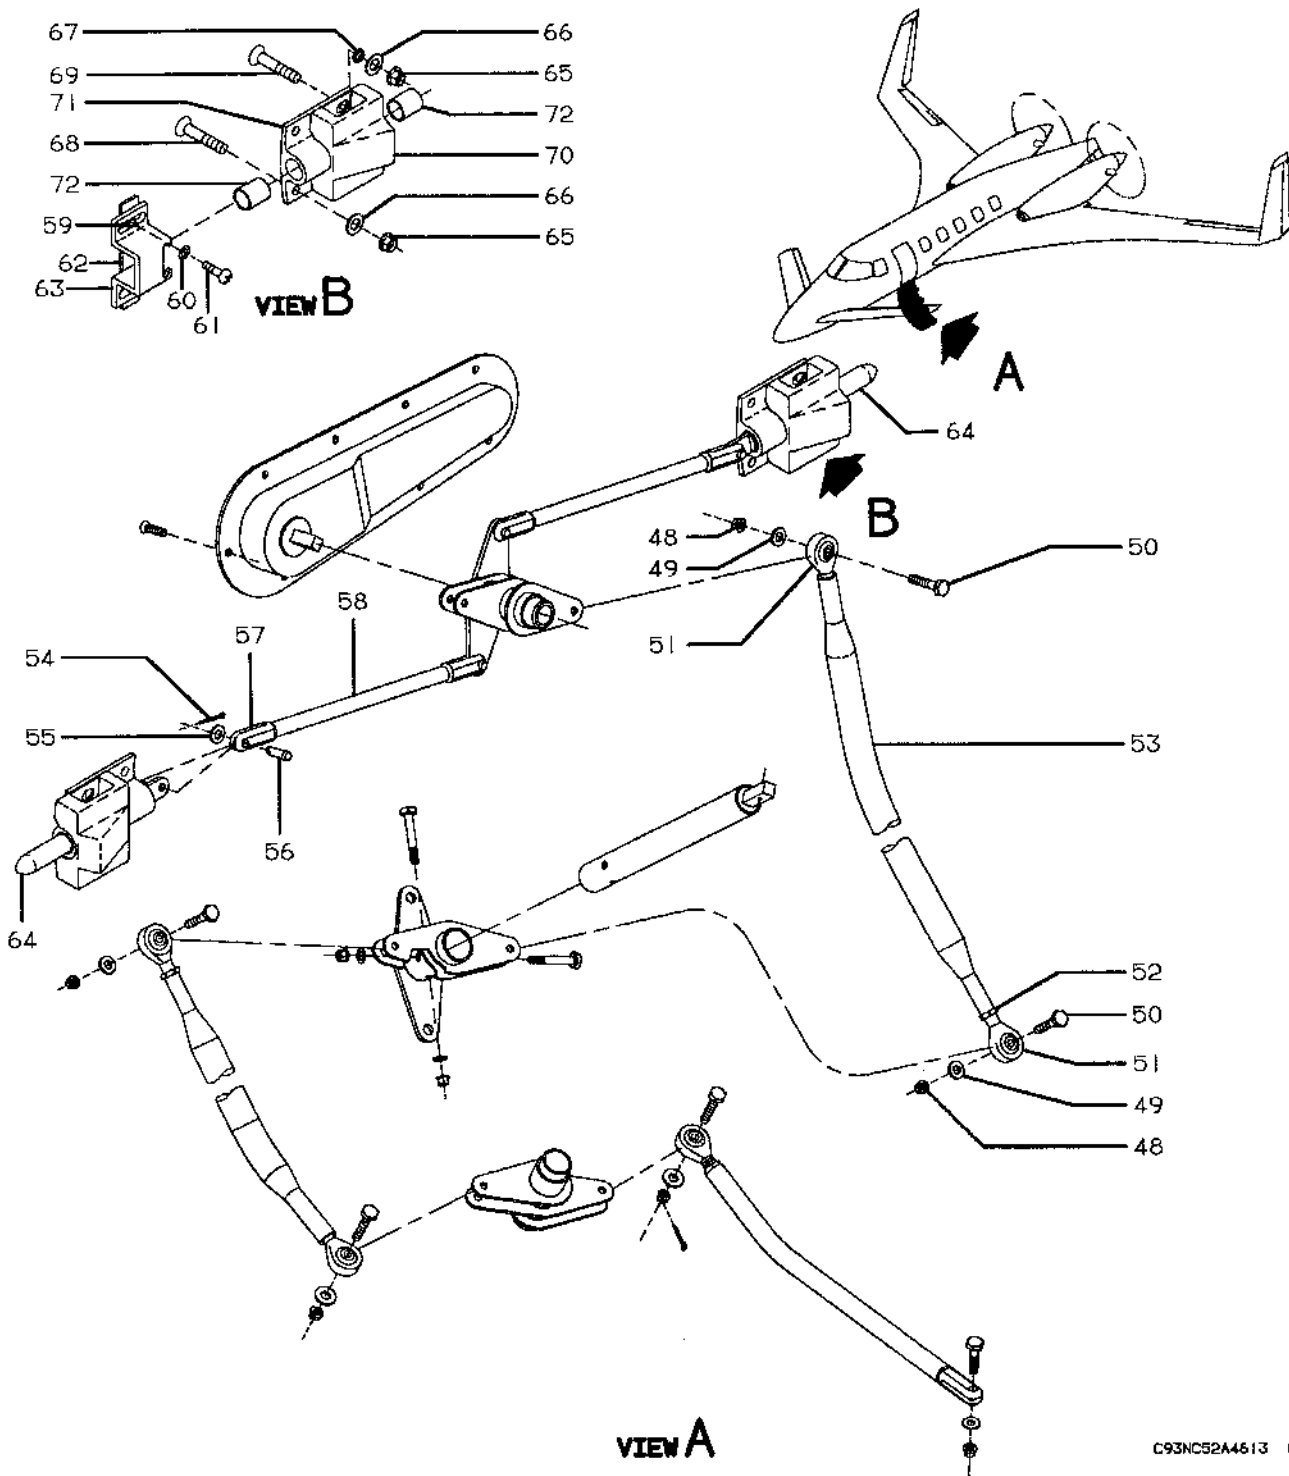

C93NC52A4613 C

FIGURE 10-10.CABIN AIRSTAIR DOOR LATCH MECHANISM
/SHEET 2 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	122-430055-1	. PUSHROD ASSY	1	
		. /ATTACHING PARTS/		
- 48	130909N49	. NUT	2	
- 49	AN960-10	. WASHER	2	
- 50	130909B20	. BOLT	2	
		---★---		
- 51	M81935/1-3	. BEARING	2	
- 52	130909N14	. NUT, JAM	1	
- 53	122-430055-9	. TUBE	1	
	122-430058-3	. PUSHROD ASSY	4	
		. /ATTACHING PARTS/		
- 54	MS24665-132	. PIN, COTTER	2	
- 55	AN960-10L	. WASHER	2	
- 56	MS20392-2C17	. PIN	2	
		---★---		
- 57	122-430055-7	. FITTING	2	
- 58	122-430058-9	. TUBE	1	
- 59	2R2330	. PLUSNUT	12	
- 60	AN960JD8	. WASHER	12	
- 61	MS27039C0809	. SCREW	12	
- 62	122-430050-31	. SHIM	1	5
- 63	122-430044-19	. BRACKET	6	
- 64	122-430057-1	. PIN/FOR SPARES ORDER 122-430057-7/	NP	1
	122-430057-7	. PIN	4	2
- 65	130909N30	. NUT	16	
- 66	AN960-416L	. WASHER/ALTERNATE FOR AN960-416/	AR	
	AN960-416	. WASHER/ALTERNATE FOR AN960-416L/	AR	
- 67	NAS43HT4-4	. SPACER/OUTBD/	8	
- 68	SFH22-4A20	. BOLT/INBD/	8	
- 69	SFH22-4A21	. BOLT/OUTBD/	8	
- 70	122-430050-5	. GUIDE	4	
- 71	122-430063-19	. HOUSING ASSY, FWD & AFT LATCH PIN	NP	3
		. /FOR SPARES ORDER 122-430063-21/		
	122-430063-21	. HOUSING ASSY, FWD & AFT LATCH PIN	4	4
- 72	08DU14	. BUSHING	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


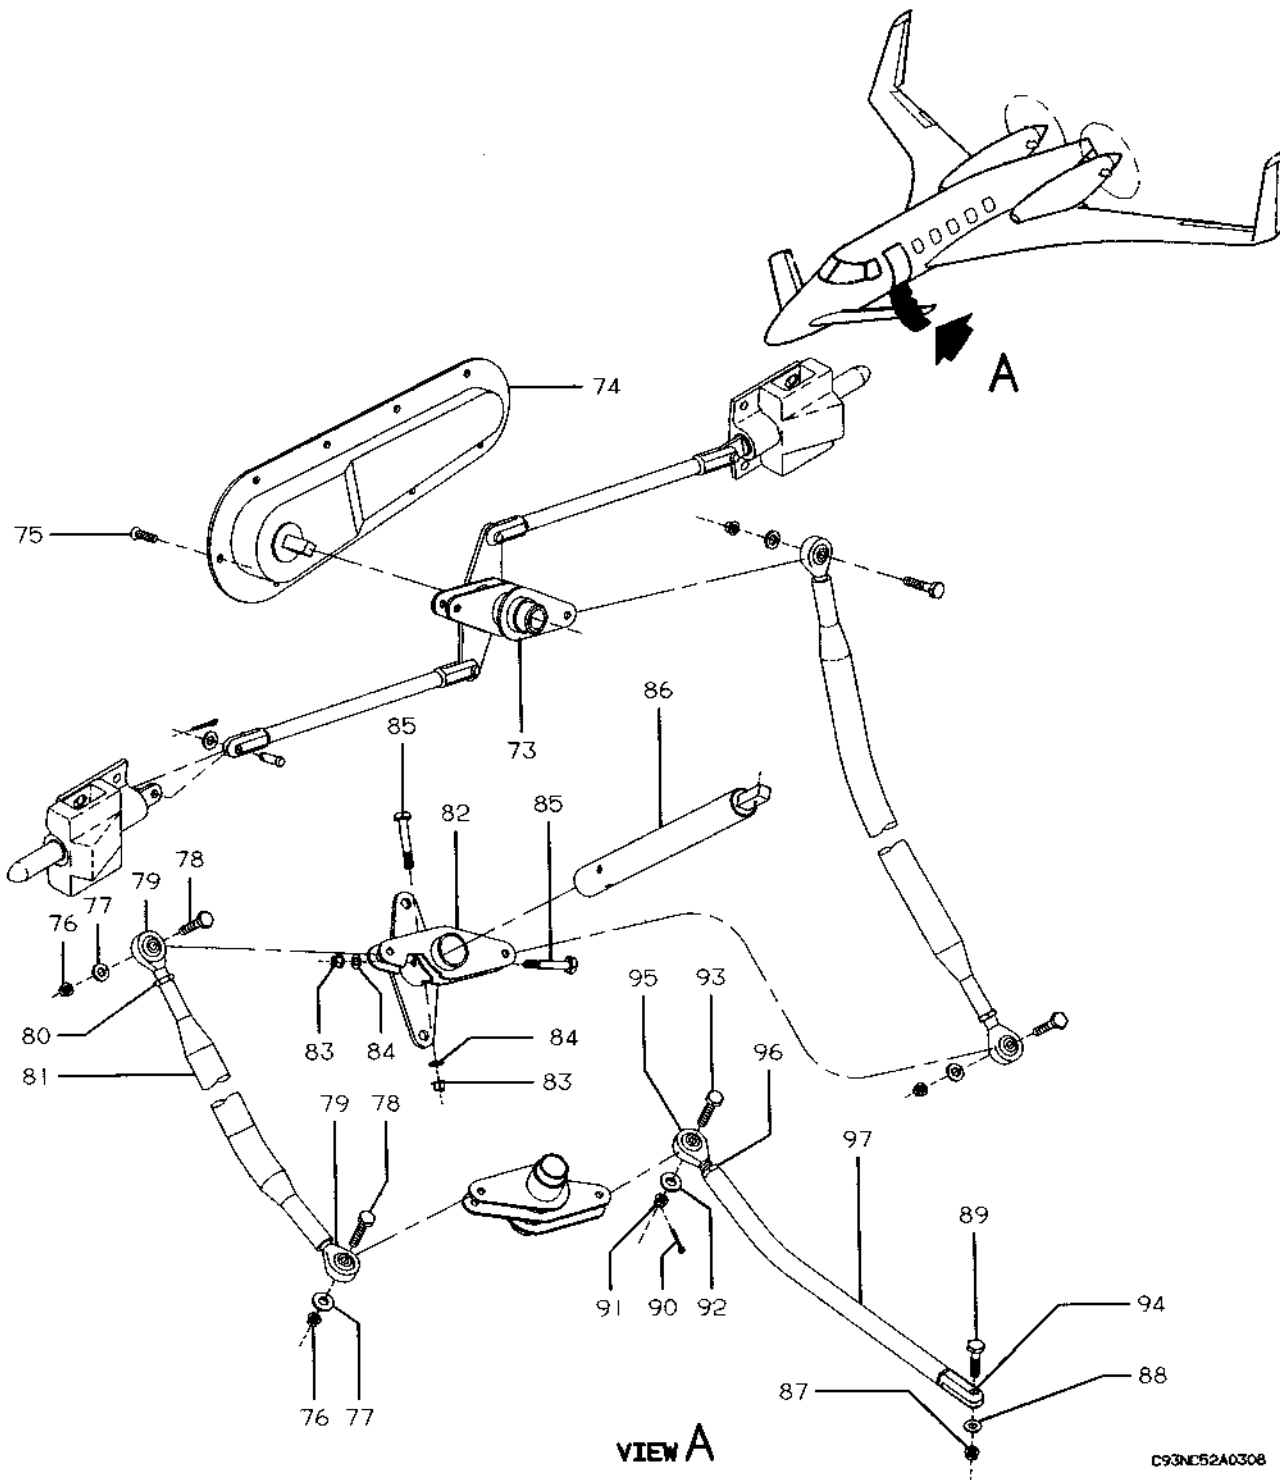


FIGURE 10-10.CABIN AIRSTR DOOR LATCH MECHANISM
/SHEET 3 OF 4 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 - 73	122-430051-5	. BELLCRANK ASSY.....	1	
- 74	122-380022-5	. HANDLE ASSY, DOOR OUTSIDE FLUSH/ORDER	1	
		. HANDLE ASSY FOR KEY LOCK ASSY/ /ATTACHING PARTS/		
- 75	MS24894S48	. SCREW.....	9	
		-----★-----		
	H605-163-092-20	. PLUG, LOCK	1	
	122-430055-3	. PUSHROD ASSY	1	
		. /ATTACHING PARTS/		
- 76	130909N49	. NUT	2	
- 77	AN960-10	. WASHER	2	
- 78	130909B20	. BOLT	2	
		-----★-----		
- 79	M81935/1-3	. BEARING.....	2	
- 80	130909N14	. NUT	1	
- 81	122-430055-11	. TUBE	1	
- 82	122-430052-5	. BELLCRANK ASSY/WELDED/.....	1	
		. /ATTACHING PARTS/		
- 83	130909N49	. NUT	2	
- 84	AN960C10L	. WASHER	2	
- 85	130909B23	. BOLT	2	
		-----★-----		
- 86	122-430067-7	. SHAFT ASSY	1	
	122-430055-5	. PUSHROD ASSY	1	
		. /ATTACHING PARTS/		
- 87	130909N49	. NUT	1	
- 88	AN960-10L	. WASHER	1	
- 89	130909B20	. BOLT	1	
- 90	MS24665-132	. PIN, COTTER	1	
- 91	MS17825-3	. NUT	1	
- 92	AN960-10L	. WASHER	1	
- 93	130909B18	. BOLT	1	
		-----★-----		
- 94	122-430055-7	. FITTING	1	
- 95	M81935/1-3	. BEARING.....	1	
- 96	130909N14	. NUT	1	
- 97	122-430055-13	. TUBE	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

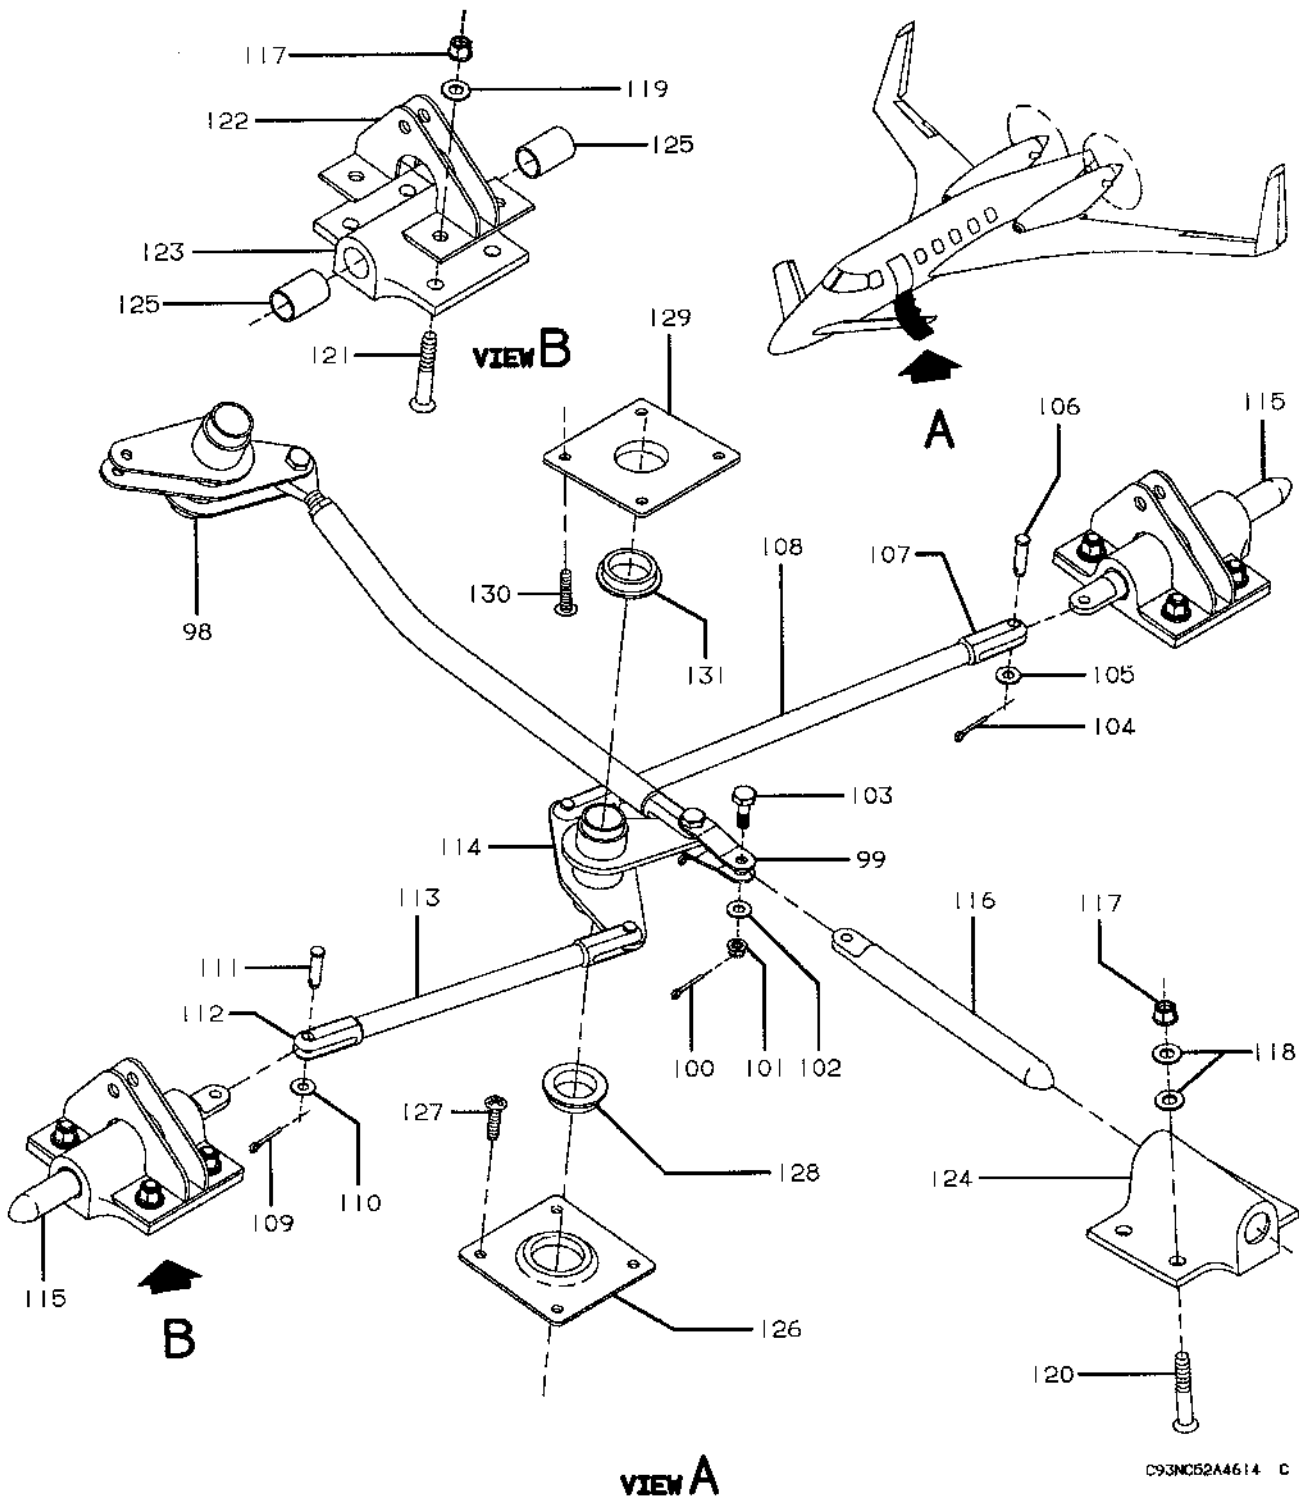

C93NC52A4614 C

FIGURE 10-10. CABIN AIRSTAIR DOOR LATCH MECHANISM
/SHEET 4 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 -98	122-430053-1	. BELLCRANK ASSY/WELDED/.....	1	
-99	122-430050-3	. CLIP.....	2	
		. /ATTACHING PARTS/.....		
-100	MS24665-132	. PIN, COTTER	1	
-101	MS17825-3	. NUT	1	
-102	AN960-10L	. WASHER	1	
-103	AN3-5	. BOLT	1	
		-----★-----		
	122-430056-1	. PUSHROD ASSY	1	
		. /ATTACHING PARTS/.....		
-104	MS24665-132	. PIN, COTTER	2	
-105	AN960-10L	. WASHER	2	
-106	MS20392-2C17	. PIN	2	
		-----★-----		
-107	122-430055-7	. . FITTING	2	
-108	122-430056-7	. . TUBE	1	
	122-430056-5	. PUSHROD ASSY	1	
		. /ATTACHING PARTS/.....		
-109	MS24665-132	. PIN, COTTER	2	
-110	AN960-10L	. WASHER	2	
-111	MS20392-2C17	. PIN	2	
		-----★-----		
-112	122-430055-7	. . FITTING	2	
-113	122-430056-11	. . TUBE	1	
-114	122-430054-1	. BELLCRANK ASSY, LOWER PINS/WELDED/	1	
-115	122-430057-1	. PIN/FOR SPARES ORDER 122-430057-7/	NP	1
	122-430057-7	. PIN	2	2
-116	122-430057-5	. PIN	1	
-117	130909N30	. NUT	12	
-118	AN960-416	. WASHER/UPPER CENTER LATCH HOUSING/	8	
-119	AN960-416L	. WASHER/UPR FWD & AFT LATCH HOUSINGS/	8	
-120	SFH22-4A20	. BOLT/UPPER CENTER LATCH HOUSING/	4	
-121	SFH22-4A21	. BOLT/UPR FWD & AFT LATCH HOUSINGS/	8	
-122	122-430039-1	. BRACKET, DOOR HANDRAIL	2	
-123	122-430063-19	. HOUSING ASSY, FWD & AFT LATCH PIN	NP	3
		. /FOR SPARES ORDER 122-430063-21/		
	122-430063-21	. HOUSING ASSY, FWD & AFT LATCH PIN	2	4
-124	122-430064-19	. HOUSING ASSY, UPR CTR LATCH PIN	1	
-125	08DU14	. BUSHING	2	
-126	122-430062-1	. SUPPORT ASSY	1	
		. /ATTACHING PARTS/.....		
-127	MS27039-1-05	. SCREW	4	
		-----★-----		
-128	NAS77A12-18	. . BUSHING	1	
-129	122-430062-7	. SUPPORT ASSY	3	
		. /ATTACHING PARTS/.....		
-130	MS27039-1-05	. SCREW	4	
		-----★-----		
-131	NAS77A12-18	. . BUSHING	1	

CODES OF EFFECTIVITY


1	NC-4 THRU NC-32	2	NC-33 AND AFTER
3	NC-4 THRU NC-37	4	NC-38 AND AFTER
5	NC-18 AND AFTER		

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

52-10-20
AIRSTAIR DOOR SEAL PLUMBING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

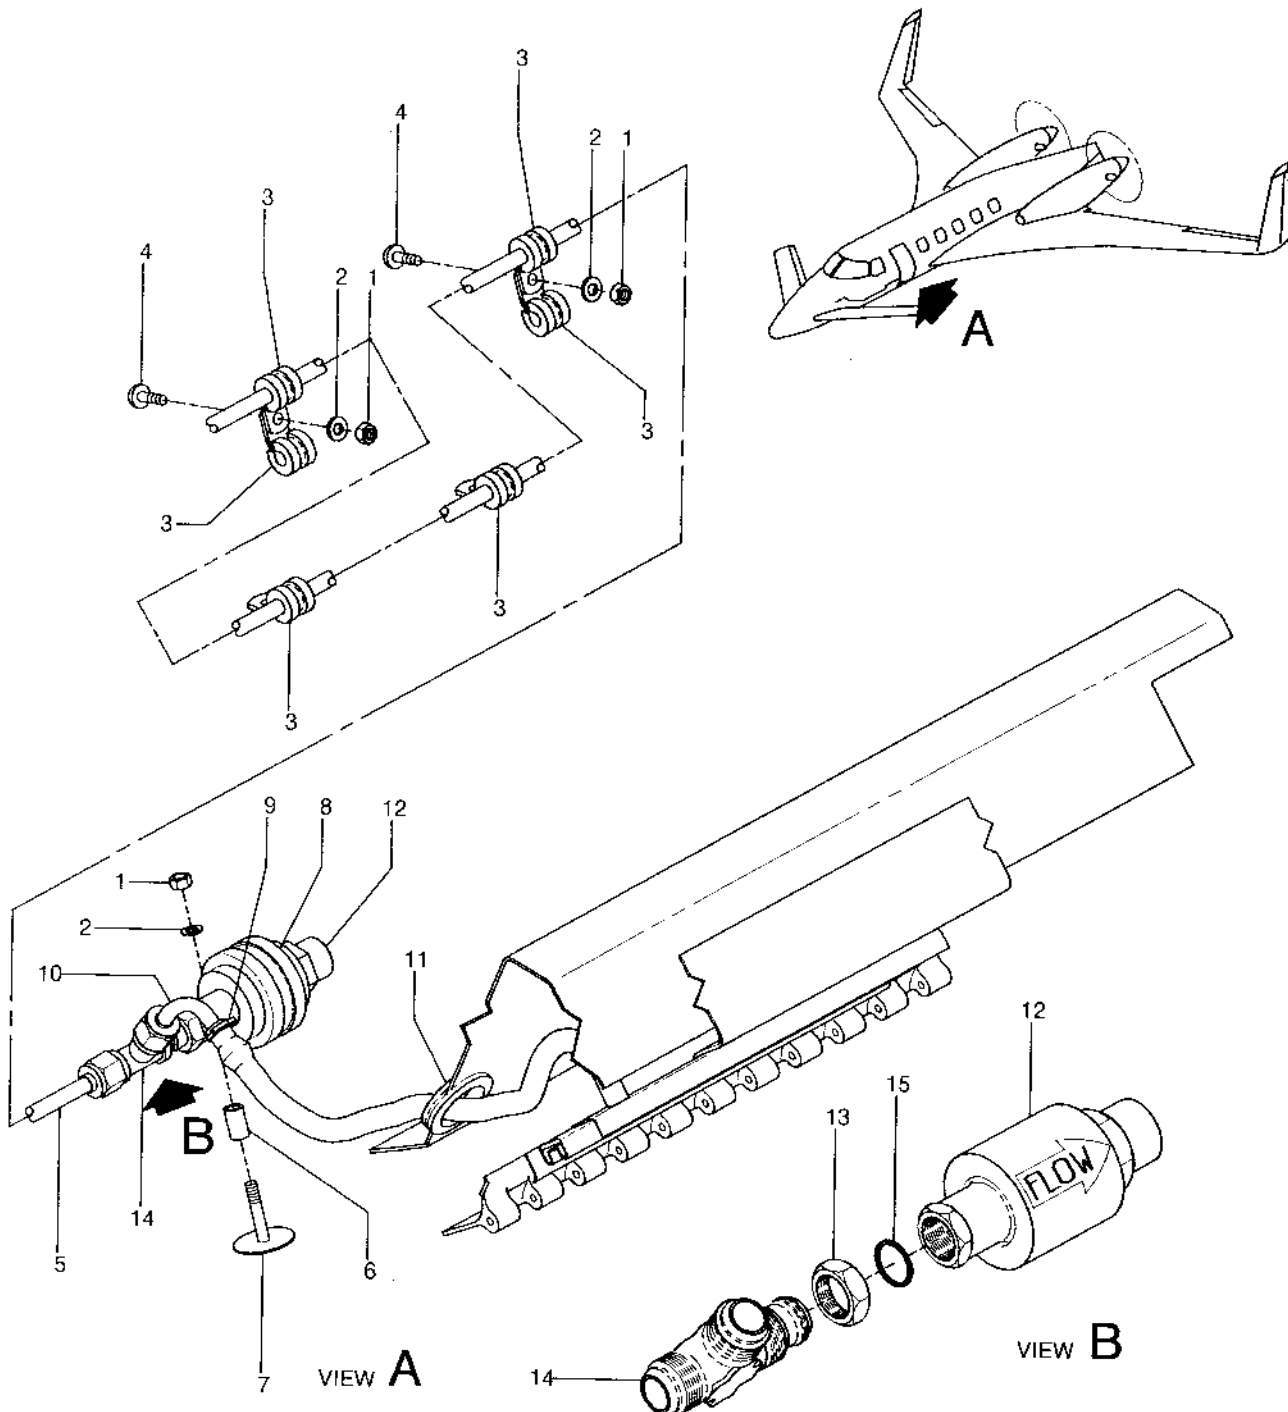

2000-104-33

FIGURE 10-20. AIRSTAIR DOOR SEAL PLUMBING


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20	122-540077-1	PLUMBING INSTL, AIRSTAIR DOOR SEAL	NP	
- 1	130909N29	. NUT	3	
- 2	AN960-10L	. WASHER	3	
- 3	MS21919WDG4	. CLAMP	6	
- 4	MS35207-263	. SCREW	2	
- 5	122-540109-1	. TUBE ASSY/FROM PNEUMATIC AIR PLUMBING/	1	
- 6	NAS43DD3-32	. SPACER	1	
- 7	132131-3-8	. STUD	1	
- 8	MS21919WDG20	. CLAMP	1	
- 9	131466SNP2	. CLAMP	1	
-10	122-540042-9	. TUBE ASSY	1	
-11	MS35489-12	. GROMMET	1	
NOTE SEE CHAPTER 52-10-00 FOR AIRSTAIR DOOR SEAL AND RETAINERS.				
-12	101-380018-7	. VALVE, SOLENOID/ALTERNATE FOR 101-380018-3/	1	
	101-380018-3	. VALVE, SOLENOID/ALTERNATE FOR 101-380018-7/	1	
-13	AN924-4D	. NUT	1	
-14	122-540043-15	. TEE, RESTRICTOR	1	
-15	MS28778-4	. PACKING, PREFORMED	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

52-20-00
EMERGENCY EXIT DOOR

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

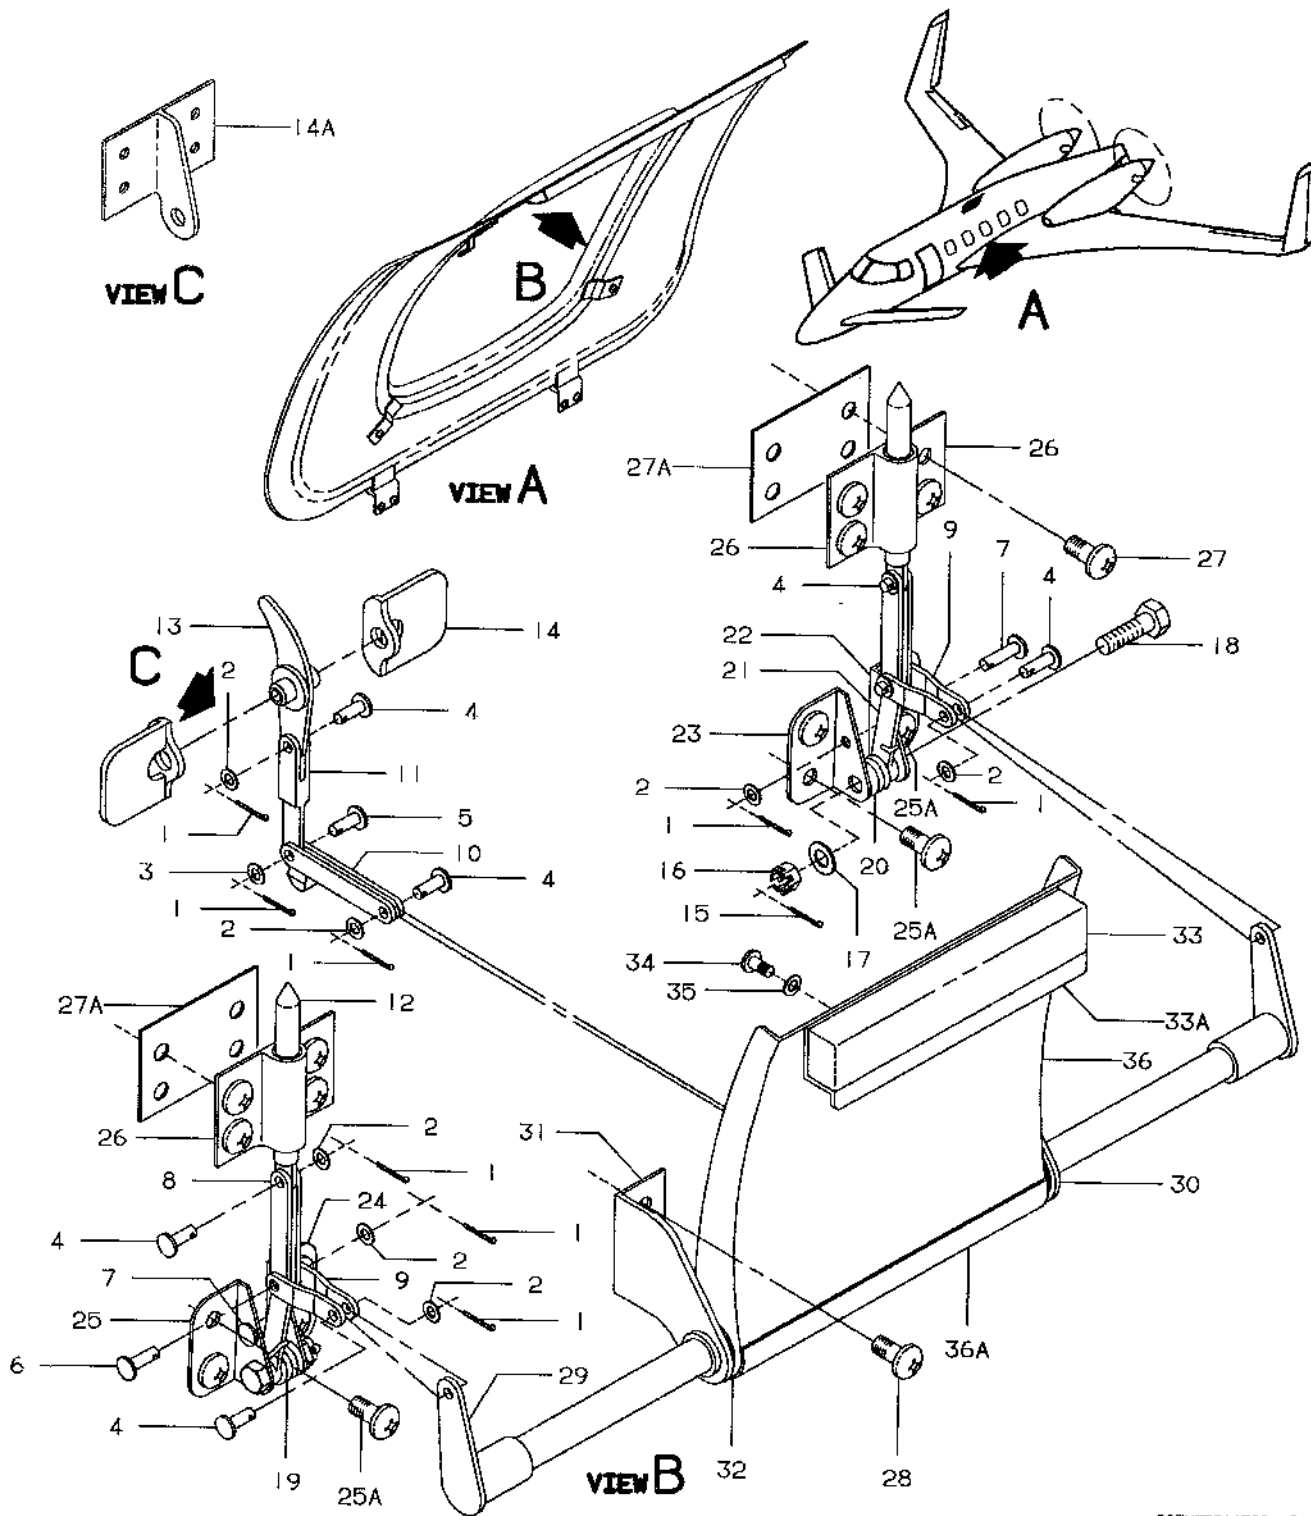

C93NC32A4589 C


FIGURE 20-00. EMERGENCY EXIT DOOR
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-430200-4	DOOR INSTL, EMERGENCY EXIT	NP	
	122-430220-1	.. MECHANISM INSTL, LATCHING	NP	
- 1	MS24665-132	.. PIN, COTTER	11	
- 2	AN960-4L	.. WASHER	8	
- 3	AN960-4	.. WASHER	1	
- 4	MS20392-1C7	.. PIN	6	
- 5	MS20392-1C9	.. PIN	1	
- 6	MS20392-1C11	.. PIN	2	
- 7	MS20392-1C21	.. PIN	2	
- 8	122-430224-7	.. LINK ASSY	2	
- 9	122-430224-11	.. LINK, INTERLOCK	4	
- 10	122-430224-5	.. LINK	2	
- 11	122-430224-3	.. LINK ASSY	1	
- 12	122-430222-1	.. PIN, LATCH/FOR SPARES ORDER 122-430222-3/	NP	1
	122-430222-3	.. PIN, LATCH	2	2
- 13	122-430225-7	.. CAM ASSY	1	3
- 14	122-430226-1	.. SUPPORT ASSY, CAM	2	3
- 14A	122-430220-3	.. SUPPORT	1	4
- 15	MS24665-132	.. PIN, COTTER	2	
- 16	130909N45	.. NUT	2	
- 17	AN960-10L	.. WASHER	2	
- 18	130909B172	.. BOLT	2	
- 19	122-430224-33	.. SPRING	1	
- 20	122-430224-34	.. SPRING	1	
- 21	122-430224-9	.. LINK ASSY	2	
- 22	122-430224-29	.. BRACKET ASSY, WELDED	1	
- 23	122-430224-2	.. BRACKET	1	
- 24	122-430224-1	.. BRACKET	1	
- 25	122-430224-30	.. BRACKET ASSY, WELDED	1	
		.. /ATTACHING PARTS/		
- 25A	MS27039-1-07	.. SCREW	2	
		-----★-----		
- 26	122-430223-1	.. GUIDE ASSY, LATCH PIN	2	
		.. /ATTACHING PARTS/		
- 27	MS27039-1-07	.. SCREW	4	
		-----★-----		
	04DU06	.. BUSHING	2	
- 27A	122-430220-5	.. SHIM, GUIDE ASSY/MAXIMUM 2 EACH LOCATION/	AR	2
	122-430221-23	.. HANDLE ASSY, EMERGENCY EXIT DOOR	1	7
	122-430221-27	.. HANDLE ASSY, EMERGENCY EXIT DOOR	1	8
		.. /ATTACHING PARTS/		
- 28	MS27039-1-07	.. SCREW	4	
		-----★-----		
- 29	122-430221-21	.. ARM ASSY, WELDED	2	
	MS21069L3	.. NUTPLATE	2	
- 30	122-430221-7	.. BRACKET ASSY	1	
	NAS77B6-13	.. BUSHING	1	
- 31	122-430221-8	.. BRACKET ASSY	1	
	NAS77B6-13	.. BUSHING	1	
- 32	AN960-616L	.. WASHER	4	
- 33	CAN/AC/7K	.. MARKER, EXIT-PULL, SELF-LUMINOUS	1	
- 33A	122-430221-25	.. GRIP	1	
		.. /ATTACHING PARTS/		
- 34	MS35206-227	.. SCREW	2	
- 35	AN935-6	.. WASHER	2	
		-----★-----		
- 36	122-430221-3	.. HANDLE ASSY, WELDED	1	7
	122-430221-29	.. HANDLE ASSY, BONDED	1	8
- 36A	122-430221-31	.. STRAP	1	8

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

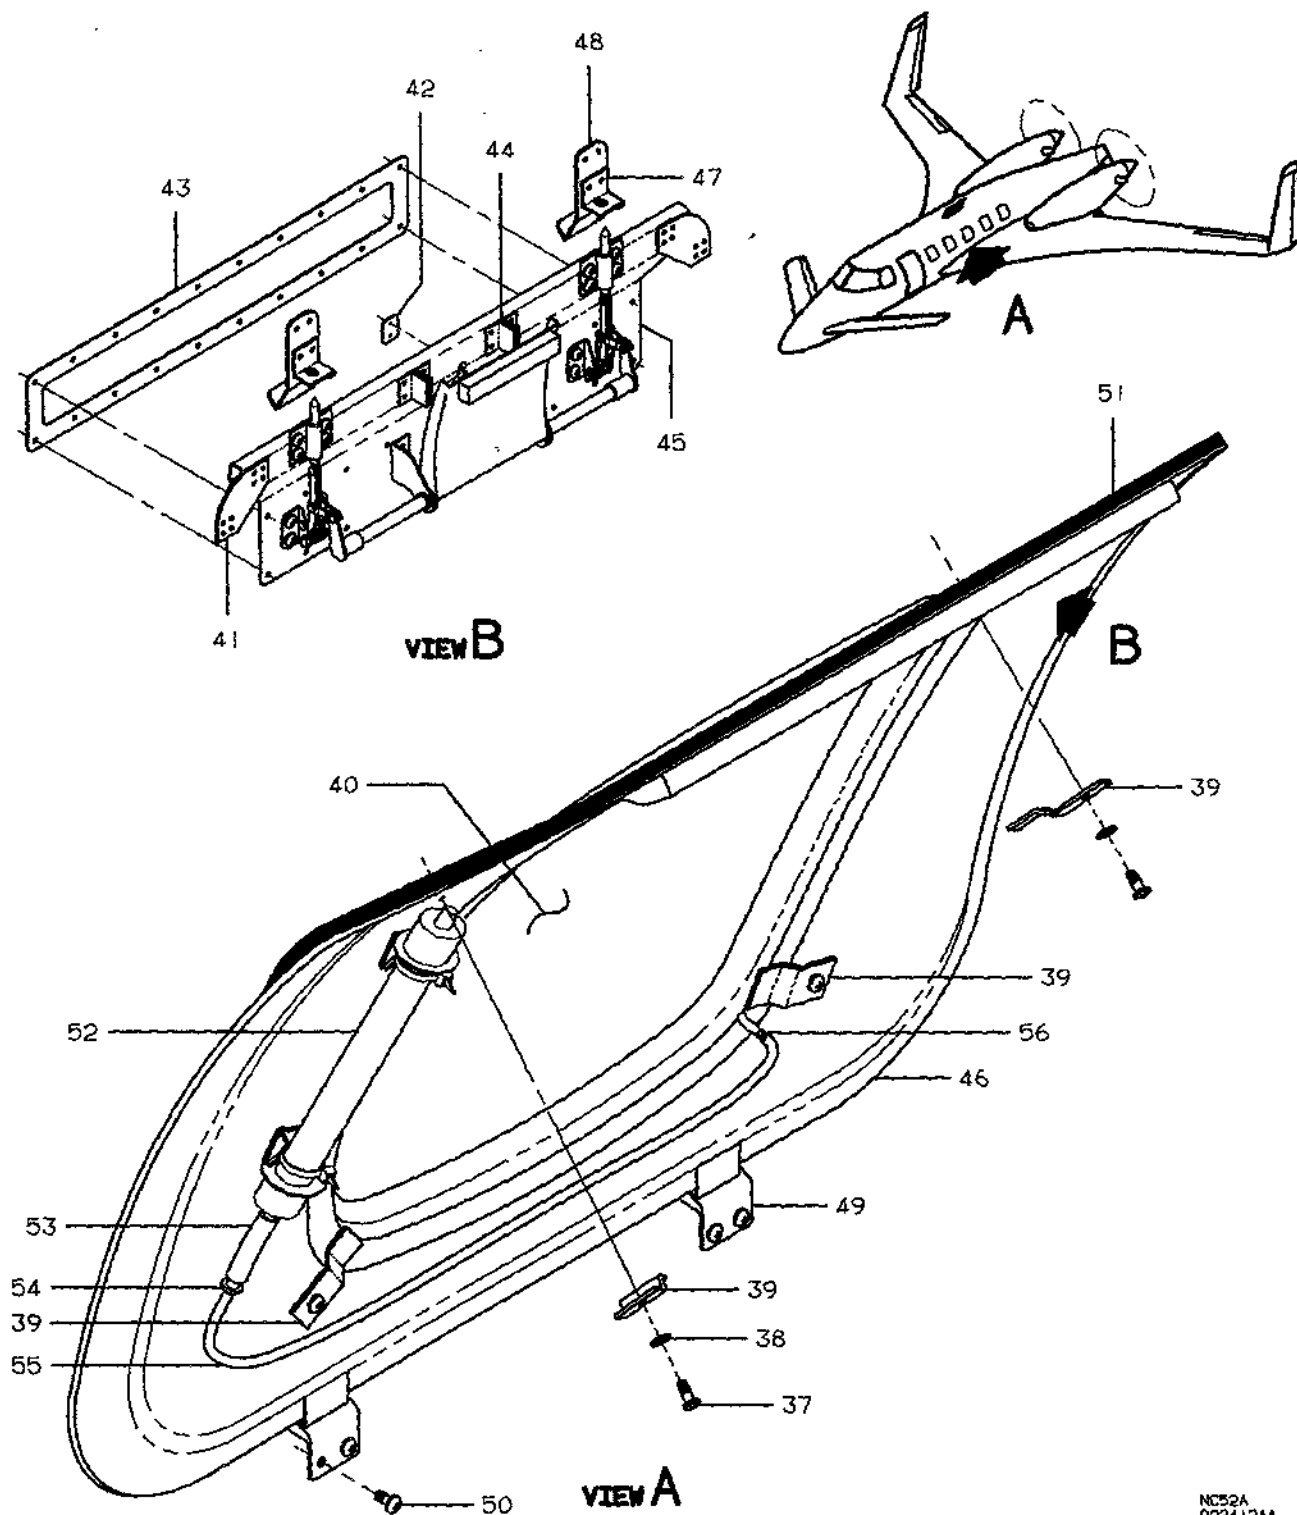

NC52A
002412AA

FIGURE 20-00 . EMERGENCY EXIT DOOR
/SHEET 2 OF 2 SHEETS/

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
20-00	122-430210-56		. STRUCTURE ASSY, EMERGENCY EXIT DOOR	1	5
	122-430210-54		. STRUCTURE ASSY, EMERGENCY EXIT DOOR	1	6
37	MS27039-1-07		. . SCREW	4	
38	AN960JD10L		. . WASHER	4	
39	122-430032-39		. . CLIP ASSY, WINDOW	4	
			/SUPERSEDES 122-430032-3 & -6/		
	S10P175		. . PLUSNUT	4	5
	2R2329		. . PLUSNUT	4	6
40	122-430030-42		. . WINDOW ASSY, EMERGENCY EXIT	1	
			/SUPERSEDES 122-430030-4, -16 & -22/		
41	122-430210-7		. . STRAP	2	
42	122-430210-17		. . SEAL	1	
43	122-430210-5		. . DOUBLER	1	
	MS21047-3		. . NUTPLATE	20	
	122-430210-31		. . PANEL ASSY	1	
44	122-430210-33		. . MAGNET ASSY	2	
	RM50		. . . MAGNET/ALTERNATE FOR 0-6091/	1	
	0-6091		. . . MAGNET/ALTERNATE FOR RM50/	1	
45	122-430210-51		. . PANEL	2	3
	122-430210-67		. . PANEL	2	4
46	122-430210-62		. . DOOR ASSY, BONDED	1	
47	122-430227-3		. FITTING, UPPER SUPPORT/ FOR SPARES ORDER	NP	1
			122-430227-5/		
	122-430227-5		. FITTING, UPPER SUPPORT	2	2
48	122-430228-3		. BRACKET	2	
49	122-430229-7		. HINGE	2	
	122-430220-9		. RETAINER, HINGE/ FS 299.00/	1	2
			(ATTACHING PARTS)		
50	MS27039-1-10		. SCREW	2	1
	MS27039-1-12		. SCREW	2	2
			----- ★ -----		
	SL607-3-8SM		. INSERT	4	
51	130685-13545		. SEAL, EXTRUSION	1	
	122-430200-11		. DAMPER, SOUND/ BONDED/	2	8
	122-430200-13		. DAMPER, SOUND/ BONDED/	2	8
52	26930		. DESSICANT, WINDOW SYSTEM/ EMERGENCY EXIT/	1	
			/WITH KIT 122-5031-1 INSTALLED/		
	MS3367-5-9		. STRAP, TIE	2	
			/WITH KIT 122-5031-1 INSTALLED/		
53	132239-2-X		. TUBING	AR	
			/WITH KIT 122-5031-1 INSTALLED/		
54	3060-9		. FITTING	2	
			/WITH KIT 122-5031-1 INSTALLED/		
55	132239-1-X		. TUBING	AR	
			/WITH KIT 122-5031-1 INSTALLED/		
56	AC-9		. FITTING	1	
			/WITH KIT 122-5031-1 INSTALLED/		

NOTE

122-430030-42 WINDOW ASSY MUST BE
INSTALLED PRIOR TO 122-5031-1
KIT MODIFICATION

CODES OF EFFECTIVITY

1 NC-4 THRU NC-12	2 NC-13 AND AFTER
3 NC-4 THRU NC-14	4 NC-15 AND AFTER
5 NC-4 THRU NC-23	6 NC-24 AND AFTER
7 NC-4 THRU NC-20	8 NC-21 AND AFTER

- END -

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

52-40-00
NOSE AVIONICS ACCESS DOORS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

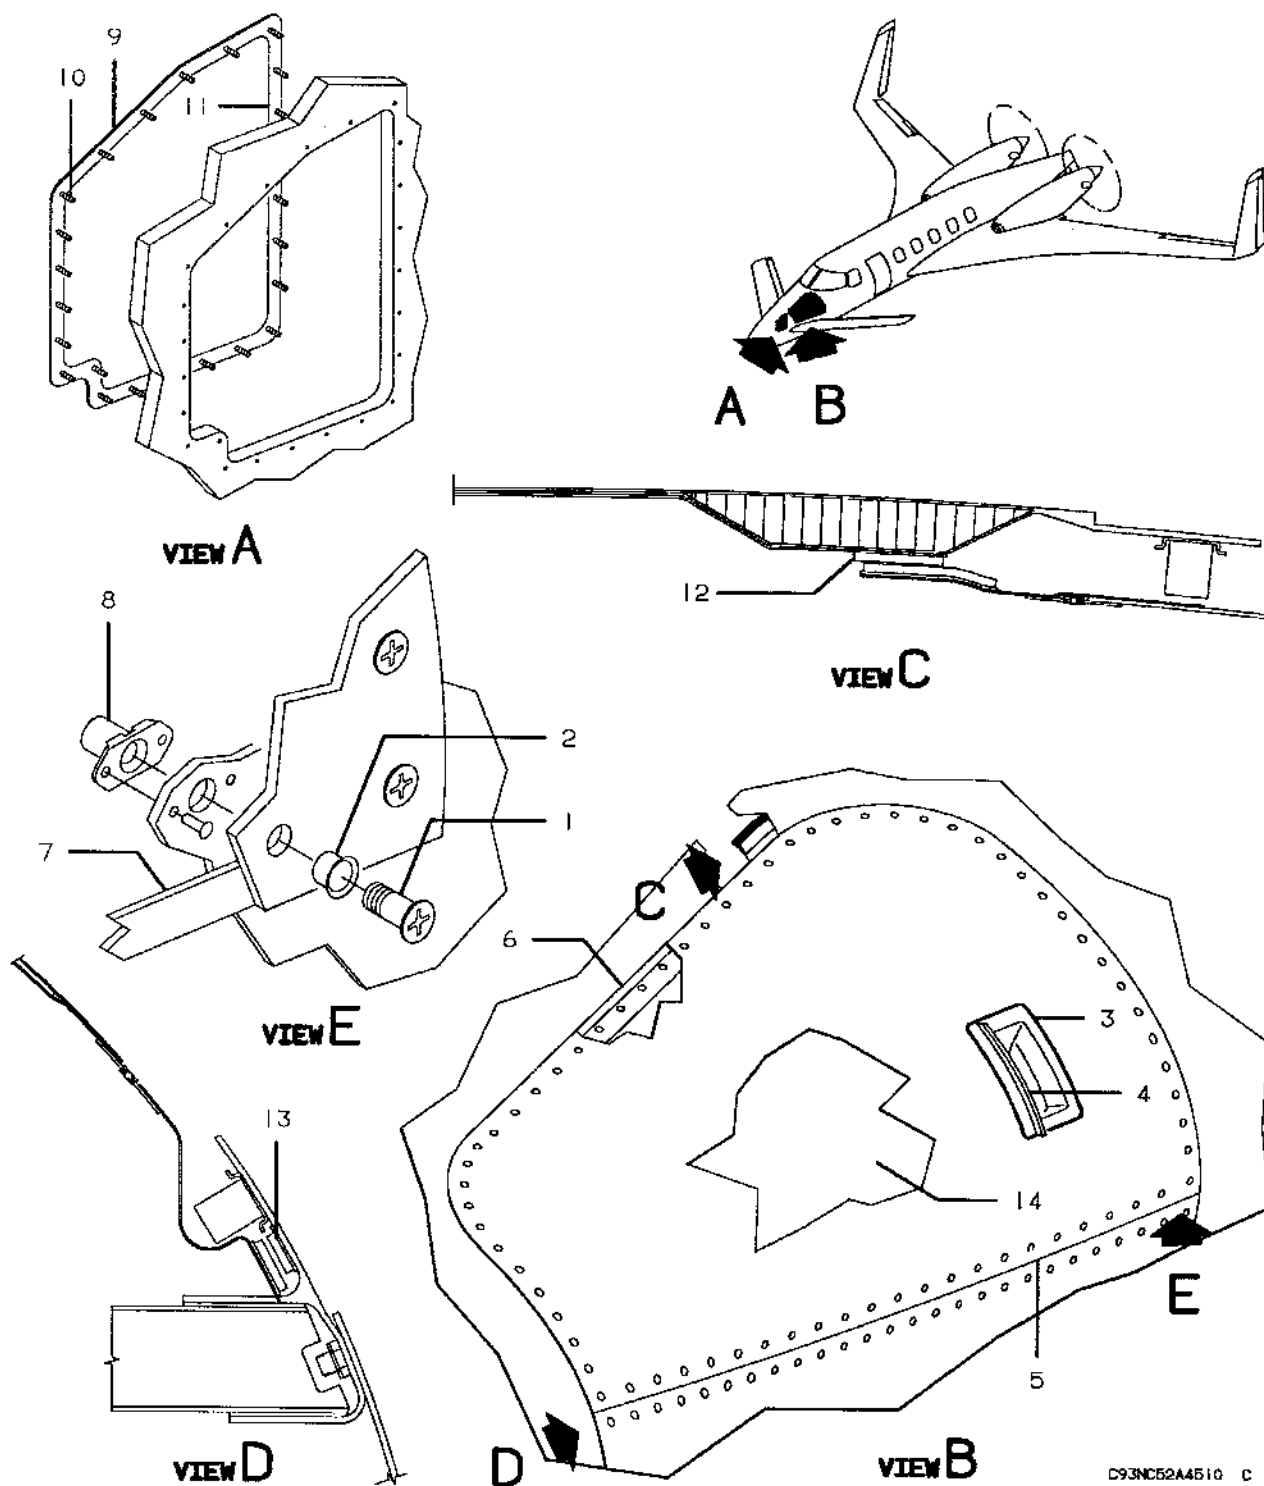


FIGURE 40-00.NOSE AVIONICS ACCESS DOORS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00	122-410100-19	DOOR INSTL, LH NOSE AVIONICS ACCESS.....	NP	
	122-410100-20	DOOR INSTL, RH NOSE AVIONICS ACCESS.....	NP	
	122-410105-25	. DOOR ASSY, LH NOSE AVIONICS ACCESS.....	1	
	122-410105-26	. DOOR ASSY, RH NOSE AVIONICS ACCESS.....	1	
		/ATTACHING PARTS/		
- 1	CA18324-2P	. STUD.....	68	
- 2	CA18185	. GROMMET.....	68	
		-----★-----		
- 3	122-410402-1	. . DUCT ASSY, LH AVIONICS AIR EXIT.....	1	
	122-410402-2	. . DUCT ASSY, RH AVIONICS AIR EXIT.....	1	
- 4	122-410402-3	. . PLATE, LH DEFLECTOR.....	1	
	122-410402-4	. . PLATE, RH DEFLECTOR.....	1	
- 5	122-410105-27	. . DOOR ASSY, LH BONDED.....	1	
	122-410105-28	. . DOOR ASSY, RH BONDED.....	1	
- 6	122-410100-21	. SEAL, DOOR.....	1	
- 7	122-410100-23	. SEAL, DOOR/BOTTOM/.....	1	
- 8	CA1810	. RECEPTACLE.....	68	
	122-410000-1	NOSE ASSY.....	1	
- 9	122-410330-1	. DOOR ASSY, LH LOWER KEEL AVIONICS.....	1	
	122-410330-2	. DOOR ASSY, RH LOWER KEEL AVIONICS.....	1	
	122-410330-5	. . SCREEN.....	1	
-10	DCTC7900-10A3DL	. . SCREW, CAPTIVE.....	24	
-11	122-410710-1	. . SEAL, DOOR ASSY.....	2	
	122-410601-7	. COVER INSTL, LH NOSE AVIONICS BAY.....	NP	
	122-410601-8	. COVER INSTL, RH NOSE AVIONICS BAY.....	NP	
-12	122-410601-13	. . STRIP, FASTENER.....	1	
-13	122-410601-15	. . STRIP, FASTENER.....	1	
-14	122-410602-25	. . COVER ASSY, LH.....	1	
	122-410602-26	. . COVER ASSY, RH.....	1	
	S10P175CSI	PLUSNUT/KEEL AVIONICS DOOR ATTACH/.....	48	

--END--

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

52-70-00
CABIN DOOR WARNING SWITCHES

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

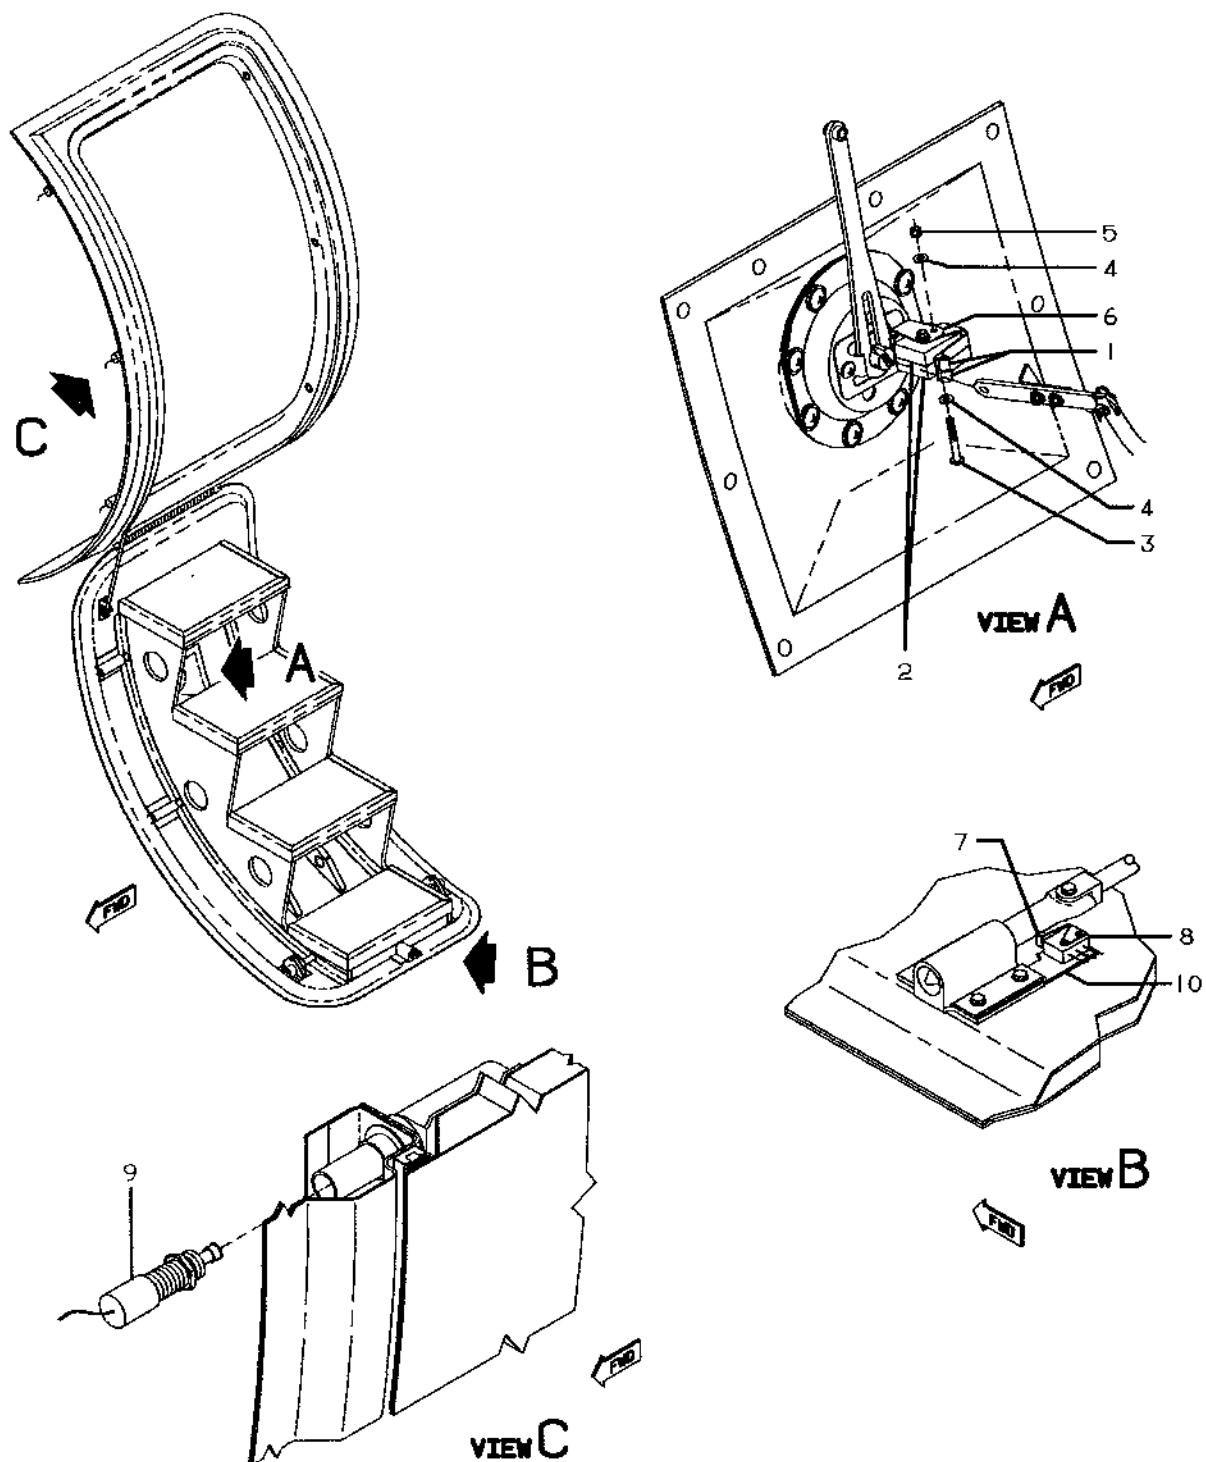

D94NC52A0039 C

FIGURE 70-00.CABIN DOOR WARNING SWITCHES

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
70-00 - 1	JE17	ACTUATOR.....	2	
- 2	1SE1	SWITCH.....	2	
		/ATTACHING PARTS/		
- 3	MS35206-321	SCREW.....	2	
- 4	AN960-2L	WASHER/ONE UNDER NUT AND ONE UNDER SCREW HEAD/	4	
- 5	MS21042-02	NUT.....	2	
		★		
- 6	122-364006-19	BRACKET, SWITCH.....	1	
- 7	JE17	ACTUATOR.....	1	
- 8	1SE1	SWITCH.....	1	
- 9	122-384126-1	SWITCH.....	6	
- 10	122-364006-27	BRACKET, SWITCH.....	6	2
	122-364006-25	BRACKET, SWITCH/ORDER 122-364006-27 FOR SPARES/.....	NP	1

CODES OF EFFECTIVITY

1 NC-4 THRU NC-53 2 NC-54 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

52-80-10
MAIN LANDING GEAR DOORS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


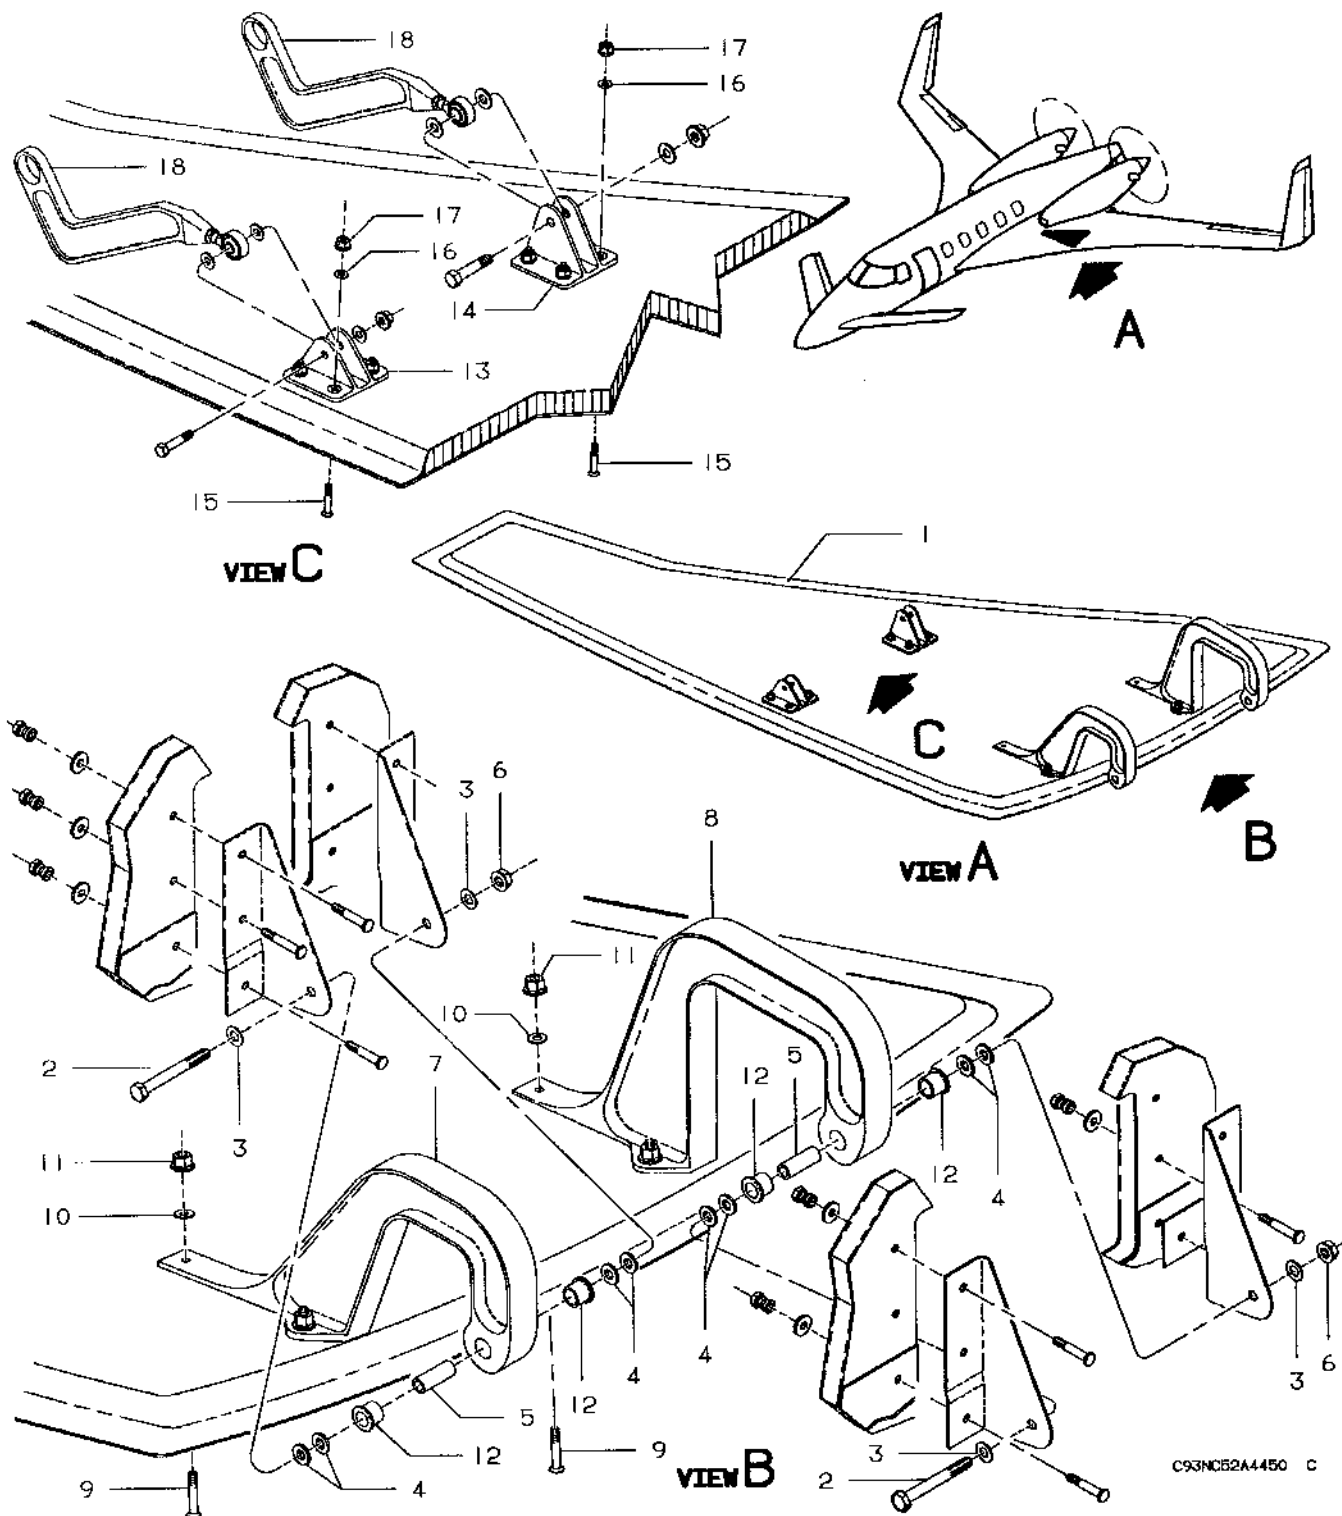


FIGURE 80-10. MAIN LANDING GEAR DOORS
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
80-10	122-100100-1	DOOR INSTL, LH MAIN LANDING GEAR.....	NP	
	122-100100-2	DOOR INSTL, RH MAIN LANDING GEAR.....	NP	
- 1	122-100110-13	. DOOR ASSY, LH MAIN LANDING GEAR.....	1	
	122-100110-14	. DOOR ASSY, RH MAIN LANDING GEAR.....	1	
		/ATTACHING PARTS/		
- 2	AN3C17A	. BOLT.....	2	
- 3	AN960C10L	. WASHER.....	4	
- 4	AN960C10	. WASHER.....	8	
- 5	NAS72-3-100	. BUSHING.....	2	
- 6	130909N29	. NUT.....	2	
		-----★-----		
- 7	122-100111-1	.. HINGE ASSY, FWD LH GEAR DOOR.....	1	
	122-100111-2	.. HINGE ASSY, FWD RH GEAR DOOR.....	1	
- 8	122-100111-9	.. HINGE ASSY, AFT LH GEAR DOOR.....	1	
	122-100111-10	.. HINGE ASSY, AFT RH GEAR DOOR.....	1	
		/ATTACHING PARTS/		
- 9	MS24694C60	.. SCREW.....	3	
- 10	AN960C10	.. WASHER.....	3	
- 11	130909N49	.. NUT.....	3	
		-----★-----		
- 12	NAS77-6-38	... BUSHING.....	2	
- 13	122-100112-1	.. FITTING, DOOR RETRACT ROD/FWD/.....	1	1
	122-100112-5	.. FITTING, DOOR RETRACT ROD/FWD/.....	1	2
- 14	122-100112-3	.. FITTING, DOOR RETRACT ROD/AFT/.....	1	
		/ATTACHING PARTS/		
- 15	MS24694C61	.. SCREW.....	4	
- 16	AN960C10	.. WASHER.....	4	
- 17	130909N49	.. NUT.....	4	
		-----★-----		
- 18		ROD ASSY, DOOR RETRACT/SEE CHAPTER 32/	NP	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

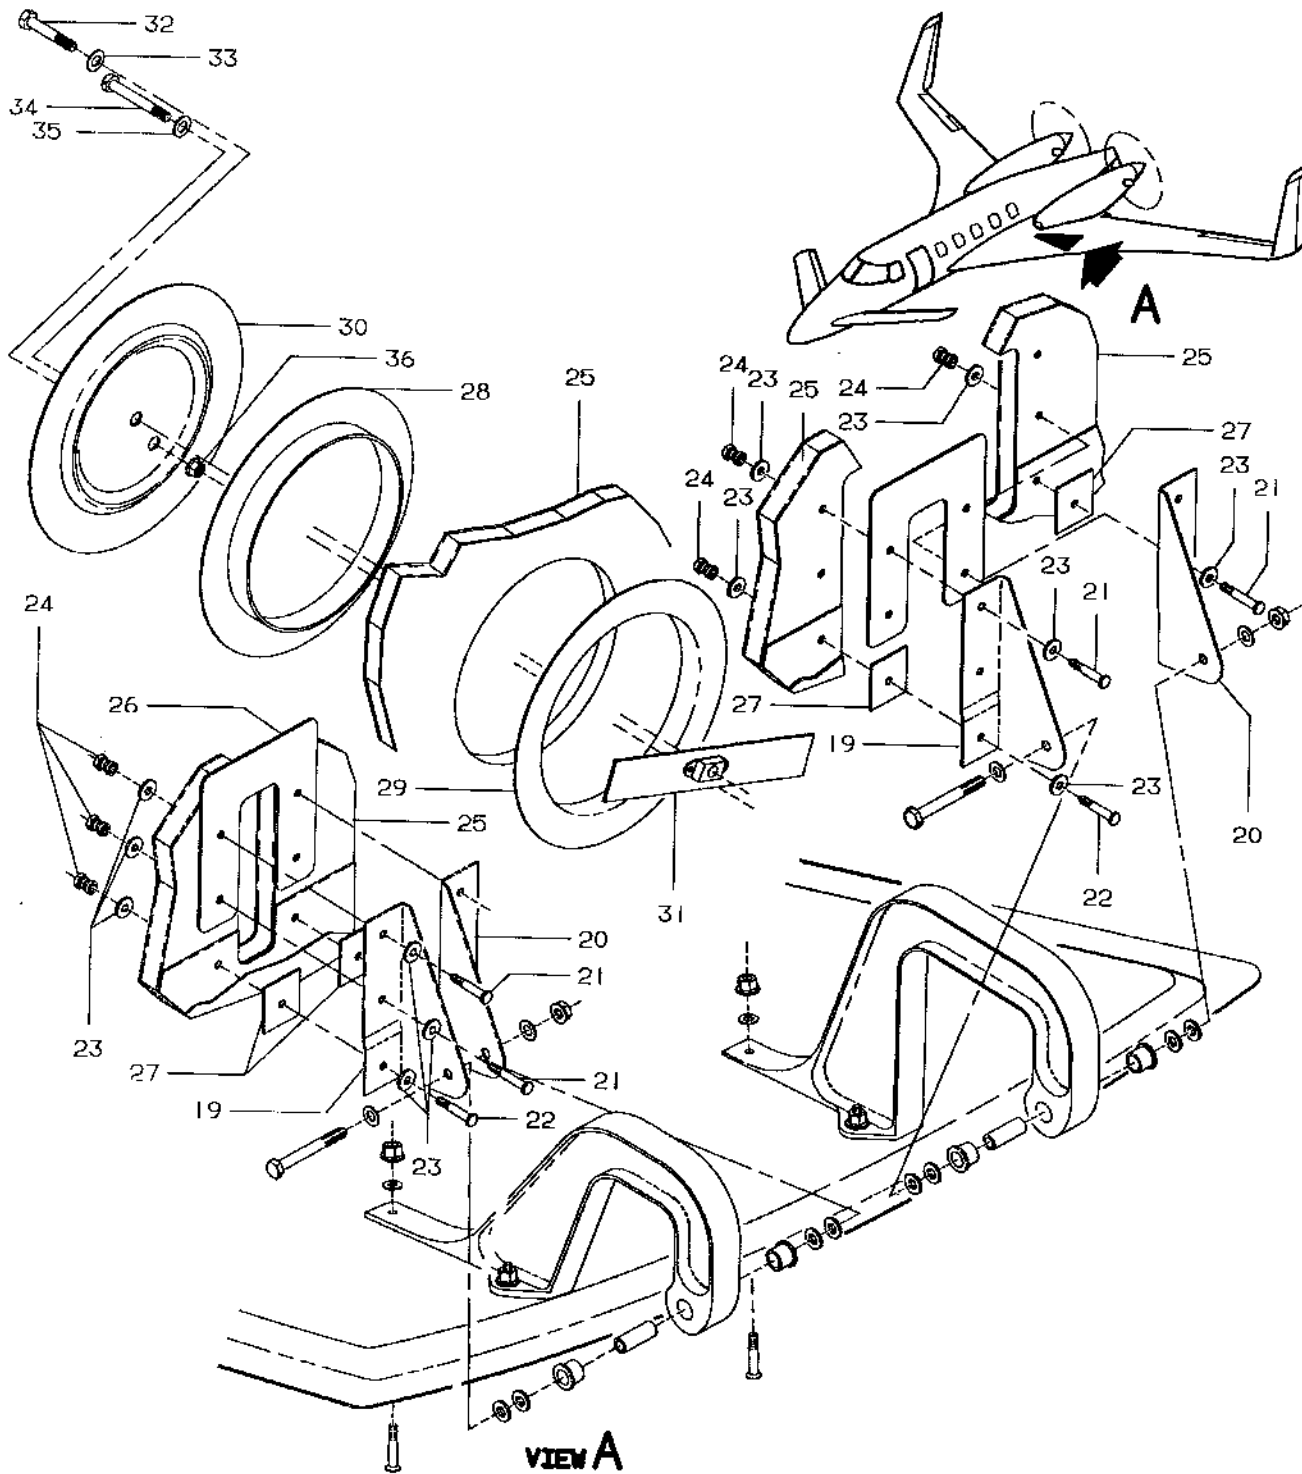

C93NC52A4451 C

FIGURE 80-10.MAIN LANDING GEAR DOORS
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
80-10	122-100085-1	RIB INSTL, LH MAIN LANDING GEAR/BL 104.50/	NP	
	122-100085-2	RIB INSTL, RH MAIN LANDING GEAR/BL 104.50/	NP	
- 19	122-100085-27	. ANGLE, DOOR HINGE SUPPORT/LH FWD,RH AFT/	2	
- 20	122-100085-28	. ANGLE, DOOR HINGE SUPPORT/RH FWD,LH AFT/	2	
		/ATTACHING PARTS/		
- 21	HL10V6-13	. PIN	8	
- 22	HL10V6-14	. PIN	4	
- 23	AN960C10L	. WASHER	24	
- 24	HL198V6	. COLLAR	12	
		★		
- 25	122-100085-35	. RIB ASSY, BONDED/LH/	1	
	122-100085-36	. RIB ASSY, BONDED/RH/	1	
- 26	122-100085-37	. DOUBLER, HINGE SUPPORT ANGLE/UPR/	2	
- 27	122-100085-39	. SHIM, HINGE SUPPORT ANGLE/LWR/	4	
- 28	122-100085-41	. DOUBLER, INBOARD	1	
- 29	122-100085-43	. DOUBLER, OUTBOARD	1	
	122-100085-45	. COVER ASSY, RIB	1	
- 30	122-100085-47	. COVER	1	
- 31	122-100085-49	. BRACKET ASSY, COVER	1	
		/ATTACHING PARTS/		
- 32	AN3H11A	. BOLT	1	
- 33	AN960JD10L	. WASHER	1	
		★		
	MS21060L3	. NUTPLATE	1	
- 34	MS35266-70	. SCREW	1	
- 35	AN960JD10L	. WASHER	1	
- 36	130909N29	. NUT	1	

CODES OF EFFECTIVITY

1 NC-4 THRU NC-40 2 NC-41 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

52-80-20
NOSE LANDING GEAR DOORS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

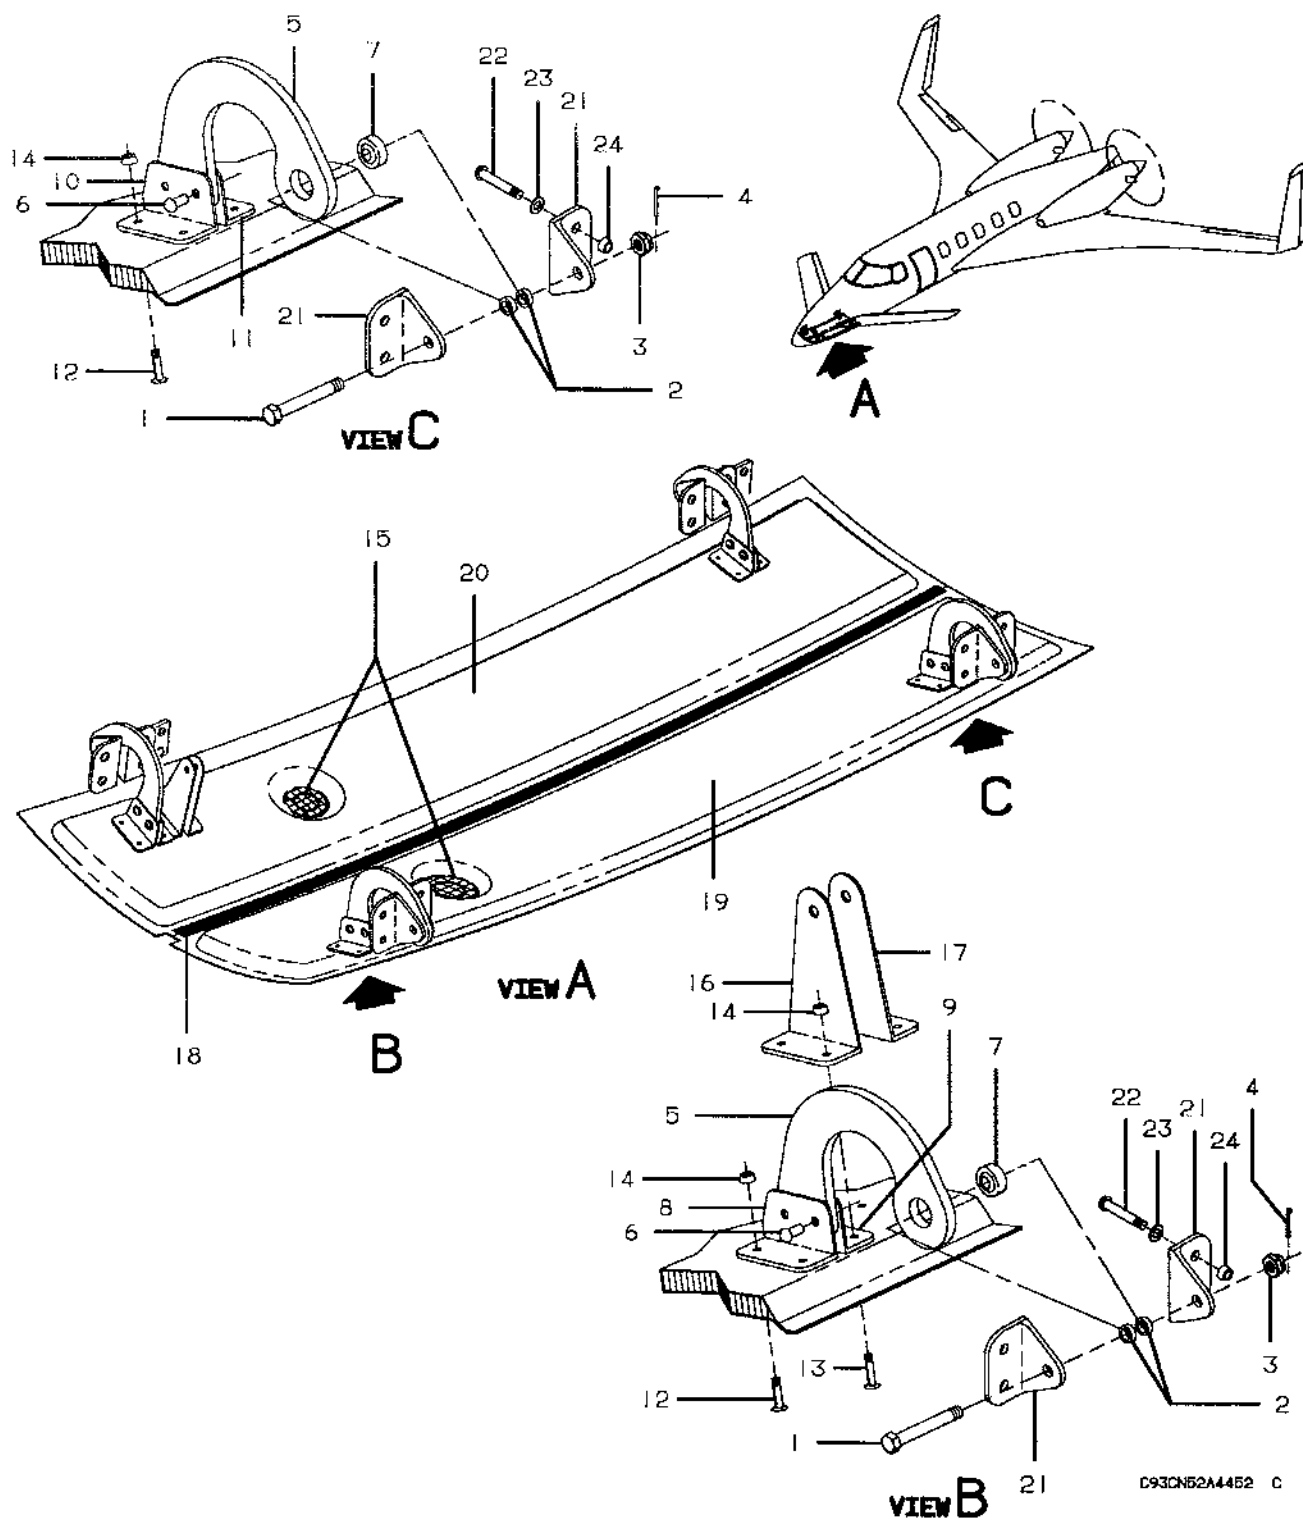


FIGURE 80-20.NOSE LANDING GEAR DOORS


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
80-20	122-410400-1	DOOR INSTL, NOSE LANDING GEAR.....	NP	
	122-410415-1	. DOOR ASSY, LH.....	1	
	122-410415-2	. DOOR ASSY, RH.....	1	
		/ATTACHING PARTS/		
- 1	NAS1303-13	. BOLT.....	2	
- 2	NAS43DD3-14	. SPACER.....	4	
- 3	130909N15	. NUT.....	2	
- 4	MS24665-71	. PIN, COTTER.....	2	
		-----★-----		
- 5	122-410415-5	. HINGE ASSY.....	2	
		/ATTACHING PARTS/		
- 6	M7885/4-4-3	. RIVET.....	4	
		-----★-----		
- 7	MS14104-3	. BEARING.....	1	
- 8	122-410415-29	. BRACKET, FWD HINGE SUPPORT/LH FWD/.....	1	
	122-410415-30	. BRACKET, FWD HINGE SUPPORT/RH FWD/.....	1	
- 9	122-410415-31	. BRACKET, FWD HINGE SUPPORT/LH AFT/.....	1	
	122-410415-32	. BRACKET, FWD HINGE SUPPORT/RH AFT/.....	1	
- 10	122-410415-27	. BRACKET, AFT HINGE SUPPORT/LH FWD/.....	1	
	122-410415-28	. BRACKET, AFT HINGE SUPPORT/RH FWD/.....	1	
- 11	122-410415-11	. BRACKET, AFT HINGE SUPPORT/LH AFT/.....	1	
	122-410415-12	. BRACKET, AFT HINGE SUPPORT/RH AFT/.....	1	
- 12	HL613-5-11	. PIN.....	8	
- 13	HL613-5-12	. PIN.....	2	
	AN960XC8L	. WASHER.....	10	
- 14	HL94K5	. COLLAR.....	10	
- 15	122-410415-33	. SCREEN.....	1	
- 16	122-410415-37	. BRACKET, DOOR ACTUATOR/LH FWD/.....	1	
	122-410415-38	. BRACKET, DOOR ACTUATOR/RH FWD/.....	1	
- 17	122-410415-39	. BRACKET, DOOR ACTUATOR/LH AFT/.....	1	
	122-410415-40	. BRACKET, DOOR ACTUATOR/RH AFT/.....	1	
- 18	122-410415-43	. SEAL, DOOR.....	1	
- 19	122-410415-41	. DOOR, LH/BONDED/.....	1	
- 20	122-410415-42	. DOOR, RH/BONDED/.....	1	
- 21	122-410415-19	. BRACKET, HINGE.....	8	
		/ATTACHING PARTS/		
- 22	HL612-5-15	. PIN.....	2	
- 23	AN960C8	. WASHER/INSTALL UNDER HEAD/.....	2	
- 24	HL94K5	. COLLAR.....	2	
		-----★-----		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

52-80-30
NOSE LANDING GEAR AFT DOORS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

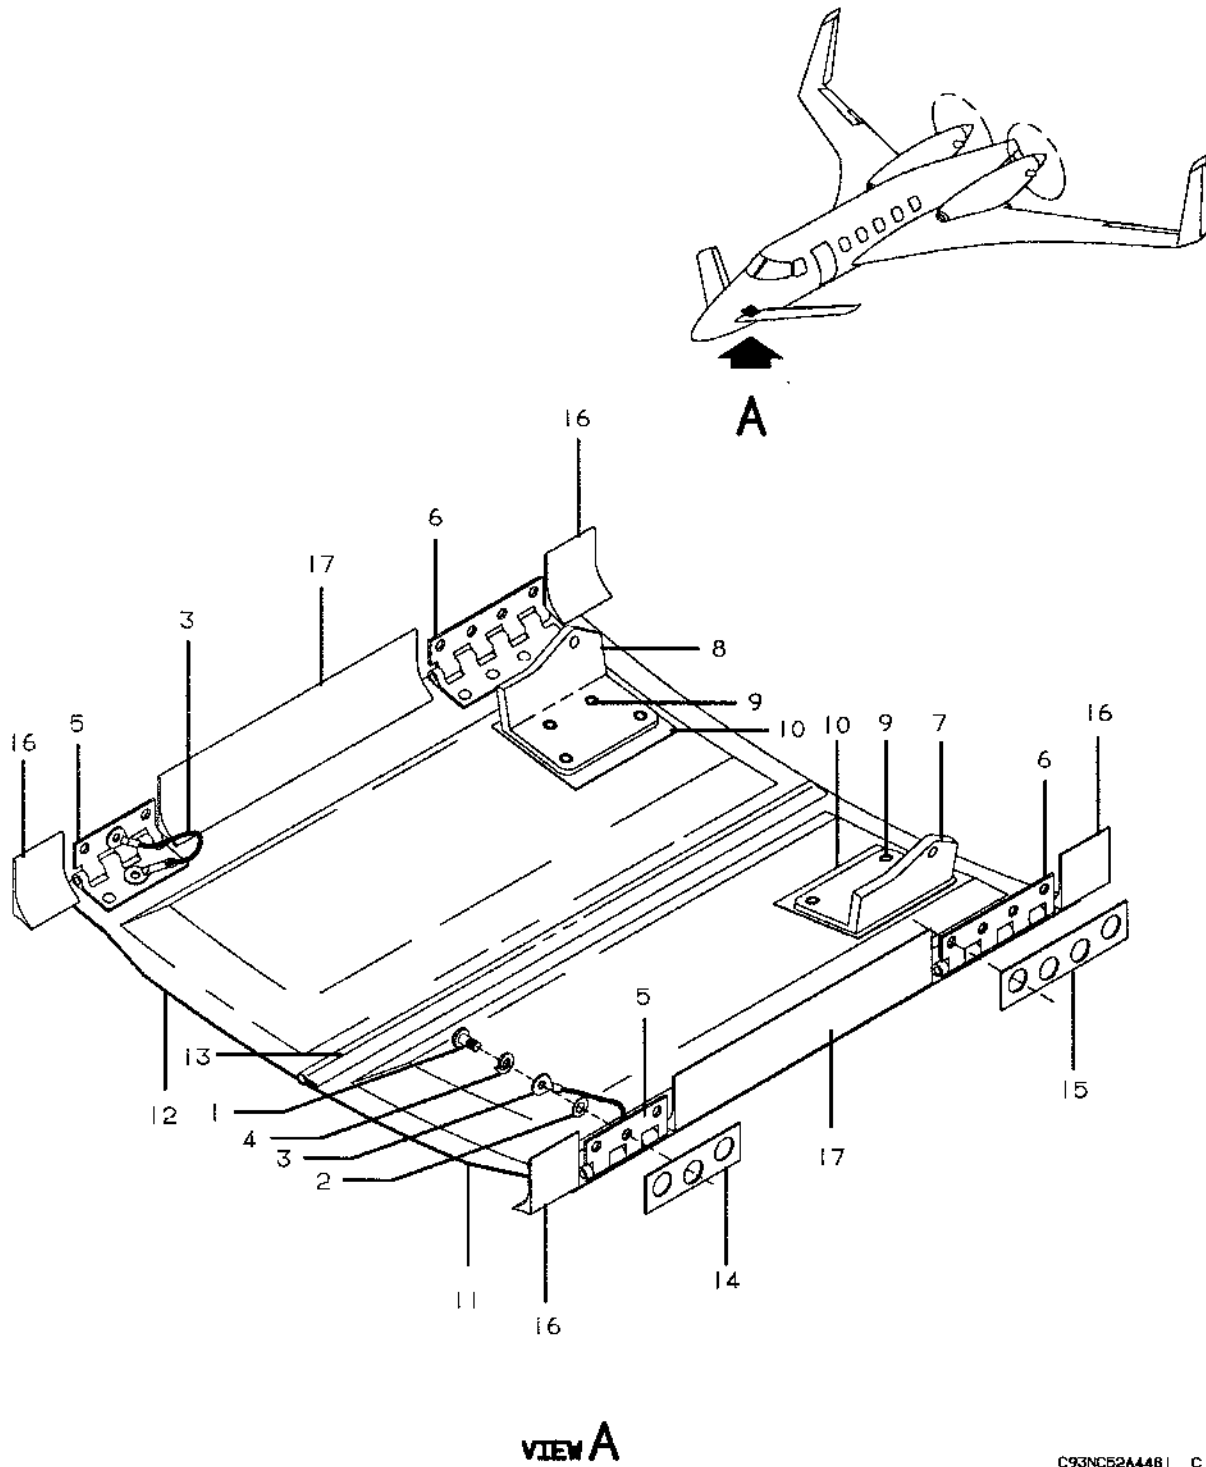

C93NC52A448 | C

FIGURE 80-30.NOSE LANDING GEAR AFT DOORS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
80-30	122-410401-1	DOOR INSTL, AFT NOSE LANDING GEAR	NP	1
	122-410401-39	DOOR INSTL, AFT NOSE LANDING GEAR	NP	2
	122-410401-3	. DOOR ASSY, AFT NOSE LANDING GEAR/LH/	1	
	122-410401-4	. DOOR ASSY, AFT NOSE LANDING GEAR/RH/	1	
		/ATTACHING PARTS/		
- 1	MS27039-10	. SCREW	7	
- 2	AN960C10L	. WASHER	7	
		★		
- 3	MS25083-2BB2	.. JUMPER, BONDING	1	
- 4	MS35338-44	.. WASHER, LOCK	1	
- 5	122-410401-7	.. HINGE ASSY, FWD	1	
- 6	122-410401-21	.. HINGE ASSY, AFT	1	
- 7	122-410401-13	.. BRACKET, DOOR ACTUATOR/LH/	1	
- 8	122-410401-14	.. BRACKET, DOOR ACTUATOR/RH/	1	
		/ATTACHING PARTS/		
- 9	HL613-5-12	.. PIN	4	
	HL94K5	.. COLLAR	4	
		★		
- 10	122-410401-19	.. DOUBLER, DOOR ACTUATOR BRACKET	1	
- 11	122-410401-31	.. DOOR ASSY, BONDED/LH/	1	
- 12	122-410401-32	.. DOOR ASSY, BONDED/RH/	1	
- 13	122-410401-33	.. SEAL, CENTER	1	
- 14	122-410401-11	. PLATE, FWD HINGE	2	
- 15	122-410401-25	. PLATE, AFT HINGE	2	
- 16	122-410401-35	. SEAL, FWD & AFT/LH BL 8.50, RH BL 8.50/	4	
- 17	122-410401-37	. SEAL, CENTER/LH BL 8.50, RH BL 8.50/	2	
	S10P175CSI	. PLUSNUT	14	1
	2R23209	. PLUSNUT	14	2

CODES OF EFFECTIVITY

1 NC-4 THRU NC-23 2 NC-24 AND AFTER

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

LIST OF PAGES & TABLE OF CONTENTS FOR CHAPTER 53-00-00 FUSELAGE

CHAP/SUB- SECT & UNIT	PAGE NUMBER	EFFECTIVE DATE	TABLE OF CONTENTS
53-00-00	1	07/31/02	LIST OF PAGES & TABLE OF CONTENTS
53-00-00	2	07/31/02	
53-00-00	3	07/31/02	
53-00-01	1	02/25/94	AFT PRESSURE DOME WIRE SEAL
53-00-01	2	02/25/94	
53-00-01	3	02/25/94	
53-20-00	1	02/25/94	COCKPIT LEFT SIDE CONSOLE STRUCTURE
53-20-00	2	02/25/94	
53-20-00	3	02/25/94	
53-20-00	4	02/25/94	
53-20-00	5	02/25/94	
53-20-10	1	02/25/94	COCKPIT RIGHT SIDE CONSOLE STRUCTURE
53-20-10	2	02/25/94	
53-20-10	3	02/25/94	
53-20-20	1	02/25/94	CONTROL PEDESTAL STRUCTURE
53-20-20	2	02/25/94	
53-20-20	3	02/25/94	
53-20-20	4	02/25/94	
53-20-20	5	02/25/94	
53-20-30	1	02/25/94	PEDESTAL EXTENSION STRUCTURE
53-20-30	2	02/25/94	
53-20-30	3	02/25/94	
53-20-40	1	02/25/94	SUBPANEL STRUCTURE ASSEMBLY
53-20-40	2	02/25/94	
53-20-40	3	02/25/94	
53-20-50	1	02/25/94	COCKPIT FLOOR PANELS
53-20-50	2	02/25/94	
53-20-50	3	02/25/94	
53-20-50	4	02/25/94	
53-20-50	5	02/25/94	
53-20-50	6	02/25/94	
53-20-50	7	02/25/94	
53-20-60	1	02/25/94	CABIN FLOOR AND AISLE PANELS
53-20-60	2	02/25/94	
53-20-60	3	02/25/94	
53-20-60	4	02/25/94	
53-20-60	5	02/25/94	
53-20-60	6	02/25/94	
53-20-60	7	02/25/94	
53-20-70	1	02/25/94	NOSE AVIONICS SHELVES
53-20-70	2	02/25/94	
53-20-70	3	02/25/94	
53-20-70	4	02/25/94	
53-20-70	5	02/25/94	
53-20-70	6	02/25/94	
53-20-70	7	02/25/94	
53-20-70	8	02/25/94	
53-20-70	9	02/25/94	
53-20-70	10	02/25/94	
53-20-70	11	02/25/94	
53-20-80	1	02/25/94	MAIN INSTRUMENT PANEL STRUCTURE
53-20-80	2	02/25/94	
53-20-80	3	02/25/94	
53-21-00	1	02/25/94	FUSELAGE ELECTRICAL WIRE CONDUIT

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

LIST OF PAGES & TABLE OF CONTENTS FOR CHAPTER 53-00-00 FUSELAGE *(Continued)*

CHAP/SUB- SECT & UNIT	PAGE NUMBER	EFFECTIVE DATE	TABLE OF CONTENTS
53-21-00	2	02/25/94	
53-21-00	3	02/25/94	
53-21-00	4	02/25/94	
53-21-00	5	02/25/94	
53-21-00	6	02/25/94	
53-21-00	7	02/25/94	
53-21-10	1	02/25/94	FLIGHT CONTROL CABLE TRAY
53-21-10	2	02/25/94	
53-21-10	3	02/25/94	
53-25-00	1	02/25/94	DYNAMIC ABSORBER
53-25-00	2	02/25/94	
53-25-00	3	02/25/94	
53-25-00	4	02/25/94	
53-25-00	5	02/25/94	
53-25-00	6	02/25/94	
53-25-00	7	02/25/94	
53-30-00	1	02/25/94	NOSE SKINS AND PLATES
53-30-00	2	02/25/94	
53-30-00	3	02/25/94	
53-30-00	4	02/25/94	
53-30-00	5	02/25/94	
53-30-10	1	02/25/94	AFT FUSELAGE ACCESS DOORS
53-30-10	2	02/25/94	
53-30-10	3	02/25/94	
53-30-10	4	02/25/94	
53-30-10	5	07/31/02	
53-40-00	1	02/25/94	MAIN PANEL AND SUBPANEL SUPPORT
53-40-00	2	02/25/94	
53-40-00	3	02/25/94	
53-40-10	1	02/25/94	ELECTRONIC FLIGHT DISPLAYS SUPPORT
53-40-10	2	02/25/94	
53-40-10	3	02/25/94	
53-40-20	1	02/25/94	NOSE ATTACH FITTINGS
53-40-20	2	02/25/94	
53-40-20	3	02/25/94	
53-40-20	4	02/25/94	
53-40-20	5	02/25/94	
53-40-20	6	02/25/94	
53-40-20	7	02/25/94	
53-40-20	8	02/25/94	
53-40-20	9	02/25/94	
53-40-20	10	02/25/94	
53-40-20	11	02/25/94	
53-40-30	1	02/25/94	AVIONICS INTERFACE RACK
53-40-30	2	02/25/94	
53-40-30	3	02/25/94	
53-50-00	1	02/25/94	RADOME AND TAIL CONE
53-50-00	2	02/25/94	
53-50-00	3	07/31/02	
53-50-20	1	02/25/94	FORWARD WING FAIRINGS
53-50-20	2	02/25/94	
53-50-20	3	02/25/94	
53-50-40	1	02/25/94	AFT WING/FUSELAGE FAIRING/
53-50-40	2	02/25/94	

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

LIST OF PAGES & TABLE OF CONTENTS FOR

CHAPTER 53-00-00 FUSELAGE *(Continued)*

CHAP/SUB- SECT & UNIT	PAGE NUMBER	EFFECTIVE DATE	TABLE OF CONTENTS
53-50-40	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-00-01
AFT PRESSURE DOME WIRE SEAL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

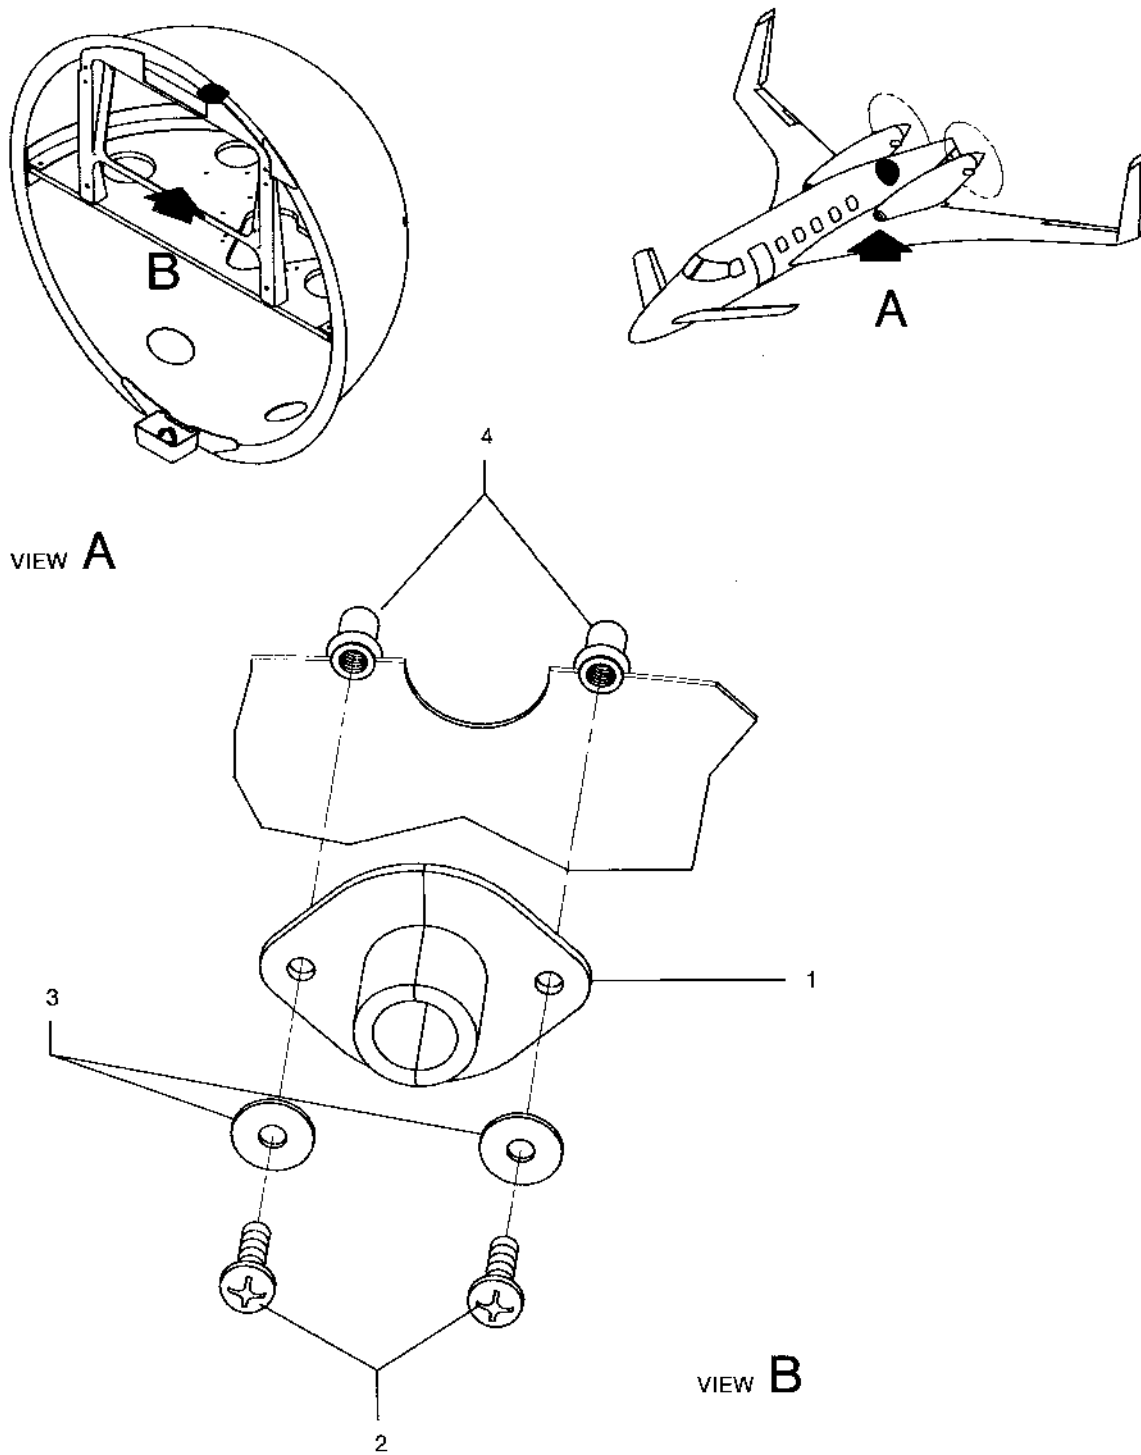


FIGURE 00-01.AFT PRESSURE DOME WIRE SEAL


STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS	USABLE
			PER ASSY	ON CODE
00-01	122-364081-1	AFT FUSELAGE ELECTRICAL TRAY INSTL	NP	
- 1	S45A13	. SEAL	2	
- 2	MS27039-0811	. SCREW.....	2	
- 3	AN960JD8L	. WASHER.....	2	
- 4	NAS1329A08KB160	. RIVNUT	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-20-00
COCKPIT LEFT SIDE CONSOLE STRUCTURE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

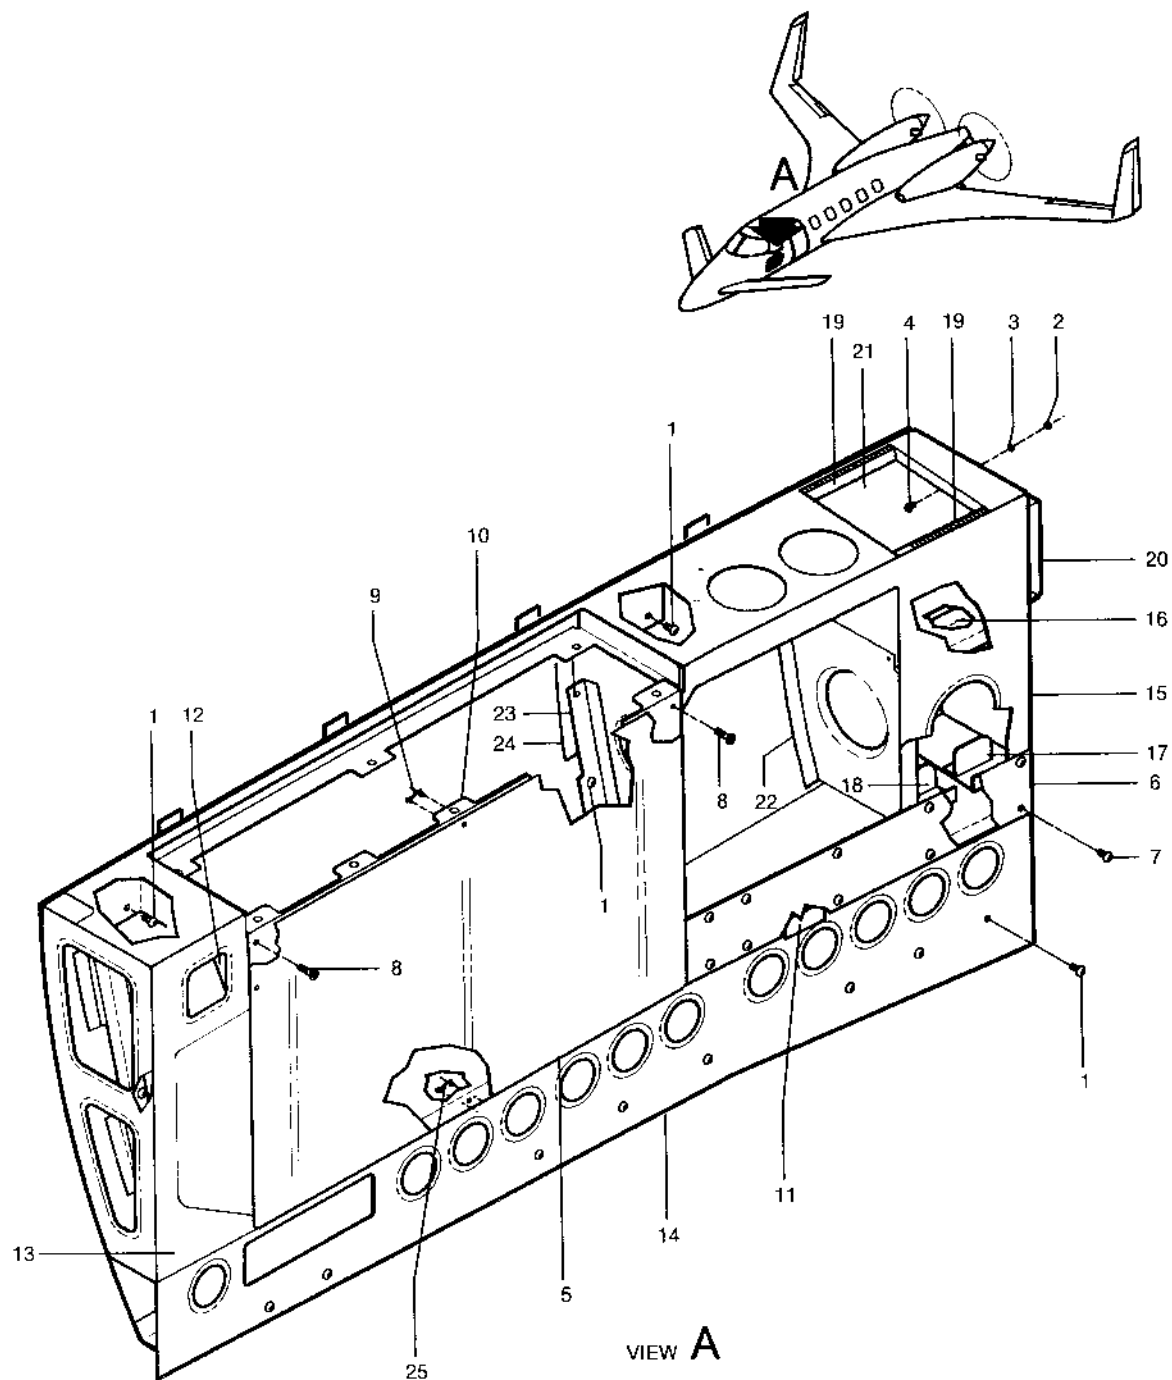

2000-157 02

FIGURE 20-00.COCKPIT LH CONSOLE STRUCTURE
/SHEET 1 OF 2 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-322097-9	CONSOLE INSTL, COCKPIT LEFT SIDE	NP	
	122-322097-11	.. CONSOLE ASSY	1	1
	122-322097-13	.. CONSOLE ASSY	1	2
		.. /ATTACHING PARTS/		
- 1	MS27039-1-07	.. SCREW	16	
- 2	MS21044N06	.. NUT	3	
- 3	AN960-6L	.. WASHER	3	
- 4	MS35206-229	.. SCREW	3	
		---★---		
- 5	122-322120-1	.. COVER ASSY, WIRE TRAY UPPER	1	1
	SR3	.. SNAP RING	6	
	A3-20	.. STUD	6	
- 6	122-322118-3	.. COVER, WIRE TRAY	1	
		.. /ATTACHING PARTS/		
- 7	MS27039-1-07	.. SCREW	10	
		---★---		
	122-322211-3	.. DECAL, WIRE TRAY INSTRUCTION	1	
	122-322125-5	.. SUPPORT ASSY, CIRCUIT BREAKER PANEL	1	1
	122-322125-9	.. SUPPORT ASSY, CIRCUIT BREAKER PANEL	1	2
		.. /ATTACHING PARTS/		
- 8	MS24694S49	.. SCREW	4	
		---★---		
- 9	S3-175	.. SPRING	3	1
	MS21060L06	.. NUTPLATE	AR	
- 10	122-322125-7	.. SUPPORT	1	1
	122-322125-11	.. SUPPORT	1	2
	26R6-1BB	.. RECEPTACLE	3	2
- 11	122-322211-3	.. DECAL, WIRE TRAY INSTRUCTION	1	
	122-322122-1	.. SKIN ASSY, UPPER AFT	1	1
	122-322122-7	.. SKIN ASSY, UPPER AFT	1	2
	MS21053-3	.. NUTPLATE	4	
- 12	122-322122-5	.. SUPPORT	1	1
- 13	122-322122-3	.. SKIN, UPPER AFT	1	1
	122-322119-9	.. SKIN, UPPER AFT	1	2
- 14	122-322119-5	.. SKIN, LOWER INBD	1	1
	122-322119-7	.. SKIN, LOWER INBD	1	2
- 15	122-322123-1	.. SKIN, UPPER INBD	1	
- 16	122-322182-3	.. SUPPORT ASSY, AUXILIARY CIRCUIT BREAKER	1	1
		PANEL UPPER		
	MS21051L3	.. NUTPLATE	2	1
- 17	122-322182-1	.. SUPPORT ASSY, AUXILIARY CIRCUIT BREAKER	1	1
		PANEL LOWER FWD		
	MS21051L3	.. NUTPLATE	1	1
- 18	122-322182-2	.. SUPPORT ASSY, AUXILIARY CIRCUIT BREAKER	1	1
		PANEL LOWER AFT		
	MS21051L3	.. NUTPLATE	1	1
- 19	122-522048-5	.. RAIL, RECEPTACLE STRIP	2	
	122-322108-1	.. BOX ASSY, OXYGEN MASK	1	
- 20	122-322108-3	.. SUPPORT	1	
- 21	122-322108-5	.. BOX	1	
- 22	122-322130-1	.. FRAME/STA 125.27/	1	
	122-322128-1	.. FRAME ASSY/STA 136.00/	1	
- 23	122-322128-5	.. SUPPORT ASSY	1	
	MS21051-3	.. NUTPLATE	4	
- 24	122-322126-3	.. FRAME	1	
- 25	S3-150	.. SPRING	3	1
	MS21047-3	.. NUTPLATE	7	
	MS21051-3	.. NUTPLATE	3	
	MS21053-3	.. NUTPLATE	2	
	MS21075L06	.. NUTPLATE	6	
	MS21075L3	.. NUTPLATE	4	2



02/25/94

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00 -26	122-322114-3	.. SUPPORT, WIRE TRAY UPPER.....	1	
-27	122-322115-3	.. SUPPORT, WIRE TRAY LOWER.....	1	1
	122-322115-5	.. SUPPORT, WIRE TRAY LOWER.....	1	2
-28	122-322117-3	.. SUPPORT, LOWER.....	1	
-29	122-322111-3	.. BRACKET, CONSOLE ATTACHMENT.....	1	
-30	122-322121-5	.. SUPPORT ASSY, CIRCUIT BREAKER PANEL.....	1	
	MS21060L06	.. NUTPLATE.....	3	
-31	122-322112-5	.. BRACKET, CONSOLE ATTACHMENT.....	1	
-32	122-322197-7	.. BRACKET.....	1	
-33	122-322113-1	.. PANEL, TOP.....	1	1
	122-322113-3	.. PANEL, TOP.....	1	2
-34	122-322128-5	.. SUPPORT ASSY, ELECTRICAL PANEL/STA 157.00/.....	1	
	MS21051-3	.. NUTPLATE.....	3	
-35	122-322127-1	.. FRAME/STA 163.50/.....	1	
-36	122-322197-1	.. BRACKET, UPHOLSTERY SUPPORT.....	4	
-37	122-322116-3	.. SKIN, OUTBD PANEL.....	1	
	122-322197-15	.. BRACKET ASSY.....	AR	2
	122-322197-19	.. SUPPORT ASSY.....	1	2

CODES OF EFFECTIVITY


1 NC-4 THRU NC-20

2 NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-20-10
COCKPIT RIGHT SIDE CONSOLE STRUCTURE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

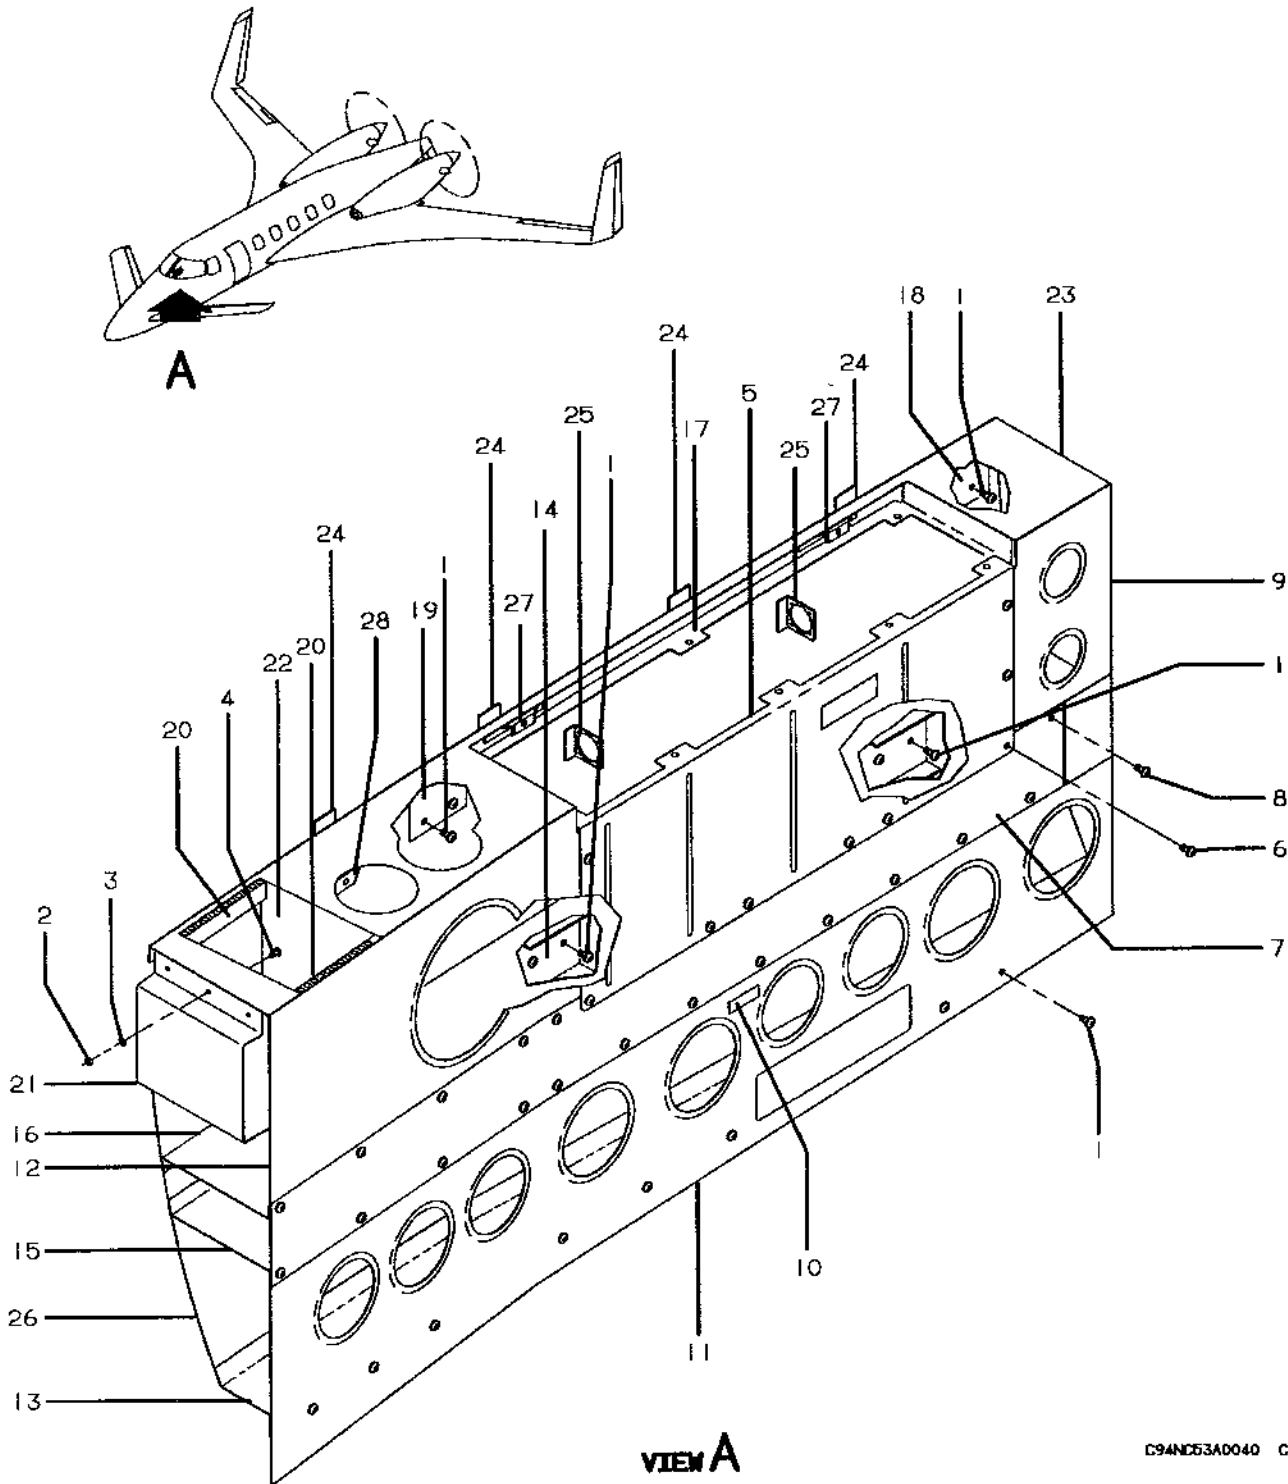

C94NC53A0040 C

FIGURE 20-10. COCKPIT RH CONSOLE STRUCTURE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10	122-322098-9	CONSOLE INSTL, COCKPIT RIGHT SIDE.....	NP	
	122-322098-11	.. CONSOLE ASSY.....	1	
		.. /ATTACHING PARTS/		
- 1	MS27039-1-07	.. SCREW.....	16	
- 2	MS21044N06	.. NUT.....	3	
- 3	AN960-6L	.. WASHER.....	3	
- 4	MS35206-229	.. SCREW.....	3	
		---★---		
- 5	122-322106-9	.. COVER ASSY, UPPER WIRE TRAY.....	1	1
	122-322106-13	.. COVER ASSY, UPPER WIRE TRAY.....	1	2
		.. /ATTACHING PARTS/		
- 6	MS27039-1-07	.. SCREW.....	10	
		---★---		
	122-322211-3	.. DECAL, WIRING TRAY INSTRUCTION.....	1	
	MS21060L06	.. NUTPLATE.....	3	
- 7	122-322104-3	.. COVER, WIRE TRAY.....	1	1
	122-322104-5	.. COVER, WIRE TRAY.....	1	2
		.. /ATTACHING PARTS/		
- 8	MS27039-1-07	.. SCREW.....	20	
		---★---		
	122-322211-3	.. DECAL, WIRING TRAY INSTRUCTION.....	1	
	26R6-1BB	.. RECEPTACLE.....	2	2
	MS21075L3	.. NUTPLATE.....	1	2
- 9	122-322109-1	.. SKIN ASSY, AFT UPPER INBD.....	1	
	MS21047-3	.. NUTPLATE.....	2	
-10	122-322211-3	.. DECAL, WIRING TRAY INSTRUCTION.....	1	
-11	122-322105-3	.. SKIN, LOWER INBD.....	1	1
	122-322105-5	.. SKIN, LOWER INBD.....	1	2
-12	122-322110-5	.. SKIN ASSY, FWD UPPER INBD.....	1	
	MS21047-3	.. NUTPLATE.....	2	
-13	122-322103-3	.. SUPPORT, LOWER.....	1	
	MS21047-3	.. NUTPLATE.....	28	
	MS21051-3	.. NUTPLATE.....	2	
-14	122-322124-1	.. BRACKET, SUPPORT.....	2	
-15	122-322101-3	.. SUPPORT, WIRE TRAY LOWER.....	1	1
	122-322101-5	.. SUPPORT, WIRE TRAY LOWER.....	1	2
-16	122-322100-3	.. SUPPORT, WIRE TRAY UPPER.....	1	
-17	122-322107-5	.. SUPPORT ASSY, CIRCUIT BREAKER PANEL.....	1	
	MS21060L06	.. NUTPLATE.....	3	
	MS21061L06	.. NUTPLATE.....	2	
-18	122-322112-1	.. BRACKET, CONSOLE ATTACHMENT.....	1	
-19	122-322111-1	.. BRACKET, CONSOLE ATTACHMENT.....	1	
-20	122-522048-5	.. RAIL, RECEPTACLE STRIP.....	2	
	122-322108-2	.. BOX ASSY, OXYGEN MASK.....	1	
-21	122-322108-4	.. SUPPORT.....	1	
-22	122-322108-6	.. BOX.....	1	
-23	122-322099-1	.. PANEL, TOP.....	1	1
	122-322099-3	.. PANEL, TOP.....	1	2
-24	122-322197-1	.. BRACKET, UPHOLSTERY SUPPORT.....	4	
-25	122-340039-135	.. BRACKET, AVIONICS CIRCUIT BREAKER PANEL.....	2	
		.. CONNECTOR SUPPORT		
-26	122-322102-3	.. SKIN, OUTBD PANEL.....	1	
-27	122-322197-15	.. BRACKET ASSY.....	2	2
-28	122-322197-19	.. BRACKET ASSY.....	1	2


CODES OF EFFECTIVITY

1 NC-4 THRU NC-20 2 NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-20-20
CONTROL PEDESTAL STRUCTURE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

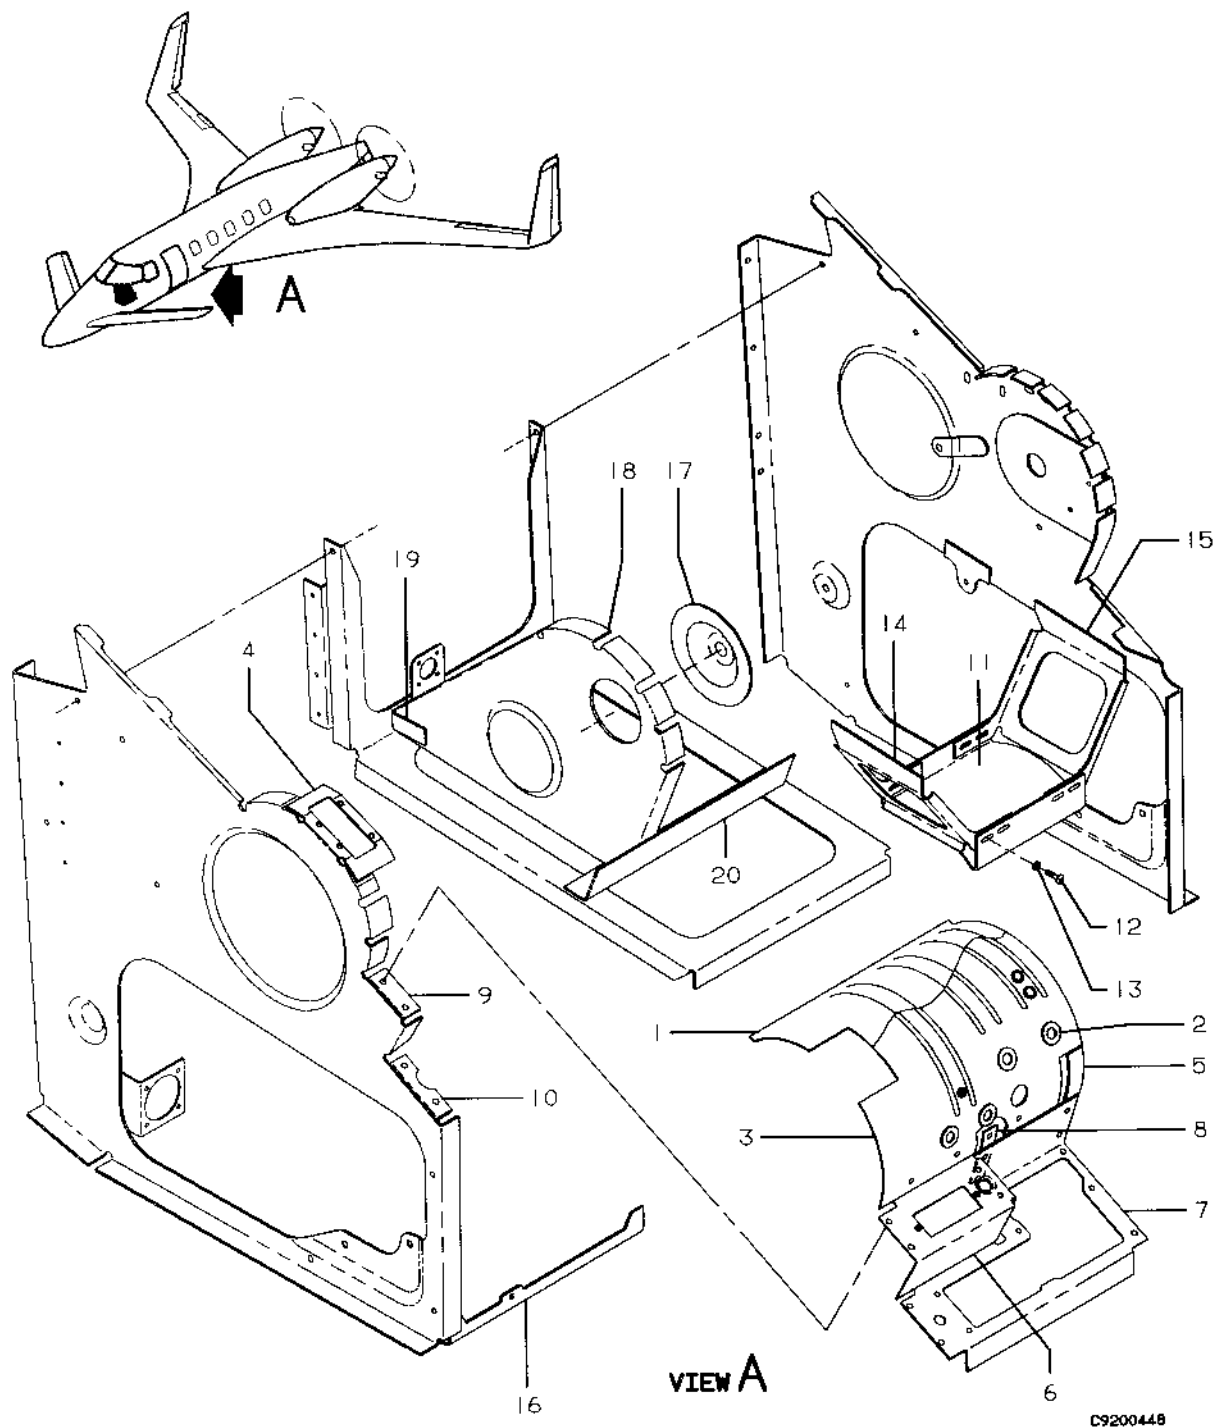


C9200448

FIGURE 20-20. CONTROL PEDESTAL STRUCTURE
/SHEET 1 OF 2 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-20	122-522094-3	STRUCTURE ASSY, CONTROL PEDESTAL	1	
- 1	101-524315-9	. COVER, RUBBER PAD	1	
- 2	99-524090-1	. BUSHING, CONTROL BRAKE	4	
	MS21075L06	. NUTPLATE	10	
- 3	122-522097-1	. GUIDE, ENGINE CONTROL LEVERS	1	
- 4	122-522101-5	. SUPPORT, PITCH TRIM INDICATOR	1	
- 5	122-522103-7	. PLATE	1	
	MS21071L06	. NUTPLATE	2	
- 6	122-522107-1	. PANEL, ROLL TRIM INDICATOR SUPPORT	1	
- 7	122-522108-5	. FRAME, RUDDER TRIM INDICATOR & TRIM SWITCHES	1	
		SUPPORT		
	122-522108-3	. FRAME	1	
- 8	122-522103-15	. BRACKET	1	
	122-522103-13	. ANGLE	1	
	MS24693S27	. SCREW	4	
	MS21061L06	. NUTPLATE	1	
	MS21071L06	. NUTPLATE	2	
	MS21075L06	. NUTPLATE	8	
- 9	122-522103-9	. SUPPORT	1	
- 10	122-522103-11	. SUPPORT	1	
- 11	122-522026-1	. CHANNEL, SWITCH SUPPORT	1	
		/ATTACHING PARTS/		
- 12	MS35206-229	. SCREW	8	
- 13	AN960-6L	. WASHER	8	
		★		
	MS21069L06	. NUTPLATE	8	
- 14	122-522027-2	. BRACKET, SUPPORT	1	
- 15	122-522027-1	. BRACKET, SUPPORT	1	
- 16	122-522053-3	. BRACKET, LOWER CENTER	1	
- 17	115-524017-3	. MOUNT, ENGINE CONTROL PIVOT	1	
- 18	122-522096-1	. BULKHEAD, UPPER	1	
- 19	122-522103-1	. CLIP	1	
- 20	122-522103-3	. SUPPORT	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

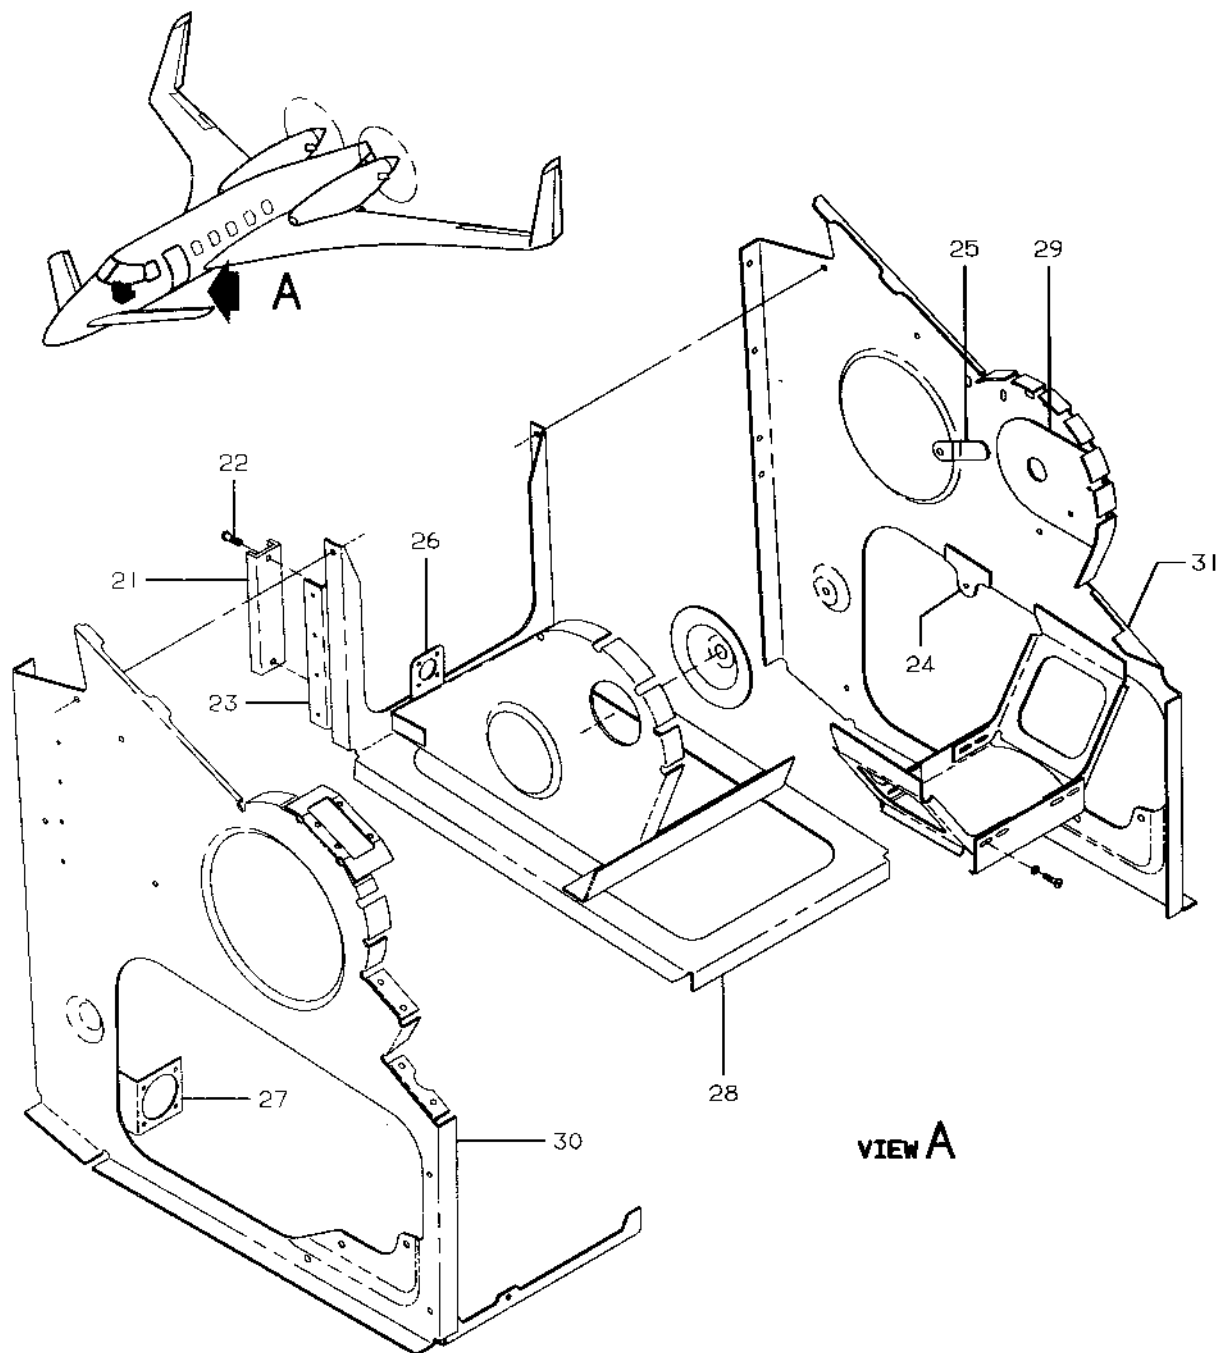

C9200449

FIGURE 20-20. CONTROL PEDESTAL STRUCTURE
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-20	122-361057-27	. ANGLE ASSY, TERMINAL JUNCTION LH MOUNTING	1	
	122-361057-28	. ANGLE ASSY, TERMINAL JUNCTION RH MOUNTING	1	
- 21	MRTBL8	. . RAIL, TERMINAL JUNCTION MOUNTING	1	
		/ATTACHING PARTS/		
- 22	MS24693S28	. . SCREW	2	
		-----★-----		
- 23	122-361057-37	. . ANGLE ASSY	1	
	MS21061L06	. . . NUTPLATE	2	
- 24	122-522087-1	. BRACKET, PRESSURIZATION COMPUTER SUPPORT	2	
- 25	122-522082-3	. BRACKET, THROTTLE GO AROUND SWITCH CORD	1	
		SUPPORT		
- 26	122-522082-5	. BRACKET, THROTTLE GO AROUND SWITCH	1	
		ELECTRICAL CONNECTOR SUPPORT		
- 27	122-522082-7	. BRACKET, PEDESTAL ELECTRICAL CONNECTOR	1	
	MS21061L3	. NUTPLATE	2	
- 28	122-522023-3	. FRAME, CENTER	1	
	130909N33	. NUTPLATE	4	
- 29	122-522055-1	. DOUBLER, RH SIDE FRAME	1	
	MS21071L06	. NUTPLATE	2	
	MS21075L06	. NUTPLATE	6	
	MS21075L08	. NUTPLATE	21	
	MS21075L3	. NUTPLATE	6	
- 30	122-522095-1	. FRAME, LH SIDE	1	
- 31	122-522022-1	. FRAME, RH SIDE	1	

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-20-30
PEDESTAL EXTENSION STRUCTURE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

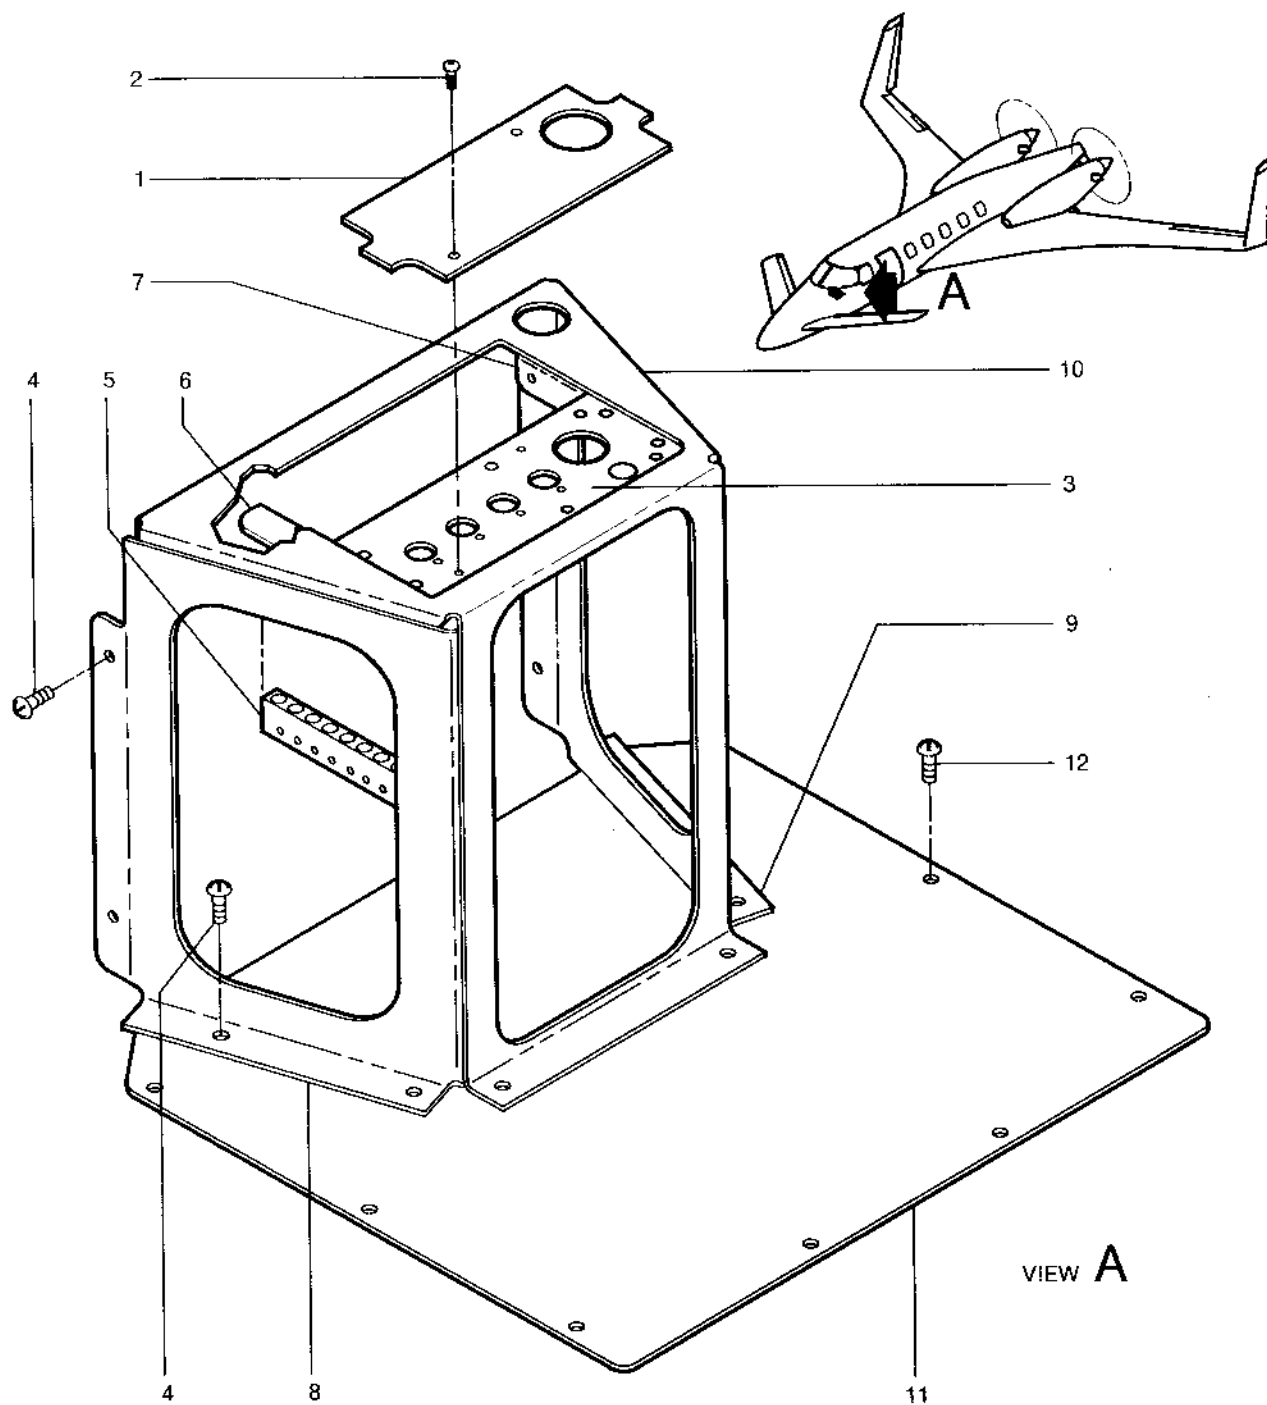

2000-157-04

FIGURE 20-30. PEDESTAL EXTENSION STRUCTURE


Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-30	122-502012-1	EXTENSION INSTL, PEDESTAL	NP	
	206482-24V-7	. CIGARETTE LIGHTER	1	
	122-502020-5	. LIGHTER BASE ASSY	1	
	622-7411-204	. APP85D AUTOPILOT ENGAGE PANEL	1	
- 1	122-502029-5	. PANEL	1	
		/ATTACHING PARTS/		
- 2	MS35214-28	. SCREW	2	
		-----★-----		
- 3	122-502021-17	. PLATE ASSY, SWITCH	1	
	PFSC 3 1/2-38A	. FASTENER	4	
	9505-06	. NUTSERT	2	
	122-522070-1	. EXTENSION ASSY, SINGLE WIDE	1	
		/ATTACHING PARTS/		
- 4	AN525-10R7	. SCREW	10	
		-----★-----		
- 5	122-522048-7	. RAIL	2	
- 6	122-522077-1	. BRACKET	1	
- 7	122-522077-2	. BRACKET	1	
- 8	122-522075-1	. PANEL, SIDE	1	
- 9	122-522075-2	. PANEL, SIDE	1	
	MS21075L3	. NUTPLATE	4	
-10	122-522076-1	. PANEL, TOP	1	
-11	122-522069-1	. PANEL ASSY, FLOOR	1	
		/ATTACHING PARTS/		
-12	AN525-10R7	. SCREW	8	
		-----★-----		
	MS21075L3	. NUTPLATE	6	
	MS21060L08	. NUTPLATE	3	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-20-40
SUBPANEL STRUCTURE ASSEMBLY

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

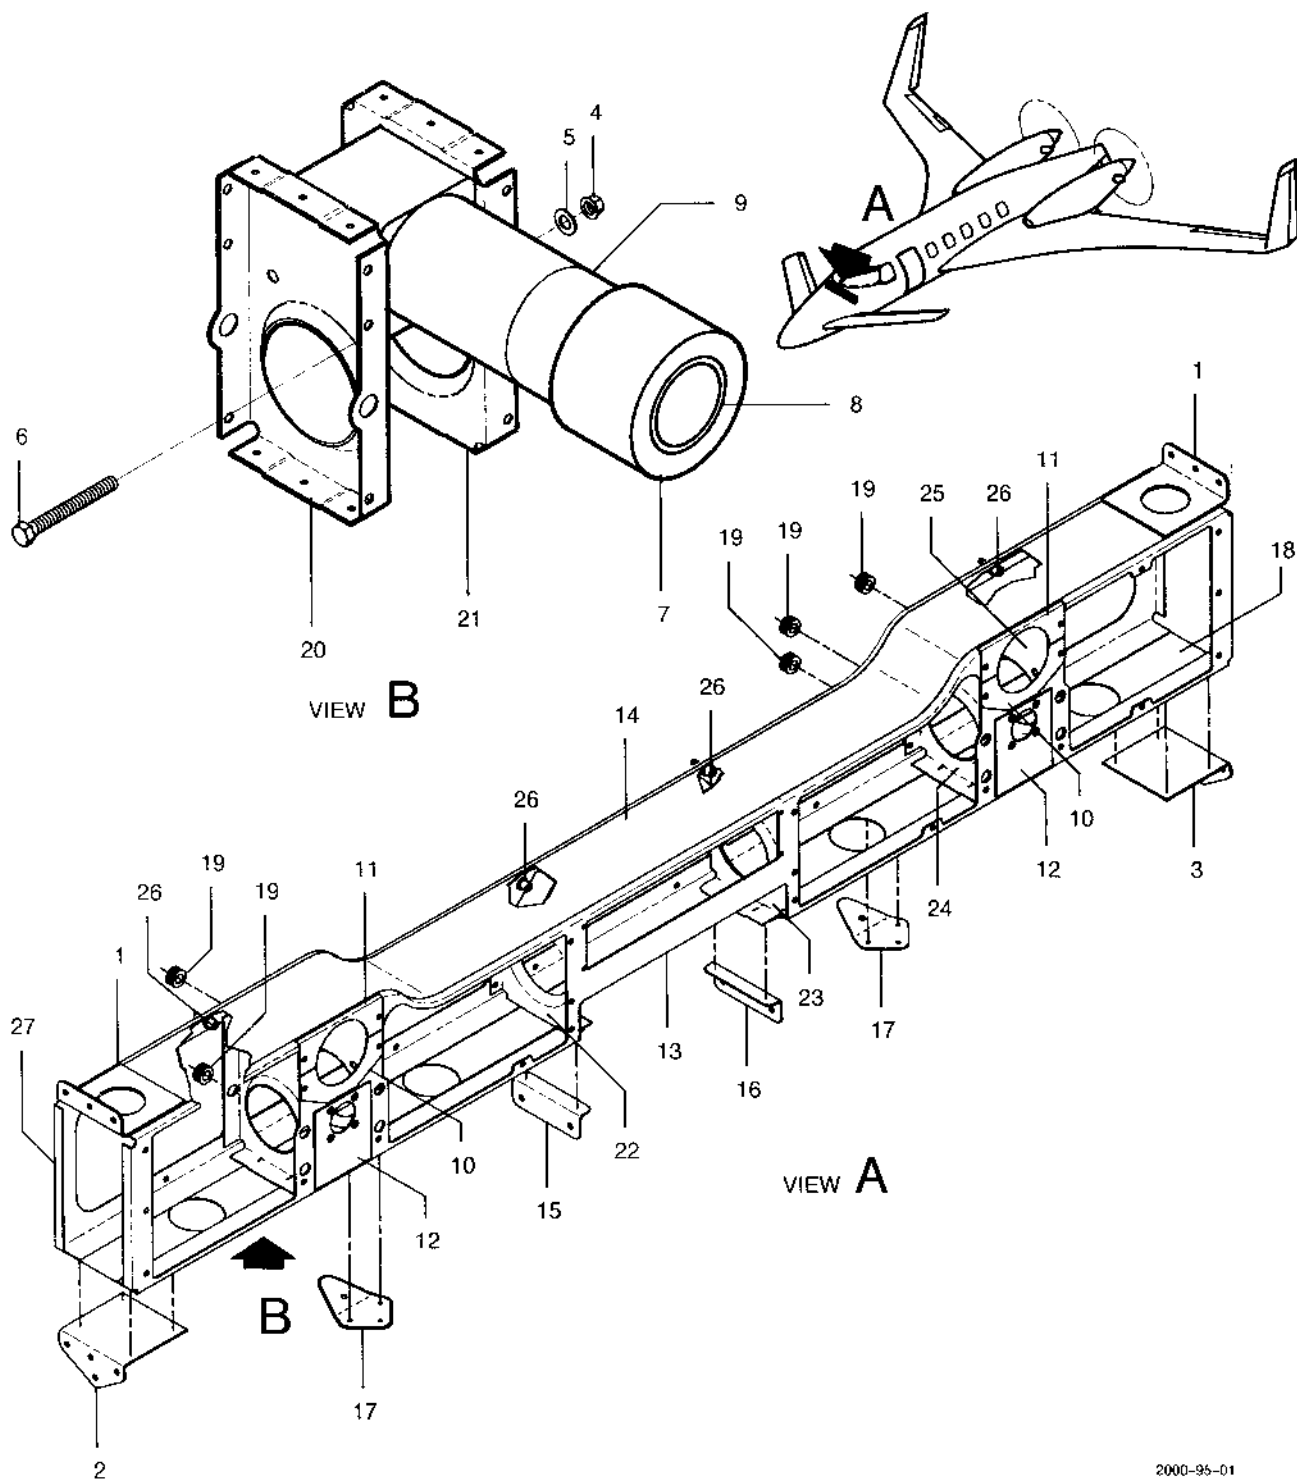

2000-95-01

FIGURE 20-40.SUBPANEL STRUCTURE ASSEMBLY

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-40	122-322020-3	STRUCTURE ASSY, SUBPANEL.....	1	
- 1	122-322074-1	. BRACKET, UPPER	2	
- 2	122-322034-1	. BRACKET, LH LOWER.....	1	
- 3	122-322034-2	. BRACKET, RH LOWER	1	
	50-524417-43	. SUPPORT ASSY, CONTROL COLUMN LH	1	
	50-524417-38	. SUPPORT ASSY, CONTROL COLUMN RH	1	
		/ATTACHING PARTS/		
- 4	130909N32	. NUT	2	
- 5	AN960-416	. WASHER	2	
- 6	130909B49	. BOLT	2	
		---★---		
- 7	50-524417-19	. CAP	1	
- 8	50-524417-5	. BUSHING	1	
- 9	50-524417-45	. HOUSING, LH.....	1	
	50-524417-35	. HOUSING, RH	1	
-10	122-322028-3	. COVER	2	
-11	122-322028-1	. COVER	2	
-12	100-324207-3	. PLATE	2	
	MS21061L06	. NUTPLATE	16	
	MS21071L06	. NUTPLATE	8	
	MS21075L06	. NUTPLATE	13	
-13	122-322076-3	. PANEL, FRONT	1	
-14	122-322023-1	. PANEL, TOP	1	
-15	122-322027-1	. BRACKET, PEDESTAL SUPPORT	1	
-16	122-322027-2	. BRACKET, PEDESTAL SUPPORT	1	
-17	122-322039-11	. BRACKET, WIRE HARNESS SUPPORT	2	
-18	122-322024-1	. PANEL, BOTTOM	1	
-19	MS35489-13	. GROMMET	5	
-20	122-322026-3	. BULKHEAD, CONTROL COLUMN SUPPORT	1	
-21	122-322026-4	. BULKHEAD, CONTROL COLUMN SUPPORT	1	
-22	122-322025-1	. BULKHEAD, LH INBD	1	
-23	122-322025-2	. BULKHEAD, RH INBD	1	
-24	122-322026-1	. BULKHEAD, CONTROL COLUMN SUPPORT	1	
-25	122-322026-2	. BULKHEAD, CONTROL COLUMN SUPPORT	1	
	130909N33	. NUTPLATE	6	
-26	131270-3	. STUD, GROUNDING	4	
-27	122-322022-1	. PANEL, BACK	1	

--END--

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-20-50
COCKPIT FLOOR PANELS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

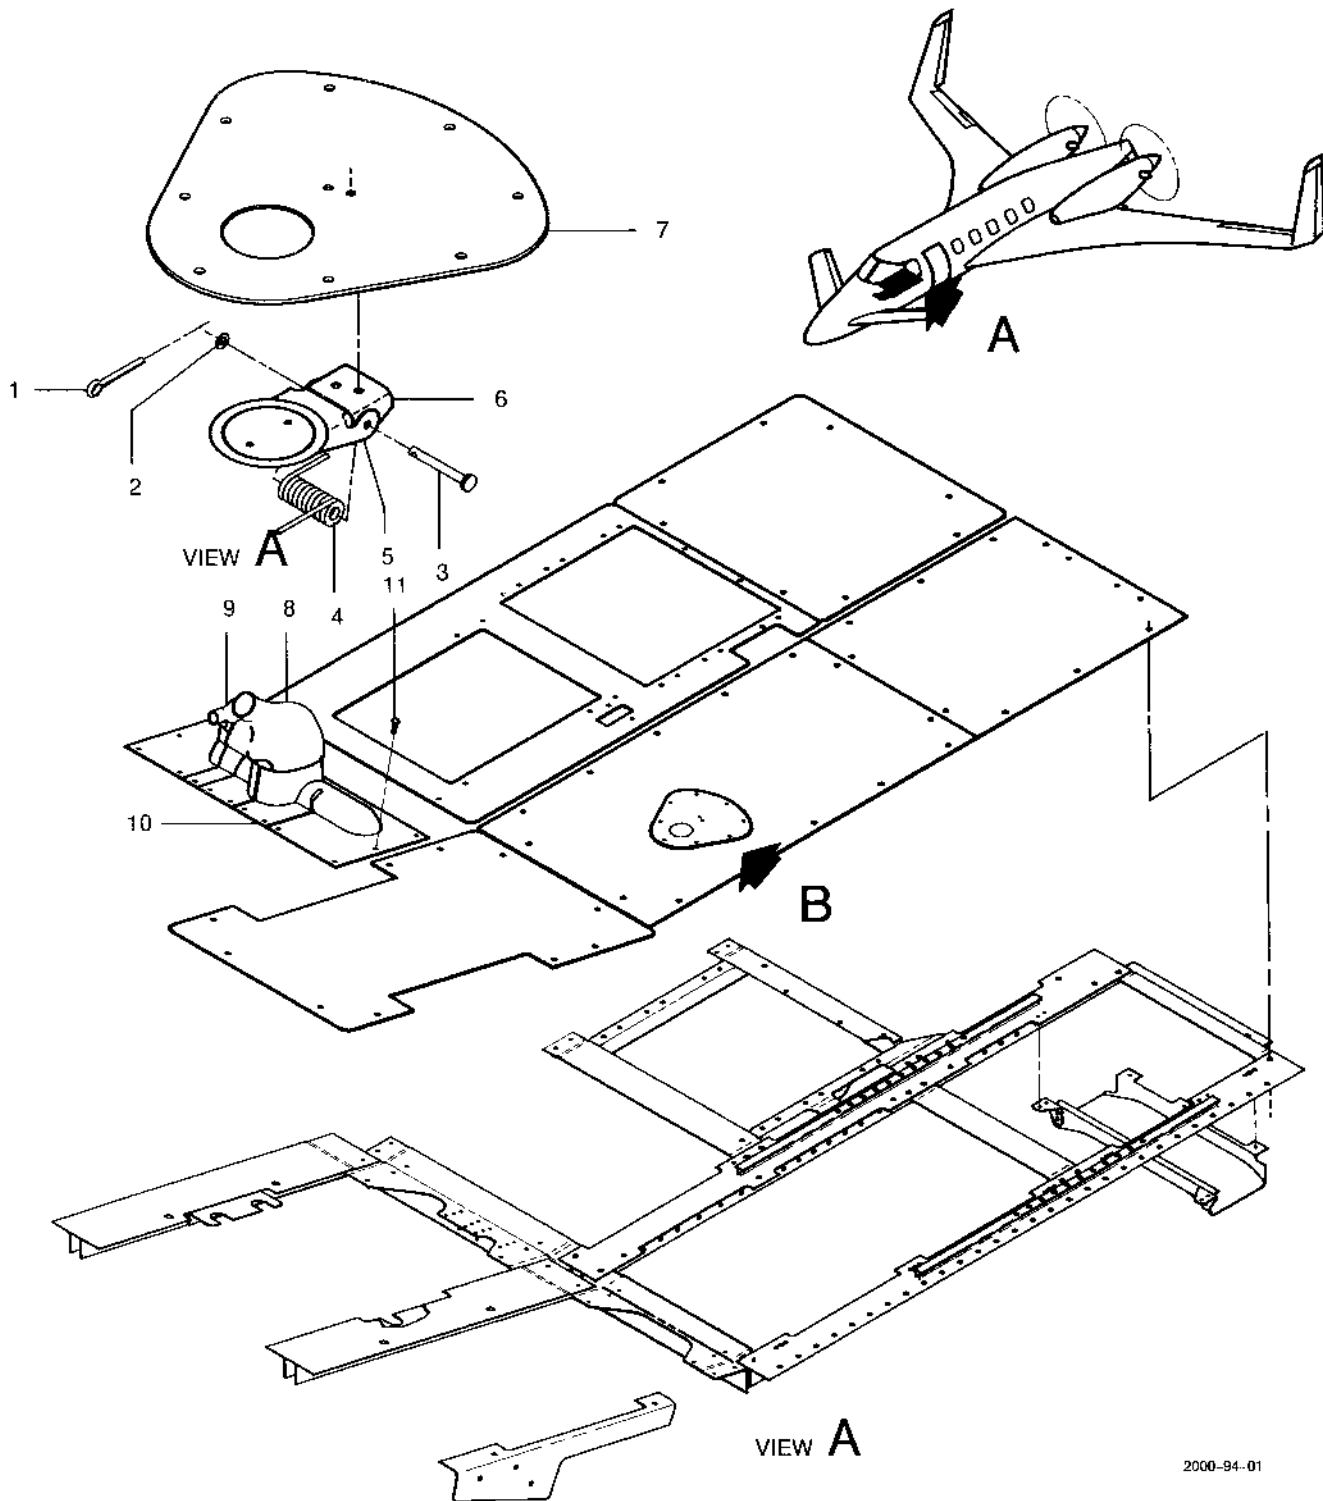


2000-94-01

FIGURE 20-50. COCKPIT FLOOR PANELS
/SHEET 1 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-50	122-524017-1	COVER INSTL, RUDDER PEDAL ADJUSTMENT.....	NP	
	122-524017-3	. COVER ASSY, RUDDER PEDAL ADJUSTMENT.....	1	
	122-524017-19	. COVER ASSY, RUDDER PEDAL ADJUSTMENT.....	1	2
	122-524017-21	. COVER ASSY, RUDDER PEDAL ADJUSTMENT.....	1	3
- 1	MS24665-132	. . PIN, COTTER.....	1	
- 2	AN960-4	. . WASHER.....	1	
- 3	MS20392-1C35	. . PIN.....	1	4
	MS20392-1C37	. . PIN.....	1	3
- 4	115150	. . SPRING.....	1	
- 5	122-524017-11	. . ARM ASSY.....	1	
- 6	122-524017-5	. . BRACKET.....	1	
- 7	122-524017-7	. . COVER.....	1	1
	122-524017-17	. . COVER.....	1	5
	122-524108-1	COVER INSTL, CONTROL COLUMN FLOOR.....	NP	
- 8	122-524108-5	. BOOT ASSY, CONTROL COLUMN TEE.....	1	
	131364-6-064	. FASTENER, BOOT UPR/BONDED TO CONTROL COLUMN/..	1	
	131364-6-176	. FASTENER, BOOT LWR/BONDED TO FLOOR COVER/.....	1	
- 9	122-524108-1	. BOOT ASSY, CONTROL COLUMN ELEVATOR TUBE.....	1	
	131364-6-035	. FASTENER, BOOT/BONDED TO ELEVATOR PUSH ROD/.....	1	
	131364-6-110	. FASTENER, BOOT/BONDED TO FLOOR COVER/.....	1	
- 10	122-524107-1	. COVER, CONTROL COLUMN FLOOR.....	1	
		/ATTACHING PARTS/		
- 11	AN525-832R7	. SCREW.....	13	
		---★---		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

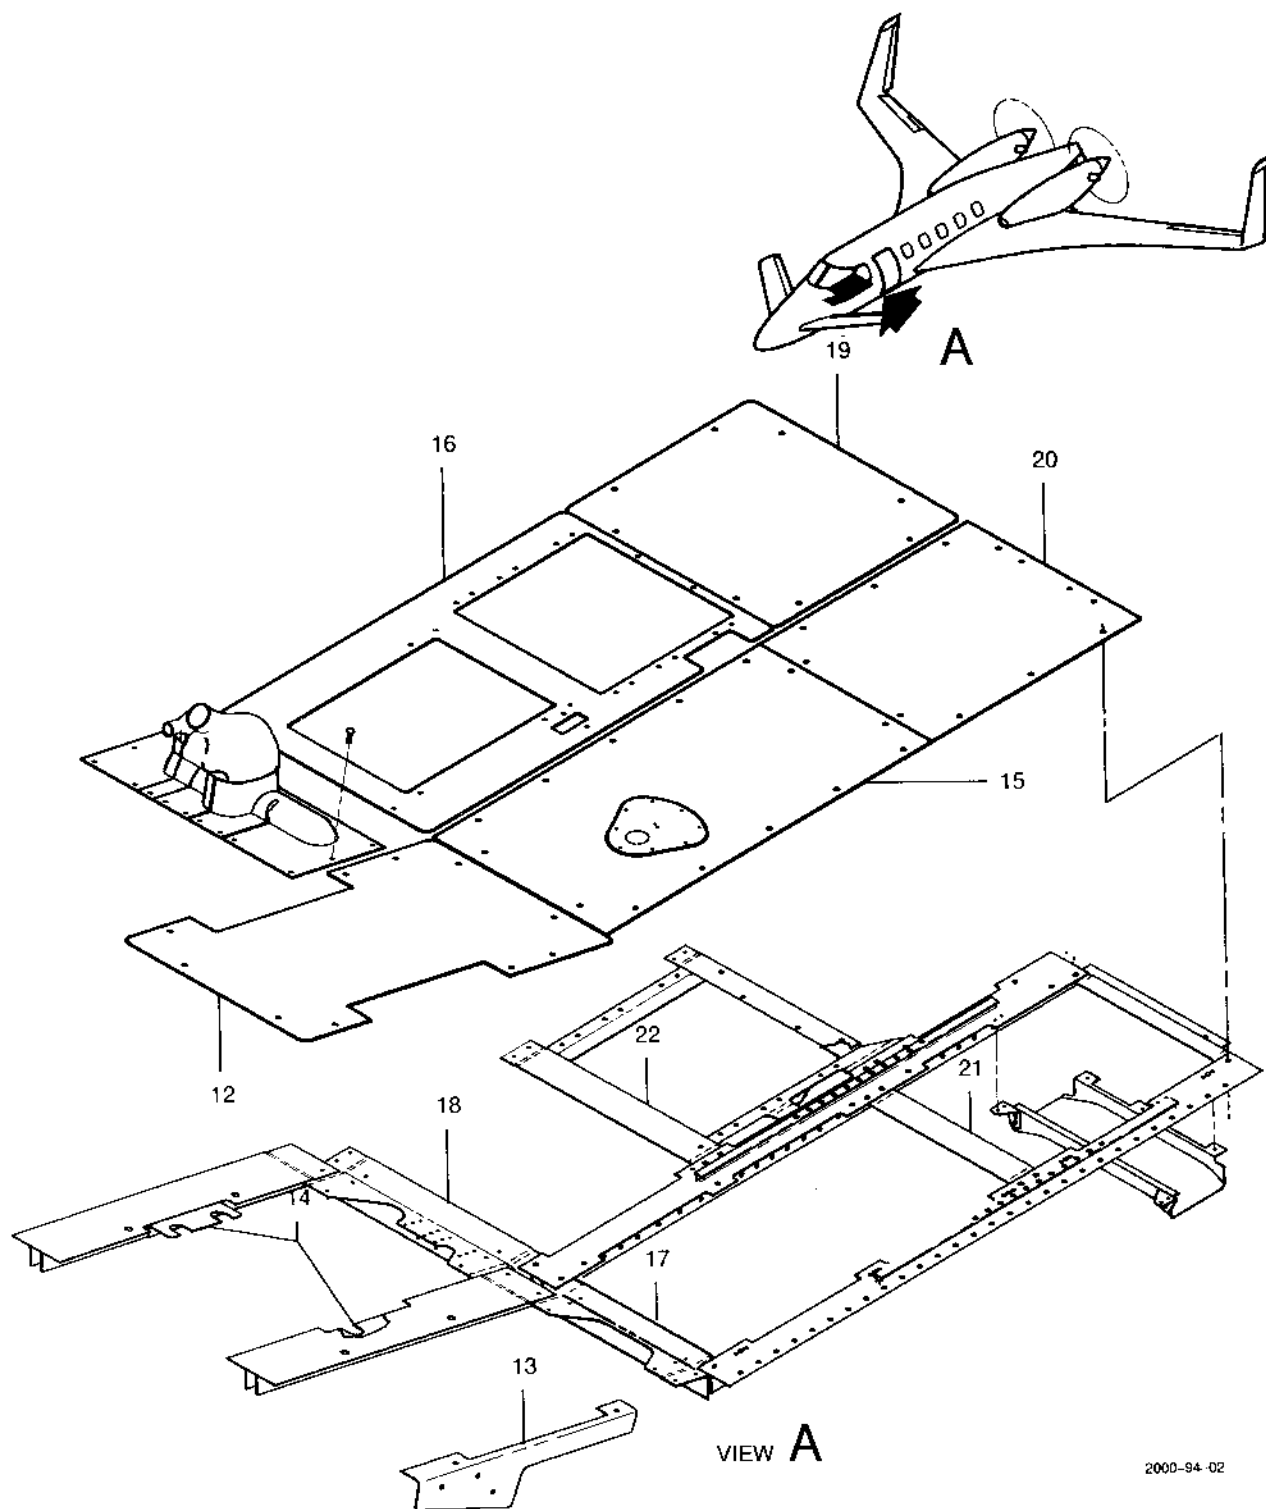

2000-94-02

FIGURE 20-50. COCKPIT FLOOR PANELS
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
20-50	122-420020-1	FLOOR INSTL, COCKPIT	NP	
- 12	122-420022-59	. PANEL ASSY, LH FLOOR/STA 96.04 TO 121.00/	1	
	122-420022-67	. PANEL ASSY, RH FLOOR/STA 96.04 TO 121.00/	1	
	6201-9	. . STUD	10	
	6221	. . RETAINER, STUD	10	
- 13	122-420036-9	. SUPPORT ASSY, LH	1	
	122-420036-6	. SUPPORT ASSY, RH	1	
	6225	. . RECEPTACLE	3	
- 14	122-420035-23	. ANGLE, SUPPORT	2	
- 15	122-420022-47	. PANEL ASSY, RH FLOOR/STA 121.00 TO 147.00/	1	
	122-420022-63	. PANEL ASSY, LH FLOOR/STA 121.00 TO 147.00/	1	
	6201-9	. . STUD	10	
	6221	. . RETAINER, STUD	10	
- 16	122-420035-29	. COVER ASSY	1	
	MS21060L08	. . NUTPLATE	4	
	MS21060L3	. . NUTPLATE	1	
- 17	122-420024-45	. SUPPORT ASSY, LH	1	
	122-420024-46	. SUPPORT ASSY, RH	1	
	6225	. . RECEPTACLE	4	
- 18	122-420024-35	. SUPPORT ASSY	1	
	MS21060L3	. . NUTPLATE	6	
- 19	122-420021-11	. PANEL ASSY, CENTER FLOOR	1	
	6201-9	. . STUD	8	
	6221	. . RETAINER, STUD	8	
- 20	122-420022-49	. PANEL ASSY, LH & RH FLOOR/STA 147.00 TO	2	
		163.00/		
	6201-9	. . STUD	8	
	6221	. . RETAINER, STUD	8	
- 21	122-420024-39	SUPPORT ASSY, LH	1	
	122-420024-5	SUPPORT ASSY, RH	1	
	6225	. . RECEPTACLE	4	
- 22	122-420024-43	. SUPPORT	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

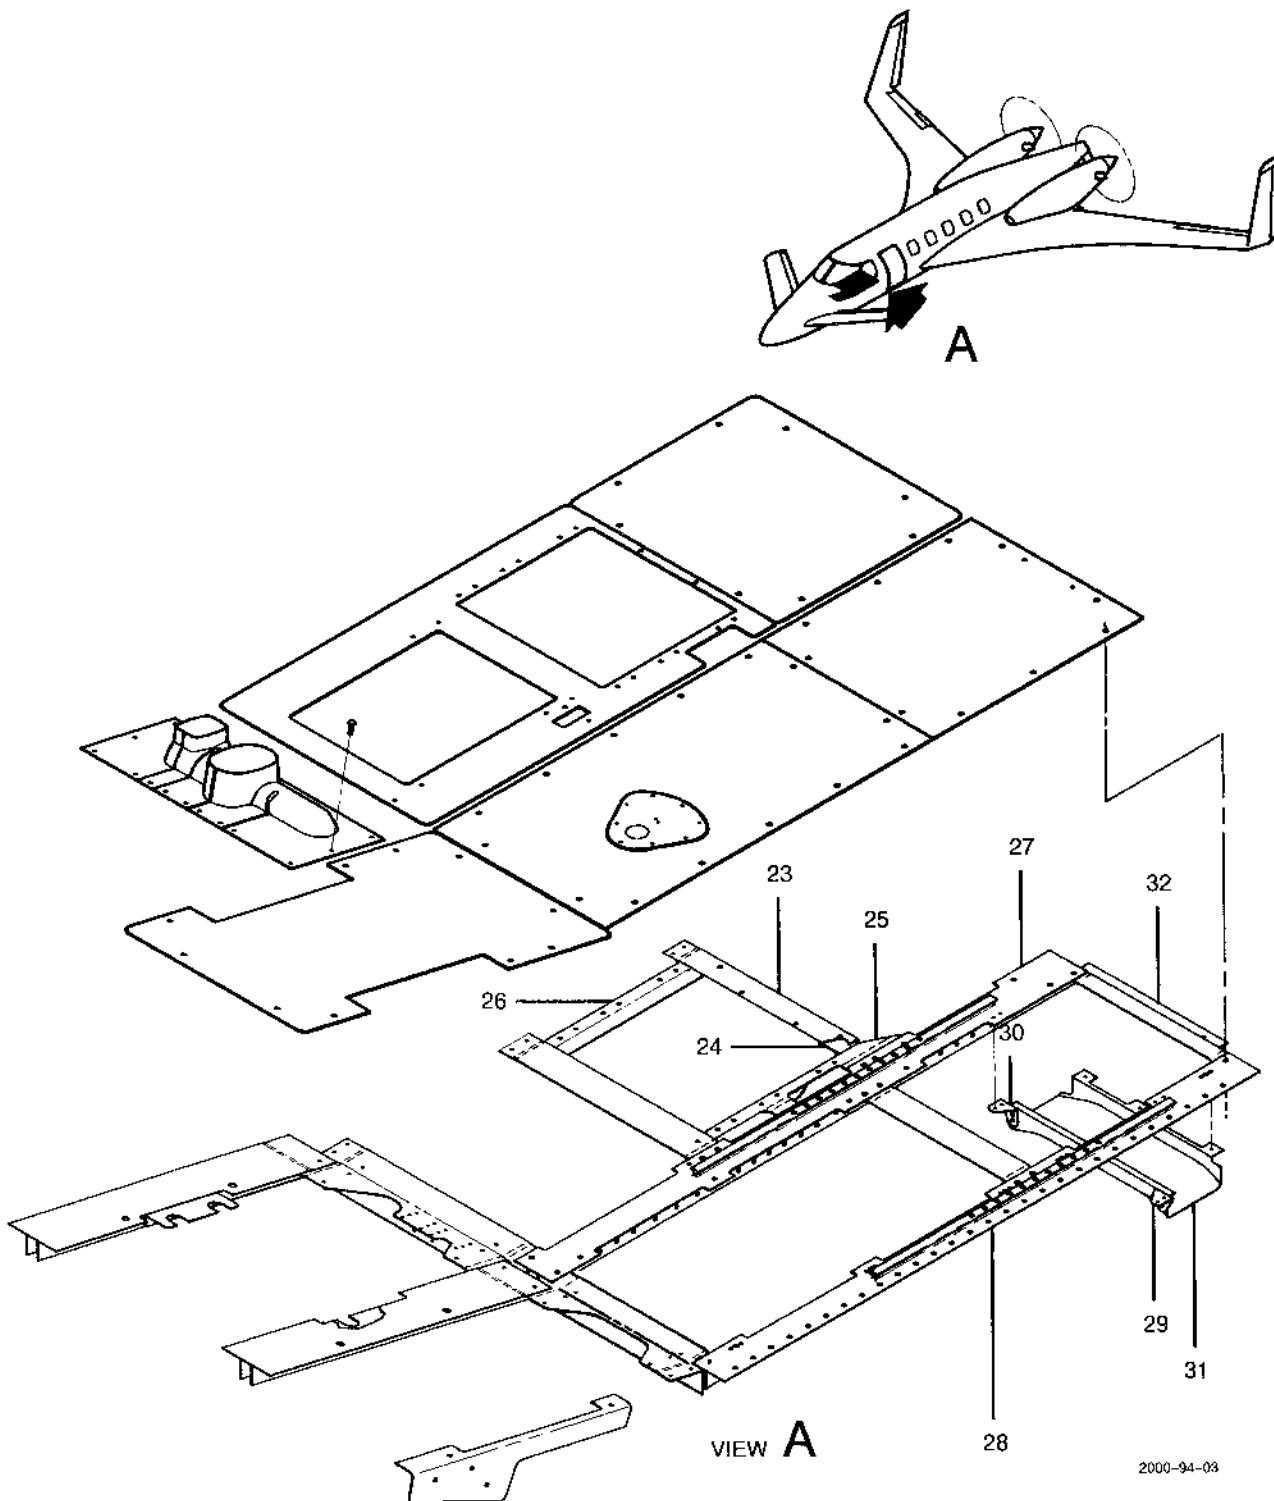


FIGURE 20-50. COCKPIT FLOOR PANELS
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-50 -23	122-420035-39	. SUPPORT ASSY	1	
	6225	. . RECEPTACLE	1	
	MS21060L3	. . NUTPLATE	2	
-24	122-420035-43	. BRACKET ASSY	1	
	6225	. . RECEPTACLE	1	
-25	122-420035-47	. SUPPORT ASSY	1	
	6225	. . RECEPTACLE	1	
	MS21060L08	. . NUTPLATE	3	
	MS21060L3	. . NUTPLATE	3	
-26	122-420035-51	. SUPPORT ASSY	1	
	MS21060L08	. . NUTPLATE	3	
	MS21060L3	. . NUTPLATE	3	
-27	122-420025-5	. TRACK ASSY, LH INBD SEAT	1	
	122-420025-6	. TRACK ASSY, RH INBD SEAT	1	
	6225	. . RECEPTACLE	7	
	MS27061L3	. . NUTPLATE/RH TRACK ONLY/	1	
-28	122-420032-5	. TRACK ASSY, LH OUTBD SEAT	1	
	122-420032-6	. TRACK ASSY, RH OUTBD SEAT	1	
	6225	. . RECEPTACLE	5	
	122-364158-1	. TRAY ASSY, CROSSOVER ELECTRIC WIRE	1	
-29	122-361057-52	. . ANGLE, LH CLIP	1	
-30	122-361057-51	. . ANGLE, RH CLIP	1	
-31	122-364158-3	. . TRAY, CROSSOVER ELECTRIC WIRE	1	
-32	122-420024-27	. SUPPORT ASSY, LH	1	
	122-420024-23	. SUPPORT ASSY, RH	1	
	6225	. . RECEPTACLE, LH SUPPORT	2	
	MS21060L08	. . NUTPLATE, RH SUPPORT	2	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-20	2	NC-21 THRU NC-26
3	NC-27 AND AFTER	4	NC-4 THRU NC-26
5	NC-21 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-20-60
CABIN FLOOR AND AISLE PANELS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

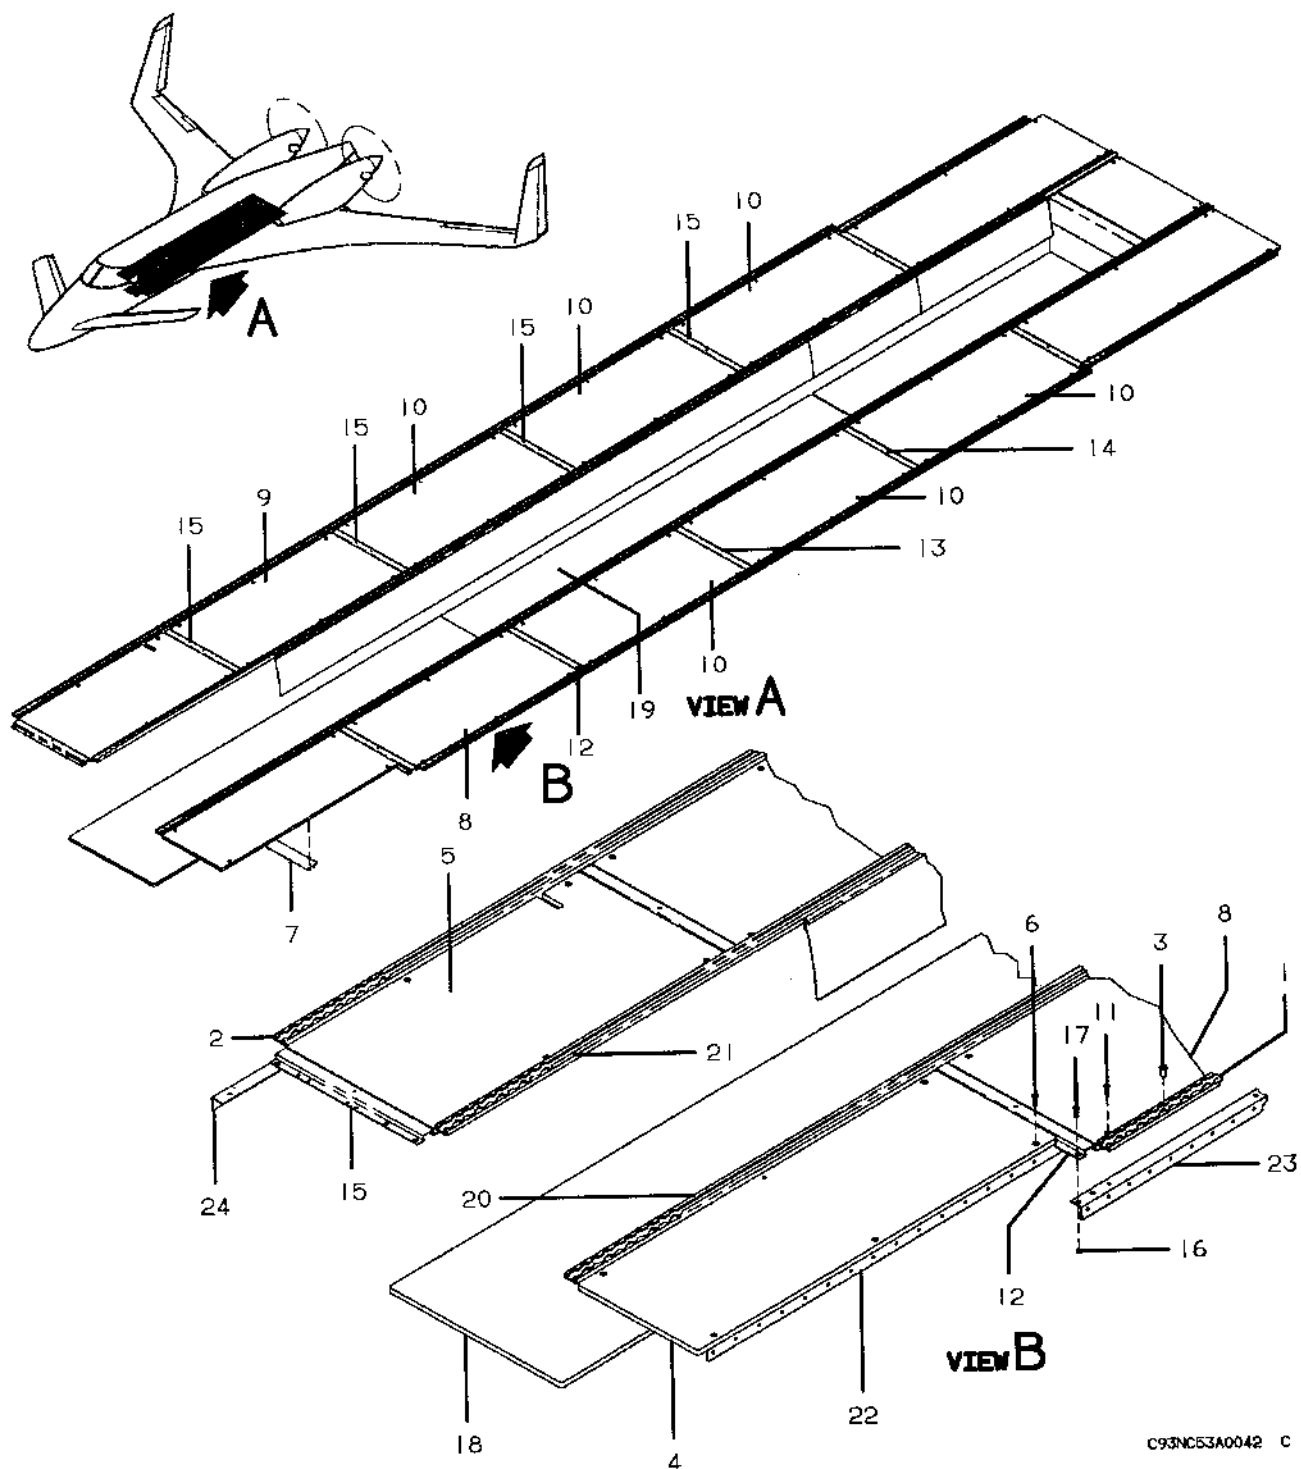



C93NC53A0042 C

FIGURE 20-60. CABIN FLOOR AND AISLE PANELS
/SHEET 1 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-60	122-430020-3	FLOOR INSTL, CABIN	NP	
- 1	122-430024-29	. TRACK, LH OUTBD FWD SEAT	1	
- 2	122-430024-31	. TRACK, RH OUTBD FWD SEAT	1	
		/ATTACHING PARTS/		
- 3	MS21140U0604	. BOLT, LOCK	34	
		---★---		
- 4	122-430022-1	. PANEL ASSY, LH FLOOR/STA 163.00 TO 196.63/	NP	1
		/ORDER 122-430022-51 FOR SPARES/		
	122-430022-51	. PANEL ASSY, LH FLOOR/STA 163.00 TO 196.63/	1	2
- 5	122-430022-3	. PANEL ASSY, RH FLOOR/STA 168.95 TO 196.63/	1	
		/ATTACHING PARTS/		
- 6	MS24693S276	. SCREW	6	
		---★---		
	SL5107A3-570	. . SPACER, LH FLOOR PANEL	6	
	SL5107A3-410	. . SPACER, RH FLOOR PANEL	6	
- 7	122-430023-23	. INTERCOSTAL	1	
- 8	122-430022-37	. PANEL ASSY, LH FLOOR/STA 196.63 TO 227.47/	NP	1
		/ORDER 122-430022-57 FOR SPARES/		
	122-430022-57	. PANEL ASSY, LH FLOOR/STA 196.63 TO 227.47/	1	2
- 9	122-430022-35	. PANEL ASSY, RH FLOOR/STA 196.63 TO 227.47/	1	
- 10	122-430022-33	. PANEL ASSY, LH & RH FLOOR/STA 227.47 TO	6	
		320.00/		
		/ATTACHING PARTS/		
- 11	MS24693S276	. SCREW	6	
		---★---		
	SL5107A3-410	. . SPACER, FLOOR PANEL	6	
- 12	122-430023-27	. SUPPORT, FLOOR PANEL LATERAL	2	
- 13	122-430023-25	. SUPPORT, FLOOR PANEL LATERAL	1	
- 14	122-430023-29	. SUPPORT, FLOOR PANEL LATERAL	1	
- 15	122-430023-17	. SUPPORT, FLOOR PANEL LATERAL	5	
		/ATTACHING PARTS/		
- 16	MS21044N3	. NUT	AR	
- 17	MS24693S271	. SCREW	AR	
		---★---		
- 18	122-430021-49	. PANEL ASSY, AISLE FWD FLOOR/STA 163.00 TO	1	3
		300.00/		
	122-430021-83	. PANEL ASSY, AISLE FWD FLOOR/STA 163.00 TO	1	4
		300.00/		
	122-430021-103	. PANEL ASSY, AISLE FWD FLOOR/STA 163.00 TO	1	2
		231.75/		
- 19	122-430021-107	. PANEL ASSY, AISLE CTR FLOOR/STA 231.75 TO	1	2
		300.00/		
- 20	122-430024-15	. TRACK ASSY, LH INBD FWD SEAT	1	
- 21	122-430024-17	. TRACK ASSY, RH INBD FWD SEAT	1	
	MS21060-3	. . NUTPLATE, LH & RH	15	
- 22	122-430081-1	. SUPPORT ASSY, LH FWD LONGITUDINAL	1	
	MS21060-3	. . NUTPLATE	3	
- 23	122-430081-19	. SUPPORT ASSY, LH CTR LONGITUDINAL	1	5
	122-430081-37	. SUPPORT ASSY, LH CTR LONGITUDINAL	1	6
	122-430081-49	. SUPPORT ASSY, LH CTR LONGITUDINAL	1	7
	MS21060-3	. . NUTPLATE	12	
- 24	122-430081-17	. SUPPORT ASSY, RH FWD LONGITUDINAL	1	5
	122-430081-33	. SUPPORT ASSY, RH FWD LONGITUDINAL	1	6
	122-430081-45	. SUPPORT ASSY, RH FWD LONGITUDINAL	1	7
	MS21060-3	. . NUTPLATE	15	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

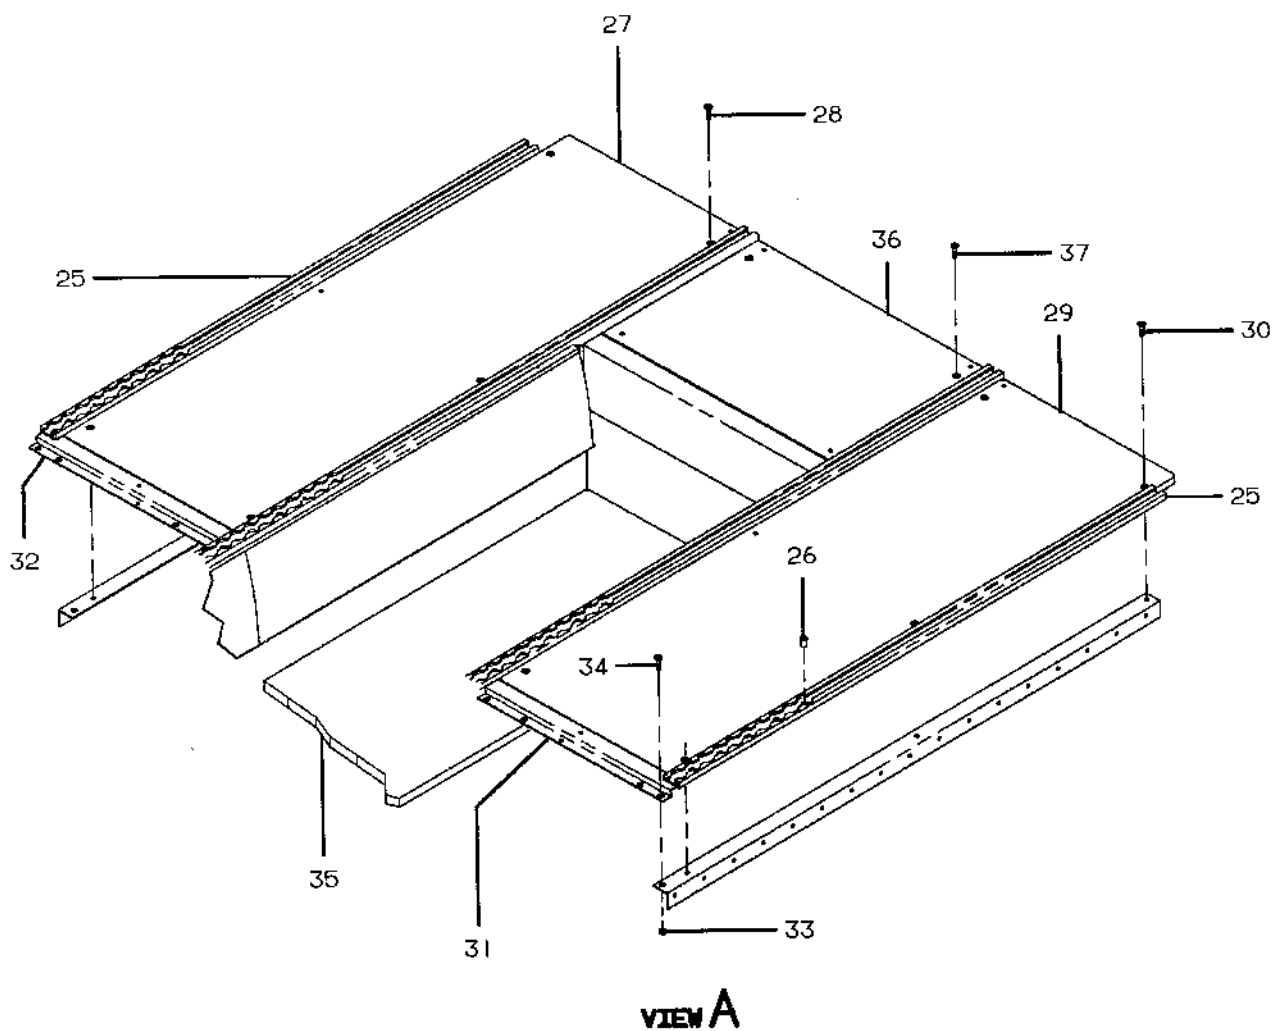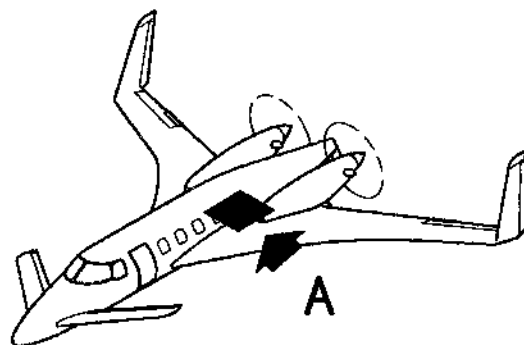

C93NC53A0043 C

FIGURE 20-60.CABIN FLOOR AND AISLE PANELS
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-60 -25	122-430024-27	. TRACK,LH & RH AFT OUTBD SEAT	2	10
	122-430024-33	. TRACK,LH & RH AFT OUTBD SEAT	2	9
		/ATTACHING PARTS/		
-26	MS21140U0604	. BOLT,LOCK	25	
		---★---		
-27	122-430022-41	. PANEL ASSY, LH OUTBD FLOOR/STA 320.00 TO	1	1
		357.00/		
	122-430022-53	. PANEL ASSY, LH OUTBD FLOOR/STA 320.00 TO	1	2
		357.00/		
		/ATTACHING PARTS/		
-28	MS24693S276	. SCREW	6	
		---★---		
	SL5107A3-410	. . SPACER	6	
-29	122-430022-42	. PANEL ASSY, RH OUTBD FLOOR/STA 320.00 TO	1	1
		357.00/		
	122-430022-47	. PANEL ASSY, RH OUTBD FLOOR/STA 320.00 TO	1	2
		357.00/		
		/ATTACHING PARTS/		
-30	MS24693S276	. SCREW	6	
		---★---		
	SL5107A3-410	. . SPACER	6	
-31	122-430023-19	. SUPPORT, LH LATERAL	1	
-32	122-430023-20	. SUPPORT, RH LATERAL	1	
		/ATTACHING PARTS/		
-33	MS21044N3	. NUT	4	
-34	MS24693S271	. SCREW	4	
		---★---		
-35	122-430021-47	. PANEL ASSY, AISLE AFT FLOOR	1	3
	122-430021-81	. PANEL ASSY, AISLE AFT FLOOR	1	4
	122-430021-85	. PANEL ASSY, AISLE AFT FLOOR	1	2
-36	122-430021-7	. STEP ASSY	1	13
	122-430021-59	. STEP ASSY	1	14
	122-430021-89	. STEP ASSY	1	2
		/ATTACHING PARTS/		
-37	MS24693S276	. SCREW	4	
		---★---		
	SL5107A3-410	. . SPACER, UPPER PANEL	4	
	SL5107A3-570	. . SPACER, VERTICAL PANEL	4	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

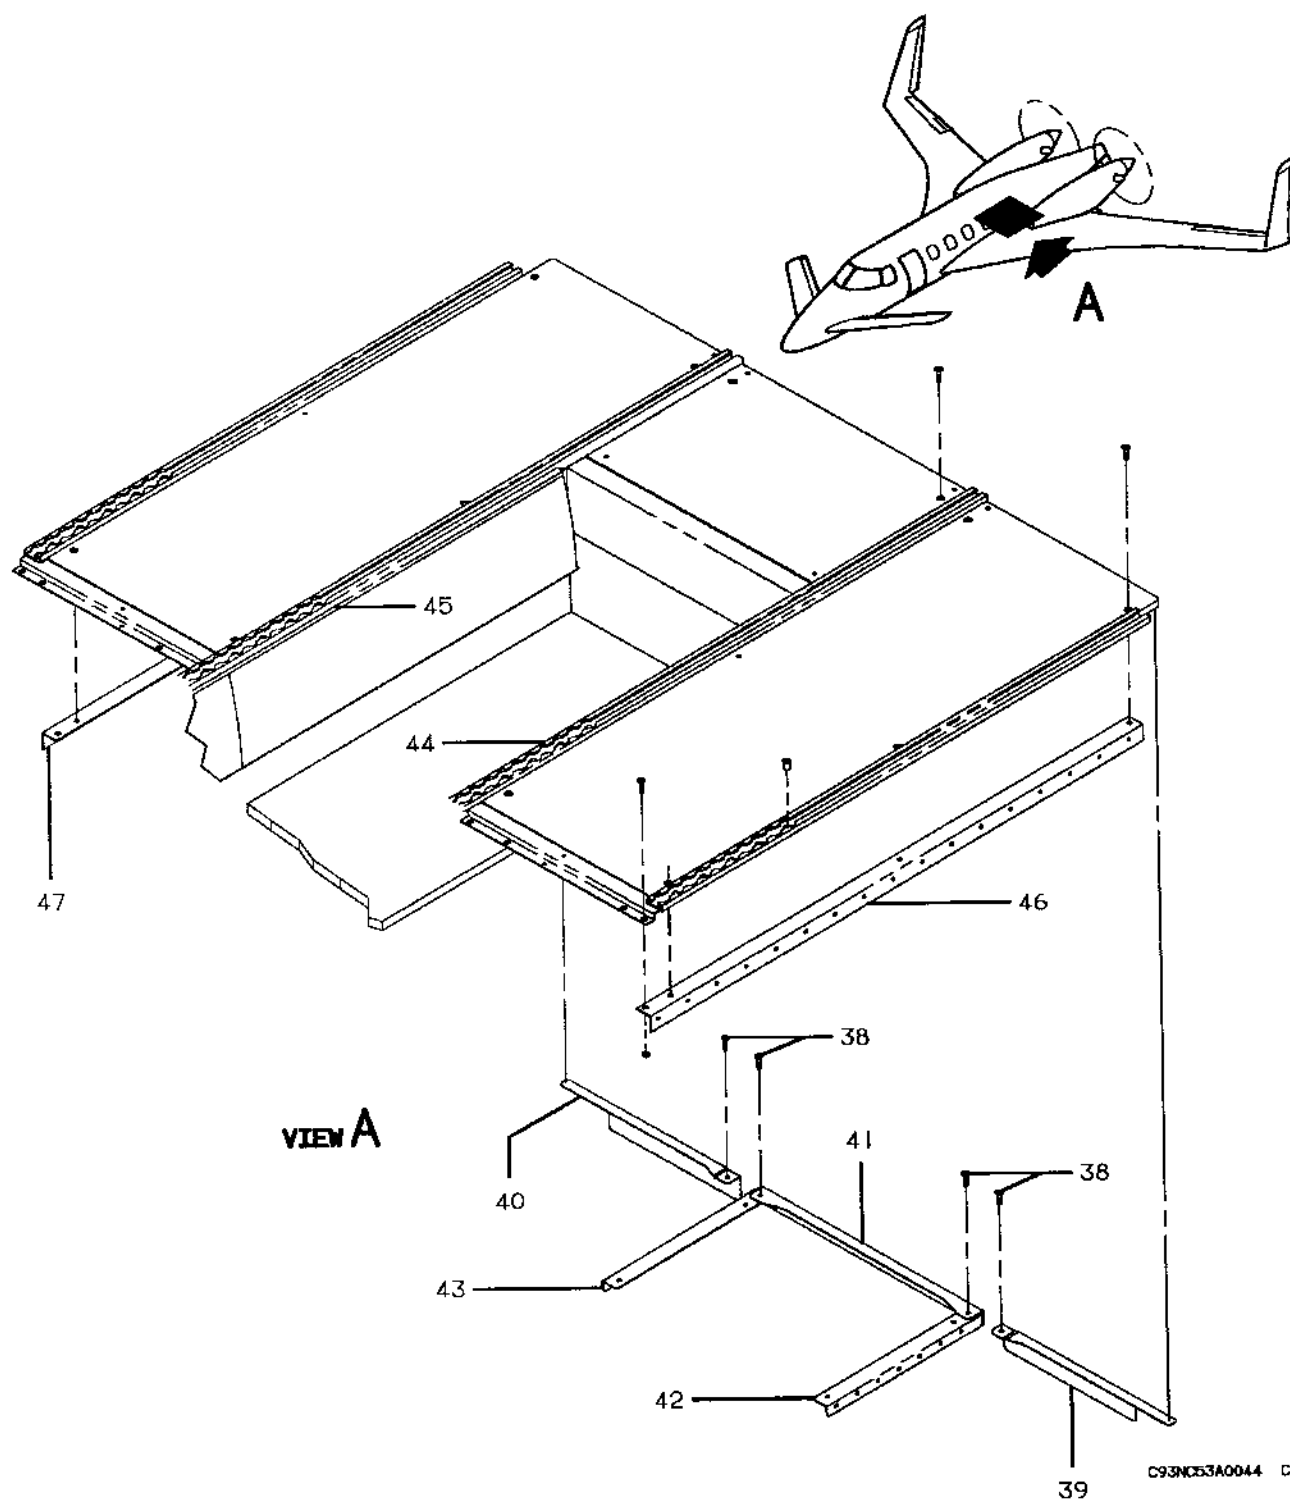


FIGURE 20-60. CABIN FLOOR AND AISLE PANELS
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-60 - 38	MS24693S271	. SCREW.....	4	
- 39	122-430023-11	. SUPPORT, LH LATERAL.....	1	
- 40	122-430023-12	. SUPPORT, RH LATERAL.....	1	
	MS21056-3	. . NUTPLATE.....	1	
- 41	122-430023-13	. SUPPORT, STEP LATERAL.....	1	
	MS21056-3	. . NUTPLATE.....	2	
- 42	122-430023-15	. SUPPORT ASSY, STEP LH.....	1	1
	122-430023-35	. SUPPORT ASSY, STEP LH.....	1	8
	122-430023-33	. SUPPORT ASSY, STEP LH.....	1	9
- 43	122-430023-16	. SUPPORT ASSY, STEP RH.....	1	10
	122-430023-34	. SUPPORT ASSY, STEP RH.....	1	9
	MS21056-3	. . NUTPLATE.....	2	
- 44	122-430024-23	. TRACK ASSY, LH INBD AFT SEAT.....	1	10
	122-430024-35	. TRACK ASSY, LH INBD AFT SEAT.....	1	9
- 45	122-430024-24	. TRACK ASSY, RH INBD AFT SEAT.....	1	10
	122-430024-36	. TRACK ASSY, RH INBD AFT SEAT.....	1	9
	MS21060-3	. . NUTPLATE.....	3	
- 46	122-430081-21	. SUPPORT ASSY, LH AFT LONGITUDINAL.....	1	10
	122-430081-29	. SUPPORT ASSY, LH AFT LONGITUDINAL.....	1	11
	122-430081-41	. SUPPORT ASSY, LH AFT LONGITUDINAL.....	1	12
- 47	122-430081-22	. SUPPORT ASSY, RH AFT LONGITUDINAL.....	1	10
	122-430081-30	. SUPPORT ASSY, RH AFT LONGITUDINAL.....	1	11
	122-430081-42	. SUPPORT ASSY, RH AFT LONGITUDINAL.....	1	12
	MS21060-3	. . NUTPLATE.....	3	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-20	2	NC-21 AND AFTER
3	NC-4 THRU NC-13	4	NC-14 THRU NC-20
5	NC-4 THRU NC-40	6	NC-41 THRU NC-47
7	NC-48 AND AFTER	8	NC-21 THRU NC-39
9	NC-40 AND AFTER	10	NC-4 THRU NC-39
11	NC-40 ONLY	12	NC-41 AND AFTER
13	NC-4 THRU NC-15	14	NC-16 THRU NC-20

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-20-70
NOSE AVIONICS SHELVES

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

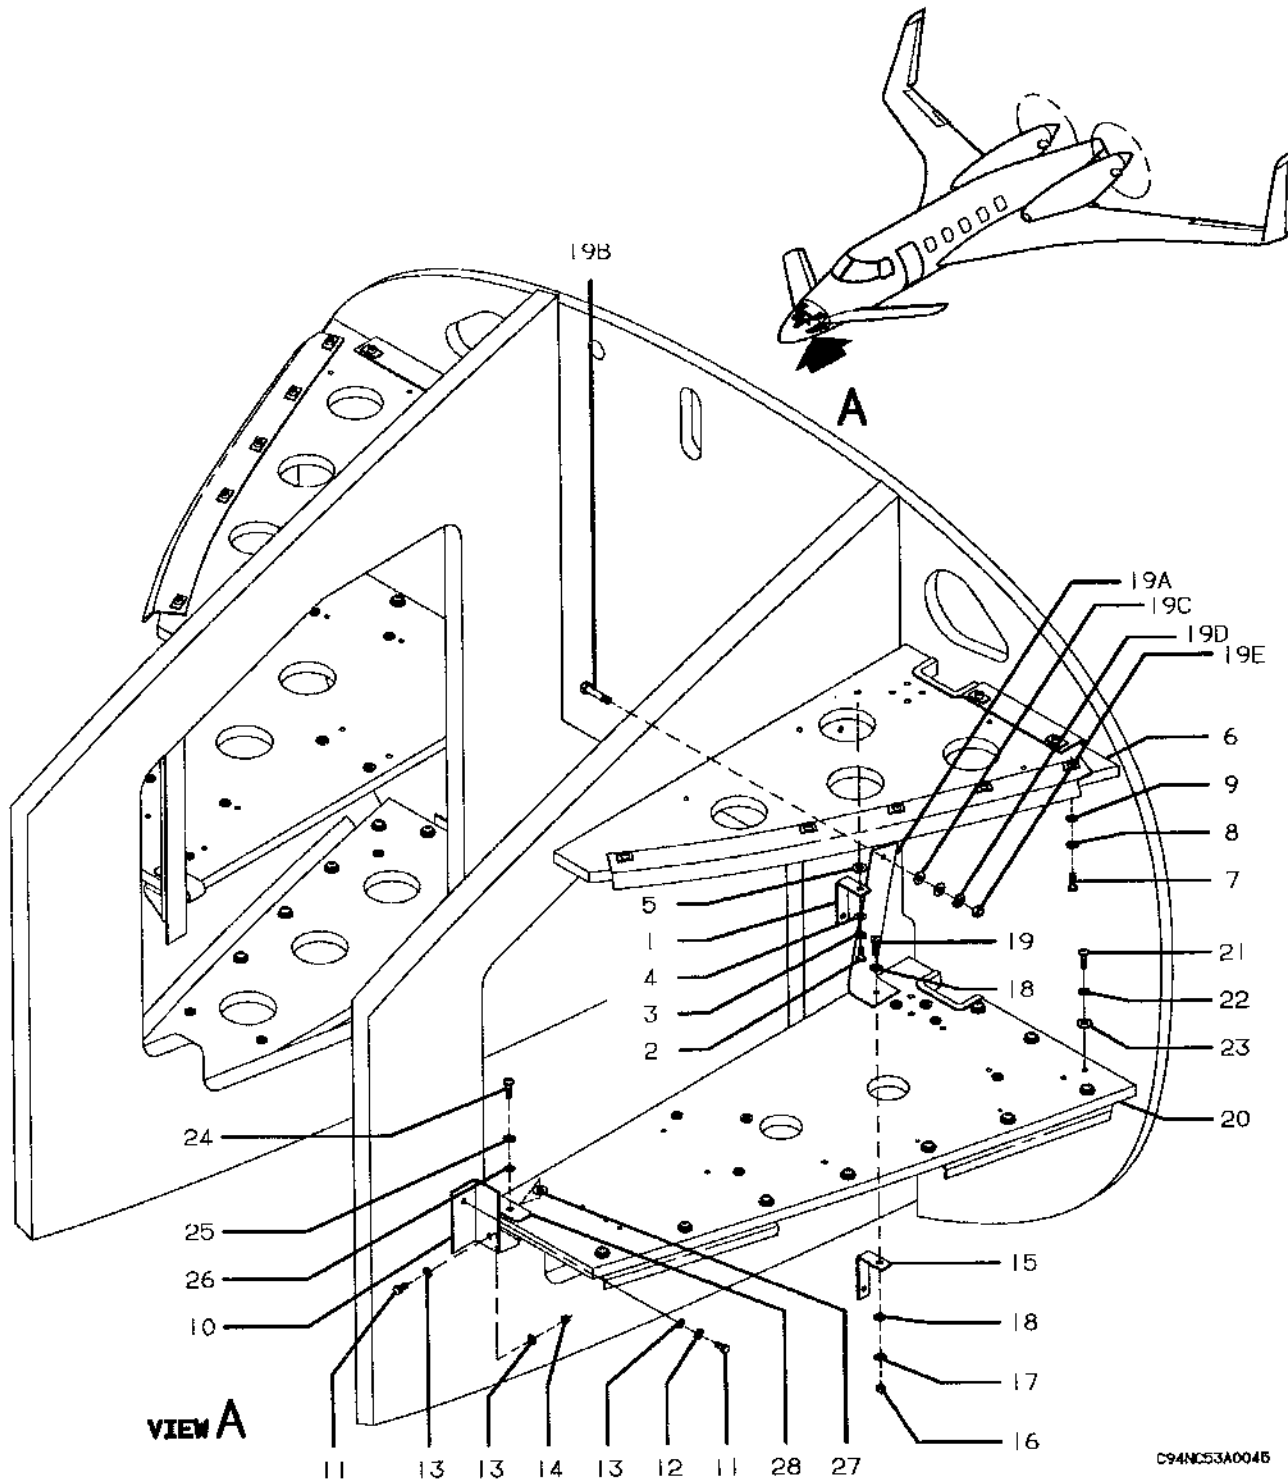


C94NC53A0045 C

FIGURE 20-70.NOSE AVIONICS SHELVES
/SHEET 1 OF 5 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-70	122-342056-3	SHELF INSTL, AVIONICS/STA 18.00 TO 46.00/.....	NP	
- 1	331401-27	. BONDING STRAP	1	
		. /ATTACHING PARTS/		
- 2	MS35207-264	. SCREW	2	
- 3	MS35338-43	. WASHER, LOCK	2	
- 4	AN960JD10L	. WASHER	2	
- 5	AN960JD716	. WASHER	1	
		---★---		
- 6	122-341002-47	. SHELF ASSY	1	
		. /ATTACHING PARTS/		
- 7	MS35207-267	. SCREW	7	
- 8	MS35338-43	. WASHER, LOCK	7	
- 9	AN960-10L	. WASHER	7	
		---★---		
	122-341002-69	. GROMMET	2	
	122-341000-5	. SPACER	5	
	NAS1329A08K75	. RIVNUT	4	
	NAS1329A3K80	. RIVNUT	4	
- 10	122-410660-45	. SUPPORT	1	
		. /ATTACHING PARTS/		
- 11	130909B12	. BOLT	2	
- 12	MS35338-43	. WASHER, LOCK	1	
- 13	AN960-10L	. WASHER	3	
- 14	MS21044N3	. NUT, LOCK	1	
		---★---		
- 15	331401-27	. BONDING STRAP	1	
		. /ATTACHING PARTS/		
- 16	MS25082-3	. NUT	1	
- 17	MS35338-43	. WASHER, LOCK	1	
- 18	AN960JD10L	. WASHER	2	
- 19	8806	. SCREW	1	
		---★---		
- 19A	331401-35	. BOND STRAP	1	
		. /ATTACHING PARTS/		
- 19B	130909B12	. BOLT	1	
- 19C	AN960JD10L	. WASHER	2	
- 19D	MS35338-43	. WASHER, LOCK	1	
- 19E	MS25082-3	. NUT	1	
		---★---		
- 20	122-341002-83	. SHELF ASSY	1	
		. /ATTACHING PARTS/		
- 21	MS35207-267	. SCREW	8	
- 22	MS35338-43	. WASHER, LOCK	8	
- 23	AN960-10L	. WASHER	8	
		---★---		
- 24	MS35207-261	. SCREW	1	
- 25	MS35338-43	. WASHER, LOCK	1	
- 26	AN960JD10L	. WASHER	1	
- 27	AN960JD716	. WASHER	1	
- 28	122-340043-7	. BONDING STRAP	1	
	122-341002-69	. GROMMET	2	
	122-410660-22	. SUPPORT	1	
	NAS1329A08K75	. RIVNUT	12	
	NAS1329A3K80	. RIVNUT	7	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

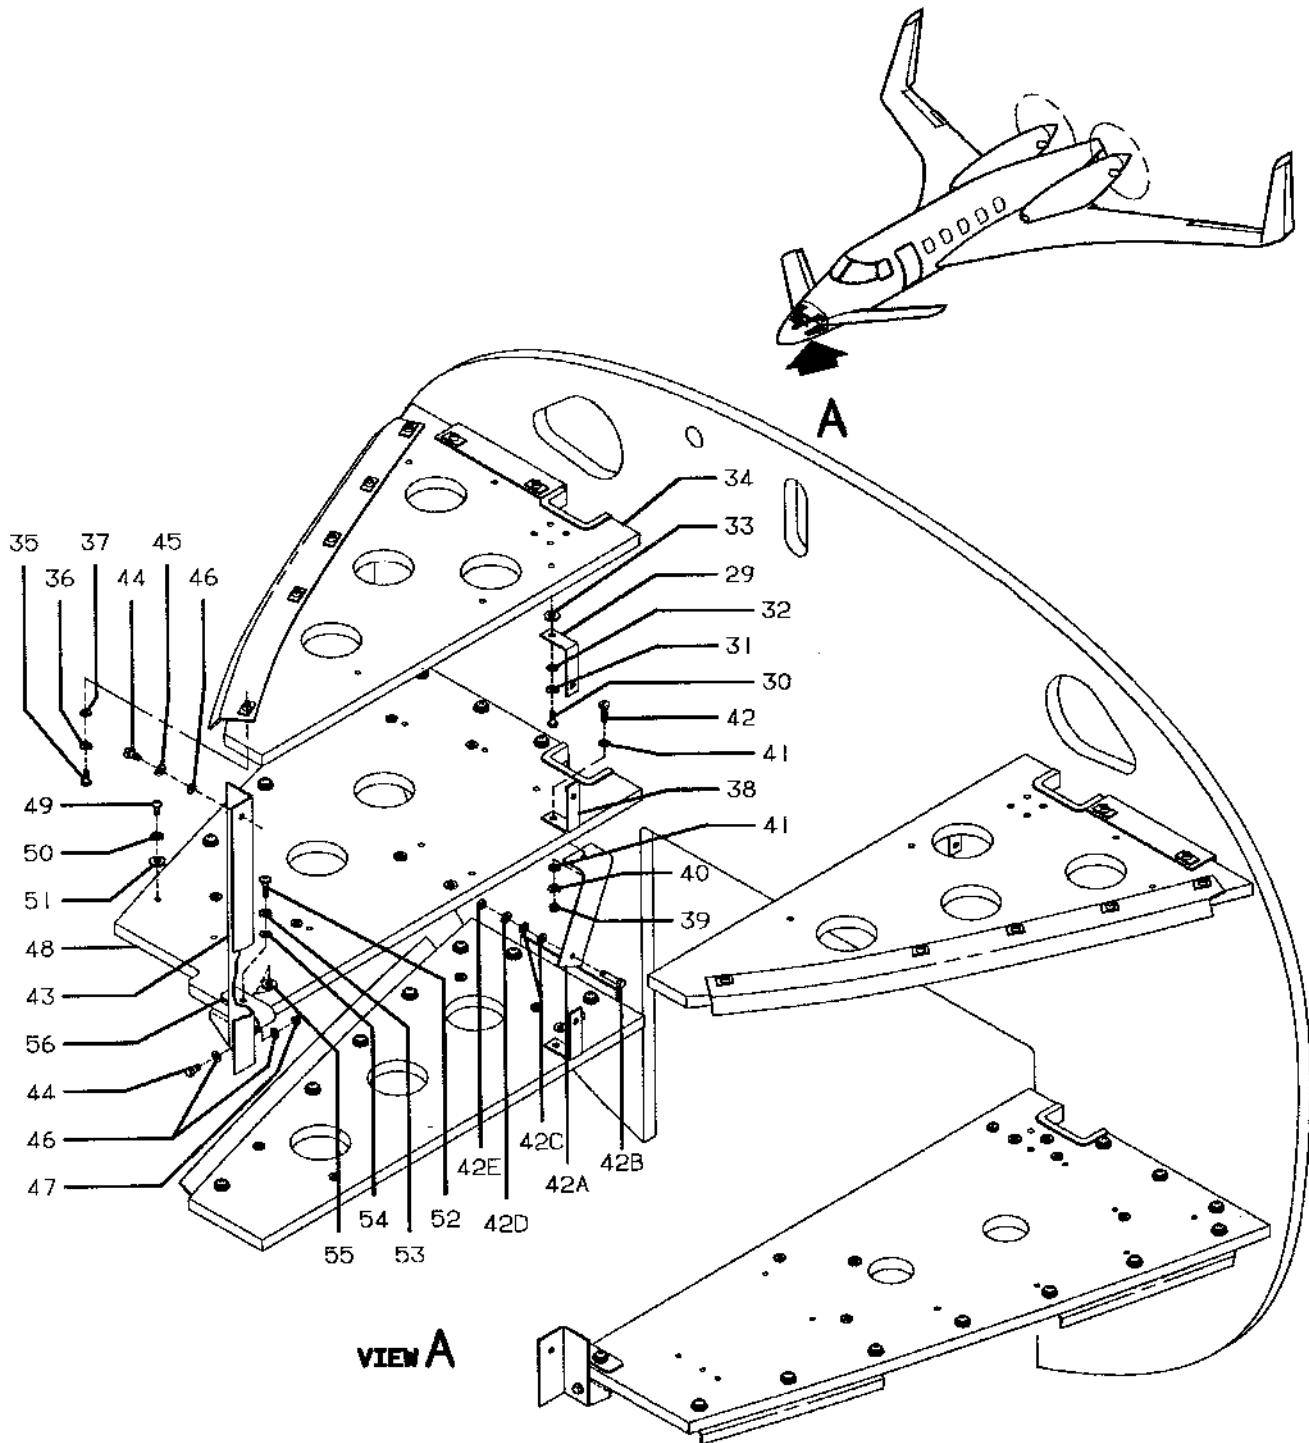

C94NC53A0046 C

FIGURE 20-70.NOSE AVIONICS SHELVES
/SHEET 2 OF 5 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-70 - 29	331401-27	. BONDING STRAP	1	
		. /ATTACHING PARTS/		
- 30	MS35207-264	. SCREW	2	
- 31	MS35338-43	. WASHER, LOCK	2	
- 32	AN960JD10L	. WASHER	2	
- 33	AN960JD716	. WASHER	1	
		---★---		
- 34	122-341002-48	. SHELF ASSY	1	
		. /ATTACHING PARTS/		
- 35	MS35207-267	. SCREW	7	
- 36	MS35338-43	. WASHER, LOCK	7	
- 37	AN960-10L	. WASHER	7	
		---★---		
	122-341002-69	. GROMMET	2	
	122-341000-5	. SPACER	5	
	NAS1329A08K75	. RIVNUT	4	
	NAS1329A3K80	. RIVNUT	4	
- 38	331401-25	. BONDING STRAP	1	
		. /ATTACHING PARTS/		
- 39	MS25082-3	. NUT	1	
- 40	MS35338-43	. WASHER, LOCK	2	
- 41	AN960JD10L	. WASHER	3	
- 42	8806	. SCREW	1	
		---★---		
- 42A	331401-17	. BOND STRAP	1	
		. /ATTACHING PARTS/		
- 42B	130909B12	. BOLT	1	
- 42C	AN960JD10L	. WASHER	2	
- 42D	MS35338-43	. WASHER, LOCK	1	
- 42E	MS25082-3	. NUT	1	
		---★---		
- 43	122-410660-43	. SUPPORT	1	
		. /ATTACHING PARTS/		
- 44	130909B12	. BOLT	2	
- 45	MS35338-43	. WASHER, LOCK	1	
- 46	AN960-10L	. WASHER	3	
- 47	MS21044N3	. NUT, LOCK	1	
		---★---		
- 48	122-341002-85	. SHELF ASSY	1	
		. /ATTACHING PARTS/		
- 49	MS35207-267	. SCREW	6	
- 50	MS35338-43	. WASHER, LOCK	6	
- 51	AN960-10L	. WASHER	6	
		---★---		
- 52	MS35207-261	. SCREW	1	
- 53	MS35338-43	. WASHER, LOCK	1	
- 54	AN960JD10L	. WASHER	1	
- 55	AN960JD716	. WASHER	1	
- 56	122-340043-7	. BONDING STRAP	1	
	122-341002-69	. GROMMET	2	
	122-410660-21	. SUPPORT	1	
	NAS1329A08K75	. RIVNUT	13	
	NAS1329A3K80	. RIVNUT	8	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


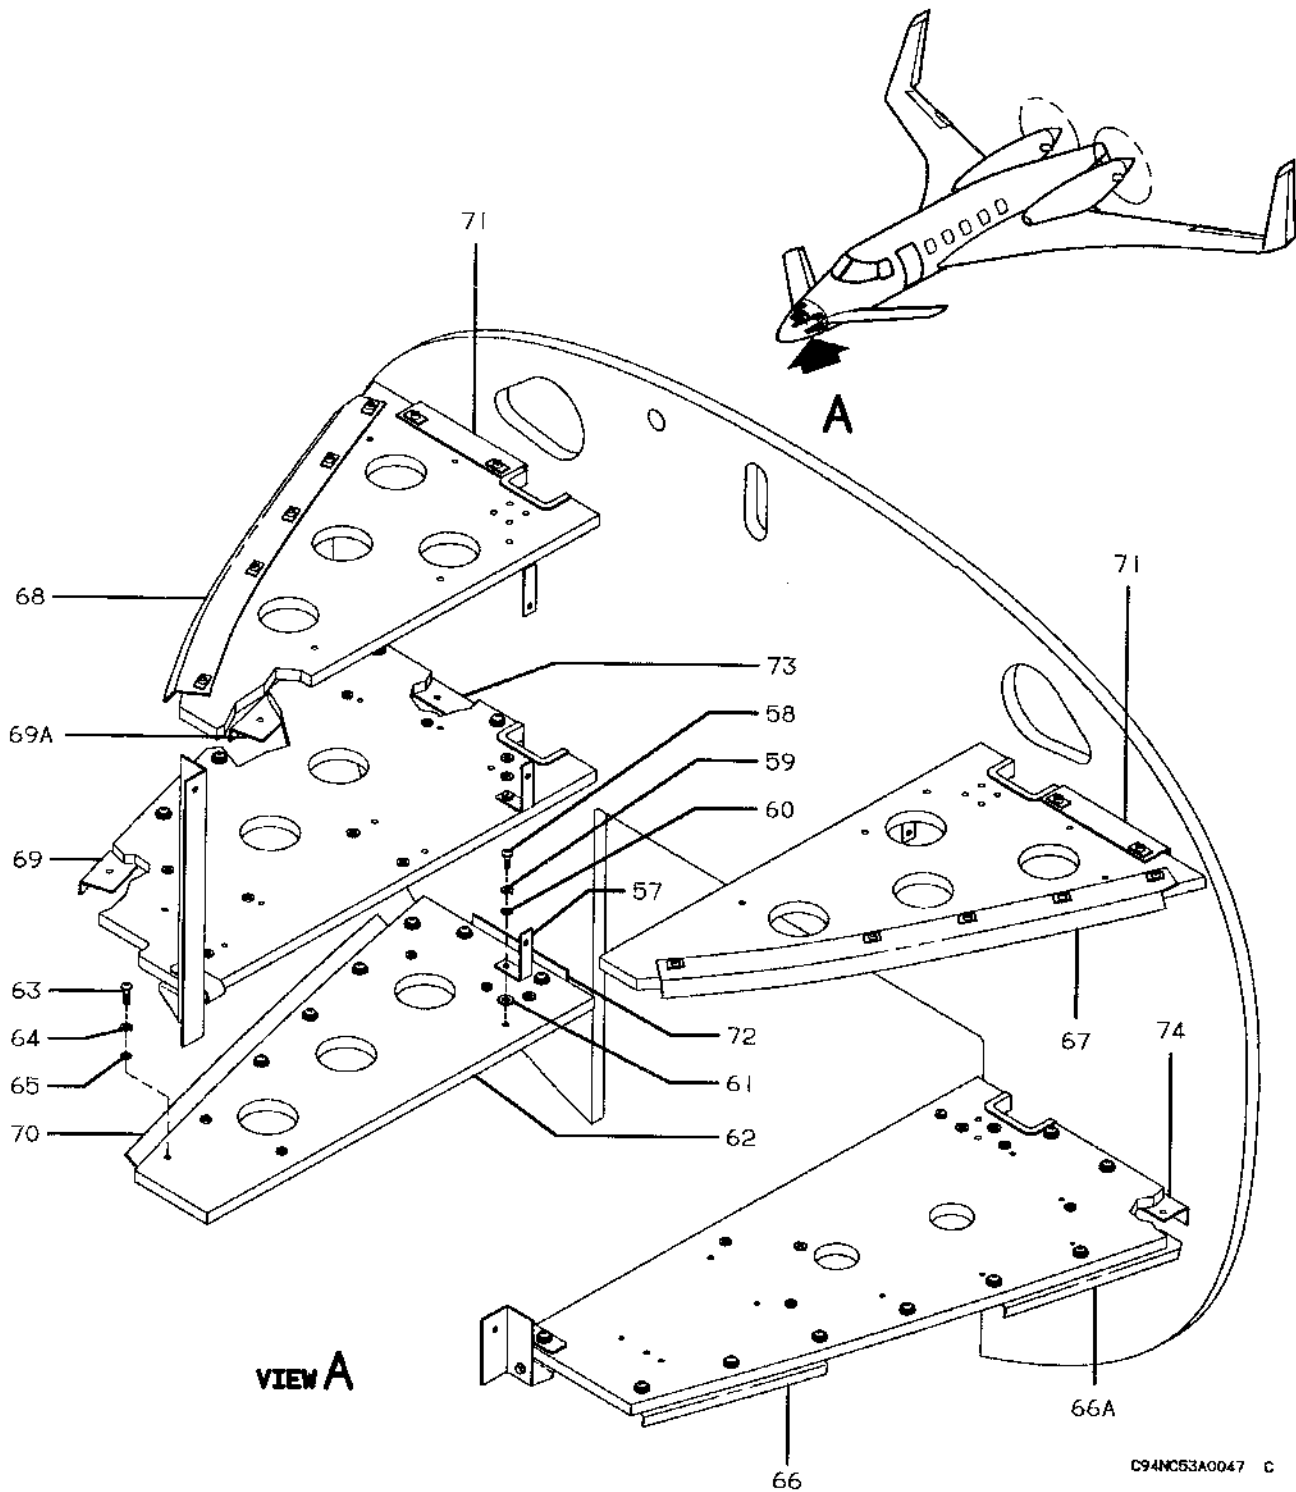


FIGURE 20-70.NOSE AVIONICS SHELVES
/SHEET 3 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-70 - 57	331401-27	. BONDING STRAP..... /ATTACHING PARTS/	1	
- 58	MS35207-264	. SCREW.....	1	
- 59	MS35338-43	. WASHER, LOCK.....	2	
- 60	AN960JD10L	. WASHER.....	2	
- 61	AN960JD716	. WASHER.....	1	
-----★-----				
- 62	122-341002-51	. SHELF ASSY..... /ATTACHING PARTS/	1	
- 63	MS35207-267	. SCREW.....	7	
- 64	MS35338-43	. WASHER, LOCK.....	7	
- 65	AN960-10L	. WASHER.....	7	
-----★-----				
	122-341000-5	. . SPACER.....	5	
	NAS1329A08K75	. . RIVNUT.....	4	
	NAS1329A3K80	. . RIVNUT.....	2	
	122-410000-1	NOSE ASSY.....	1	
	122-410000-3	. GUIDE ASSY,WIRE HARNESS/STA 46.00/.....	1	
- 66	122-410660-73	. . SUPPORT ASSY/LH/LOWER/.....	1	
- 66A	122-410660-77	. . SUPPORT ASSY/LH/LOWER/.....	1	
	2R2329	. . . PLUSNUT.....	2	
- 67	122-410660-27	. . SUPPORT ASSY/LH/UPPER/.....	1	1
	122-410660-59	. . SUPPORT ASSY/LH/UPPER/.....	1	2
- 68	122-410660-28	. . SUPPORT ASSY/RH/UPPER/.....	1	1
	122-410660-60	. . SUPPORT ASSY/RH/UPPER/.....	1	2
	S10P175CSI	. . SUPPORT ASSY/LH/UPPER/.....	5	
- 69	122-410660-65	. . SUPPORT ASSY/RH/MIDDLE/.....	1	
	2R2329	. . . PLUSNUT.....	1	
- 69A	122-410660-69	. . SUPPORT ASSY/RH/MIDDLE/.....	1	
	2R2329	. . . PLUSNUT.....	1	
- 70	122-410660-31	. . SUPPORT ASSY/RH/LOWER/.....	1	1
	122-410660-61	. . SUPPORT ASSY/RH/LOWER/.....	1	2
	S10P175CSI	. . . PLUSNUT.....	5	1
	2R2329	. . . PLUSNUT.....	5	2
	122-410040-1	BULKHEAD ASSY/STA 46.00/.....	1	
- 71	122-410660-33	. SUPPORT ASSY.....	2	
- 72	122-410660-37	. SUPPORT ASSY.....	1	
	S10P175CSI	. . PLUSNUTS.....	2	
- 73	122-410660-25	. SUPPORT ASSY.....	1	
	S10P175CSI	. . PLUSNUT.....	3	
- 74	122-410660-35	. SUPPORT ASSY.....	1	1
	122-410660-79	. SUPPORT ASSY.....	1	2
	S10P175CSI	. . PLUSNUTS.....	3	1
	2R2329	. . PLUSNUT.....	5	2

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

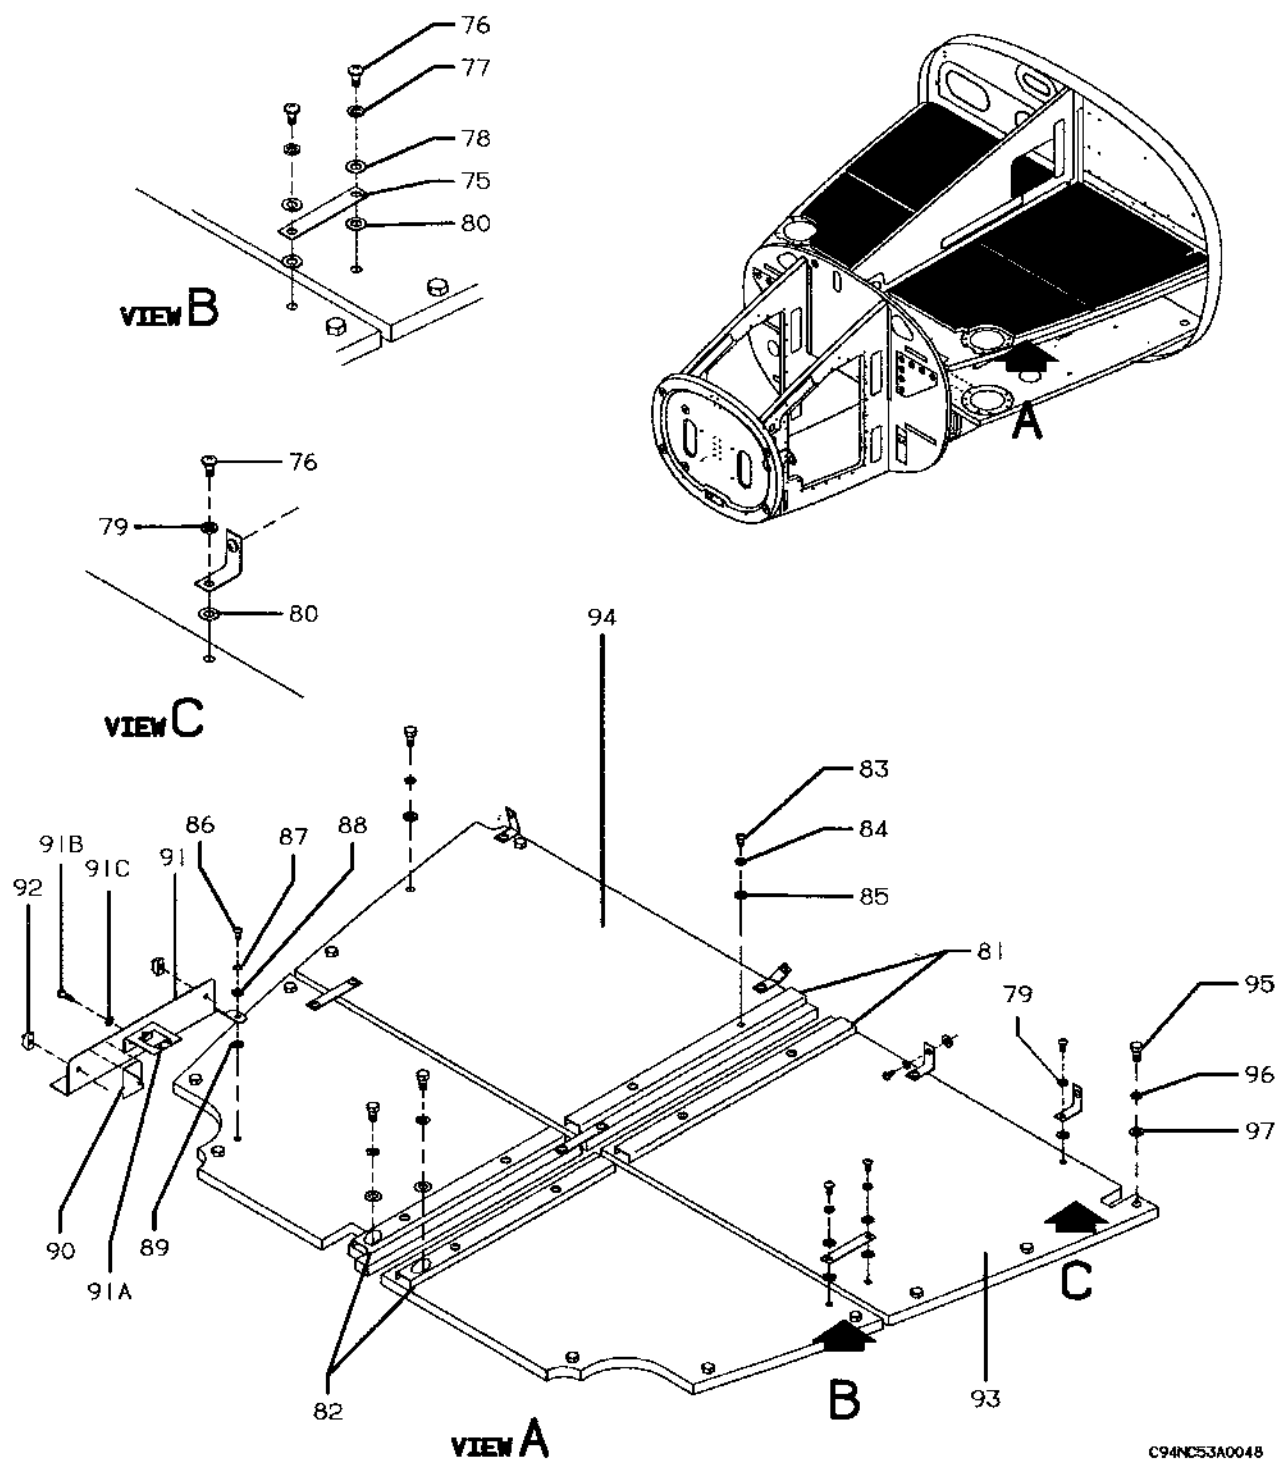

C94NC53A0048 C

FIGURE 20-70.NOSE AVIONICS SHELVES
/SHEET 4 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-70	122-340091-1	SHELF INSTL, AVIONICS, NOSE.....	NP	5
	122-340091-3	SHELF INSTL, AVIONICS, NOSE.....	NP	6
- 75	331401-27	. BONDING STRAP.....	8	
		/ATTACHING PARTS/		
- 76	MS35207-265	. SCREW.....	2	
- 77	MS35338-43	. WASHER, LOCK.....	2	
- 78	122-340070-1	. WASHER.....	2	
- 79	AN960JD10L	. WASHER.....	2	
- 80	122-340070-9	. WASHER.....	2	
		★-----		
- 81	122-340079-1	. COVER ASSY/AFT/.....	2	
- 82	122-340079-19	. COVER ASSY/FORWARD/.....	2	
		/ATTACHING PARTS/		
- 83	MS35207-268	. SCREW.....	2	
- 84	MS35338-43	. WASHER, LOCK.....	2	
- 85	AN960-10L	. WASHER.....	2	
		★-----		
	122-341000-9	. . SPACER.....	2	
	122-344000-17	. GUIDE ASSY, WIRE HARNESS/STA 46.00/.....	1	7
	122-344000-23	. GUIDE ASSY, WIRE HARNESS/STA 46.00/.....	1	8
	122-344000-27	. GUIDE ASSY, WIRE HARNESS/STA 46.00/.....	1	6
		/ATTACHING PARTS/		
- 86	MS35206-327	. SCREW.....	1	
- 87	MS35338-41	. WASHER, LOCK.....	1	
- 88	AN960JD6	. WASHER.....	1	
- 89	AN960JD516	. WASHER.....	1	
		★-----		
- 90	122-344000-13	. . CLIP.....	1	5
- 91	122-344000-15	. . ANGLE.....	1	7
	122-344000-25	. . ANGLE.....	1	8
	122-344000-29	. . BRACKET ASSY.....	1	6
- 91A	122-344000-19	. . BRACKET ASSY.....	1	5
		/ATTACHING PARTS/		
- 91B	MS27039-0807	. . SCREW.....	1	5
- 91C	AN960L08	. . WASHER.....	1	5
		★-----		
- 92	TM2R6	. . MOUNT.....	2	
	122-344000-13	. CLIP/SEE INDEX 90 FOR LOCATION/.....	1	6
- 93	122-340160-1	. SHELF ASSY/LH/AFT/.....	1	
- 94	122-340160-3	. SHELF ASSY/RH/AFT/.....	1	5
	122-340160-37	. SHELF ASSY/RH/AFT/.....	1	6
		/ATTACHING PARTS/		
- 95	AN3C16A	. BOLT.....	6	
- 96	MS35338-43	. WASHER, LOCK.....	6	
- 97	AN960-10L	. WASHER.....	6	
		★-----		
	122-340160-9	. . SHELF, LH AFT.....	1	
	122-340160-11	. . SHELF, RH AFT.....	1	5
	122-340160-39	. . SHELF, RH AFT.....	1	6
	122-341000-1	. . SPACER, TOP.....	6	
	122-341000-13	. . SPACER, BOTTOM/4 FWD/.....	4	
	122-341000-15	. . SPACER, BOTTOM/2 AFT/.....	2	
	NAS1329A3K80	. . RIVNUT.....	18	
	NAS1329A08K75	. . RIVNUT/6 LH, 8 RH/.....	AR	
	NAS1329A08K75L	. . RIVNUT/6 LH, 4 RH/.....	AR	
	NAS1329H3K80L	. . RIVNUT.....	4	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

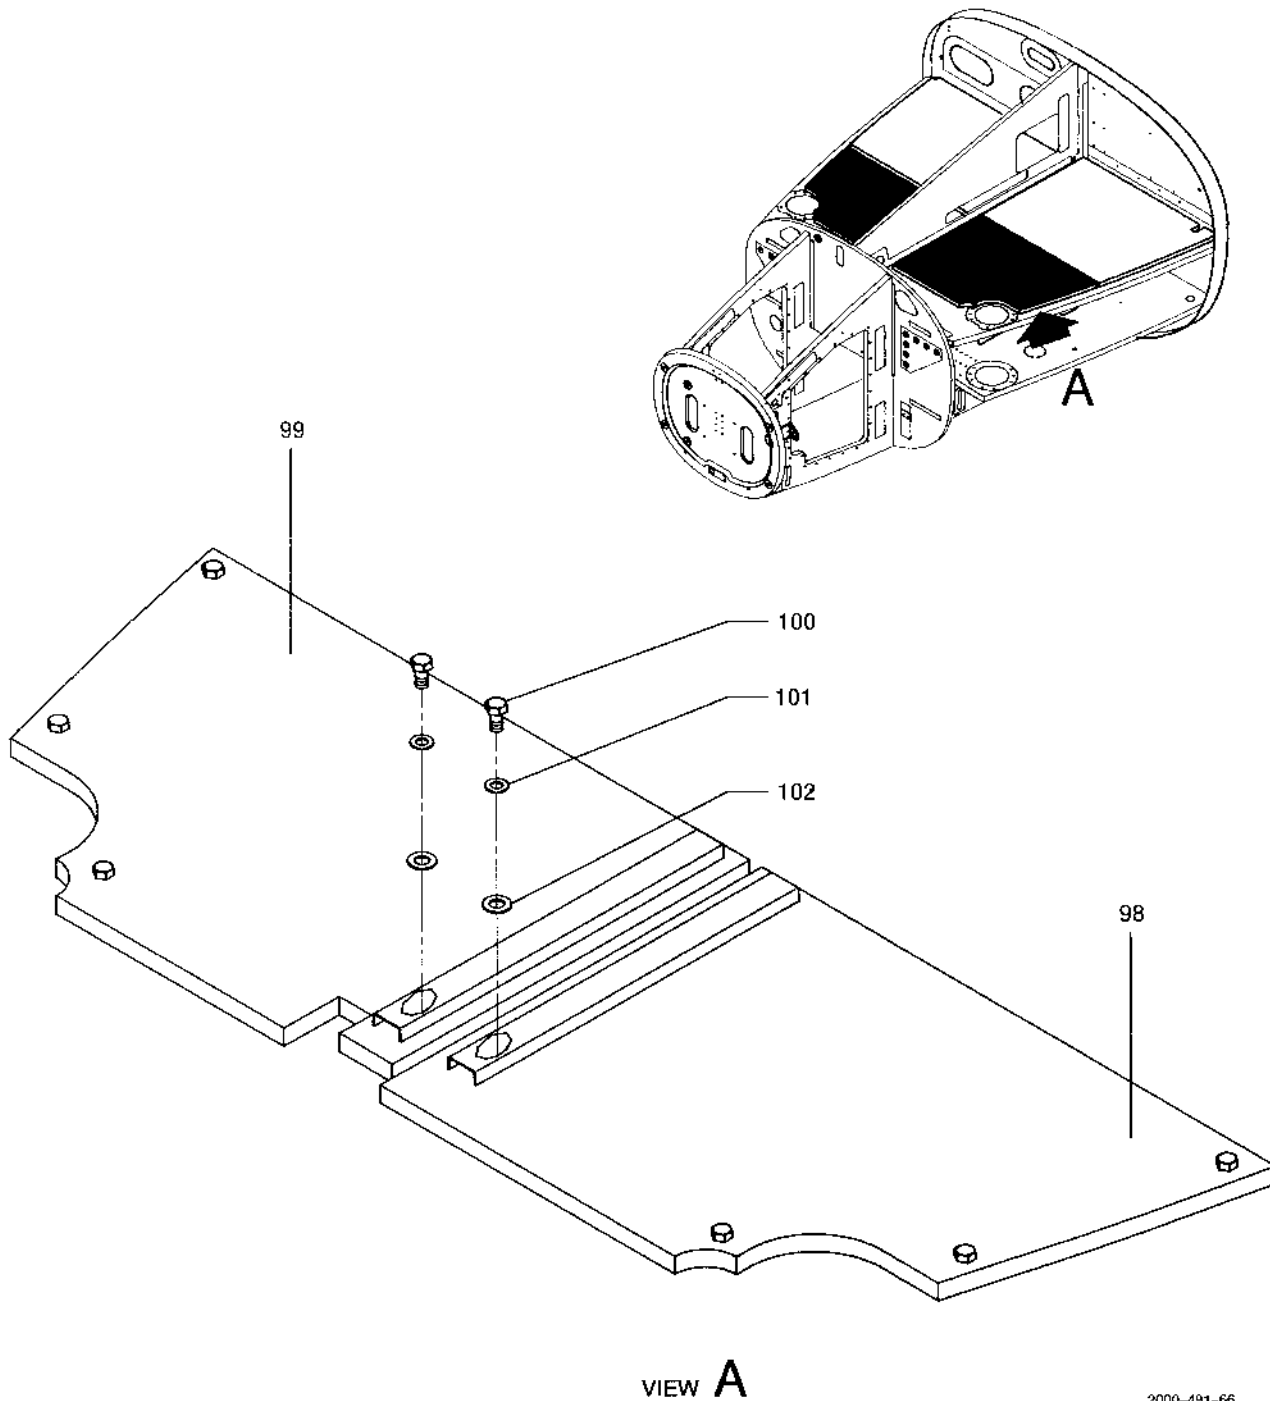


FIGURE 20-70.NOSE AVIONICS SHELVES
/SHEET 5 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-70 - 98	122-340160-25	. SHELF ASSY/LH/FORWARD/.....	1	5
	122-340205-1	. SHELF ASSY/LH/FORWARD/.....	1	6
- 99	122-340160-31	. SHELF ASSY/RH/FORWARD/.....	1	5
	122-340205-3	. SHELF ASSY/RH/FORWARD/.....	1	6
		/ATTACHING PARTS/		
-100	AN3C16A	. BOLT	6	
-101	MS35338-43	. WASHER, LOCK	6	
-102	AN960-10L	. WASHER	6	
		★		
	122-340160-27	.. SHELF, LH FORWARD	1	5
	122-341000-5	.. SHELF, LH FORWARD	1	6
	122-340160-33	.. SHELF, RH FORWARD	1	5
	122-341000-7	.. SHELF, RH FORWARD	1	6
	122-341000-1	.. SPACER, TOP	6	
	122-341000-13	.. SPACER, BOTTOM	5	5
	122-341000-15	.. SPACER, BOTTOM	5	6
	122-341000-11	.. SPACER, BOTTOM/FWD OUTBD/	1	5
	122-341000-13	.. SPACER, BOTTOM/FWD OUTBD/	1	6
	NAS1329A3K80	.. RIVNUT	17	5
	NAS1329A3K80	.. RIVNUT/16LH, 18RH/	AR	6
	NAS1329A08K75	.. RIVNUT/8 LH, 20 RH/	AR	
	NAS1329A06K75	.. RIVNUT/6LH, 5RH/	AR	5
	NAS1329A06K75	.. RIVNUT/1RH/	1	6



CODES OF EFFECTIVITY

1	NC-4 THRU NC-23	2	NC-24 AND AFTER
3	NC-4 THRU NC-43	4	NC-44 AND AFTER
5	NC-4 THRU NC-25	6	NC-26 AND AFTER
7	NC-4 THRU NC-20	8	NC-21 THRU NC-25

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-20-80
MAIN INSTRUMENT PANEL STRUCTURE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

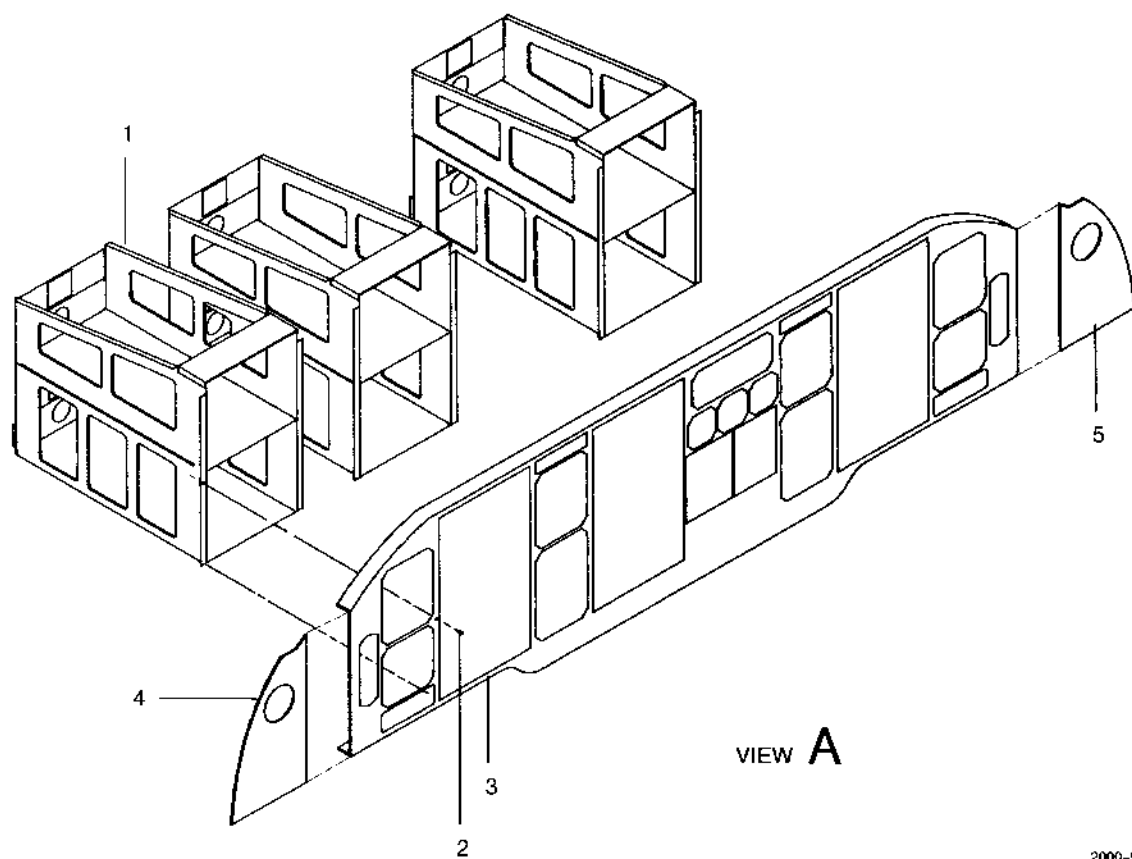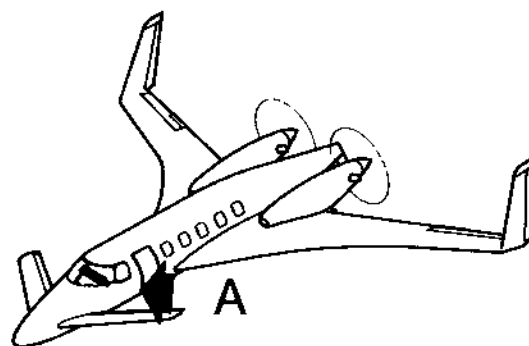

2000-96-01

FIGURE 20-80.MAIN INSTRUMENT PANEL STRUCTURE


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-80	122-322077-5	PANEL ASSY, MAIN INSTRUMENT.....	1	
- 1	622-7396-002	. MOUNT/IMT-870/.....	3	
		. /ATTACHING PARTS/.....		
- 2	MS24693S5	. SCREW.....	39	
		—★—		
	MRPN6-32SCL	. PRESS NUT.....	40	
	MS21075L06	. NUTPLATE.....	4	
	MS21060	. NUTPLATE.....	3	
- 3	122-322077-7	. PANEL.....	1	
	122-322196-1	PANEL INSTL, SIDEWALL ESCUTCHEON.....	NP	
- 4	122-322196-5	. PANEL, LH.....	1	
- 5	122-322196-4	. PANEL, RH.....	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-21-00
FUSELAGE ELECTRICAL WIRE CONDUIT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

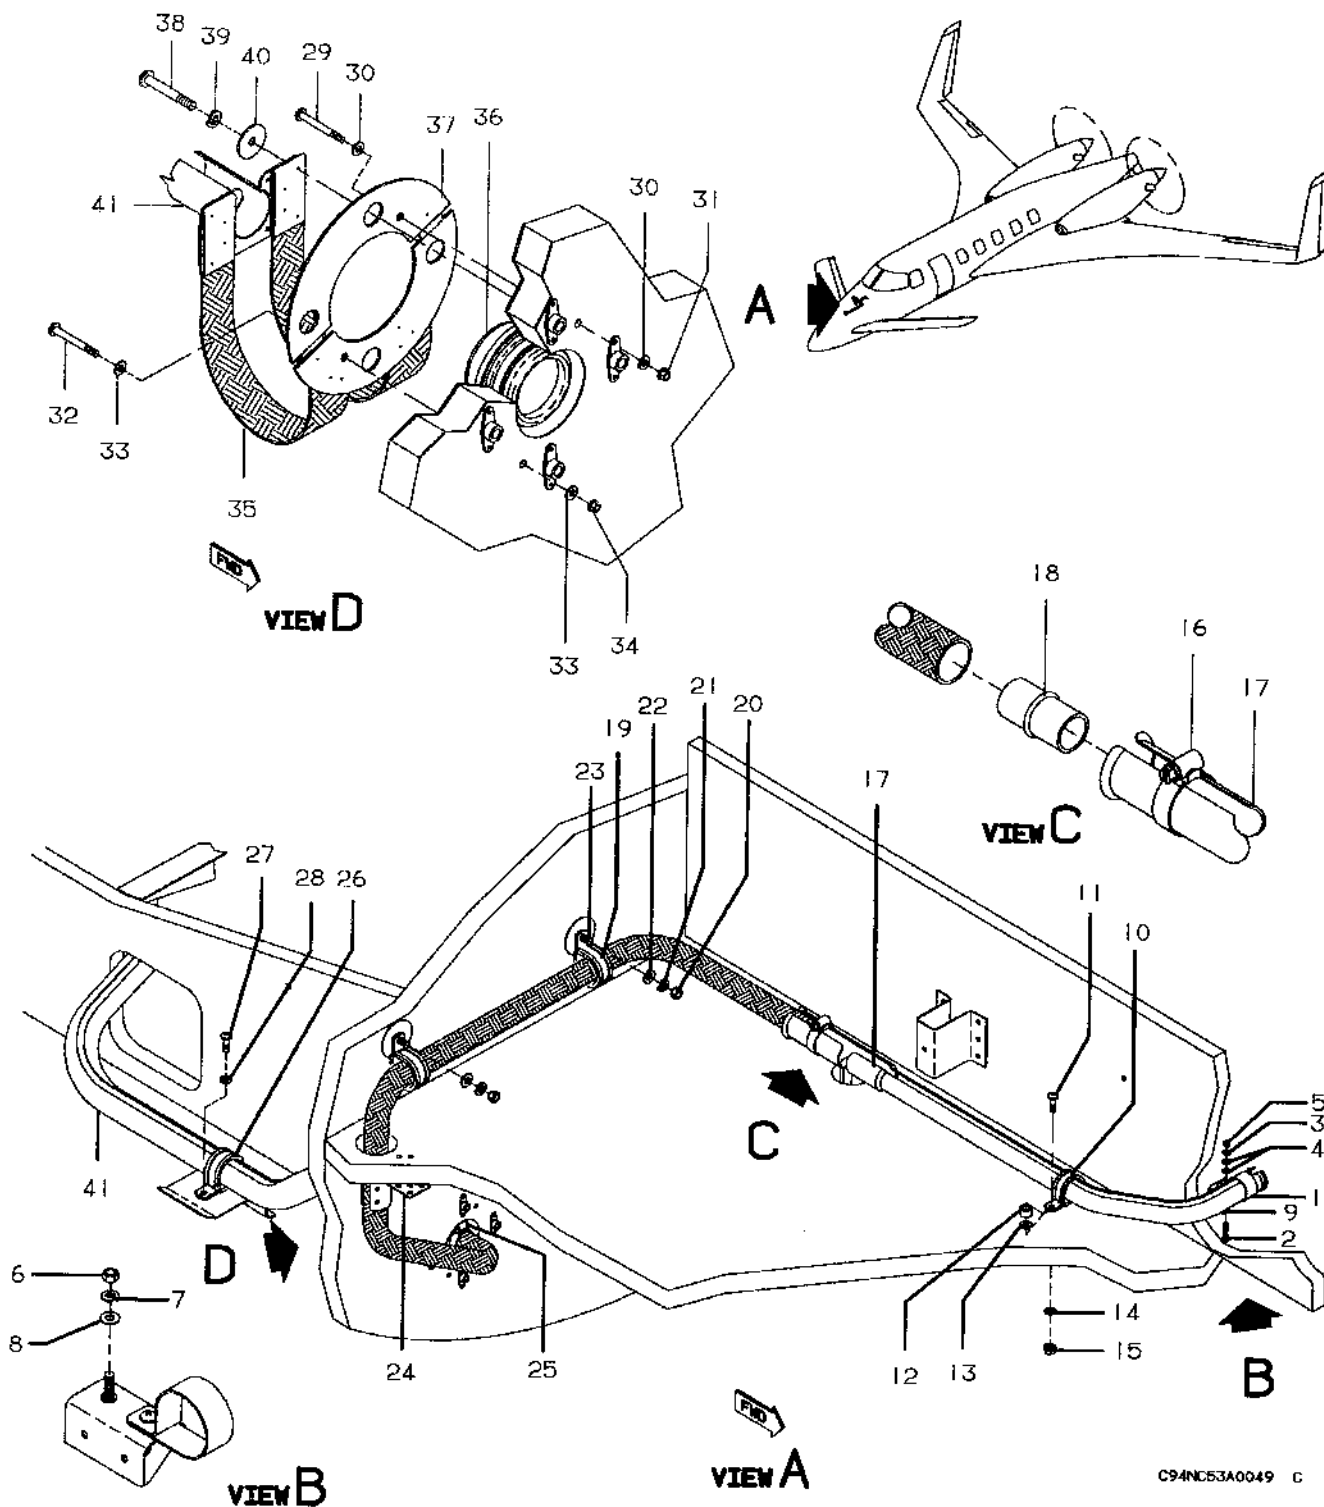


C94NC53A0049 C

FIGURE 21-00.FUSELAGE ELECTRICAL WIRE CONDUIT
/SHEET 1 OF 3 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21-00	122-364102-5	ELECTRICAL WIRE TRAY INSTL, FORWARD	NP	
- 1	AN742D16	. CLAMP	1	1
	MS21103D16	. CLAMP	1	2
		/ATTACHING PARTS/		
- 2	MS35206-246	. SCREW	1	1
	MS35206-245	. SCREW	1	2
- 3	MS35338-42	. WASHER, LOCK	1	1
- 4	AN960-8L	. WASHER	2	1
- 5	130909N27	. NUT	1	1
		-----★-----		
- 6	130909N29	. NUT, LOCK	1	2
- 7	MS35338-43	. WASHER, LOCK	1	2
- 8	AN960-10L	. WASHER	1	2
- 9	122-364102-11	. BRACKET	1	1
	122-364102-13	. BRACKET ASSY	1	2
-10	MS21919WDG16	. CLAMP	1	
		/ATTACHING PARTS/		
-11	MS27039-1-10	. SCREW	1	
-12	NAS43DD3-8	. SPACER	1	
-13	NAS1515M3	. WASHER /INSTALL BETWEEN SHELF AND SPACER/	1	
-14	AN960JD10L	. WASHER	1	
-15	MS21043-3	. NUT	1	
		-----★-----		
-16	MS35842-13	. CLAMP	1	
-17	122-364111-23	. CONDUIT ASSY	1	
-18	122-364111-33	. RING	1	
-19	MS21919WG4	. CLAMP	2	
		/ATTACHING PARTS/		
-20	130909N29	. NUT, LOCK	1	
-21	MS35335-32	. WASHER, LOCK	1	
-22	AN960-L3	. WASHER	1	
-23	CB4000C3CR8	. STUD	1	
		-----★-----		
-24	122-364111-17	. BRACKET ASSY	1	
-25	MS35842-13	. CLAMP	1	
-26	MS21919WDG20	. CLAMP	1	
		/ATTACHING PARTS/		
-27	MS27039-1-08	. SCREW	1	
-28	AN960JD10L	. WASHER	1	
		-----★-----		
-29	8815	. SCREW	1	3
-30	AN960JD10L	. WASHER	2	3
-31	MS21043-3	. NUT	1	3
-32	9091	. SCREW	1	3
-33	AN960JD10L	. WASHER	2	3
-34	MS21043-3	. NUT	1	3
-35	122-361050-15	. BOND STRAP	2	
-36	S45B-16	. SEAL	1	
-37	122-364102-7	. ADAPTER ASSY	1	
		/ATTACHING PARTS/		
-38	MS35206-243	. SCREW	4	
-39	MS35338-43	. WASHER, LOCK	4	
-40	AN970-3	. WASHER	4	
		-----★-----		
-41	122-364120-5	. CONDUIT ASSY	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

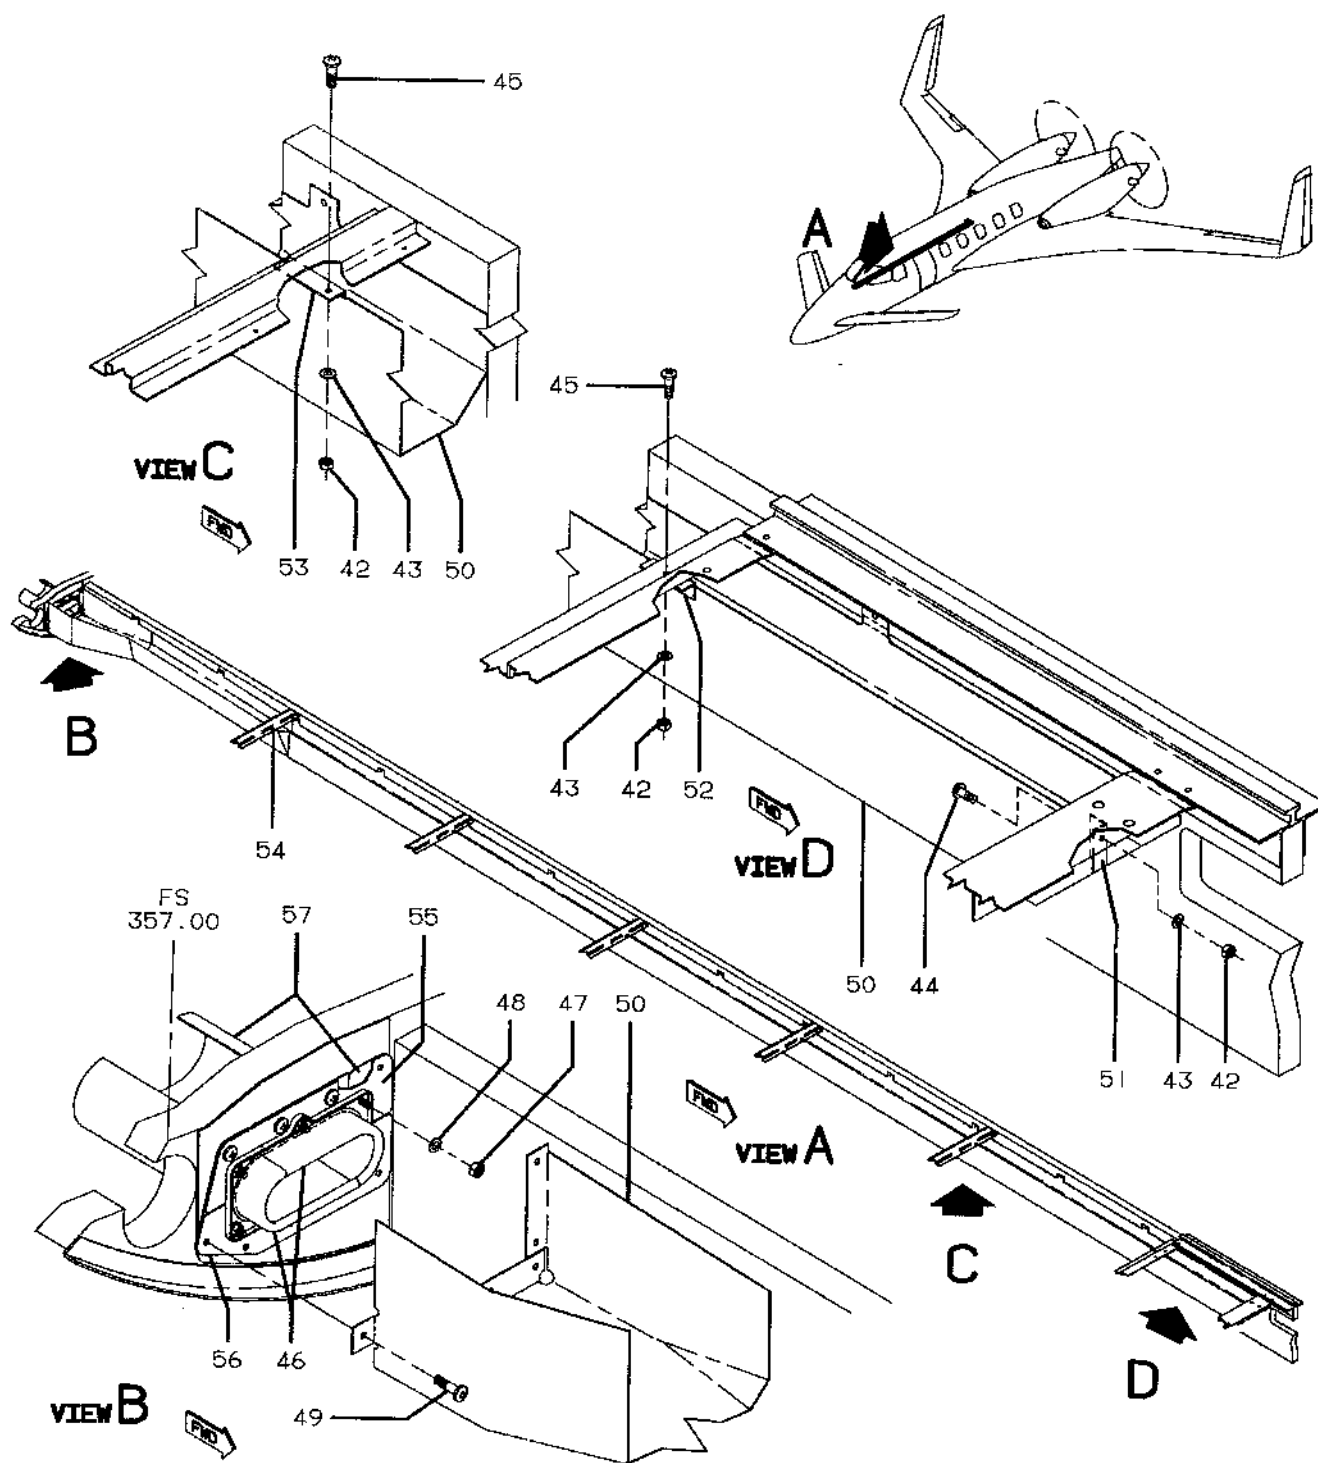


C94NC53A0050 C

FIGURE 21-00.FUSELAGE ELECTRICAL WIRE CONDUIT
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
21-00	122-364091-1	ELECTRICAL TRAY INSTL, MIDDLE FUSELAGE	NP	
- 42	130909N28	. NUT	12	
- 43	AN960JD8L	. WASHER	12	
- 44	MS27039-0808	. SCREW	1	
- 45	MS24893S51	. SCREW	11	
- 46	122-364159-1	. SEAL HALF	2	
		/ATTACHING PARTS/		
- 47	MS21045-08	. NUT	3	
- 48	AN960JD8L	. WASHER	3	
		-----★-----		
- 49	MS27039-0808	. SCREW	10	
- 50	122-364098-35	. TRAY ASSY, WIRE	1	
- 51	122-364136-3	. ANGLE, TRAY SUPPORT	1	
- 52	122-364136-5	. ANGLE, TRAY SUPPORT	1	
- 53	122-364136-1	. ANGLE, TRAY SUPPORT	4	
- 54	122-364091-11	. ANGLE, TRAY SUPPORT	1	
- 55	122-364092-27	. FLANGE ASSY	1	
- 56	122-364092-31	. FLANGE ASSY	1	
	58S(062)ST16	. . STUD	3	
- 57	122-364092-33	. SEAL ASSY, PRESSURE	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

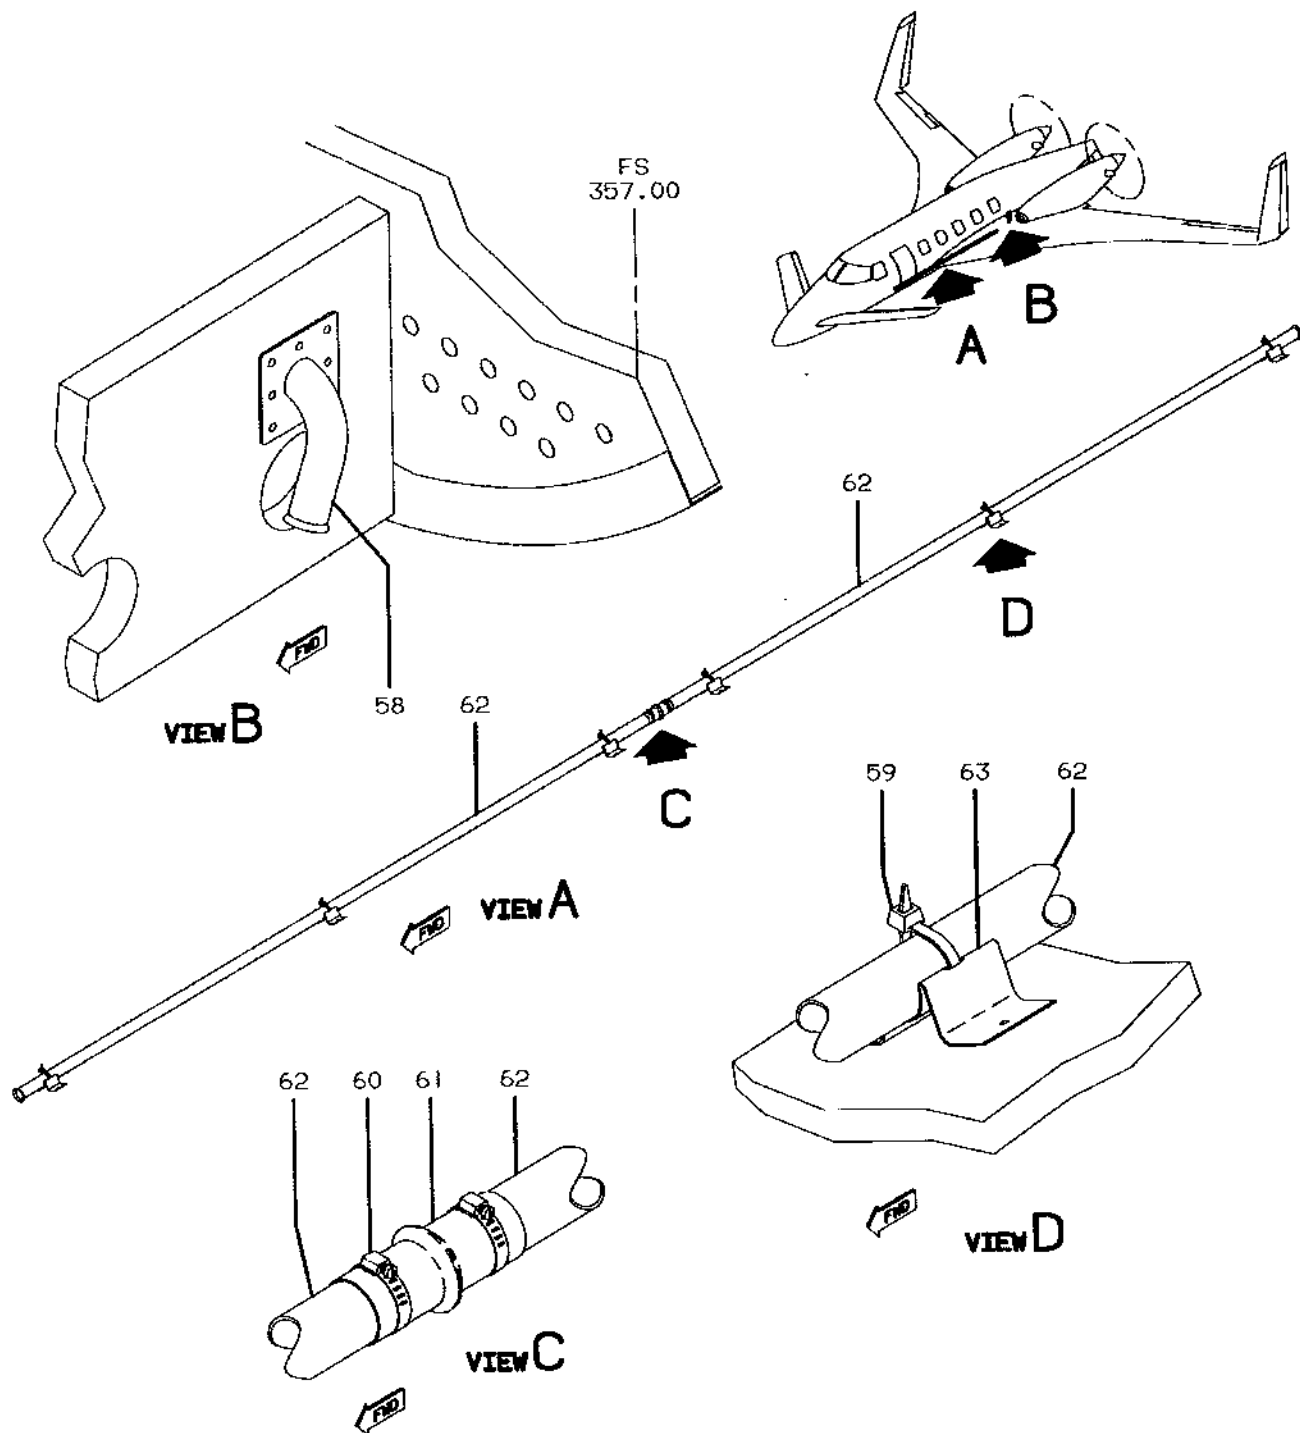

C94NC53A0051 C

FIGURE 21-00.FUSELAGE ELECTRICAL WIRE CONDUIT
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21-00 -58	122-361033-37	.TUBE ASSY.....	1	
-59	MS3367-5-9	.STRAP.....	6	
-60	MS35842-11	.CLAMP.....	2	
-61	2176	.SHIELD.....	1	
-62	122-361033-35	.TUBE.....	2	
-63	122-361057-39	.BRACKET, TUBE SUPPORT.....	6	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-31	2	NC-32 AND AFTER
3	NC-33 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-21-10
FLIGHT CONTROL CABLE TRAY

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

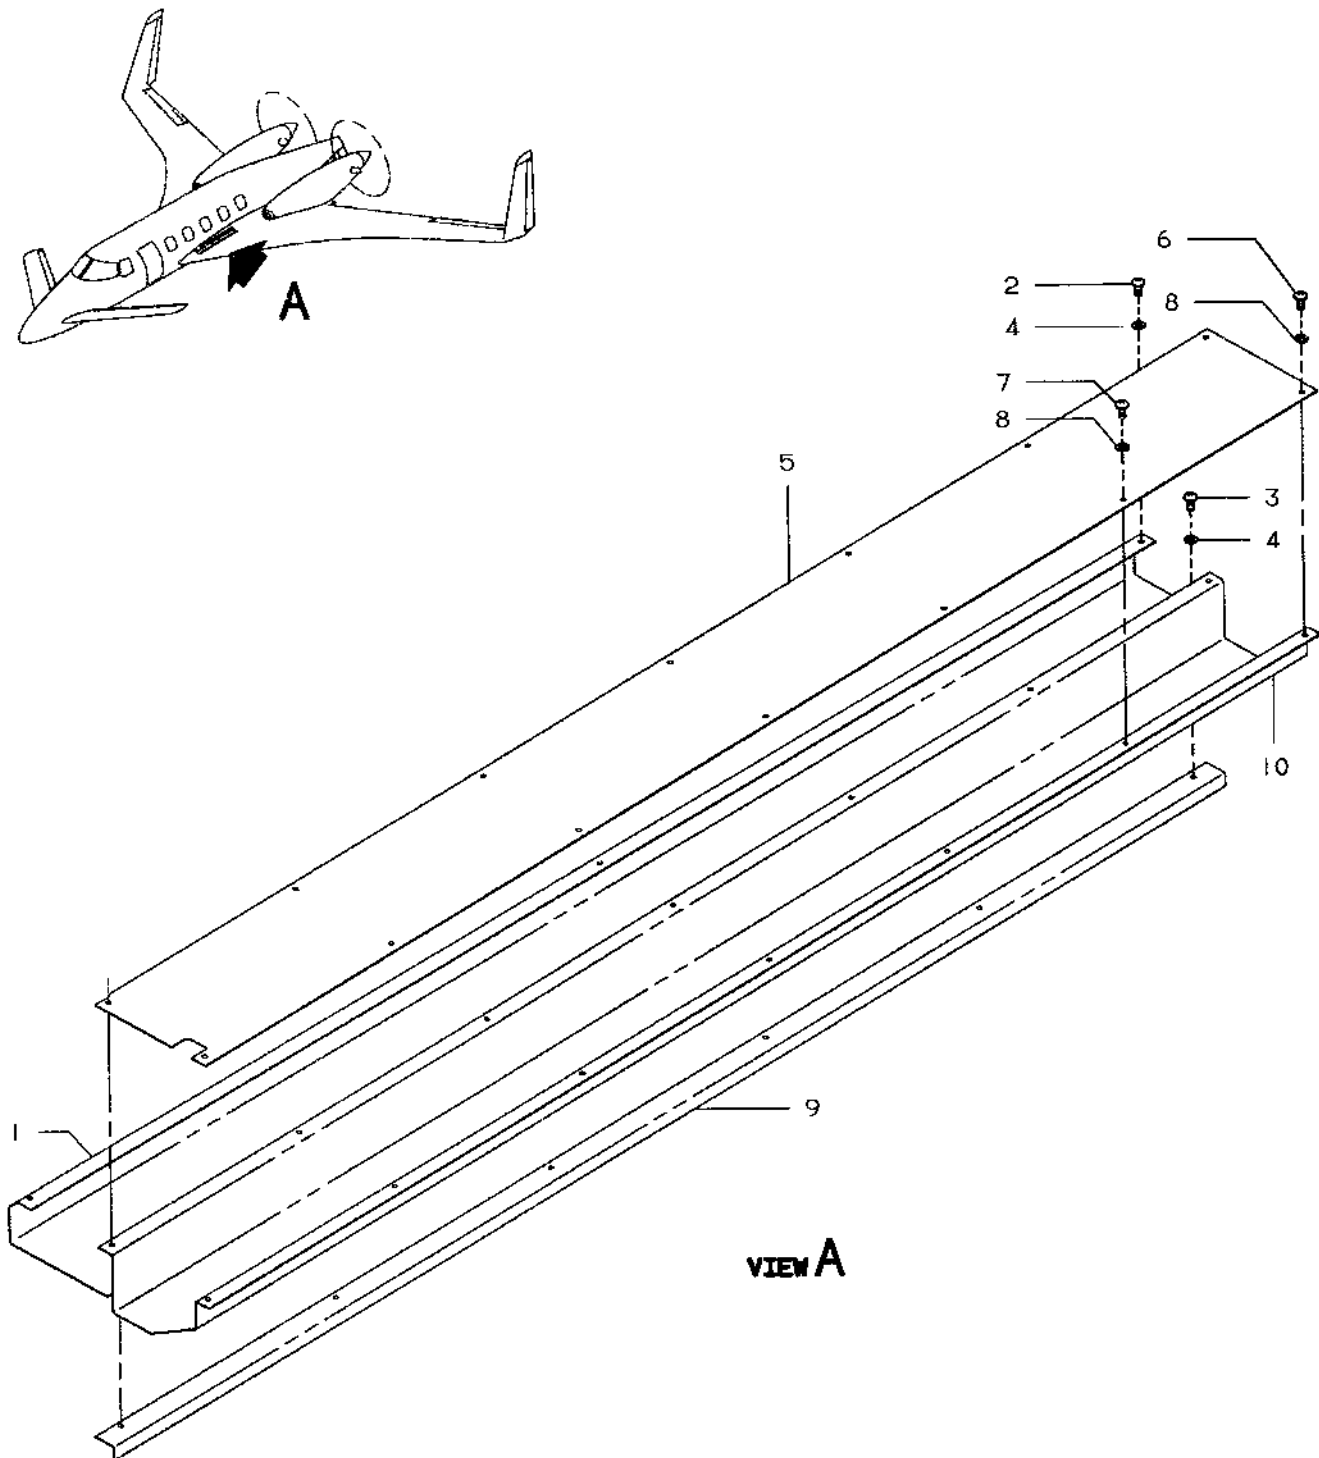

C94NC53A0122 C

FIGURE 21-10.FLIGHT CONTROL CABLE TRAY

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21-10	122-524122-1	CABLE TRAY INSTL, FLIGHT CONTROL.....	NP	
- 1	122-524122-11	. TRAY ASSY.....	1	
		/ATTACHING PARTS/		
- 2	MS27039-1-09	. SCREW.....	3	
- 3	MS27039-1-08	. SCREW.....	6	
- 4	AN960-10L	. WASHER.....	9	
		---★---		
	MS21059L3	. . NUTPLATE.....	1	
	MS21061L3	. . NUTPLATE.....	2	
- 5	122-524122-9	. COVER.....	1	
		/ATTACHING PARTS/		
- 6	MS27039-1-09	. SCREW.....	6	
- 7	MS27039-1-08	. SCREW.....	8	
- 8	AN960-10L	. WASHER.....	14	
		---★---		
	122-524122-3	. TRAY ASSY.....	1	
	MS21059L3	. . NUTPLATE.....	16	
	MS21061L3	. . NUTPLATE.....	4	
- 9	122-524122-7	. . ANGLE.....	1	
- 10	122-524122-5	. . TRAY.....	1	

--END--

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-25-00
DYNAMIC ABSORBER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

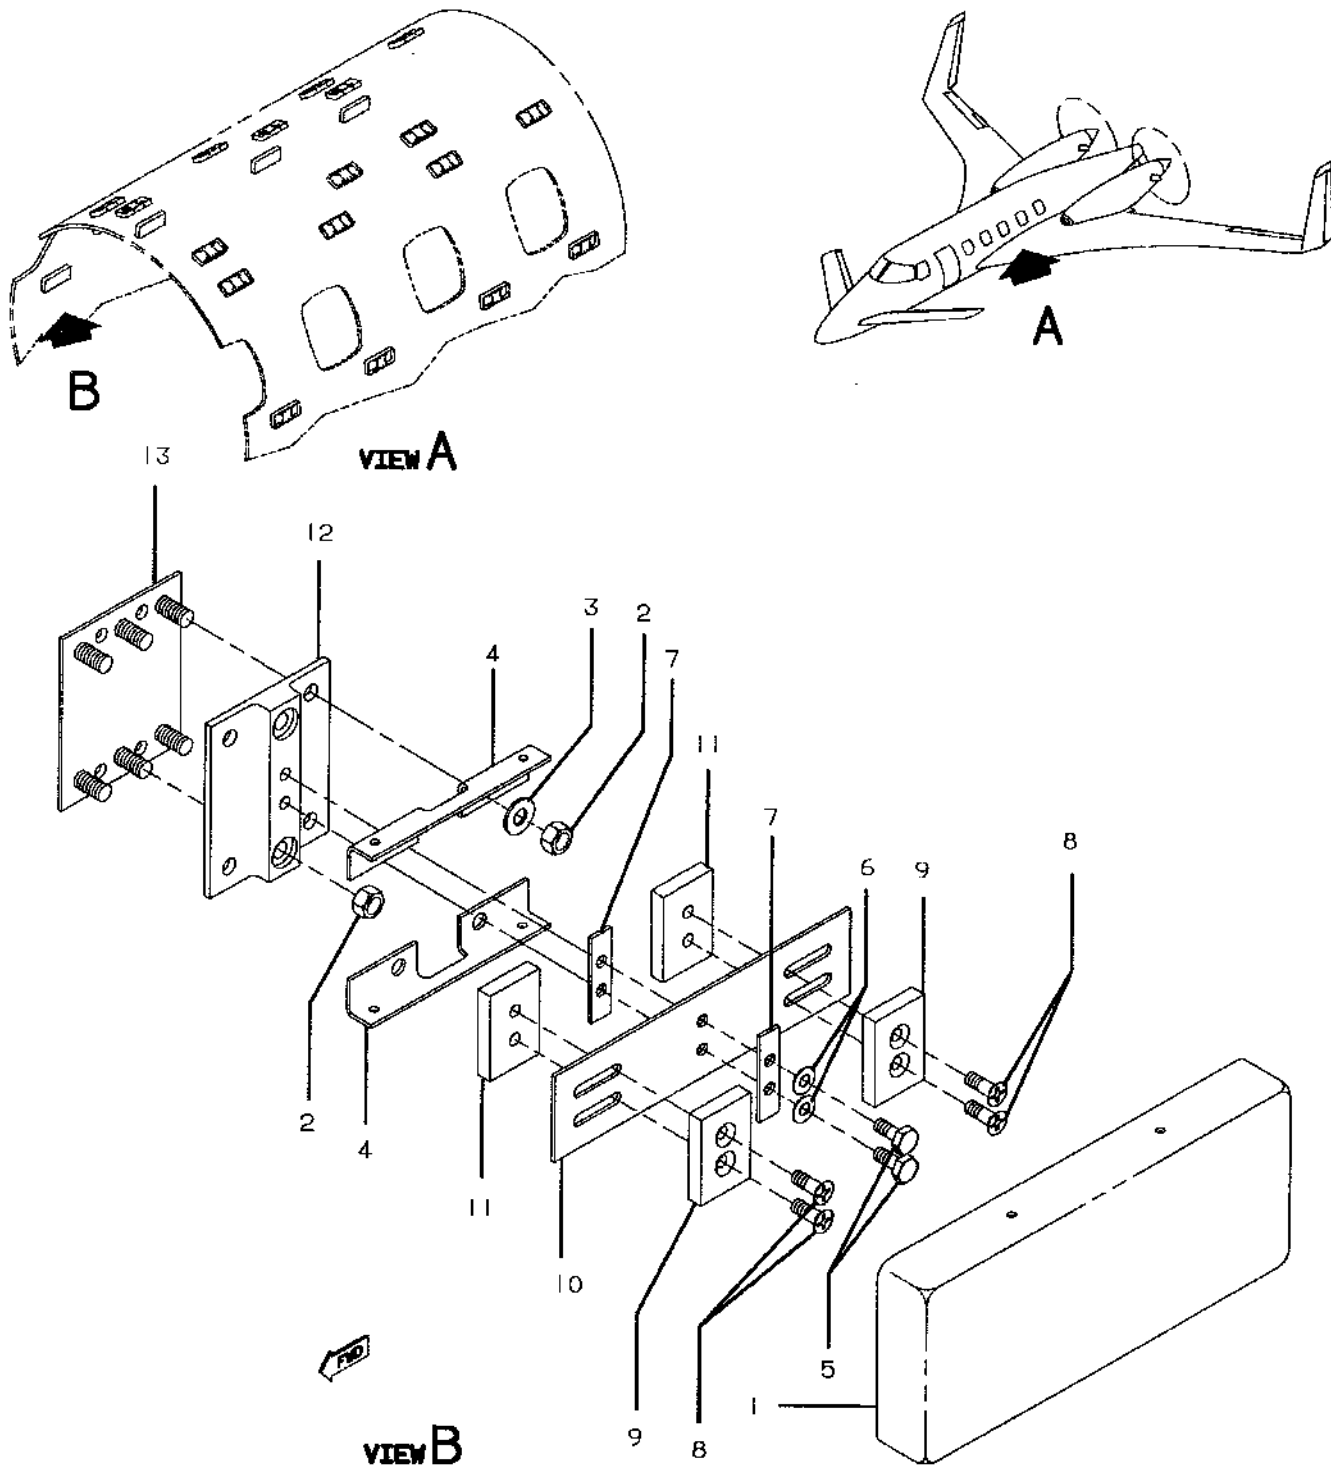


C94NC53A0052 C

FIGURE 25-00.DYNAMIC ABSORBER
/SHEET 1 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
25-00	122-400011-1	DYNAMIC ABSORBER INSTL, CABIN.....	NP	1
	122-400011-3	DYNAMIC ABSORBER INSTL, CABIN.....	NP	2
- 1	122-400012-25	. COVER.....	22	4
- 2	130909N28	. NUT.....	132	4
- 3	AN960-8	. WASHER.....	88	4
- 4	122-400012-27	. ANGLE.....	44	4
	122-400012-15	. ABSORBER ASSY, VIBRATION.....	22	4
- 5	NAS1303-4	. BOLT.....	44	4
- 6	AN960-10	. WASHER.....	44	4
- 7	122-400012-13	. SPACER.....	44	4
	122-400012-3	. LEAF SPRING & WEIGHT ASSY.....	22	4
- 8	NAS1203-5	. . . SCREW.....	88	4
- 9	122-400012-9	. . . WEIGHT.....	44	4
- 10	101-420193-17	. . . LEAF SPRING.....	22	4
- 11	122-400012-11	. . . WEIGHT.....	44	4
- 12	122-400012-17	. . SUPPORT ASSY.....	22	4
	MS51830A201L	. . . INSERT.....	44	4
- 13	122-400012-21	. PLATE ASSY, ATTACH.....	22	4
	58S(062)-ST16	. . STUD.....	132	4

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

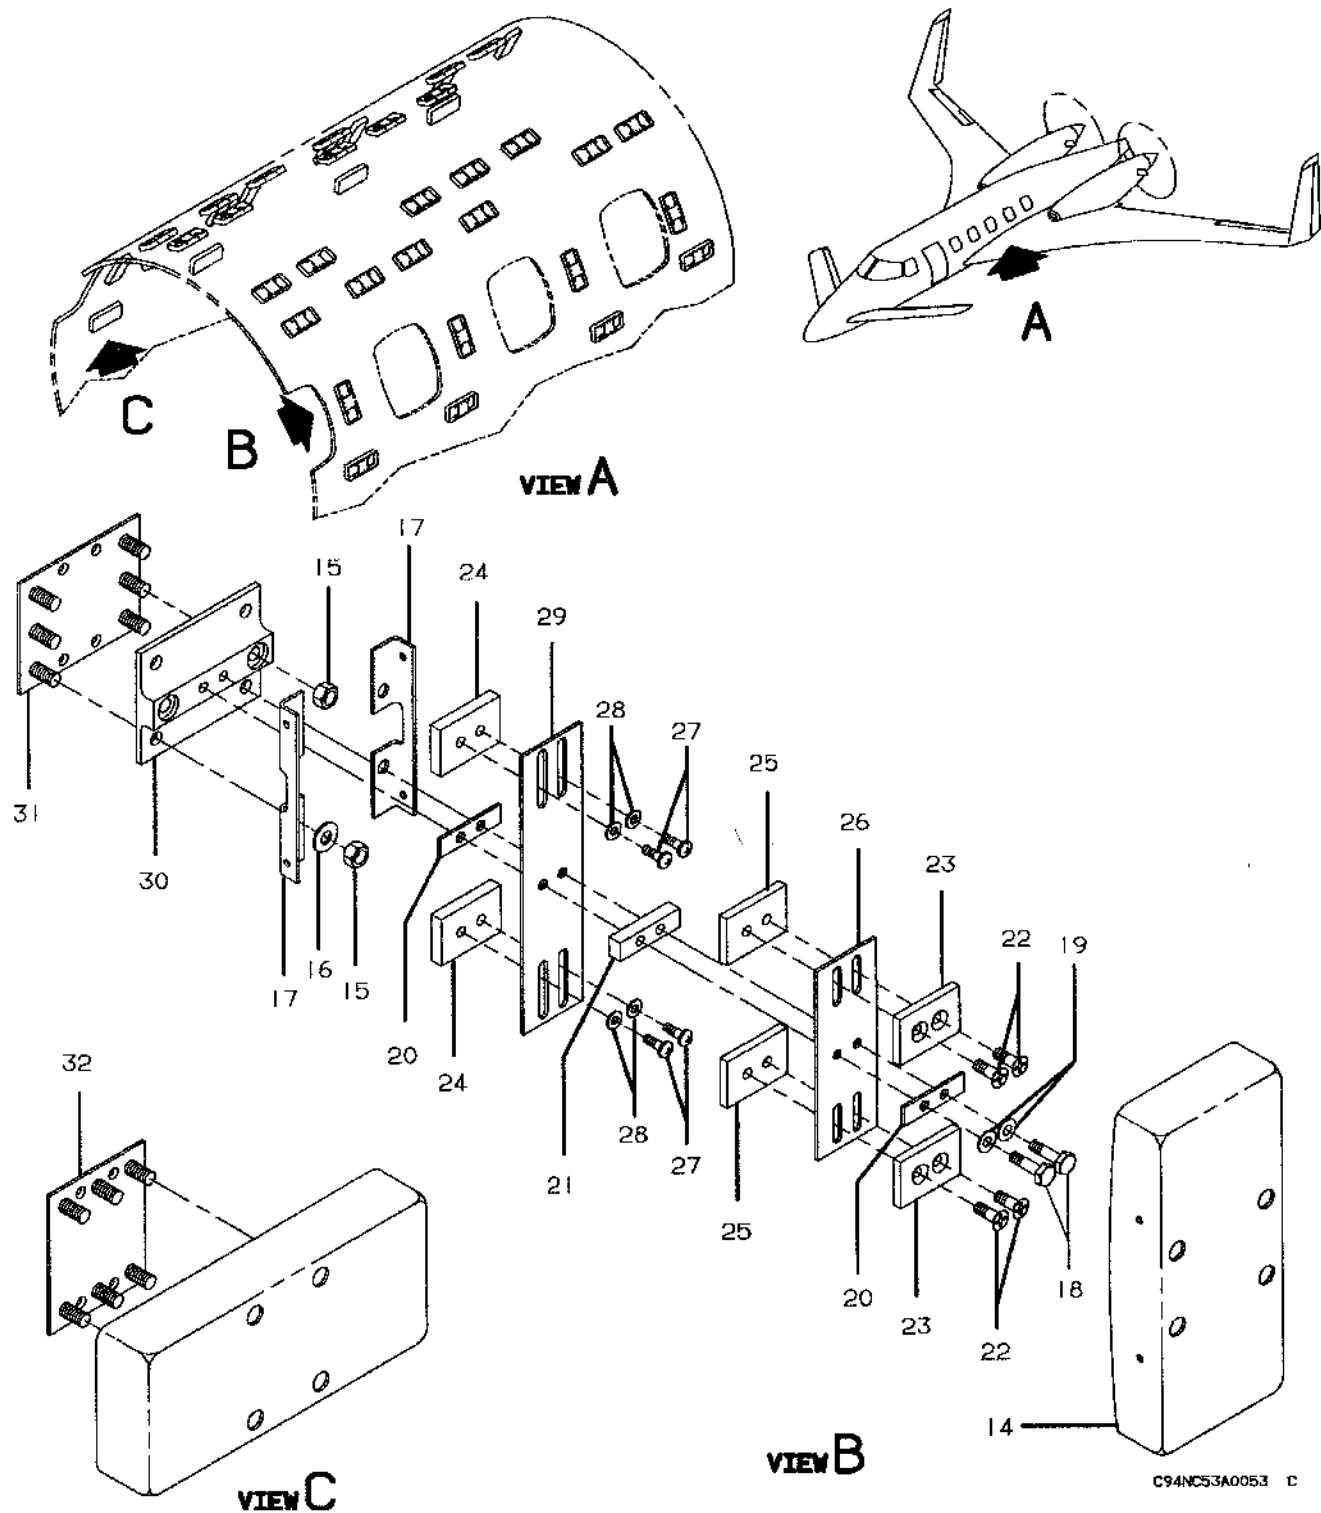

C94NCS3A0053 C

FIGURE 25-00.DYNAMIC ABSORBER
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
25-00	122-400022-3	VIBRATION ABSORBER INSTL, CABIN	NP	3
- 14	122-400021-17	. COVER/WL 120.25/	12	3
	122-400021-15	. COVER	30	3
- 15	130909N28	. NUT	252	3
- 16	AN960-8	. WASHER	168	3
- 17	122-400012-27	. ANGLE	84	3
	122-400021-1	. ABSORBER ASSY, VIBRATION	22	3
	122-400021-19	. ABSORBER ASSY, VIBRATION	20	3
- 18	NAS1303-8	. BOLT	84	3
- 19	AND960-10L	. WASHER	84	3
- 20	122-400012-13	. SPACER	84	3
- 21	122-400021-3	. SPACER	42	3
- 22	NAS1203-3	. SCREW	168	3
- 23	122-400021-11	. WEIGHT	48	3
- 24	122-400021-5	. WEIGHT/122-400021-1/	84	3
- 25	122-400021-9	. WEIGHT/122-400021-1/	84	3
	122-400021-9	. WEIGHT/122-400021-19/	168	3
- 26	122-400021-13	. LEAF SPRING	42	3
- 27	NAS623-3-1	. SCREW	168	3
- 28	AN960-10L	. WASHER	168	3
- 29	122-400021-7	. LEAF SPRING	42	3
- 30	122-400017-17	. SUPPORT ASSY	42	3
	MS51830A201L	. . . INSERT	84	3
- 31	122-400012-29	. PLATE ASSY, ATTACH/WL 120.25/	12	3
- 32	122-400012-21	. PLATE ASSY, ATTACH	30	3
	58S(062)-ST16	. . STUD	252	3

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

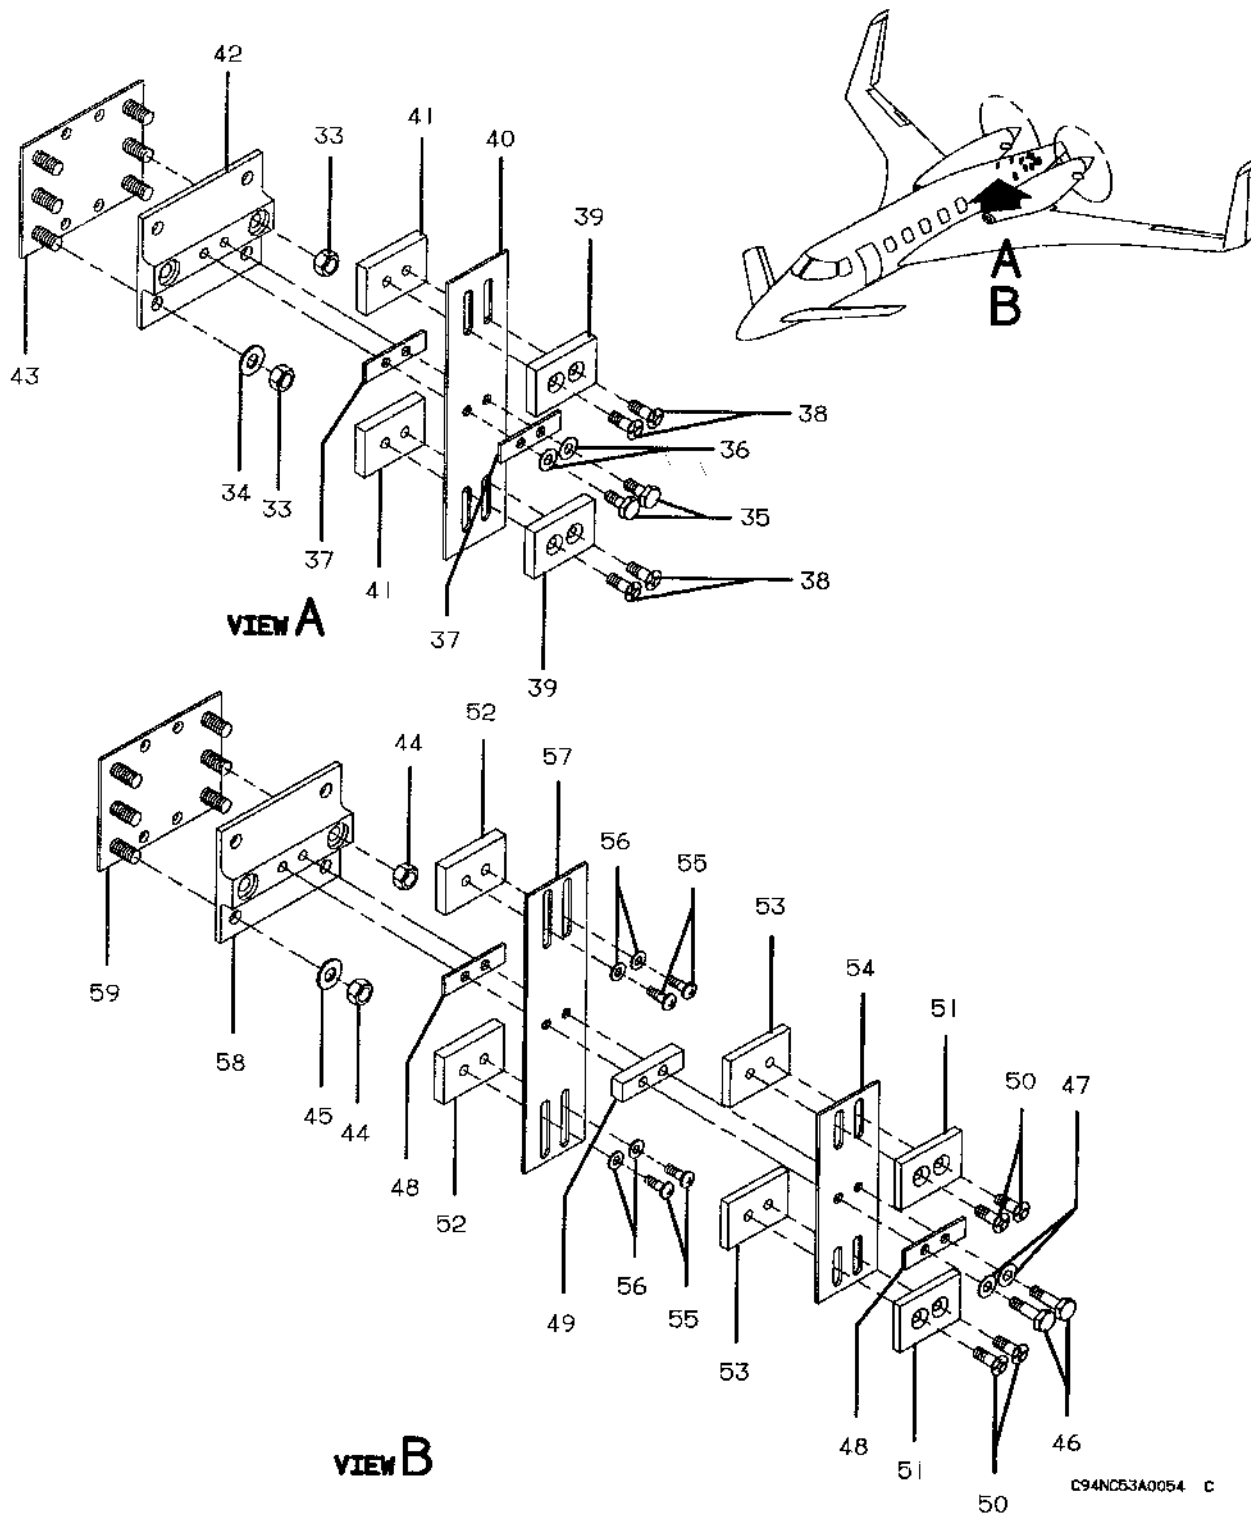


FIGURE 25-00.DYNAMIC ABSORBER
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
25-00	122-400013-1	ABSORBER INSTL, VIBRATION/AFT FUSELAGE/.....	NP	4
-33	130909N28	. NUT	60	4
-34	AN960-8	. WASHER	40	4
	122-400012-15	. ABSORBER ASSY	10	4
-35	NAS1303-4	. BOLT	20	4
-36	AN960-10	. WASHER	20	4
-37	122-400012-13	. SPACER	20	4
	122-400012-3	. LEAF SPRING & WEIGHT ASSY	10	4
-38	NAS1203-5	. SCREW	20	4
-39	122-400012-9	. WEIGHT	20	4
-40	101-420193-17	. LEAF SPRING	10	4
-41	122-400012-11	. WEIGHT	20	4
-42	122-400012-17	. SUPPORT ASSY	10	4
	MS51830A201L	. INSERT	20	4
-43	122-400012-29	. PLATE ASSY, ATTACH	10	4
	58S(062)-ST16	. STUD	60	4
	122-400013-7	ABSORBER INSTL, VIBRATION/AFT FUSELAGE/.....	NP	3
-44	130909N28	. NUT	60	3
-45	AN960-8	. WASHER	40	3
	122-400021-1	. ABSORBER ASSY	10	3
-46	NAS1308-8	. BOLT	20	3
-47	AN960-10L	. WASHER	20	3
-48	122-400012-13	. SPACER	20	3
-49	122-400021-3	. SPACER	10	3
-50	NAS1203-3	. SCREW	40	3
-51	122-400021-11	. WEIGHT	20	3
-52	122-400021-5	. WEIGHT	20	3
-53	122-400021-9	. WEIGHT	20	3
-54	122-400021-13	. LEAF SPRING	10	3
-55	NAS623-3-1	. SCREW	40	3
-56	AN960-10L	. WASHER	40	3
-57	122-400021-7	. LEAF SPRING	10	3
-58	122-400012-17	. SUPPORT ASSY	10	3
	MS51830A201L	. INSERT	20	3
-59	122-400012-29	. PLATE ASSY, ATTACH	10	3
	58S(062)-ST16	. STUD	60	3


CODES OF EFFECTIVITY

1	NC-4 THRU NC-20	2	NC-21 THRU NC-28
3	NC-29 AND AFTER	4	NC-4 THRU NC-28

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-30-00
NOSE SKINS AND PLATES

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

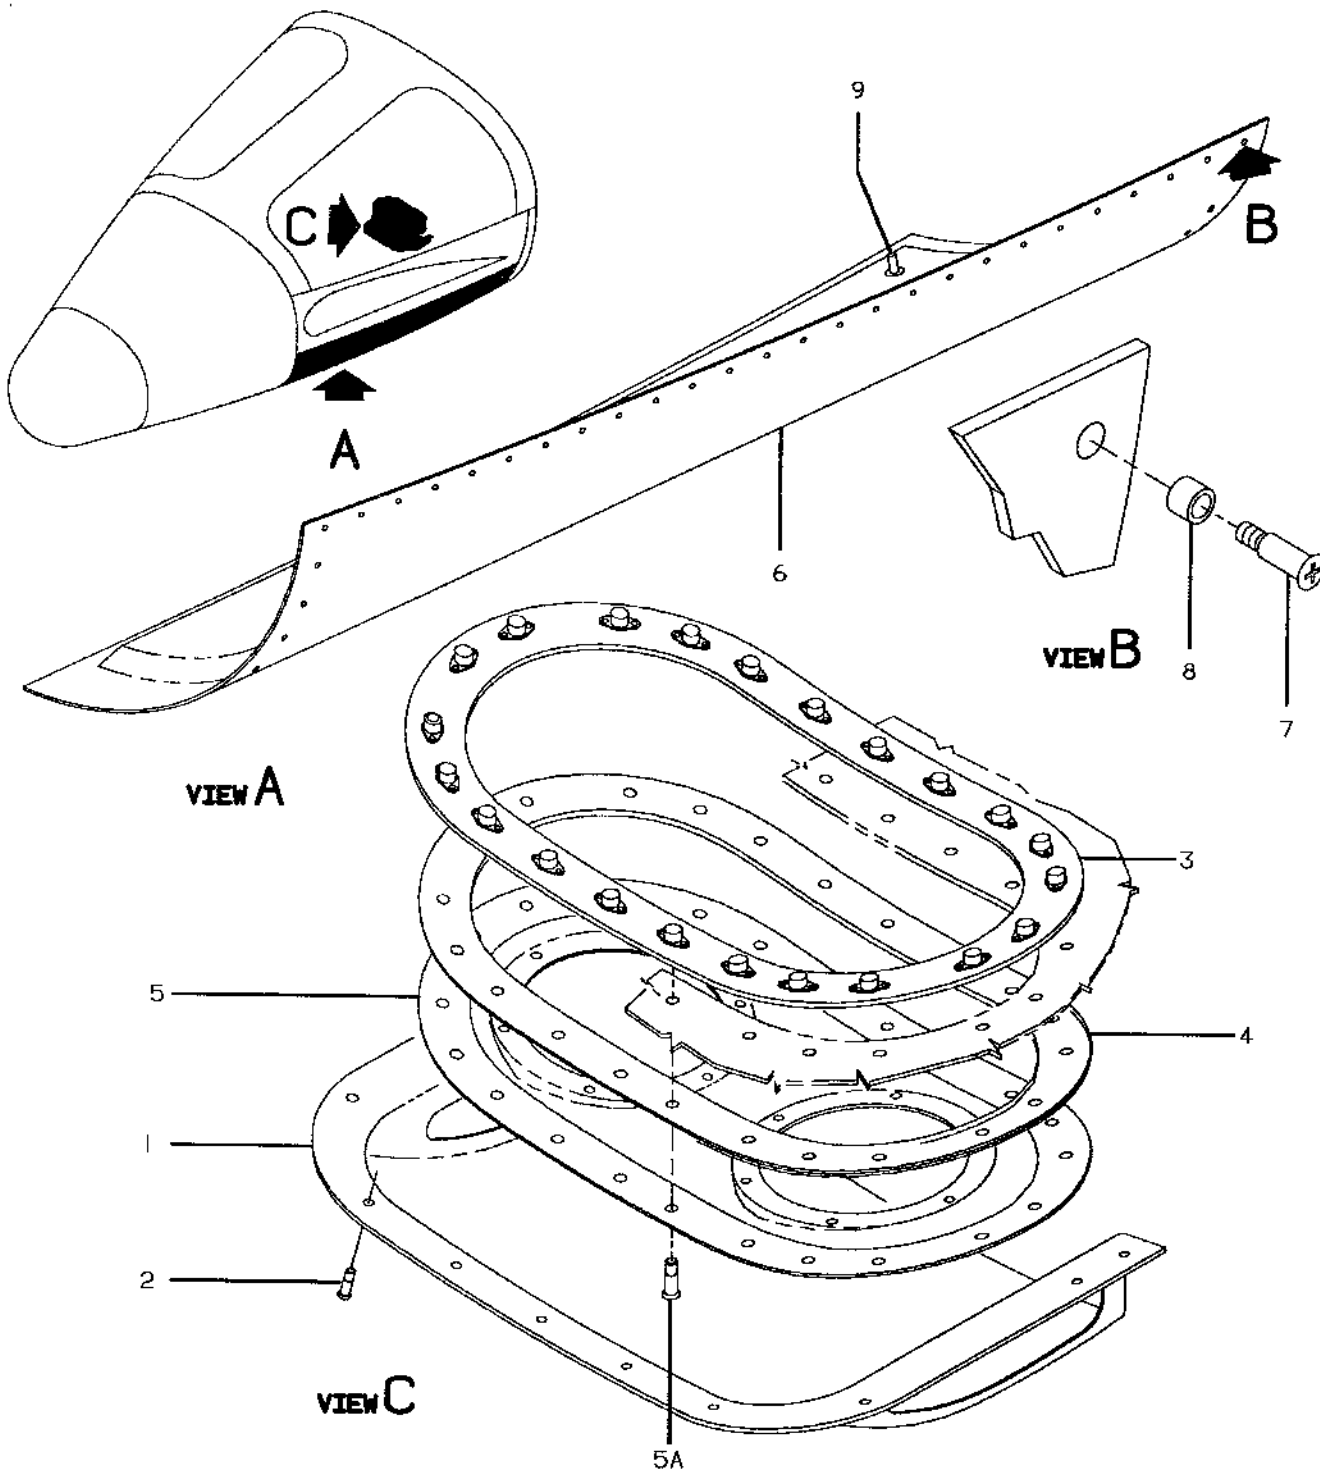


C94NC53A0055 C

FIGURE 30-00.NOSE SKINS AND PLATES
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00 - 1	122-540341-19	RAMP, CABIN PRESSURE OUTFLOW/SAFETY VALVE EXIT ...	1	1
	122-540341-13	RAMP, CABIN PRESSURE OUTFLOW/SAFETY VALVE EXIT ...	1	2
	- 2	DPYS7900P10A6 . SCREW, CAPTIVE	9	1
		-----★-----		
	DPYS7900P10A3	. SCREW, CAPTIVE	9	2
	122-410501-1	ACCESS DOOR INSTL	NP	
	- 3	122-410501-9 . NUT RING ASSY	1	
	122-410500-3	. ACCESS DOOR ASSY, OUTFLOW/SAFETY VALVE	NP	
		/SEE CHAPTER 21/		
	- 4	122-410501-7 . SEAL	1	
	- 5	122-410501-5 . ACCESS DOOR	1	
		/ATTACHING PARTS/		
	- 5A	DCTC7900-10-B-3 . SCREW, CAPTIVE	16	
		-----★-----		
- 6	122-410605-31	SKIN PANEL ASSY, NOSE LH	1	
- 7	DPYS7900P-10-A-3	. SCREW, CAPTIVE	74	
- 8	D792040T-10-071	. BUSHING	AR	
- 9	122-410605-13	. TUBE, DRAIN	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

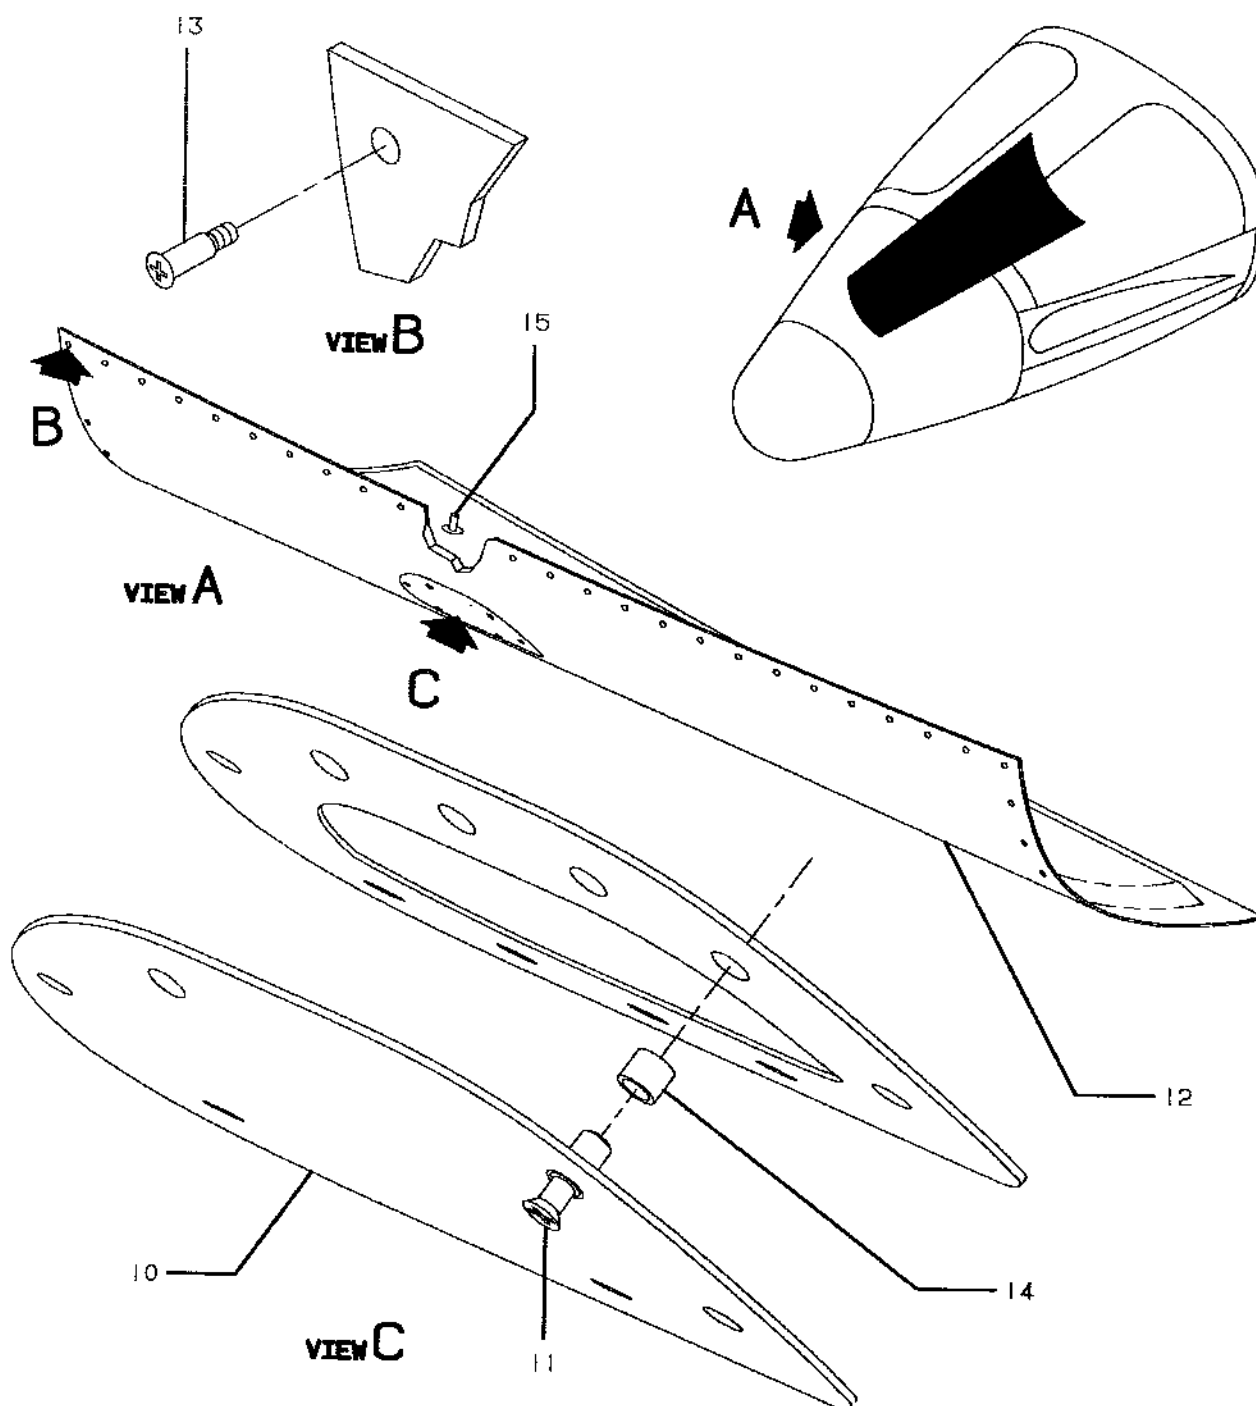

C94NC53A0173 C

FIGURE 30-00.NOSE SKINS AND PLATES
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00 - 10	122-410650-7	ACCESS DOOR ASSY, OXYGEN FILL PORT	1	
- 11	DPYS7900P10A4 *	5DL . SCREW	6	
- 12	122-410606-15	SKIN PANEL ASSY, NOSE RH	1	
- 13	DPYS7900P-10-B-3	. SCREW, CAPTIVE	74	
- 14	D792040T-10-071	. BUSHING	AR	
- 15	122-410605-13	. TUBE, DRAIN	1	


CODES OF EFFECTIVITY

1 NC-4 THRU NC-34 2 NC-35 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-30-10
AFT FUSELAGE ACCESS DOORS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

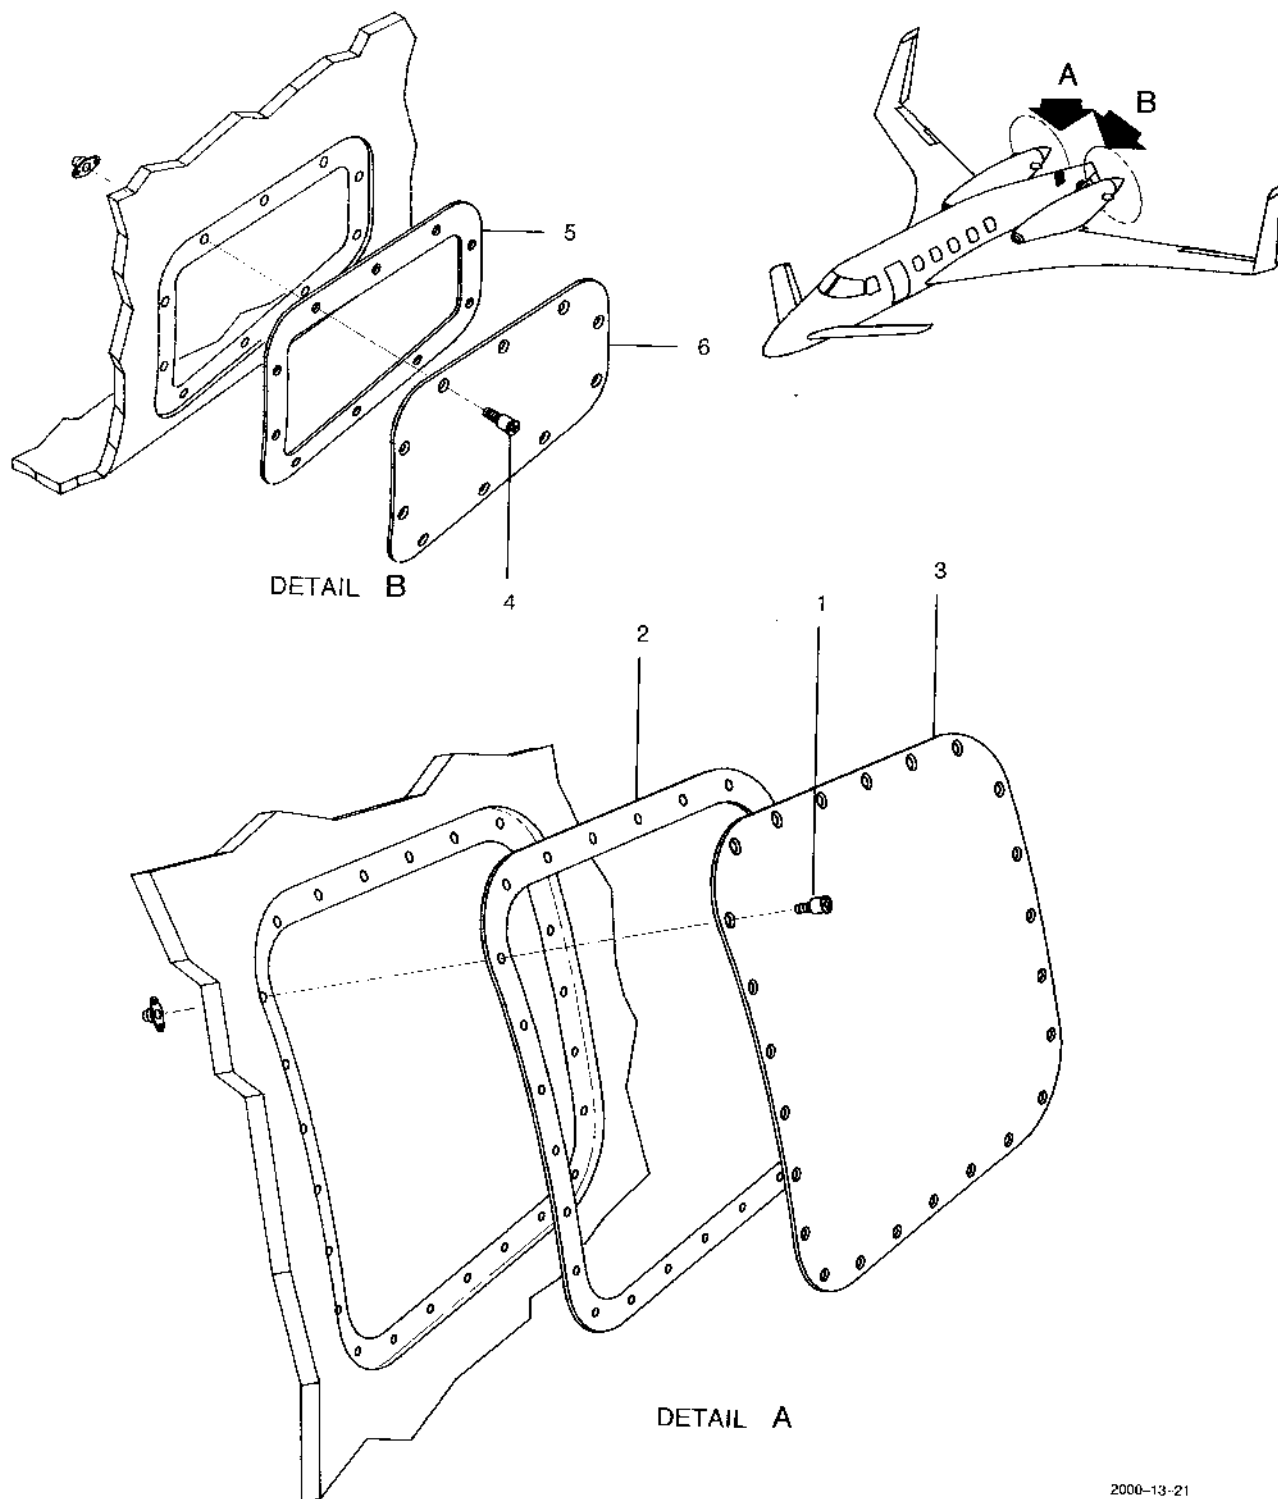


2000-13-21

FIGURE 30-10.AFT FUSELAGE ACCESS DOORS
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-10	122-440000-19	AFT FUSELAGE INSTL.....	NP	
	122-440102-3	. DOOR INSTL, AFT FUSELAGE	1	
	122-440102-21	.. DOOR ASSY	1	
- 1	DPYS7900P8B3	... SCREW, CAPTIVE.....	24	
- 2	122-440102-7	... SEAL.....	1	
- 3	122-440102-23	... DOOR ASSY, BONDED.....	1	
	NAS1474C08	.. NUTPLATE	24	
	122-440103-1	. DOOR INSTL, AFT FUSELAGE	1	
	122-440103-9	.. DOOR ASSY	1	
- 4	DPYS7900P8B3	... SCREW, CAPTIVE.....	10	
- 5	122-440103-5	... SEAL.....	1	
- 6	122-440103-7	... DOOR ASSY, BONDED.....	1	
	MS21060L08	.. NUTPLATE	10	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

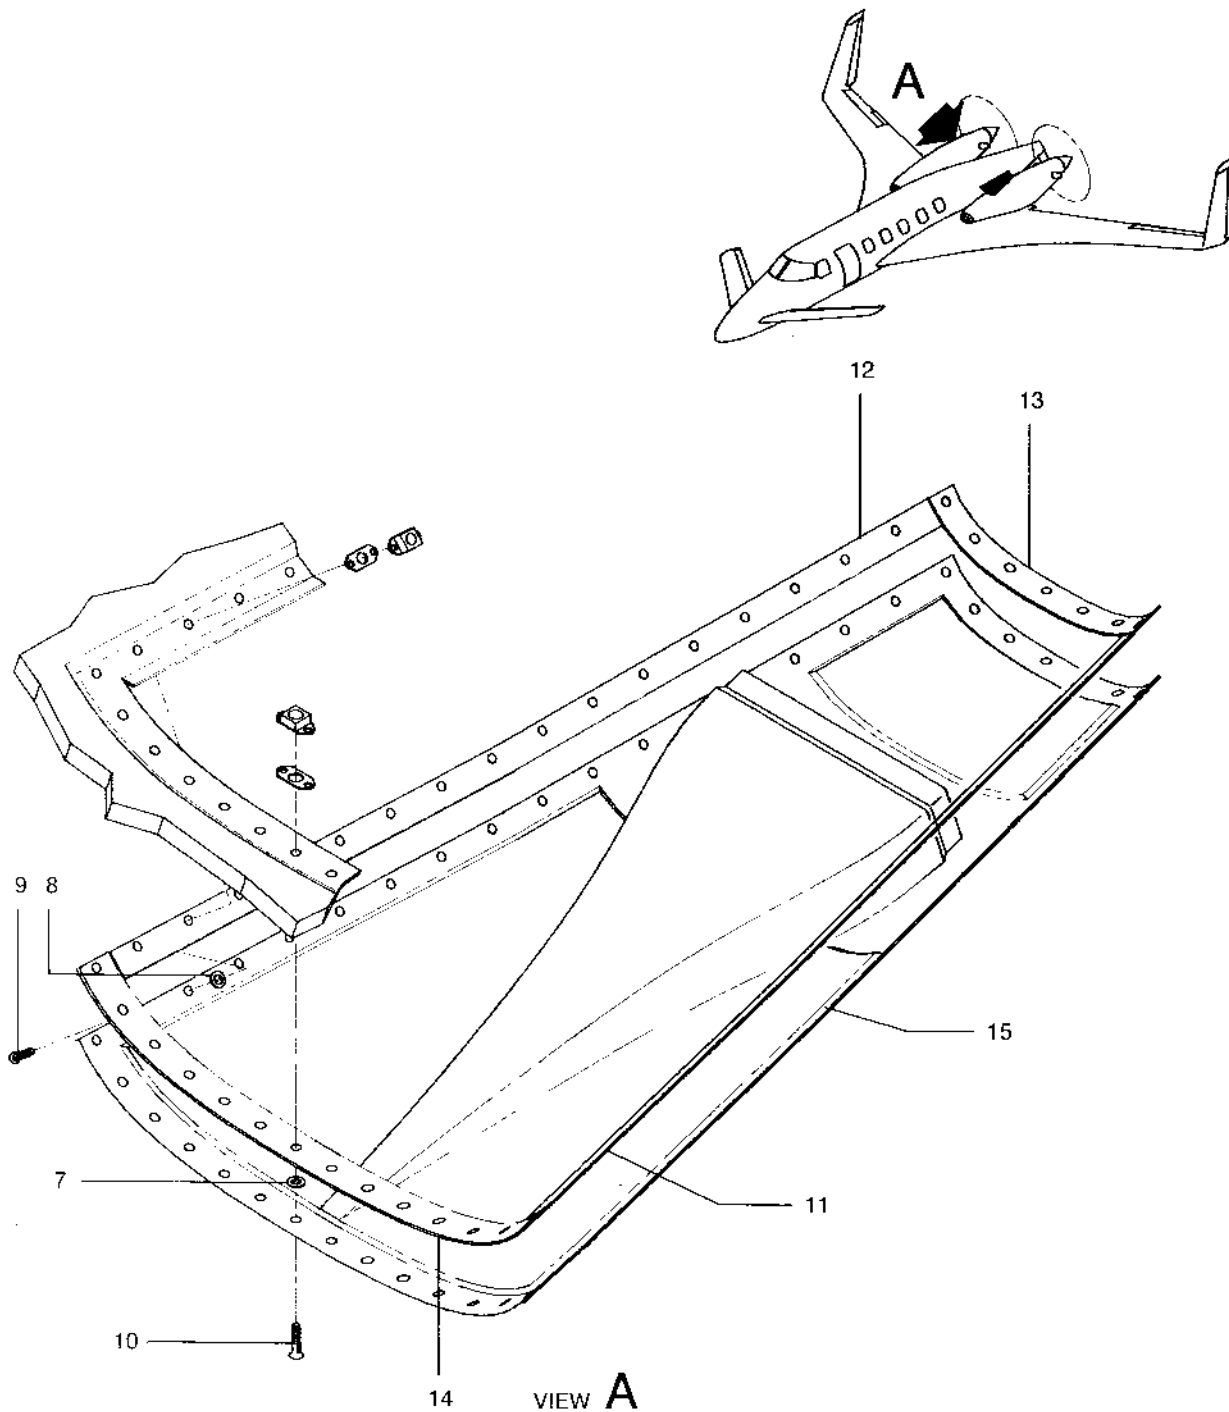

2000-13-22

FIGURE 30-10.AFT FUSELAGE ACCESS DOORS
/SHEET 2 OF 2 SHEETS/

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG


SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
30-10	122-440114-1	.	DOOR INSTL, AFT FUSELAGE	1	
	122-440114-35	..	DOOR ASSY	1	
7	CA21062-08R	...	RETAINER	14	
			/ORDER CA2210-08R FOR SPARES/		
	CA2210-08R	...	RETAINER/ORDER FOR SPARES/	14	
8	CA21061-10R	...	RETAINER	39	
			/ORDER CA2210-10R FOR SPARES/		
	CA2210-10R	...	RETAINER/ORDER FOR SPARES/	39	
9	CA21063-10-7-11	...	SCREW/ALTERNATE FOR FIT7090-3-11-7/	39	
			/ORDER CA2229-10-7-11 FOR SPARES/		
	FIT7090-3-11-7	...	SCREW/ALTERNATE FOR CA21063-10-7-11/	39	
			/ORDER CA2229-10-7-11 FOR SPARES/		
	CA2229-10-7-11	...	SCREW/ORDER FOR SPARES/	39	
10	FIT7090-08-10-7	...	SCREW	14	
			/ORDER CA2229-08-7-10 FOR SPARES/		
	CA2229-08-7-10	...	SCREW/ORDER FOR SPARES/	14	
11	122-440114-37	...	GASKET, LH	1	
12	122-440114-38	...	GASKET, RH	1	
13	122-440114-39	...	GASKET, AFT	1	
14	122-440114-41	...	GASKET, FWD	1	
15	122-440114-43	...	DOOR ASSY, BONDED	1	
	MS21060L08	..	NUTPLATE	14	
	MS21060L3	..	NUTPLATE	39	

— END —

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-40-00
MAIN PANEL AND SUBPANEL SUPPORT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

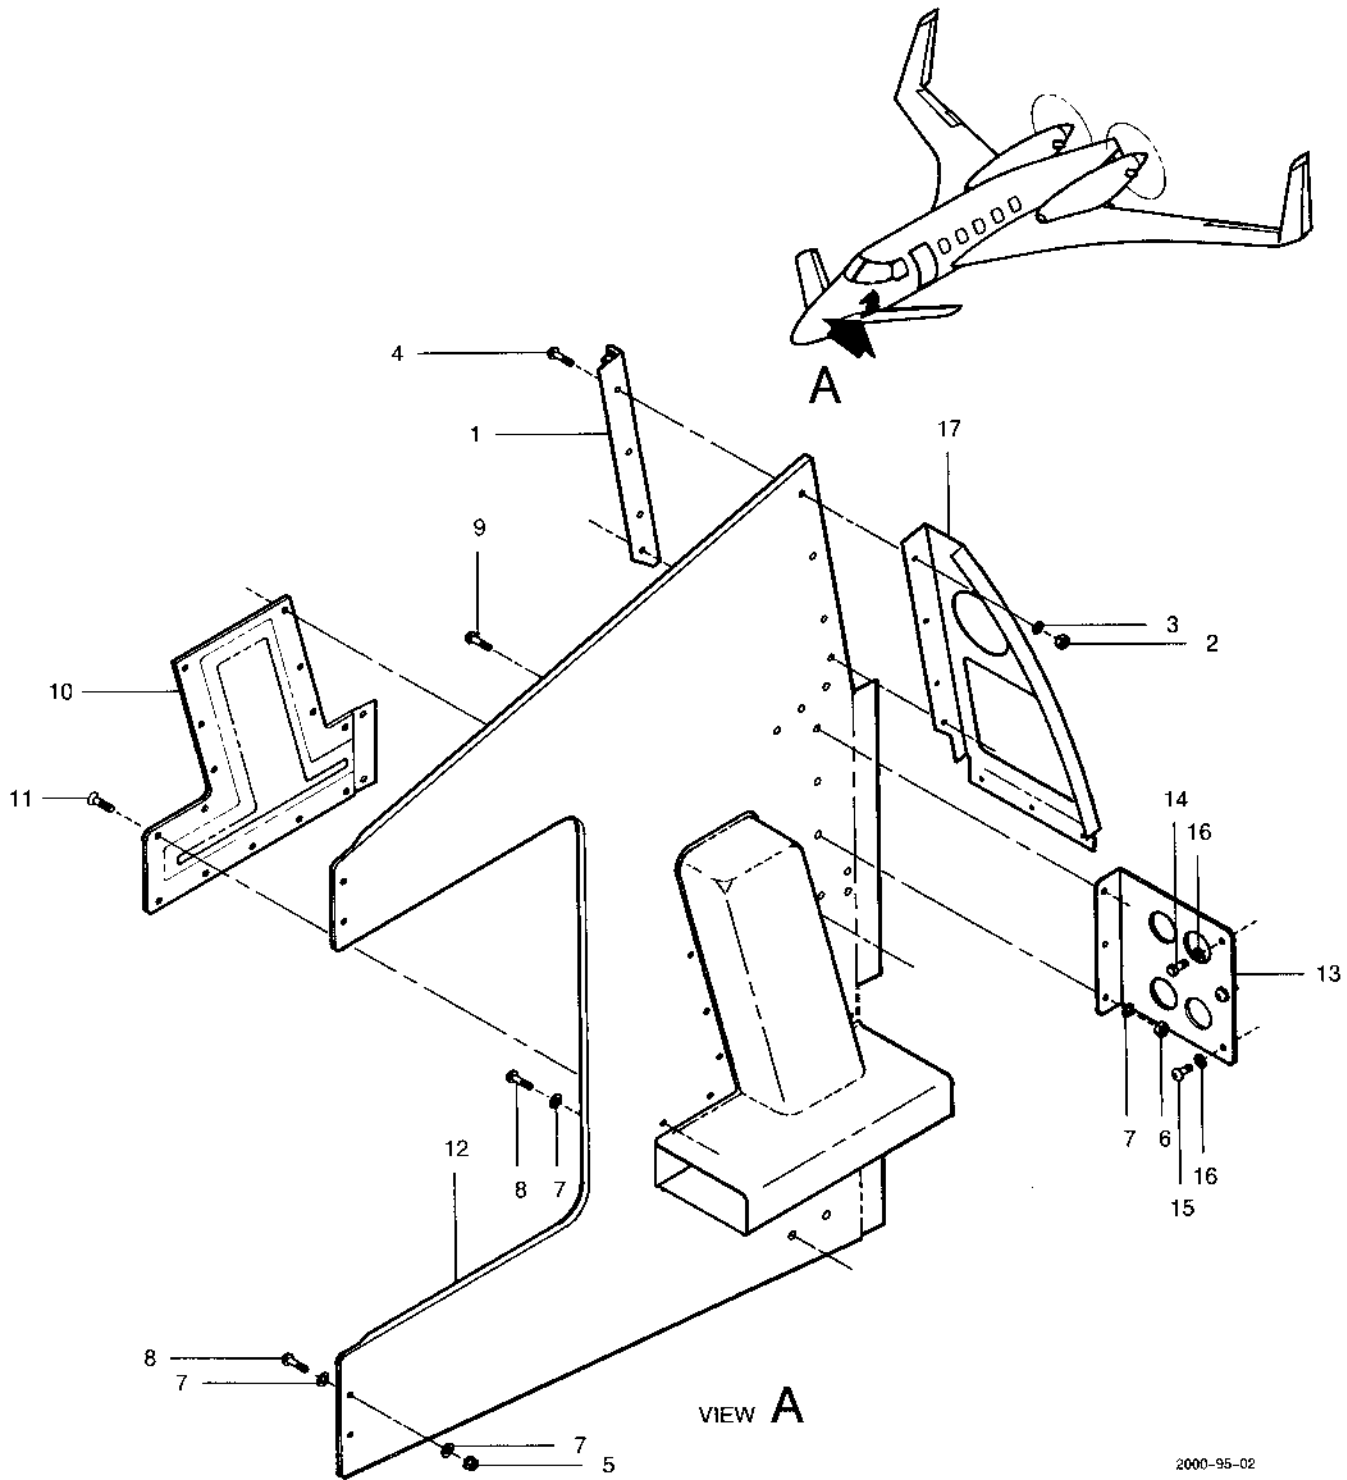

2000-95-02

FIGURE 40-00.MAIN PANEL AND SUBPANEL SUPPORT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00	122-322032-1	SUPPORT INSTL, MAIN PANEL & SUBPANEL.....	NP	
- 1	122-322033-1	. BRACKET ASSY, MAIN PANEL LH SUPPORT.....	1	1
	122-322033-5	. BRACKET ASSY, MAIN PANEL LH SUPPORT.....	1	2
	122-322033-2	. BRACKET ASSY, MAIN PANEL RH SUPPORT.....	1	1
	122-322033-6	. BRACKET ASSY, MAIN PANEL RH SUPPORT.....	1	2
		/ATTACHING PARTS/		
- 2	MS21045L3	. NUT.....	4	
- 3	AN960-10L	. WASHER.....	4	
- 4	MS27039-1-12	. SCREW.....	4	
		-----★-----		
	MS21060L3	. NUTPLATE.....	3	
	122-322035-1	. SUPPORT ASSY, LH SIDEWALL/BL 26.00/.....	1	
	122-322036-1	. SUPPORT ASSY, RH SIDEWALL/BL 26.00/.....	1	
		/ATTACHING PARTS/		
- 5	130909N29	. NUT.....	4	
- 6	MS21045L3	. NUT.....	3	
- 7	AN960-10L	. WASHER.....	13	
- 8	MS27039-1-09	. SCREW.....	6	
- 9	MS27039-1-12	. SCREW.....	3	
		-----★-----		
	122-322211-3	. DECAL, WIRE TRAY DOOR WARNING.....	1	
-10	122-322070-1	. COVER ASSY, LH WIRE TRAY.....	1	
	122-322069-1	. COVER ASSY, RH WIRE.....	1	
		/ATTACHING PARTS/		
-11	MS24694S50	. SCREW.....	14	
		-----★-----		
	122-322211-3	. DECAL, WIRE TRAY DOOR WARNING.....	1	
	MS21047-3	. NUTPLATE/10 LH & 11 RH/.....	10	
	MS21051-3	. NUTPLATE/4 LH & 3 RH/.....	4	
-12	122-322035-3	. BONDED ASSY, LH SUPPORT.....	1	
	122-322036-3	. BONDED ASSY, RH SUPPORT.....	1	
	P102D10AL1	. PLUG/12 LH & 10 RH/.....	12	
	P104D1032AL04	. PLUG.....	6	
	P104D832AL04	. PLUG/5 LH & 6 RH/.....	5	
	S102D10AL04	. SLEEVE/12 LH & 10 RH/.....	12	
	S104D10AL1	. SLEEVE.....	6	
	S104D8AL1	. SLEEVE/5 LH & 8 RH/.....	5	
-13	122-322073-1	. SUPPORT, LH & RH MAIN PANEL.....	2	
		/ATTACHING PARTS/		
-14	130909B14	. BOLT.....	1	
-15	MS27039-1-09	. SCREW.....	2	
-16	AN960-10L	. WASHER.....	3	
		-----★-----		
-17	122-322247-1	PANEL INSTL, UPPER LEFT CONSOLE.....	1	
	122-322072-3	PANEL, RIGHT SIDEWALL.....	1	



CODES OF EFFECTIVITY

1 NC-4 AND NC-5, NC-24 AND AFTER	2 NC-6 THRU NC-23
--	--------------------------

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-40-10
ELECTRONIC FLIGHT DISPLAYS SUPPORT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

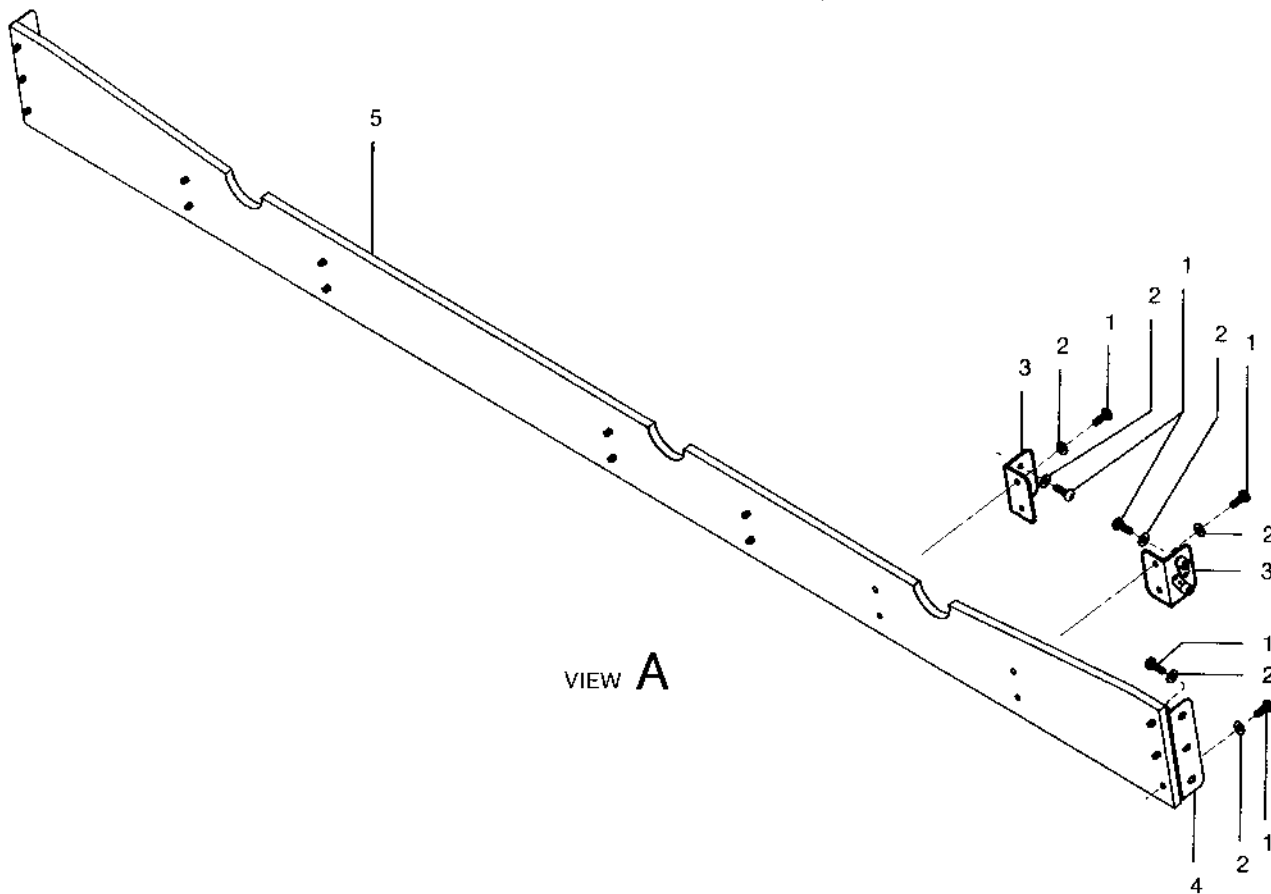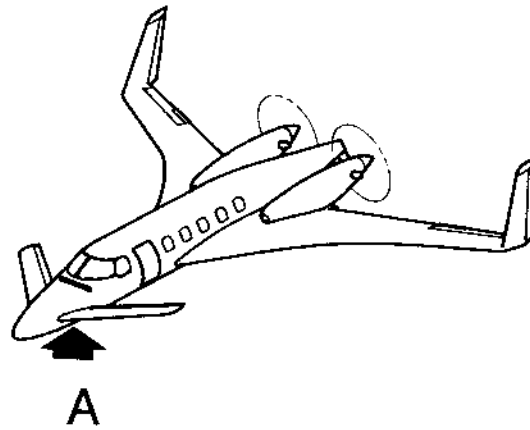

2000-95-03

FIGURE 40-10.ELECTRONIC FLT DISPLAYS SUPPORT


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-10	122-322096-1	SUPPORT INSTL, ELECTRONIC FLIGHT DISPLAYS	NP	
- 1	MS27039-1-07	. SCREW.....	36	
- 2	AN980-10L	. WASHER	36	
- 3	122-322156-1	. BRACKET ASSY, CRT MOUNT RACK SUPPORT	6	
	MS21051L3	. . NUTPLATE	2	
- 4	122-322157-1	. BRACKET, CRT MOUNT FWD SUPPORT	2	
- 5	122-322156-1	. PANEL ASSY, CRT MOUNT FWD SUPPORT	1	
	NAS1329H08K75L	. . RIVNUT	8	
	P106D1032-04	. . PLUG	30	
	S106D10-1	. . SLEEVE	30	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-40-20
NOSE ATTACH FITTINGS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

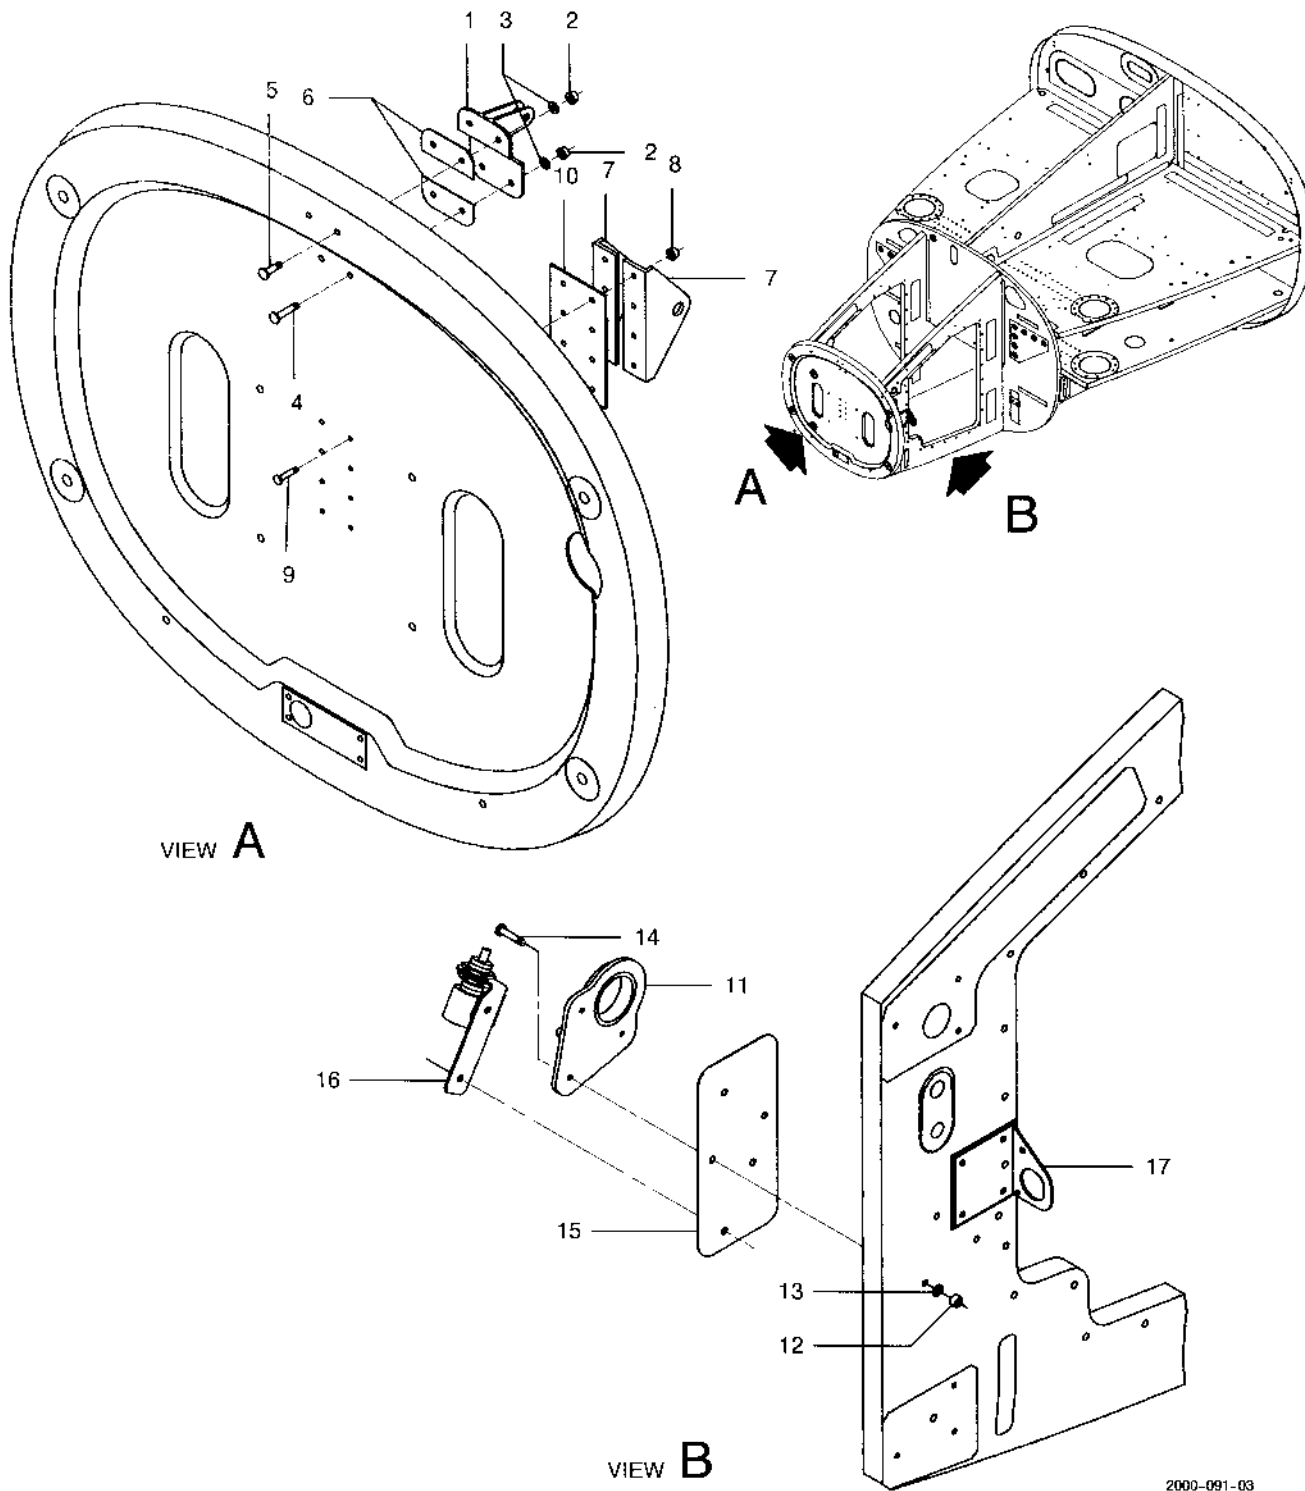


2000-091-03

FIGURE 40-20.NOSE ATTACH FITTINGS
/SHEET 1 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-20	122-410000-1	NOSE ASSY	1	
- 1	122-410475-1	. BRACKET, NOSE GEAR DOOR ACTUATOR	1	
		/ATTACHING PARTS/		
- 2	HL94K8	. COLLAR	4	
- 3	AN960C10L	. WASHER	4	
- 4	HL10V6-11	. PIN	2	
- 5	HL10V6-2	. PIN	2	
		-----★-----		
- 6	122-410715-11	. SHIM/.010 THICK/	2	
- 7	122-410202-5	. BRACKET, NOSE GEAR LOCK	2	
		/ATTACHING PARTS/		
- 8	HL94K5	. COLLAR	4	
- 9	HL610-5-12	. PIN	4	
		-----★-----		
- 10	122-410715-47	. SHIM/.010 THICK/	1	
- 11	122-410445-1	. SUPPORT ASSY, NOSE LANDING GEAR TORQUE TUBE	2	
		/ATTACHING PARTS/		
- 12	HL94K8	. COLLAR	3	
- 13	AN960C10L	. WASHER	3	
- 14	HL10V6-16	. PIN	3	
		-----★-----		
	MIL-B81934/1-2 *	4A016 . BEARING	1	
- 15	122-410715-27	. SHIM/.010 THICK/	AR	
	122-410715-29	. SHIM/.030 THICK/	AR	
- 16	122-410705-5	. BRACKET, NOSE LANDING GEAR DOOR SWITCH	1	
- 17	122-340039-81	. BRACKET, LH	1	
	122-340039-82	. BRACKET, RH	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

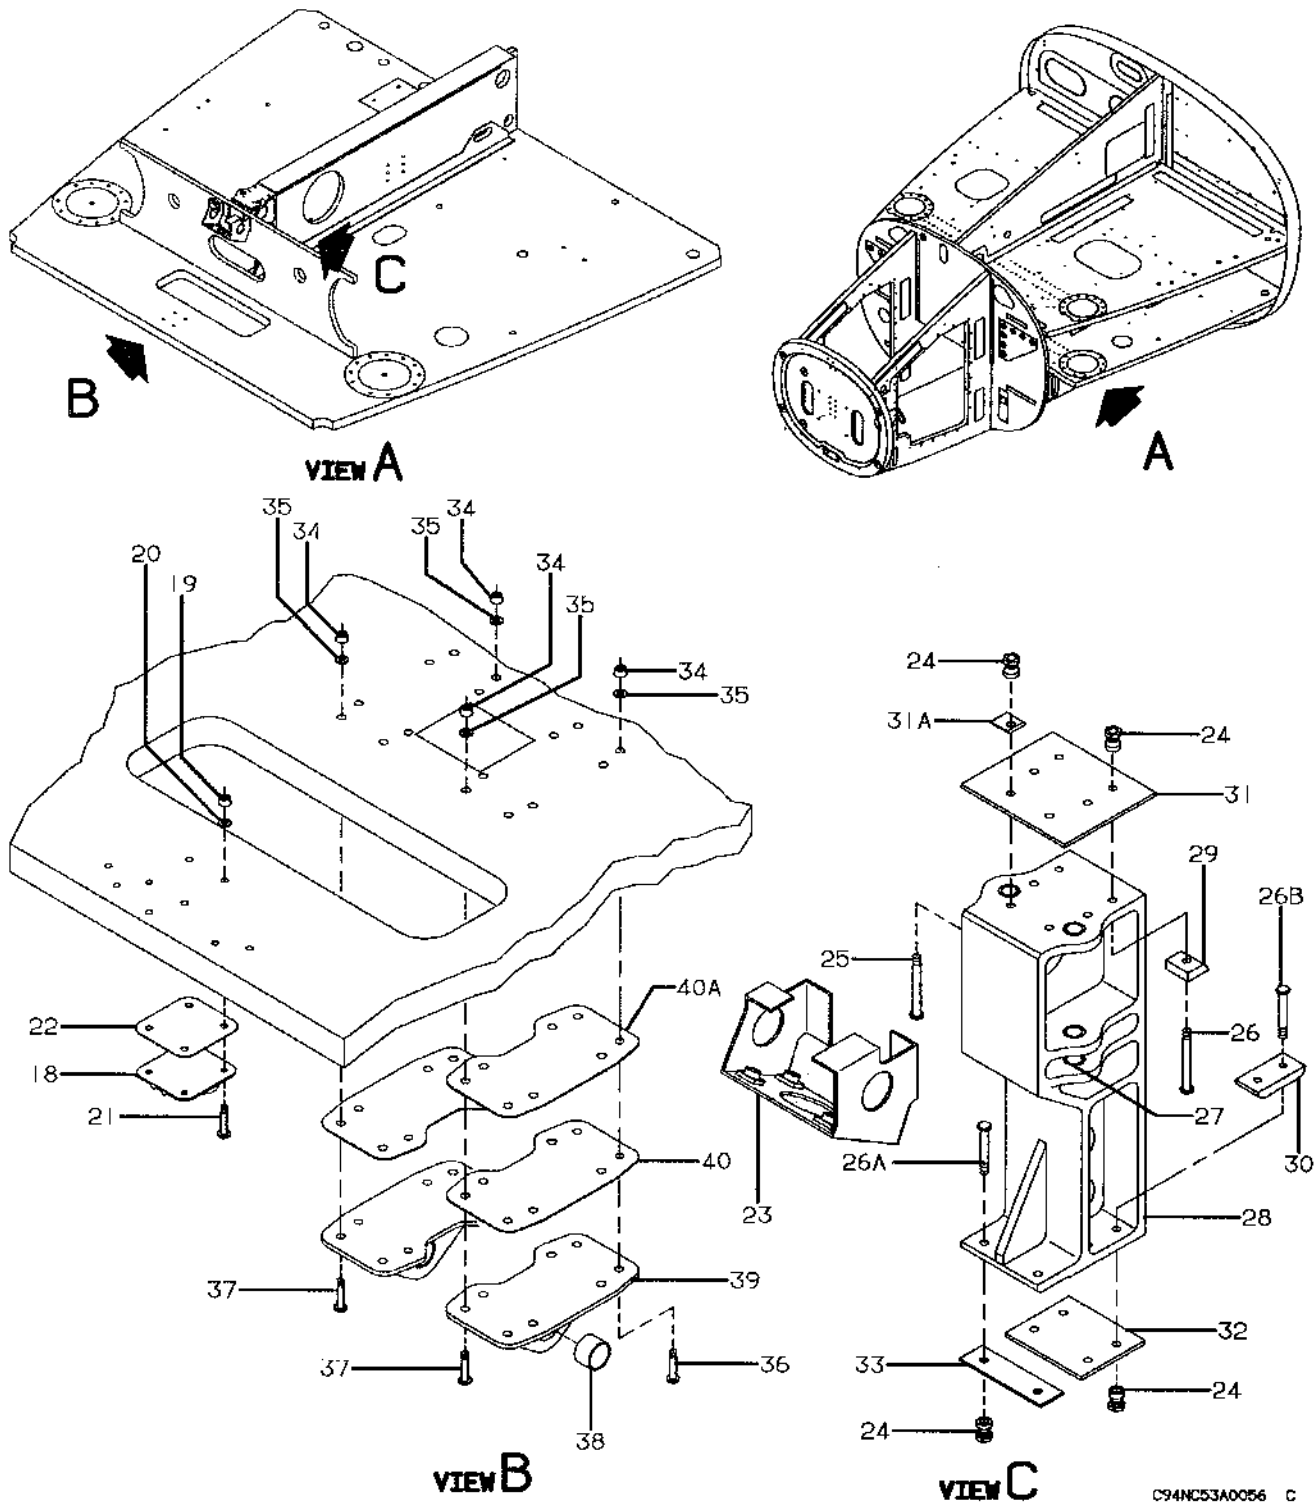


C94NC53A0056 C

FIGURE 40-20.NOSE ATTACH FITTINGS
/SHEET 2 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-20 - 18	122-410420-1	. BRACKET, NOSE LANDING GEAR UPLOCK SUPPORT	1	
		. /ATTACHING PARTS/		
- 19	HL94K5	. COLLAR	4	
- 20	AN960C8L	. WASHER	4	
- 21	HL810-5-20	. PIN	4	
		---★---		
- 22	122-410715-25	. SHIM/.010 THICK/	1	
- 23	122-410485-5	. BRACKET ASSY, FWD WING LOCK VALVE	1	
	GFP6010L10AA	. NUTPLATE	3	
	122-410485-11	. FITTING ASSY, FWD WING HYDRAULIC LOCK	1	
	122-410485-15	. FITTING ASSY, FWD WING HYDRAULIC LOCK	1	
		. /ATTACHING PARTS/		
- 24	HL86-8	. COLLAR	12	
- 25	HL12V6-24	. PIN	6	
	HL12V6-25	. PIN/ALTERNATE FOR HL12V6-24/	AR	
	HL12V6-26	. PIN/ALTERNATE FOR HL12V6-24/	AR	
	HL12V6-27	. PIN/ALTERNATE FOR HL12V6-24/	AR	
- 26	HL12V6-28	. PIN	6	
	HL12V6-29	. PIN/ALTERNATE FOR HL12V6-28/	AR	
	HL12V6-30	. PIN/ALTERNATE FOR HL12V6-28/	AR	
	HL12V6-31	. PIN/ALTERNATE FOR HL12V6-28/	AR	
- 26A	HL12V6-24	. PIN	2	
- 26B	HL12V6-28	. PIN	4	
		---★---		
- 27	132007-08C11 5-1	. BUSHING	2	
- 28	122-410485-9	. FITTING	1	
	122-410485-13	. FITTING	1	
	HL94K8	. COLLAR	4	
	HL10V6-8	. PIN	4	
	122-410485-7	. FITTING ASSY	1	
	132007-08C11 5-1	. BUSHING	2	
- 29	122-410000-15	. BLOCK, RADIUS	2	
- 30	122-410000-17	. BLOCK, RADIUS	2	
- 31	122-410000-11	. PLATE	1	
- 31A	122-410000-29	. SHIM	2	
- 32	122-410000-13	. PLATE	1	
- 33	122-410000-19	. PLATE	AR	
	122-410430-15	. FITTING ASSY, NOSE GEAR BRACE ATTACH	2	
	122-410430-9	. FITTING ASSY, NOSE GEAR BRACE ATTACH	2	
		. /ATTACHING PARTS/		
- 34	HL94K8	. COLLAR	8	
- 35	AN960C418L	. WASHER	8	
- 36	HL10V8-21	. PIN	6	
- 37	HL10V8-22	. PIN	2	
		---★---		
- 38	MS17795-108	. BUSHING	1	
- 39	122-410430-13	. FITTING, NOSE GEAR BRACE ATTACH	1	
	122-410430-11	. FITTING, NOSE GEAR BRACE ATTACH	1	
- 40	122-410715-59	. SHIM/.010 THICK/	AR	
	122-410715-61	. SHIM/.030 THICK/	AR	
- 40A	122-410000-27	. SHIM/.050 THICK/	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

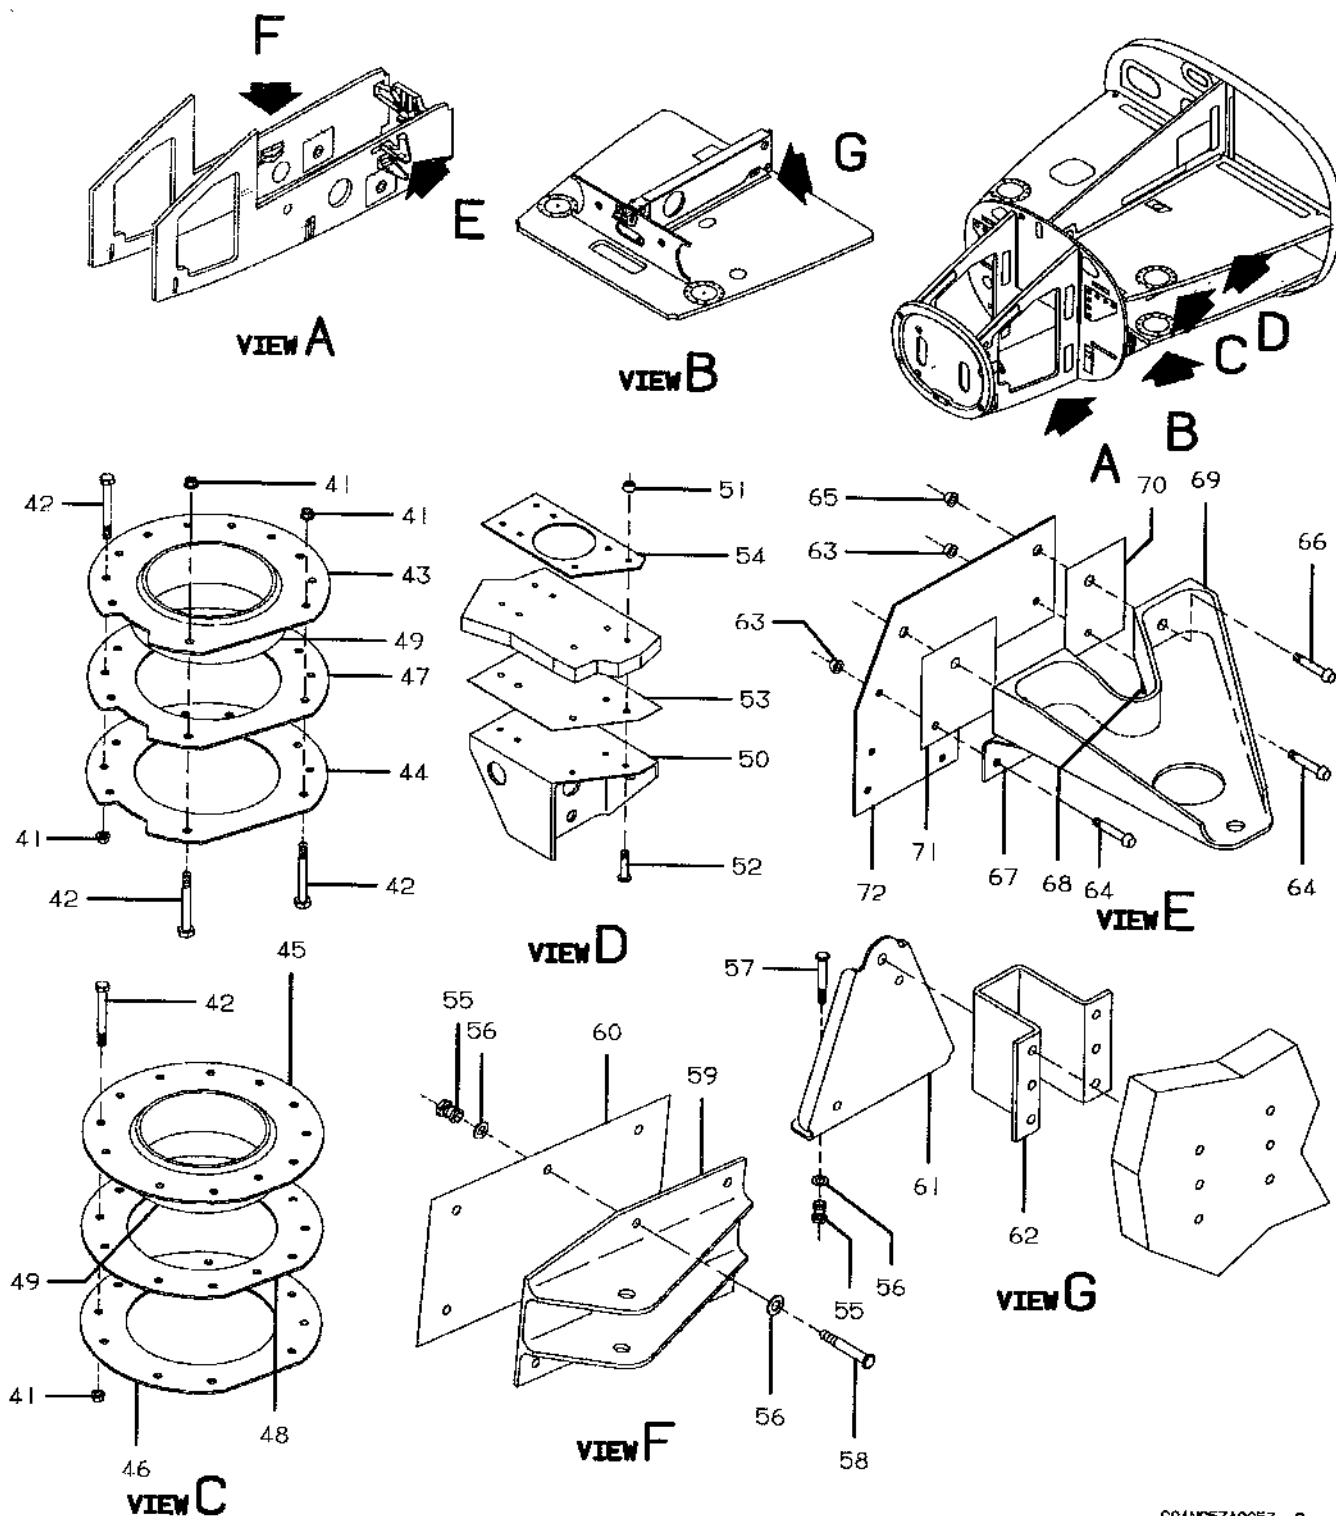

C94NC53A0057 C

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-20 - 41	MS21043-4	. NUT	44	
- 42	NAS654V25H	. BOLT	44	
- 43	122-410215-75	. RETAINER, UPPER SUPPORT BEARING UPPER	2	
- 44	122-410215-75	. RETAINER, LEFT AND RIGHT UPPER SUPPORT	2	
		BEARING LOWER		
- 45	122-410215-79	. RETAINER, LOWER SUPPORT BEARING UPPER	2	
- 46	122-410215-81	. RETAINER, LOWER SUPPORT BEARING LOWER	2	
- 47	122-410715-41	. SHIM/.005 THICK/	AR	
	122-410715-43	. SHIM/.010 THICK/	AR	
	122-410715-45	. SHIM/.030 THICK/	AR	
- 48	122-410215-35	. SHIM	2	
- 49	122-380041-3	. BEARING, FWD WING SUPPORT	4	
- 50	122-410490-5	. FITTING, NOSE LANDING GEAR ACTUATOR	1	1
	122-410490-7	. FITTING, NOSE LANDING GEAR ACTUATOR	1	2
		/ATTACHING PARTS/		
- 51	HL94K5	. COLLAR	7	
- 52	HL610-5-21	. PIN	7	
		---★---		
- 53	122-410715-9	. SHIM/.010 THICK/	1	
- 54	122-410490-3	. PLATE	1	
- 55	HL94K6	. COLLAR	8	
- 56	AN960C10L	. WASHER	13	
- 57	HL10V6-20	. PIN	3	
- 58	HL10V6-16	. PIN	5	
- 59	122-410440-3	. FITTING, NOSE LANDING GEAR SHIMMY DAMPER	1	
- 60	122-410715-63	. SHIM/.030 THICK/	1	
- 61	122-410202-19	. SUPPORT, PITCH TRIM	1	
- 62	122-410202-3	. SUPPORT, PITCH TRIM	1	
- 63	HL94K5	. COLLAR	2	
- 64	HL610-5-15	. PIN	2	
- 65	HL94K8	. COLLAR	2	
- 66	HL10V8-18	. PIN	2	
- 67	122-410480-17	. . ANGLE, SUPPORT	1	
- 68	122-410480-19	. . ANGLE, SUPPORT	1	
- 69	122-410480-25	. . BRACKET, SUPPORT	1	
- 70	122-410715-51	. SHIM/.010 THICK/	1	
- 71	122-410715-53	. SHIM/.010 THICK/	1	
- 72	122-410000-25	. PLATE, DOUBLER/INBOARD, LEFT KEEL/	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

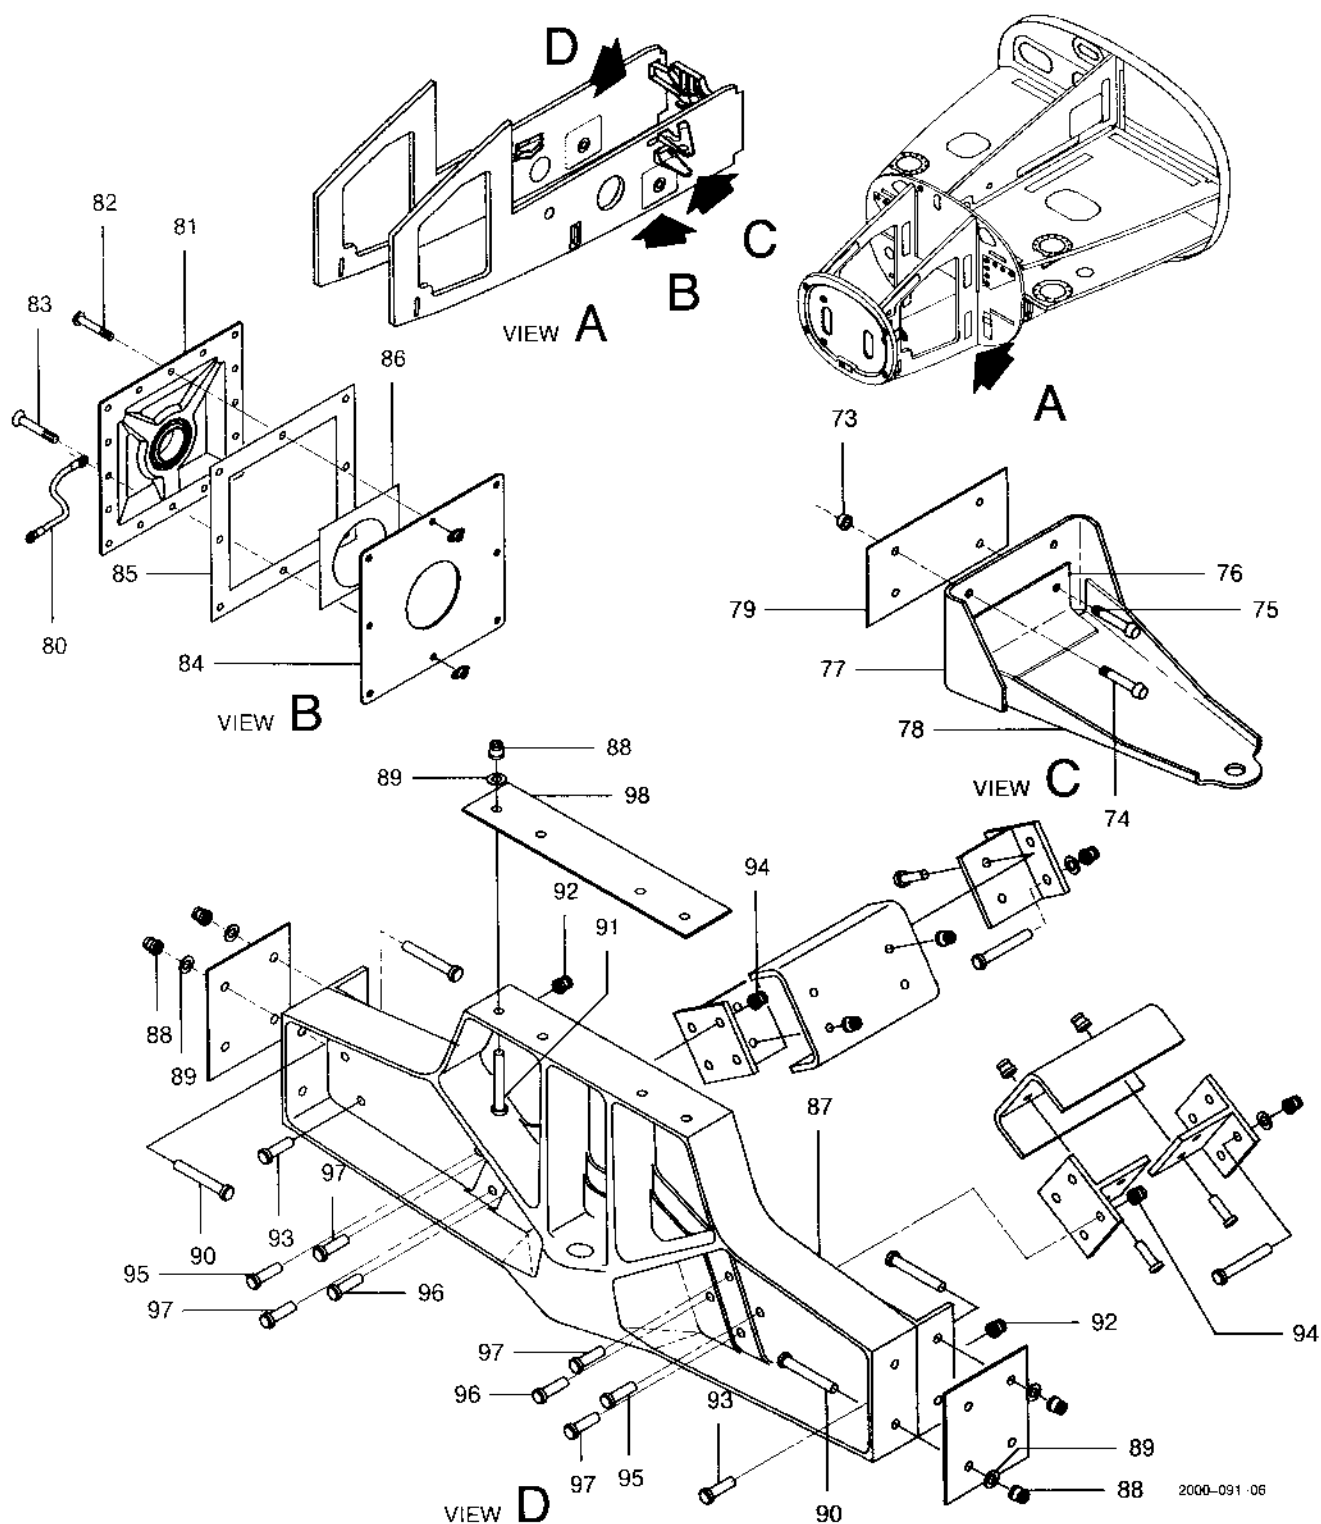


FIGURE 40-20.NOSE ATTACH FITTINGS
/SHEET 4 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-20	122-410480-5	SUPPORT ASSY, NOSE GEAR STEERING BELL CRANK	1	
		/ATTACHING PARTS/		
-73	HL94K5	COLLAR	4	
-74	HL610-5-15	PIN	2	
-75	HL610-5-17	PIN	2	
		---★---		
-76	122-410480-13	ANGLE, SUPPORT	1	
-77	122-410480-7	BRACKET, SUPPORT	1	
-78	122-410480-9	BRACKET, SUPPORT	1	
-79	122-410715-55	SHIM/.010 THICK/	1	
-80	MS25083-2CC8	STRAP, BONDING	2	
-81	122-410450-1	TRUNNION FITTING ASSY, NOSE LANDING GEAR	2	
		/ATTACHING PARTS/		
-82	NAS654V16	BOLT	7	
-83	NAS8704U16	BOLT	15	
		---★---		
	ABB20-103	BEARING/ALTERNATE FOR EL61267/	1	
	EL61267	BEARING/ALTERNATE FOR ABB20-103/	1	
-84	122-410450-3	TRUNNION PLATE ASSY	2	
	MS21075L4	NUTPLATE	15	
-85	122-410715-13	SHIM/.010 THICK/	AR	
	122-410715-15	SHIM/.030 THICK/	AR	
-86	122-410715-17	SHIM/.010 THICK/	AR	
	122-410715-19	SHIM/.030 THICK/	AR	
-87	122-410470-3	FITTING, NOSE LANDING GEAR STEERING PIVOT	1	
		/ATTACHING PARTS/		
-88	HL94K6	COLLAR	8	
-89	AN960JD10L	WASHER	8	
-90	HL10V6-17	PIN	4	
-91	HL10V6-20	PIN	4	
-92	HL70-6	COLLAR	6	
-93	HL18PB6-3	PIN	6	
-94	HL70-5	COLLAR	8	
-95	HL18PB5-4	PIN	2	
-96	HL18PB5-7	PIN	2	
-97	HL18PB5-6	PIN	4	
		---★---		
-98	122-410470-11	SHIM	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

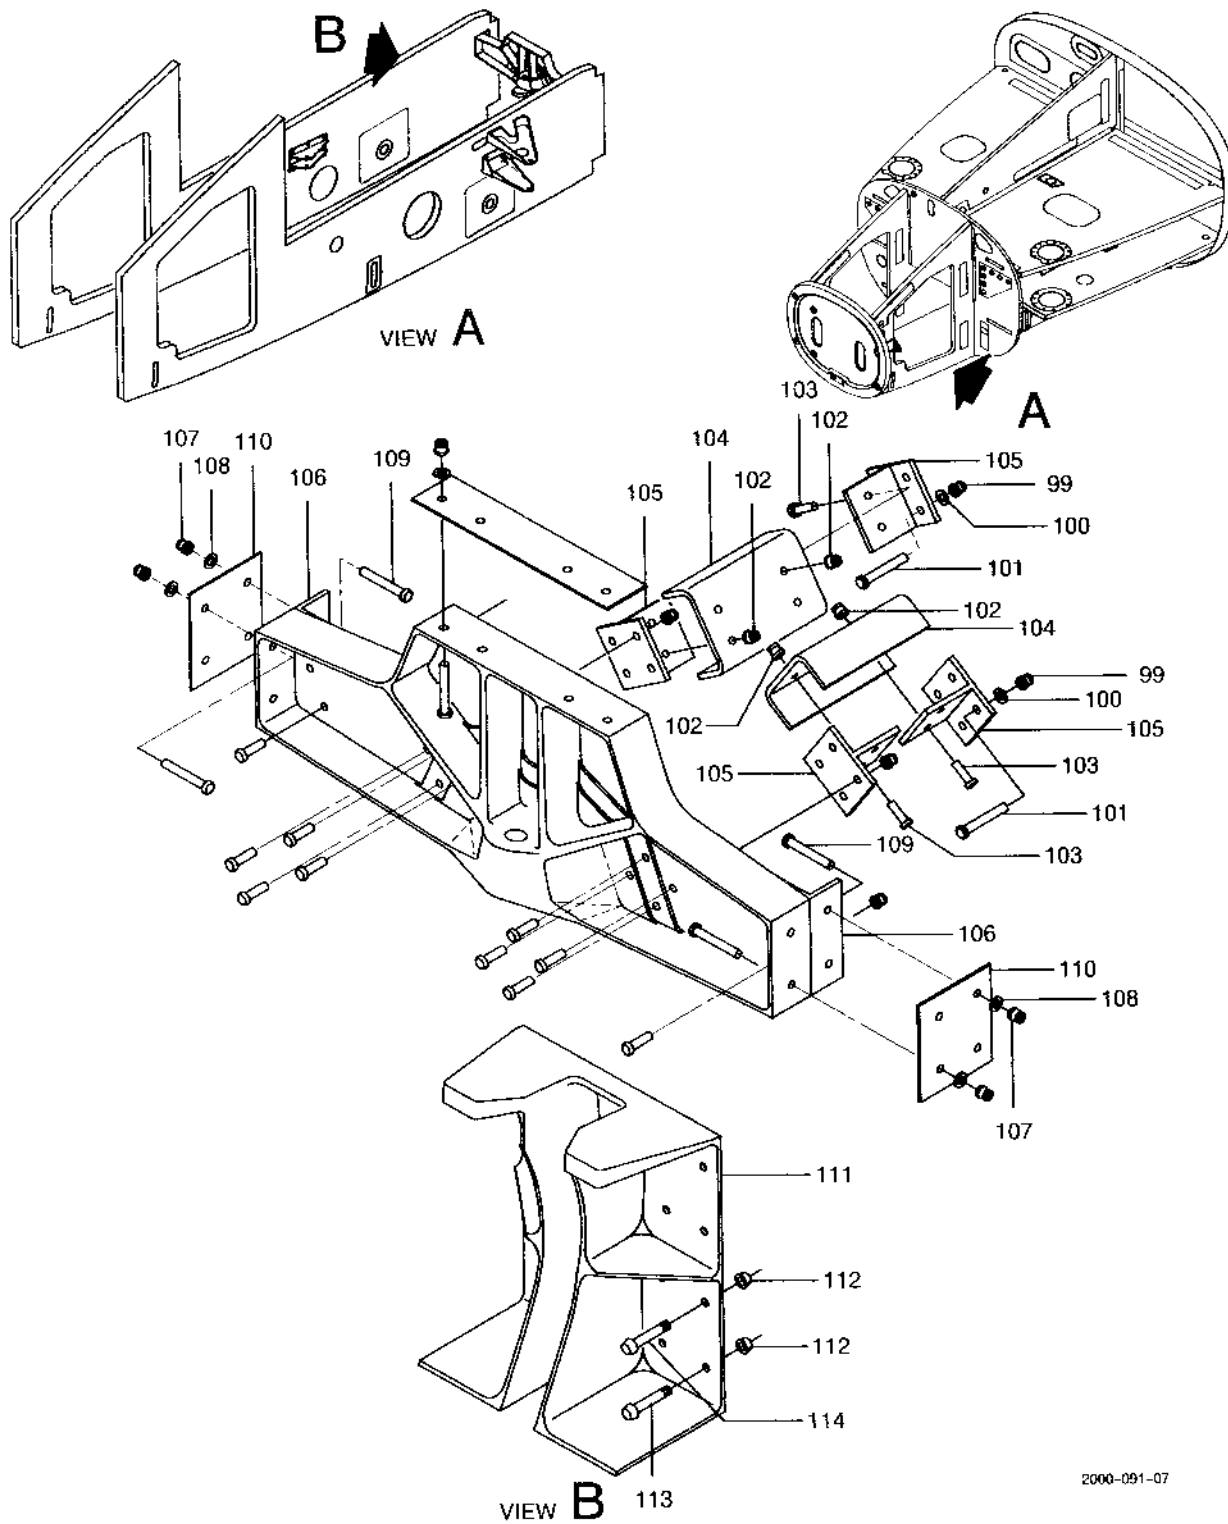


FIGURE 40-20.NOSE ATTACH FITTINGS
/SHEET 5 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-20 -99	HL94K5	. COLLAR	8	
-100	AN960JD10L	. WASHER	8	
-101	HL10V5-11	. PIN	8	
-102	HL70-5	. COLLAR	8	
-103	HL18PB5-3	. PIN	8	
-104	122-410470-5	. CHANNEL	2	
-105	122-410470-9	. SUPPORT	4	
-106	122-410470-7	. SUPPORT	2	
		/ATTACHING PARTS/		
-107	HL94K6	. COLLAR	2	
-108	AN960JD10L	. WASHER	2	
-109	HL10V6-17	. PIN	2	
		★		
-110	122-410470-13	. SHIM	2	
-111	122-410435-3	. BRACKET, NOSE WHEEL STRAIGHTENER	1	
		/ATTACHING PARTS/		
-112	HL94K5	. COLLAR	16	
-113	HL610-5-12	. PIN	15	
-114	HL610-5-14	. PIN	1	
		★		
	122-410025-1	. SUPPORT INSTL, EVAPORATOR/SEE CHAPTER 21/	NP	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-27	2	NC-28
	NC-29 THRU NC-36		NC-37 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-40-30
AVIONICS INTERFACE RACK

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

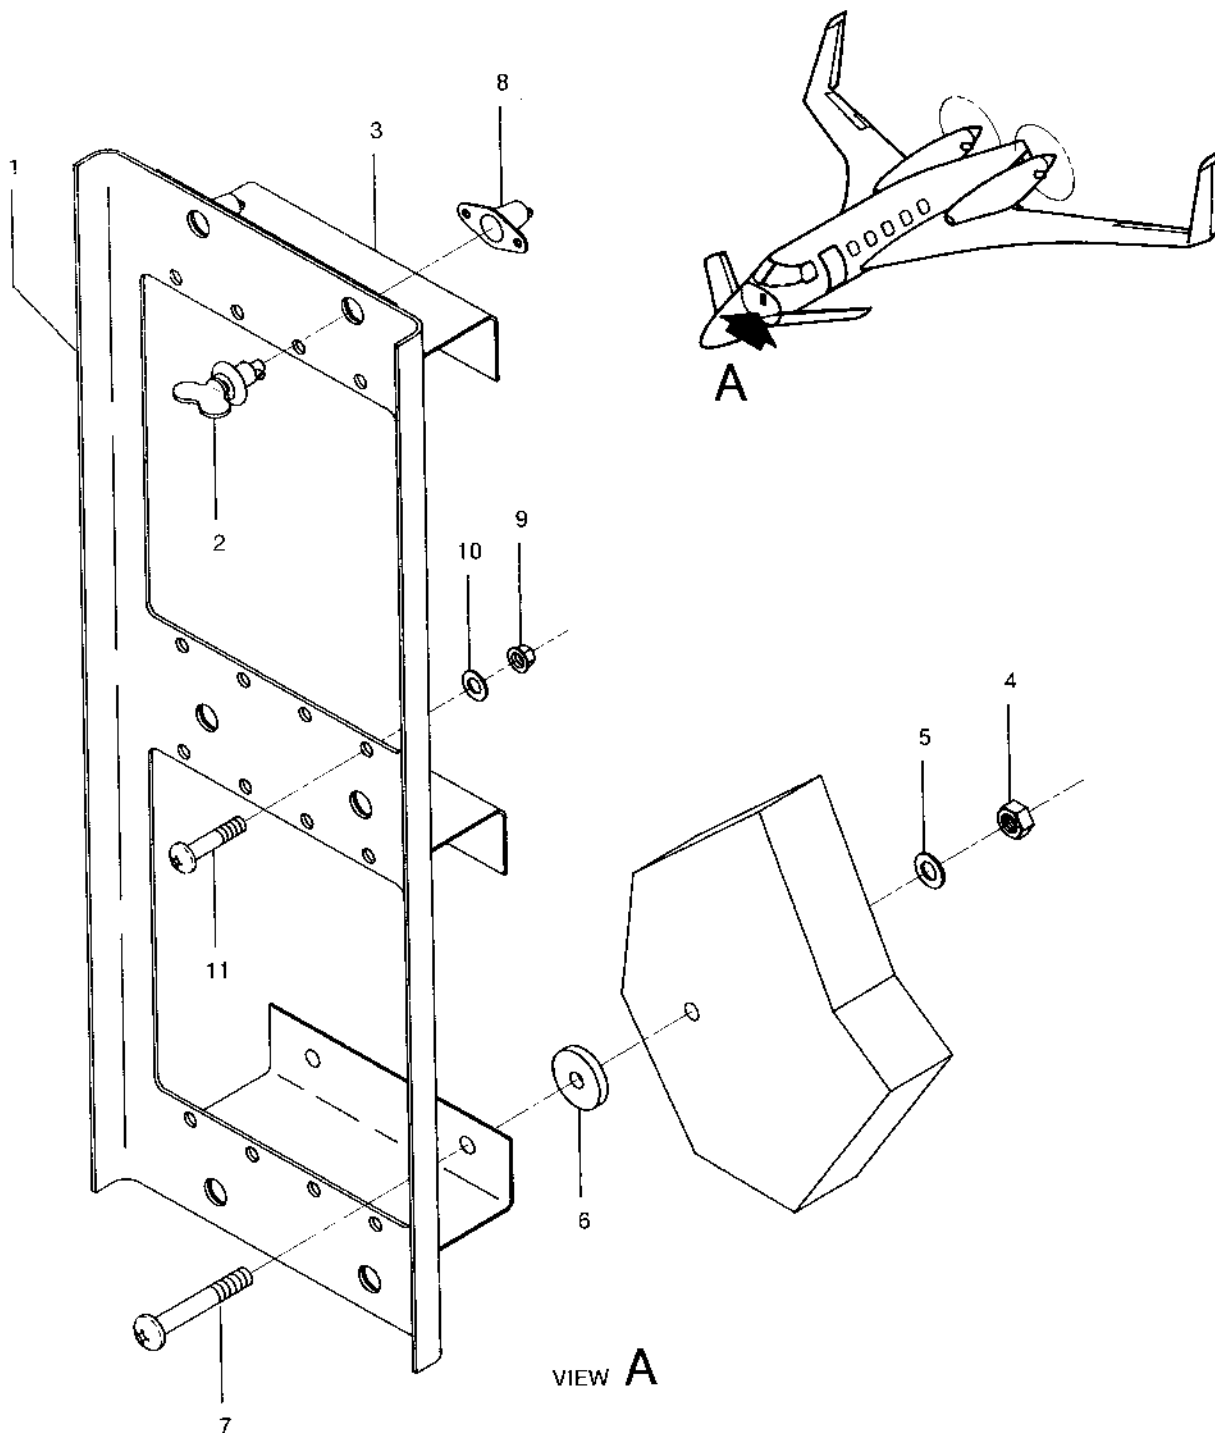

2000-491-68

FIGURE 40-30. AVIONICS INTERFACE RACK


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-30	122-340081-3	AVIONICS INTERFACE RACK INSTL	NP	
- 1	122-340082-31	. RACK ASSY, INTERFACE	1	
- 2	2600-3SW	. . STUD	6	
- 3	122-340082-15	. BRACKET ASSY	3	
		. /ATTACHING PARTS/		
- 4	MS21044C3	. LOCKNUT	2	
- 5	AN960-10L	. WASHER	4	
- 6	122-340070-1	. WASHER	2	
- 7	MS27039-1-24	. SCREW	2	
		-----★-----		
- 8	26R6-4BB	. . RECEPTACLE	2	
- 9	130909N28	. NUT	16	
- 10	AN960-8L	. WASHER	16	
- 11	MS35206-246	. SCREW	16	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-50-00
RADOME AND TAIL CONE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

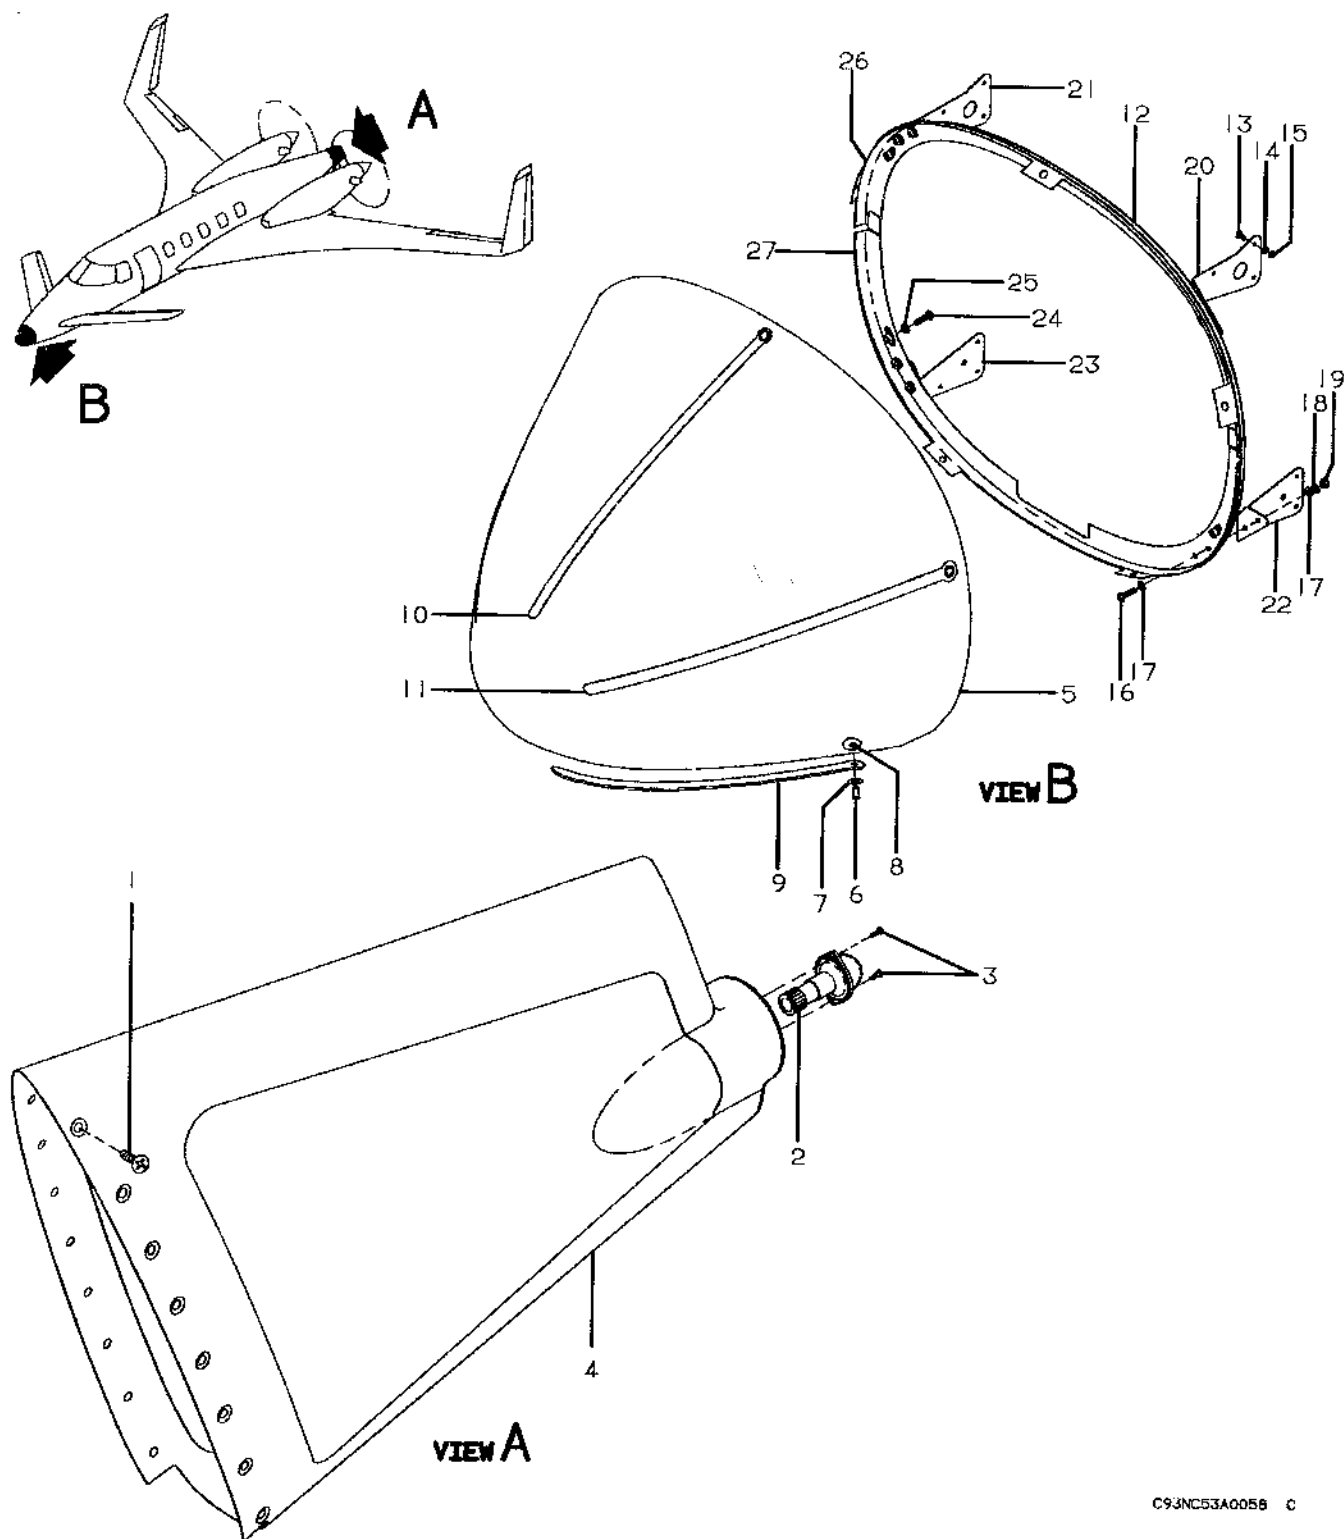

C93NC53A0058 C

FIGURE 50-00.RADOME AND TAIL CONE

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG



SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
50-00	122-440011-49		TAIL CONE INSTL	NP	
	122-440011-651		. TAIL CONE ASSY/WITHOUT LIGHT ASSY/	1	
	122-440011-47		. TAIL CONE ASSY/WITH LIGHT ASSY/	1	
			(ATTACHING PARTS)		
1	MS24694C8		. SCREW	16	
			-----★-----		
2	101-360021-15		. LIGHT ASSY, TAIL/SEE CHAPTER 33/	1	
			(ATTACHING PARTS)		
3	MS35206-218		. SCREW	2	
	MS21069L04		. NUTPLATE	2	
			-----★-----		
4	122-440011-45		. WELD ASSY, TAIL CONE	1	
	122-410021-1		RADOME INSTL	NP	
5	122-410021-3		. RADOME ASSY	1	
6	FIT7090-3-11-5		. CAPTIVE SCREW	5	
			/ORDER CA2229-10-5-11 FOR SPARES/		
	CA2229-10-5-11		. CAPTIVE SCREW	5	
7	NAS1169C10L		. WASHER, DIMPLE	5	
8	CA21062-10-R		. RETAINING RING	5	
			/ORDER CA2210-10R FOR SPARES/		
	CA2210-10R		. RETAINING RING	5	
9	LDS10-01-36-1		. DIVERTER STRIP	2	
10	LDS10-01-36-2		. DIVERTER STRIP	1	
11	LDS10-01-36-3		. DIVERTER STRIP	2	
12	130568-07438		. SEAL	1	
13	MS27039-1-20		. SCREW	12	
14	AN960C10		. WASHER	12	
15	130909N29		. NUT	12	
16	32938		. SCREW	8	
17	AN960JD10L		. WASHER	16	
18	MS35338-43		. WASHER, LOCK	8	
19	MS25082-3		. NUT	8	
20	122-410021-19		. GROUND STRAP	1	
21	122-410021-20		. GROUND STRAP	1	
22	122-410021-21		. GROUND STRAP	1	
23	122-410021-22		. GROUND STRAP	1	
24	MS27039C1-09		. SCREW	4	
25	100951CR040ZL		. WASHER	4	
26	122-410021-11		. BRACKET ASSY, UPPER	1	
	MS21059-L3		. NUTPLATE	5	
27	122-410021-15		. BRACKET ASSY, LOWER	1	
	MS21059-L3		. NUTPLATE	4	

— END —

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-50-20
FORWARD WING FAIRINGS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

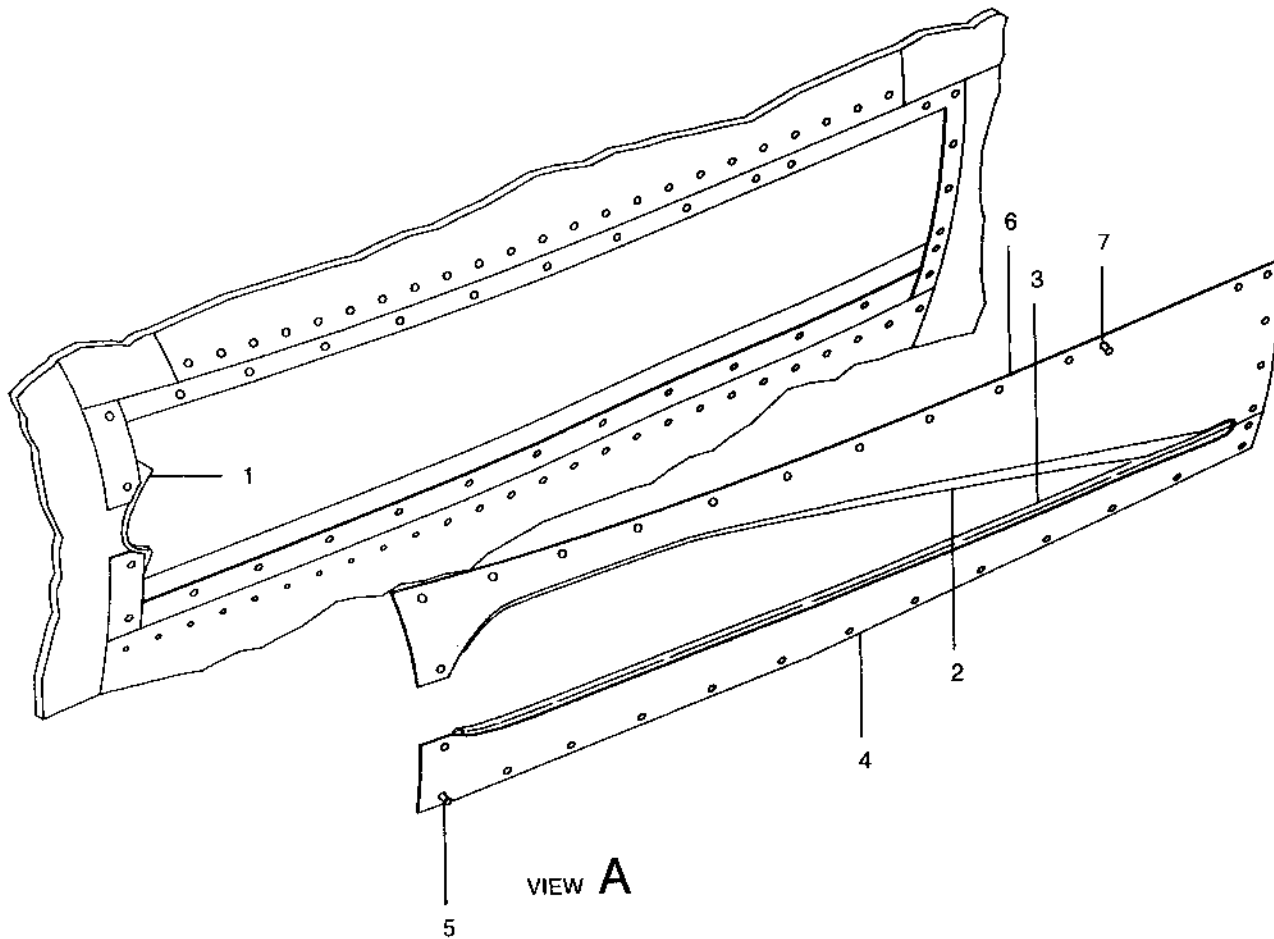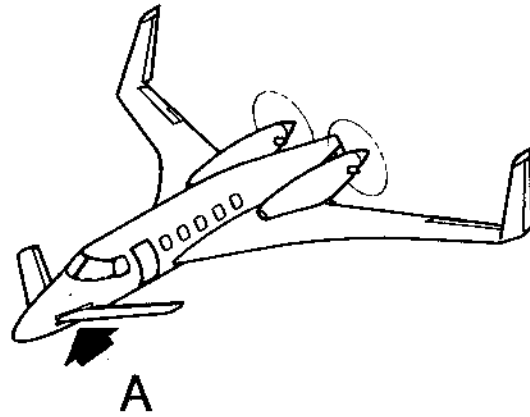

2000-013-14

FIGURE 50-20.FORWARD WING FAIRINGS

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-20	122-410620-23	SEAL INSTL, FWD WING FAIRING	NP	
- 1	122-381013-5	. SEAL, LH FWD FAIRING	1	
	122-381013-6	. SEAL, RH FWD FAIRING	1	
- 2	122-381013-3	. SEAL, LH UPR FAIRING	1	
	122-381013-4	. SEAL, RH UPR FAIRING	1	
- 3	122-381013-1	. SEAL, LH LWR FAIRING	1	
	122-381013-2	. SEAL, RH LWR FAIRING	1	
- 4	122-410615-1	PANEL ASSY, LH LWR FAIRING SKIN	1	1
	122-410615-21	PANEL ASSY, LH LWR FAIRING SKIN	1	2
	122-410615-2	PANEL ASSY, RH LWR FAIRING SKIN	1	1
	122-410615-22	PANEL ASSY, RH LWR FAIRING SKIN	1	2
- 5	DPYS7900P10B3DL	SCREW, CAPTIVE	15	
- 6	122-410615-19	PANEL ASSY, LH UPR FAIRING SKIN	1	3
	122-410615-3	PANEL ASSY, LH UPR FAIRING SKIN	1	4
	122-410615-23	PANEL ASSY, LH UPR FAIRING SKIN	1	2
	122-410615-4	PANEL ASSY, RH UPR FAIRING SKIN	1	1
	122-410615-24	PANEL ASSY, RH UPR FAIRING SKIN	1	2
- 7	DPYS7900P10B3DL	SCREW, CAPTIVE	17	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-43	2	NC-44 AND AFTER
3	NC-4 THRU NC-8	4	NC-9 THRU NC-43

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

53-50-40
AFT WING/FUSELAGE FAIRING/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

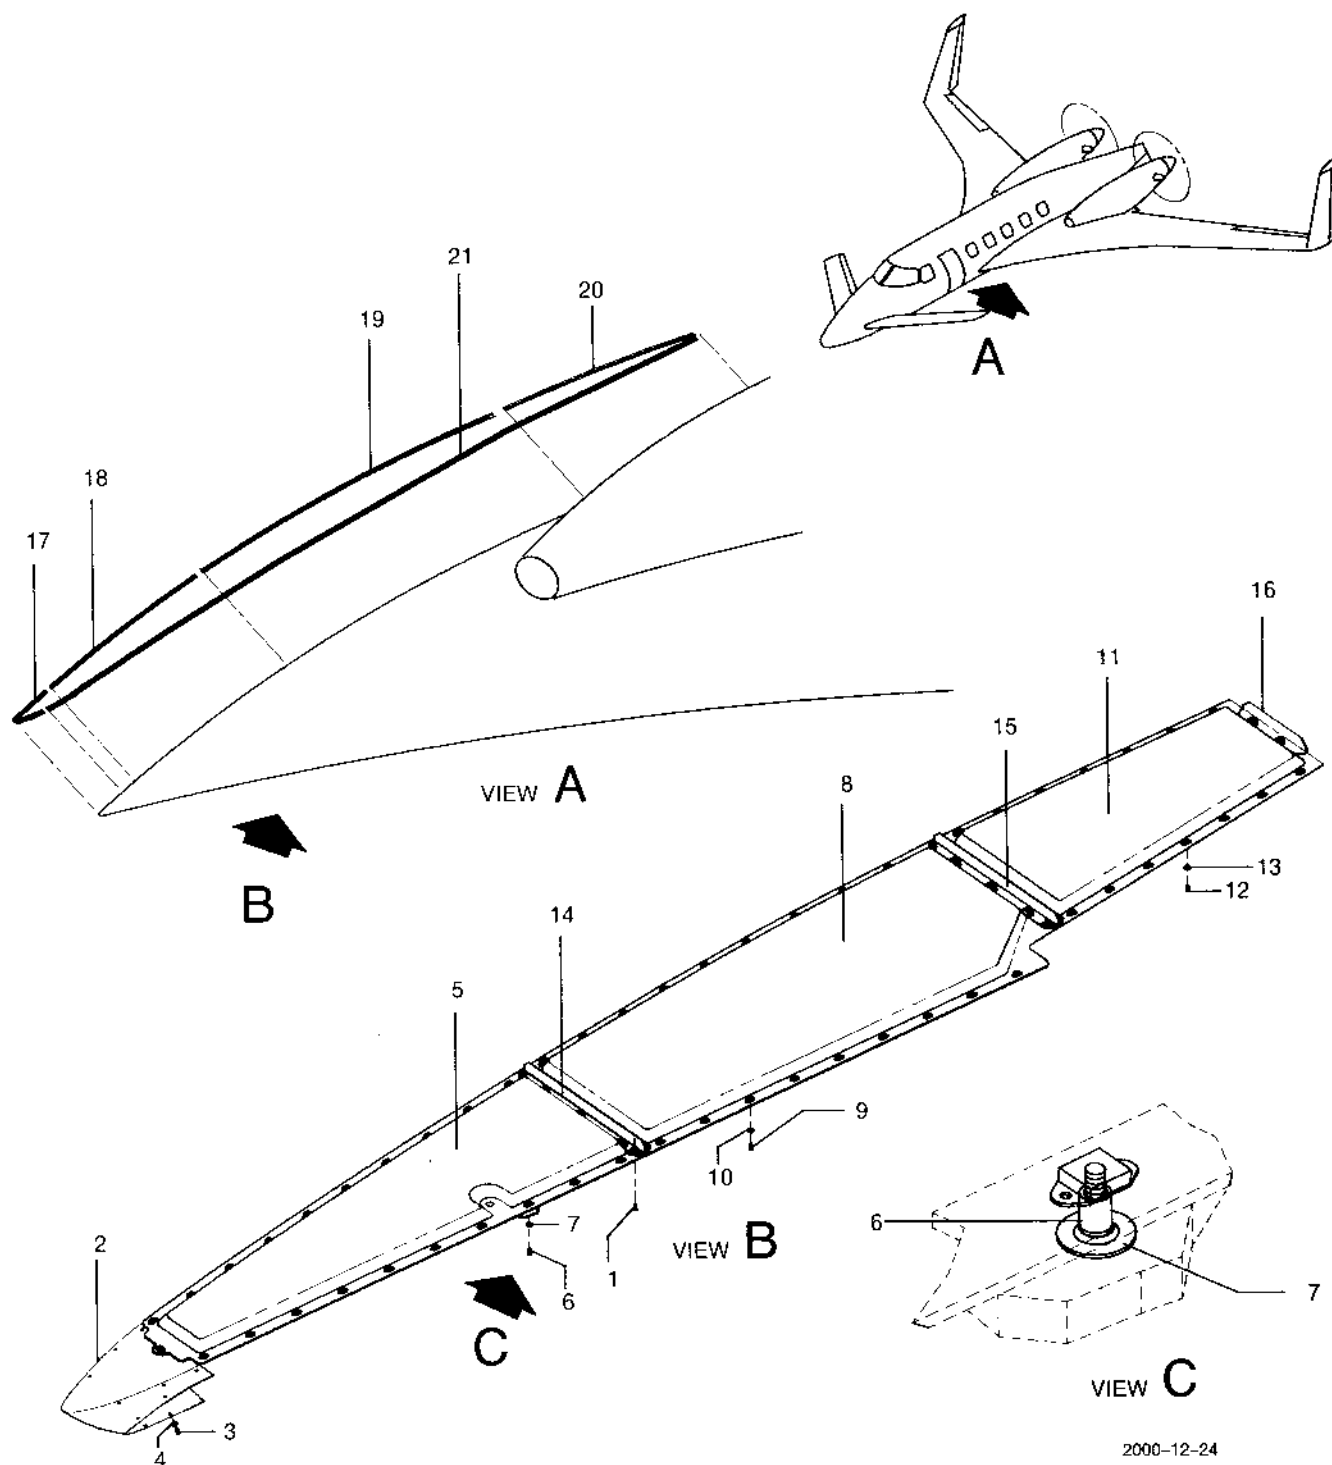

2000-12-24

FIGURE 50-40.AFT WING/FUSELAGE FAIRINGS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-40	122-100040-43	FAIRING INSTL, LH AFT WING	NP	
	122-100040-44	FAIRING INSTL, RH AFT WING	NP	
- 1	NAS8703U3	. BOLT	2	
- 2	122-100040-45	. COLLAR ASSY, LH LEADING EDGE	1	
	122-100040-46	. COLLAR ASSY, RH LEADING EDGE	1	
- 3	DPYS7900P10A2	. . SCREW, CAPTIVE	12	
- 4	132116	. . WASHER	12	
- 5	122-100040-71	. PANEL ASSY, LH FWD	1	1
	122-100040-89	. PANEL ASSY, LH FWD	1	2
	122-100040-91	. PANEL ASSY, LH FWD	1	5
	122-100040-72	. PANEL ASSY, RH FWD	1	1
	122-100040-90	. PANEL ASSY, RH FWD	1	2
	122-100040-92	. PANEL ASSY, RH FWD	1	5
- 6	DPYS7900P10A3	. . SCREW, CAPTIVE	23	
- 7	132116	. . WASHER	23	
- 8	122-100040-49	. PANEL ASSY, LH CENTER	1	1
	122-100040-87	. PANEL ASSY, LH CENTER	1	2
	122-100040-93	. PANEL ASSY, LH CENTER	1	5
	122-100040-50	. PANEL ASSY, RH CENTER	1	1
	122-100040-88	. PANEL ASSY, RH CENTER	1	2
	122-100040-93	. PANEL ASSY, LH CENTER	1	5
- 9	DPYS7900P10A3	. . SCREW, CAPTIVE	25	
- 10	132116	. . WASHER	25	
- 11	122-100040-51	. PANEL ASSY, LH AFT	1	
	122-100040-65	. PANEL ASSY, RH AFT	1	
- 12	DPYS7900P10A3	. . SCREW, CAPTIVE	19	
- 13	132116	. . WASHER	19	
- 14	122-100040-53	. SUPPORT ASSY, RIB	1	
	NAS1870CL3-2	. . NUTPLATE	8	
- 15	122-100040-55	. SUPPORT ASSY, RIB	1	
	NAS1870CL3-2	. . NUTPLATE	6	
- 16	122-100040-57	. SUPPORT ASSY, RIB	1	
	NAS1870CL3-2	. . NUTPLATE	2	
- 17	122-100040-35	. SEAL, LH LEADING EDGE	1	3
	122-100040-83	. SEAL, LH LEADING EDGE	1	4
	122-100040-36	. SEAL, RH LEADING EDGE	1	3
	122-100040-84	. SEAL, RH LEADING EDGE	1	4
- 18	122-100040-25	. SEAL, LH FWD UPPER	1	3
	122-100040-75	. SEAL, LH FWD UPPER	1	4
	122-100040-26	. SEAL, RH FWD UPPER	1	3
	122-100040-76	. SEAL, RH FWD UPPER	1	4
- 19	122-100040-27	. SEAL, CENTER UPPER	1	3
	122-100040-77	. SEAL, CENTER UPPER	1	4
- 20	122-100040-59	. SEAL, LH AFT UPPER	1	3
	122-100040-79	. SEAL, LH AFT UPPER	1	4
	122-100040-60	. SEAL, RH AFT UPPER	1	3
	122-100040-80	. SEAL, RH AFT UPPER	1	4
- 21	122-100040-61	. SEAL, LH AFT LOWER	1	3
	122-100040-81	. SEAL, LH AFT LOWER	1	4
	122-100040-62	. SEAL, RH AFT LOWER	1	3
	122-100040-82	. SEAL, RH AFT LOWER	1	4
	MS21060L3	. . NUTPLATE	8	
	NAS1870CL3-2	. . NUTPLATE	55	

CODES OF EFFECTIVITY

1	NC-4 THRU NC-16	2	NC-17 THRU NC-53
3	NC-4 THRU NC-17	4	NC-18 AND AFTER
5	NC-54 AND AFTER		

-END-

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG


LIST OF PAGES & TABLE OF CONTENTS FOR CHAPTER 54-00-00 NACELLES

CHAP/SUB- SECT & UNIT	PAGE NUMBER	EFFECTIVE DATE	TABLE OF CONTENTS
54-00-00	1	07/31/02	LIST OF PAGES & TABLE OF CONTENTS
54-10-00	1	02/25/94	NACELLE INSTALLATION
54-10-00	2	02/25/94	
54-10-00	3	02/25/94	
54-10-10	1	02/25/94	NACELLE
54-10-10	2	02/25/94	
54-10-10	3	02/25/94	
54-10-10	4	02/25/94	
54-10-10	5	02/25/94	
54-10-10	6	02/25/94	
54-10-10	7	02/25/94	
54-10-10	8	02/25/94	
54-10-10	9	02/25/94	
54-10-20	1	02/25/94	NACELLE FIREWALL LOWER STRUCTURE
54-10-20	2	02/25/94	
54-10-20	3	02/25/94	
54-10-30	1	02/25/94	NACELLE FIREWALL
54-10-30	2	02/25/94	
54-10-30	3	02/25/94	
54-10-30	4	02/25/94	
54-10-30	5	02/25/94	
54-11-00	1	02/25/94	NACELLE FIREWALL INSULATION
54-11-00	2	02/25/94	
54-11-00	3	02/25/94	
54-11-00	4	02/25/94	
54-11-00	5	02/25/94	
54-30-00	1	02/25/94	COWLING INSTALLATION
54-30-00	2	02/25/94	
54-30-00	3	07/31/02	
54-30-00	4	02/25/94	
54-30-00	5	07/31/02	
54-30-00	6	02/25/94	
54-30-00	7	07/31/02	
54-30-00	8	02/25/94	
54-30-00	9	02/25/94	
54-30-10	1	02/25/94	UPPER AFT COWLING
54-30-10	2	02/25/94	
54-30-10	3	02/25/94	
54-30-20	1	02/25/94	LOWER AFT COWLING
54-30-20	2	02/25/94	
54-30-20	3	02/25/94	
54-30-30	1	02/25/94	UPPER FORWARD COWLING
54-30-30	2	02/25/94	
54-30-30	3	02/25/94	
54-30-40	1	02/25/94	LOWER FORWARD COWLING
54-30-40	2	02/25/94	
54-30-40	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

54-10-00
NACELLE INSTALLATION

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

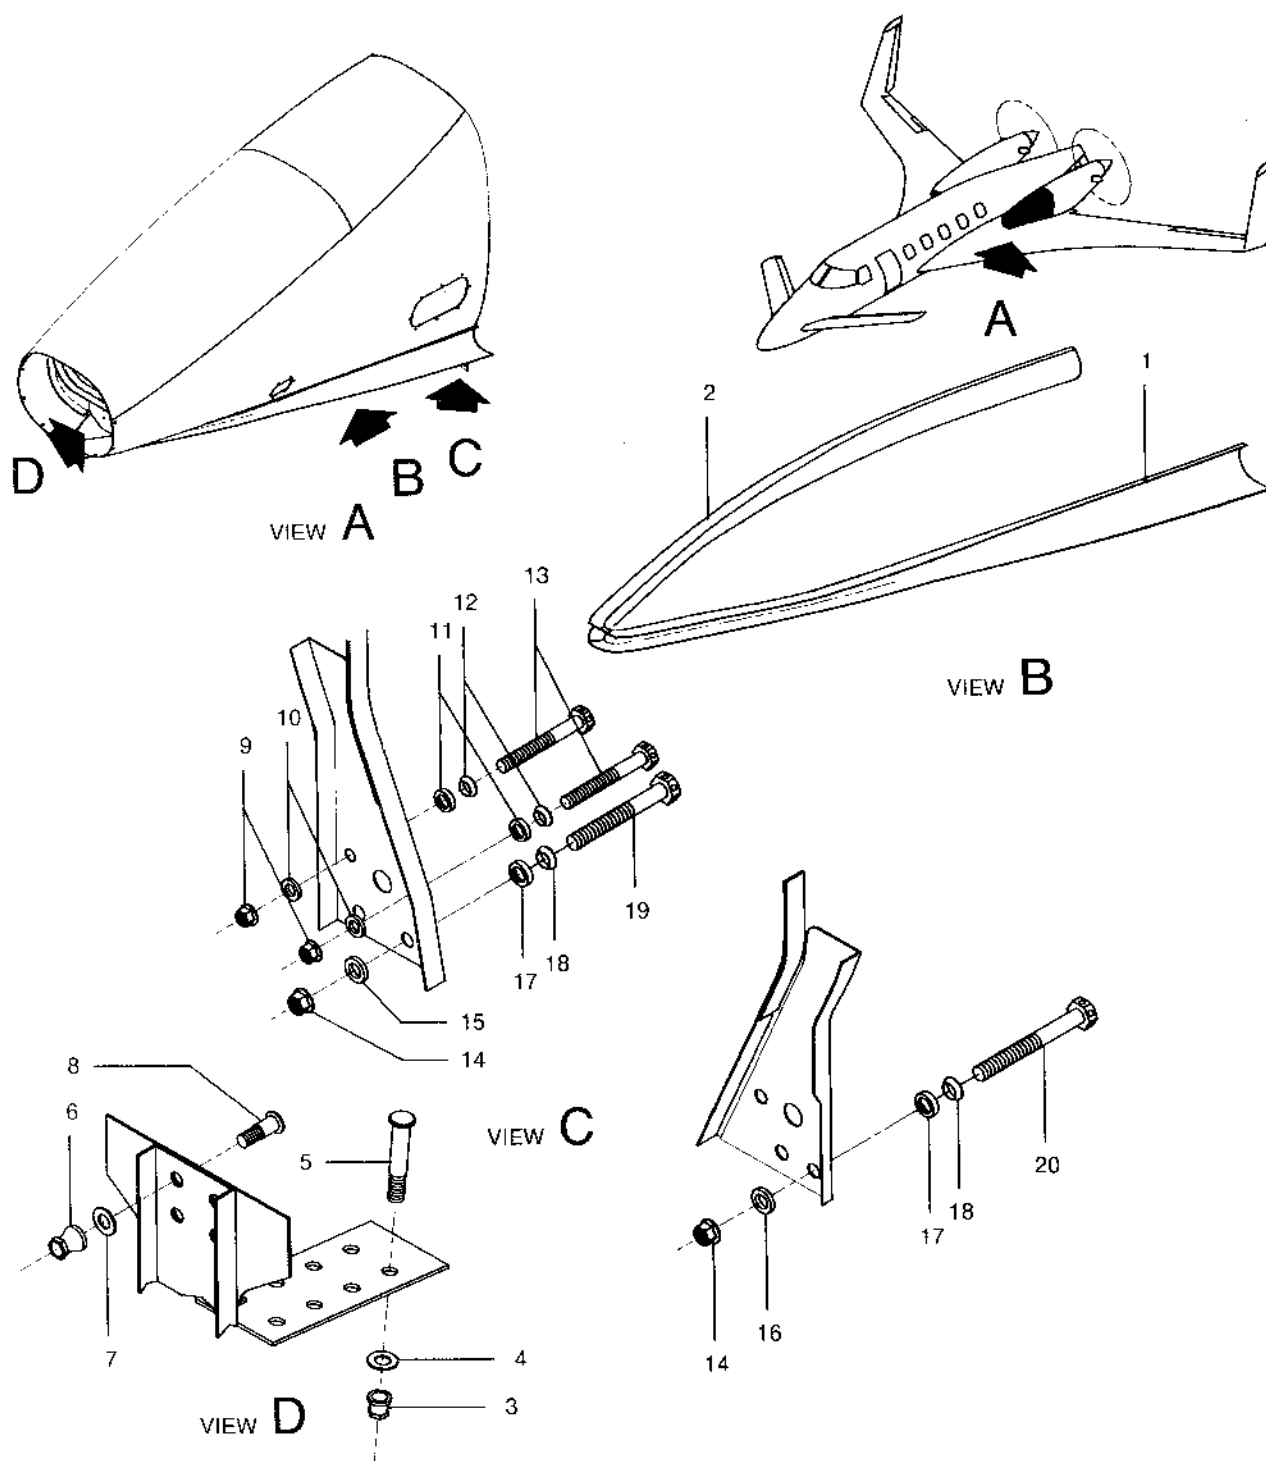

2000-064-01

FIGURE 10-00.NACELLE INSTALLATION

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-980038-1	NACELLE INSTL, LH	NP	
	122-980038-2	NACELLE INSTL, RH	NP	
- 1	122-980058-1	. FAIRING, LH OUTBD	1	
	122-980058-2	. FAIRING, RH OUTBD	1	
- 2	122-980058-5	. FAIRING, LH INBD	1	
	122-980058-6	. FAIRING, RH INBD	1	
- 3	HL379-8	. COLLAR	8	
- 4	AN960C416	. WASHER/INSTALL ON NEAR SIDE/	AR	
- 5	HL10V8-27	. PIN/INSTALL ON FAR SIDE/	8	
- 6	HL379-8	. COLLAR	4	
- 7	AN960C416	. WASHER/MINIMUM OF ONE AND MAXIMUM OF TWO/	AR	
- 8	HL10V8-8	. PIN/ALTERNATE FOR HL10V8-9/	4	
	HL10V8-9	. PIN/ALTERNATE FOR HL10V8-8/	4	
- 9	MS21043-6	. NUT/INSTALL ON FUSELAGE SIDE/	2	
- 10	MS20002-6	. WASHER/MINIMUM OF ONE AND MAXIMUM OF FOUR/	AR	
- 11	83276-6CC	. WASHER, CONCAVE/INSTALL ON NACELLE SIDE/	2	
- 12	83276-6CVP	. WASHER, CONVEX/INSTALL ON NACELLE SIDE/	2	
- 13	NAS6806-32	. BOLT/INSTALL ON NACELLE SIDE/	2	
- 14	MS21045C7	. NUT/INSTALL ON FUSELAGE SIDE/	5	
- 15	MS20002-7	. WASHER/MINIMUM OF ONE AND MAXIMUM OF FOUR/	AR	1
	100951X063	. WASHER/MINIMUM OF ONE AND MAXIMUM OF FIVE/	AR	2
- 16	MS20002-7	. WASHER/MINIMUM OF ONE AND MAXIMUM OF THREE/	AR	
- 17	83276-7CC	. WASHER, CONCAVE/INSTALL ON NACELLE SIDE/	5	
- 18	83276-7CVP	. WASHER, CONVEX/INSTALL ON NACELLE SIDE/	5	
- 19	NAS6807-32	. BOLT/INSTALL ON NACELLE SIDE/	2	1
	NAS6807-41	. BOLT/INSTALL ON NACELLE SIDE/	2	2
		/ALTERNATE FOR BACB30LM4-41/		
	BACB30LM4-41	. BOLT/INSTALL ON NACELLE SIDE/	2	2
		/ALTERNATE FOR NAS6807-41/		
- 20	NAS6807-40	. BOLT/INSTALL ON NACELLE SIDE/	3	
	122-980038-3	. BUSHING	1	2
	122-980038-5	. WASHER, RADIUS BLOCK	1	2

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

54-10-10
NACELLE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

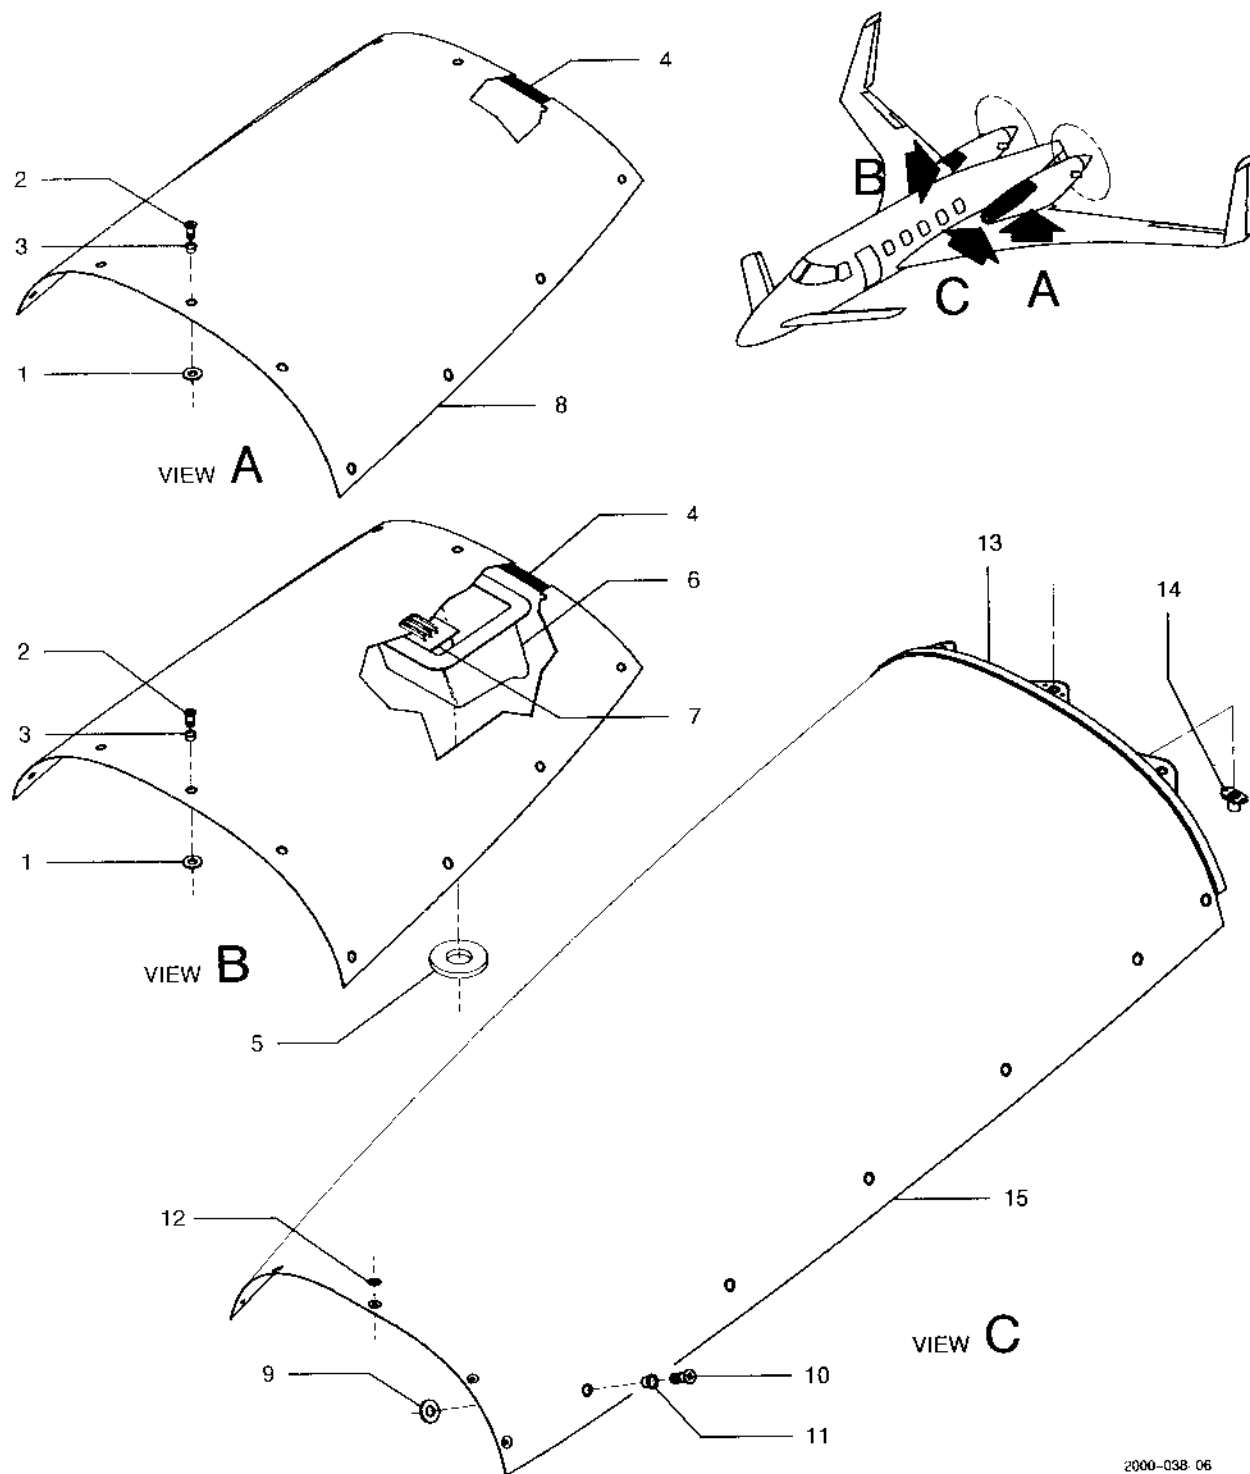


2000-038 06

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	122-980039-1	NACELLE ASSY, LH	NP	
	122-980039-3	NACELLE ASSY, RH	NP	
	122-980044-1	. DOOR ASSY, LH	1	
	122-980044-3	. DOOR ASSY, RH	1	
- 1	122-980044-9	. . SPACER	13	
- 2	CA18324-1P	. . NUT, STUD	13	
- 3	CA18185	. . GROMMET	13	
- 4	122-980044-15	. . SEAL	1	
- 5	122-980044-13	. . GASKET/RH ONLY/	2	
- 6	122-980042-3	. . CUP, DRAIN/RH ONLY/	1	
- 7	122-980044-11	. . PLATE, LOUVER/RH ONLY/	1	
- 8	122-980044-5	. . DOOR	NP	
	122-980047-11	. DOOR ASSY	1	
- 9	122-980047-15	. . WASHER	17	
- 10	CA18324-1P	. . NUT, STUD	17	
- 11	CA18185	. . GROMMET	17	
- 12	SL3584S-B6	. . WASHER	5	
- 13	V514	. . SEAL	AR	
- 14	CA1810	. . RECEPTACLE	3	
- 15	122-980047-13	. . DOOR	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

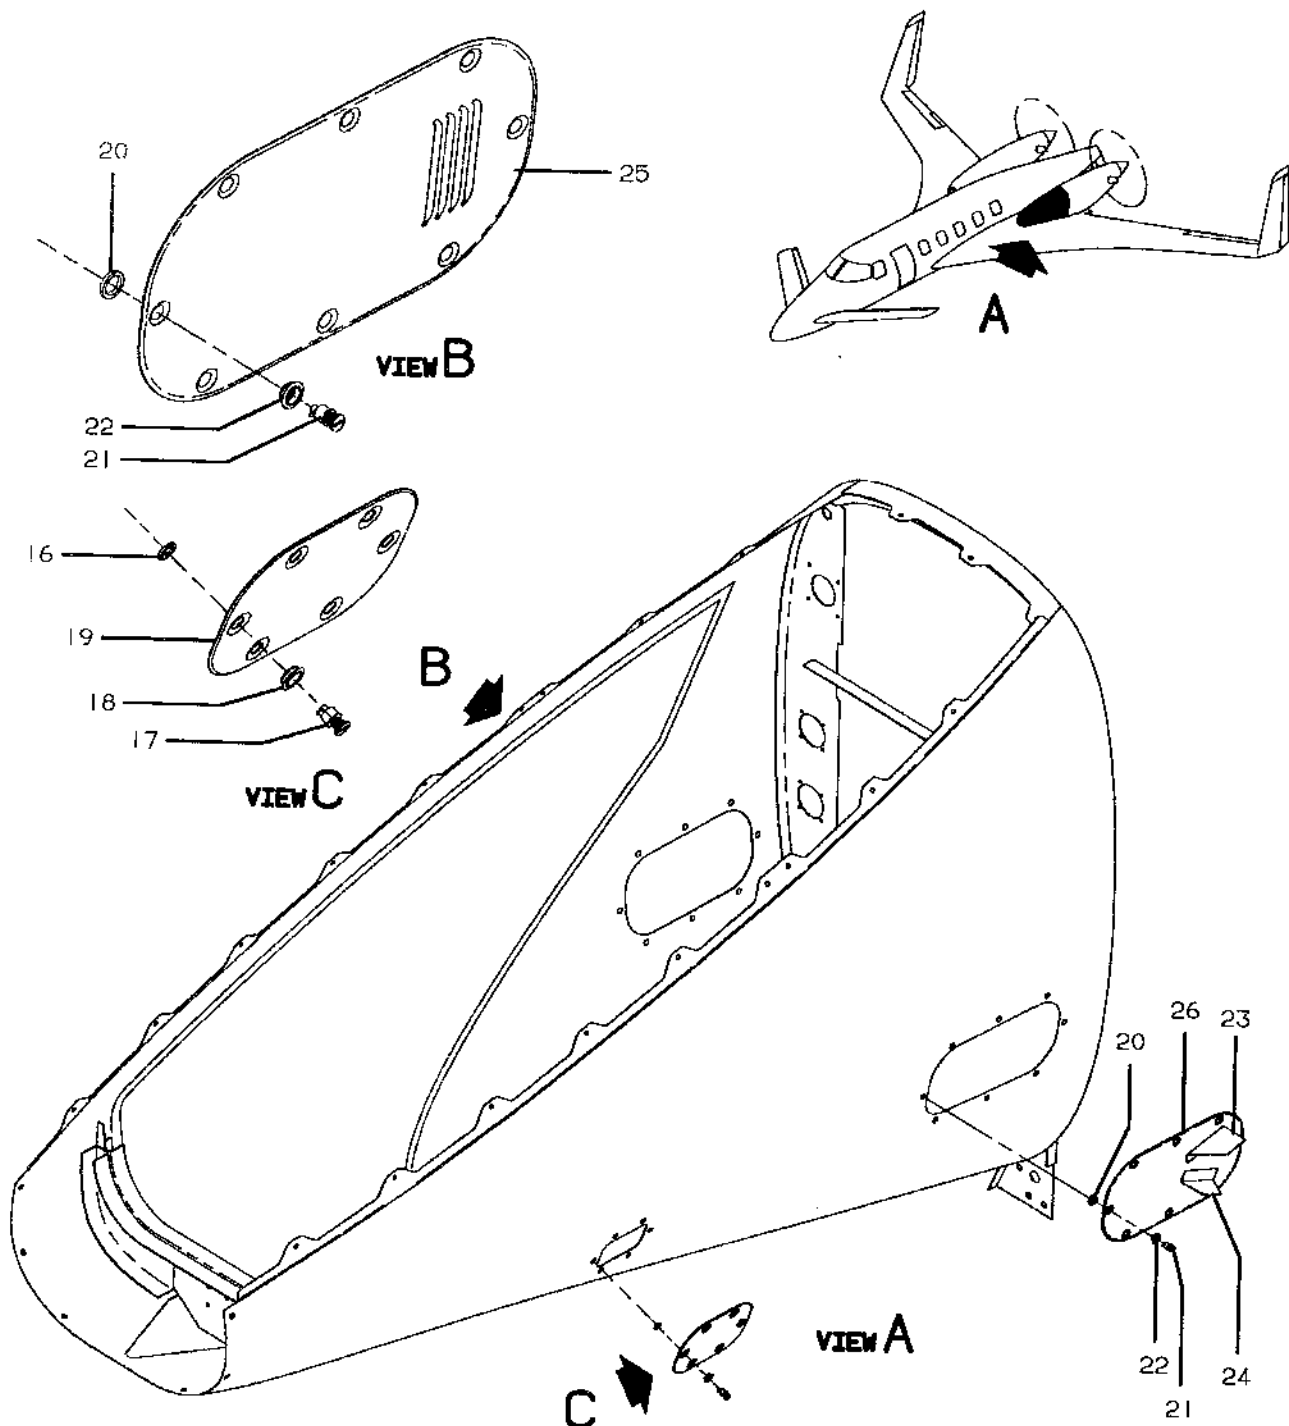


C94NC54A0059 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	122-980059-1	. DOOR ASSY, LH OUTBD AND RH INBD	1	
- 16	40G26-1	. . RING, RETAINING.....	6	
- 17	4002-4S	. . STUD ASSY.....	6	
- 18	4002GS	. . GROMMET	6	
- 19	122-980059-3	. . DOOR, LH OUTBD AND RH INBD	1	
	122-980053-1	. DOOR ASSY, LH OUTBD AND RH INBD ACTUATOR	1	
		ACCESS		
	122-980053-3	. DOOR ASSY, LH INBD ACTUATOR ACCESS	1	
	122-980053-5	. DOOR ASSY, RH OUTBD ACTUATOR ACCESS.....	1	
- 20	40G26-1	. . RING, RETAINING.....	8	
- 21	4002-2S	. . STUD ASSY.....	8	
- 22	4002GS	. . GROMMET	8	
- 23	122-980053-15	. . VORTILON, LH INBD AND RH OUTBD	1	
- 24	122-980053-16	. . VORTILON, LH INBD AND RH OUTBD	1	
	122-980053-13	. . INLET, RH OUTBD.....	1	
- 25	122-980053-7	. . DOOR, LH OUTBD AND RH INBD.....	1	
- 26	122-980053-9	. . DOOR, LH INBD	1	
	122-980053-11	. . DOOR, RH OUTBD	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

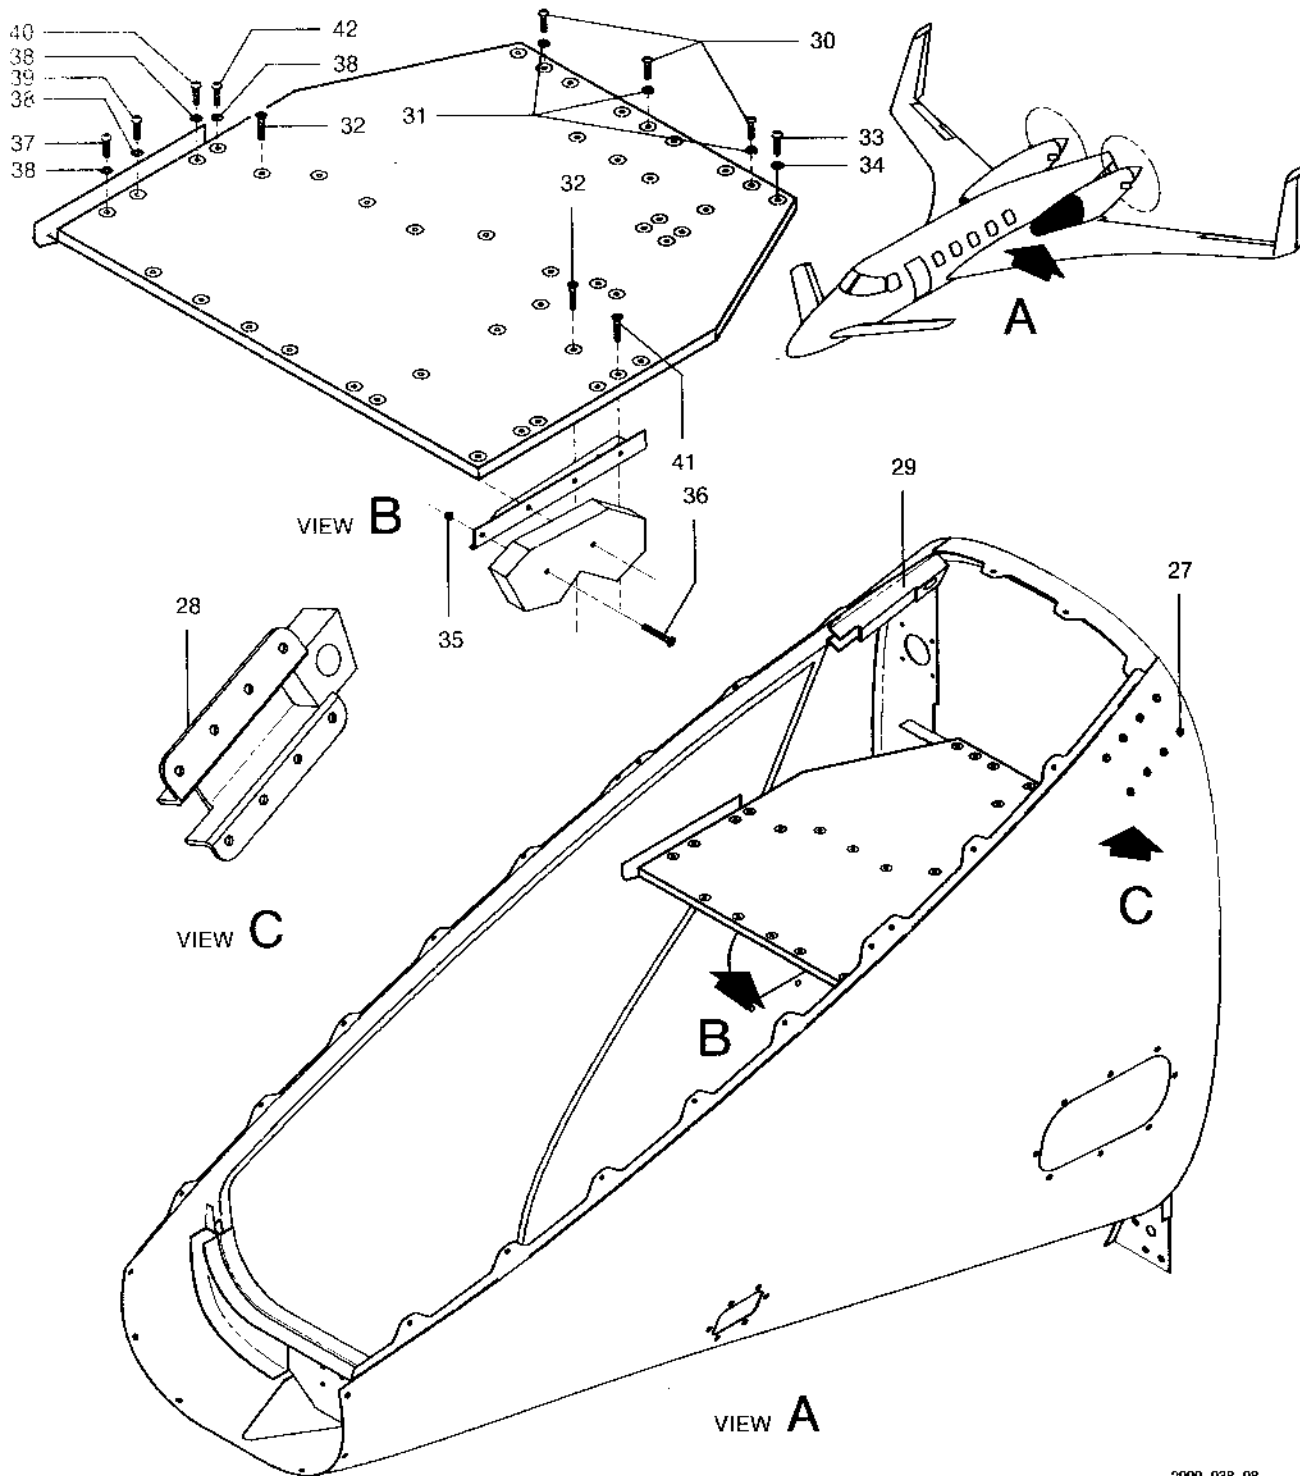


2000 038-08

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 -27	MS21140-805	. BOLT, LH AND RH INBD AND OUTBD	8	
-28	122-980043-1	. FITTING, LH OUTBD AND RH INBD ENGINE	1	
-29	122-980043-2	. FITTING, LH INBD AND RH OUTBD ENGINE	1	
-30	8806	. SCREW	3	
-31	MS35338-43	. WASHER/UNDER SCREW HEAD/	3	
-32	MS24694S59	. SCREW	2	
-33	MS27039-1-17	. SCREW	6	
-34	AN960C10L	. WASHER	6	
-35	MS21043-3	. NUT	4	
-36	MS24694C63	. SCREW	4	
-37	MS27039-1-17	. SCREW, LH INBD	1	
-38	AN960C10L	. WASHER, LH INBD AND OUTBD	AR	
-39	MS27039-1-17	. SCREW, LH INBD AND OUTBD	1	
	MS24694S59	. SCREW, RH INBD AND OUTBD	1	
-40	MS27039-1-17	. SCREW, LH INBD	1	
	MS24694S59	. SCREW, RH INBD AND OUTBD	1	
-41	MS24694S59	. SCREW, LH OUTBD AND RH INBD AND OUTBD	1	
-42	MS27039-1-17	. SCREW, LH INBD	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

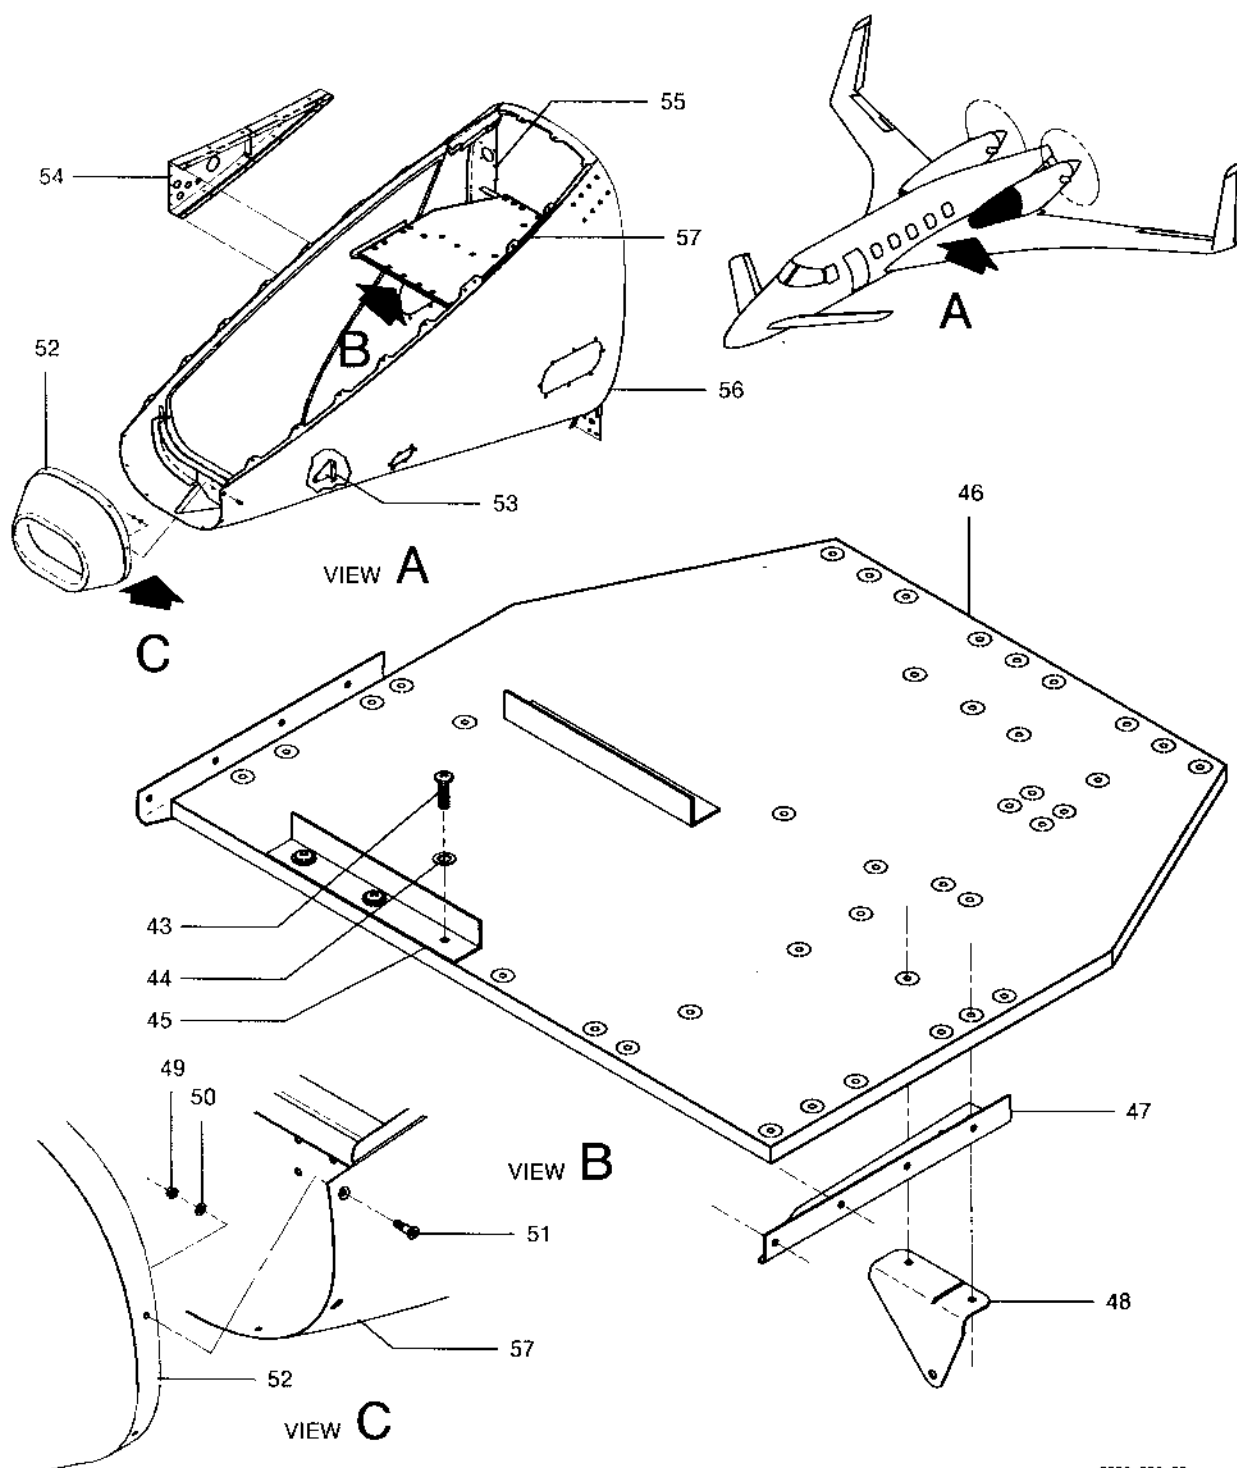

2000-038-09

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	122-980046-23	. SHELF ASSY, LH	1	
	122-980046-25	. SHELF ASSY, RH	1	
- 43	MS27039-1-09	. . SCREW, LH	6	
- 44	AN960-10L	. . WASHER, LH	6	
- 45	122-980034-23	. . BRACKET, LH LANDING GEAR HYDRAULIC PUMP	1	
	122-980034-29	. . BRACKET, RH BATTERY SUPPORT	2	
- 46	122-980046-5	. . SHELF, LH	1	
	122-980046-7	. . SHELF, RH	1	
	SLS102F10-08	. . SLEEVE/2 LH AND 8 RH/LOWER SURFACE/	10	
	SLP102C10-2	. . PLUG/2 LH AND 8 RH/UPPER SURFACE/	10	
	SLS102F10-08	. . SLEEVE/17 LH AND 11 RH/LOWER SURFACE/	28	
	SLP102D10-2	. . PLUG/17 LH AND 11 RH/UPPER SURFACE/	28	
	SLS106F1032-08	. . SLEEVE/25 LH AND 22 RH/LOWER SURFACE/	47	
	SLP106D10-2	. . PLUG/25 LH AND 22 RH/UPPER SURFACE/	47	
	SLS106F428-10	. . SLEEVE, RH/LOWER SURFACE/	2	
	105090D090-6K	. . WASHER, RH/LOWER SURFACE/	2	
	SLP106F25-1	. . PLUG, RH/UPPER SURFACE/	2	
- 47	122-980034-55	. BRACKET ASSY, LH OUTBD NACELLE EQPT SHELF	1	
	122-980034-47	. BRACKET ASSY, RH INBD NACELLE EQPT SHELF	1	
	122-980034-48	. BRACKET ASSY, LH INBD AND RH OUTBD NACELLE EQUIPMENT SHELF	1	
	MS21075L3	. . NUTPLATE	3	
- 48	122-980034-51	. BRACKET ASSY, LH OUTBD AND RH INBD NACELLE EQUIPMENT SHELF	1	1
	122-980034-59	. BRACKET ASSY, LH OUTBD AND RH INBD NACELLE EQUIPMENT SHELF	1	2
	122-980034-52	. BRACKET ASSY, LH INBD AND RH OUTBD NACELLE EQUIPMENT SHELF	1	1
	122-980034-60	. BRACKET ASSY, LH OUTBD AND RH INBD NACELLE EQUIPMENT SHELF	1	2
	MS21075L3	. . NUTPLATE	2	
- 49	MS21043-3	. NUT, LH AND RH INBD AND OUTBD	3	
- 50	AN960C10L	. WASHER, LH AND RH INBD AND OUTBD	3	
- 51	NAS8703U2	. SCREW, LH AND RH INBD AND OUTBD	3	
- 52	122-910050-25	. INLET LIP, HEATED/SEE CHAPTER 30/	1	
- 53	122-980034-31	. SUPPORT, LH OUTBD AND RH INBD FWD DUCT	1	
	122-980034-32	. SUPPORT, LH INBD AND RH OUTBD FWD DUCT	1	
- 54	122-980052-73	. FIREWALL ASSY, LH INBD FWD/SEE CH.54-10-20/	1	5
	122-980052-93	. FIREWALL ASSY, LH INBD FWD/SEE 54-10-20/	1	6
	122-980052-74	. FIREWALL ASSY, RH INBD FWD/SEE CH.54-10-20/	1	5
	122-980052-94	. FIREWALL ASSY, RH INBD FWD/SEE 54-10-20/	1	6
- 55	122-980049-23	. FIREWALL ASSY, LH/SEE CHAPTER 54-10-30/	1	3
	122-980049-29	. FIREWALL ASSY, LH	1	4
	122-980049-25	. FIREWALL ASSY, RH/SEE CHAPTER 54-10-30/	1	3
	122-980049-31	. FIREWALL ASSY, RH	1	4
- 56	122-980040-1	. NACELLE, LH	1	
	122-980040-35	. NACELLE, RH	1	
- 57	V514	. . SEAL	AR	
	CA1810	. . RECEPTACLE, ACCESS DOOR	18	
	214-16S	. . RECEPTACLE, ACCESS DOOR	22	
	SL607-3-6CM	. . INSERT	8	

CODES OF EFFECTIVITY


1	NC-4 THRU NC-44	2	NC-45 AND AFTER
3	NC-4 THRU NC-42	4	NC-43 AND AFTER
5	NC-4 THRU NC-27	6	NC-28 AND AFTER

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

54-10-20
NACELLE FIREWALL LOWER STRUCTURE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

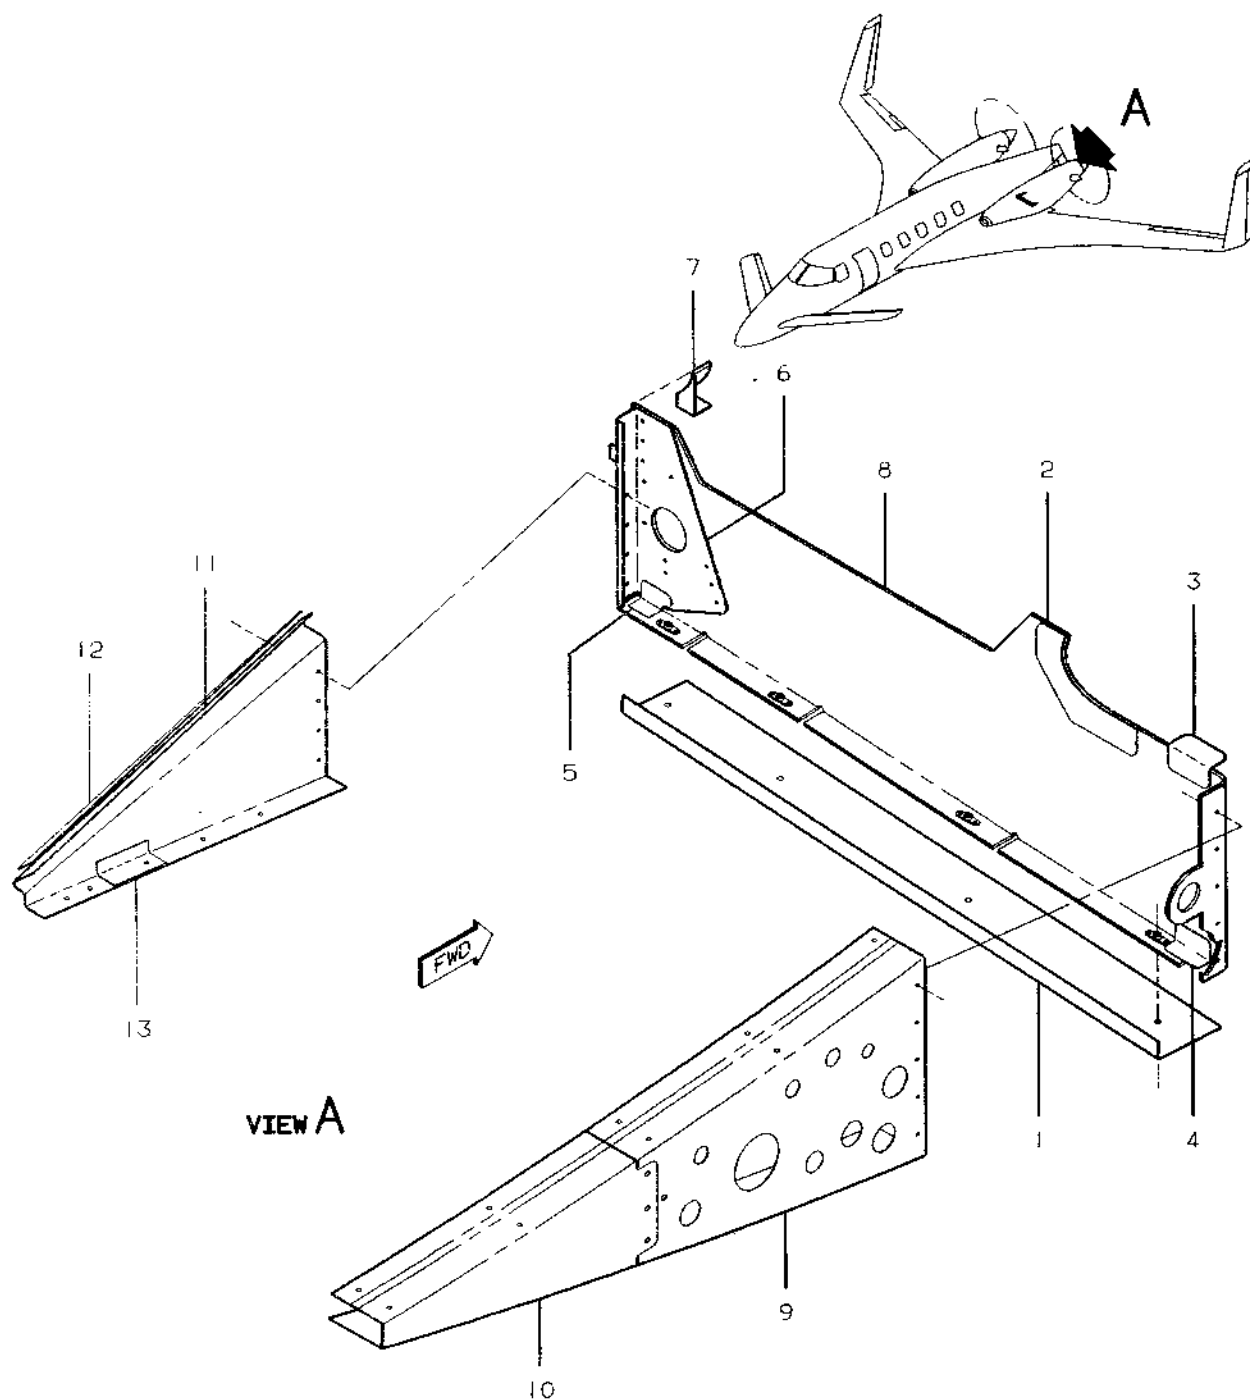

C93NC54A0310 C

FIGURE 10-20.NACELLE FIREWALL LOWER STRUCTURE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20	122-980052-59	LOWER STRUCTURE INSTL, LH NACELLE FIREWALL	NP	
	122-980052-60	LOWER STRUCTURE INSTL, RH NACELLE FIREWALL	NP	
- 1	122-980052-69	. ANGLE, LH	1	
	122-980052-70	. ANGLE, RH	1	
	MS21048L3K	. NUTPLATE	4	
- 2	122-980052-27	. CLIP, LH	1	
	122-980052-28	. CLIP, RH	1	
- 3	122-980052-47	. CLIP	1	
- 4	122-980052-29	. CLIP	1	
- 5	122-980052-31	. CLIP, LH	1	
	122-980052-32	. CLIP, RH	1	
- 6	122-980052-61	. DOUBLER, LH	1	
	122-980052-62	. DOUBLER, RH	1	
- 7	122-980052-67	. CLIP, LH	1	
	122-980052-68	. CLIP, RH	1	
- 8	122-980052-11	. FIREWALL STRUCTURE, LH	1	
	122-980052-12	. FIREWALL STRUCTURE, RH	1	
	122-980052-73	FIREWALL ASSY, LH INBD FWD	1	5
	122-980052-93	. FIREWALL ASSY, LH INBD FWD	1	6
	122-980052-74	FIREWALL ASSY, RH INBD FWD	1	2
	122-980052-94	. FIREWALL ASSY, RH INBD FWD	1	6
- 9	122-980052-77	. RIB, LH	1	
	122-980052-78	. RIB, RH	1	
	CA1810	. RECEPTACLE ASSY	4	
	MS21048L06	. NUTPLATE	6	
	MS21048L3	. NUTPLATE	9	
	122-980052-75	FIREWALL ASSY, LH INBD AFT/FOR SPARES ORDER	NP	1
	122-980052-81	FIREWALL ASSY, LH INBD AFT	1	2
	122-980052-89	FIREWALL ASSY, LH INBD AFT	1	3
	122-980052-76	FIREWALL ASSY, RH INBD AFT/FOR SPARES ORDER	NP	1
	122-980052-82	FIREWALL ASSY, RH INBD AFT	1	2
	122-980052-90	FIREWALL ASSY, RH INBD AFT	1	3
- 10	122-980052-79	. RIB, LH INBD AFT	1	1
	122-980052-83	. RIB, LH INBD AFT	1	2
	122-980052-91	. RIB, LH INBD AFT	1	3
	122-980052-80	. RIB, RH INBD AFT	1	1
	122-980052-84	. RIB, RH INBD AFT	1	2
	122-980052-92	. RIB, RH INBD AFT	1	3
	122-980052-85	. GUSSET, LH FWD	1	4
	122-980052-86	. GUSSET, RH FWD	1	4
	122-980052-87	. GUSSET, LH AFT	1	4
	122-980052-88	. GUSSET, RH AFT	1	4
	CA1810	. RECEPTACLE ASSY	4	
	MS21048L3	. NUTPLATE	2	
	MS21070L3	. NUTPLATE	3	
	MS21074L3	. NUTPLATE	4	
	122-980052-49	FIREWALL ASSY, LH OUTBD	1	
	122-980052-50	FIREWALL ASSY, RH OUTBD	1	
- 11	122-980052-51	. FIREWALL, LH OUTBD	1	
	122-980052-52	. FIREWALL, RH OUTBD	1	
	MS21060L3	. NUTPLATE	10	
- 12	122-980052-55	. STRIP	1	
- 13	122-980052-53	. CLIP, LH	1	
	122-980052-54	. CLIP, RH	1	

CODES OF EFFECTIVITY


1	NC-4 THRU NC-28	2	NC-29 THRU NC-40
3	NC-41 AND AFTER	4	NC-29 AND AFTER
5	NC-4 THRU NC-27	6	NC-28 AND AFTER

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

54-10-30
NACELLE FIREWALL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

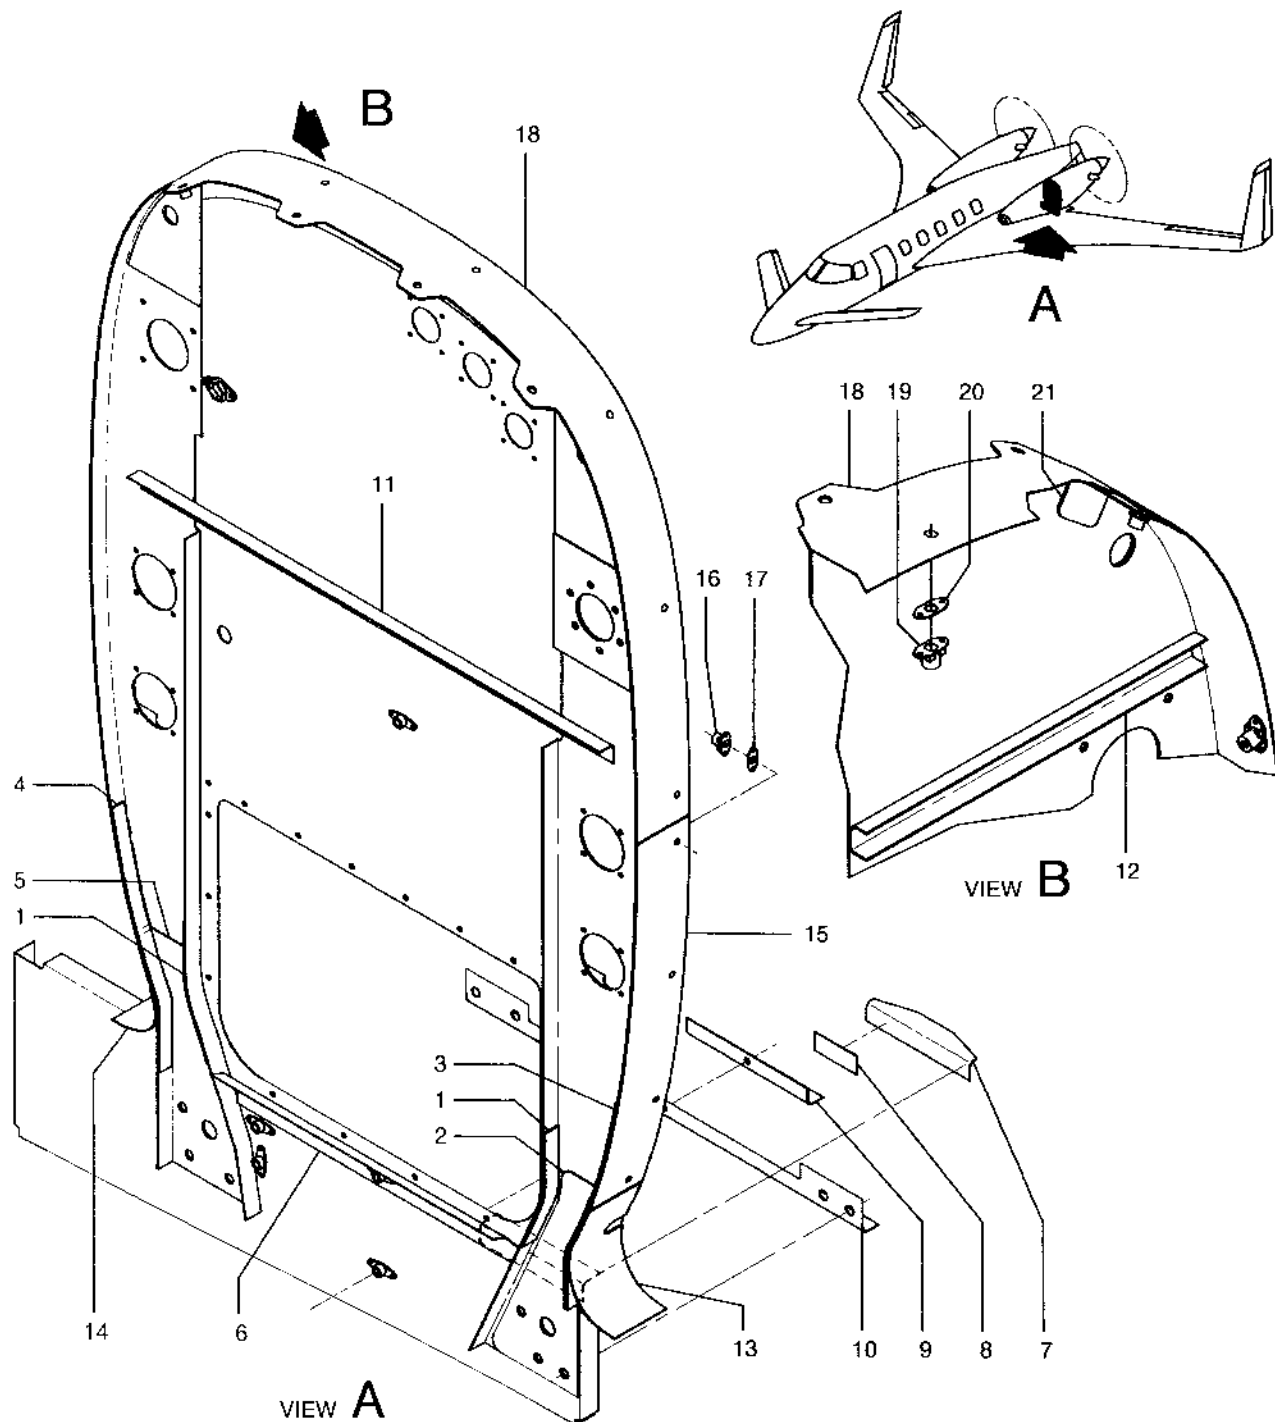


2000-038-10

FIGURE 10-30. NACELLE FIREWALL
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-30	122-980049-23	FIREWALL ASSY, LH NACELLE	1	1
	122-980049-29	FIREWALL ASSY, LH NACELLE	1	2
	122-980049-25	FIREWALL ASSY, RH NACELLE	1	1
	122-980049-31	FIREWALL ASSY, RH NACELLE	1	2
- 1	122-980051-51	. STRAP	2	
- 2	122-980051-55	. DOUBLER, LH OUTBD	1	
	122-980051-56	. DOUBLER, RH OUTBD	1	
- 3	122-980051-65	. STRAP, LH OUTBD AND RH INBD	1	
- 4	122-980051-67	. STRAP, LH INBD AND RH OUTBD	1	
- 5	122-980051-61	. DOUBLER, LH INBD	1	
	122-980051-62	. DOUBLER, RH INBD	1	
- 6	122-980051-9	. STIFFENER	1	
	MS21048L3K	. NUTPLATE	4	
- 7	122-980051-7	. ANGLE	2	
- 8	122-980049-13	. SHIM	1	
- 9	122-980051-41	. DOUBLER	1	1
	122-980051-73	. DOUBLER	1	2
- 10	122-980051-17	. ANGLE, LH	1	
	122-980051-18	. ANGLE, RH	1	
- 11	122-980051-11	. SUPPORT, SHELF	1	
- 12	122-980051-13	. CHANNEL	1	
- 13	122-980049-5	. STRAP, LH LOWER OUTBD	1	
	122-980049-6	. STRAP, RH LOWER OUTBD	1	
	MS21048L3K	. NUTPLATE	2	
- 14	122-980049-9	. STRAP, LH LOWER INBD	1	
	122-980049-10	. STRAP, RH LOWER INBD	1	
- 15	122-980049-11	. STRAP	2	
- 16	CA1810	. NUTPLATE	8	
- 17	CA1818-1	. SHIM	8	
- 18	122-980049-15	. STRAP, TOP	1	
- 19	CA1810	. NUTPLATE	8	
- 20	CA1818-1	. SHIM	8	
- 21	122-980049-27	. ANGLE, LH INBD AND RH OUTBD	1	
	122-980049-28	. ANGLE, LH OUTBD AND RH INBD	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

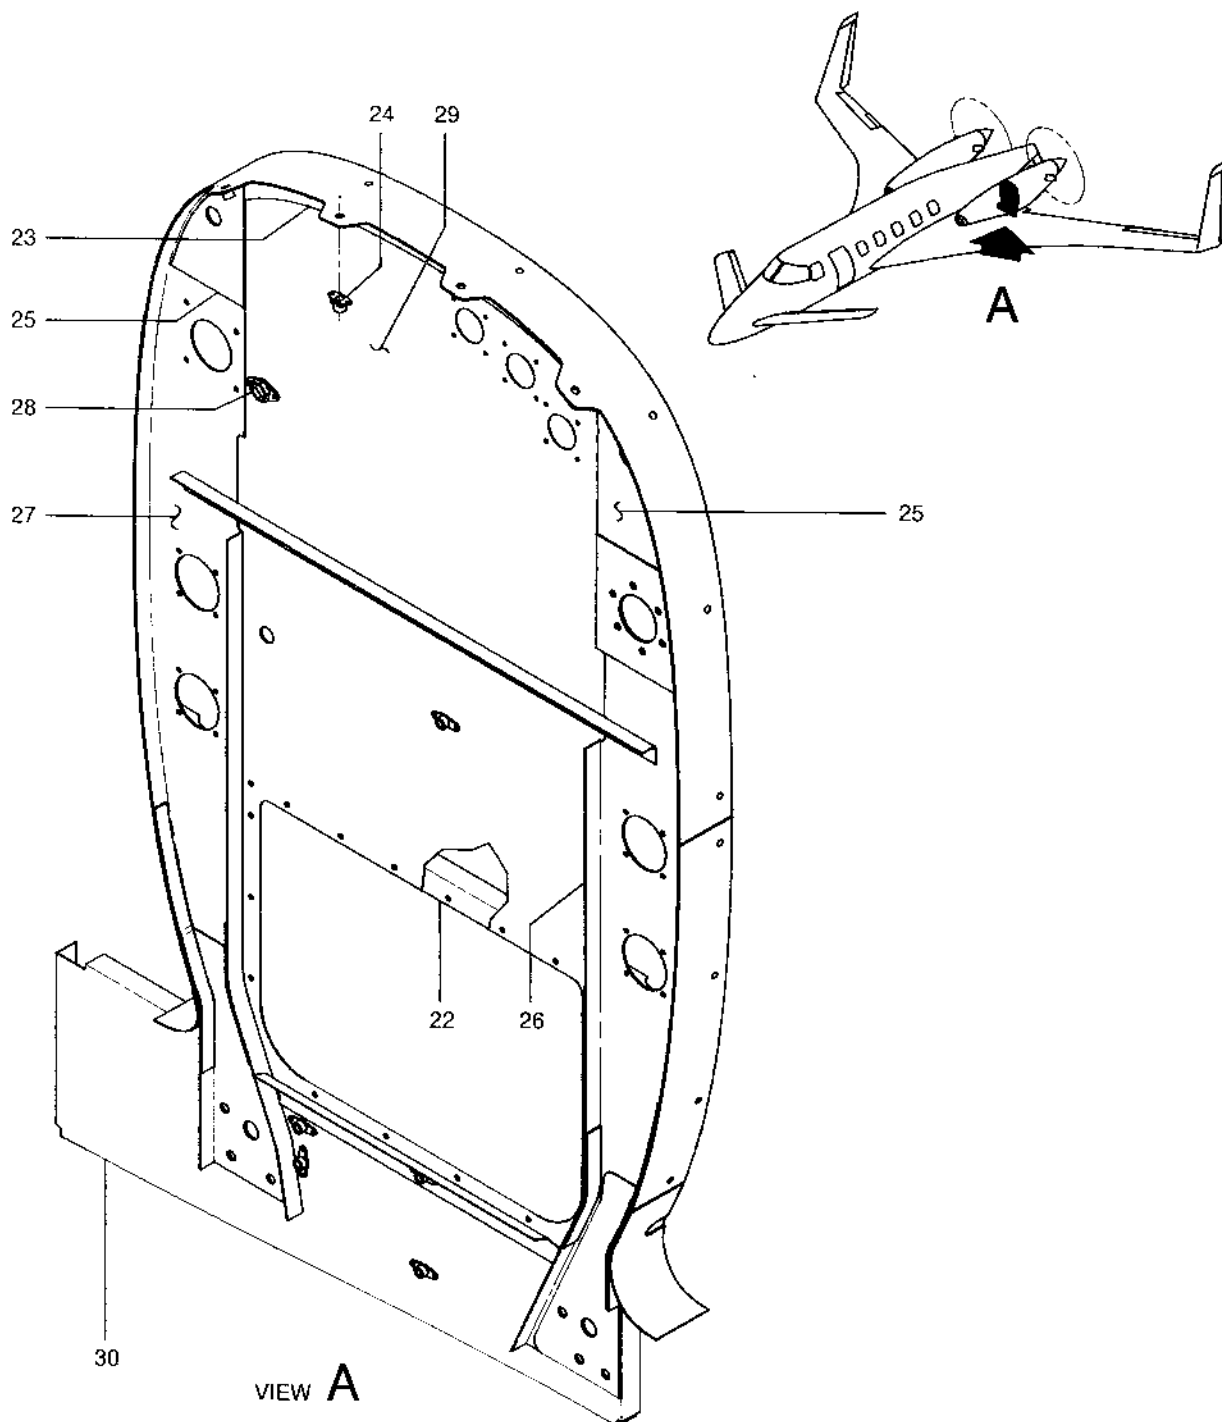

2000-038-11

FIGURE 10-30. NACELLE FIREWALL
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-30 - 22	122-980051-53	. ANGLE.....	1	
- 23	122-980051-57	. ANGLE.....	1	
- 24	CA1810	. NUTPLATE.....	4	
- 25	122-980051-27	. DOUBLER.....	2	
- 26	122-980051-69	. DOUBLER, LH OUTBD.....	1	
	122-980051-70	. DOUBLER, RH OUTBD.....	1	
- 27	122-980051-71	. DOUBLER, LH INBD.....	1	
	122-980051-72	. DOUBLER, RH INBD.....	1	
- 28	208101	. CONNECTOR.....	1	
- 29	122-980051-43	. FIREWALL, LH NACELLE.....	1	
	122-980051-45	. FIREWALL, RH NACELLE.....	1	
	MS21048L3K	. NUTPLATE.....	2	
- 30	122-980052-59	. LOWER STRUCTURE INSTL, LH NACELLE FIREWALL.....	1	
		/SEE CHAPTER 54-10-20/		
	122-980052-60	. LOWER STRUCTURE INSTL, RH NACELLE FIREWALL.....	1	
		/SEE CHAPTER 54-10-20/		


CODES OF EFFECTIVITY

1 NC-4 THRU NC-42 2 NC-43 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

54-11-00
NACELLE FIREWALL INSULATION

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

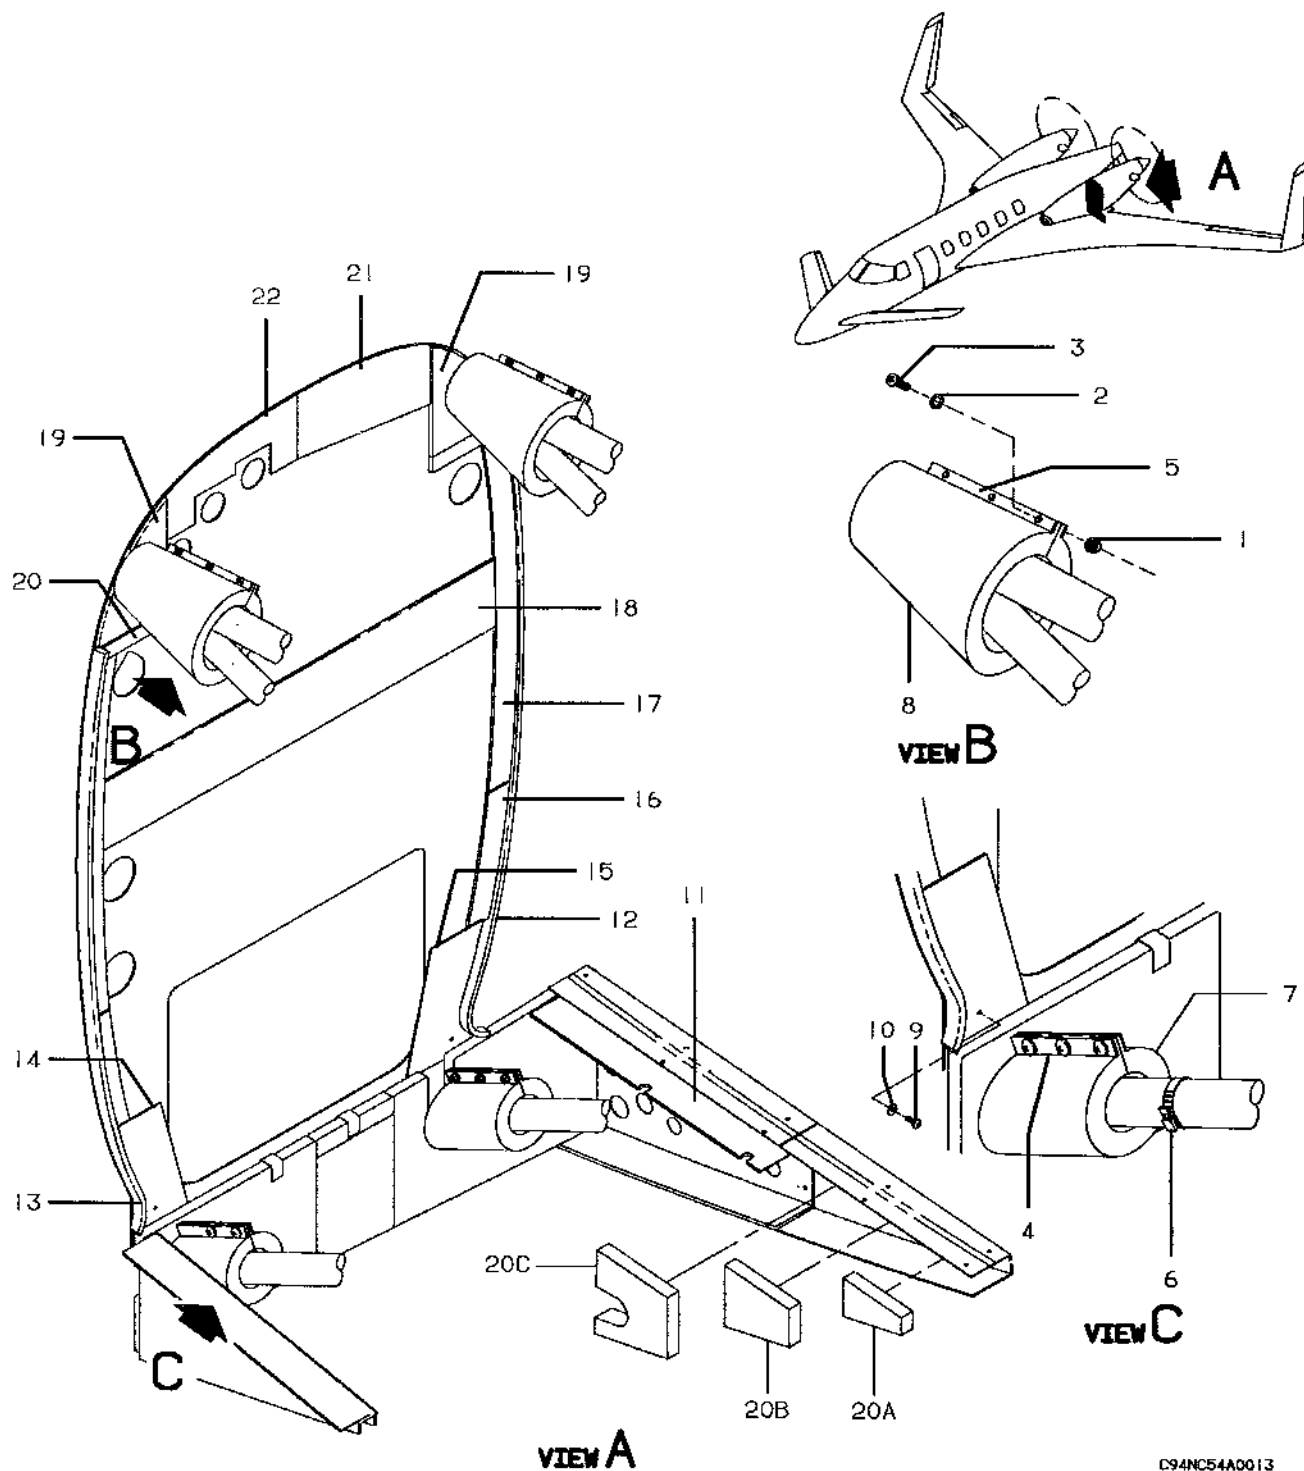

C94NC54A0013

FIGURE 11-00. NACELLE FIREWALL INSULATION
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
11-00	122-980056-1	FIREWALL INSULATION INSTL, LH NACELLE	NP	1
	122-980056-2	FIREWALL INSULATION INSTL, RH NACELLE	NP	1
	122-980056-3	FIREWALL INSULATION INSTL, LH NACELLE	NP	2
	122-980056-4	FIREWALL INSULATION INSTL, RH NACELLE	NP	2
- 1	MS21043-3	. NUT	12	
- 2	AN960C10L	. WASHER	12	
- 3	NAS603-7	. SCREW	12	
- 4	122-980057-59	. STRAP, LOWER ENGINE TRUSS	4	
- 5	122-980057-61	. STRAP, UPPER ENGINE TRUSS	4	
- 6	AN737TW44-48	. CLAMP	4	
- 7	122-980057-31	. BLANKET ASSY, LOWER ENGINE TRUSS	2	
- 8	122-980057-115	. BLANKET ASSY, UPPER ENGINE TRUSS, LH NACELLE	1	
	122-980056-116	. BLANKET ASSY, UPPER ENGINE TRUSS, RH NACELLE	1	
- 9	NAS603-7	. SCREW	2	
- 10	AN960C10L	. WASHER	2	
	AN960C6	. WASHER/USE WITH RIVETS TO ATTACH CERAMIC	156	
		BLANKETS/		
- 11	122-980057-113	. BLANKET, CERAMIC/LH INBD AND RH OUTBD/	4	
		/2 UPPER AND 2 LOWER/		
- 12	122-980057-93	. BLANKET, CERAMIC/LH INBD AND RH OUTBD/	1	
- 13	122-980057-95	. BLANKET, CERAMIC/LH OUTBD AND RH INBD/	1	
- 14	122-980057-39	. BLANKET, CERAMIC/LH OUTBD AND RH INBD/	1	
- 15	122-980057-43	. BLANKET, CERAMIC/LH INBD AND RH OUTBD/	1	
- 16	122-980057-85	. BLANKET, CERAMIC	2	
- 17	122-980057-87	. BLANKET, CERAMIC	2	
- 18	122-980057-99	. BLANKET, CERAMIC	1	
- 19	122-980057-1	. BLANKET, CERAMIC/UPPER MOUNT/	2	
- 20	122-980057-97	. BLANKET, CERAMIC	2	
- 20A	122-980057-159	. BLANKET ASSY, INBD RIB	1	4
- 20B	122-980057-153	. BLANKET ASSY, INBD RIB	1	4
- 20C	122-980057-147	. BLANKET ASSY, INBD RIB	1	4
- 21	122-980057-89	. BLANKET, CERAMIC	1	
- 22	122-980057-91	. BLANKET, CERAMIC/2 LH AND 1 RH/	3	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

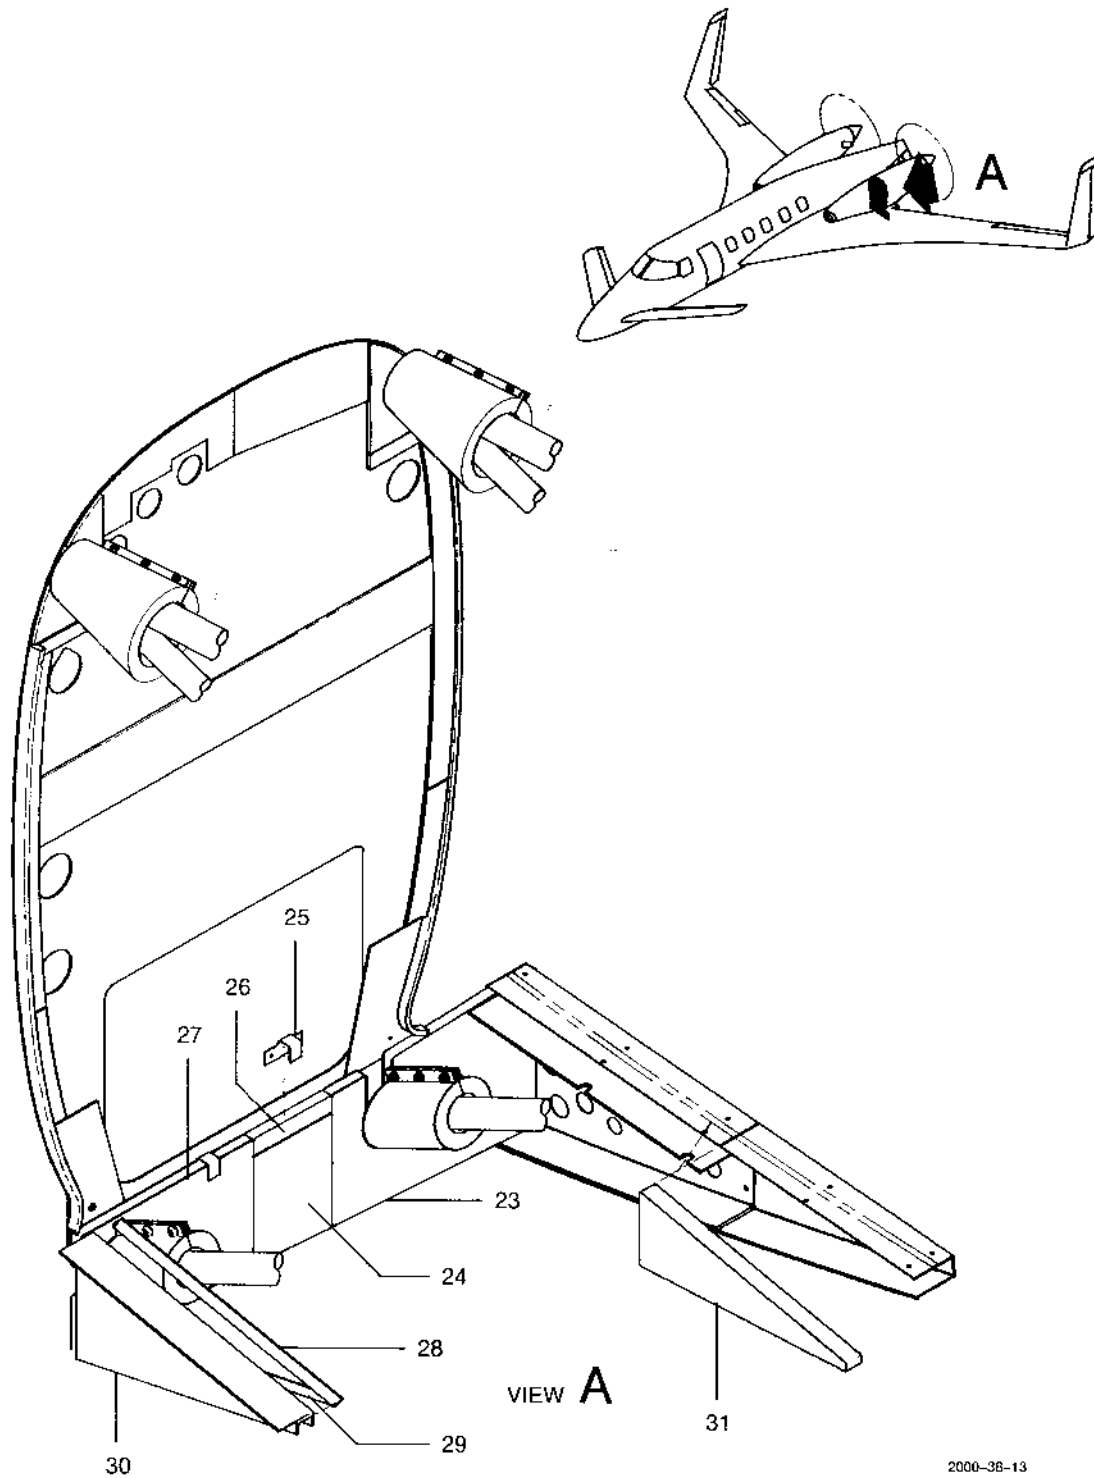


FIGURE 11-00.NACELLE FIREWALL INSULATION
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
11-00 -23	122-980057-5	. BLANKET ASSY, LH	1	
	122-980057-6	. BLANKET ASSY, RH	1	
-24	122-980057-11	. BLANKET ASSY, LH	1	
	122-980057-12	. BLANKET ASSY, RH	1	
-25	122-980057-83	. CLIP, INSULATION	2	
-26	122-980057-77	. BLANKET ASSY	1	
-27	122-980057-19	. BLANKET ASSY, LH	1	
	122-980057-20	. BLANKET ASSY, RH	1	
-28	122-980057-35	. STRIP, ATTACHING	1	
-29	122-980057-51	. STRIP, ATTACHING	1	
-30	122-980057-117	. BLANKET ASSY, LH OUTBD RIB	1	
	122-980057-118	. BLANKET ASSY, RH INBD RIB	1	
-31	122-980057-137	. BLANKET ASSY, INBD RIB	1	3


CODES OF EFFECTIVITY

1	NC-4 THRU NC-43	2	NC-44 AND AFTER
3	NC-4 THRU NC-28	4	NC-29 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

54-30-00
COWLING INSTALLATION

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

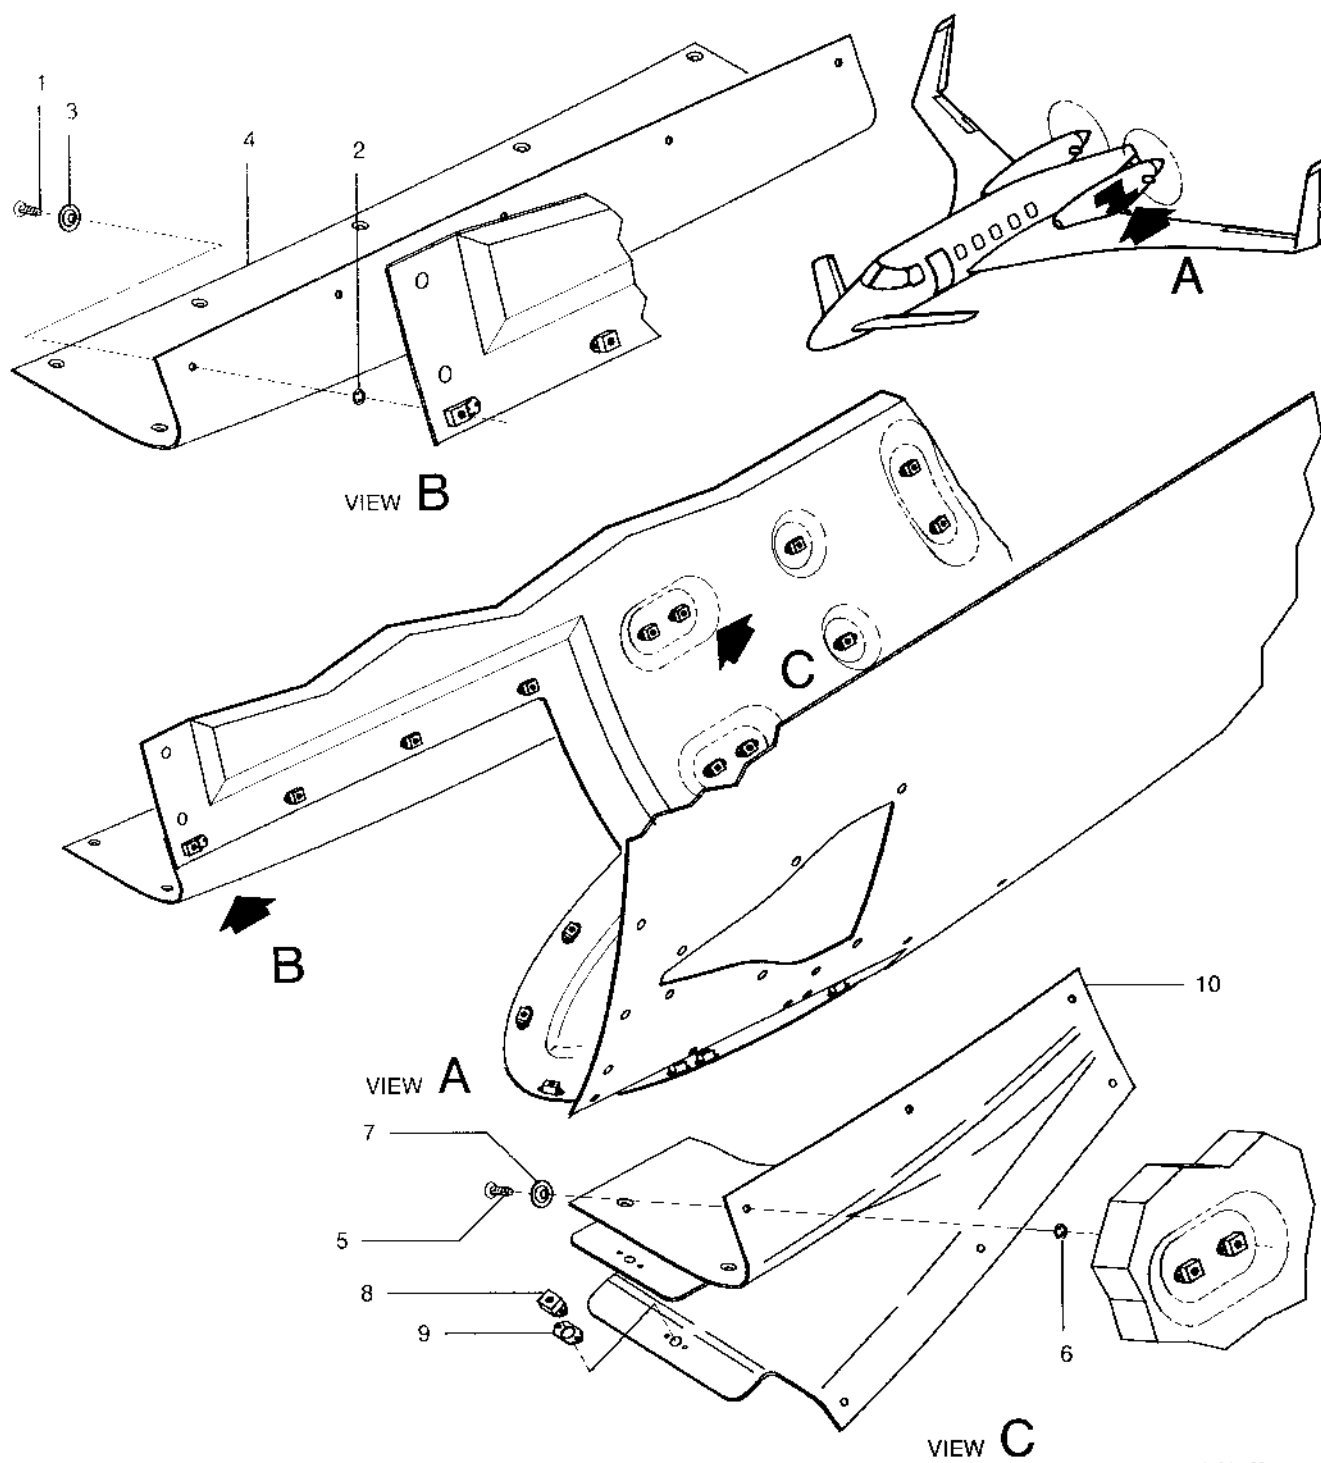

2000-241-06


FIGURE 30-00.COWLING INSTALLATION
/SHEET 1 OF 4 SHEETS/

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT UNIT & ITEM NO.	PART NO.	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
30-00	122-910065-5	COWLING INSTL, LH	NP	1
	122-910065-9	COWLING INSTL, LH	NP	2
	122-910065-7	COWLING INSTL, RH	NP	1
	122-910065-11	COWLING INSTL, RH	NP	2
	122-910070-5	. FAIRING ASSY, LH INBD UPPER/ORDER	NP	1
		122-910070-49 FOR SPARES/		
	122-910070-49	. FAIRING ASSY, LH INBD UPPER	1	2
	122-980070-6	. FAIRING ASSY, RH INBD UPPER/ORDER	NP	1
		122-910070-50 FOR SPARES/		
	122-910070-50	. FAIRING ASSY, RH INBD UPPER	1	2
1	FIT7090-3-11-5	. . SCREW/ALTERNATE FOR CA21063-10-5-11/	12	1
		/ORDER CA2229-10-5-11 FOR SPARES/		
	CA21063-10-5-11	. . SCREW/ALTERNATE FOR FIT7090-3-11-5/	12	2
		/ORDER CA2229-10-5-11 FOR SPARES/		
	CA2229-10-5-11	. . SCREW	12	
	FIT7090-3-11-5	. . SCREW/ALTERNATE FOR CA21063-10-5-11/	7	1
		/ORDER CA2229-10-5-11 FOR SPARES/		
	CA21063-10-5-11	. . SCREW/ALTERNATE FOR FIT7090-3-11-5/	7	2
		/ORDER CA2229-10-5-11 FOR SPARES/		
	CA2229-10-5-11	. . SCREW	7	
	FIT7090-3-12-5	. . SCREW/ALTERNATE FOR CA21063-10-5-12/	5	1
		/ORDER CA2229-10-5-12 FOR SPARES/		
	CA21063-10-5-12	. . SCREW/ALTERNATE FOR FIT7090-3-12-5/	5	2
		/ORDER CA2229-10-5-12 FOR SPARES/		
	CA2229-10-5-12	. . SCREW	5	
2	CA21062-10R	. . RING, RETAINING	12	
		/ORDER CA2210-10R FOR SPARES/		
	CA2210-10R	. . RING, RETAINING	12	
3	NAS1169C10L	. . WASHER	12	
4	122-910070-7	. . FAIRING, LH INBD	1	1
	122-910070-51	. . FAIRING, LH INBD	1	2
	122-910070-8	. . FAIRING, RH INBD	1	1
	122-910070-52	. . FAIRING, RH INBD	1	2
	122-910070-13	. CLOSEOUT ASSY, LH INBD/ORDER 122-910070-53	NP	1
		FOR SPARES/		
	122-910070-53	. CLOSEOUT ASSY, LH INBD	1	2
	122-910070-14	. CLOSEOUT ASSY, RH INBD/ORDER 122-910070-54	NP	1
		FOR SPARES/		
	122-910070-54	. CLOSEOUT ASSY, RH INBD	1	2
5	FIT7090-3-11-5	. . SCREW/ALTERNATE FOR CA21063-10-5-11/	8	1
		/ORDER CA2229-10-5-11 FOR SPARES/		
	CA21063-10-5-11	. . SCREW/ALTERNATE FOR FIT7090-3-11-5/	6	2
		/ORDER CA2229-10-5-11 FOR SPARES/		
	CA2229-10-5-11	. . SCREW	6	
	FIT7090-3-11-5	. . SCREW/ALTERNATE FOR CA21063-10-5-11/	8	1
		/ORDER CA2229-10-5-11 FOR SPARES/		
	CA21063-10-5-11	. . SCREW/ALTERNATE FOR FIT7090-3-11-5/	8	2
		/ORDER CA2229-10-5-11 FOR SPARES/		
	CA2229-10-5-11	. . SCREW	8	
	FIT7090-3-12-5	. . SCREW/ALTERNATE FOR CA21063-10-5-11/	2	1
		/ORDER CA2229-10-5-12 FOR SPARES/		
	CA21063-10-5-12	. . SCREW/ALTERNATE FOR FIT7090-3-12-5/	2	2
		/ORDER CA2229-10-5-12 FOR SPARES/		
	CA2229-10-5-12	. . SCREW	2	
6	CA21062-10R	. . RING, RETAINING	8	
		/ORDER CA2210-10R FOR SPARES/		
7	NAS1169C10L	. . WASHER	8	
8	MS21060L3	. . NUTPLATE	2	
9	CA21062-10S	. . SHIM/UNDER NUTPLATE/	2	
10	122-910070-15	. . CLOSEOUT, LH INBD	1	1
	122-910070-55	. . CLOSEOUT, LH INBD	1	2
	122-910070-16	. . CLOSEOUT, RH INBD	1	1
	122-910070-56	. . CLOSEOUT, RH INBD	1	2

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

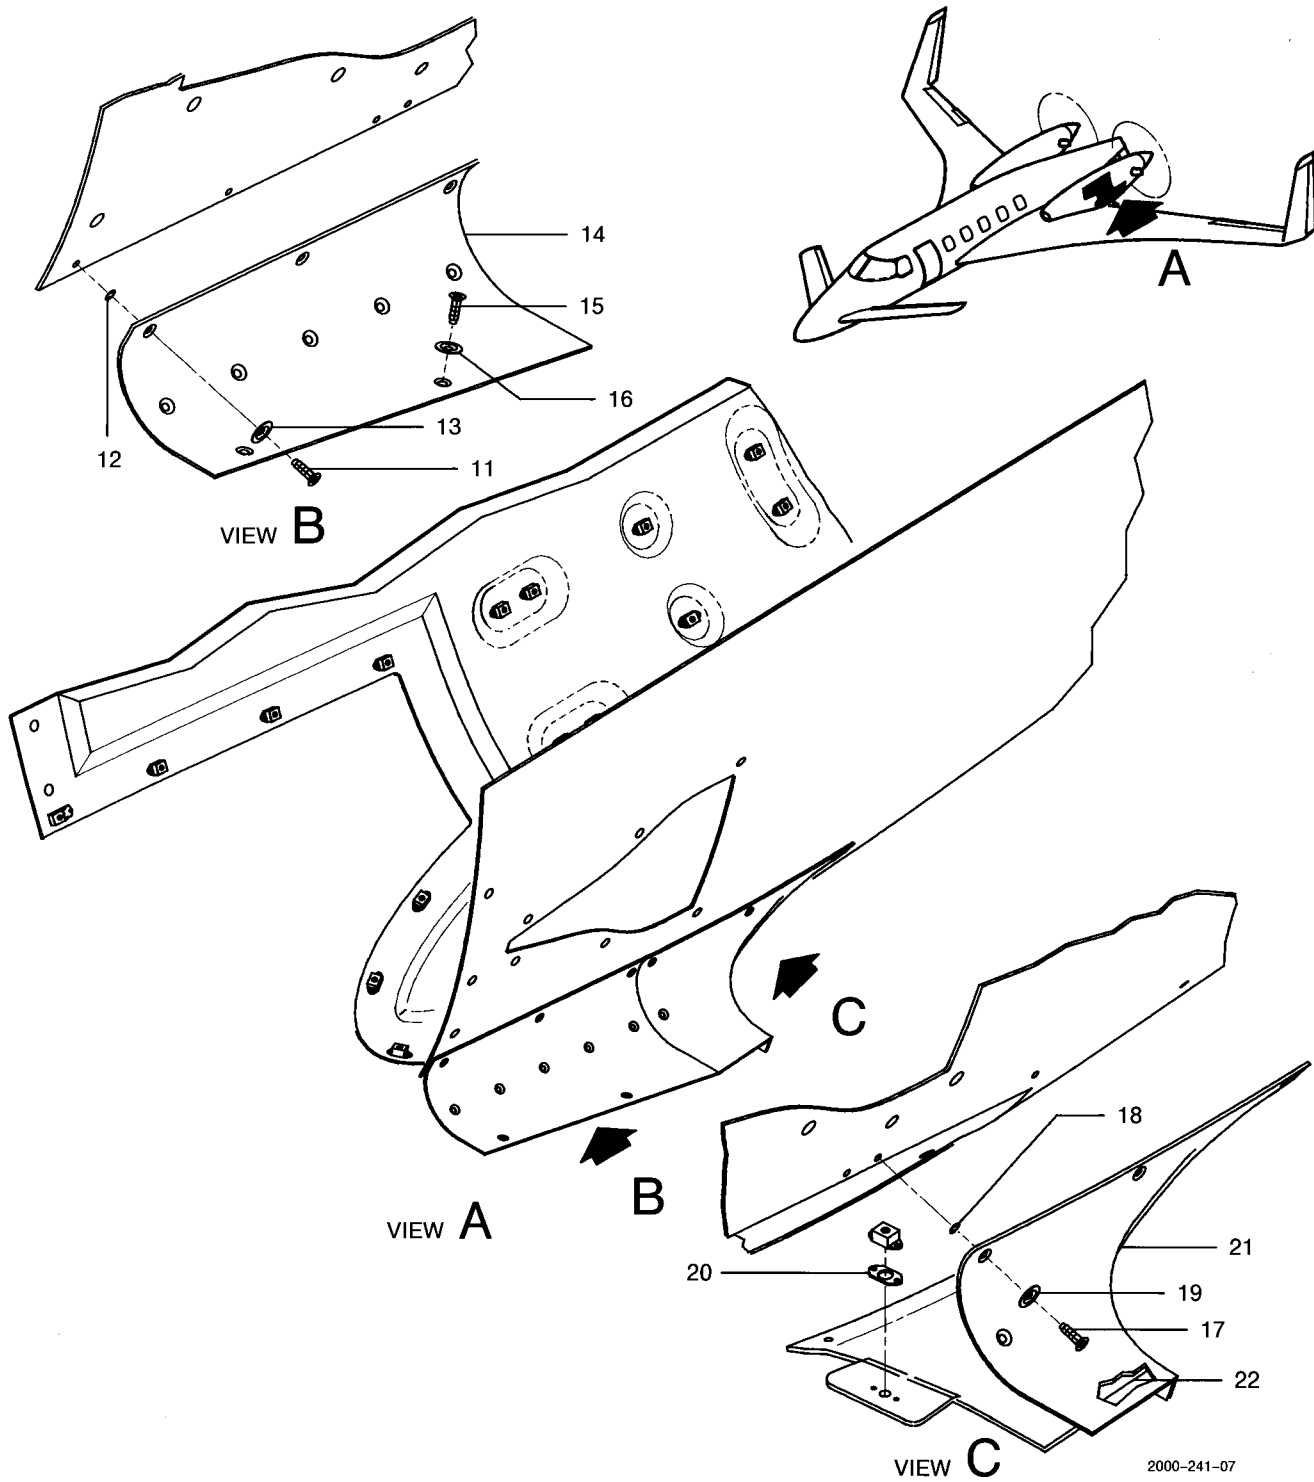

2000-241-07


FIGURE 30-00.COWLING INSTALLATION
/SHEET 2 OF 4 SHEETS/

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
30-00	122-910070-35		. FAIRING ASSY, LH OUTBD UPPER	1	
	122-910070-36		. FAIRING ASSY, RH OUTBD UPPER	1	
11	FIT7090-3-11-5		. . SCREW/ALTERNATE FOR CA21063-10-5-11/	9	
			/ORDER CA2229-10-5-11 FOR SPARES/		
	CA21063-10-5-11		. . SCREW/ALTERNATE FOR FIT7090-3-11-5/	9	
			/ORDER CA2229-10-5-11 FOR SPARES/		
	CA2229-10-5-11		. . SCREW	9	
12	CA21062-10R		. . RING, RETAINING	9	
13	NAS1169C10L		. . WASHER	9	
14	122-910070-37		. . FAIRING, LH OUTBD	1	
	122-910070-38		. . FAIRING, RH OUTBD	1	
15	DPYS7900P10B2		. . SCREW	2	
16	132116-1		. . WASHER	2	
	122-910070-39		. CLOSEOUT ASSY, LH OUTBD	1	
	122-910070-40		. CLOSEOUT ASSY, RH OUTBD	1	
17	FIT7090-3-11-5		. . SCREW/ALTERNATE FOR CA21063-10-5-11/	8	
			/ORDER CA2229-10-5-11 FOR SPARES/		
	CA21063-10-5-11		. . SCREW/ALTERNATE FOR FIT7090-3-11-5/	8	
			/ORDER CA2229-10-5-11 FOR SPARES/		
	CA2229-10-5-11		. . SCREW	8	
18	CA21062-10R		. . RING, RETAINING	8	
			/ORDER CA2210-10R FOR SPARES/		
	CA2210-10R		. . RING, RETAINING	8	
19	NAS1169C10L		. . WASHER	8	
	MS21060L3		. . NUTPLATE	1	
20	CA21062-10S		. . SHIM/UNDER NUTPLATE/	1	
21	122-910070-41		. . CLOSEOUT, LH	1	
	122-910070-42		. . CLOSEOUT, RH	1	
22	122-910070-43		. . CLOSEOUT, LH OUTBD	1	
	122-910070-44		. . CLOSEOUT, RH OUTBD	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

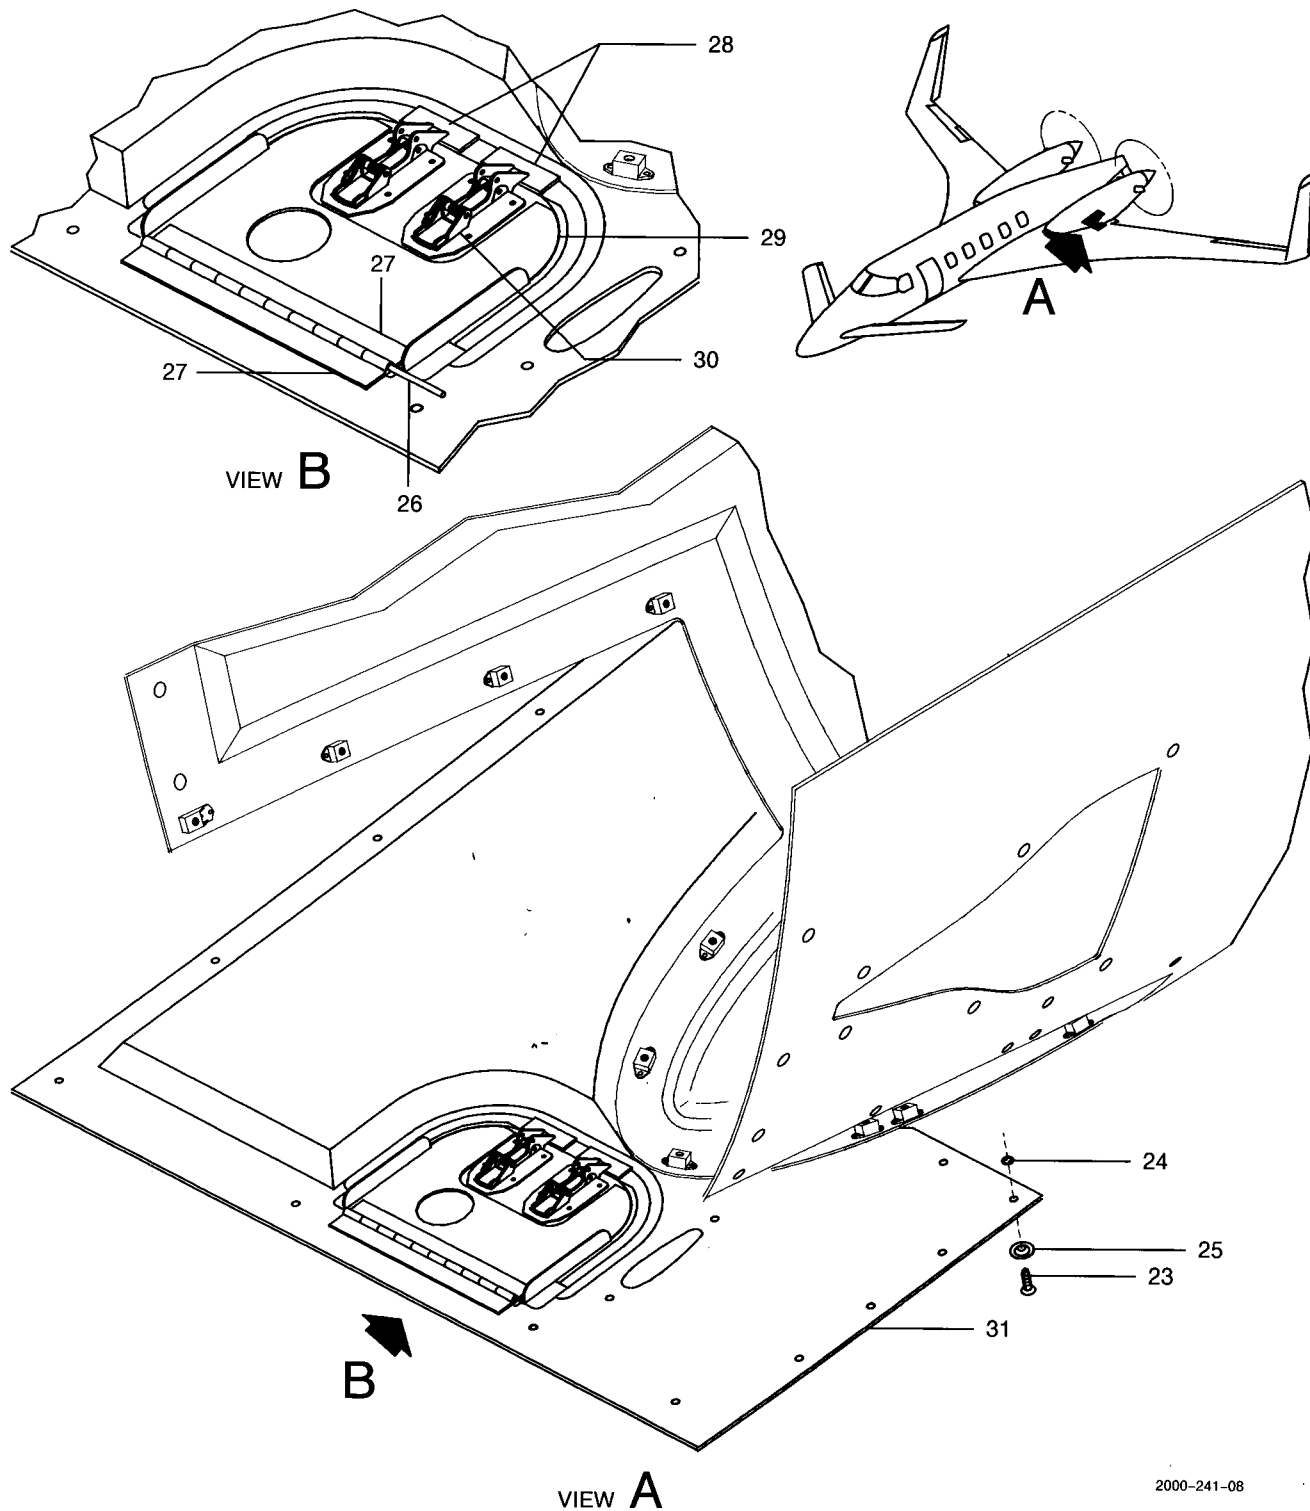

2000-241-08


FIGURE 30-00.COWLING INSTALLATION
/SHEET 3 OF 4 SHEETS/

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
30-00	122-910070-17	.	FAIRING ASSY, LH LOWER/ORDER 122-910070-57	NP	1
			FOR SPARES/		
	122-910070-57	.	FAIRING ASSY, LH LOWER	1	2
	122-910070-45	.	FAIRING ASSY, RH LOWER/ORDER 122-910070-58	NP	1
			FOR SPARES/		
	122-910070-58	.	FAIRING ASSY, RH LOWER	1	2
23	FIT7090-3-11-5	..	SCREW/ALTERNATE FOR CA21063-10-5-11/	22	1
			/ORDER CA2229-10-5-11 FOR SPARES/		
	FIT7090-3-12-5	..	SCREW/ALTERNATE FOR CA21063-10-5-12/	4	2
			/ORDER CA2229-10-5-12 FOR SPARES/		
	FIT7090-3-11-5	..	SCREW/ALTERNATE FOR CA21063-10-5-11/	18	2
			/ORDER CA2229-10-5-11 FOR SPARES/		
	CA21063-10-5-11	..	SCREW/ALTERNATE FOR FIT7090-3-11-5/	22	1
			/ORDER CA2229-10-5-11 FOR SPARES/		
	CA21063-10-5-12	..	SCREW/ALTERNATE FOR FIT7090-3-12-5/	4	2
			/ORDER CA2229-10-5-12 FOR SPARES/		
	CA21063-10-5-11	..	SCREW/ALTERNATE FOR FIT7090-3-11-5/	18	2
			/ORDER CA2229-10-5-11 FOR SPARES/		
	CA2229-10-5-11	..	SCREW	AR	
	CA2229-10-5-12	..	SCREW	AR	
24	CA21062-10R	..	RING, RETAINING	22	
			/ORDER CA2210-10R FOR SPARES/		
	CA2210-10R	..	RING, RETAINING	22	
25	NAS1169C10L	..	WASHER	22	
	122-910066-29	..	HINGE ASSY	1	
26	105774C-ZE00604	..	PIN, HINGE	1	
27	122-910066-31	..	HINGE, HALF	2	
28	122-910066-17	..	PLATE, STRIKER	2	
	122-910070-29	..	DOOR ASSY, LH	1	
	122-910070-30	..	DOOR ASSY, RH	1	
29	122-910070-31	..	DOOR, LH	1	
	122-910070-32	..	DOOR, RH	1	
30	H5000-2-040-115	..	LATCH	2	
31	122-910070-19	..	FAIRING, LH LOWER	1	1
	122-910070-59	..	FAIRING, LH LOWER	1	2
	122-910070-47	..	FAIRING, RH LOWER	1	1
	122-910070-60	..	FAIRING, RH LOWER	1	2

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

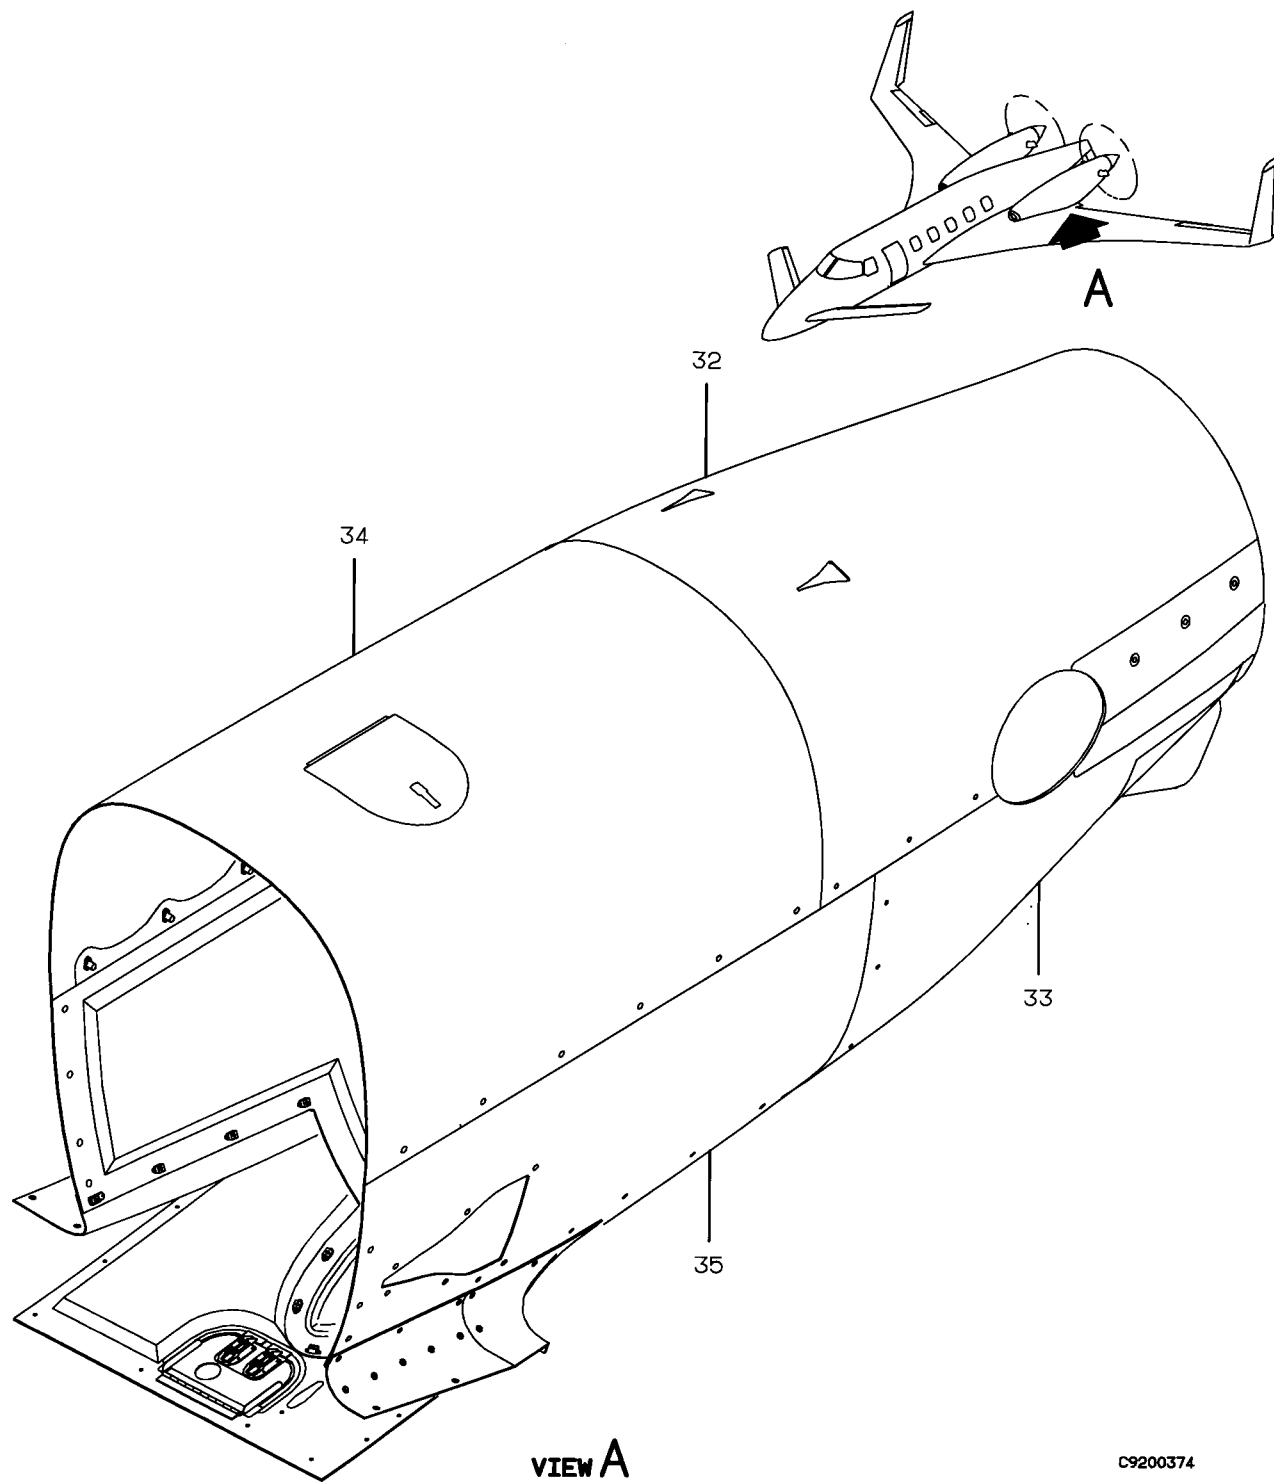

C9200374

FIGURE 30-00.COWLING INSTALLATION
/SHEET 4 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00 -32	122-910067-29	. COWLING ASSY, UPPER AFT/SEE CHAPTER 54-30-10/	2	2
	122-910067-19	. COWLING ASSY, UPPER AFT/SEE CHAPTER 54-30-10/	2	1
-33	122-910069-27	. COWLING ASSY, LOWER AFT/SEE CHAPTER 54-30-20/	2	2
	122-910069-19	. COWLING ASSY, LOWER AFT/SEE CHAPTER 54-30-20/	2	1
-34	122-910066-19	. COWLING ASSY, UPPER FWD/SEE CHAPTER 54-30-30/	2	
-35	122-910068-1	. COWLING ASSY, LH LOWER FWD/SEE CHAPTER	1	
		54-30-40/		
	122-910068-3	. COWLING ASSY, RH LOWER FWD/SEE CHAPTER.....	1	
		54-30-40/		



CODES OF EFFECTIVITY

1 NC-4 THRU NC-28 2 NC-29 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

54-30-10
UPPER AFT COWLING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

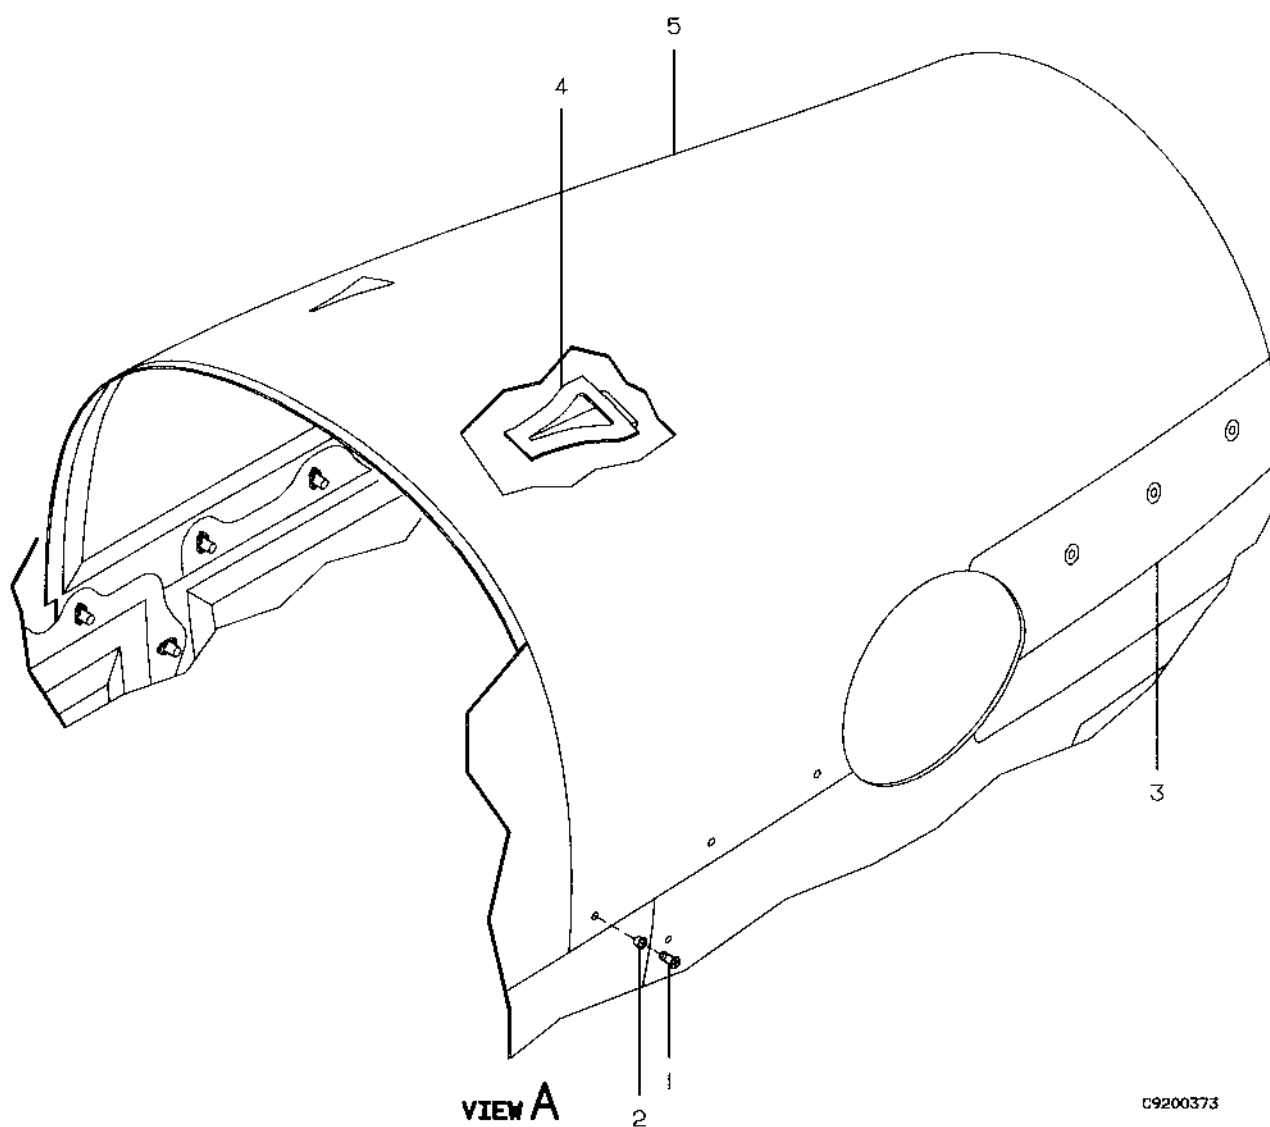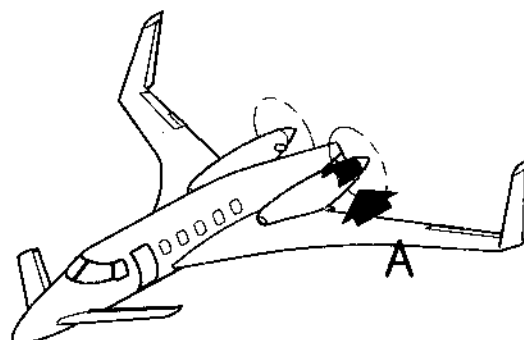

C9200373

FIGURE 30-10.UPPER AFT COWLING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-10	122-910067-19	COWLING ASSY, UPPER AFT/LH & RH/.....	2	1
	122-910067-29	COWLING ASSY, UPPER AFT/LH & RH/.....	2	2
- 1	CA18324-1P	. NUT, STUD.....	12	
- 2	CA18185	. GROMMET.....	12	
	122-910067-31	. COWLING ASSY, UPPER AFT/SECONDARY/.....	1	2
	122-910067-21	. COWLING ASSY, UPPER AFT/SECONDARY/.....	1	1
- 3	122-910067-35	. . SHIELD, LH OUTBD AND RH INBD HEAT.....	1	2
	122-910067-25	. . SHIELD, LH OUTBD AND RH INBD HEAT.....	1	1
	122-910067-36	. . SHIELD, RH OUTBD AND LH INBD HEAT.....	1	2
	122-910067-26	. . SHIELD, RH OUTBD AND LH INBD HEAT.....	1	1
- 4	122-910016-1	. . SCOOP, LH OUTBD AND RH INBD.....	1	
	122-910016-2	. . SCOOP, RH OUTBD AND LH INBD.....	1	
- 5	122-910067-33	. . COWLING, UPPER AFT/PRIMARY/.....	1	2
	122-910067-23	. . COWLING, UPPER AFT/PRIMARY/.....	1	1
	122-910067-43	. DOUBLER, UPPER LH.....	1	2
	122-910067-45	. DOUBLER, UPPER RH.....	1	2
	122-9002-1	KIT LIST, GROSS WEIGHT INCREASE.....	1	1
	122-910067-43	. DOUBLER, UPPER LH.....	2	1
	122-910067-45	. DOUBLER, UPPER RH.....	2	1


CODES OF EFFECTIVITY

1 NC-4 THRU NC-28 2 NC-29 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

54-30-20
LOWER AFT COWLING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

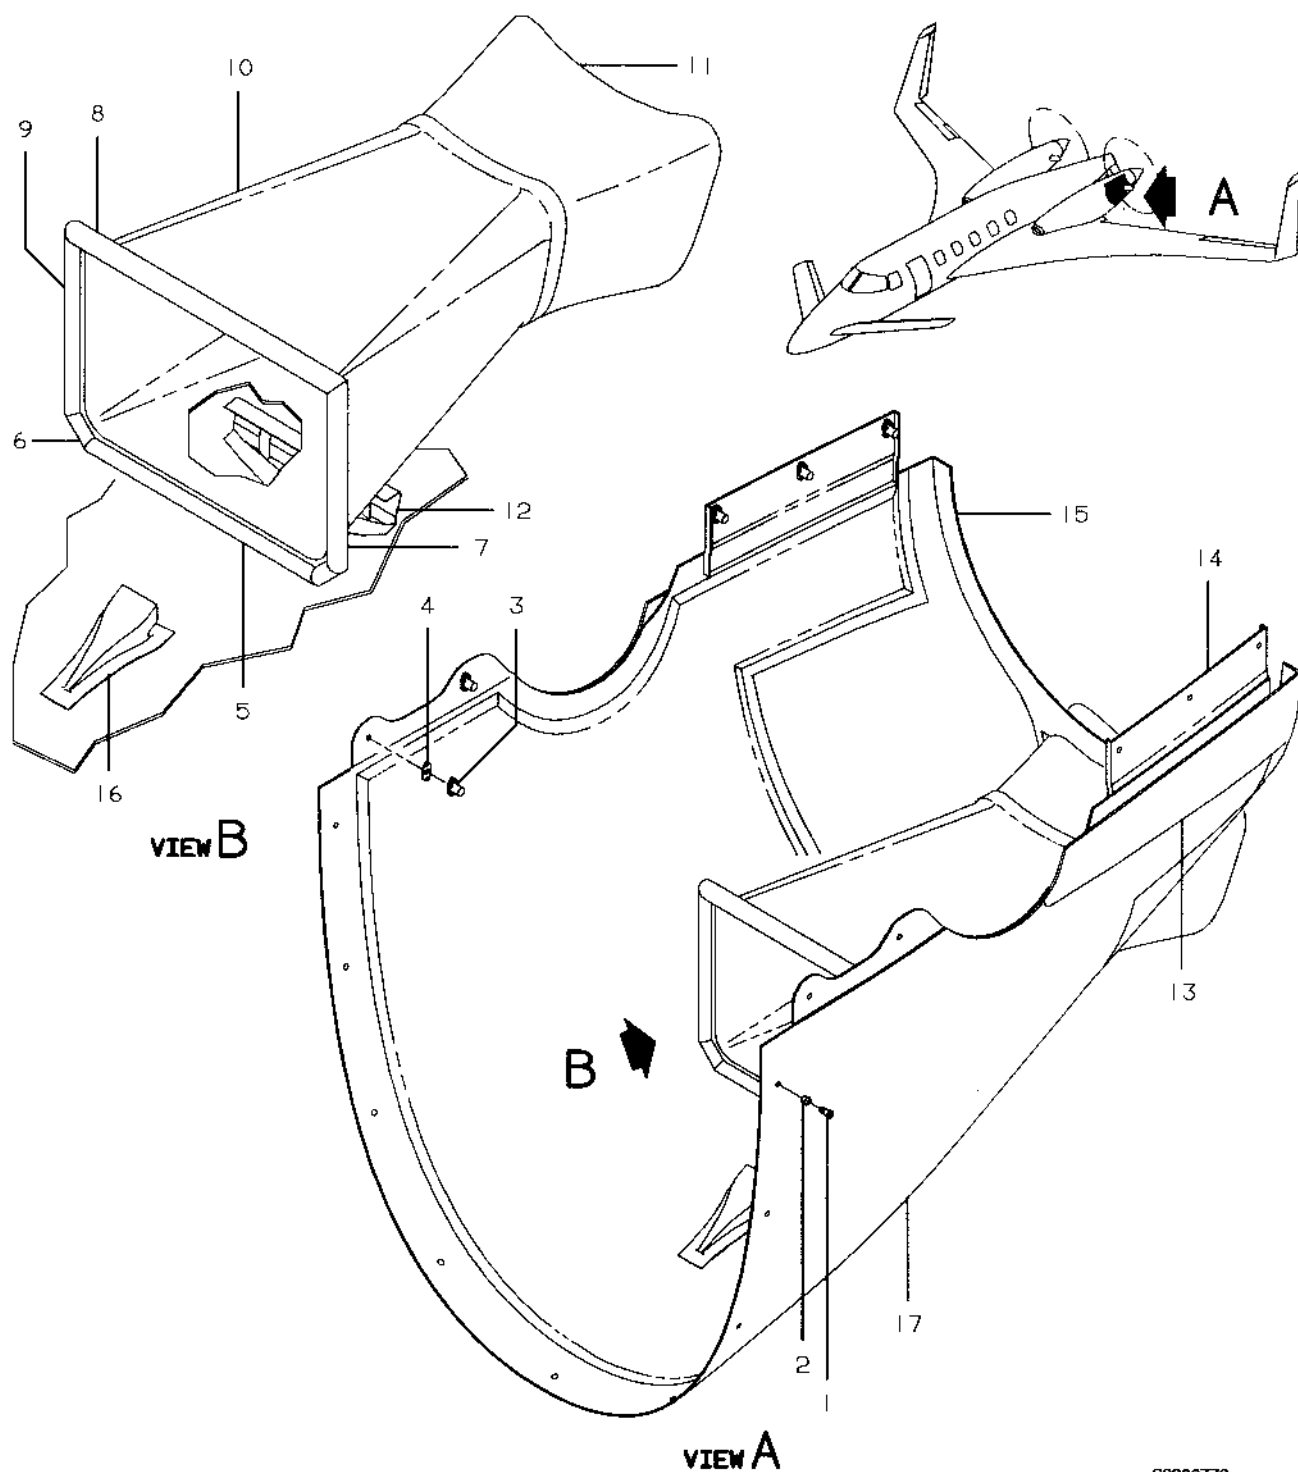

C9200372

FIGURE 30-20.LOWER AFT COWLING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-20	122-910069-19	COWLING ASSY, LOWER AFT/LH & RH/.....	2	1
	122-910069-27	COWLING ASSY, LOWER AFT/LH & RH/.....	2	2
- 1	CA18324-1P	. NUT, STUD.....	9	
- 2	CA18185	. GROMMET.....	9	
- 3	CA1810	. RECEPTACLE.....	10	
- 4	CA1818-1	. SHIM/UNDER RECEPTACLE/.....	10	
	122-910069-21	. COWLING, LOWER AFT.....	1	1
	122-910069-29	. COWLING, LOWER AFT.....	1	2
	122-910060-1	. DUCT ASSY, OIL COOLER EXIT.....	1	
	122-910060-5	. . . SEAL ASSY.....	1	
- 5	122-910060-11	. . . SEAL.....	1	
- 6	122-910060-13	. . . SEAL.....	2	
- 7	122-910060-7	. . . SEAL.....	1	
- 8	122-910060-9	. . . SEAL.....	1	
- 9	122-910060-8	. . . SEAL.....	1	
-10	122-910060-3	. . . DUCT ASSY.....	1	
-11	122-910060-15	. DUCT, EXIT.....	1	
-12	122-910061-1	. . SUPPORT, DUCT.....	1	
-13	122-910069-35	. . SHIELD, LH LOWER HEAT.....	1	2
	122-910069-15	. . SHIELD, LH LOWER HEAT.....	1	1
	122-910069-45	. . SHIELD, RH LOWER HEAT.....	1	2
	122-910069-16	. . SHIELD, RH LOWER HEAT.....	1	1
-14	122-910069-25	. . PLATE, LH.....	1	
	122-910069-26	. . PLATE, RH.....	1	
-15	122-910071-3	. . CLOSEOUT, LH COWLING.....	1	
	122-910071-5	. . CLOSEOUT, RH COWLING.....	1	
-16	122-910016-3	. . SCOOP, AIR VENTILATION.....	1	
-17	122-910069-23	. . COWLING, PRIMARY.....	1	1
	122-910069-31	. . COWLING, PRIMARY.....	1	2
	122-910069-41	. DOUBLER, LH LOWER.....	1	2
	122-910069-43	. DOUBLER, RH LOWER.....	1	2
	122-9002-1	KIT LIST, GROSS WEIGHT INCREASE.....	1	1
	122-910069-41	. DOUBLER, LH LOWER.....	2	1
	122-910069-43	. DOUBLER, RH LOWER.....	2	1

CODES OF EFFECTIVITY


1 NC-4 THRU NC-28

2 NC-29 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

54-30-30
UPPER FORWARD COWLING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

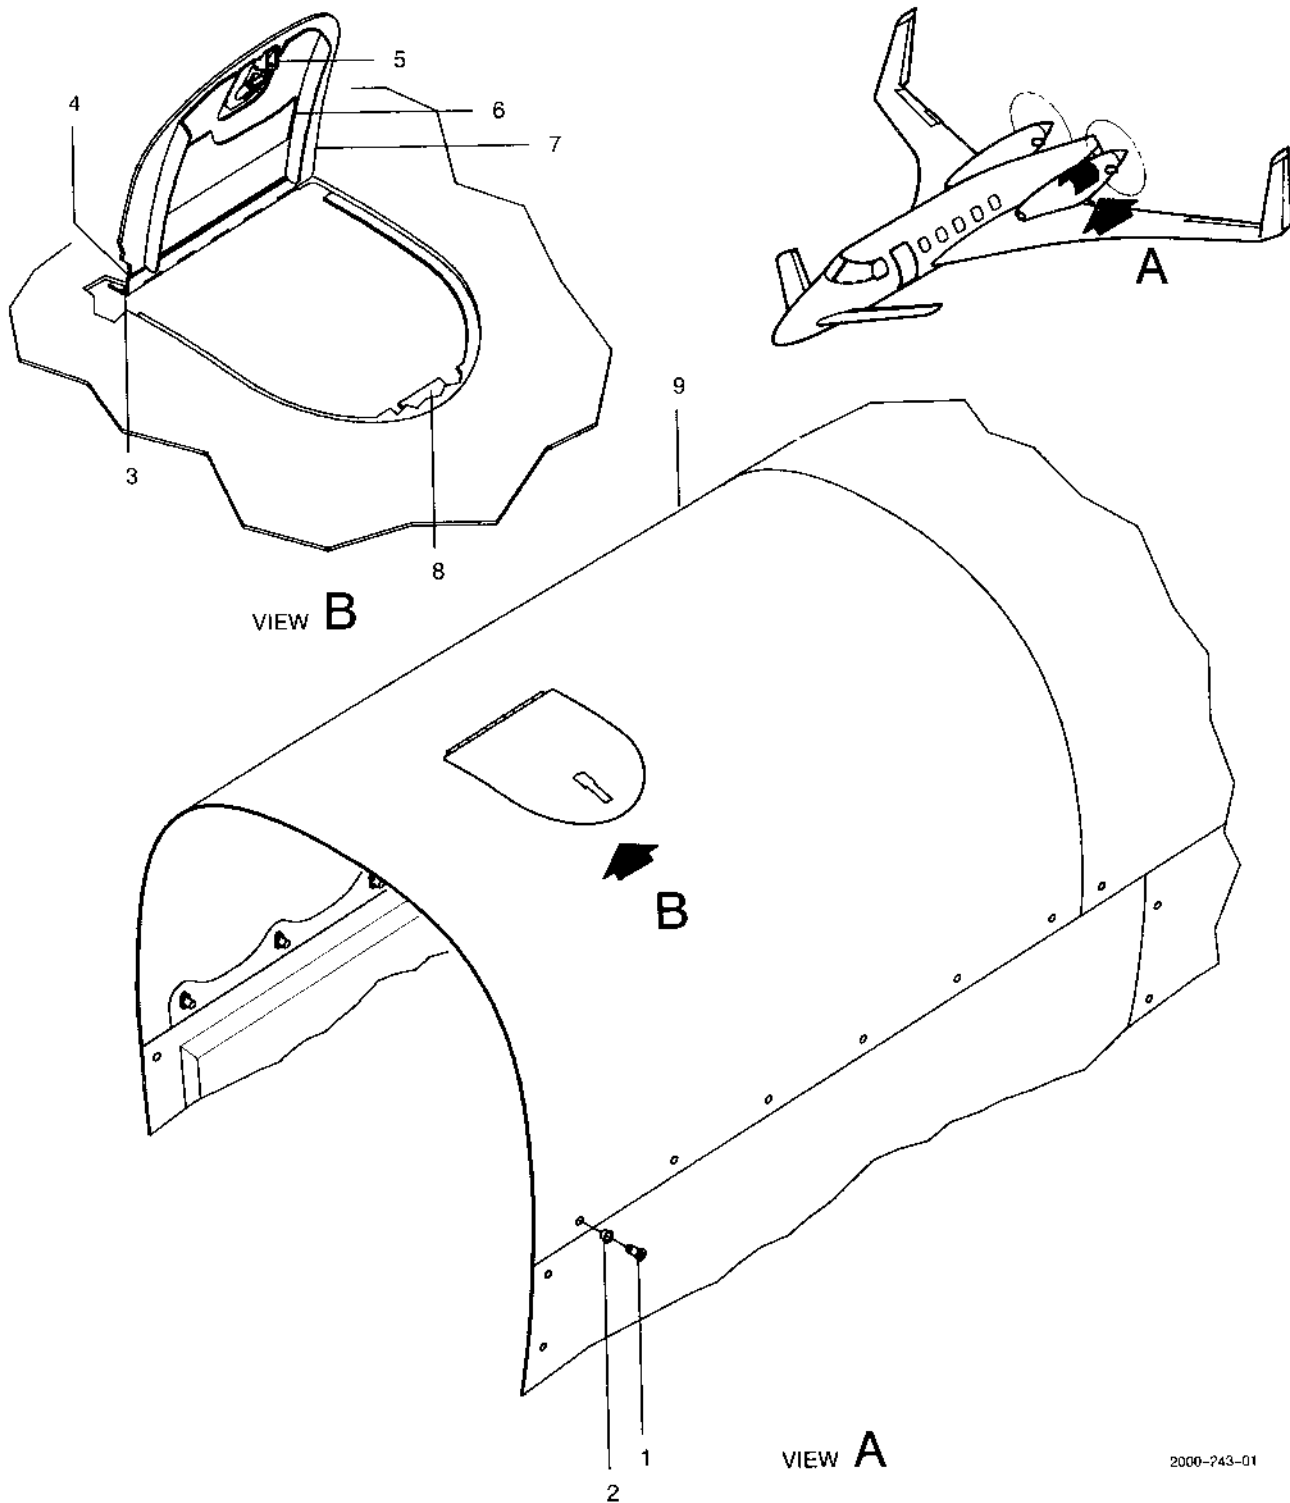

2000-243-01

FIGURE 30-30. UPPER FORWARD COWLING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-30	122-910066-19	COWLING ASSY, LH AND RH UPPER FORWARD	2	
- 1	CA18324-1P	. NUT, STUD.....	20	
- 2	CA18185	. GROMMET.....	20	
	122-910066-29	. HINGE ASSY, DOOR	1	
- 3	105774C-ZE00604	. . PIN, HINGE.....	1	
- 4	122-910066-31	. . HINGE, HALF	2	
	122-910066-26	. DOOR ASSY, ENGINE SERVICE INSTRUCTION	1	
- 5	H5000-2-040-115	. . LATCH	1	
- 6	122-930009-3	. . PLATE, INSTRUCTION	1	
- 7	122-910066-27	. . DOOR.....	1	
- 8	122-910066-17	. PLATE, STRIKER.....	1	
- 9	122-910066-21	. COWLING ASSY, BONDED	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

54-30-40
LOWER FORWARD COWLING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

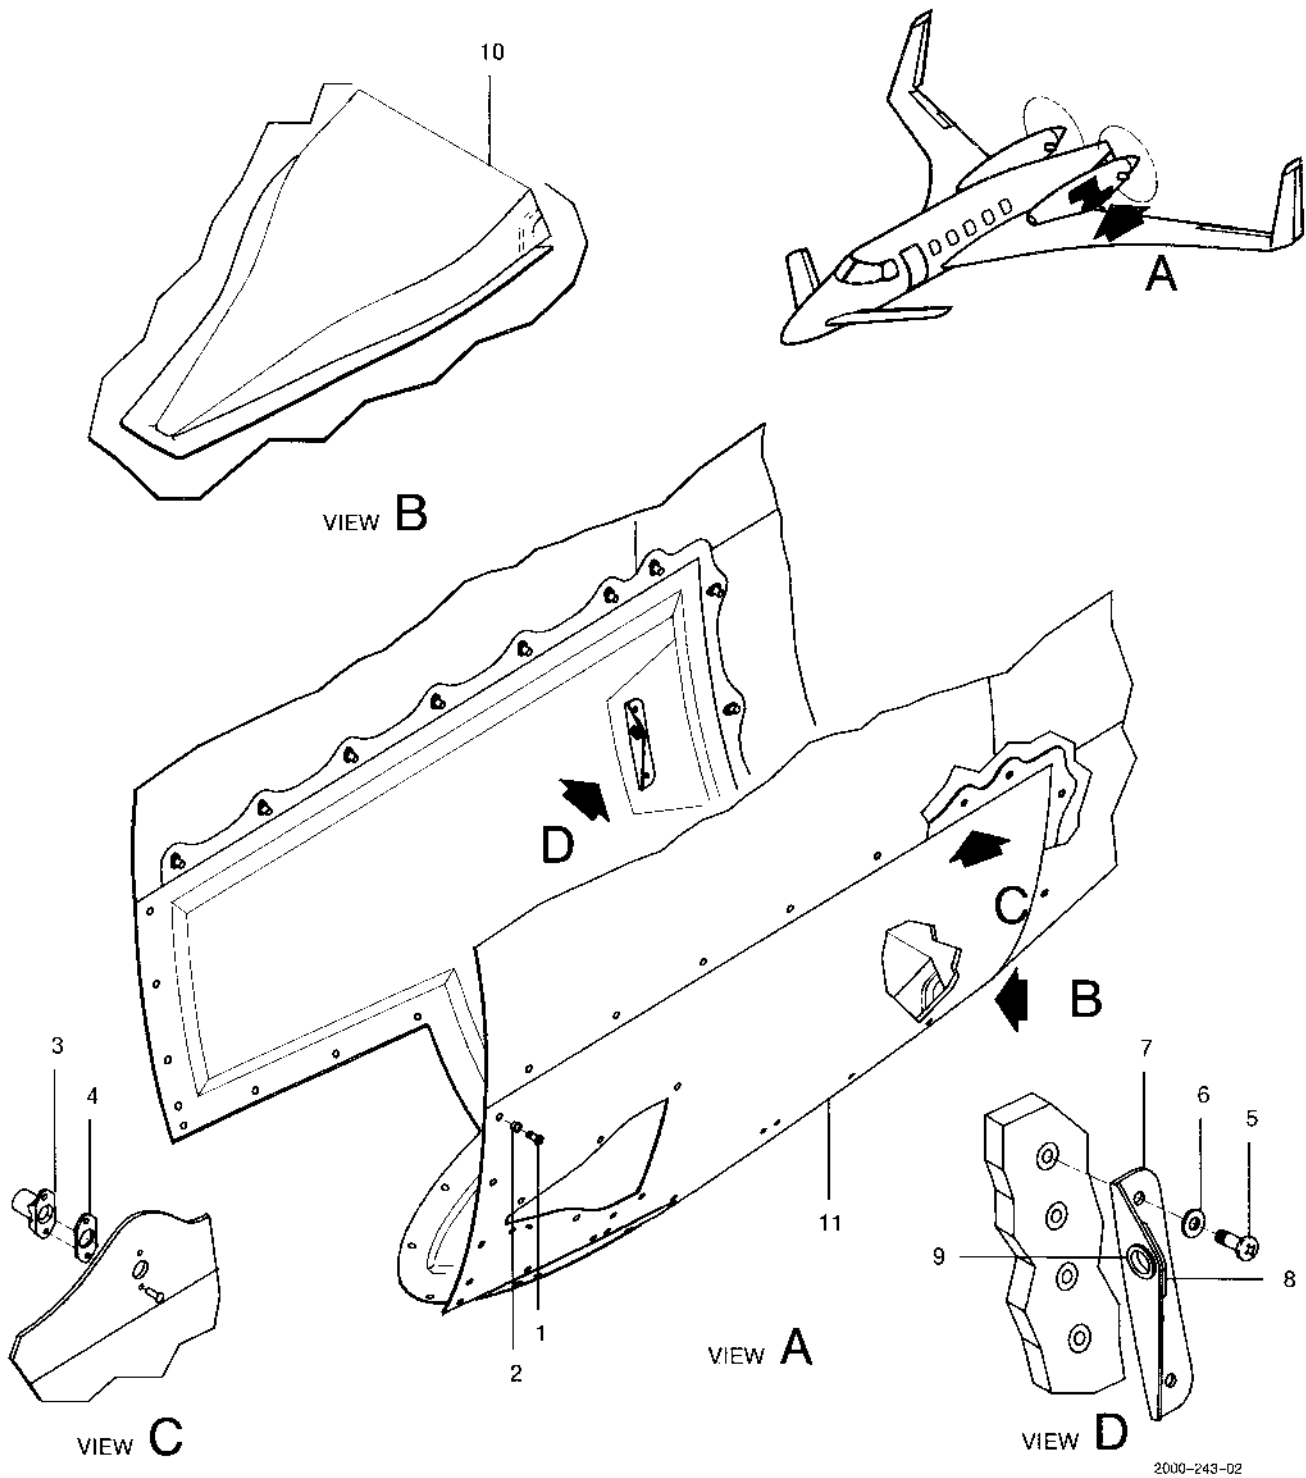


FIGURE 30-40. LOWER FORWARD COWLING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-40	122-910068-1	COWLING ASSEMBLY, LH LOWER FORWARD.....	1	
	122-910068-3	COWLING ASSEMBLY, RH LOWER FORWARD.....	1	
- 1	CA18324-1P	. NUT, STUD.....	14	
- 2	CA18185	. GROMMET.....	14	
- 3	CA1810	. RECEPTACLE.....	23	
- 4	CA1818-1	. SHIM/UNDER RECEPTACLE/.....	23	
	MS21060L3	. NUTPLATE.....	24	
	MS21062L3	. NUTPLATE.....	2	
	CA21062-10S	. SHIM/UNDER NUTPLATE/.....	25	
	122-910068-19	. BRACKET ASSY, LH.....	1	
	122-910068-20	. BRACKET ASSY, RH.....	1	
		. /ATTACHING PARTS/.....		
- 5	MS27039-1-05	. SCREW.....	4	
- 6	AN960D10	. WASHER.....	4	
		-----★-----		
- 7	122-910068-21	. BRACKET, LH.....	1	
	122-910068-22	. BRACKET, RH.....	1	
- 8	122-910068-23	. DOUBLER.....	1	
- 9	NAS77-6-31	. BUSHING.....	1	
	SL644C3-4	. INSERT.....	8	
- 10	122-910056-13	. SCOOP ASSY, OIL COOLER.....	1	
- 11	122-910068-5	. COWLING, LH LOWER FORWARD.....	1	
	122-910068-7	. COWLING, RH LOWER FORWARD.....	1	

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG


LIST OF PAGES & TABLE OF CONTENTS FOR CHAPTER 55-00-00 STABILIZERS

CHAP/SUB- SECT & UNIT	PAGE NUMBER	EFFECTIVE DATE	TABLE OF CONTENTS
55-00-00	1	07/31/02	LIST OF PAGES & TABLE OF CONTENTS
55-10-00	1	02/25/94	FORWARD WING
55-10-00	2	11/04/94	
55-10-00	3	07/31/02	
55-10-00	4	11/04/94	
55-10-00	5	07/31/02	
55-10-00	6	11/04/94	
55-10-00	7	11/04/94	
55-10-00	8	11/04/94	
55-10-00	9	11/04/94	
55-20-00	1	02/25/94	ELEVATOR
55-20-00	2	02/25/94	
55-20-00	3	07/31/02	
55-20-00	4	06/30/95	
55-20-00	5	07/31/02	
55-20-00	6	06/30/95	
55-20-00	7	07/31/02	
55-30-00	1	02/25/94	TIPSAIL
55-30-00	2	06/30/95	
55-30-00	3	06/30/95	
55-30-00	4	06/30/95	
55-30-00	5	06/30/95	
55-30-00	6	06/30/95	
55-30-00	7	06/30/95	
55-40-00	1	02/25/94	TIPSAIL RUDDER
55-40-00	2	06/30/95	
55-40-00	3	06/30/95	
55-40-00	4	06/30/95	
55-40-00	5	06/30/95	
55-40-00	6	06/30/95	
55-40-00	7	06/30/95	
55-40-00	8	06/30/95	
55-40-00	9	06/30/95	
55-60-00	1	02/25/94	VENTRAL STABILIZER
55-60-00	2	02/25/94	
55-60-00	3	06/30/95	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

55-10-00
FORWARD WING

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

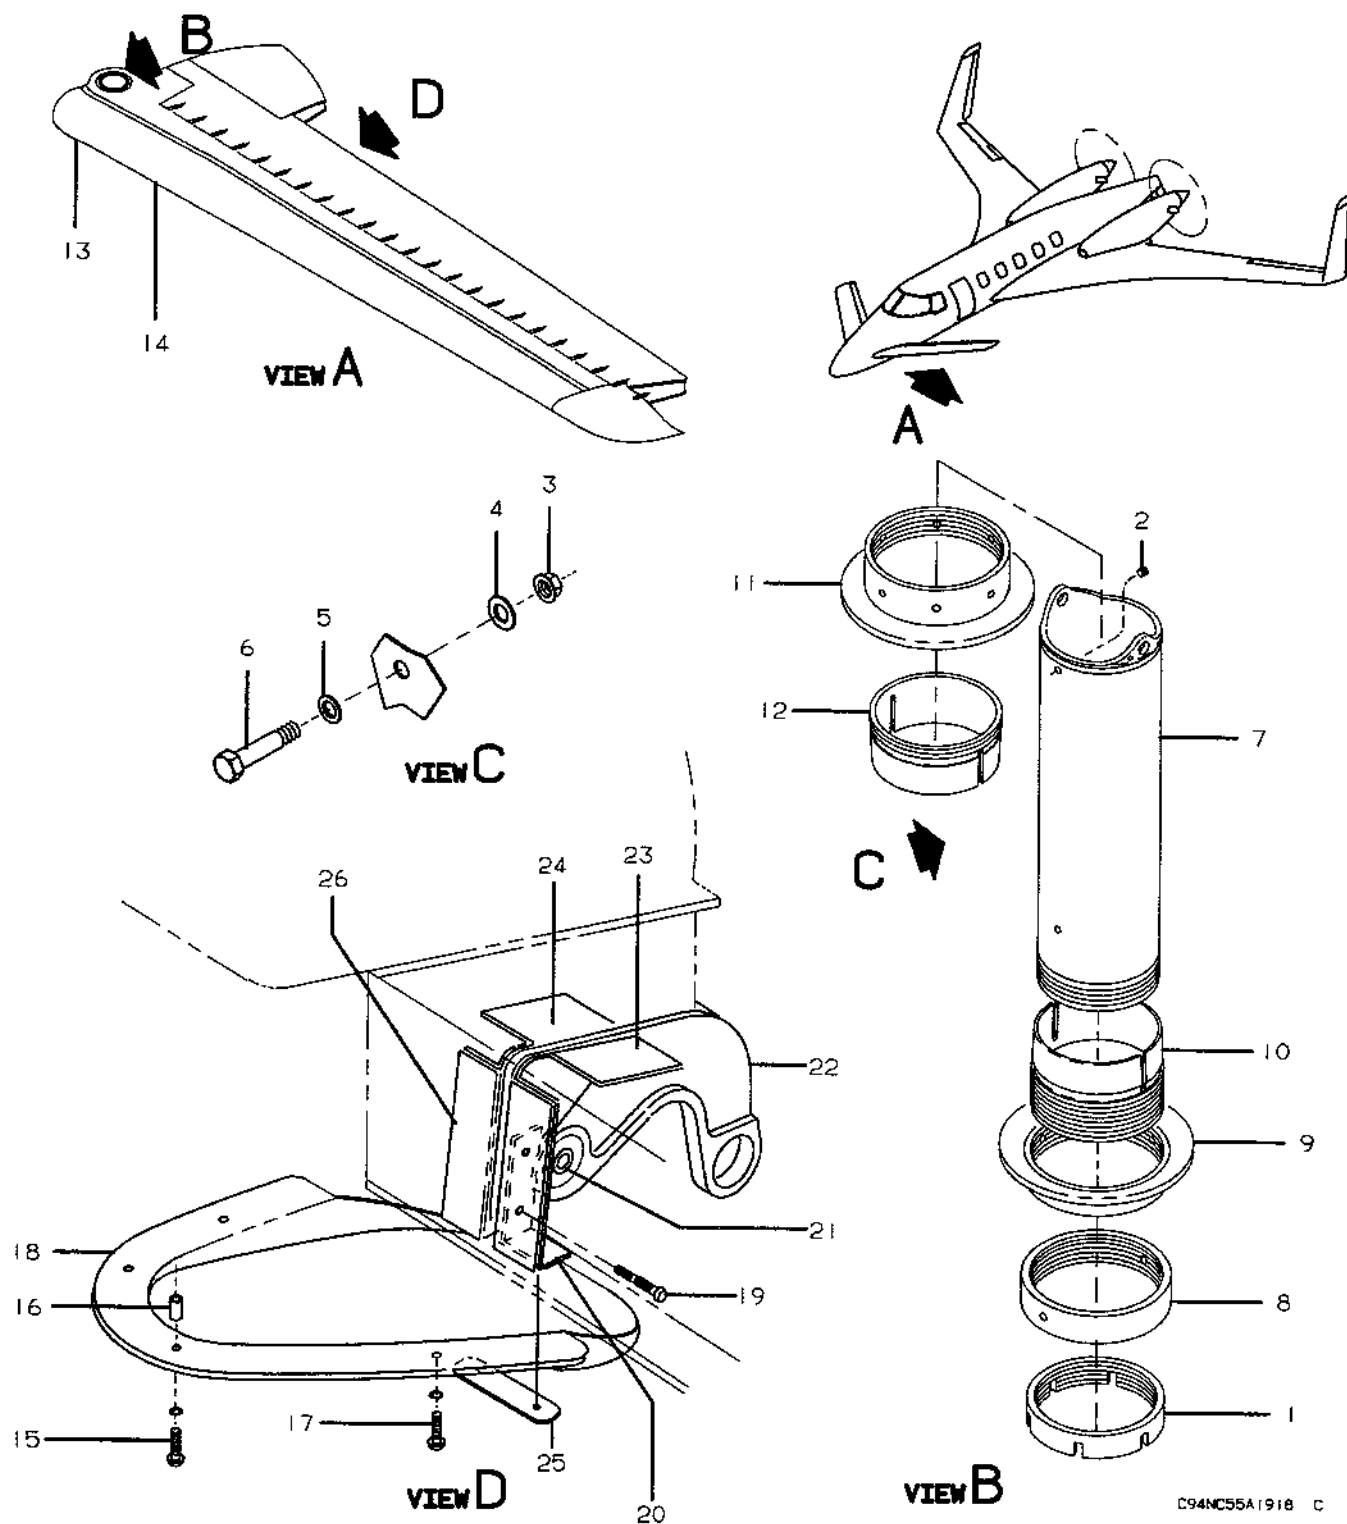


Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
10-00	122-620000-3		WING INSTL, LH FWD	NP	
	122-620000-4		WING INSTL, RH FWD	NP	
1	122-410230-15		. NUT, CASTLE	1	
2	AN565E428H4		. SCREW, SET	2	
3	MS21043-6		. NUT	2	
4	122-410230-13		. WASHER	2	
5	AN960C616		. WASHER	2	
6	NAS1106-7		. BOLT	2	
7	122-410230-29		. PIN, LH PIVOT	1	
	122-410230-30		. PIN, RH PIVOT	1	
8	122-620152-9		. NUT	1	
9	122-620152-7		. NUT	1	
10	122-620152-13		. COLLAR	1	
11	122-620152-5		. NUT	1	
12	122-620152-11		. COLLAR	1	
	122-620010-1		. WING ASSY, LH FWD/ORDER 122-620010-13 FOR SPARES/	NP	1
	122-620010-13		. WING ASSY, LH FWD	1	2
	122-620010-2		. WING ASSY, RH FWD/ORDER 122-620010-14 FOR SPARES/	NP	1
	122-620010-14		. WING ASSY, RH FWD	1	2
	122-620065-1		. . LEADING EDGE INSTL, FWD WING	NP	5
	122-620066-1		. . LEADING EDGE INSTL, FWD WING	NP	6
	122-620065-2		. . LEADING EDGE INSTL, FWD WING	NP	5
	122-620066-2		. . LEADING EDGE INSTL, FWD WING	NP	6
13	122-620065-5		. . . LEADING EDGE ASSY, LH INDB	1	5
	122-620067-3		. . . LEADING EDGE ASSY, LH INDB	1	6
	122-620065-6		. . . LEADING EDGE ASSY, RH INDB	1	5
	122-620067-4		. . . LEADING EDGE ASSY, RH INDB	1	6
14	122-620065-3		. . . LEADING EDGE ASSY, LH OUTBD	1	5
	122-620067-1		. . . LEADING EDGE ASSY, LH OUTBD	1	6
	122-620065-4		. . . LEADING EDGE ASSY, RH OUTBD	1	5
	122-620067-2		. . . LEADING EDGE ASSY, RH OUTBD	1	6
15	MS35206-240		. . SCREW	3	3
16	SL607-08-4CM		. . INSERT	3	3
	SL602-08-400CM		. . INSERT	3	4
17	MS27039-0805		. . SCREW	1	3
	MS21071L08		. . NUTPLATE	1	3
	MS21071L08		. . NUTPLATE	1	4
18	122-620010-11		. . FAIRING, LH INBD HINGE	1	
	122-620010-12		. . FAIRING, RH INBD HINGE	1	
	FIT7090-08-7-4		. . . SCREW	4	4
	D79661A8		. . . WASHER	4	4
	CA21062-08R		. . . RETAINER	4	4
	CA2210-08R		. . . RETAINER	4	4
	122-620050-1		. . BRACKET INSTL, LH ELEVATOR INBD HINGE	NP	
	122-620050-2		. . BRACKET INSTL, RH ELEVATOR INBD HINGE	NP	
19	HL10VAP-5-7		. . . PIN	2	
	HL94W5		. . . COLLAR	2	
20	122-620050-17		. . . CLIP	1	
	122-620050-7		. . . BEARING ASSY, ELEVATOR INBD HINGE	1	
21	MS27643-4		. . . BEARING	1	
22	122-620050-13		. . . FITTING	1	
23	122-620050-15		. . BRACKET, ELEVATOR INBD HINGE LH	1	
24	122-620050-16		. . BRACKET, ELEVATOR INBD HINGE RH	1	
25	122-620050-29		. . DOUBLER	1	
26	131910		. . SHIM	AR	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

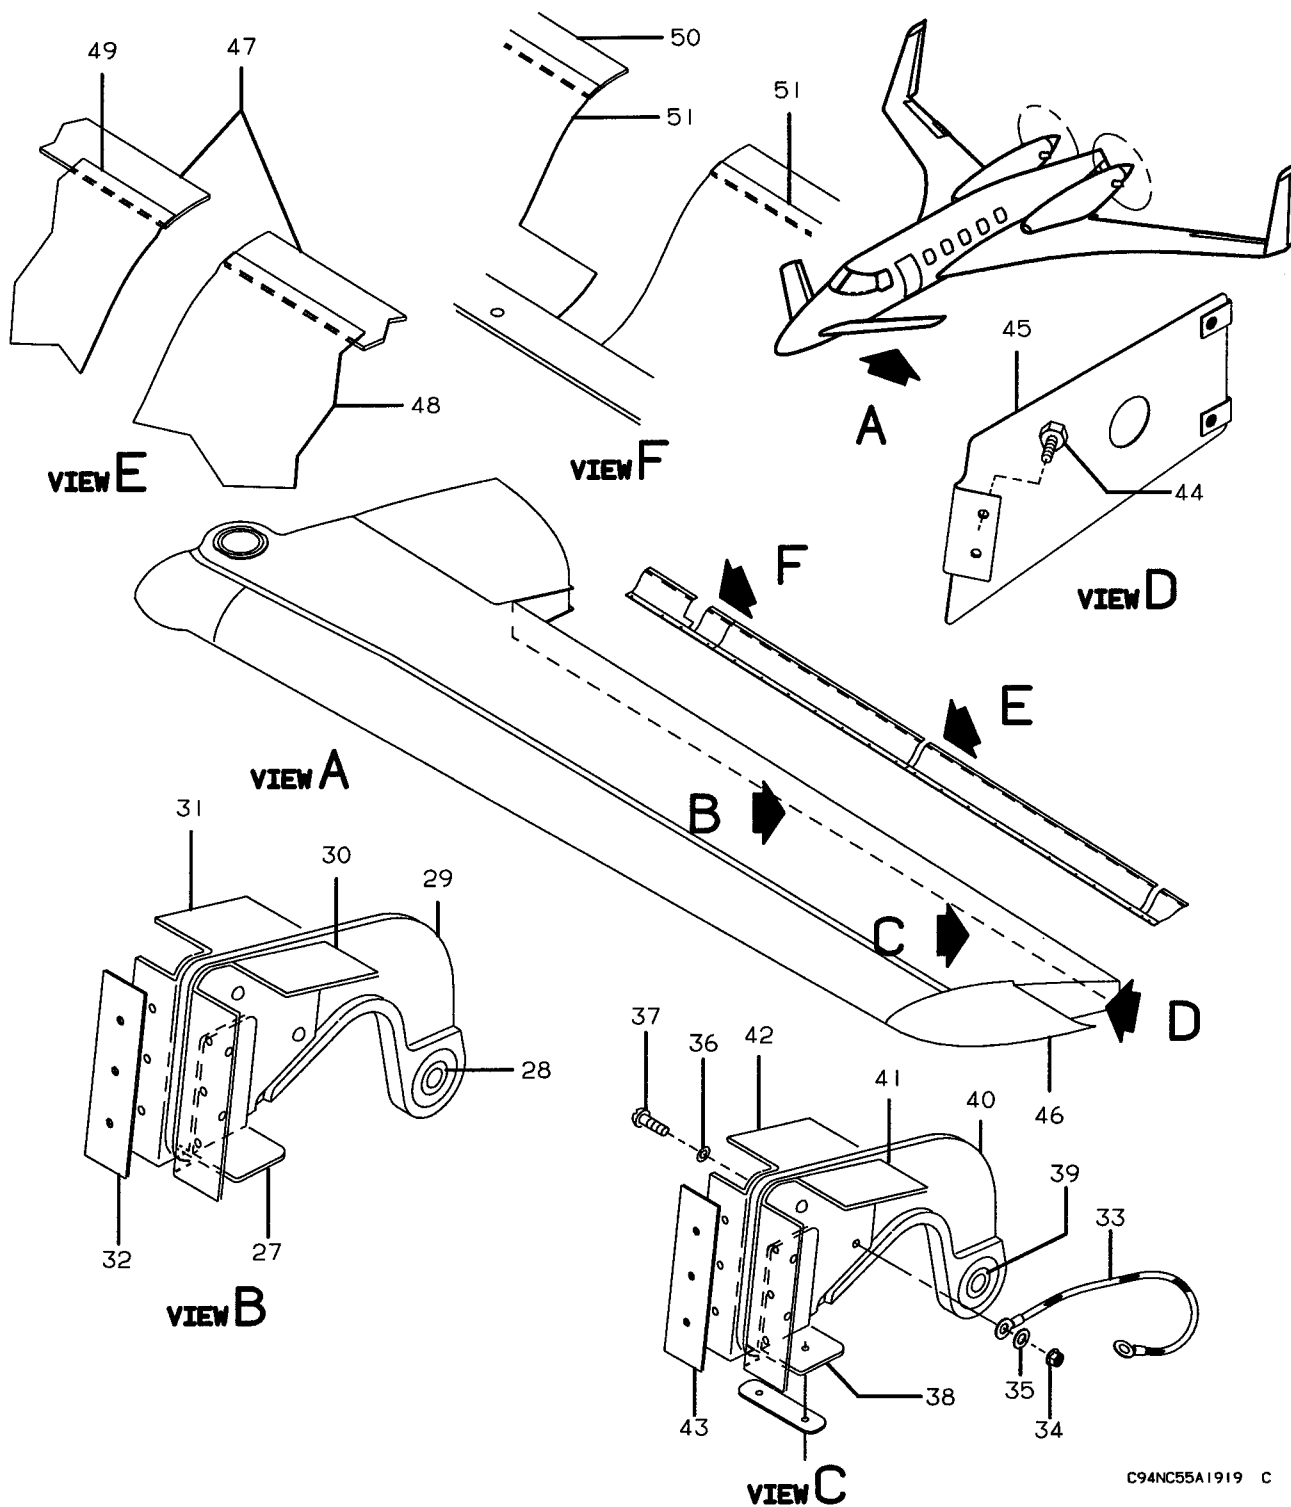


C94NC55A1919 C

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
10-00	122-620050-3	..	BRACKET INSTL, LH ELEVATOR CTR HINGE	NP	
	122-620050-33	..	BRACKET INSTL, RH ELEVATOR CTR HINGE	NP	
	HL10VAP-6-8	..	PIN	2	
	HL94W6	..	COLLAR	2	
27	122-620050-45	..	CLIP	1	
	122-620050-43	..	BEARING ASSY	1	
28	MS27645-4A	..	BEARING	1	
29	122-620050-41	..	FITTING	1	
30	122-620050-49	..	BRACKET	1	
31	122-620050-50	..	BRACKET	1	
32	131910	..	SHIM	AR	
	122-620050-5	..	BRACKET INSTL, LH ELEVATOR OUTBD HINGE	NP	
	122-620050-6	..	BRACKET INSTL, RH ELEVATOR OUTBD HINGE	NP	
33	MS25083-2AB5	..	JUMPER, BONDING	1	2
	MS25083-3PB2	..	JUMPER, BONDING	1	1
	MS25083-3SA	..	JUMPER, BONDING	1	1
			(ATTACHING PARTS)		
34	MS21044N06	..	NUT	1	
35	AN960-6	..	WASHER	1	
36	MS35338-41	..	WASHER, LOCK/UNDER SCREW HEAD/	1	
37	MS35206-231	..	SCREW	1	
			-----★-----		
	HL10VAP6-6	..	PIN	2	
	HL94W6	..	COLLAR	2	
38	122-620050-31	..	CLIP	1	
	122-620050-39	..	BEARING ASSY, ELEVATOR OUTBD HINGE	1	
39	MS27645-4A	..	BEARING	1	
40	122-620050-37	..	FITTING	1	
41	122-620050-47	..	BRACKET, ELEVATOR OUTBD HINGE LH	1	
42	122-620050-48	..	BRACKET, ELEVATOR OUTBD HINGE RH	1	
43	131910	..	SHIM	AR	
	122-620121-1	..	WING ASSY, LH FWD	1	
	122-620121-2	..	WING ASSY, RH FWD	1	
44	NAS1096-2-6	..	SCREW	8	
	AN960C8L	..	WASHER	8	
45	122-620121-25	..	COVER ASSY, LH	1	
	122-620121-26	..	COVER ASSY, RH	1	
	130290-1	..	CLIPNUT	2	
46	122-620052-9	..	FAIRING ASSY, LH FWD WING TIP	1	
	122-620052-10	..	FAIRING ASSY, RH FWD WING TIP	1	
	130290-1	..	CLIPNUT	2	
47	122-620121-49	..	RETAINER, LH	1	
	122-620121-50	..	RETAINER, RH	1	
48	122-620121-53	..	COVE, LH	1	
	122-620121-54	..	COVE, RH	1	
49	122-620121-51	..	COVE, LH	1	
	122-620121-52	..	COVE, RH	1	
50	122-620121-47	..	RETAINER, LH	1	
	122-620121-48	..	RETAINER, RH	1	
51	122-620121-43	..	COVE ASSY, LH	1	
	122-620121-44	..	COVE ASSY, RH	1	
	FIT7090-3-11-5	..	SCREW, CAPTIVE	3	
			(ORDER CA2229-10-5-11 FOR SPARES/		
	CA2229-10-5-11	..	SCREW, CAPTIVE	3	
	D79661A8	..	WASHER	3	
	CA21062-10R	..	RING, RETAINING	3	
			(ORDER CA2210-10R FOR SPARES/		
	CA2210-10R	..	RING, RETAINING	3	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

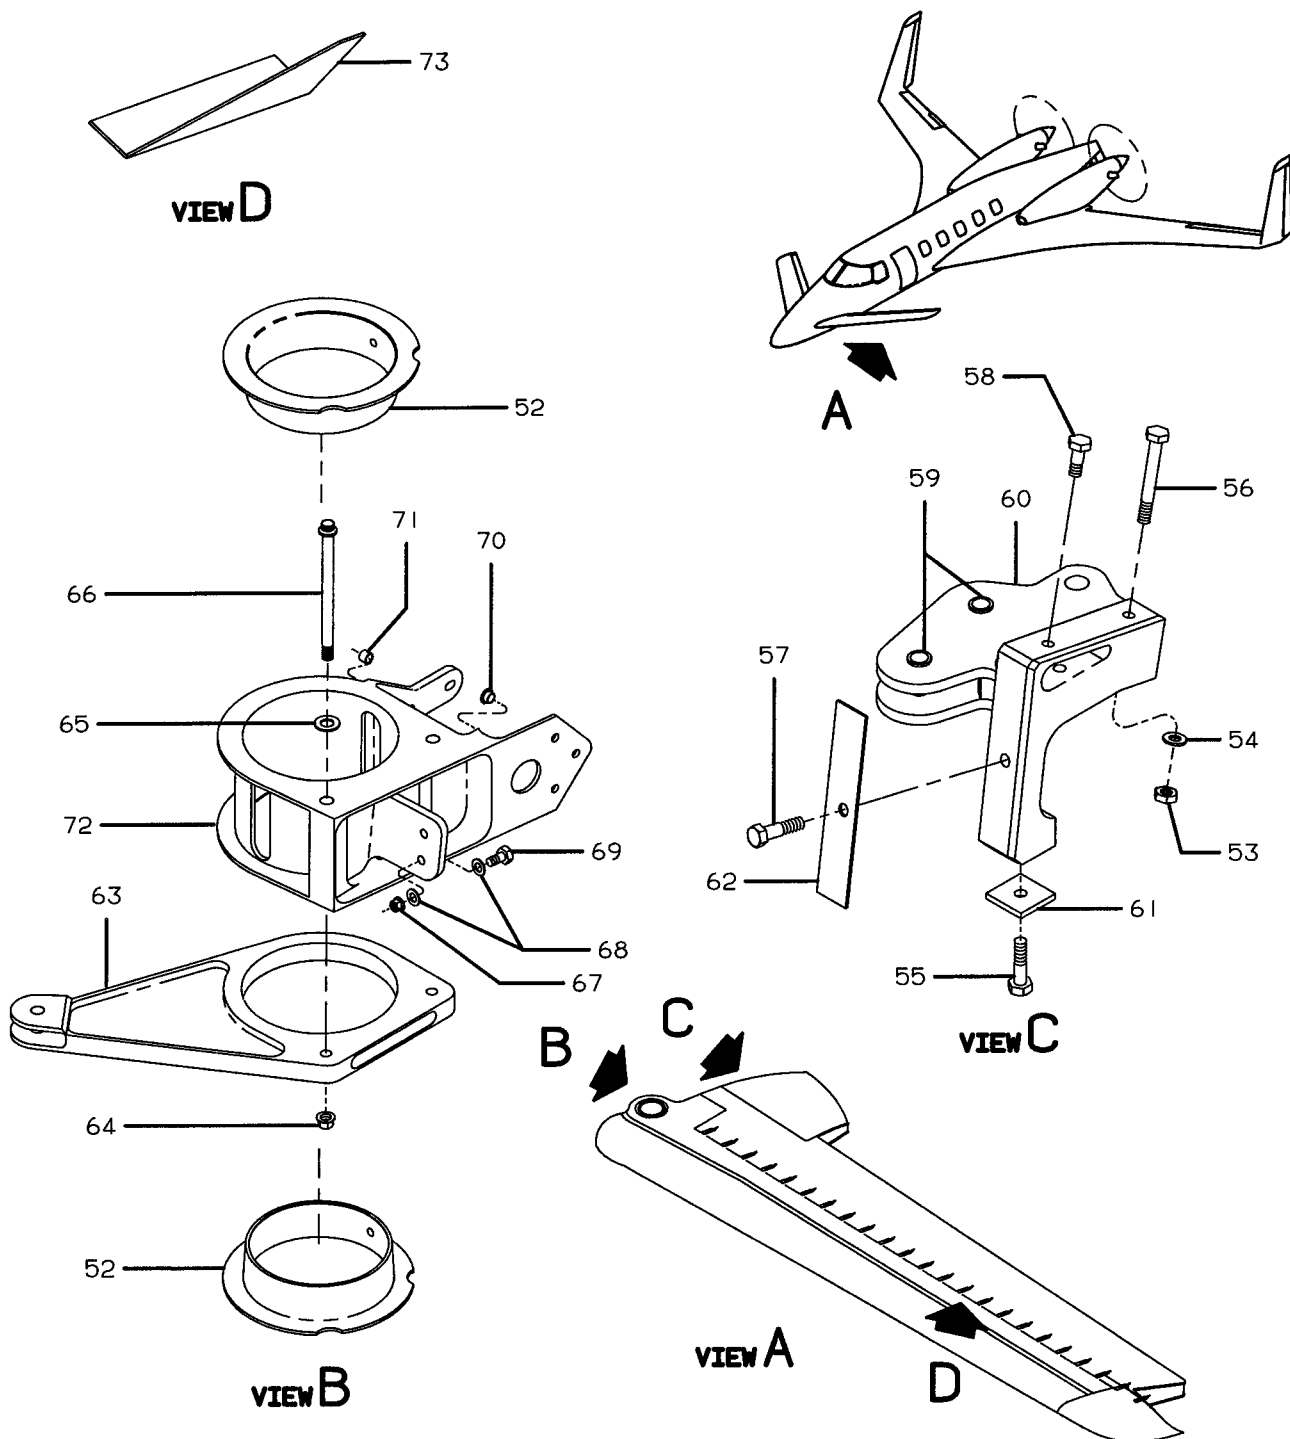


C94NC55A1920 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00 -52	R 122-620152-1	... BUSHING ASSY.....	2	
	R 122-526033-5	... FITTING ASSY, LH FWD WING ACTUATOR.....	1	
	R 122-526033-6	... FITTING ASSY, RH FWD WING ACTUATOR.....	1	
		/ATTACHING PARTS/		
-53	R 130909N32	... NUT.....	4	
-54	R AN960JD416	... WASHER.....	8	
-55	R NAS6204-11	... BOLT.....	1	
-56	R NAS6204-28	... BOLT.....	1	
-57	R 130909B180	... BOLT.....	1	
-58	R 130909B179	... BOLT.....	1	
		★		
-59	R 132007-08C115-10	... BUSHING.....	2	
-60	R 122-526033-7	... FITTING, LH FWD WING ACTUATOR.....	1	
	R 122-526033-8	... FITTING, RH FWD WING ACTUATOR.....	1	
-61	R 122-620121-33	... SHIM.....	5	
-62	R 122-620121-35	... SHIM.....	1	
-63	R 122-620146-1	... FITTING, LH FWD WING CROSSOVER TUBE.....	1	
	R 122-620146-5	... FITTING, RH FWD WING CROSSOVER TUBE.....	1	
		/ATTACHING PARTS/		
-64	R AN310C4	... NUT.....	2	
-65	R AN960C416	... WASHER.....	4	
-66	R NAS6404U102DH	... BOLT.....	2	
		★		
	122-620133-9	... SPACER ASSY, LH FWD WING PIN.....	1	
	122-620133-10	... SPACER ASSY, RH FWD WING PIN.....	1	
		/ATTACHING PARTS/		
-67	R AN310C4	... NUT.....	2	
-68	R AN960C416	... WASHER.....	4	
-69	R NAS1004-10	... BOLT.....	2	
		★		
-70	R 132006-07C20R1 *	9-18 ... BUSHING, FLANGED.....	1	
	MS21075L5N	... NUTPLATE.....	1	
-71	R 132007-07C195-12	... BUSHING.....	1	
-72	R 122-620133-7	... SPACER, LH FWD WING PIN.....	1	
	122-620133-8	... SPACER, RH FWD WING PIN.....	1	
-73	R 122-620121-31	... VORTEX GENERATOR, LH.....	23	
	R 122-620121-32	... VORTEX GENERATOR, RH.....	23	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

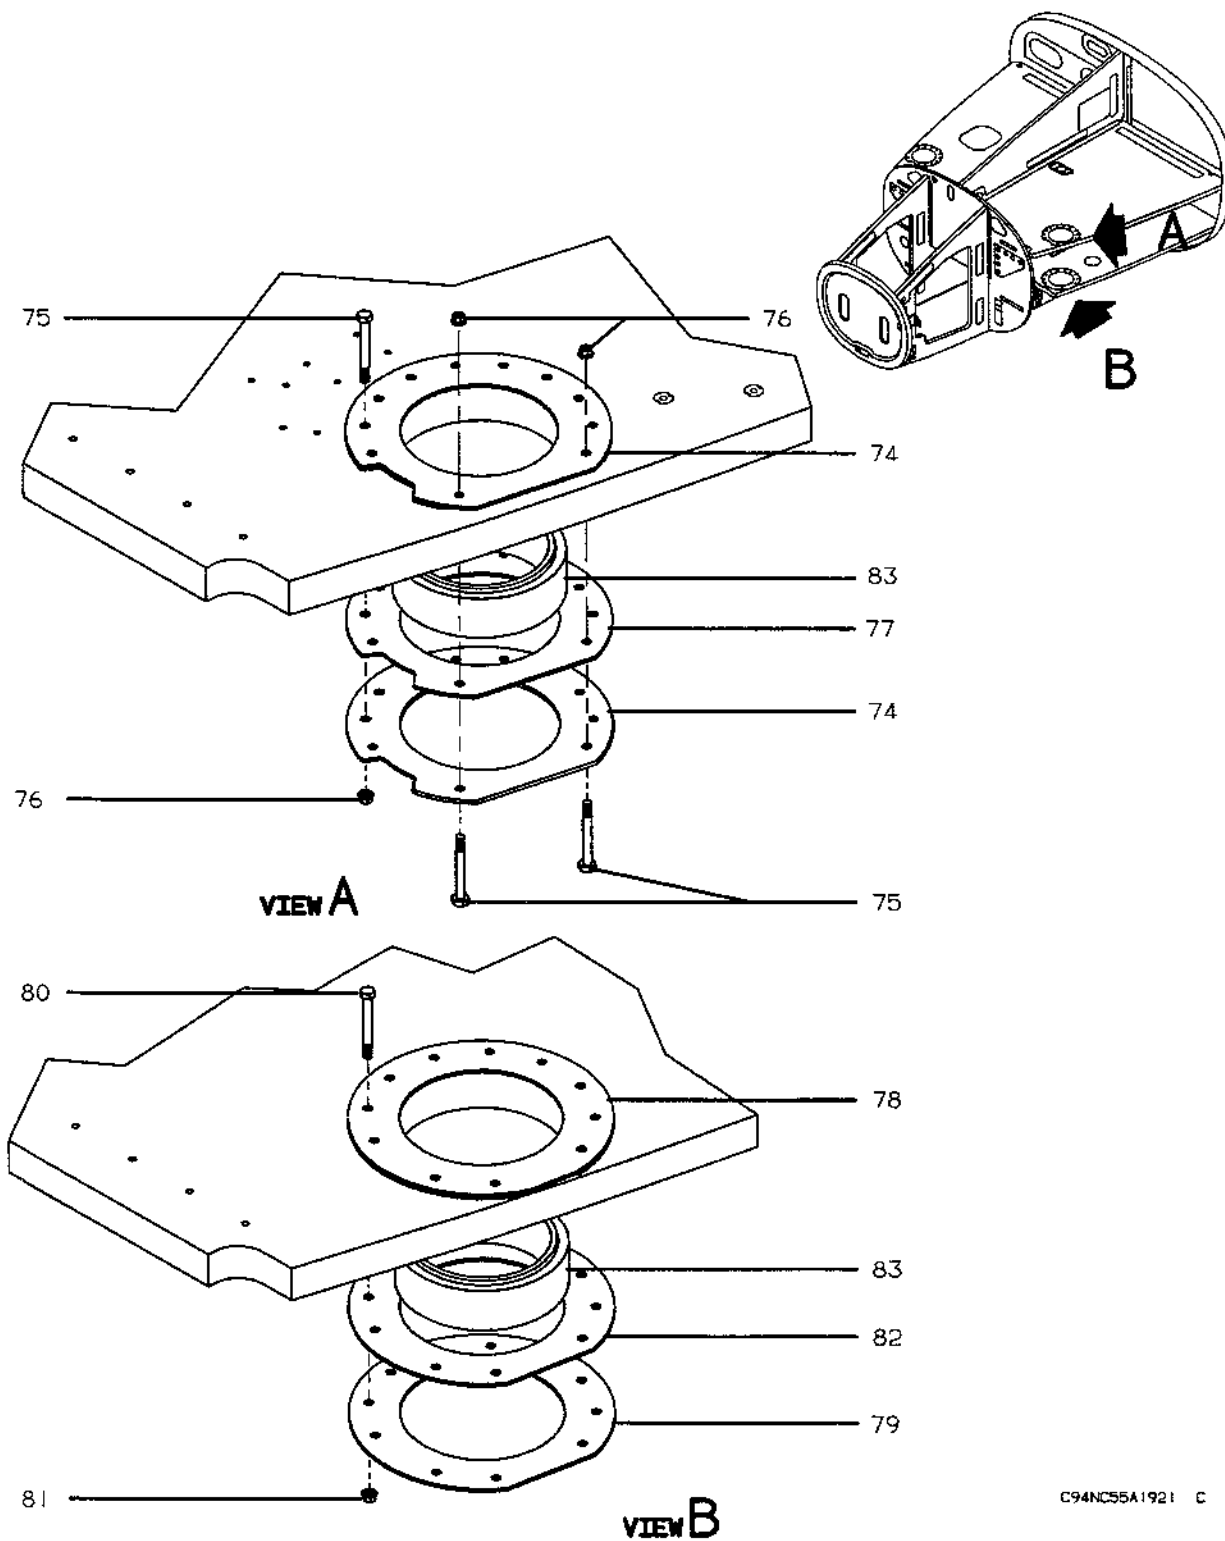

C94NC55A1921 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-410000-1	NOSE ASSY	1	
- 74	R 122-410215-75	. RETAINER/UPR AND LWR, LH AND RH/	4	
		. /ATTACHING PARTS/		
- 75	R NAS654V25H	. BOLT	11	
- 76	R MS21043-4	. NUT	11	
		-----★-----		
- 77	R 122-410715-41	. SHIM/.005 IN. THICK/	AR	
	122-410715-43	. SHIM/.010 IN. THICK/	AR	
	122-410715-45	. SHIM/.030 IN. THICK/	AR	
NOTE SHIM BETWEEN RETAINERS & STRUCTURE WITH ABOVE SHIMS AS REQUIRED. ONE .010 THICK OR THICKER SHIM MUST BE INSTALLED.				
- 78	R 122-410215-79	. RETAINER/UPR, LH AND RH/	2	
- 79	R 122-410215-81	. RETAINER/LWR, LH AND RH/	2	
		. /ATTACHING PARTS/		
- 80	R NAS654V25H	. BOLT	11	
- 81	R MS21043-4	. NUT	11	
		-----★-----		
- 82	R 122-410215-35	. SHIM	2	
- 83	R 122-380041-3	. BEARING, SELF LUBRICATING	4	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-19	2	NC-20 AND AFTER
3	NC-4 THRU NC-26	4	NC-27 AND AFTER
5	NC-4 THRU NC-21	6	NC-22 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

55-20-00
ELEVATOR

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

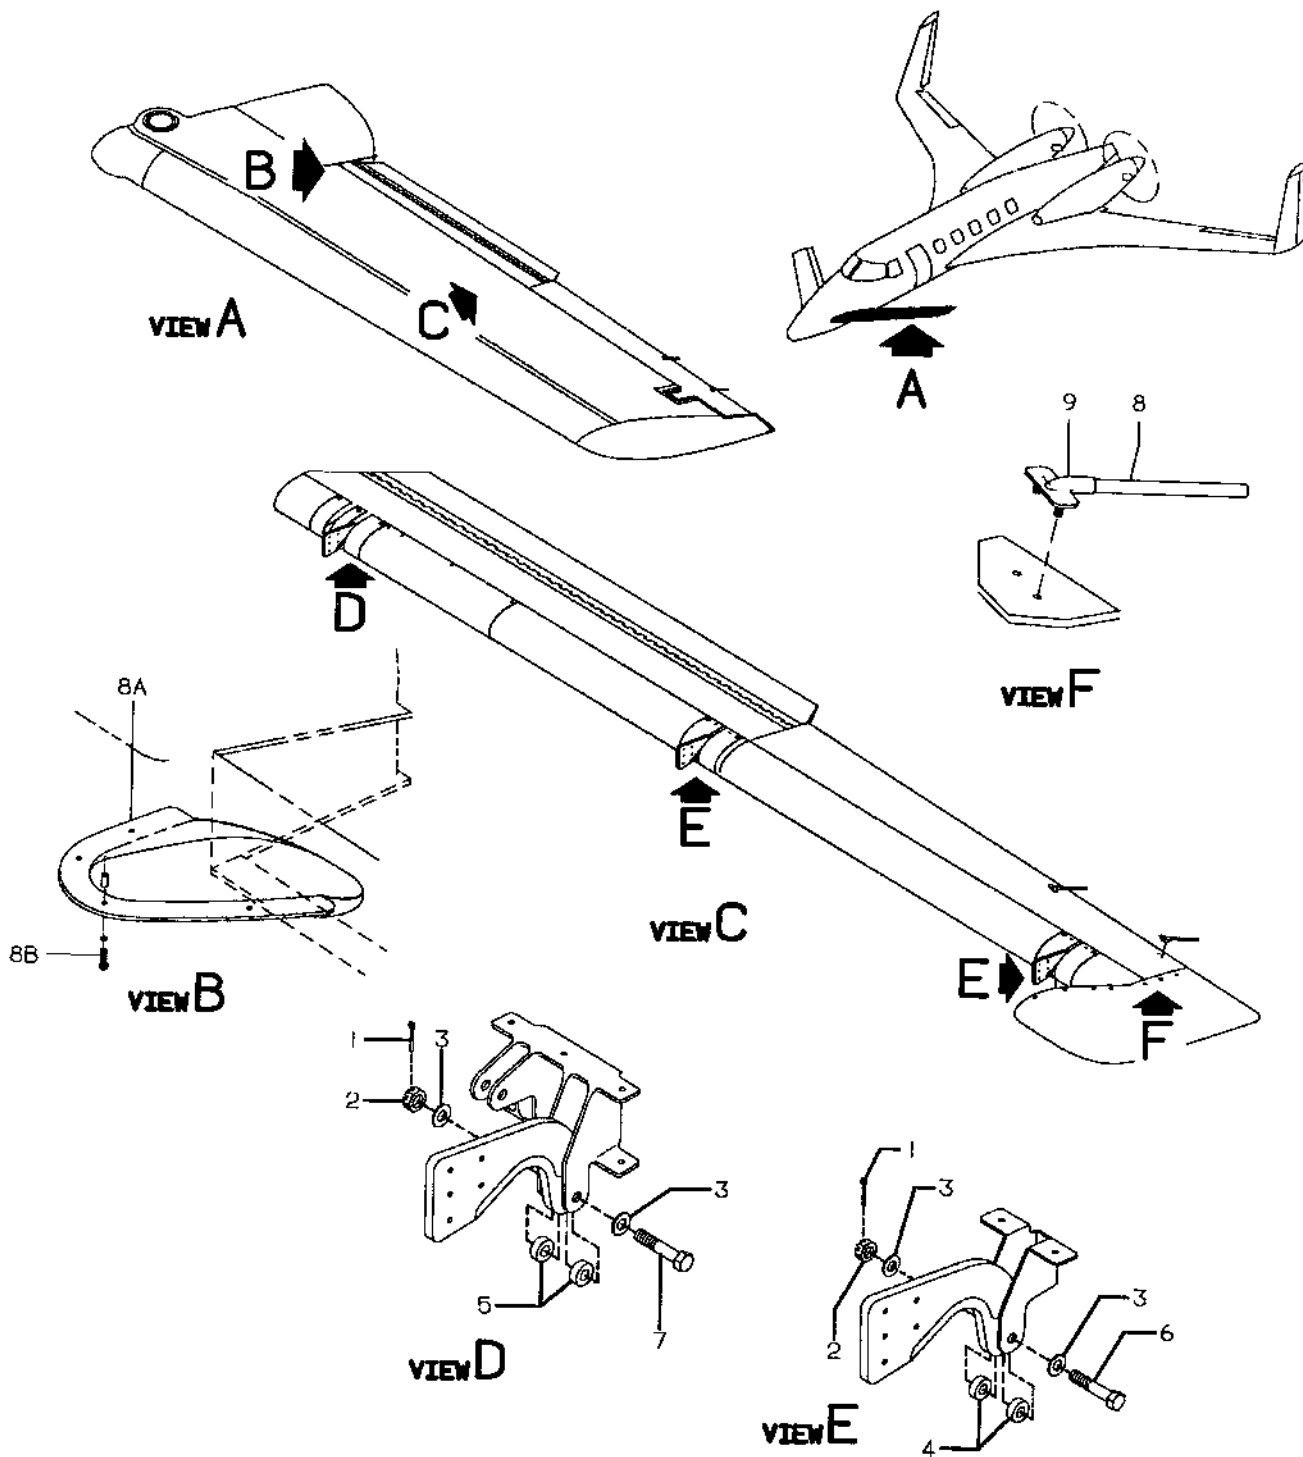


C93NC55A0323 C

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
20-00	122-610000-5		ELEVATOR INSTL, LH	NP	
	122-610000-6		ELEVATOR INSTL, RH	NP	
1	MS24665-153		. PIN, COTTER	3	
2	130909N48		. NUT	3	
3	AN960C416L		. WASHER/CENTER & OUTBD HINGE UNDER NUT/	5	
			/INBD, CTR & OUTBD HINGE UNDER BOLT HEAD/		
	AN960C416		. WASHER/INBD HINGE UNDER NUT/	1	
4	NAS42DD8-12		. SPACER	4	
5	NAS42DD8-7		. SPACER	2	
6	NAS6204-13D		. BOLT	2	
7	NAS6204-15D		. BOLT	1	
8	101-380053-11		. WICK, STATIC/SEE CHAPTER 23/	2	
8A	122-610000-9		. FAIRING ASSY, LH	1	1
	122-610000-13		. FAIRING ASSY, LH	1	2
	122-610000-10		. FAIRING ASSY, RH	1	1
	122-610000-14		. FAIRING ASSY, RH	1	2
			(ATTACHING PARTS)		
8B	AN525-832R9		. SCREW	4	3
	FIT7090-08-8-7		. SCREW	4	4
			/ORDER CA2229-08-7-8 FOR SPARES/		
	D79661A8		. WASHER	4	
	CA21062-08R		. RETAINER	4	
	CA2210-08R		. RETAINER	4	
	MS21071L08		. NUTPLATE	4	
			----- ★ -----		
	122-610011-53		. ELEVATOR ASSY, LH/ORDER 122-610011-71 FOR	NP	5
			SPARES/		
	122-610011-73		. ELEVATOR ASSY, LH/ORDER 122-610011-71 FOR	NP	6
			SPARES/		
	122-610011-71		. ELEVATOR ASSY, LH	1	7
	122-610011-54		. ELEVATOR ASSY, RH/ORDER 122-610011-72 FOR	NP	5
			SPARES/		
	122-610011-74		. ELEVATOR ASSY, RH/ORDER 122-610011-72 FOR	NP	6
			SPARES/		
	122-610011-72		. ELEVATOR ASSY, RH	1	7
9	122-610011-69		. . BASE ASSY, LH DISCHARGER	2	
	122-610011-70		. . BASE ASSY, RH DISCHARGER	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

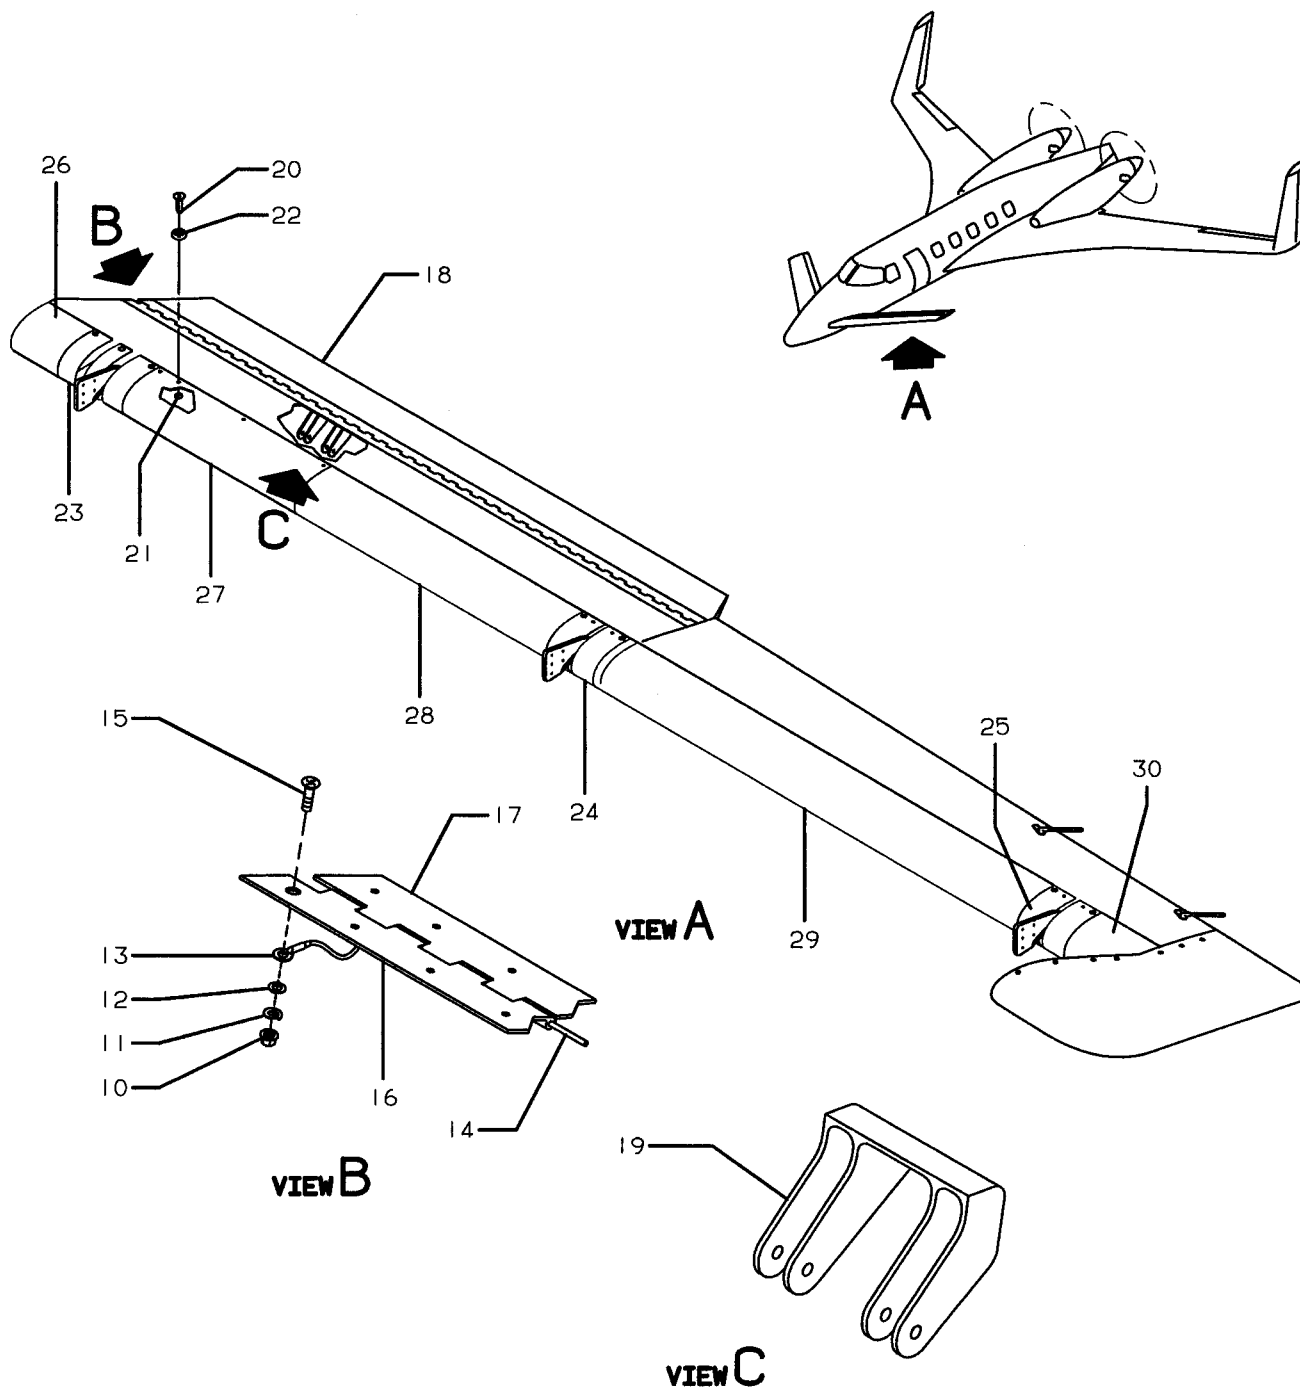


C95NC55A0035 C

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT	UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
20-00	10	MS21043-08	..	NUT	1	
	11	MS35338-42	..	WASHER, LOCK	1	
	12	AN960C8	..	WASHER	1	
	13	MS25083-2AB2	..	JUMPER, BONDING	1	
	14	122-610011-51	..	PIN, ELEVATOR TAB HINGE	1	
	15	MS24694C2	..	SCREW	1	
	16	122-610011-47	..	HINGE HALF, LH ELEVATOR	1	
		122-610011-48	..	HINGE HALF, RH ELEVATOR	1	
	17	122-610011-49	..	HINGE HALF, LH ELEVATOR TAB	1	
		122-610011-50	..	HINGE HALF, RH ELEVATOR TAB	1	
		122-130044-97	..	WASHER/UNDER RIVET BUTT/	32	
NOTE						
27 ON TAB SIDE OF HINGE & 2 INBD, 3 OUTBD ON ELEVATOR SIDE OF HINGE						
	18	122-610014-35	..	TAB ASSY, LH ELEVATOR	1	
		122-610014-36	..	TAB ASSY, RH ELEVATOR	1	
	19	122-610014-15	..	FITTING	1	
	20	FIT7090-08-10-7	..	SCREW/ALTERNATE FOR CA21063-08-7-10/ /ORDER CA2229-08-7-10 FOR SPARES/	21	9
		FIT7090-08-12-7	..	SCREW/ALTERNATE FOR CA21063-08-7-12/ /ORDER CA2229-08-7-12 FOR SPARES/	2	10
		FIT7090-08-10-7	..	SCREW/ALTERNATE FOR CA21063-08-7-10/ /ORDER CA2229-08-7-10 FOR SPARES/	19	10
		CA21063-08-7-10	..	SCREW/ALTERNATE FOR FIT7090-08-10-7/ /ORDER CA2229-08-7-10 FOR SPARES/	21	9
		CA21063-08-7-12	..	SCREW/ALTERNATE FOR FIT7090-08-12-7/ /ORDER CA2229-08-7-12 FOR SPARES/	2	10
		CA21063-08-7-10	..	SCREW/ALTERNATE FOR FIT7090-08-10-7/ /ORDER CA2229-08-7-10 FOR SPARES/	19	10
		CA21063-08-7-10	..	SCREW	AR	
		CA21063-08-7-12	..	SCREW	AR	
	21	CA21062-08R	..	RETAINER	21	
		CA2210-08R	..	RETAINER	21	
		D79661A8	..	WASHER	21	
	22	131910-XXXX-080	..	SHIM/BETWEEN FITTING AND UPPER & LOWER FLANGE OF SPAR/	AR	10
	23	122-610040-25	..	COVER, INBD HINGE	1	
		122-610040-26	..	COVER, INBD HINGE	1	
	24	122-610040-13	..	COVER, CENTER HINGE	2	
	25	122-610040-15	..	COVER, OUTBD HINGE	2	
	26	122-610011-7	..	COVER ASSY, LH LEADING EDGE	1	
		122-610011-8	..	COVER ASSY, RH LEADING EDGE	1	
	27	122-610040-19	..	COVER ASSY, LH LEADING EDGE	1	
		122-610040-20	..	COVER ASSY, RH LEADING EDGE	1	
	28	122-610011-59	..	LEADING EDGE ASSY, LH	1	
		122-610011-60	..	LEADING EDGE ASSY, RH	1	
	29	122-610011-61	..	LEADING EDGE ASSY, LH	1	
		122-610011-62	..	LEADING EDGE ASSY, RH	1	
	30	122-610011-63	..	LEADING EDGE ASSY, LH	1	
		122-610011-64	..	LEADING EDGE ASSY, RH	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

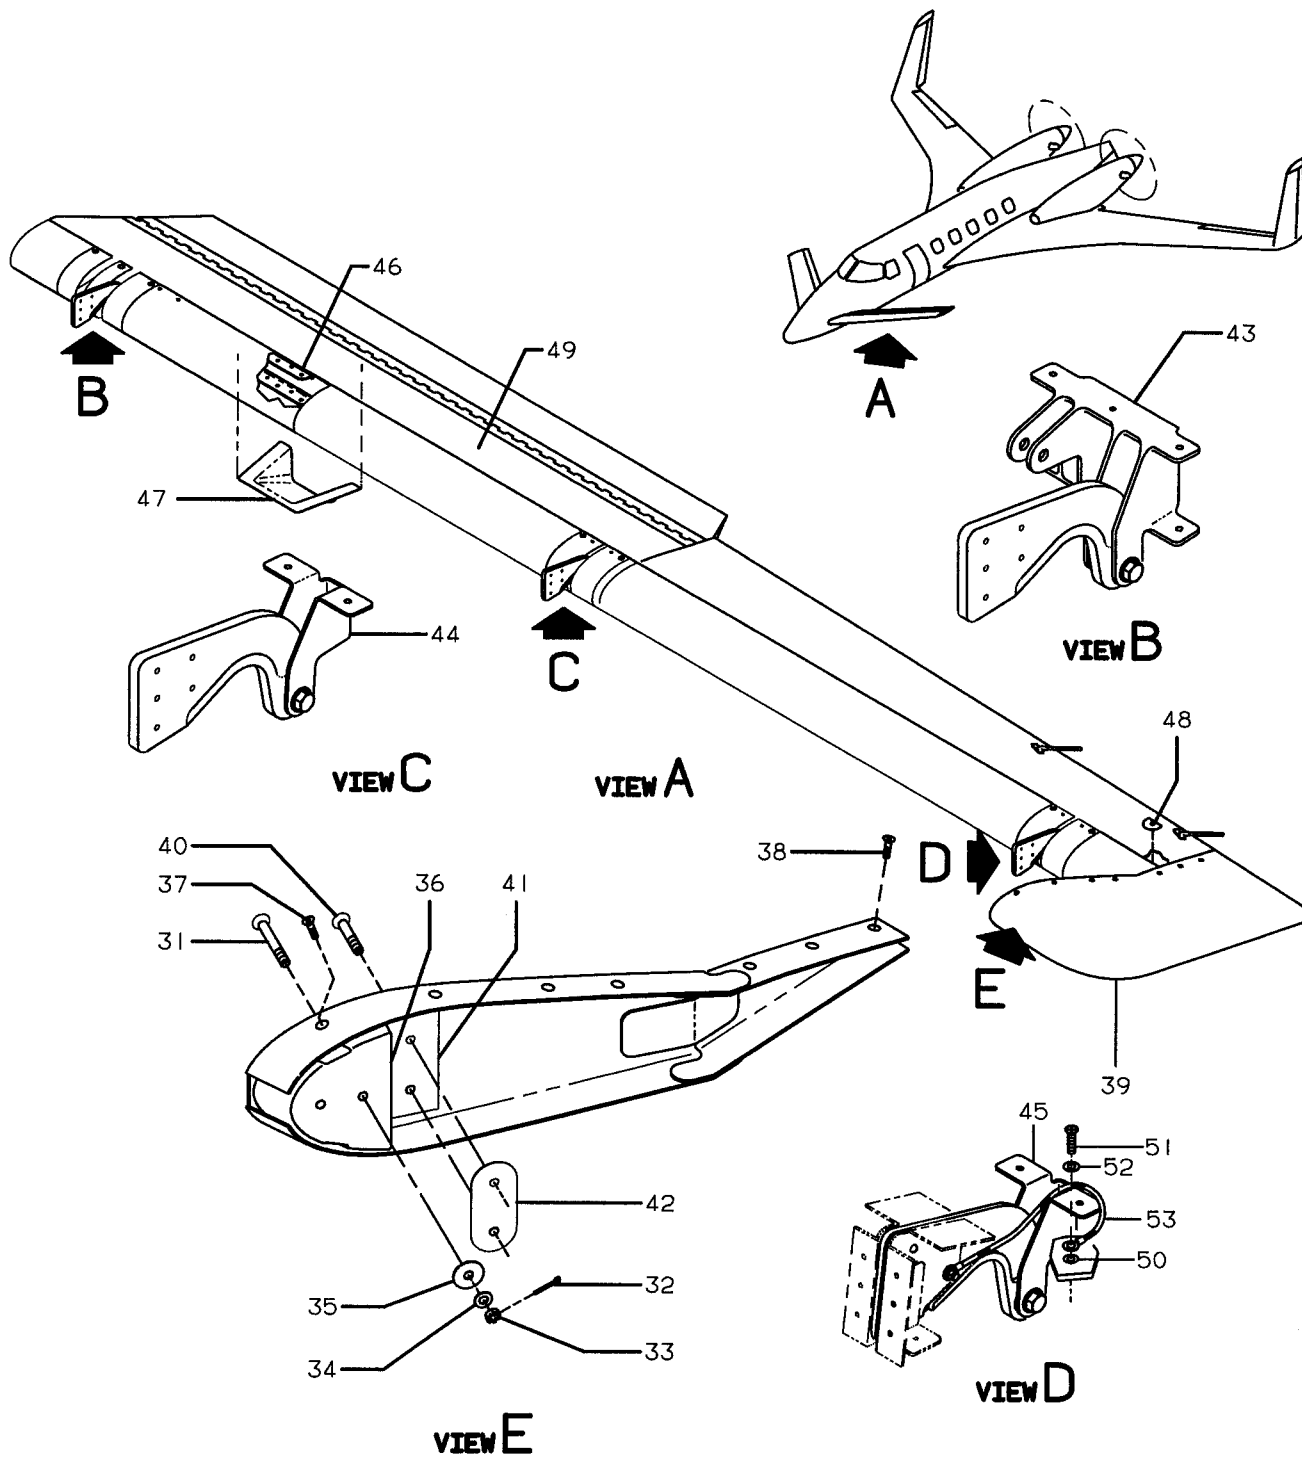

C95NC55A0036 C

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
20-00	122-610057-1	..	TIP INSTL, LH FWD WING	NP	8
	122-610057-55	..	TIP INSTL, LH FWD WING	NP	11
	122-610057-63	..	TIP INSTL, LH FWD WING	NP	12
	122-610057-2	..	TIP INSTL, RH FWD WING	NP	8
	122-610057-56	..	TIP INSTL, RH FWD WING	NP	11
	122-610057-64	..	TIP INSTL, RH FWD WING	NP	12
31	122-610057-29	...	SCREW	2	
32	MS24665-132	...	PIN, COTTER	2	
33	130909N45	...	NUT	2	
34	AN960-10L	...	WASHER	2	
35	105090PD050-3F	...	WASHER	2	
36	122-610057-25	...	WEIGHT, COUNTER BALANCE	1	8
	122-610057-57	...	WEIGHT, COUNTER BALANCE	1	7
	122-610057-59	...	WEIGHT, COUNTER BALANCE	1	7
37	AN525-10R7	...	SCREW	8	
38	AN525-10R8	...	SCREW	6	
39	122-610057-3	...	FAIRING ASSY, LH	1	15
	122-610057-4	...	FAIRING ASSY, RH	1	15
	122-610057-65	...	FAIRING ASSY, LH	1	12
	122-610057-66	...	FAIRING ASSY, RH	1	12
	MS21070L3	...	NUTPLATE	10	
	MS21087L3	...	NUTPLATE	4	
40	122-610057-31	...	SCREW	2	
41	122-610057-27	..	WEIGHT, TRIM/12 MAXIMUM/	AR	
42	122-610057-33	..	PLATE ASSY, TRIM WEIGHT	1	
	MS21069L3	...	NUTPLATE	2	
43	122-610042-3	..	FITTING, INBD HINGE	1	
	122-610042-4	..	FITTING, INBD HINGE	1	
44	122-610043-1	..	HINGE, CENTER	1	
	122-610043-2	..	HINGE, CENTER	1	
45	122-610043-3	..	HINGE, OUTBD	1	
	122-610043-4	..	HINGE, OUTBD	1	
	131910-XXXX-080	..	SHIM/BETWEEN HINGE AND UPPER & LOWER	AR	
			FLANGE OF SPAR/		
46	122-610011-43	..	BRACKET, TRIM TAB ACTUATOR MOUNTING	1	
47	122-610011-45	..	FAIRING, TRIM TAB ACTUATOR	1	
48	S43	..	GROMMET, DRAIN HOLE	6	
49	122-610011-55	..	BOND ASSY, LH	1	
	122-610011-56	..	BOND ASSY, RH	1	
50	CA21062-08R	..	RETAINER	1	
			/ORDER CA2210-08R FOR SPARES/		
	CA2210-08R	..	RETAINER	1	
51	FIT7090-08-10-7	..	SCREW/ALTERNATE FOR CA21063-08-7-10/	1	
			/ORDER CA2229-08-7-10 FOR SPARES/		
	CA21063-08-7-10	..	SCREW/ALTERNATE FOR FIT7090-08-10-7/	1	
			/ORDER CA2229-08-7-10 FOR SPARES/		
	CA2229-08-7-10	..	SCREW	1	
52	D79661A8	..	WASHER	1	
	NAS1919M04S2	...	NUTPLATE	2	
53	MS25083-2AB5	...	JUMPER, BONDING	1	14
	MS25083-3SA	...	JUMPER, BONDING	1	13
	MS25083-3PB2	...	JUMPER, BONDING	1	13

CODES OF EFFECTIVITY



1 NC-4 ONLY	2 NC-5 AND AFTER
3 NC-4 THRU NC-26	4 NC-27 AND AFTER
5 NC-4 THRU NC-19	6 NC-20 THRU NC-23
7 NC-24 AND AFTER	8 NC-4 THRU NC-23
9 NC-4 THRU NC-37	10 NC-38 AND AFTER
11 NC-24 THRU NC-28	12 NC-29 AND AFTER
13 NC-4 THRU NC-18	14 NC-19 AND AFTER
15 NC-4 THRU NC-28	

— END —

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

55-30-00
TIPSAIL

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

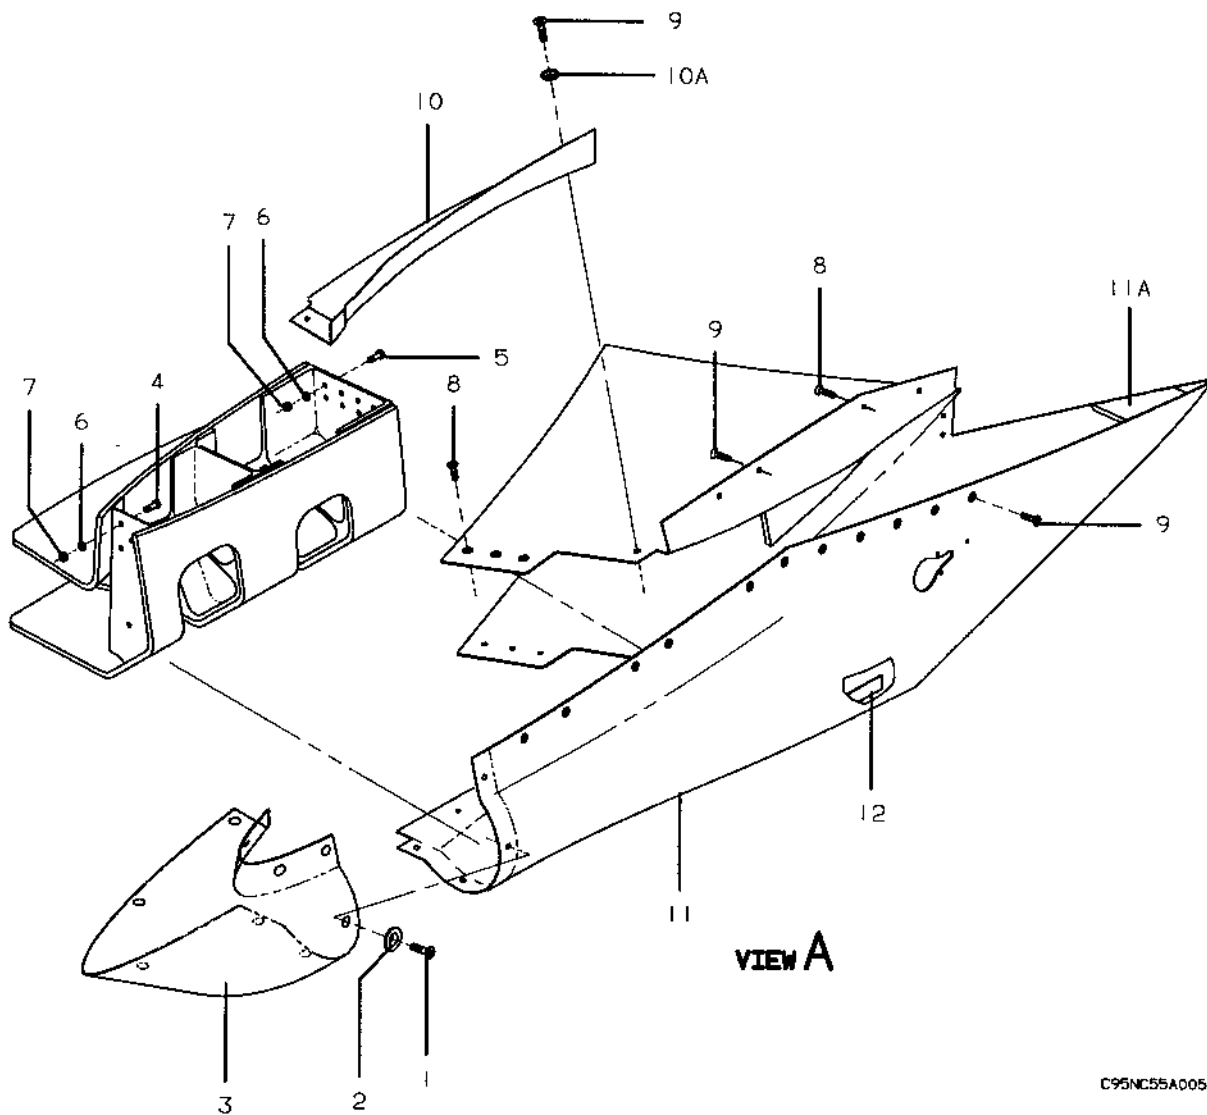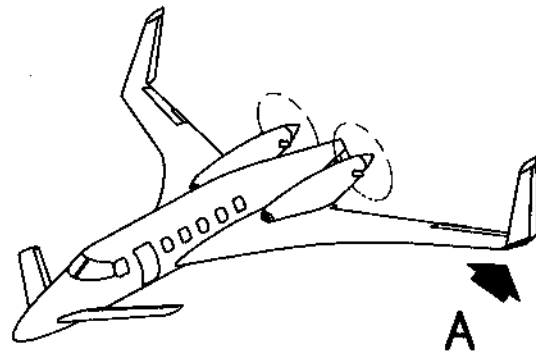


C95NC55A0057 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00	122-640001-1	TIPSAIL INSTL, LH WING	NP	
	122-640001-2	TIPSAIL INSTL, RH WING	NP	
- 1	R MS24693C272	. SCREW	9	1
	AN525-10R8	. SCREW	11	2
- 2	R NAS1169DD10L	. WASHER	9	1
	NAS1169DD10L	. WASHER	11	2
	R MS21062L3	. NUTPLATE	1	
	MS21076L3	. NUTPLATE	6	
- 3	122-640045-3	. LENS, LH	1	1
	122-640045-5	. LENS, LH	1	3
	122-640045-9	. LENS, LH/ORDER 122-640045-11 FOR SPARES/	NP	4
	122-640045-11	. LENS, LH	1	5
	122-640045-4	. LENS, RH	1	1
	122-640045-6	. LENS, RH	1	3
	122-640045-10	. LENS, RH/ORDER 122-640045-12 FOR SPARES/	NP	4
	122-640045-12	. LENS, RH	1	5
- 4	HL10V6-3	. PIN	4	
- 5	HL10V6-4	. PIN	8	
- 6	AN960C10L	. WASHER	12	
- 7	HL379V8	. COLLAR	12	
	122-640015-1	. FAIRING INSTL, LH	NP	
	122-640015-2	. FAIRING INSTL, RH	NP	
- 8	R NAS8803-1	. BOLT	7	
	SL607-3-6CM	. INSERT	7	
- 9	R NAS8703U2	. BOLT	21	
	MS21072L3	. NUTPLATE	2	
	MS21062L3	. NUTPLATE	2	
- 10	122-640015-19	. FAIRING ASSY, LH	1	
	122-640015-20	. FAIRING ASSY, RH	1	
- 10A	R 122-640015-23	. WASHER	1	
	R MS21060L3	. NUTPLATE	16	
- 11	122-640015-25	. FAIRING ASSY, LH	1	
	122-640015-26	. FAIRING ASSY, RH	1	
	MS21047L06	. NUTPLATE	1	
	MS21051L06	. NUTPLATE	2	
	MS21060L3	. NUTPLATE	3	
	MS21062L3	. NUTPLATE	2	
- 11A	R 122-640015-9	. RIB, LH	1	
	R 122-640015-10	. RIB, RH	1	
	MS21062L3	. NUTPLATE	2	
- 12	122-640015-33	. SHELF ASSY, LH STROBE LIGHT POWER SUPPLY	1	
	122-640015-34	. SHELF ASSY, RH STROBE LIGHT POWER SUPPLY	1	
	MS21060L08	. NUTPLATE	4	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

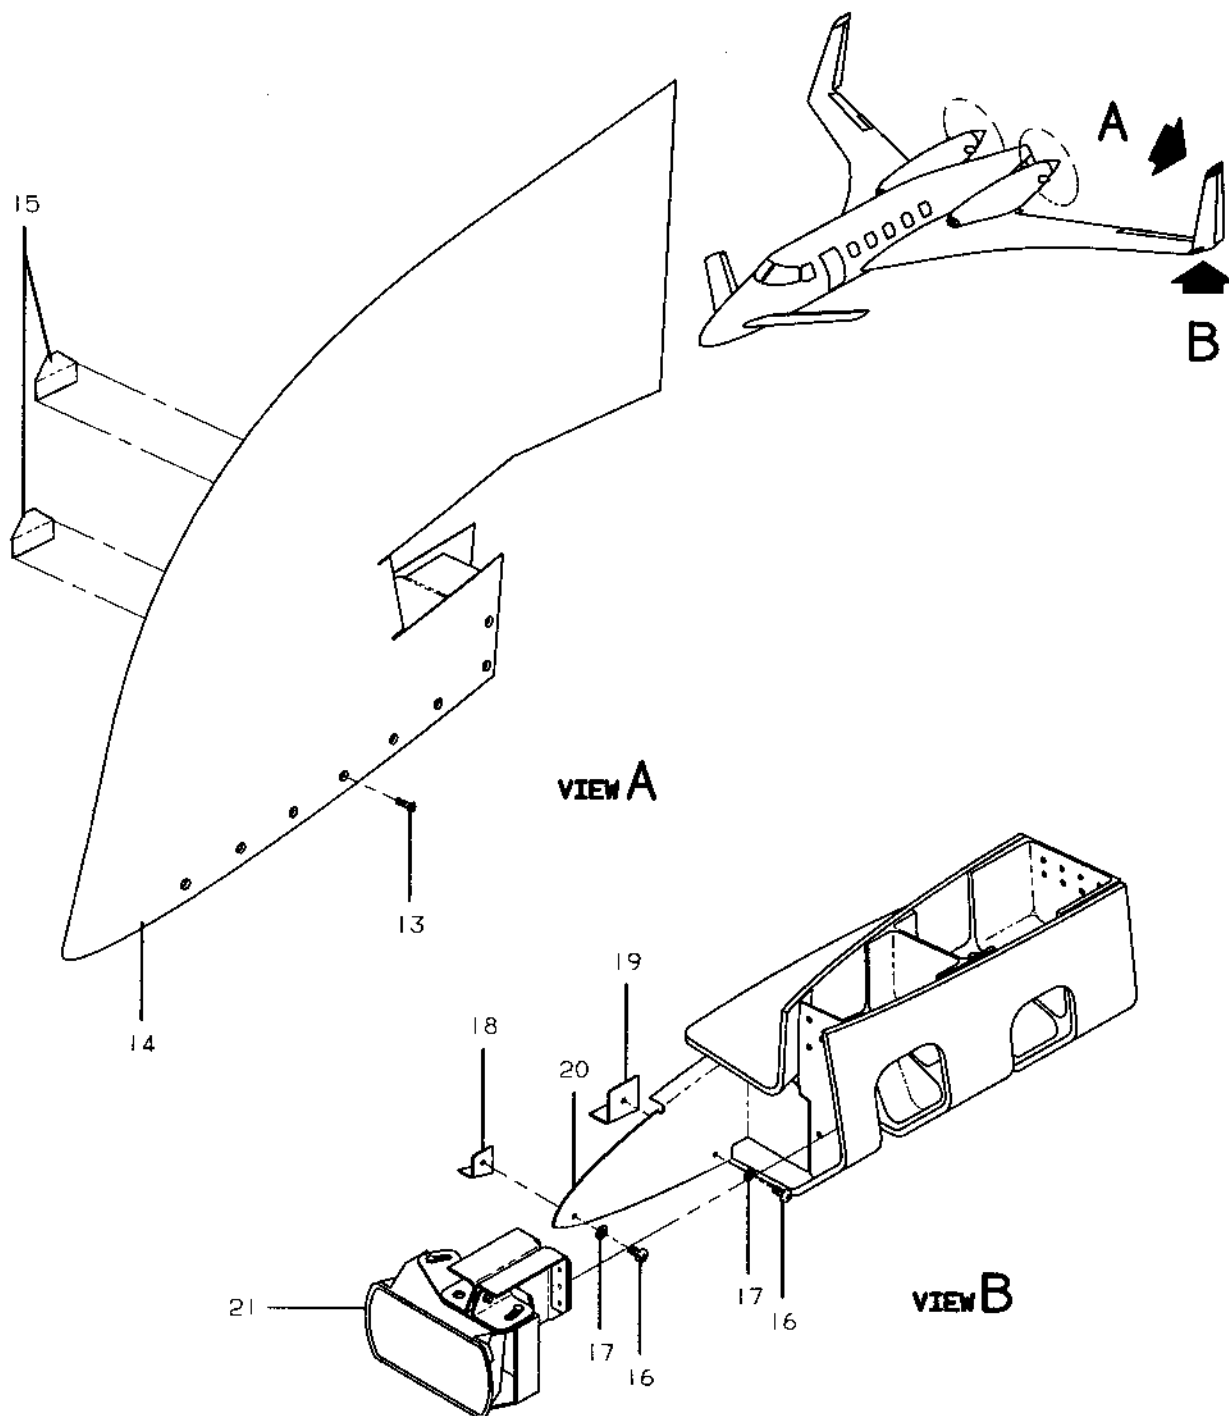


C95NC55A0058 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00	122-640037-3	. TIP INSTL, LH	NP	
	122-640037-4	. TIP INSTL, RH	NP	
- 13	MS24694C50	. . SCREW	16	
- 14	122-640053-1	. . TIP ASSY, LH VERTICAL STABILIZER	NP	6
		/ORDER 122-640053-15 FOR SPARES/		
	122-640053-15	. . TIP ASSY, LH VERTICAL STABILIZER	1	7
	122-640053-2	. . TIP ASSY, RH VERTICAL STABILIZER	NP	6
		/ORDER 122-640053-16 FOR SPARES/		
	122-640053-16	. . TIP ASSY, RH VERTICAL STABILIZER	1	7
- 15	122-620121-31	. . . GENERATOR, LH VORTEX/INBD SIDE/	2	
	122-620121-32	. . . GENERATOR, RH VORTEX/INBD SIDE/	2	
	122-361067-1	. PANEL INSTL, LH WING LEADING EDGE CLOSEOUT	NP	
	122-361067-2	. PANEL INSTL, RH WING LEADING EDGE CLOSEOUT	NP	
- 16	MS35206-242	. . SCREW	2	
- 17	AN960-8L	. . WASHER	2	
	122-361067-5	. . PANEL ASSY, LH	1	
	122-361067-6	. . PANEL ASSY, RH	1	
- 18	122-361067-11	. . . CLIP ASSY, LH	1	
	R MS21069L08	. . . NUTPLATE	1	
	122-361067-12	. . . CLIP ASSY, RH	1	
	MS21069L08	. . . NUTPLATE	1	
- 19	122-361067-9	. . . CLIP ASSY, LH	1	
	R MS21069L08	. . . NUTPLATE	1	
	122-361067-10	. . . CLIP ASSY, RH	1	
	R MS21069L08	. . . NUTPLATE	1	
- 20	122-361067-17	. . . PANEL, LH	1	
	122-361067-18	. . . PANEL, RH	1	
- 21	122-364210-1	. LIGHT INSTL, LH LANDING/SEE CHAPTER 33/	NP	
	122-364210-2	. LIGHT INSTL, RH LANDING/SEE CHAPTER 33/	NP	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

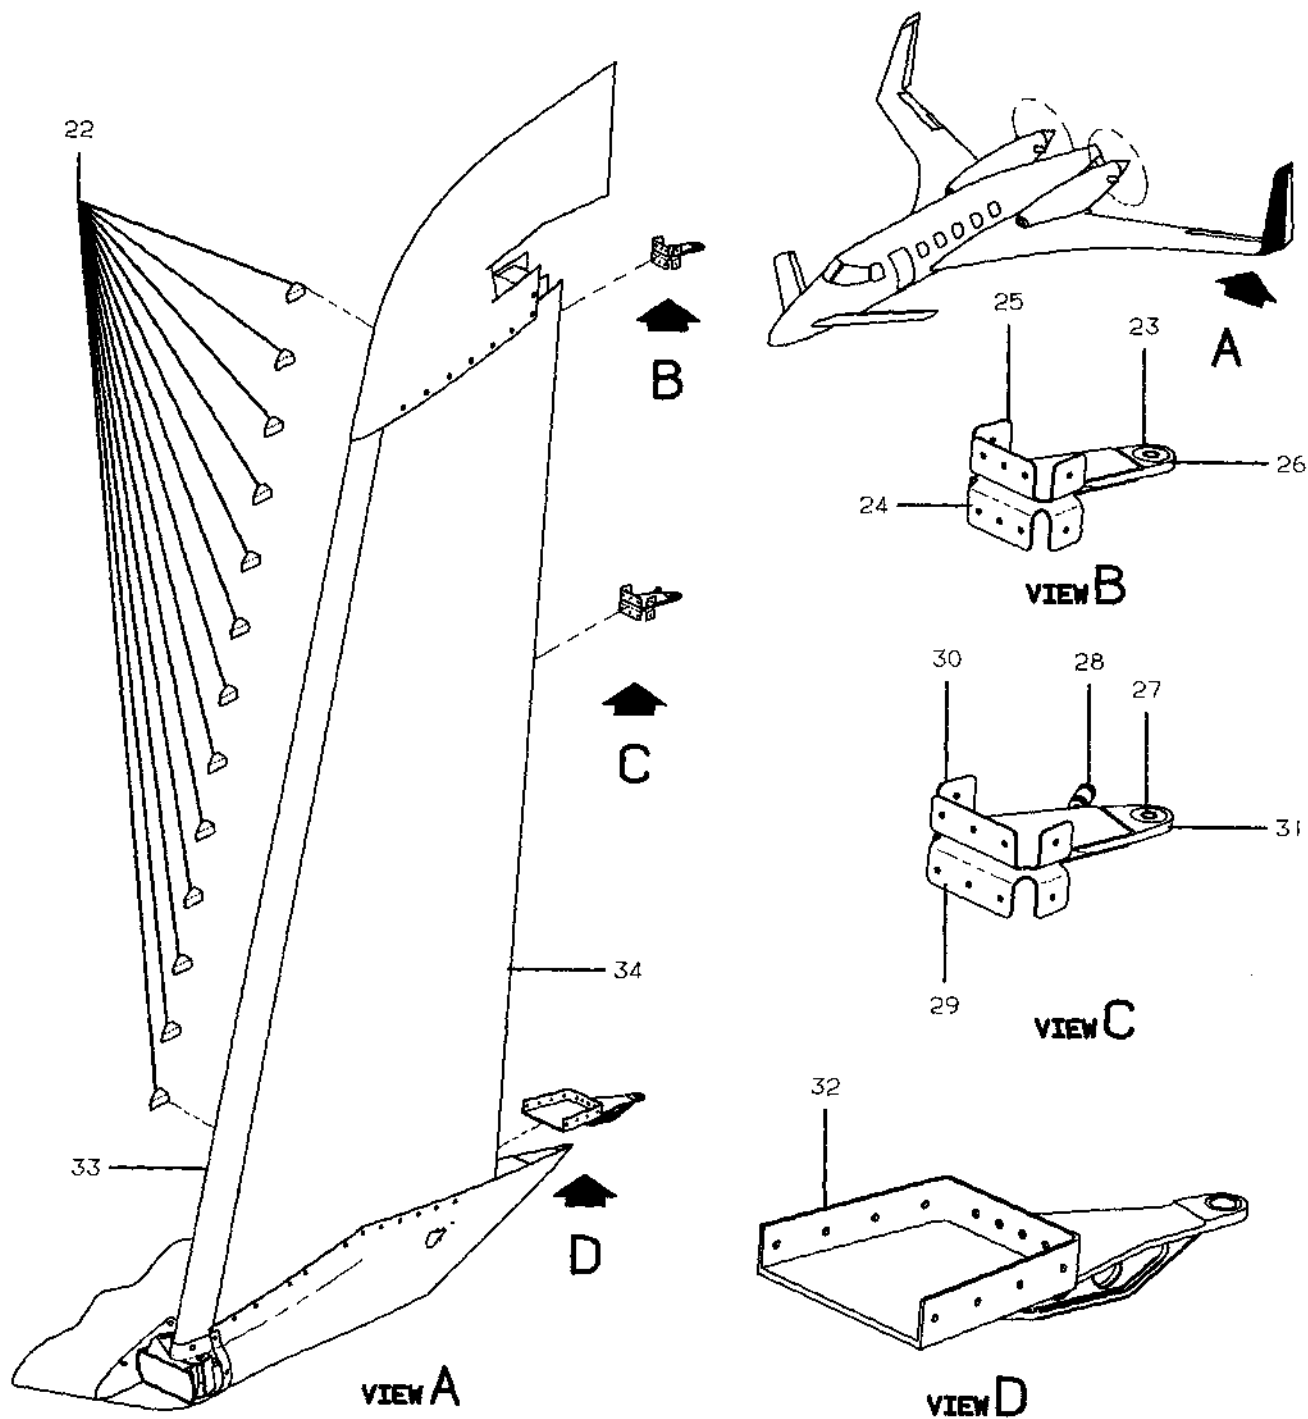

C95NC55A0059 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00	122-640002-1	. STABILIZER ASSY, LH VERTICAL	1	
	122-640002-2	. STABILIZER ASSY, RH VERTICAL	1	
	MS21060L3	. . NUTPLATE	12	
- 22	122-620121-31	. . GENERATOR, LH VORTEX	13	
	122-620121-32	. . GENERATOR, RH VORTEX	13	
	122-640022-45	. . SUPPORT ASSY, HINGE	1	
- 23 R	MS27645-4A	. . BEARING	1	
- 24	122-640022-47	. . SUPPORT	1	
- 25	122-640022-48	. . SUPPORT	1	
- 26	122-640022-49	. . BLADE	1	
	122-640022-51	. . SUPPORT ASSY, HINGE	1	
- 27 R	MS27645-4A	. . BEARING	1	
- 28	MS25083-3SA	. . JUMPER, BONDING	1	
	AN960JD4	. . WASHER/BETWEEN CABLE BRACKET AND BETWEEN RIVET BUTT AND CABLE/	2	
- 29	122-640022-53	. . SUPPORT	1	
- 30	122-640022-54	. . SUPPORT	1	
- 31	122-640022-55	. . BLADE	1	
- 32	122-640013-7	. . HINGE ASSY, LH	1	
	122-640013-8	. . HINGE ASSY, RH	1	
- 33	122-640026-3	. . LEADING EDGE, LH	1	8
	122-640019-1	. . LEADING EDGE, LH	1	9
	122-640026-4	. . LEADING EDGE, RH	1	8
	122-640019-2	. . LEADING EDGE, RH	1	9
- 34	122-640003-1	. . BOND ASSY, LH	1	
	122-640003-2	. . BOND ASSY, RH	1	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-12	2	NC-13 AND AFTER
3	NC-13 THRU NC-18	4	NC-19 THRU NC-21
5	NC-22 AND AFTER	6	NC-4 THRU NC-43
7	NC-44 AND AFTER	8	NC-4 THRU NC-8
9	NC-9 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

55-40-00
TIPSAIL RUDDER


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

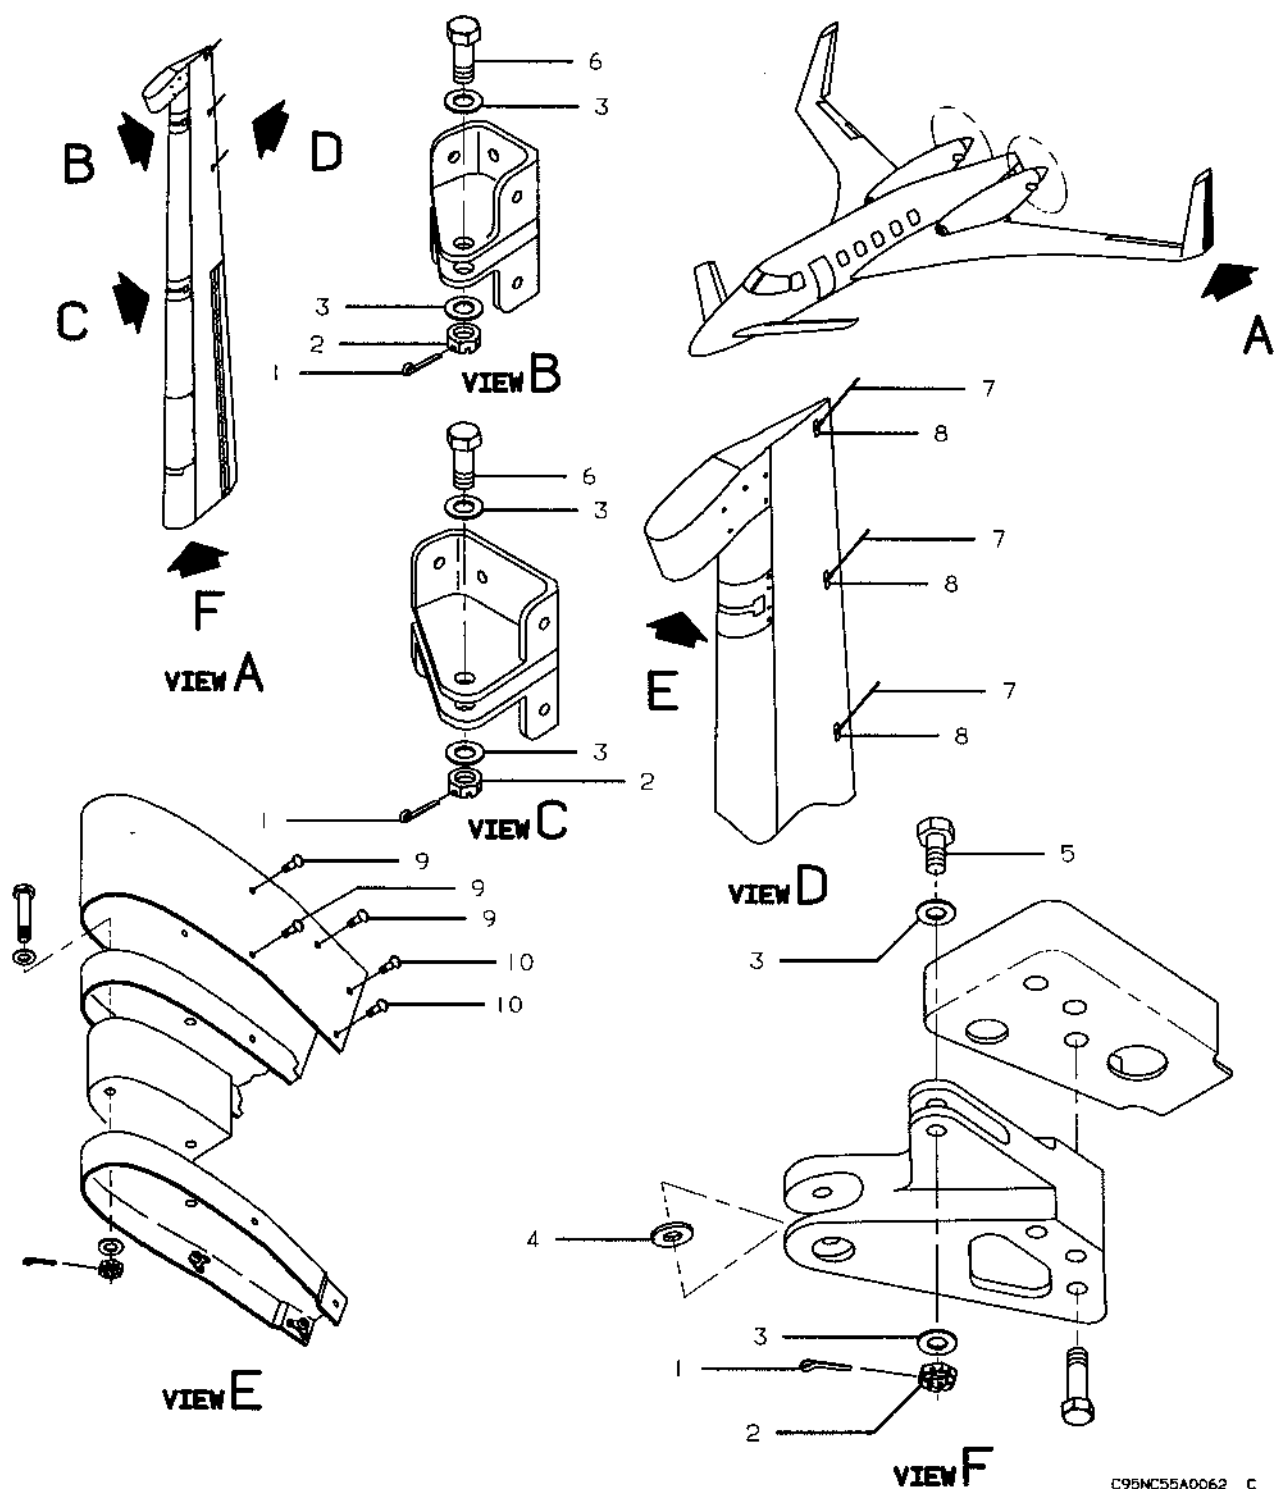

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00	122-630000-3	RUDDER INSTL, LH TIPSAIL	NP	
	122-630000-4	RUDDER INSTL, RH TIPSAIL	NP	
- 1	MS24665-153	. PIN, COTTER	3	
- 2	R 130809N48	. NUT	3	
- 3	AN960C416L	. WASHER	6	
- 4	AN960D416L	. WASHER/BETWEEN BEARING AND RUDDER BRACKET/	1	
- 5	NAS6204-10D	. BOLT	1	
- 6	NAS6204-9D	. BOLT	2	
- 7	101-380053-11	. WICK, STATIC	3	
	122-630042-127	. RUDDER ASSY, LH/ORDER 122-630042-139 FOR	NP	1
		SPARES/		
	122-630042-149	. RUDDER ASSY, LH/ORDER 122-630042-139 FOR	NP	2
		SPARES/		
	122-630042-139	. RUDDER ASSY, LH	1	3
	122-630042-128	. RUDDER ASSY, RH/ORDER 122-630042-140 FOR	NP	1
		SPARES/		
	122-630042-150	. RUDDER ASSY, RH/ORDER 122-630042-140 FOR	NP	2
		SPARES/		
	122-630042-140	. RUDDER ASSY, RH	1	3
- 8	122-610011-69	. . BASE, LH DISCHARGER	3	
	122-610011-70	. . BASE, RH DISCHARGER	3	
- 9	AN525-832R7	. . SCREW/3 INBD AND 3 OUTBD/	6	
- 10	R AN525-832R9	. . SCREW/2 INBD AND 2 OUTBD/	4	
	R MS21087L08	. . NUTPLATE	10	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

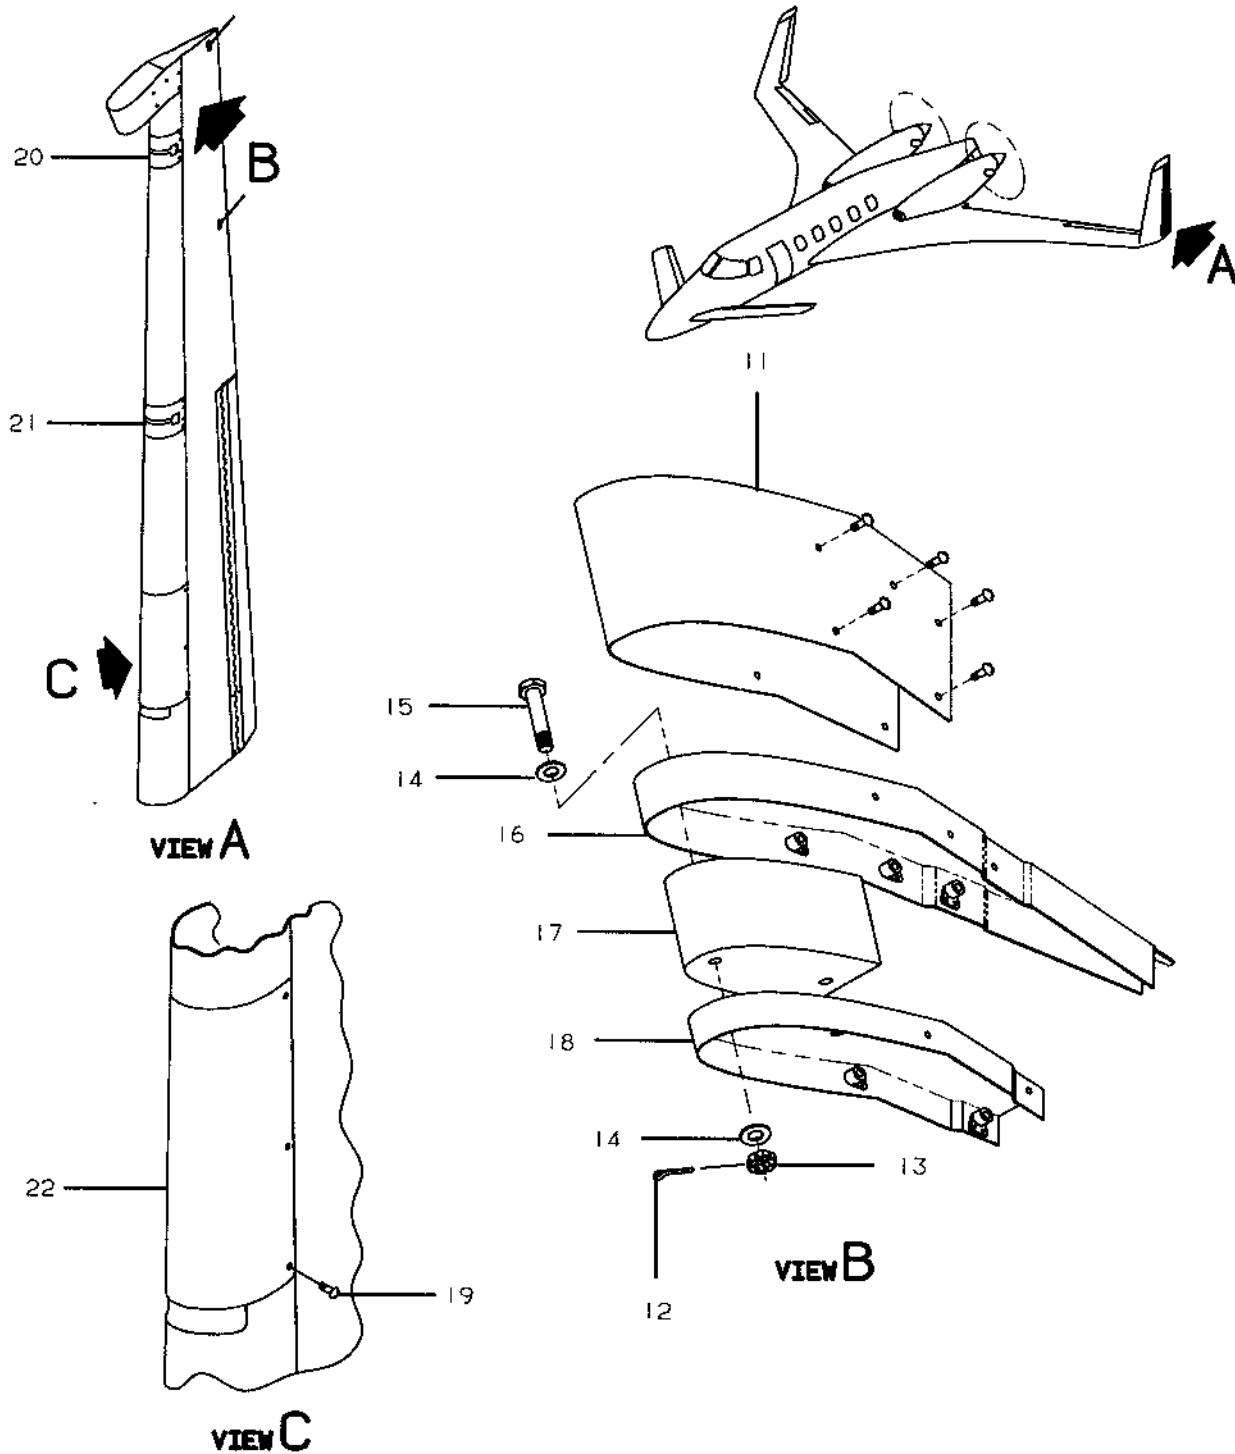


C95NC55A0063 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00 - 11	122-630042-105	.. FAIRING, LH UPPER.....	1	
	122-630042-106	.. FAIRING, RH UPPER.....	1	
- 12 R	MS24865-155	.. PIN, COTTER	2	4
- 13 R	MS17826-4	.. NUT	2	4
- 14 R	AN960C416L	.. WASHER	4	4
- 15 R	AN4C23	.. BOLT	2	4
- 16 R	122-630042-131	.. RIB ASSY, LH.....	1	
	122-630042-132	.. RIB ASSY, RH.....	1	
- 17 R	122-630042-135	.. WEIGHT, COUNTERBALANCE	1	4
- 18 R	122-630042-133	.. FAIRING, LH LOWER.....	1	
	122-630042-134	.. FAIRING, RH LOWER	1	
- 19 R	AN525-832R7	.. SCREW.....	14	
	MS21087L08	.. NUTPLATE	14	
- 20 R	122-630073-5	.. COVER, LH.....	1	
	122-630073-6	.. COVER, RH	1	
- 21 R	122-630073-1	.. COVER, LH.....	1	
	122-630073-2	.. COVER, RH	1	
- 22 R	122-630073-17	.. COVER ASSY, LH.....	1	
	122-630073-18	.. COVER ASSY, RH.....	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

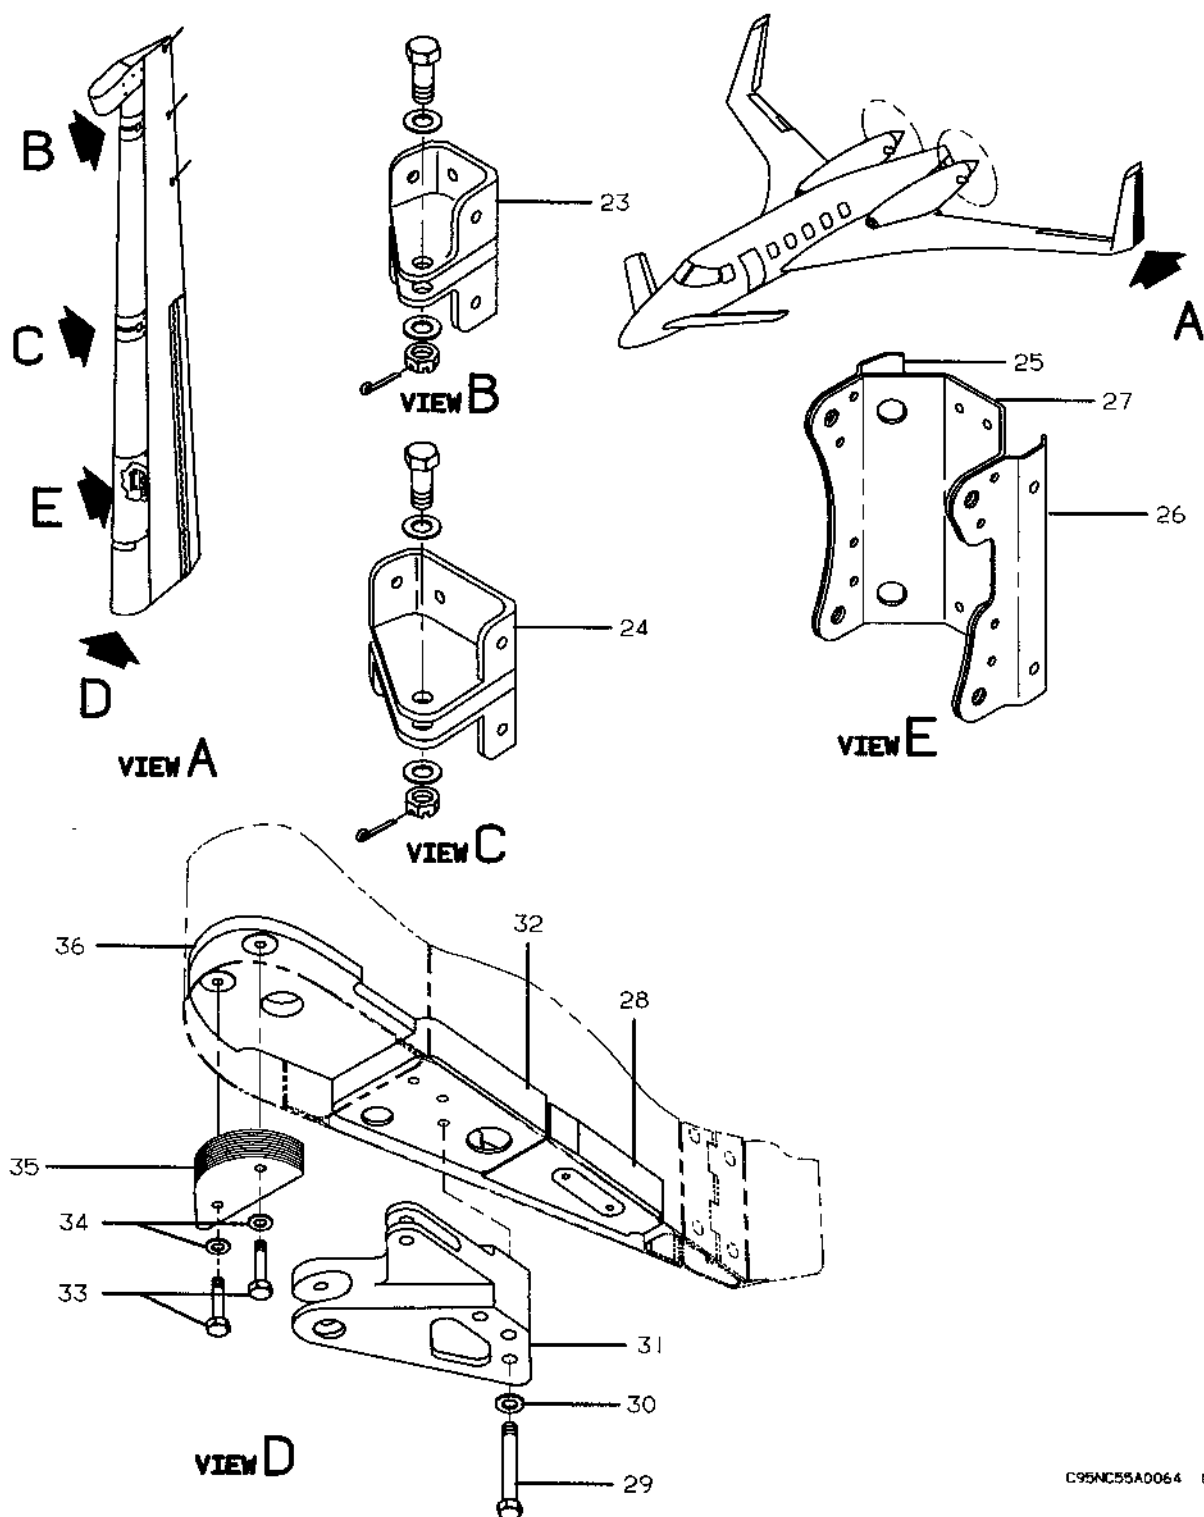


C95NC55A0064 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT &	PART	DESCRIPTION	UNITS	USABLE
ITEM NO		NO.	1 2 3 4 5 6 7	PER	ON
				ASSY	CODE
40-00	-23	R 122-630058-3	.. BRACKET, LH	1	
		122-630058-4	.. BRACKET, RH	1	
	-24	R 122-630057-9	.. BRACKET, LH	1	
		122-630057-10	.. BRACKET, RH	1	
		122-630072-1	.. BRACKET ASSY, LH	1	6
		122-630072-7	.. BRACKET ASSY, LH	1	5
		122-630072-2	.. BRACKET ASSY, RH	1	6
		122-630072-8	.. BRACKET ASSY, RH	1	5
	-25	R 122-630072-3	.. BRACKET	1	6
		122-630072-9	.. BRACKET	1	5
		122-630072-4	.. BRACKET	1	6
		122-630072-10	.. BRACKET	1	5
	-26	R 122-630072-5	.. BRACKET	1	6
		122-630072-11	.. BRACKET	1	5
		122-630072-6	.. BRACKET	1	6
		122-630072-12	.. BRACKET	1	5
	-27	R 122-521092-3	.. BRACKET	1	
		122-521092-4	.. BRACKET	1	
	-28	R 122-630042-137	.. RIB, LH	1	
		R 122-630042-138	.. RIB, RH	1	
		122-630057-19	.. ACTUATOR ASSY, LH RUDDER	1	
		122-630057-20	.. ACTUATOR ASSY, RH RUDDER	1	
	-29	R NAS6203-14H	.. BOLT	3	
	-30	R AN960C10L	.. WASHER	3	
		NAS1394-3C	.. INSERT	3	
	-31	R 122-630057-17	.. BRACKET	1	
		122-630057-18	.. BRACKET	1	
	-32	R 122-630057-7	.. BASE, FITTING/LH/	1	
		R 122-630057-8	.. BASE, FITTING/RH/	1	
	-33	R AN3H10A	.. BOLT	2	4
	-34	R AN960C10L	.. WASHER	2	
	-35	R 122-630042-123	.. WEIGHT, TRIM/8 MAX/	AR	4
		R 122-630042-123	.. WEIGHT, TRIM/1 MAX/	AR	3
	-36	R 122-630042-73	.. RIB ASSY, LH	1	
		R 122-630042-74	.. RIB ASSY, RH	1	
		R P104F1032-04	.. PLUG	2	
		R S104F10-1	.. SLEEVE	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

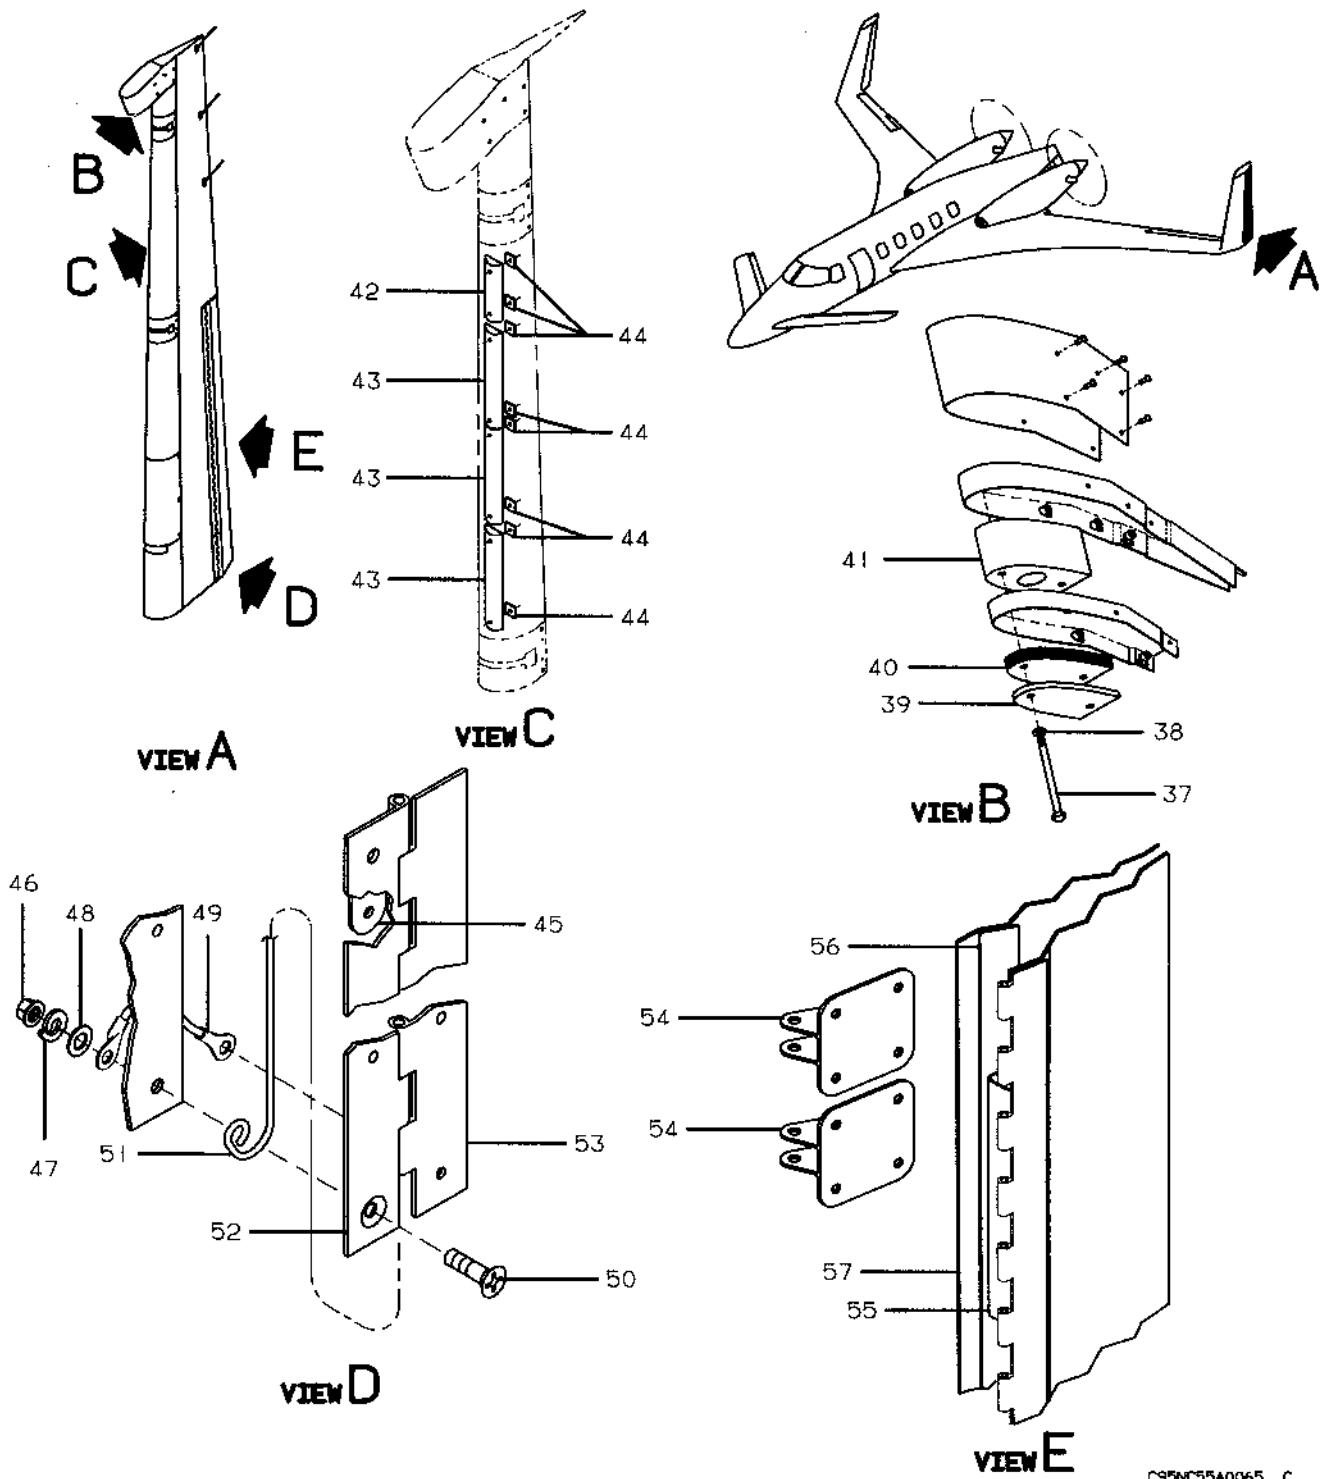

C95NC55A0065 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00 -37	R AN4CH27A	.. BOLT	AR	
	R AN4CH23A	.. BOLT	AR	
	R AN4CH26A	.. BOLT	AR	
-38	R AN960C416	.. WASHER	AR	
	R MS21048L4	.. NUTPLATE	2	
-39	R 122-630042-147	.. WEIGHT, TRIM/1 MAX/	AR	3
-40	R 122-630042-145	.. WEIGHT, TRIM/4 MAX/	AR	3
-41	R 122-630042-143	.. WEIGHT, COUNTERBALANCE	1	3
-42	R 122-630042-115	.. WEIGHT, COUNTERBALANCE	1	3
-43	R 122-630042-89	.. WEIGHT, COUNTERBALANCE	3	3
-44	R 122-630042-91	.. WASHER	8	3
-45	R 122-630042-95	.. DOUBLER	2	
	R 122-630042-97	.. WASHER/UNDER RIVET BUTT/3 TOP, 7 BOTTOM/	10	
-46	R MS21043-08	.. NUT	1	
-47	R MS35338-42	.. WASHER, LOCK	1	
-48	R AN960C8	.. WASHER	1	
-49	R MS25083-2AB2	.. JUMPER, BOND	1	
-50	R MS24894C4	.. SCREW	1	
-51	R 122-630042-121	.. PIN, LH HINGE	1	
	R 122-630042-122	.. PIN, RH HINGE	1	
-52	R 122-630042-117	.. HINGE, LH RUDDER TAB	1	
	122-630042-118	.. HINGE, RH RUDDER TAB	1	
	122-630135-1	.. TAB ASSY, LH	1	
	122-630135-2	.. TAB ASSY, RH	1	
-53	R 122-630042-119	.. HINGE HALF	1	
-54	R 122-630135-25	.. BRACKET	2	
-55	R 122-630135-15	.. BRACE	1	
-56	R 122-130044-95	.. DOUBLER	2	
	R 122-130044-97	.. WASHER/BETWEEN RIVET BUTT AND TAB/	21	
-57	R 122-630135-21	.. BOND ASSY, LH	1	
	122-630135-22	.. BOND ASSY, RH	1	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-21	2	NC-22 THRU NC-25
3	NC-26 AND AFTER	4	NC-4 THRU NC-25
5	NC-14 AND AFTER	6	NC-4 THRU NC-13

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

55-60-00
VENTRAL STABILIZER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

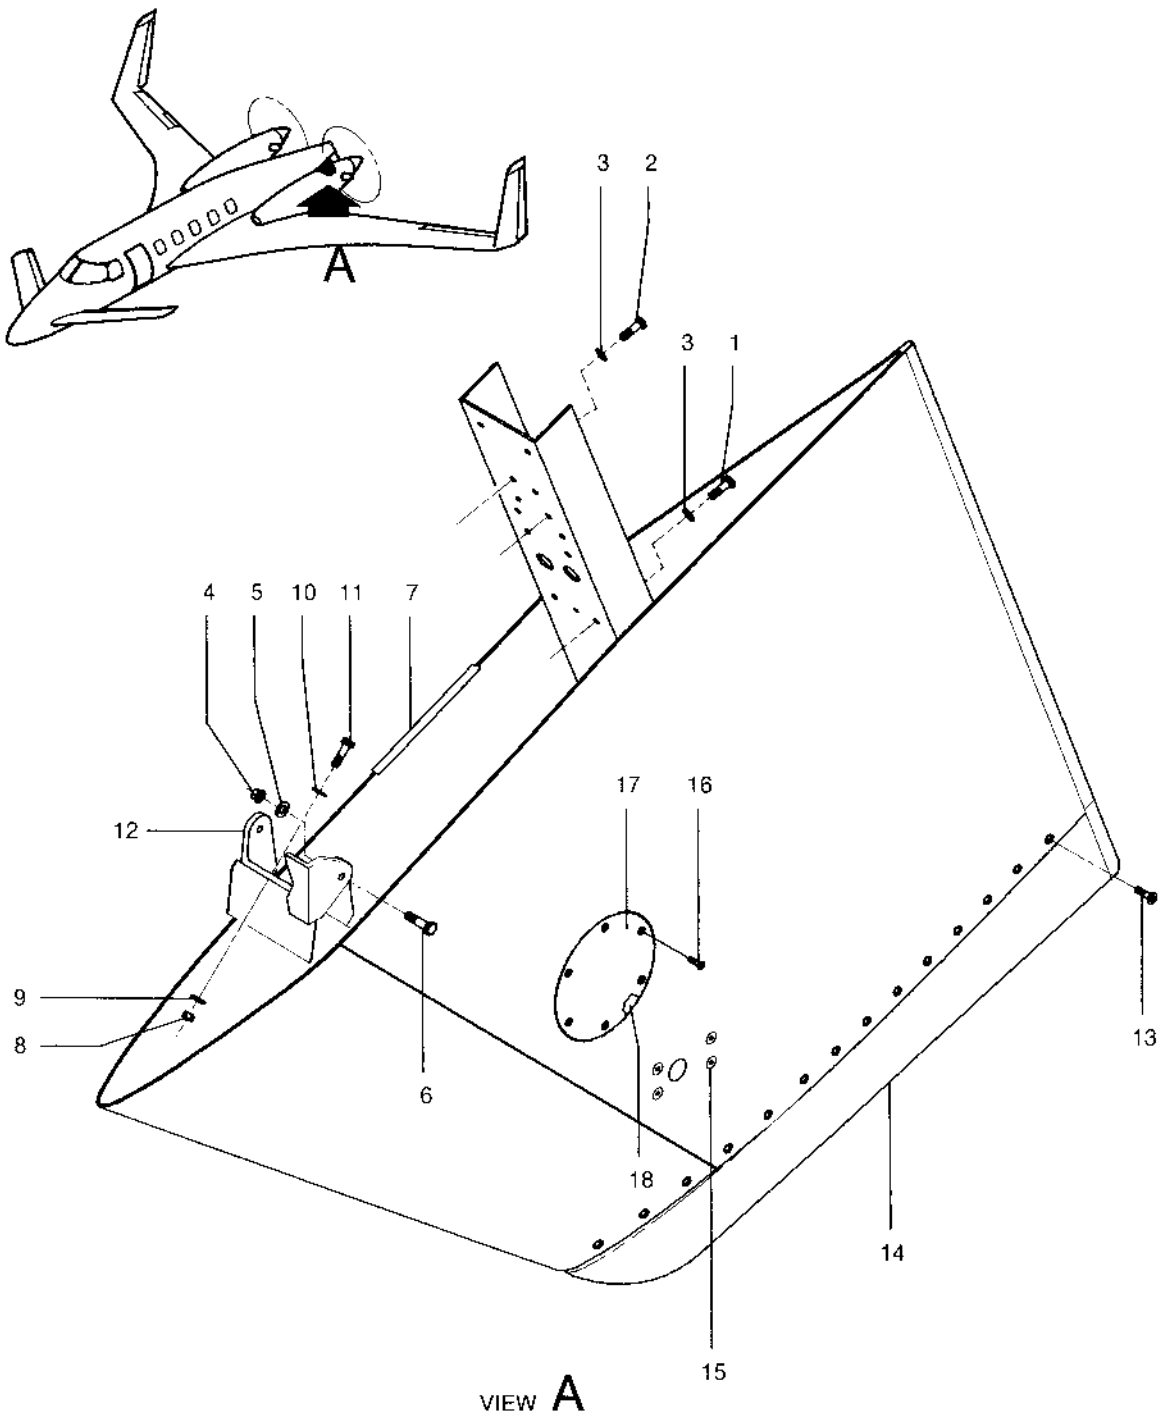

2000-134 01

FIGURE 60-00.VENTRAL STABILIZER

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60-00	122-640080-1	VENTRAL STABILIZER INSTALLATION	NP	
- 1	NAS654V3	. BOLT	4	
- 2	NAS654V4	. BOLT	4	
- 3	AN960-416L	. WASHER	8	
- 4	130909N32	. NUT	2	
- 5	R AN960-416	. WASHER	2	
- 6	130909B180	. BOLT	2	
- 7	122-640080-3	. SEAL	1	
	122-640081-1	. STABILIZER ASSY, VENTRAL	1	1
	122-640081-5	. STABILIZER ASSY, VENTRAL	1	2
- 8	MS21044C4	. NUT	4	
- 9	R AN960C416	. WASHER/UNDER BOLT HEAD/	4	
-10	R AN960C416L	. WASHER	4	
-11	AN174C8A	. BOLT	4	
-12	122-640073-1	. FITTING	1	
-13	MS24694C48	. SCREW	28	
-14	122-640086-5	. TIP ASSY	1	
	MS21087L3	. NUTPLATE	28	
-15	SL602-3-250CM	. INSERT/ANTENNA/	4	
-16	MS24694C48	. SCREW	8	
-17	122-640085-11	. DOOR	1	
-18	122-640081-3	. SEAL	1	
	S10P175CSI	. PLUSNUT	6	1
	2R2329	. PLUSNUT	6	2

CODES OF EFFECTIVITY

1 NC-4 THRU NC-23 2 NC-24 AND AFTER

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

LIST OF PAGES & TABLE OF CONTENTS FOR CHAPTER 56-00-00 WINDOWS

CHAP/SUB- SECT & UNIT	PAGE NUMBER	EFFECTIVE DATE	TABLE OF CONTENTS
56-00-00	1	10/27/00	LIST OF PAGES & TABLE OF CONTENTS
56-10-00	1	02/25/94	FLIGHT COMPARTMENT WINDOWS
56-10-00	2	02/25/94	
56-10-00	3	02/25/94	
56-10-00	4	02/25/94	
56-10-00	5	02/25/94	
56-10-00	6	02/25/94	
56-10-00	7	02/25/94	
56-20-00	1	02/25/94	CABIN POLARIZED WINDOWS
56-20-00	2	02/25/94	
56-20-00	3	02/25/94	
56-20-00	4	02/25/94	
56-20-00	5	02/25/94	
56-20-10	1	10/27/00	CABIN OUTER WINDOWS
56-20-10	2	10/27/00	
56-20-10	3	10/27/00	
56-20-20	1	02/25/94	AFT TOILET WINDOW INSTALLATION
56-20-20	2	02/25/94	
56-20-20	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

56-10-00
FLIGHT COMPARTMENT WINDOWS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

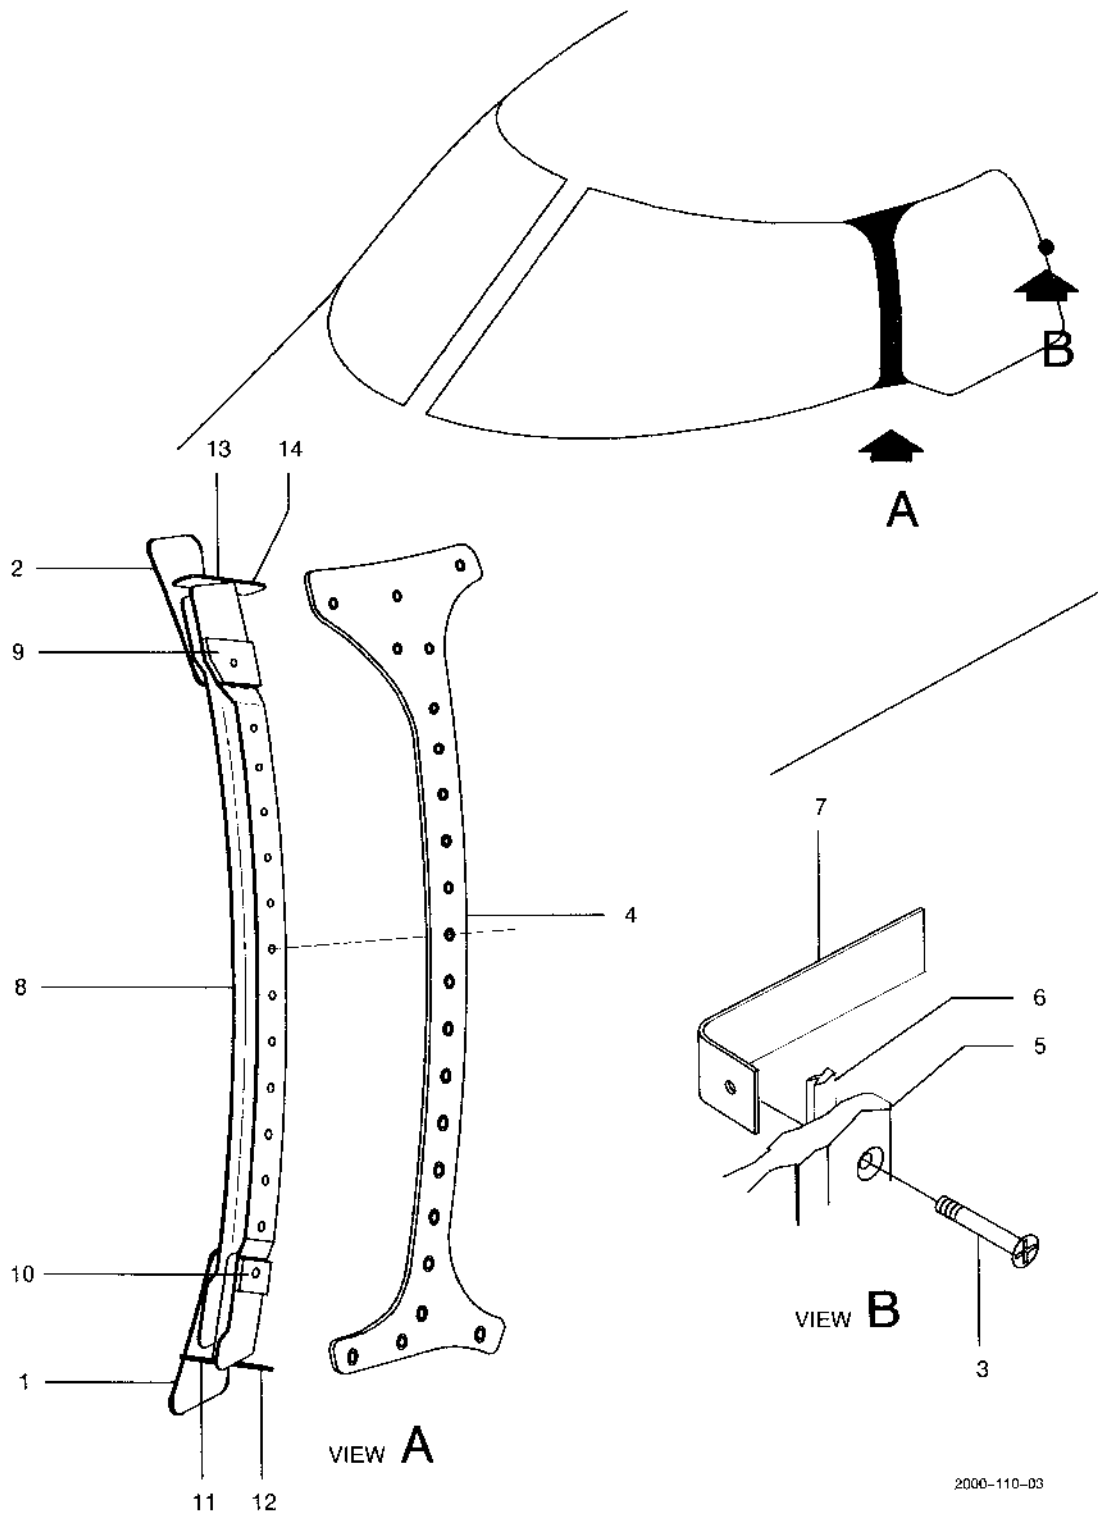


FIGURE 10-00.FLIGHT COMPARTMENT WINDOWS
/SHEET 1 OF 3 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-420200-5	WINDSHIELD INSTL, FLIGHT COMPARTMENT	NP	3
	122-420200-7	WINDSHIELD INSTL, FLIGHT COMPARTMENT	NP	4
- 1	122-420206-1	. GUSSET, LOWER WINDSHIELD LONGERON/LH/	1	
	122-420206-2	. GUSSET, LOWER WINDSHIELD LONGERON/RH/	1	
- 2	122-420206-3	. GUSSET, UPPER WINDSHIELD LONGERON/LH/	1	
	122-420206-4	. GUSSET, UPPER WINDSHIELD LONGERON/RH/	1	
- 3	111250-15	. BOLT	86	
- 4	122-420114-1	. RETAINER, WINDSHIELD SIDE POST/LH/	1	
	122-420114-2	. RETAINER, WINDSHIELD SIDE POST/RH/	1	
- 5	122-384002-5	. SIDE WINDSHIELD ASSY/LH/HEATED/	NP	
		/ORDER 122-384002-7 FOR SPARES/		
	122-384002-7	. SIDE WINDSHIELD ASSY/LH/HEATED/	1	
	122-384002-8	. SIDE WINDSHIELD ASSY/RH/HEATED/	NP	
		/ORDER 122-384002-8 FOR SPARES/		
	122-384002-8	. SIDE WINDSHIELD ASSY/RH/HEATED/	1	
- 6	122-420122-3	. SEALANT DAM, WINDSHIELD	2	
	FCHF6011L10D4	. NUTPLATE	68	3
	FCHF6010L10H3	. NUTPLATE/LOWER AND UPPER SIDE POST/	12	3
	122-422017-5	. NUTPLATE ASSY, LWR AND UPR	46	4
	122-422017-1	. NUTPLATE ASSY, LWR AND UPR	22	4
	122-422017-13	. NUTPLATE ASSY, LH SIDE POST	1	4
	122-422017-14	. NUTPLATE ASSY, RH SIDE POST	1	4
- 7	122-420029-63	. CLIP, SIDEWALL SUPPORT	4	
	NAS1329A06-75	. RIVNUT	4	
	122-420205-23	. POST ASSY, SIDE WINDOW/PILOT/	1	
	122-420205-24	. POST ASSY, SIDE WINDOW/COPILOT/	1	
- 8	122-420205-25	. POST, PILOT	1	
	122-420205-26	. POST, COPILOT	1	
- 9	122-420205-29	. SPACER	2	
- 10	122-420205-27	. SPACER	2	
	122-420029-113	. CLIP, SIDE WINDOW SUPPORT	6	5
	122-420029-173	. CLIP ASSY	4	6
	NAS1329A06-75	. RIVNUT	6	
	FCHF6010L10C	. NUTPLATE	24	3
- 11	122-420203-11	. CLIP, LH LWR FWD	1	
	122-420203-12	. CLIP, RH LWR FWD	1	
- 12	122-420203-9	. CLIP, LH LWR AFT	1	
	122-420203-10	. CLIP, RH LWR AFT	1	
- 13	122-420203-15	. CLIP, LH UPR FWD	1	
	122-420203-16	. CLIP, RH UPR FWD	1	
- 14	122-420203-13	. CLIP, LH UPR AFT	1	
	122-420203-14	. CLIP, RH UPR AFT	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG



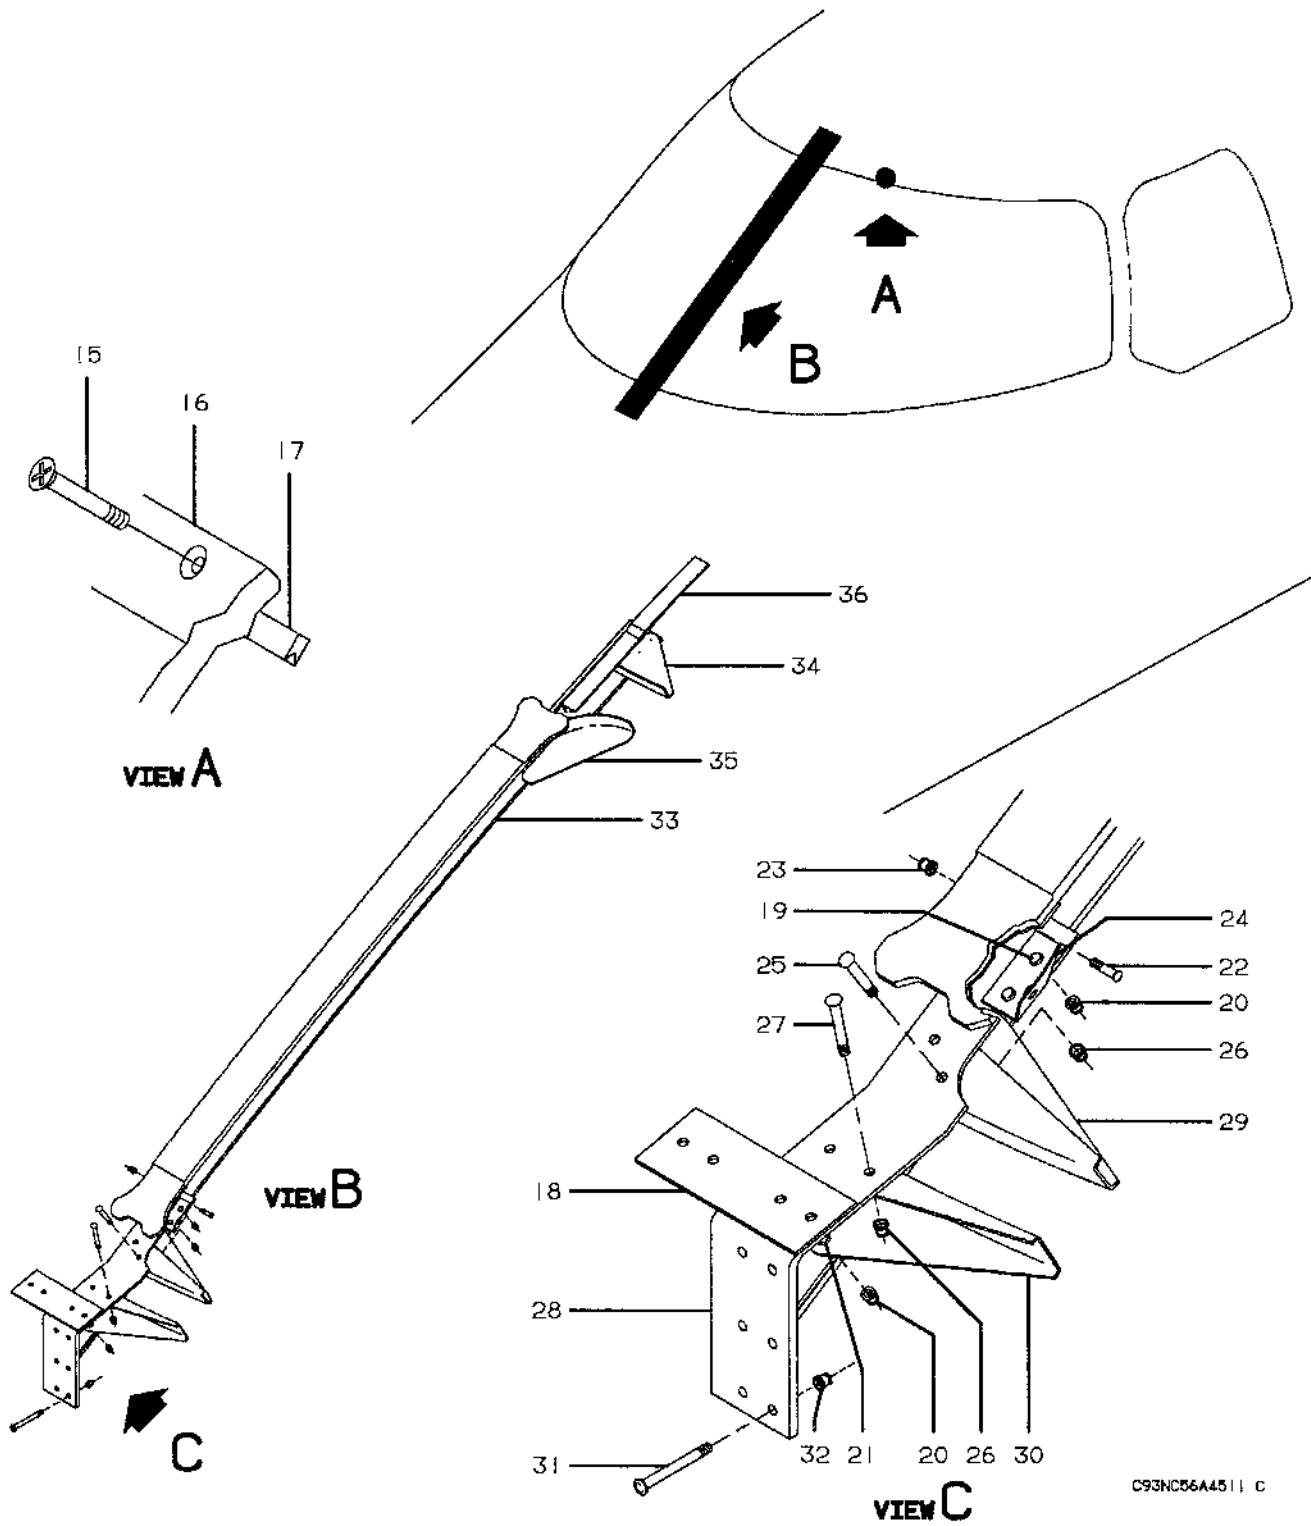


FIGURE 10-00.FLIGHT COMPARTMENT WINDOWS
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00 -15	111250-15	. BOLT	156	
-16	122-384000-7	. WINDSHIELD ASSY, LH/HEATED/	NP	7
		/ORDER 122-384000-9 FOR SPARES/		
	122-384000-9	. WINDSHIELD ASSY, LH/HEATED/	1	8
	122-384000-8	. WINDSHIELD ASSY, RH/HEATED/	NP	7
		/ORDER 122-384000-10 FOR SPARES/		
	122-384000-10	. WINDSHIELD ASSY, RH/HEATED/	1	8
-17	122-420122-1	. SEALANT DAM, WINDSHIELD	2	
	FCHF6011L10D4	. NUTPLATE/TO MATCH 122-384000 LWR WSHLD/	64	3
	122-422017-5	. NUTPLATE ASSY/TO MATCH 122-384000 LWR WSHLD/	4	4
	122-422017-1	. NUTPLATE ASSY/TO MATCH 122-384000 LWR WSHLD/	60	4
	FCHF6011L10D4	. NUTPLATE/TO MATCH 122-384000 UPR WSHLD/	36	3
	122-422017-5	. NUTPLATE ASSY/TO MATCH 122-384000 UPR WSHLD/	8	4
	122-422017-1	. NUTPLATE ASSY/TO MATCH 122-384000 UPR WSHLD/	28	4
	FCHF6010L10H2	. NUTPLATE, CENTER POST	34	3
	122-420200-9	. NUTPLATE ASSY, CENTER POST	NP	4
		/ORDER 122-420200-17 FOR SPARES/		
	122-420200-17	. NUTPLATE ASSY, CENTER POST	1	4
	122-420200-10	. NUTPLATE ASSY, CENTER POST	NP	4
		/ORDER 122-420200-18 FOR SPARES/		
	122-420200-18	. NUTPLATE ASSY, CENTER POST	1	4
-18	122-420209-1	. SHIM	1	
-19	HL10V5-4	. PIN	8	
-20	HL94K5	. COLLAR	8	
-21	HL10V5-5	. PIN	8	
-22	HL10V5-6	. PIN, CENTER POST SIDE	10	
-23	HL94K5	. COLLAR	10	
-24	122-420029-73	. BRACKET, LH	1	
	122-420029-74	. BRACKET, RH	1	
	FCHF6010L10M1	. NUTPLATE	4	3
-25	HL11V6-14	. PIN	4	
-26	HL94K6	. COLLAR	12	
-27	HL11V6-16	. PIN	8	
-28	122-420201-1	. BRACKET	1	
	122-420201-2	. BRACKET	1	
-29	122-420207-7	. BRACKET	1	
	122-420207-8	. BRACKET	1	
-30	122-420207-3	. BRACKET	1	
	122-420207-4	. BRACKET	1	
-31	HL10V6-23	. PIN	12	
-32	HL94K6	. COLLAR	12	
-33	122-420204-3	. POST ASSY	1	1
	122-420204-5	. POST ASSY	1	2
	MS21047L08	. NUTPLATE	2	
	MS21051L3	. NUTPLATE	4	
-34	122-420208-1	. BRACKET, UPPER ATTACH LONGERON/LH/	1	
	122-420208-2	. BRACKET, UPPER ATTACH LONGERON/RH/	1	
-35	122-420208-5	. BRACKET, UPPER ATTACH LONGERON/LH/	1	
	122-420208-6	. BRACKET, UPPER ATTACH LONGERON/RH/	1	
-36	122-420202-3	. ANGLE, ATTACH WINDSHIELD POST/LH/	1	9
	122-420202-4	. ANGLE, ATTACH WINDSHIELD POST/RH/	1	9
	122-420202-5	. BRACKET, ATTACH WINDSHIELD POST/LH/	1	10
	122-420202-6	. BRACKET, ATTACH WINDSHIELD POST/RH/	1	10

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

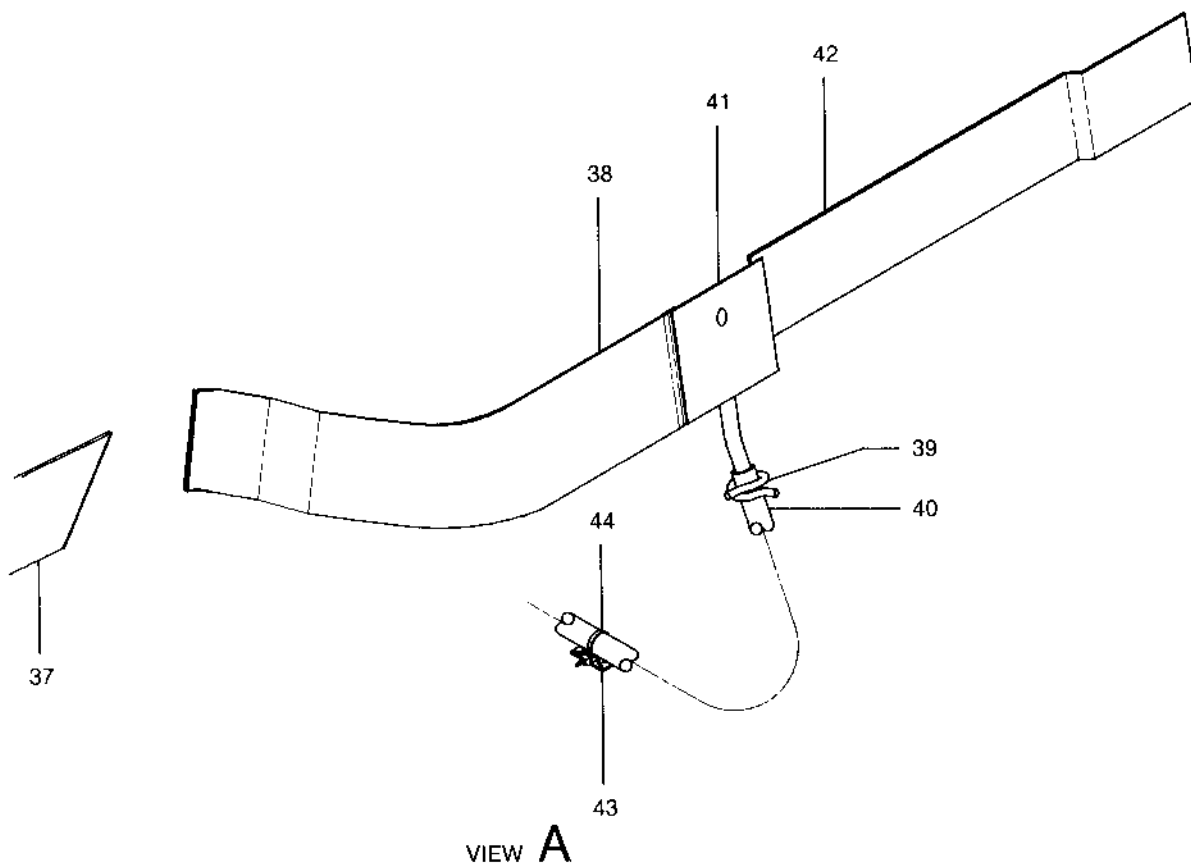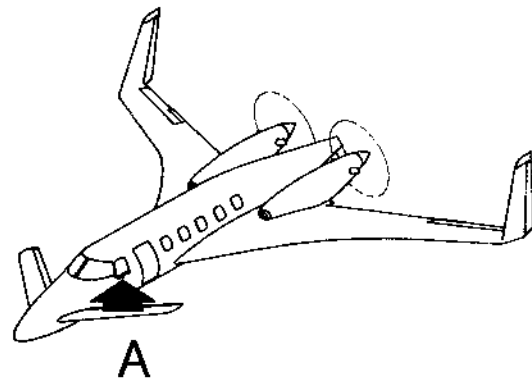

2000-110-05

FIGURE 10-00.FLIGHT COMPARTMENT WINDOWS
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-422027-1	. WATER TRAY INSTL, LEFT	1	
	122-422027-2	. WATER TRAY INSTL, RIGHT	1	
- 37	122-422028-1	. . TRAY, LEFT	1	3
	122-422028-7	. . TRAY, LEFT	1	4
	122-422028-2	. . TRAY, RIGHT	1	3
	122-422028-8	. . TRAY, RIGHT	1	4
- 38	122-422028-3	. . TRAY, LEFT	1	
	122-422028-4	. . TRAY, RIGHT	1	
- 39	130292A6	. . CLAMP	1	
- 40	131823E6-0720	. . TUBE	1	
- 41	122-422029-1	. . DRAIN, ASSY	1	
- 42	122-422028-5	. . TRAY, LEFT	1	
	122-422028-6	. . TRAY, RIGHT	1	
- 43	ASMS-A	. . SWIVEL MOUNT	1	
- 44	MS3367-5-9	. . STRAP	1	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-53	2	NC-54 AND AFTER
3	NC-4 THRU NC-23	4	NC-24 AND AFTER
5	NC-4 THRU NC-19	6	NC-20 AND AFTER
7	NC-4 THRU NC-25	8	NC-26 AND AFTER
9	NC-4 THRU NC-13	10	NC-14 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

56-20-00
CABIN POLARIZED WINDOWS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

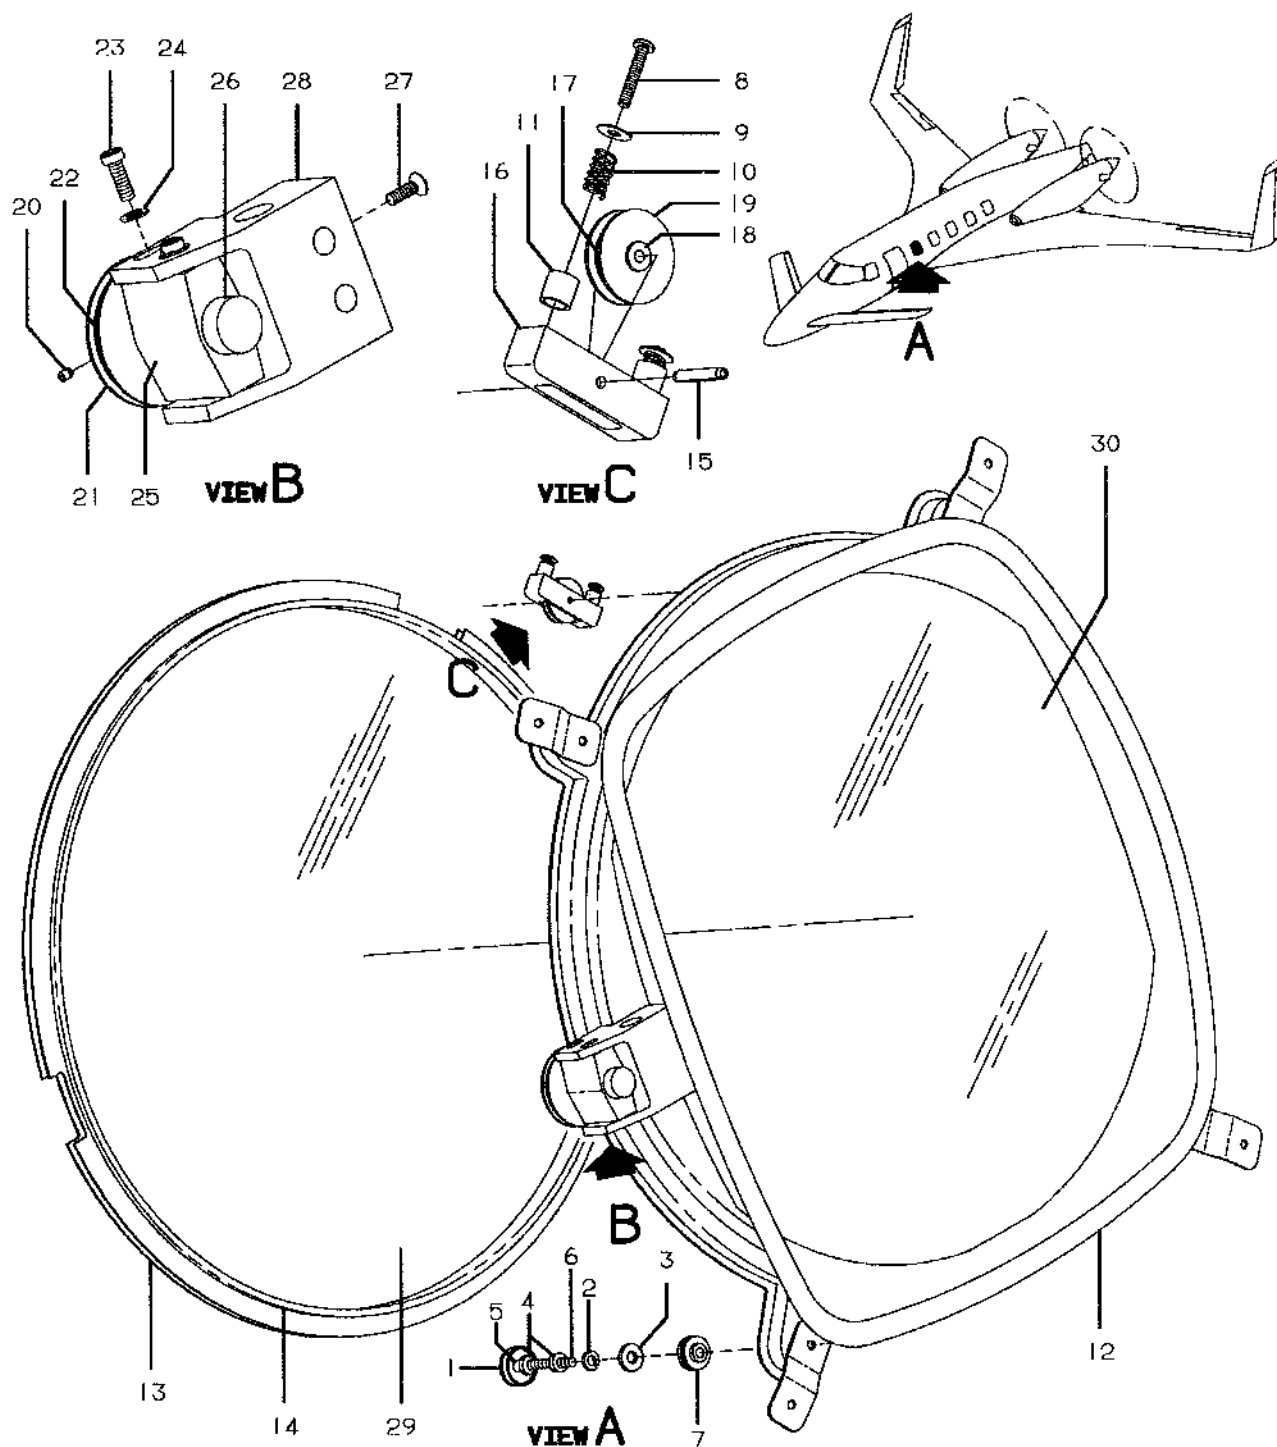


C93NC56A0329 C

FIGURE 20-00.CABIN POLARIZED WINDOWS
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00		122-530217-1	WINDOW INSTL, POLARIZED	NP	1
		122-530217-13	WINDOW INSTL, POLARIZED/MANUAL/	NP	2
		122-530217-15	WINDOW INSTL, RH POLARIZED ESCAPE HATCH.....	NP	2
		122-530217-3	WINDOW INSTL, CONSTANT SECTION.....	NP	
			/ STA. 219.00 TO STA. 275.00/		
		122-530217-5	WINDOW INSTL/STA. 305.00/	NP	
		122-530217-7	WINDOW INSTL/STA. 335.00/	NP	1
		122-530218-1	RETAINER ASSY, WINDOW	1	1
		122-530218-7	RETAINER ASSY, WINDOW	1	2
			/ATTACHING PARTS/		
		122-530217-9	STOP ASSY, WINDOW	4	
- 1		122-530217-11	CAP	1	
- 2		MS35338-138	WASHER, LOCK	1	
- 3		100951P125ZW	WASHER	1	
- 4		AN315-3R	NUT	2	
- 5		NAS43DD3-12	SPACER	1	
- 6		132131-3-14	STUD/ALTERNATE FOR 132151-3-16/	1	
		132151-3-16	STUD/ALTERNATE FOR 132131-3-14/	1	
		SJ3551	FASTENER, DUAL LOCK.....	1	
			★		
- 7		J3112-12-1	SHOCK MOUNT	4	
		122-384105-1	RETAINER ASSY, WINDOW	1	3
		122-530218-5	RETAINER ASSY, WINDOW	1	4
		122-384105-37	RETAINER ASSY, WINDOW	1	2
- 8		MS35206-231	SCREW	10	1
		MS35206-232	SCREW	6	5
- 9		AN960-6L	WASHER	AR	
- 10		100943ZL016L	SPRING	AR	
- 11		NAS43DD1-21	SPACER	4	
- 12		122-384105-3	RETAINER, WINDOW	1	1
		122-384105-39	RETAINER, WINDOW/ORDER 122-384105-49	NP	6
			FOR SPARES/		
		122-384105-49	RETAINER, WINDOW	1	5
		122-384105-5	RETAINER ASSY	1	1
		122-384105-41	RETAINER ASSY	1	2
- 13		122-384105-7	RETAINER	1	
- 14		122-384105-17	SEAL, DUST	1	
		122-384105-9	BLOCK ASSY, ROLLER	2	
		122-384105-45	BLOCK ASSY, ROLLER.....	1	2
- 15		MS171526	PIN, ROLLER	1	
- 16		122-384105-11	BLOCK	1	
		122-384105-13	ROLLER ASSY	1	
- 17		MS29513-015	PACKING, PREFORMED	1	
- 18		SR2-52PP	BEARING	1	
- 19		122-384105-15	ROLLER	1	
		122-530287-1	ACTUATOR INSTL.....	NP	1
- 20		MS51021-102	SCREW, SET	1	
		122-530271-1	ROLLER ASSY	1	
- 21		122-530271-3	ROLLER, DRIVE	1	
- 22		MS29513-220	PACKING, PREFORMED	1	
- 23		MS16997-32	SCREW, CAP	4	
- 24		AN960-8	WASHER	4	
- 25		122-530286-1	BLOCK	1	
- 26		122-364188-629	MOTOR, POLARIZED WINDOW ACTUATOR.....	1	
			/ALTERNATE FOR 1616E018SLT 16/5/		
		1616E018SLT 16/5	MOTOR, POLARIZED WINDOW ACTUATOR.....	1	
			/ALTERNATE FOR 122-364188-629/		
- 27		FH8C6CPL01BK	SCREW	4	
- 28		122-530285-1	BRACKET	1	
		122-530218-13	BRACKET, ROLLER BLOCK	1	2
		122-530218-9	PANE ASSY, POLARIZED WINDOW INBD	1	2
		122-384115-5	PANE, POLARIZED WINDOW INBD	1	2
- 29		122-384115-3	PANE, POLARIZED WINDOW INBD.....	1	1
- 30		122-384115-1	PANE, POLARIZED WINDOW OUTBD	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

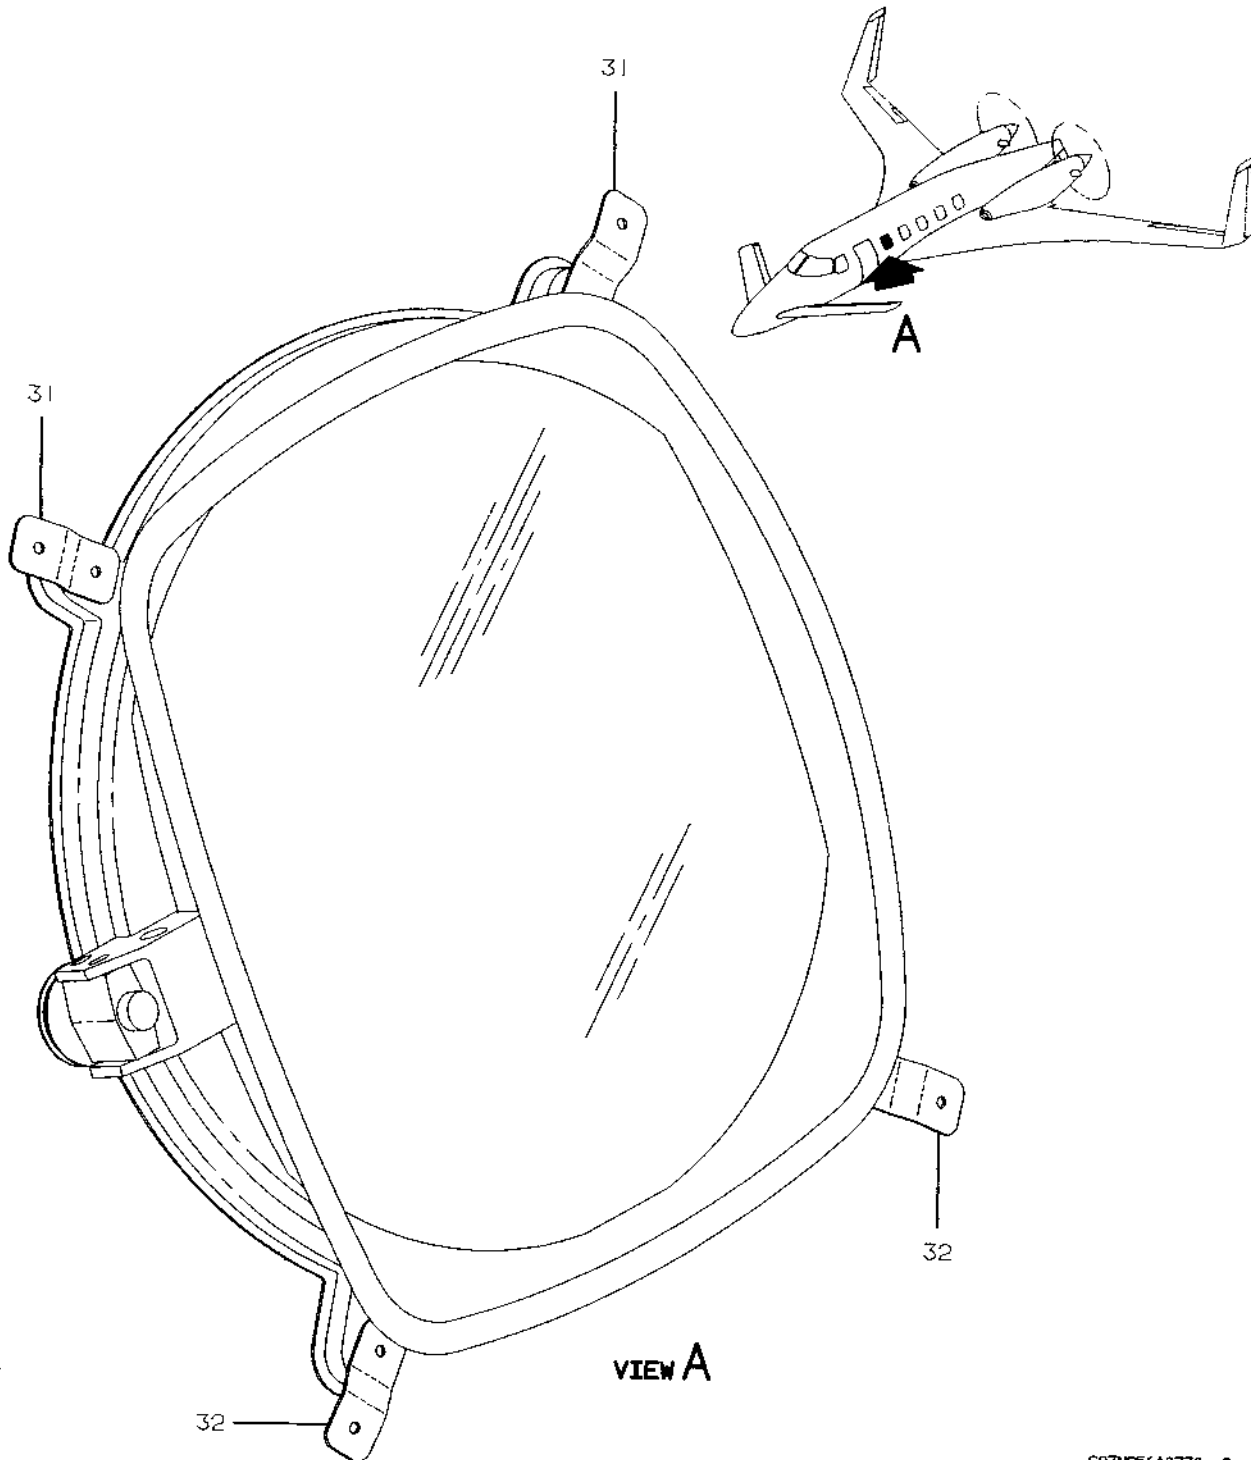

C93NC56A0330 C

FIGURE 20-00.CABIN POLARIZED WINDOWS
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE	
20-00 -31	122-530291-1	.. CLIP ASSY, CONSTANT SECTION UPR CONNERS..... /STA. 219.00 TO STA. 275.00/PRIMED/	2		
	MS21076L08	... NUTPLATE	1		
	122-530291-13	.. CLIP ASSY, UPPER FWD CORNER/STA. 305.00..... & UPR FWD CORNER STA. 335/PAINTED RED/	2	1	
	122-530291-21	.. CLIP ASSY, RH UPPER AFT CORNER/STA. 305.00/ /PAINTED GREEN/	1	2	
	MS21076L08	... NUTPLATE	1		
	122-530291-21	.. CLIP ASSY, UPPER AFT CORNER/STA. 305.00/..... /PAINTED GREEN/	1	1	
	122-530291-21	.. CLIP ASSY, RH UPPER FWD CORNER/STA. 305.00/ /PAINTED GREEN/	1	2	
	MS21076L08	... NUTPLATE	1		
	122-530291-17	.. CLIP ASSY, UPPER AFT CORNER/ STA. 335.00/ /PAINTED YELLOW/	1	1	
	MS21076L08	... NUTPLATE	1		
	-32	122-530291-5	.. CLIP ASSY, CONSTANT SECTION LOWER CORNERS /STA. 219.00 TO STA. 275.00/ /PAINTED WHITE/	2	
		MS21076L08	... NUTPLATE	1	
		122-530291-13	.. CLIP ASSY, LOWER AFT CORNER/STA. 335.00/ /PAINTED RED/	1	1
		MS21076L08	... NUTPLATE	1	
		122-530291-9	.. CLIP ASSY, LOWER FWD CORNER/STA. 305.00/ /PAINTED BLUE/	1	1
		122-530291-13	.. CLIP ASSY, RH LOWER AFT CORNER/STA. 305.00/ /PAINTED RED/	1	2
		MS21076L08	... NUTPLATE	1	
		122-530291-17	.. CLIP ASSY, LOWER FWD CORNER/STA. 335.00/ /PAINTED YELLOW/	1	1
MS21076L08		... NUTPLATE	1		

CODES OF EFFECTIVITY

1	NC-4 THRU NC-20	2	NC-21 AND AFTER
3	NC-4 THRU NC-18	4	NC-19 AND NC-20
5	NC-32 AND AFTER	6	NC-21 THRU NC-31

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

56-20-10

CABIN OUTER WINDOWS

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

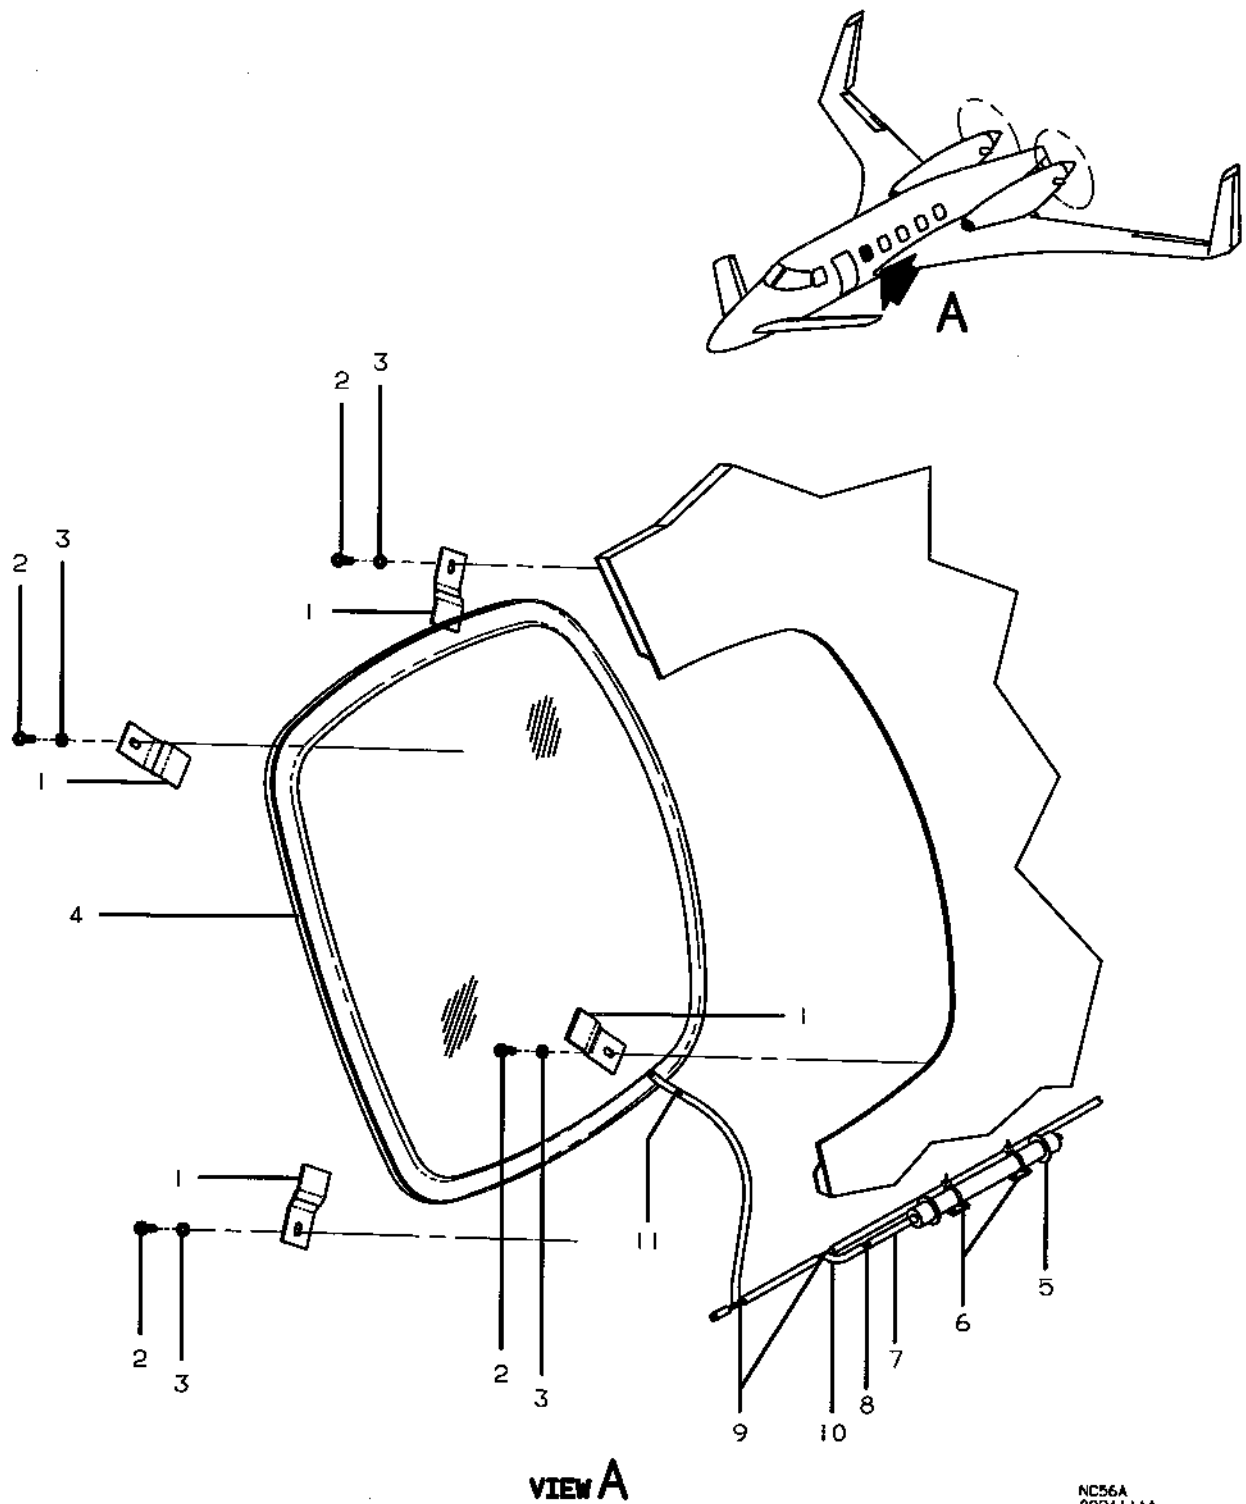


FIGURE 20-10 . CABIN OUTER WINDOWS

Raytheon Aircraft

BEECH STARSHIP 1 ILLUSTRATED PARTS CATALOG

SUB-SECT UNIT & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
20-10	122-430003-1		STRUCTURE INSTL,FUSELAGE	NP	1
	122-430003-3		STRUCTURE INSTL,FUSELAGE	NP	2
1	122-430032-35		. CLIP ASSY	36	
			(ATTACHING PARTS)		
2	NAS623-3-1		. SCREW	1	
3	AN960JD10L		. WASHER	1	
			-----★-----		
4	122-430030-39		. WINDOW ASSY, FWD LH AND RH SIDE	6	
			/SUPERSEDES 122-430030-1,13 & -19/		
	122-430030-41		. WINDOW ASSY, LH SIDE/STA. 303.90/	1	
			/SUPERSEDES 122-430030-3,-15 & -21/		
	122-430030-43		. WINDOW ASSY, LH SIDE/STA. 334.90/	1	
			/SUPERSEDES 122-430030-5,-17 & -23/		
	122-430030-44		. WINDOW ASSY, RH SIDE/STA. 334.90/	1	
			/SUPERSEDES 122-430030-6,-18 & -24/		
			NOTE		
			SEE CHAPTER 52 FOR THE WINDOW		
			IN THE EMERGENCY EXIT DOOR		
5	26930		DESSICANT,WINDOW SYSTEM/RH & LH/	1	
			/WITH KIT 122-5031-3 OR -5 INSTALLED/		
6	ABMM-AT-C		MOUNT,CABLE TIE/RH & LH/	2	
			/WITH KIT 122-5031-3 OR -5 INSTALLED/		
	MS3367-5-9		STRAP,TIE/RH & LH/	2	
			/WITH KIT 122-5031-3 OR -5 INSTALLED/		
7	132239-2-X		TUBING	AR	
			/WITH KIT 122-5031-3 OR -5 INSTALLED/		
8	3060-9		FITTING/RH & LH/	2	
			/WITH KIT 122-5031-3 OR -5 INSTALLED/		
9	T230-1		TEE/LH/	6	
			/WITH KIT 122-5031-5 INSTALLED/		
	T230-1		TEE/RH/	5	
			/WITH KIT 122-5031-3 INSTALLED/		
10	132239-1-X		TUBING/RH & LH/	AR	
			/WITH KIT 122-5031-3 OR -5 INSTALLED/		
11	AC-9		FITTING/LH/	5	
			/WITH KIT 122-5031-5 INSTALLED/		
	AC-9		FITTING/RH/	4	
			/WITH KIT 122-5031-3 INSTALLED/		
			NOTE		
			122-430030-39,-41,-43 & -44 WINDOW ASSY		
			MUST BE INSTALLED PRIOR TO 122-5031-3		
			OR -5 KIT MODIFICATION		

CODES OF EFFECTIVITY


1 NC-4 THRU NC-40 2 NC-41 AND AFTER

- END -

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

56-20-20
AFT TOILET WINDOW INSTALLATION

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

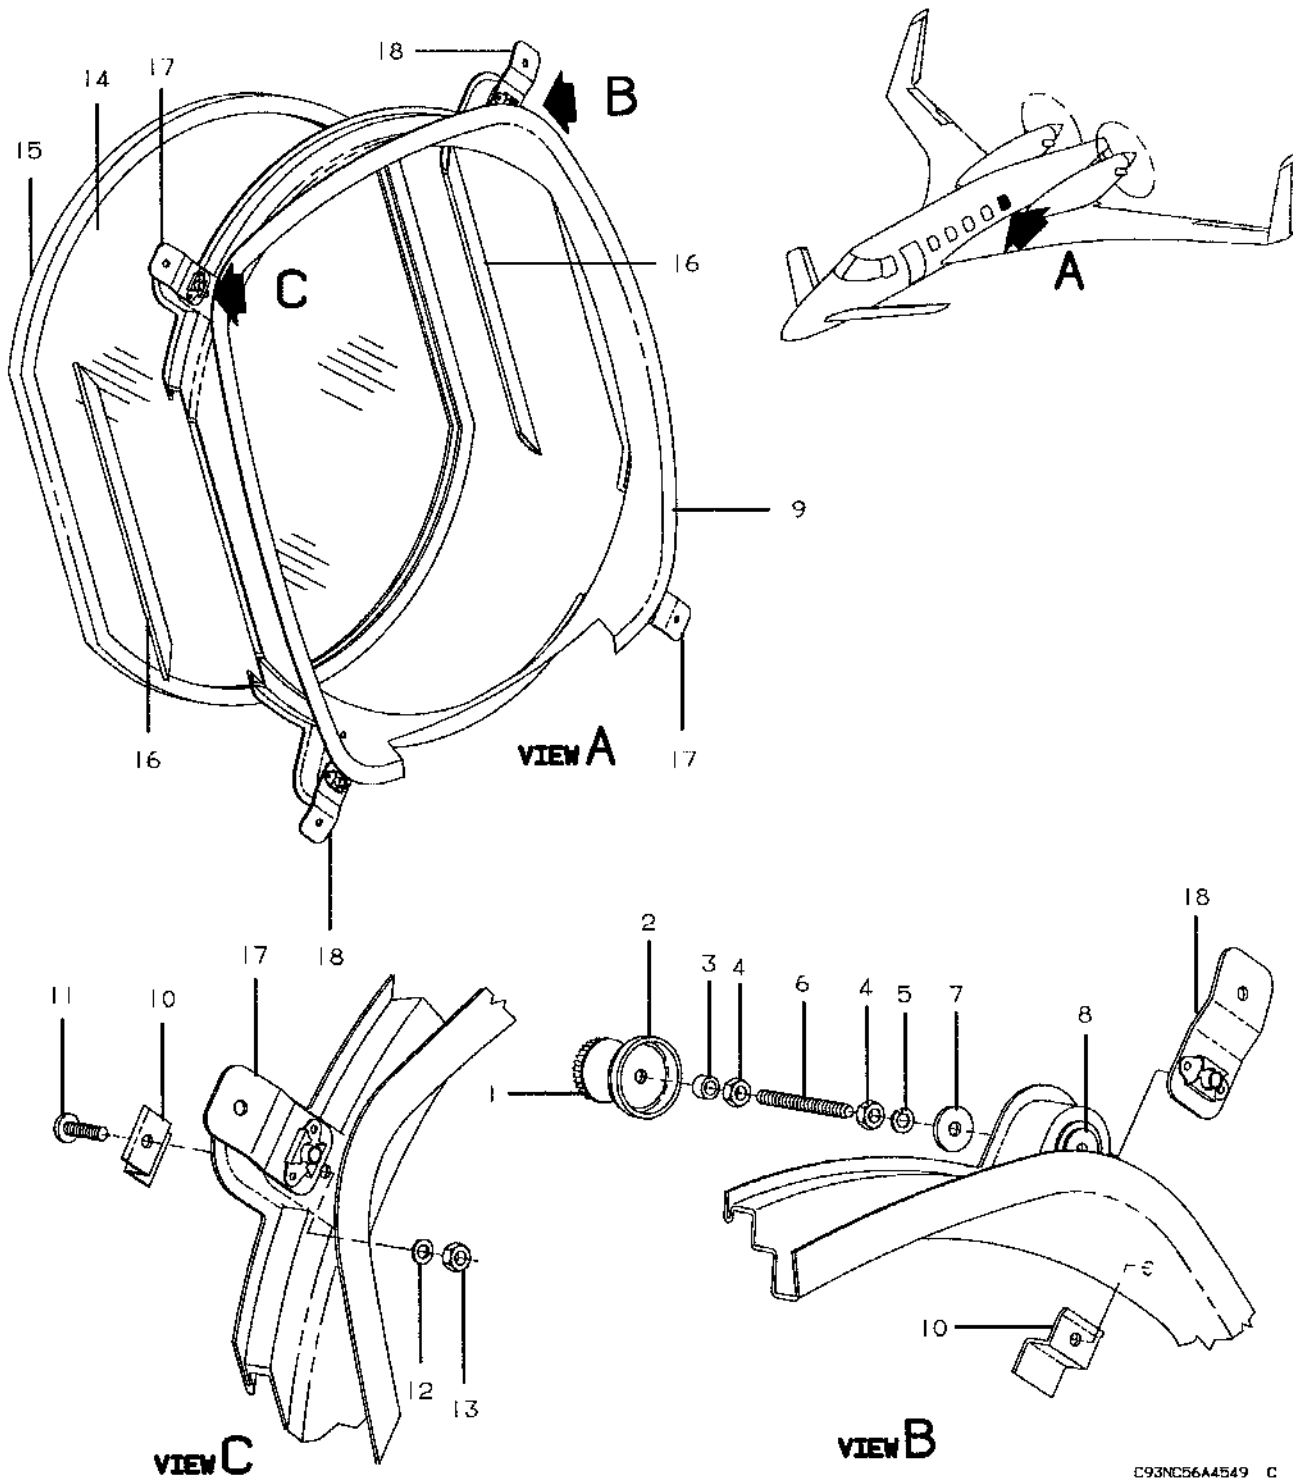

C93NC56A4549 C

FIGURE 20-20.AFT TOILET WINDOW INSTALLATION

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-20	122-530393-1	WINDOW INSTL, AFT TOILET/LH/	NP	1
	122-530393-2	WINDOW INSTL, AFT TOILET/RH/	NP	1
	122-530217-9	. STOP ASSY	4	
- 1	SJ3651	. . LOCK, DUAL	1	
- 2	122-530217-11	. . CAP	1	
- 3	NAS43DD3-12	. . SPACER	1	
- 4	AN315-3R	. . NUT	2	
- 5	MS35338-138	. . WASHER, LOCK	1	
- 6	132131-3-14	. . STUD/ALTERNATE FOR 132151-3-16/	1	
	132151-3-16	. . STUD/ALTERNATE FOR 132131-3-14/	1	
- 7	100951P125ZW	. WASHER	4	
	122-530394-1	. RETAINER ASSY	1	
- 8	122-530218-3	. . MOUNT, SHOCK	4	
- 9	122-530394-3	. . HOUSING, WINDOW	1	
-10	122-530394-11	. . BRACKET ASSY	4	
		/ATTACHING PARTS/		
-11	MS35206-245	. . SCREW	1	
-12	AN960-8	. . WASHER	1	
-13	MS21044N08	. . NUT	1	
		★		
	122-530394-5	. . WINDOW PANE ASSY	1	
-14	122-530394-7	. . WINDOW PANE/TINTED/	1	
-15	122-530394-9	. . MOLDING	1	
-16	122-530394-13	. . SEAL	2	
-17	122-530291-13	. CLIP ASSY/RED/	2	
-18	122-530291-17	. CLIP ASSY/YELLOW/	2	

CODES OF EFFECTIVITY

1 NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 57-00-00 WINGS

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
57-00-00	1	11/04/94	
57-00-00	2	11/04/94	LIST OF PAGES & TABLE OF CONTENTS
57-10-00	1	02/25/94	
57-10-00	2	02/25/94	AFT WING INSTALLATION
57-10-00	3	02/25/94	
57-10-00	4	02/25/94	
57-10-00	5	02/25/94	
57-10-00	6	02/25/94	
57-10-00	7	02/25/94	
57-10-10	1	02/25/94	
57-10-10	2	11/04/94	AFT WING
57-10-10	3	11/04/94	
57-10-10	4	11/04/94	
57-10-10	5	11/04/94	
57-10-20	1	02/25/94	
57-10-20	2	02/25/94	AFT WING BOX ASSEMBLY
57-10-20	3	02/25/94	
57-10-20	4	02/25/94	
57-10-20	5	02/25/94	
57-10-20	6	02/25/94	
57-10-20	7	02/25/94	
57-10-20	8	02/25/94	
57-10-20	9	02/25/94	
57-10-20	10	02/25/94	
57-10-20	11	02/25/94	
57-11-00	1	02/25/94	
57-11-00	2	02/25/94	MAIN LANDING GEAR CLOSURE SUPPORT
57-11-00	3	02/25/94	NC-4 THRU NC-33
57-11-10	1	02/25/94	
57-11-10	2	02/25/94	MAIN LANDING GEAR CLOSURE SUPPORT
57-11-10	3	02/25/94	NC-34 AND AFTER
57-20-00	1	02/25/94	
57-20-00	2	02/25/94	FLAP FAIRINGS
57-20-00	3	02/25/94	
57-20-00	4	02/25/94	
57-20-00	5	02/25/94	
57-20-00	6	02/25/94	
57-20-00	7	02/25/94	
57-20-10	1	02/25/94	
57-20-10	2	02/25/94	WING ELECTRICAL WIRE CONDUIT
57-20-10	3	02/25/94	
57-20-10	4	02/25/94	
57-20-10	5	02/25/94	
57-20-10	6	02/25/94	
57-20-10	7	02/25/94	
57-20-10	8	02/25/94	
57-20-10	9	02/25/94	
57-20-10	10	02/25/94	
57-20-10	11	02/25/94	
57-20-10	12	02/25/94	
57-20-10	13	02/25/94	
57-20-10	14	02/25/94	
57-20-10	15	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 57-00-00 WINGS

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
57-20-20	1	02/25/94	ELEVON FENCE.....
57-20-20	2	02/25/94	
57-20-20	3	02/25/94	
57-20-30	1	02/25/94	AFT WING FLAP COVE.....
57-20-30	2	02/25/94	
57-20-30	3	02/25/94	
57-20-40	1	02/25/94	AFT WING ACCESS DOORS.....
57-20-40	2	02/25/94	
57-20-40	3	02/25/94	
57-20-40	4	02/25/94	
57-20-40	5	02/25/94	
57-21-00	1	02/25/94	AFT WING TRAILING EDGE INBD COVE.....
57-21-00	2	02/25/94	
57-21-00	3	02/25/94	
57-40-00	1	11/04/94	LEADING EDGE.....
57-40-00	2	11/04/94	
57-40-00	3	11/04/94	
57-40-00	4	11/04/94	
57-40-00	5	11/04/94	
57-40-10	1	02/25/94	AFT WING LEADING EDGE VORTILON.....
57-40-10	2	02/25/94	
57-40-10	3	02/25/94	
57-50-00	1	02/25/94	FLAP INSTALLATION.....
57-50-00	2	02/25/94	
57-50-00	3	02/25/94	
57-50-00	4	02/25/94	
57-50-00	5	02/25/94	
57-60-00	1	02/25/94	ELEVON INSTALLATION.....
57-60-00	2	02/25/94	
57-60-00	3	02/25/94	
57-60-00	4	02/25/94	
57-60-00	5	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-10-00
AFT WING INSTALLATION

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

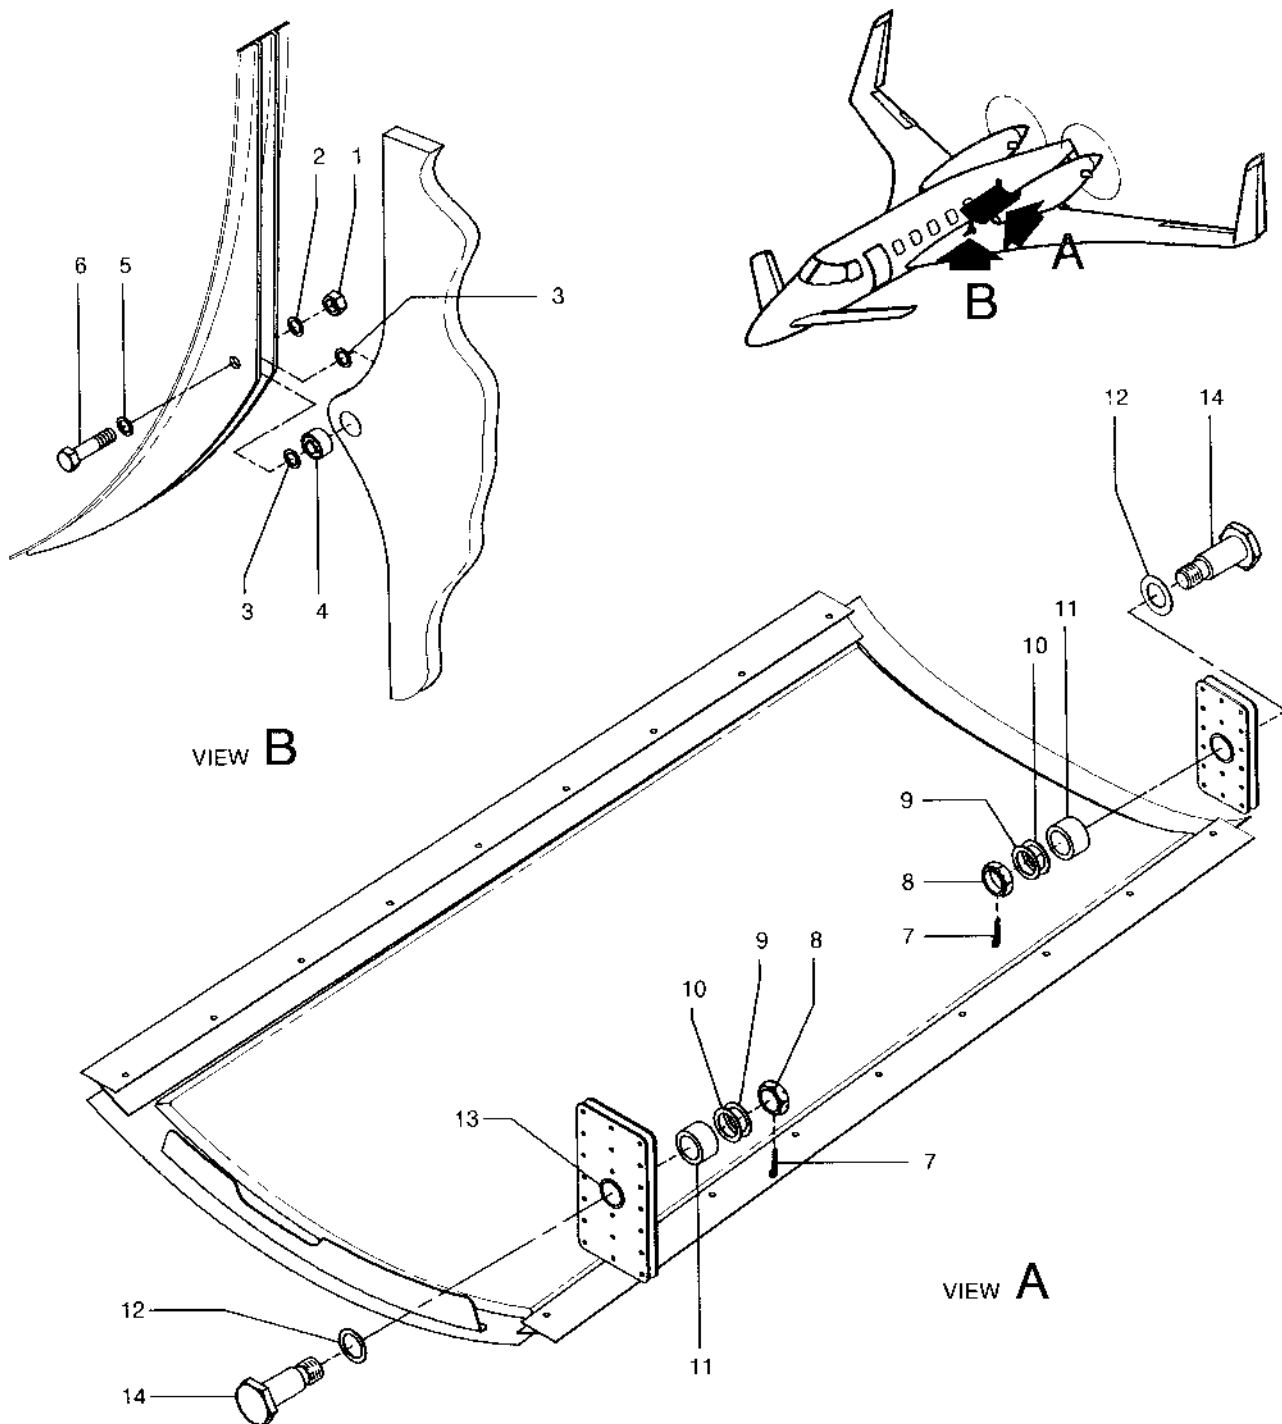


2000-031-05

FIGURE 10-00.AFT WING INSTALLATION
/SHEET 1 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-100000-9	WING INSTL, AFT	NP	
	122-100010-35	. WING ASSY, AFT/SEE CHAPTER 57-10-10/	1	
- 1	NAS509-7C	. NUT	2	
- 2	AN960C716	. WASHER	2	
- 3	AN960C716LL	. WASHER/.015 MAXIMUM GAP BETWEEN MAIN LANDING GEAR FWD SPAR AND FUSELAGE/	AR	
- 4	MS21231-7	. BEARING	2	
- 5	AN960C716L	. WASHER	2	
- 6	NAS1307-15D	. BOLT	2	
- 7	MS24665-380	. PIN, COTTER	4	
- 8	AN320C20	. NUT	4	
- 9	AN960C2016L	. WASHER	AR	
- 10	AN960C2016	. WASHER	AR	
- 11	122-100137-5	. WASHER	4	
- 12	MS20002C22	. WASHER	4	
- 13	122-100130-1	. BUSHING	4	
- 14	122-100137-7	. BOLT/ALTERNATE FOR 122-100137-3 AND -9/	AR	
	122-100137-3	. BOLT/FIRST ALTERNATE FOR 122-100137-7/ /MAXIMUM OF ONE PER SPAR/	AR	
	122-100137-9	. BOLT/ALTERNATE FOR 122-100137-7/MAXIMUM OF ONE PER SPAR/	AR	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

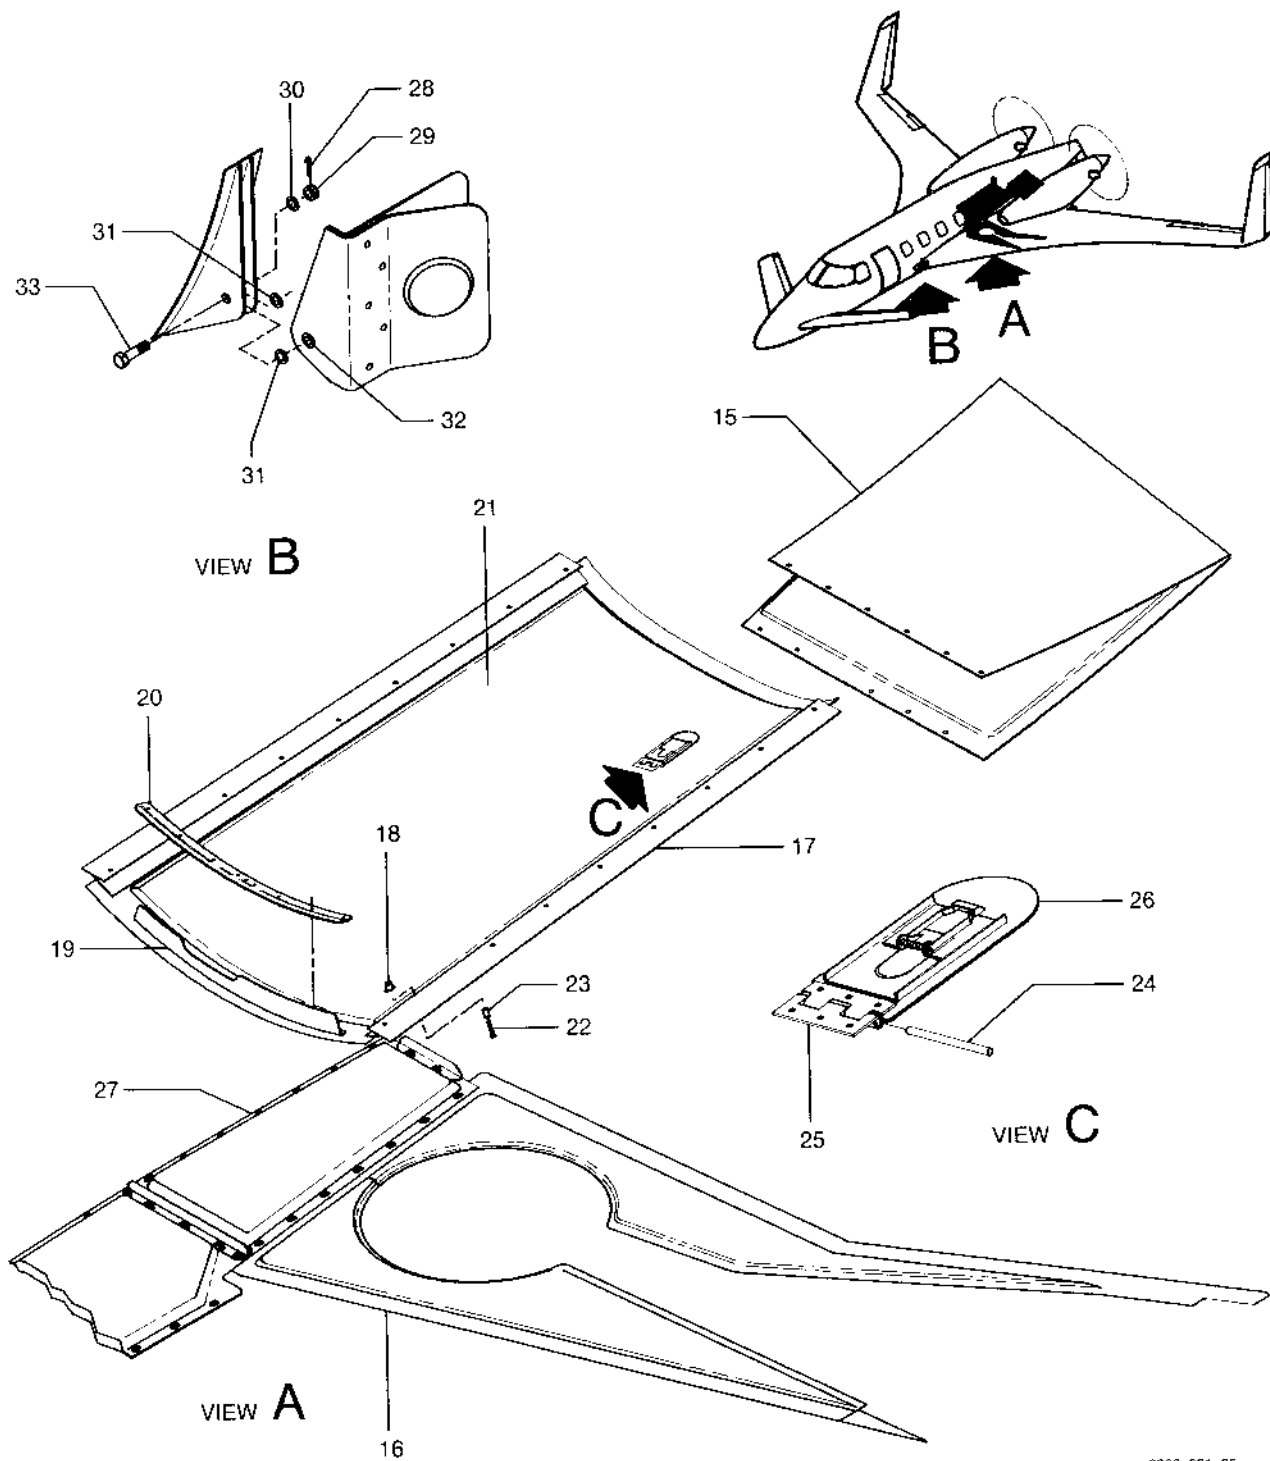


2000-031-06

FIGURE 10-00.AFT WING INSTALLATION
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00 - 15	122-100030-1	. COVE INSTL, LH INBD TRAILING EDGE/SEE..... CHAPTER 57-21-00/	NP	
	122-100030-2	. COVE INSTL, RH INBD TRAILING EDGE/SEE..... CHAPTER 57-21-00/	NP	
- 16	122-100115-77	. SUPPORT INSTL, LH MAIN LANDING GEAR CLOSURE	NP	8
	122-100037-1	. SUPPORT INSTL, LH MAIN LANDING GEAR CLOSURE	NP	9
		/SEE CHAPTERS 57-11-00 & 57-11-10/		
	122-100115-78	. SUPPORT INSTL, RH MAIN LANDING GEAR CLOSURE.....	NP	8
	122-100037-2	. SUPPORT INSTL, RH MAIN LANDING GEAR CLOSURE.....	NP	9
		/SEE CHAPTERS 57-11-00 & 57-11-10/		
	122-100078-63	. PANEL INSTL, AFT WING BOX SHEAR.....	NP	3
	122-100078-83	. PANEL INSTL, AFT WING BOX SHEAR.....	NP	6
	122-100078-91	. PANEL INSTL, AFT WING BOX SHEAR.....	NP	5
- 17	122-100078-37	. . ANGLE ASSY, LH ATTACH PANEL.....	1	
	122-100078-79	. . ANGLE ASSY, LH ATTACH PANEL.....	1	4
	122-100078-95	. . ANGLE ASSY, LH ATTACH PANEL.....	1	5
	122-100078-38	. . ANGLE ASSY, RH ATTACH PANEL.....	1	
	122-100078-80	. . ANGLE ASSY, RH ATTACH PANEL.....	1	4
	122-100078-96	. . ANGLE ASSY, RH ATTACH PANEL.....	1	5
	122-100078-89	. . SHIM.....	2	5
- 18	26R6-1BB	. . . RECEPTACLE	18	4
	CA18324-1P	. . . NUT, STUD.....	18	5
	CA18185	. . . GROMMET ASSY.....	18	5
	NAS24694C49	. . . SCREW.....	5	7
	NAS1169C10L	. . . WASHER.....	5	7
	SL607-3-9CM	. . . INSERT.....	5	7
- 19	122-100078-61	. . ANGLE, FRONT ATTACH	1	
- 20	122-100078-41	. . STRIP, CLOSURE.....	1	
	122-580122-13	. . BRACKET.....	1	5
- 21	122-100078-65	. . PANEL, AFT WING BOX SHEAR	1	3
	122-100078-85	. . PANEL, AFT WING BOX SHEAR	1	6
- 22	2700-5S	. . . STUD	18	4
	AN960C416L	. . . WASHER	18	
- 23	2600SW	. . . RETAINER.....	18	4
	000-110134-1	. . . DOOR ASSY, EXTERNAL POWER RECEPTACLE	1	4
		ACCESS		
- 24	MS20253P2-200	 PIN, HINGE	1	4
- 25	000-110134-13	 HINGE, HALF.....	1	4
- 26	000-110134-3	 DOOR ASSY.....	1	4
	H7215AE	 LATCH	1	4
	000-110134-5	 DOOR ASSY, WELDED.....	1	4
- 27	122-100040-43	. FAIRING INSTL, LH WING TO FUSELAGE/SEE..... CHAPTER 53/	NP	
	122-100040-44	. FAIRING INSTL, RH WING TO FUSELAGE/SEE	NP	
		CHAPTER 53/		
- 28	MS24665-238	PIN, COTTER	2	
- 29	130909N18	NUT	2	
- 30	AN960-616LL	WASHER.....	AR	
- 31	AN960-616	WASHER.....	AR	
- 32	NAS77-6-12	BUSHING/PRESS FIT/	2	
- 33	NAS1106-12D	BOLT	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

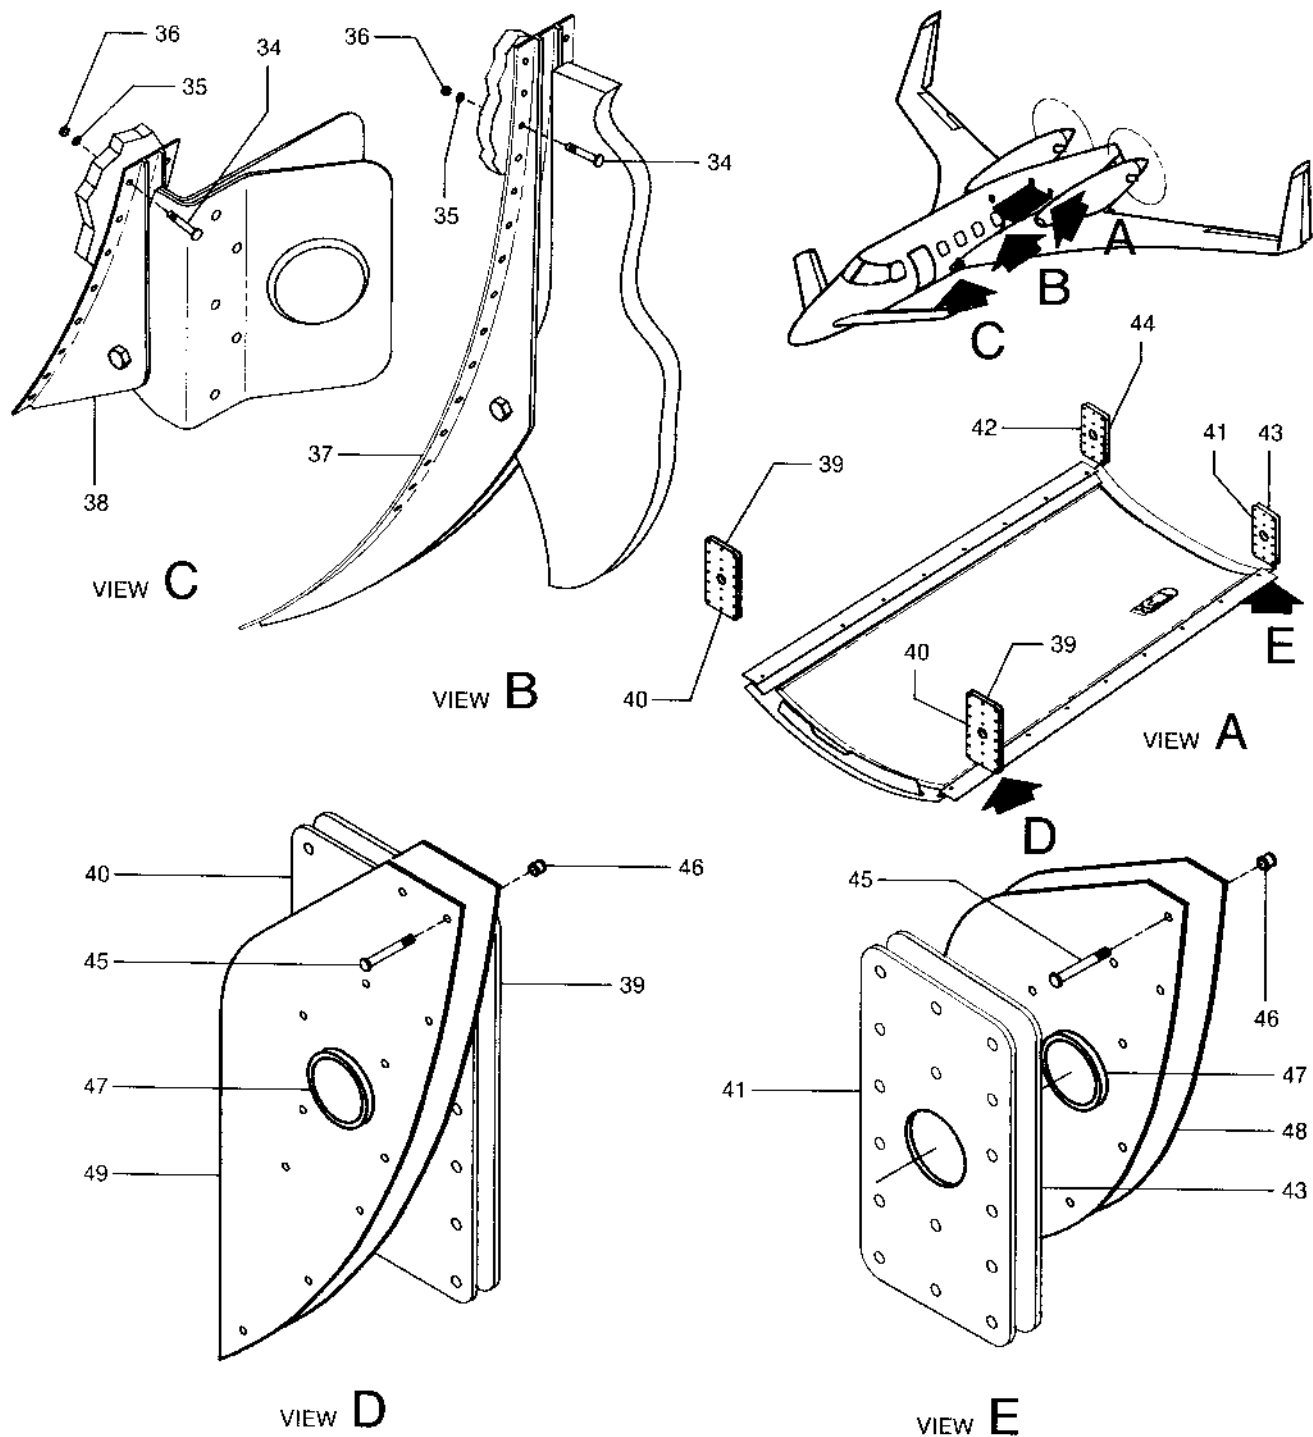

2000-031-07

FIGURE 10-00.AFT WING INSTALLATION
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00 -34	HL10V6-14	PIN.....	AR	
-35	HL82-6CU	WASHER.....	AR	
-36	HL82-6A	COLLAR.....	AR	
-37	122-430036-3	FITTING, LH FUSELAGE ATTACH/STA. 324/.....	1	
	122-430036-4	FITTING, RH FUSELAGE ATTACH/STA. 324/.....	1	
-38	122-430035-5	FITTING, FUSELAGE ATTACH/STA. 237/.....	2	
-39	122-100070-1	FITTING, WING FRONT SPAR ATTACH/AFT SIDE/.....	2	
-40	122-100070-3	FITTING, WING FRONT SPAR ATTACH/FWD SIDE/.....	2	
-41	122-100071-2	FITTING, LH AFT SPAR/FWD SIDE/.....	1	1
	122-100071-6	FITTING, LH AFT SPAR/FWD SIDE/.....	1	2
-42	122-100071-1	FITTING, RH AFT SPAR/FWD SIDE/.....	1	1
	122-100071-5	FITTING, RH AFT SPAR/FWD SIDE/.....	1	2
-43	122-100071-3	FITTING, LH AFT SPAR/AFT SIDE/.....	1	
-44	122-100071-4	FITTING, RH AFT SPAR/AFT SIDE/.....	1	
-45	HL10V6-23	PIN, FUSELAGE TO WING ATTACH/STA. 357 AND 416/.....	AR	
-46	HL379-6	COLLAR, FUSELAGE TO WING ATTACH/STA. 357 AND STA. 416/.....	AR	
-47	122-430126-1	BUSHING, FUSELAGE/STA. 357 AND 416/.....	4	10
	122-430126-5	BUSHING, FUSELAGE/STA. 357 AND 416/.....	4	11
-48	122-430124-3	REINFORCEMENT, FUSELAGE/STA. 416/.....	4	
-49	122-430124-1	REINFORCEMENT, FUSELAGE/STA. 357/.....	4	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-40	2	NC-41 AND AFTER
3	NC-4 THRU NC-29	4	NC-4 THRU NC-36
5	NC-37 AND AFTER	6	NC-30 THRU NC-36
7	NC-30 AND AFTER	8	NC-4 THRU NC-33
9	NC-34 AND AFTER	10	NC-4 THRU NC-37
11	NC-38 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-10-10
AFT WING

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

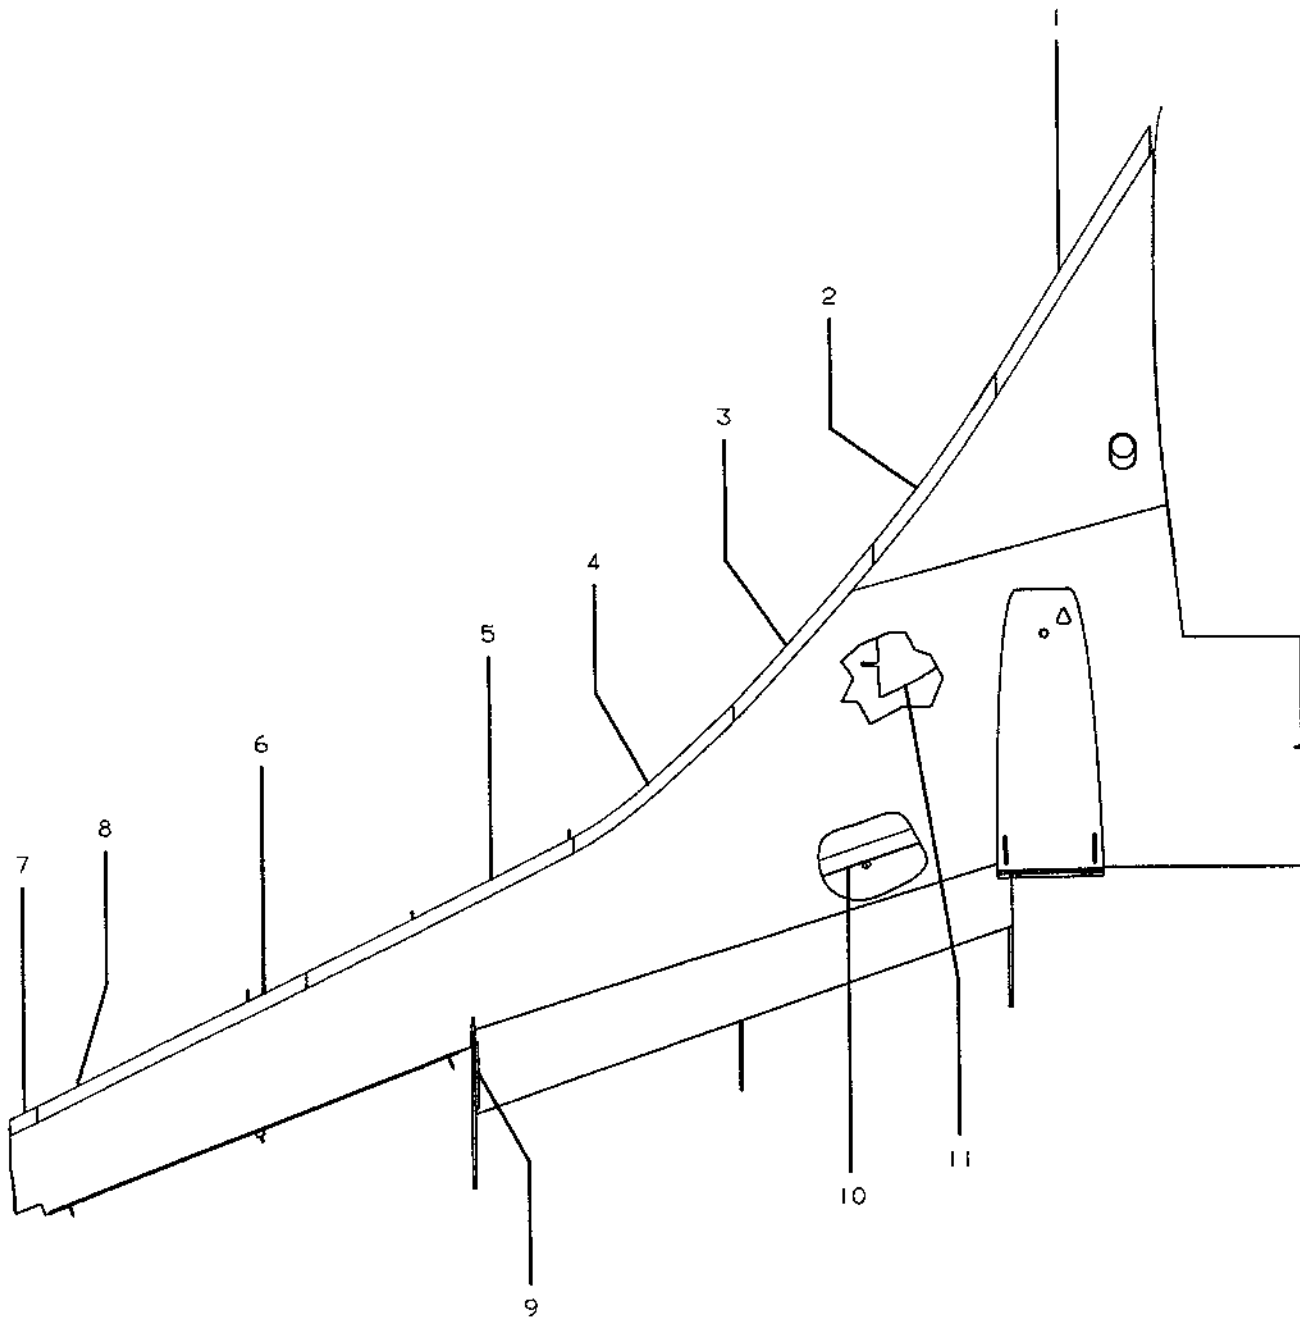


C94NC57A1794 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	122-100010-35	WING ASSY, AFT/COMPLETE/	1	
- 1	R 122-100151-1	. LEADING EDGE INSTL, LH/SEE CH. 57-40-00/	NP	1
	R 122-100151-2	. LEADING EDGE INSTL, RH/SEE CH. 57-40-00/	NP	1
- 2	R 122-100152-1	. LEADING EDGE INSTL, LH/SEE CH. 57-40-00/	NP	1
	R 122-100152-2	. LEADING EDGE INSTL, RH/SEE CH. 57-40-00/	NP	1
- 3	R 122-100153-1	. LEADING EDGE INSTL, LH/SEE CH. 57-40-00/	NP	1
	R 122-100153-2	. LEADING EDGE INSTL, RH/SEE CH. 57-40-00/	NP	1
- 4	R 122-100154-1	. LEADING EDGE INSTL, LH/SEE CH. 57-40-00/	NP	1
	R 122-100154-2	. LEADING EDGE INSTL, RH/SEE CH. 57-40-00/	NP	1
- 5	R 122-100155-1	. LEADING EDGE INSTL, LH/SEE CH. 57-40-00/	NP	1
	R 122-100155-2	. LEADING EDGE INSTL, RH/SEE CH. 57-40-00/	NP	1
- 6	R 122-100156-1	. LEADING EDGE INSTL, LH/SEE CH. 57-40-00/	NP	1
	R 122-100156-2	. LEADING EDGE INSTL, RH/SEE CH. 57-40-00/	NP	1
- 7	R 122-100118-1	. SKIN INSTL, LH LEADING EDGE/SEE CH. 57-40-00/	NP	1
	R 122-100118-2	. SKIN INSTL, RH LEADING EDGE/SEE CH. 57-40-00/	NP	1
	R 122-100157-1	. LEADING EDGE INSTL, LH/SEE CH. 57-40-00/	NP	2
	R 122-100157-2	. LEADING EDGE INSTL, RH/SEE CH. 57-40-00/	NP	2
- 8	R 122-100021-1	. VORTILON INSTL, LH/SEE CHAPTER 57-40-10/	NP	
	122-100021-2	. VORTILON INSTL, RH/SEE CHAPTER 57-40-10/	NP	
- 9	R 122-100167-1	. FENCE INSTL, LH ELEVON/SEE CHAPTER 57-20-20/	NP	
	122-100167-2	. FENCE INSTL, RH ELEVON/SEE CHAPTER 57-20-20/	NP	
- 10	R 122-100149-1	. COVE INSTL, LH/SEE CHAPTER 57-20-30/	NP	5
	122-100149-51	. COVE INSTL, LH/SEE CHAPTER 57-20-30/	NP	6
	122-100149-2	. COVE INSTL, RH/SEE CHAPTER 57-20-30/	NP	5
	122-100149-52	. COVE INSTL, RH/SEE CHAPTER 57-20-30/	NP	6
- 11	R 122-100100-1	. DOOR INSTL, LH MAIN LANDING GEAR/SEE CHAPTER 52/	NP	
	122-100100-2	. DOOR INSTL, RH MAIN LANDING GEAR/SEE CHAPTER 52/	NP	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

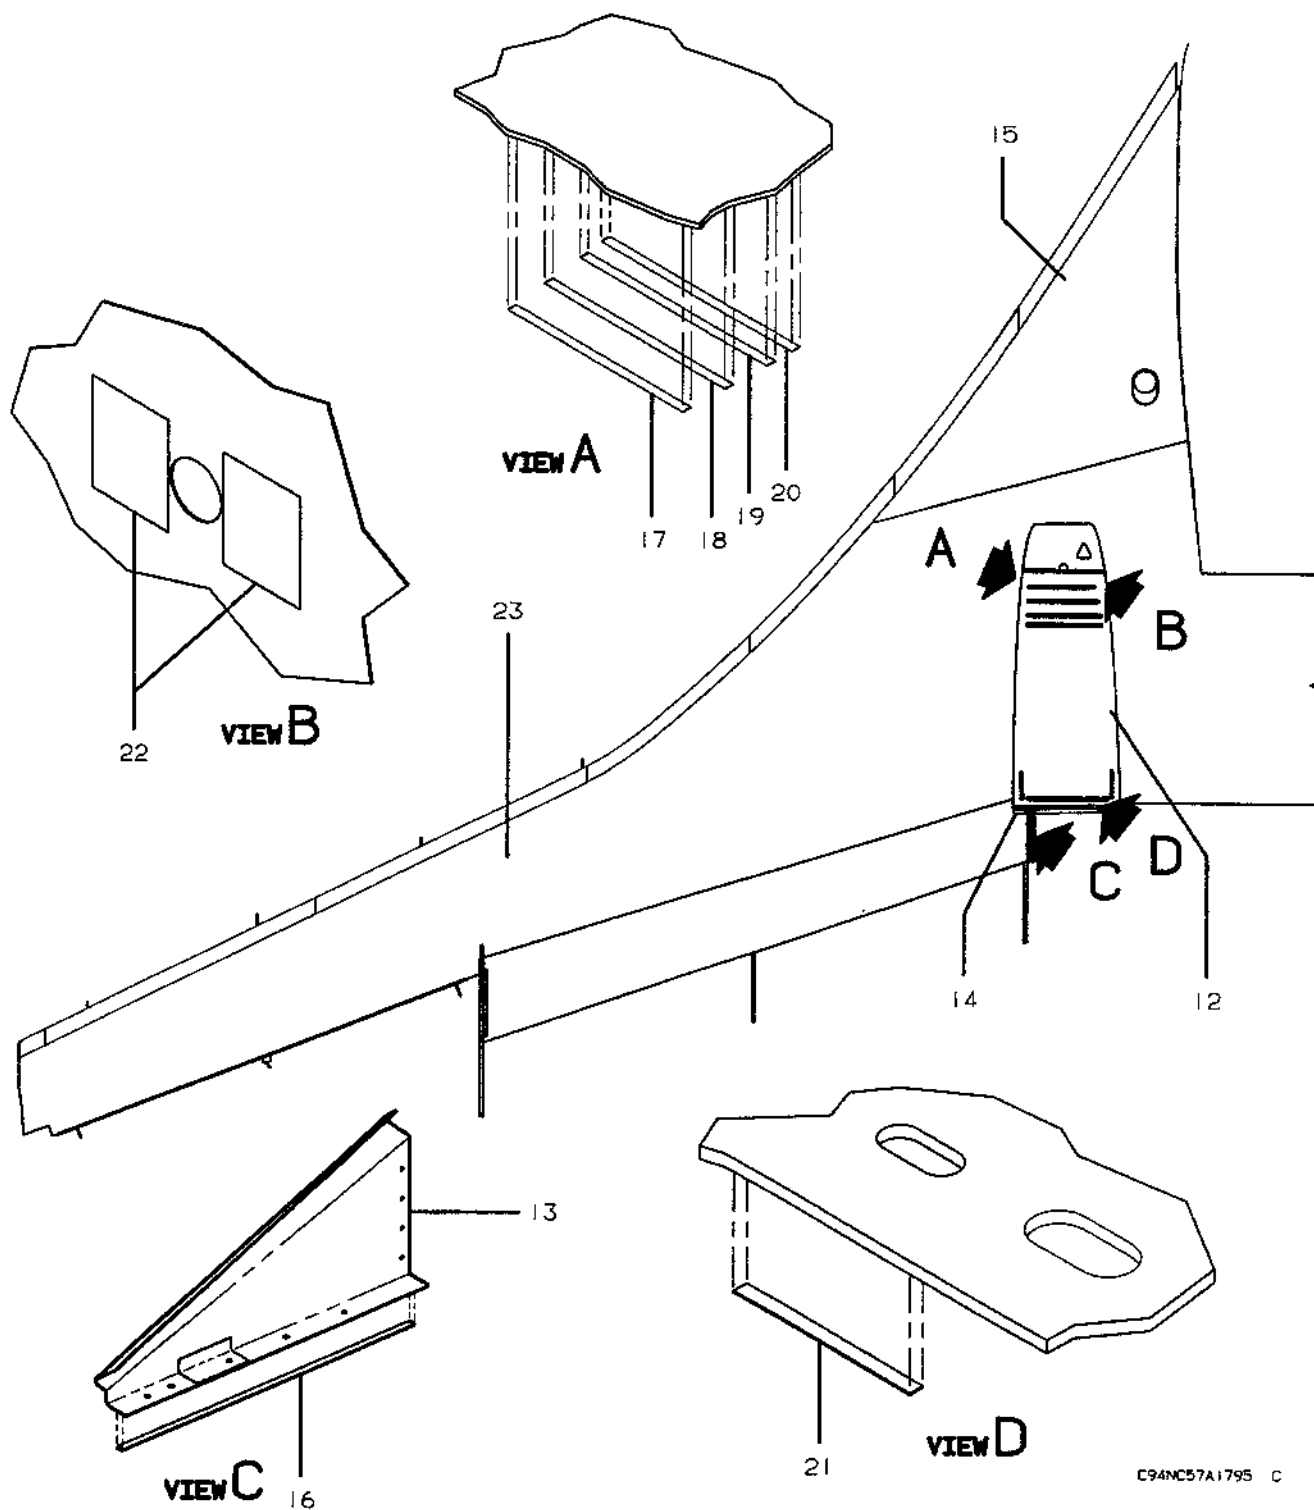

C94NC57A1795 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 - 12	R 122-980038-1	. NACELLE INSTL, LH/SEE CHAPTER 54/	NP	
	122-980038-2	. NACELLE INSTL, RH/SEE CHAPTER 54/	NP	
- 13	R 122-980052-49	. FIREWALL ASSY, LH OUTBD/SEE CHAPTER 54/	1	
	122-980052-50	. FIREWALL ASSY, RH OUTBD/SEE CHAPTER 54/	1	
	MS21048L3K	. NUTPLATE	10	
- 14	R 122-980056-1	. INSULATION INSTL, LH FIREWALL/SEE CHAPTER	NP	3
		54/		
	122-980056-3	. INSULATION INSTL, LH FIREWALL/SEE CHAPTER	NP	4
		54/		
	122-980056-2	. INSULATION INSTL, RH FIREWALL/SEE CHAPTER	NP	3
		54/		
	122-980056-4	. INSULATION INSTL, RH FIREWALL/SEE CHAPTER	NP	4
		54/		
- 15	R 122-120100-17	. TANK INSTL, LH FUEL/SEE CHAPTER 28/	NP	
	122-120100-18	. TANK INSTL, RH FUEL/SEE CHAPTER 28/	NP	
- 16	R 122-100010-23	. SHIM	2	
- 17	R 122-100010-29	. STRAP, FUEL CELL SUPPORT	2	
- 18	R 122-100010-31	. STRAP, FUEL CELL SUPPORT	2	
- 19	R 122-100010-33	. STRAP, FUEL CELL SUPPORT	2	
- 20	R 122-100010-43	. STRAP, FUEL CELL SUPPORT	2	
- 21	R 122-100010-47	. FILLER ASSY, LH	7	
	122-100010-48	. FILLER ASSY, RH	1	
- 22	R 122-100010-45	. STRAP, FUEL CELL SUPPORT	4	
- 23	R 122-100020-53	. WING BOX ASSY/SEE CHAPTER 57-10-20/	1	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-20	2	NC-21 AND AFTER
3	NC-4 THRU NC-43	4	NC-44 AND AFTER
5	NC-4 THRU NC-25	6	NC-26 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-10-20
AFT WING BOX ASSEMBLY

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

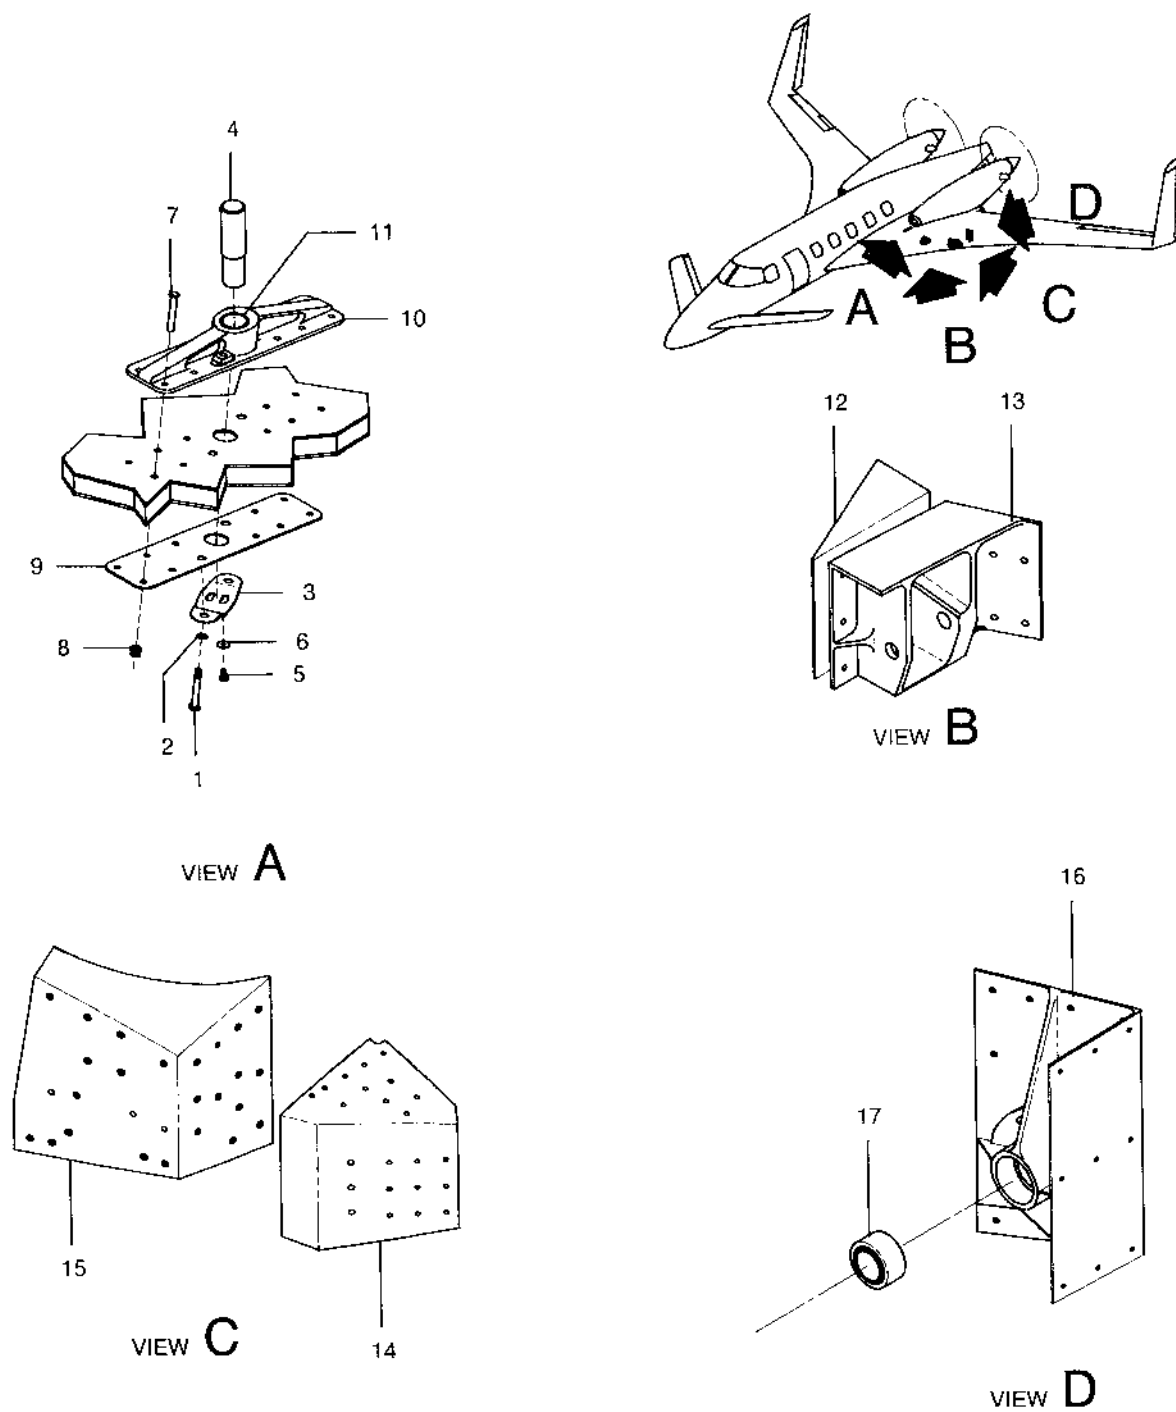


2000-036-01

FIGURE 10-20. AFT WING BOX ASSEMBLY
/SHEET 1 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20	122-100020-53	BOX ASSY, AFT WING	NP	
	122-100097-1	. FITTING INSTL, LH DRAG SHEAR ATTACH	NP	
	122-100097-2	. FITTING INSTL, RH DRAG SHEAR ATTACH	NP	
- 1	AN4CH17	. . BOLT	2	
- 2	AN960C416L	. . WASHER	2	
- 3	122-100097-3	. . RETAINER	1	
- 4	122-100096-5	. . PIN	1	
- 5	AN3CH3	. . BOLT	1	
- 6	105090CR050-3F	. . WASHER	1	
- 7	HL12V8-21	. . PIN	10	
- 8	HL198V8	. . COLLAR	10	
- 9	122-100095-5	. . DOUBLER	1	
- 10	122-100095-1	. . FITTING ASSY, LH DRAG SHEAR ATTACH	1	
	122-100095-2	. . FITTING ASSY, RH DRAG SHEAR ATTACH	1	
	MS21060L4	. . . NUTPLATE	2	
- 11	NAS75-16-103	. . . BUSHING	1	
- 12	122-100114-1	. FITTING, LH MAIN LANDING GEAR RETRACT	1	
	122-100114-2	. FITTING, RH MAIN LANDING GEAR RETRACT	1	
- 13	122-100114-5	. FITTING, LH MAIN LANDING GEAR RETRACT	1	
	122-100114-6	. FITTING, RH MAIN LANDING GEAR RETRACT	1	
- 14	122-100113-3	. FITTING, LH MAIN LANDING GEAR SUPPORT	1	
	122-100113-4	. FITTING, RH MAIN LANDING GEAR SUPPORT	1	
- 15	122-100065-3	. FITTING, LH MAIN LANDING GEAR FWD TRUNNION	1	
	122-100065-4	. FITTING, RH MAIN LANDING GEAR FWD TRUNNION	1	
- 16	122-100066-3	. FITTING, LH MAIN LANDING GEAR AFT TRUNNION	1	
	122-100066-4	. FITTING, RH MAIN LANDING GEAR AFT TRUNNION	1	
- 17	ABB22-101	. BEARING, TRUNNION FITTING/FWD	2	
		AND AFT/ALTERNATE FOR EL61268/		
	EL61268	. BEARING, TRUNNION FITTING/FWD	2	
		AND AFT/ALTERNATE FOR ABB22-101/		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

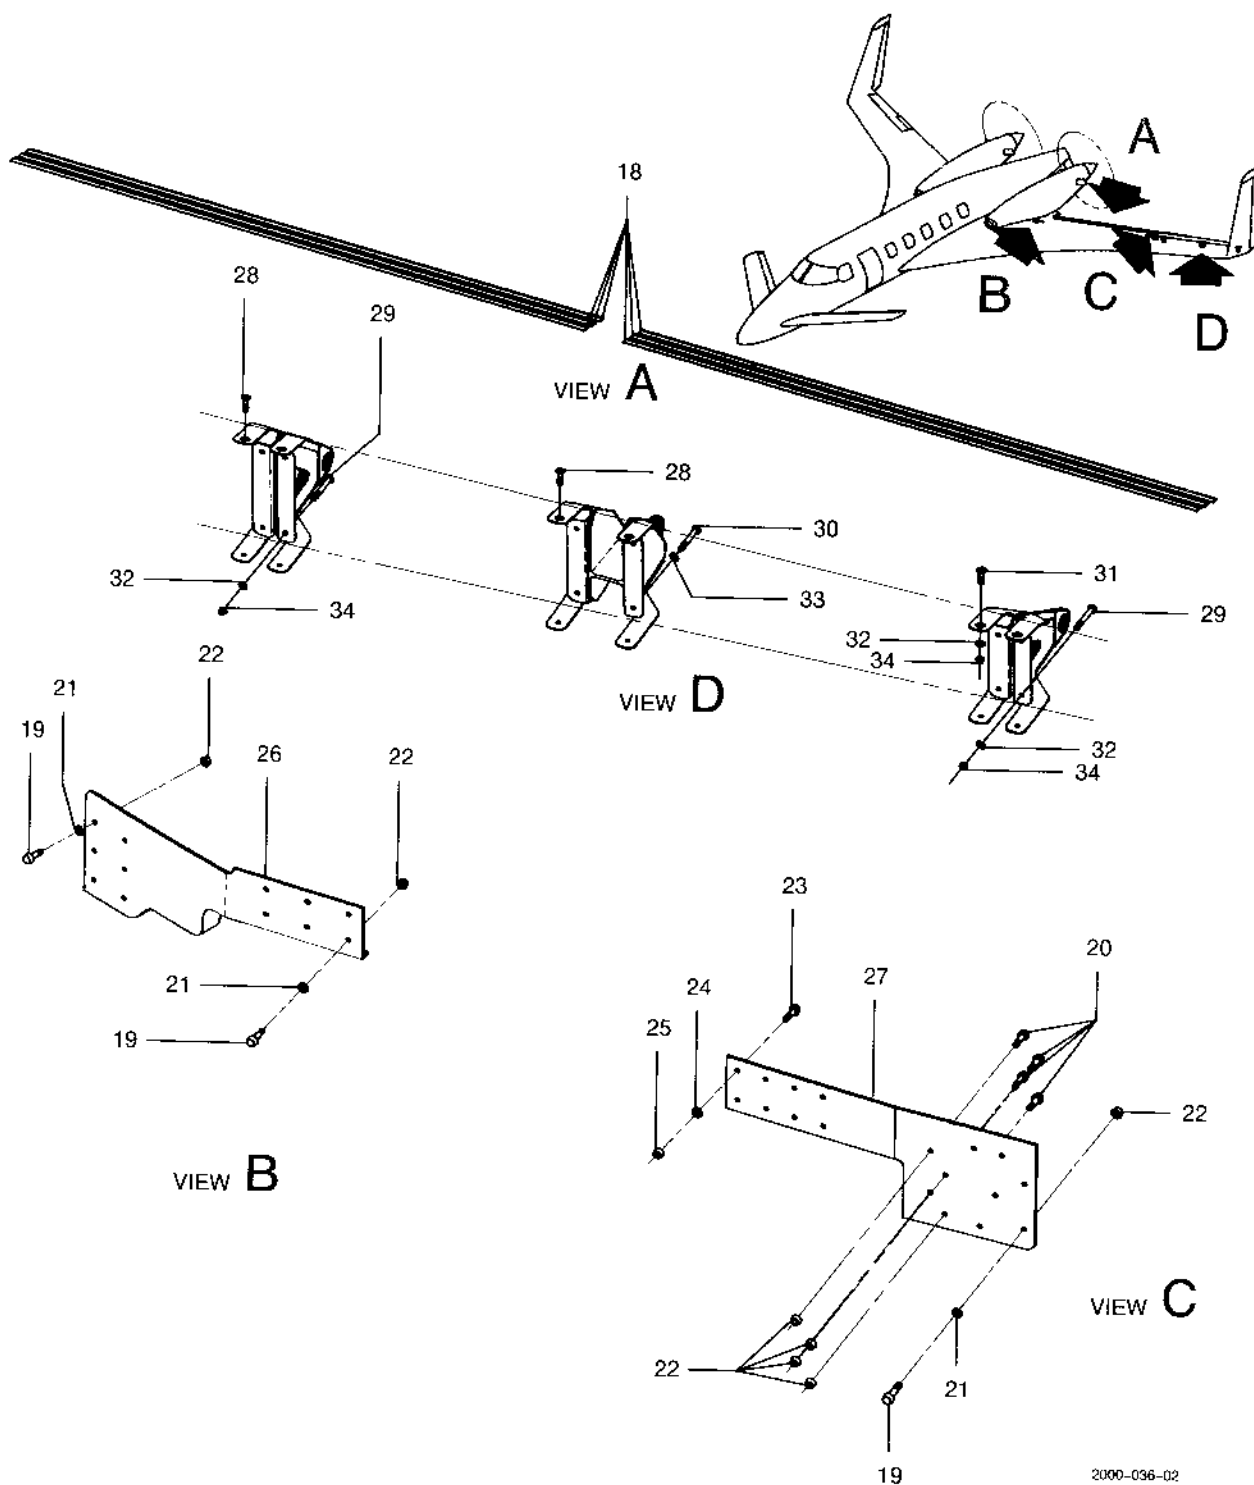



2000-036-02

FIGURE 10-20.AFT WING BOX ASSEMBLY
/SHEET 2 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
10-20	122-100038-1	. SPOILER INSTL, LH FLAP COVE.....	NP	
	122-100038-2	. SPOILER INSTL, RH FLAP COVE.....	NP	
- 18	122-100038-3	. . SPOILER	12	
	122-100079-73	. TRAILING EDGE INSTL, LH FLAP COVE.....	NP	
	122-100079-74	. TRAILING EDGE INSTL, RH FLAP COVE	NP	
- 19	HL10VR6-14	. . PIN/6 OUTBD LH AND RH/	18	
- 20	HL10VR6-16	. . PIN.....	4	
- 21	AN960C10L	. . WASHER/FAR SIDE/	18	
- 22	HL379V6	. . COLLAR	AR	
	SL602-3-250CM	. . INSERT.....	2	
	122-100079-75	. . COVE ASSY, LH.....	1	
	122-100079-76	. . COVE ASSY, RH	1	
	122-100079-77	. . SPAR ASSY, LH	1	
	122-100079-78	. . SPAR ASSY, RH.....	1	
- 23	HL10VR6-4	 PIN	8	
- 24	AN960C10L	 WASHER/FAR SIDE/	8	
- 25	HL379V6	 COLLAR	8	
- 26	122-100059-5	 FITTING, LH INBD	1	
	122-100059-6	 FITTING, RH INBD	1	
- 27	122-100059-13	 FITTING, LH OUTBD	1	
	122-100059-14	 FITTING, RH OUTBD	1	
	122-100075-1	. FITTING INSTL, LH ELEVON HINGE.....	NP	
	122-100075-2	. FITTING INSTL, RH ELEVON HINGE	NP	
- 28	MS24694C47	. . SCREW.....	8	
	SL607-3-6CM	. . INSERT.....	12	
- 29	MS27039C1-18	. . SCREW.....	8	
- 30	MS27039C1-04	. . SCREW.....	4	
- 31	MS24694C58	. . SCREW.....	4	
- 32	AN960C10L	. . WASHER	12	
	SL607-3-6CM	. . INSERT.....	12	
- 33	AN960-10L	. . WASHER	4	
- 34	MS21043-3	. . NUT	8	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

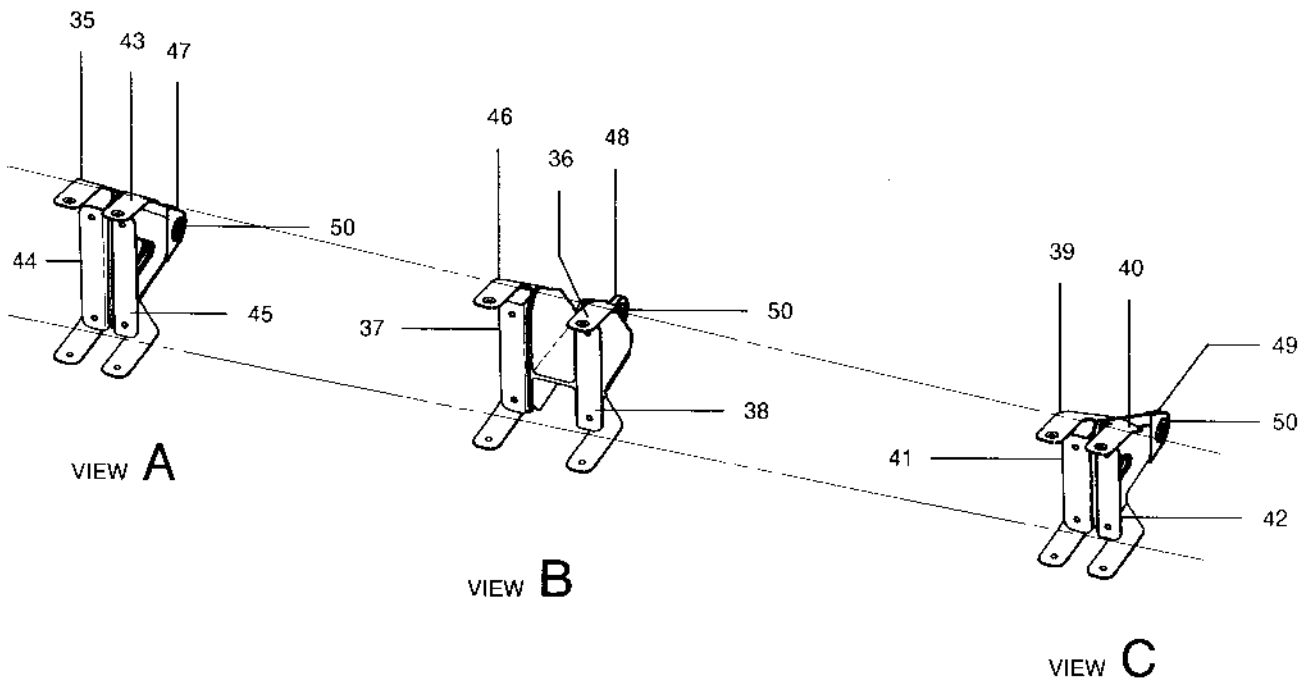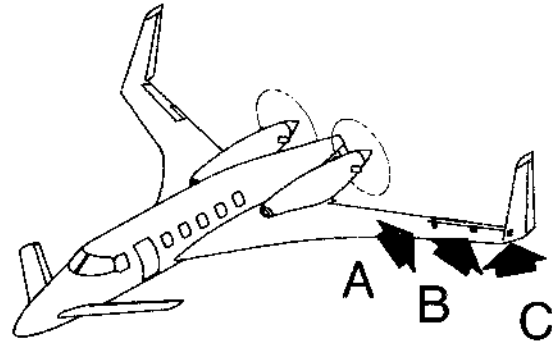


2000-036-03

FIGURE 10-20. AFT WING BOX ASSEMBLY
/SHEET 3 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20 -35	122-100073-1	.. BRACKET, LH.....	1	
	122-100073-2	.. BRACKET, RH.....	1	
-36	122-100073-11	.. BRACKET, LH.....	1	
	122-100073-12	.. BRACKET, RH.....	1	
-37	122-100073-13	.. BRACKET, LH.....	1	
	122-100073-14	.. BRACKET, RH.....	1	
-38	122-100073-15	.. BRACKET, LH.....	1	
	122-100073-16	.. BRACKET, RH.....	1	
-39	122-100073-17	.. BRACKET, LH.....	1	
	122-100073-18	.. BRACKET, RH.....	1	
-40	122-100073-19	.. BRACKET, LH.....	1	
	122-100073-20	.. BRACKET, RH.....	1	
-41	122-100073-21	.. BRACKET, LH.....	1	
	122-100073-22	.. BRACKET, RH.....	1	
-42	122-100073-23	.. BRACKET, LH.....	1	
	122-100073-24	.. BRACKET, RH.....	1	
-43	122-100073-3	.. BRACKET, LH.....	1	
	122-100073-4	.. BRACKET, RH.....	1	
-44	122-100073-5	.. BRACKET, LH.....	1	
	122-100073-6	.. BRACKET, RH.....	1	
-45	122-100073-7	.. BRACKET, LH.....	1	
	122-100073-8	.. BRACKET, RH.....	1	
-46	122-100073-9	.. BRACKET, LH.....	1	
	122-100073-10	.. BRACKET, RH.....	1	
-47	122-100074-13	.. FITTING ASSY, INBD.....	1	
-48	122-100074-15	.. FITTING ASSY, CENTER.....	1	
-49	122-100074-17	.. FITTING ASSY, OUTBD.....	1	
-50	MKP4	... BEARING/INBD, CENTER AND OUTBD/.....	1	
	122-100075-3	.. FILLER.....	12	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

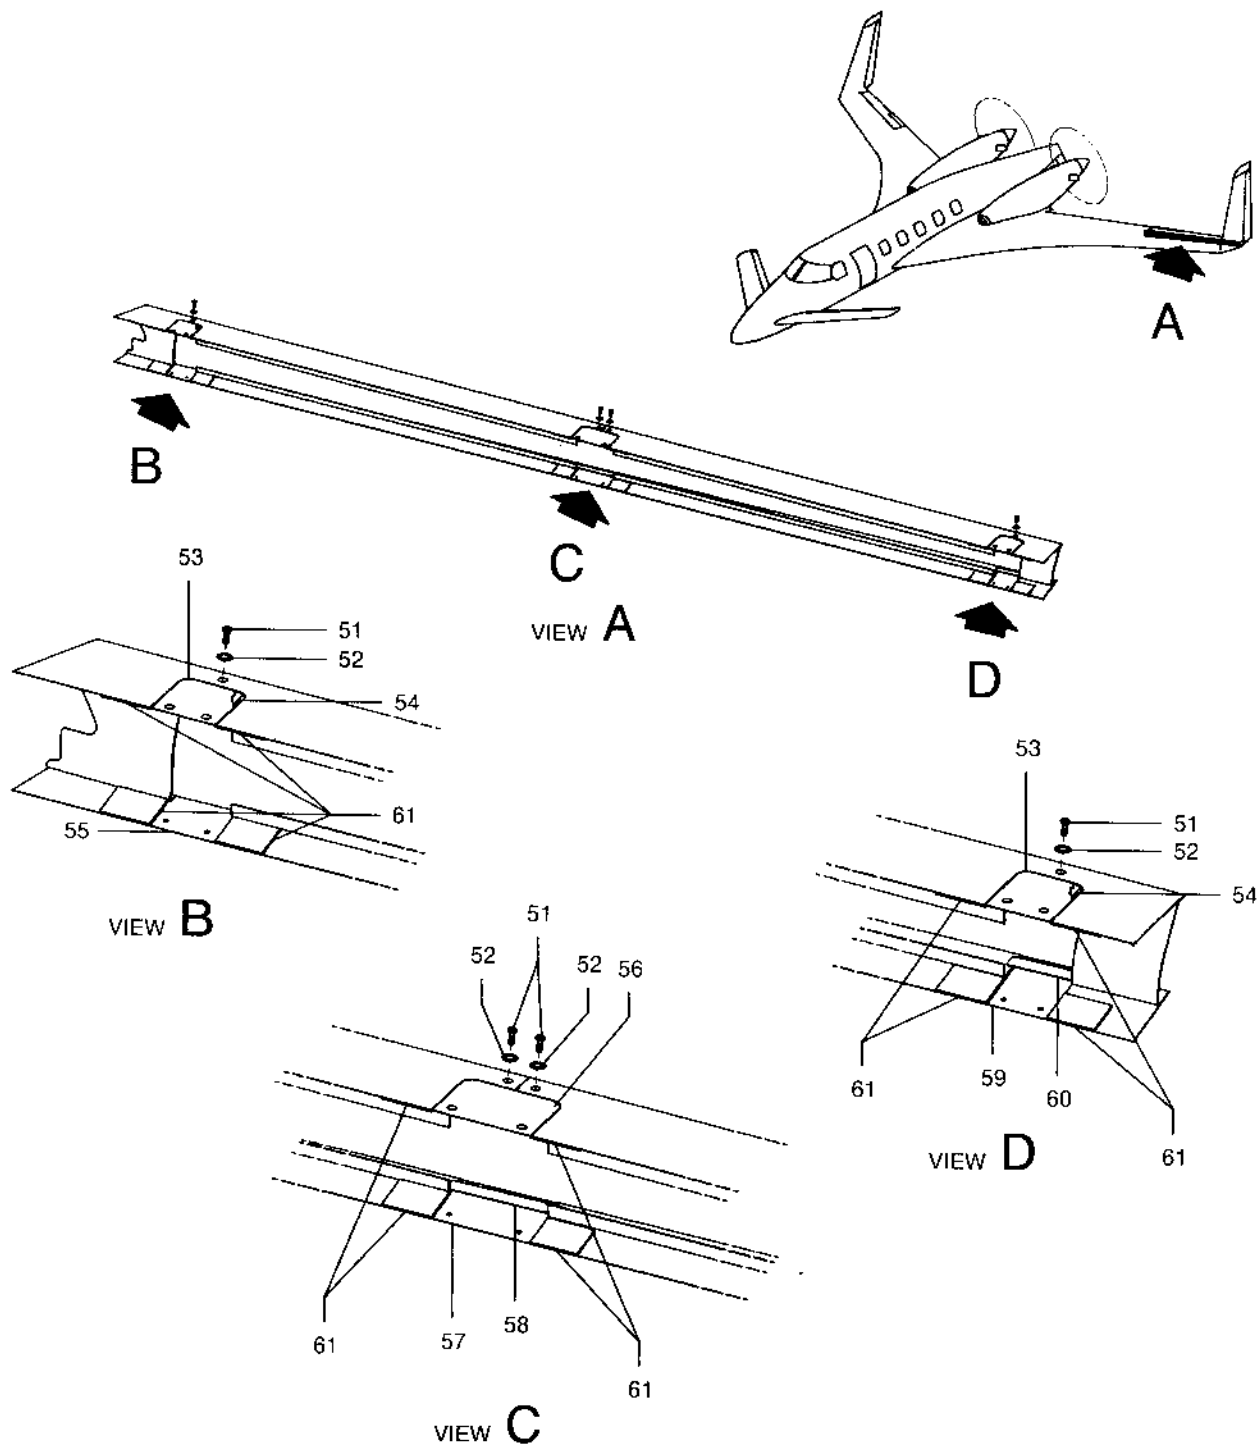


2000-036-04

FIGURE 10-20.AFT WING BOX ASSEMBLY
/SHEET 4 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20	122-100028-1	. COVE INSTL, LH ELEVON.....	NP	
	122-100028-2	. COVE INSTL, RH ELEVON	NP	
- 51	MS24694C48	. . SCREW.....	4	
- 52	NAS1169C10L	. . WASHER.....	4	
	122-100028-23	. . DOOR ASSY, UPPER INBD AND OUTBD HINGE.....	2	
		FITTING		
	MS21050L3	. . . NUTPLATE.....	1	
- 53	122-100028-41	. . . DOOR	2	
- 54	122-100028-39	. . . SUPPORT.....	2	
- 55	122-100028-27	. . DOOR, LOWER INBD HINGE FITTING.....	1	
- 56	122-100028-25	. . DOOR ASSY, CENTER UPPER HINGE FITTING	1	
	MS21050L3	. . . NUTPLATE.....	2	
	122-100028-43	. . . SUPPORT.....	1	
	122-100028-29	. . DOOR ASSY, CENTER LOWER HINGE FITTING	1	
- 57	122-100028-53	. . . DOOR	1	
- 58	122-100028-51	. . . RETAINER.....	1	
	122-100028-31	. . DOOR ASSY, LOWER OUTBD HINGE FITTING	1	
- 59	122-100028-49	. . . DOOR	1	
- 60	122-100028-47	. . . RETAINER.....	1	
- 61	122-100028-37	. . SHIM.....	12	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

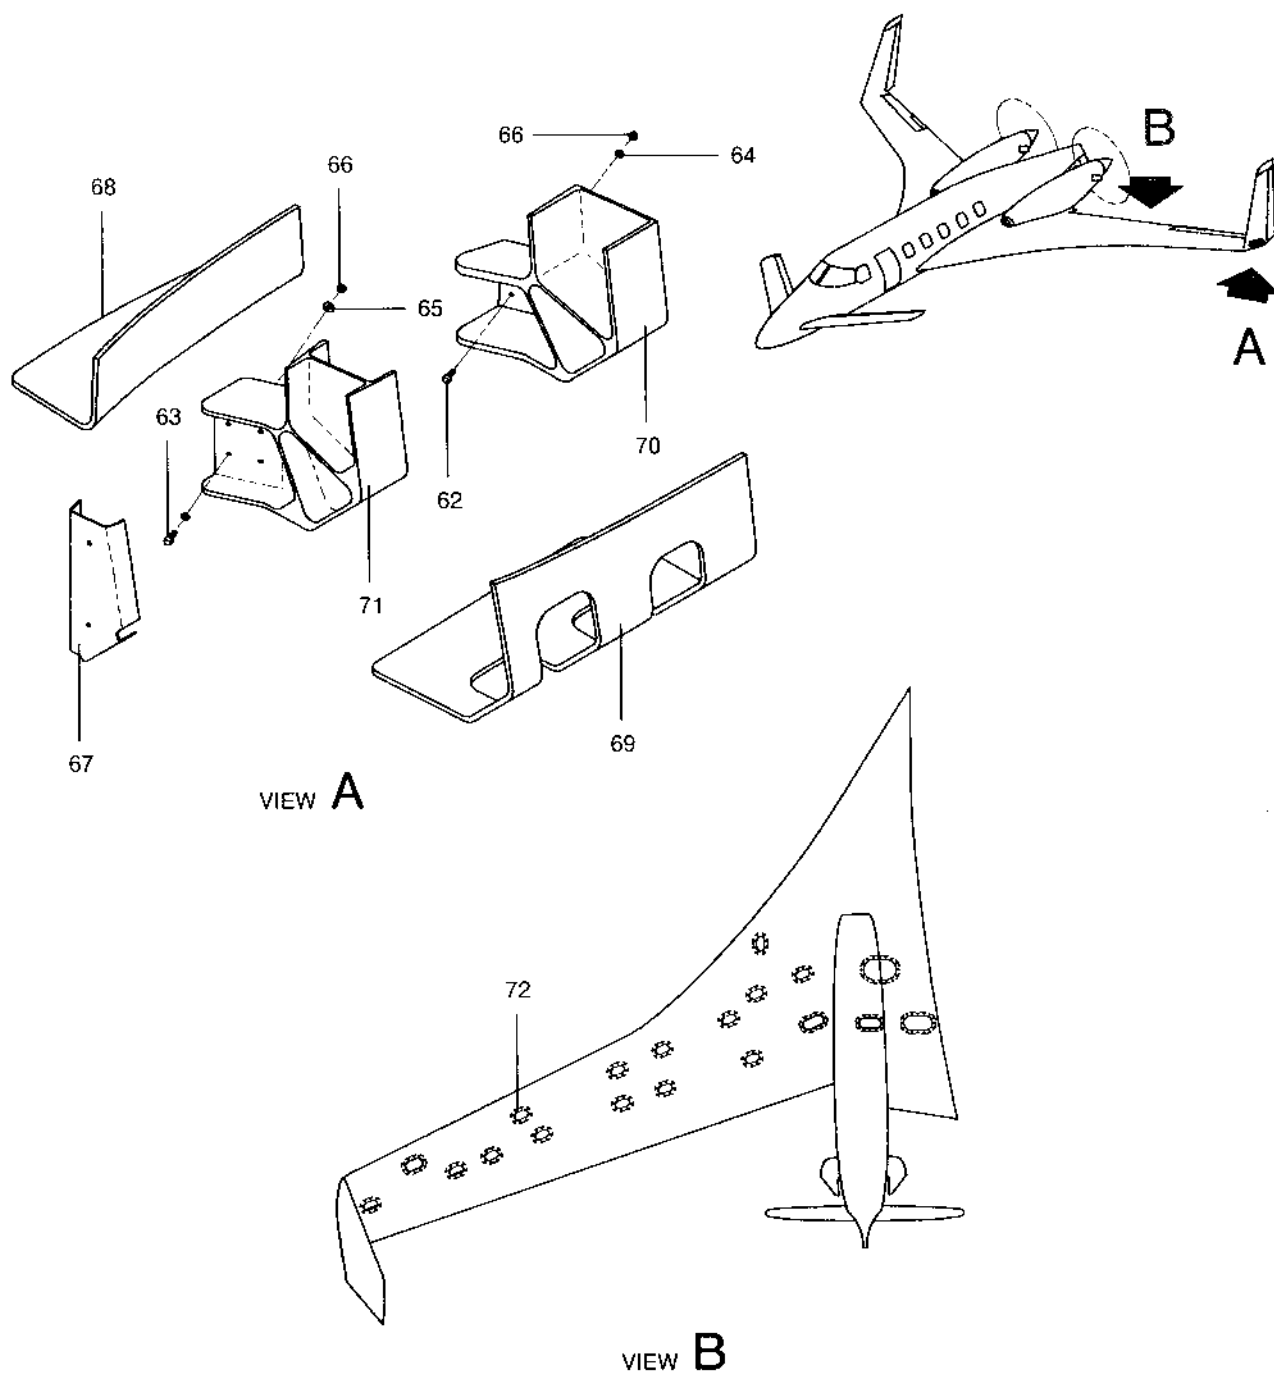

2000-036-05

FIGURE 10-20. AFT WING BOX ASSEMBLY
/SHEET 5 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20 - 62	HL10V8-13	. PIN	4	
- 63	HL10V8-12	. PIN	8	
- 64	AN960C416L	. WASHER	10	
- 65	105090CR050-4F	. WASHER/ON COLLAR SIDE/	10	
- 66	HL379VB	. COLLAR	12	
	122-100011-1	. FITTING, LH VERTICAL STABILIZER ATTACH	1	
	122-100011-2	. FITTING, RH VERTICAL STABILIZER ATTACH	1	
- 67	122-100011-11	. BRACKET, FWD	1	
	122-100011-12	. BRACKET, FWD	1	
- 68	122-100011-3	. SKIN, INBD	1	
	122-100011-4	. SKIN, INBD	1	
- 69	122-100011-5	. SKIN, OUTBD	1	
	122-100011-6	. SKIN, OUTBD	1	
- 70	122-100011-7	. FITTING, AFT	1	
	122-100011-8	. FITTING, AFT	1	
- 71	122-100011-9	. FITTING, CENTER	1	
	122-100011-10	. FITTING, CENTER	1	
- 72	122-100080-1	. DOOR INSTL, AFT WING ACCESS/SEE CHAPTER	NP	1
		57-20-40/		
	122-100080-89	. DOOR INSTL, AFT WING ACCESS/SEE CHAPTER	NP	2
		57-20-40/		

CODES OF EFFECTIVITY



1 NC-4 THRU NC-26

2 NC-27 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-11-00
MAIN LANDING GEAR CLOSURE SUPPORT
NC-4 THRU NC-33

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

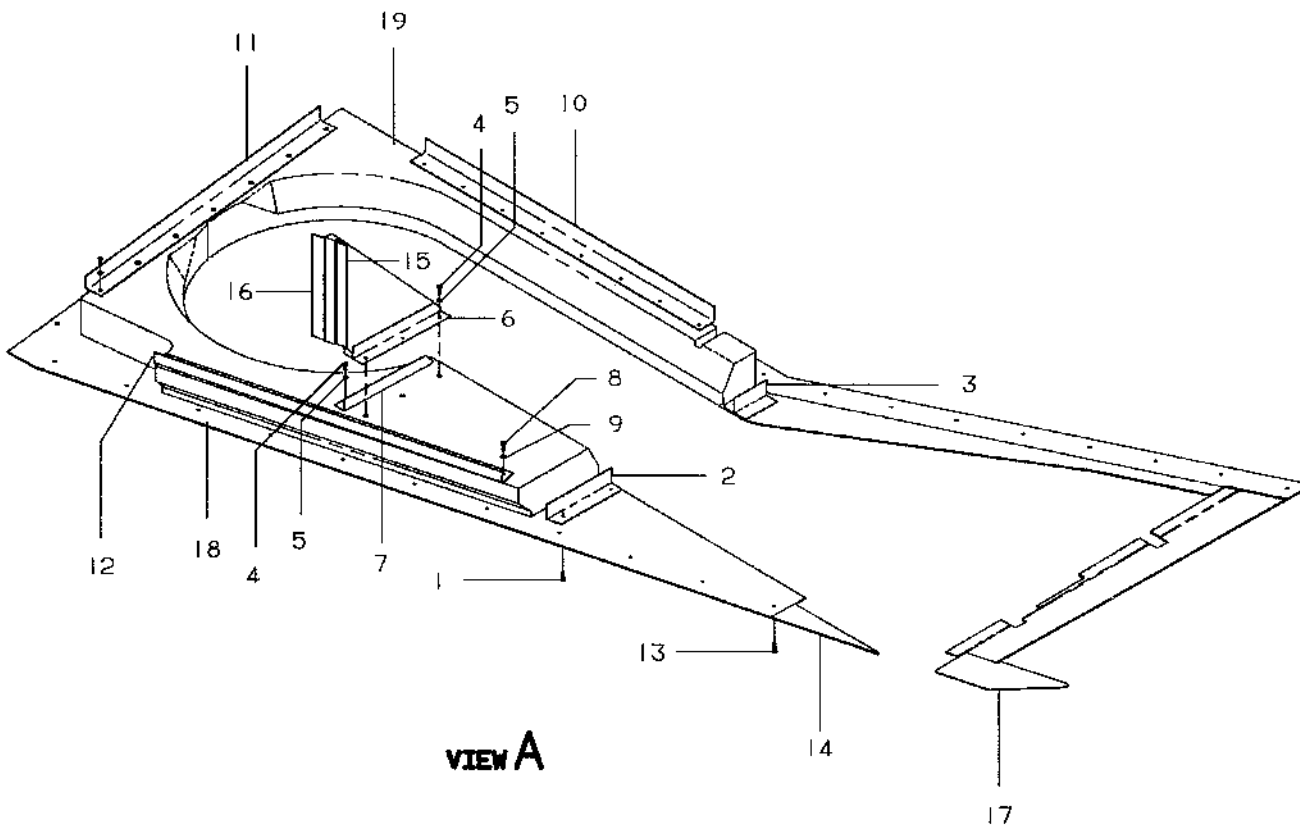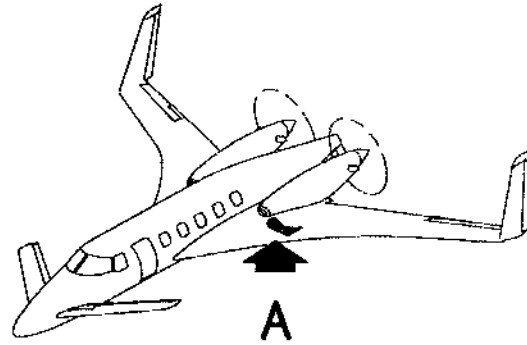

C93NC57A0299 C

FIGURE 11-00.MAIN LANDING GEAR CLOSURE SUPPORT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
11-00	122-100115-77	CLOSURE INSTL, LH MAIN LANDING GEAR SUPPORT	NP	1
	122-100115-78	CLOSURE INSTL, RH MAIN LANDING GEAR SUPPORT	NP	1
- 1	MS24694C54	. SCREW	2	1
- 2	122-100115-9	. CLIP, LH SHEAR	1	1
	122-100115-10	. CLIP, RH SHEAR	1	1
	MS21060L3	. NUTPLATE	1	1
	MS21062L3	. NUTPLATE	1	1
	122-100115-23	. PLATE, LH SUPPORT	1	1
	122-100115-24	. PLATE, RH SUPPORT	1	1
- 3	122-100115-47	. CLIP, LH SHEAR	1	1
	122-100115-48	. CLIP, RH SHEAR	1	1
	MS21062L3	. NUTPLATE	1	1
- 4	MS27039-1-09	. SCREW	6	1
- 5	AN960JD10L	. WASHER	6	1
- 6	122-100115-105	. ANGLE, LH OUTBD	1	1
	122-100115-106	. ANGLE, RH OUTBD	1	1
- 7	122-100115-103	. ANGLE, LH INBD	1	1
	122-100115-104	. ANGLE, RH INBD	1	1
- 8	MS27039-1-09	. SCREW	11	1
- 9	AN960JD10L	. WASHER	11	1
-10	122-100115-93	. ANGLE	1	1
-11	122-100115-95	. ANGLE, LH & RH	2	2
	122-100115-137	. ANGLE, LH	1	3
	122-100115-138	. ANGLE, RH	1	3
	495HF1032-10	. INSERT	4	1
-12	122-100115-91	. ANGLE	1	1
	495HF1032-10	. INSERT	7	1
-13	MS24694C56	. SCREW	11	1
-14	122-100115-25	. SHIM	1	1
	MS21060L3	. NUTPLATE	11	1
-15	122-100115-111	. ANGLE, LH OUTBD	1	1
	122-100115-102	. ANGLE, RH OUTBD	1	1
-16	122-100115-113	. ANGLE, LH INBD	1	1
	122-100115-100	. ANGLE, RH INBD	1	1
-17	122-100115-55	. FILLER, LH	1	1
	122-100115-56	. FILLER, RH	1	1
-18	122-100115-79	. PANEL ASSY, LH	1	1
	122-100115-80	. PANEL ASSY, RH	1	1
-19	122-100115-81	. PANEL ASSY, LH	1	1
	122-100115-82	. PANEL ASSY, RH	1	1
	495HF1032-10	. INSERT	6	1



CODES OF EFFECTIVITY

1 NC-4 THRU NC-33	2 NC-4 THRU NC-31
3 NC-32 AND NC-33	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-11-10
MAIN LANDING GEAR CLOSURE SUPPORT
NC-34 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

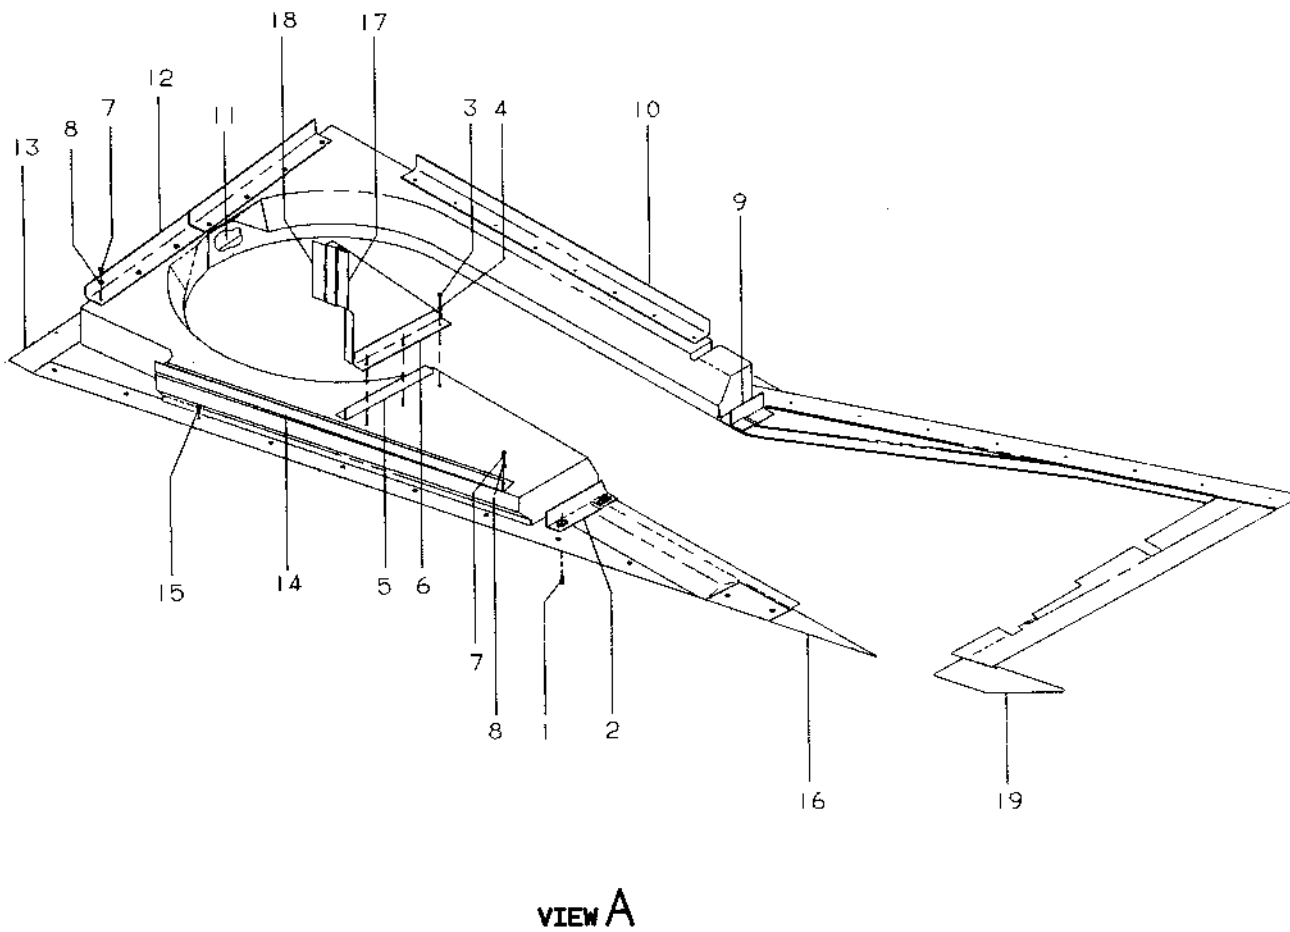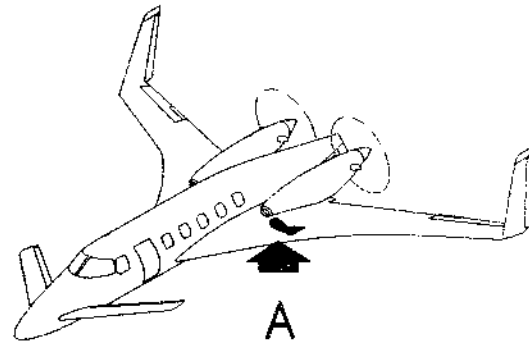

C93NC57A0300

FIGURE 11-10.MAIN LANDING GEAR CLOSURE SUPPORT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
11-10	122-100037-1	CLOSURE INSTL, LH MAIN LANDING GEAR SUPPORT	NP	1
	122-100037-2	CLOSURE INSTL, RH MAIN LANDING GEAR SUPPORT	NP	1
- 1	MS24694C54	. SCREW.....	2	1
- 2	122-100037-31	. ANGLE ASSY, LH	1	1
	122-100037-32	. ANGLE ASSY, RH	1	1
	MS21060L3	. NUTPLATE.....	1	1
	MS21062L3	. NUTPLATE.....	1	1
- 3	MS27039-1-09	. SCREW.....	6	1
- 4	AN960JD10L	. WASHER.....	6	1
- 5	122-100115-103	. ANGLE, LH INBD	1	1
	122-100115-104	. ANGLE, RH INBD	1	1
- 6	122-100115-105	. ANGLE, LH OUTBD	1	1
	122-100115-106	. ANGLE, RH OUTBD	1	1
- 7	MS27039-1-09	. SCREW.....	11	1
- 8	AN960JD10L	. WASHER.....	11	1
- 9	122-100037-29	. ANGLE, LH	1	1
	122-100037-30	. ANGLE, RH	1	1
- 10	122-100115-93	. ANGLE.....	1	1
- 11	122-100037-3	. SUPPORT ASSY, LH	1	1
	122-100037-4	. SUPPORT ASSY, RH.....	1	1
- 12	122-100115-137	. ANGLE, LH	1	1
	122-100115-138	. ANGLE, RH	1	1
- 13	122-100037-5	. SUPPORT ASSY, LH	1	1
	122-100037-6	. SUPPORT ASSY, RH.....	1	1
	495HF1032-10	. INSERT.....	AR	1
- 14	122-100115-91	. ANGLE.....	1	1
- 15	MS24694C56	. SCREW.....	11	1
	MS21060L3	. NUTPLATE.....	11	1
- 16	122-100115-25	. SHIM.....	1	1
- 17	122-100115-111	. ANGLE, LH OUTBD	1	1
	122-100115-102	. ANGLE, RH OUTBD	1	1
- 18	122-100115-113	. ANGLE, LH INBD	1	1
	122-100115-100	. ANGLE, RH INBD	1	1
- 19	122-100115-55	. FILLER, LH	1	1
	122-100115-56	. FILLER, RH	1	1


CODES OF EFFECTIVITY

1 NC-34 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-20-00
FLAP FAIRINGS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

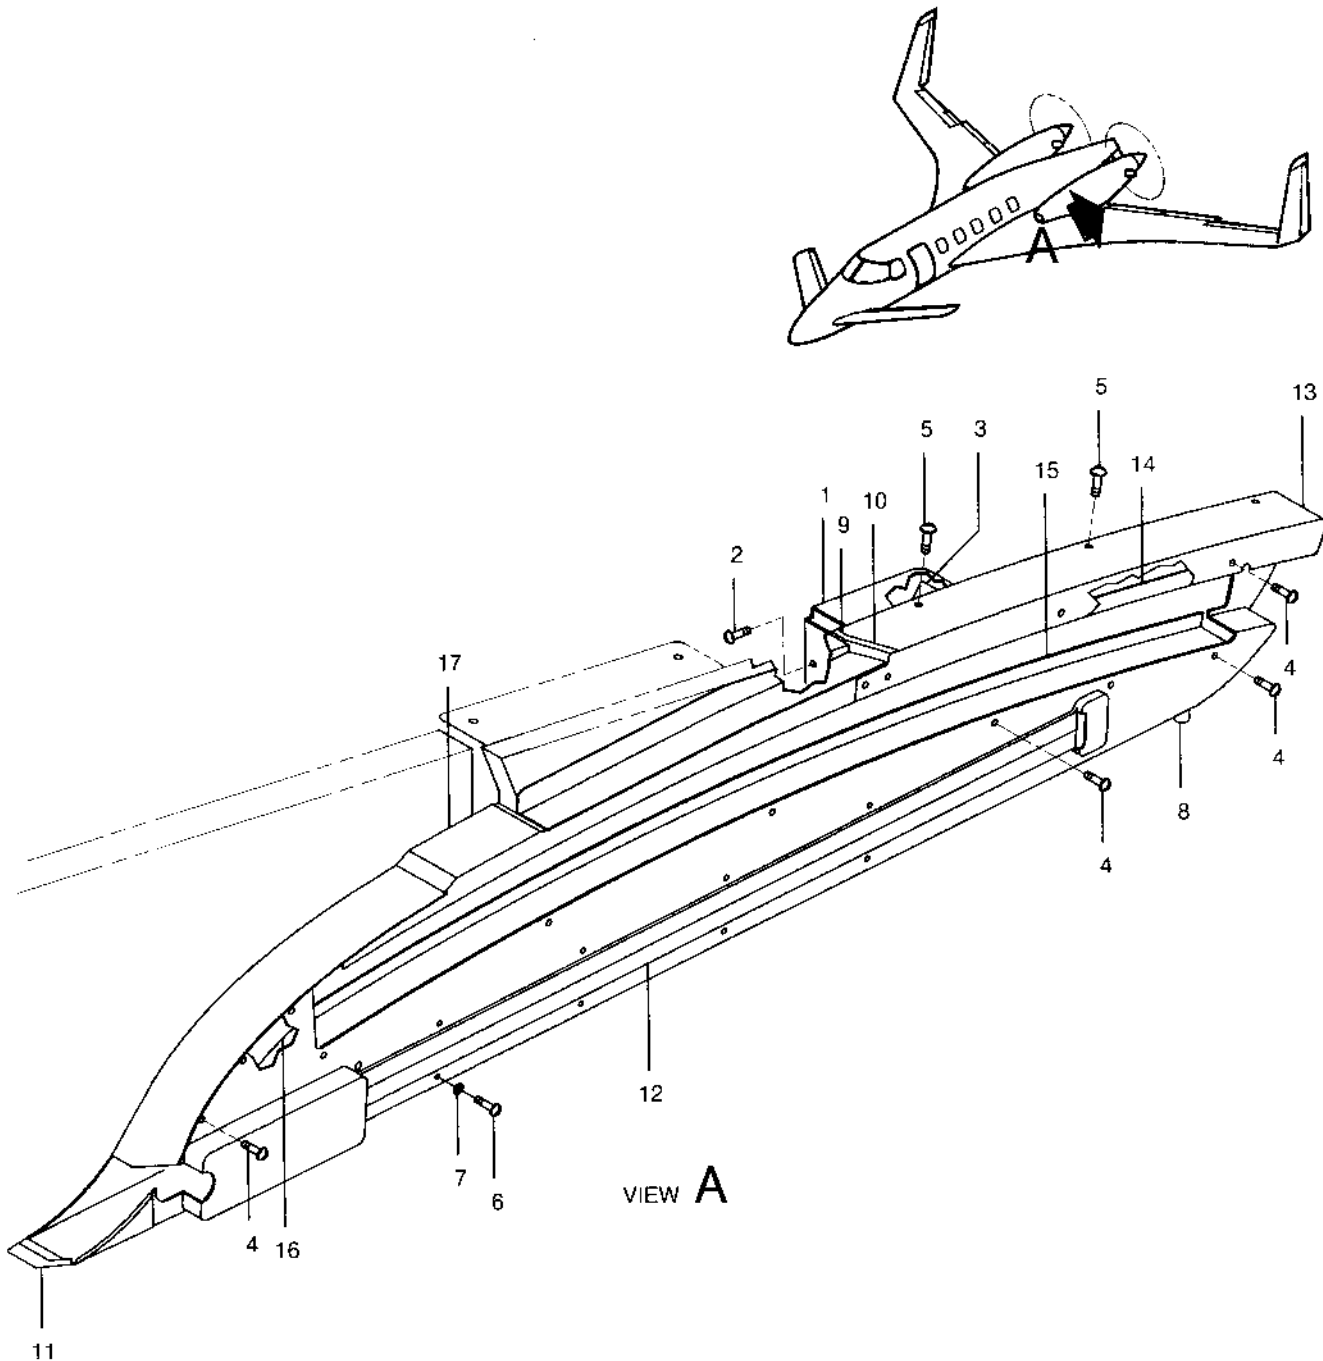


2000-40-03

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-521130-31	FAIRING INSTL, LH INBD FLAP RIB.....	NP	3
	122-521130-69	FAIRING INSTL, LH INBD FLAP RIB.....	NP	4
	122-521130-32	FAIRING INSTL, RH INBD FLAP RIB.....	NP	3
	122-521130-70	FAIRING INSTL, RH INBD FLAP RIB.....	NP	4
- 1	122-521130-27	. FAIRING, LH.....	1	
	122-521130-28	. FAIRING, RH.....	1	
		/ATTACHING PARTS/		
- 2	AN525-10R6	. SCREW.....	3	
		-----★-----		
- 3	122-521130-55	. BRACKET ASSY, LH.....	1	
	122-521130-56	. BRACKET ASSY, RH.....	1	
	MS21059L3	. NUTPLATE.....	3	
	122-521130-33	. FAIRING ASSY, LH/ORDER 122-521130-61 FOR.....	NP	1
		SPARES/		
	122-521130-61	. FAIRING ASSY, LH.....	1	2
	122-521130-34	. FAIRING ASSY, RH/ORDER 122-521130-62 FOR.....	NP	1
		SPARES/		
	122-521130-62	. FAIRING ASSY, RH.....	1	2
		/ATTACHING PARTS/		
- 4	AN525-10R7	. SCREW.....	13	
- 5	AN525-10R6	. SCREW.....	11	
- 6	AN525-832R6	. SCREW.....	8	
- 7	AN960-8L	. WASHER.....	8	
		-----★-----		
- 8	S43	. GROMMET, DRAIN.....	1	
- 9	112416-000-27	. SEAL, RUBBER.....	1	
-10	112416-002-18	. SEAL, RUBBER.....	1	
-11	112416-005-12	. SEAL, RUBBER.....	1	
-12	122-521130-29	. SEAL, RUBBER.....	2	
-13	122-521130-35	. FAIRING, LH.....	1	1
	122-521130-63	. FAIRING, LH.....	1	2
	122-521130-36	. FAIRING, RH.....	1	1
	122-521130-64	. FAIRING, RH.....	1	2
-14	122-521130-41	. BRACKET ASSY, LH.....	1	
	122-521130-42	. BRACKET ASSY, RH.....	1	
	MS21059L3	. NUTPLATE.....	1	
	MS21061L3	. NUTPLATE.....	2	
-15	122-521130-37	. BRACKET ASSY, LH.....	1	
	122-521130-38	. BRACKET ASSY, RH.....	1	
	MS21059L3	. NUTPLATE.....	3	
	MS21061L3	. NUTPLATE.....	3	
-16	122-521130-7	. BRACKET ASSY, LH.....	1	1
	122-521130-45	. BRACKET ASSY, LH.....	1	2
	122-521130-8	. BRACKET ASSY, RH.....	1	1
	122-521130-46	. BRACKET ASSY, RH.....	1	2
	MS21059L3	. NUTPLATE.....	1	
	MS21061L3	. NUTPLATE.....	2	
-17	122-521130-9	. BRACKET ASSY, LH.....	1	1
	122-521130-65	. BRACKET ASSY, LH.....	1	2
	122-521130-10	. BRACKET ASSY, RH.....	1	1
	122-521130-66	. BRACKET ASSY, RH.....	1	2
	MS21076L3	. NUTPLATE.....	1	
	AN525-10R7	. SCREW.....	11	
	122-521130-49	. FAIRING, LH.....	1	3
	122-521130-71	. FAIRING, LH.....	1	4
	122-521130-50	. FAIRING, RH.....	1	3
	122-521130-72	. FAIRING, RH.....	1	4

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

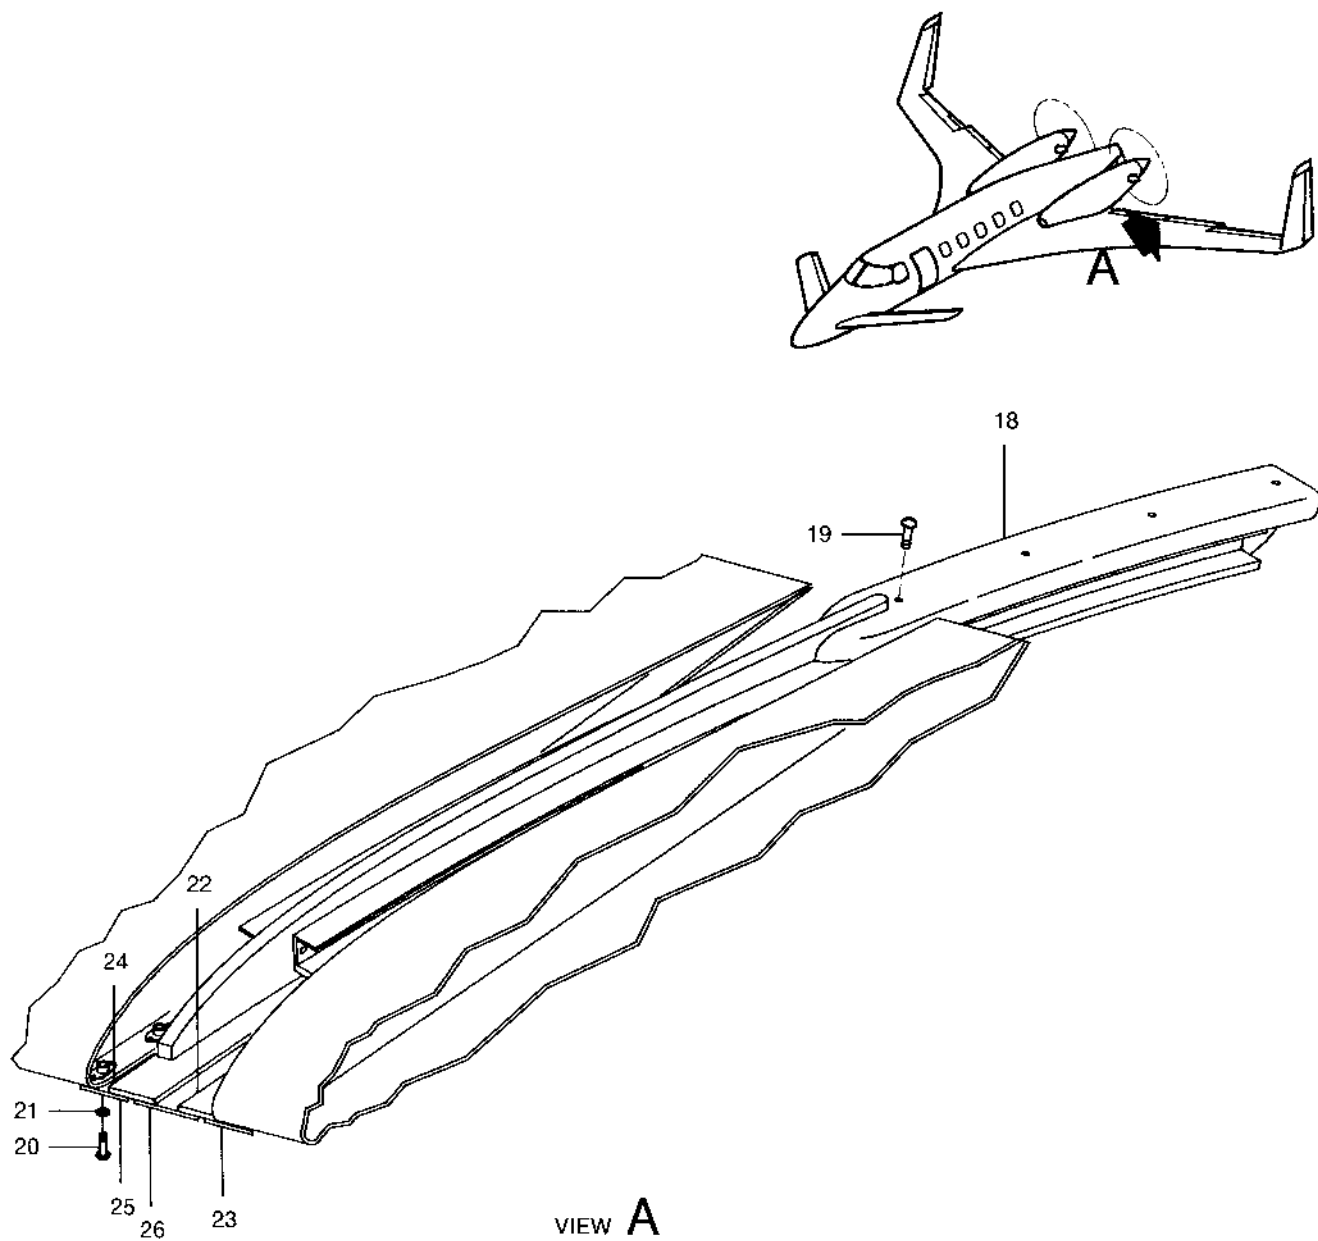



2000-46-04

FIGURE 20-00.FLAP FAIRINGS
/SHEET 2 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-521131-1	FAIRING INSTL, LH CTR FLAP RIB	NP	
	122-521131-2	FAIRING INSTL, RH CTR FLAP RIB	NP	
- 18	122-521131-3	. FAIRING, LH/ORDER 122-521131-17 FOR SPARES/	NP	5
	122-521131-17	. FAIRING, LH	1	6
	122-521131-4	. FAIRING, RH/ORDER 122-521131-18 FOR SPARES/	NP	5
	122-521131-18	. FAIRING, RH	1	6
		/ATTACHING PARTS/		
- 19	AN525-10R7	. SCREW	4	
		-----★-----		
	122-521131-5	. FAIRING ASSY, LH	1	
	122-521131-6	. FAIRING ASSY, RH	1	
		/ATTACHING PARTS/		
- 20	MS27039C1-08	. SCREW	8	
- 21	AN960-10L	. WASHER	8	
		-----★-----		
- 22	122-521131-13	. . HINGE, LH RUBBER	1	
	122-521131-14	. . HINGE, RH RUBBER	1	
- 23	122-521131-7	. . PLATE, LH MOUNTING	1	
	122-521131-8	. . PLATE, RH MOUNTING	1	
- 24	122-521131-15	. . HINGE, LH RUBBER	1	
	122-521131-16	. . HINGE, RH RUBBER	1	
- 25	122-521131-11	. . PLATE, LH MOUNTING	1	
	122-521131-12	. . PLATE, RH MOUNTING	1	
- 26	122-521131-9	. . FAIRING, LH	1	
	122-521131-10	. . FAIRING, RH	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

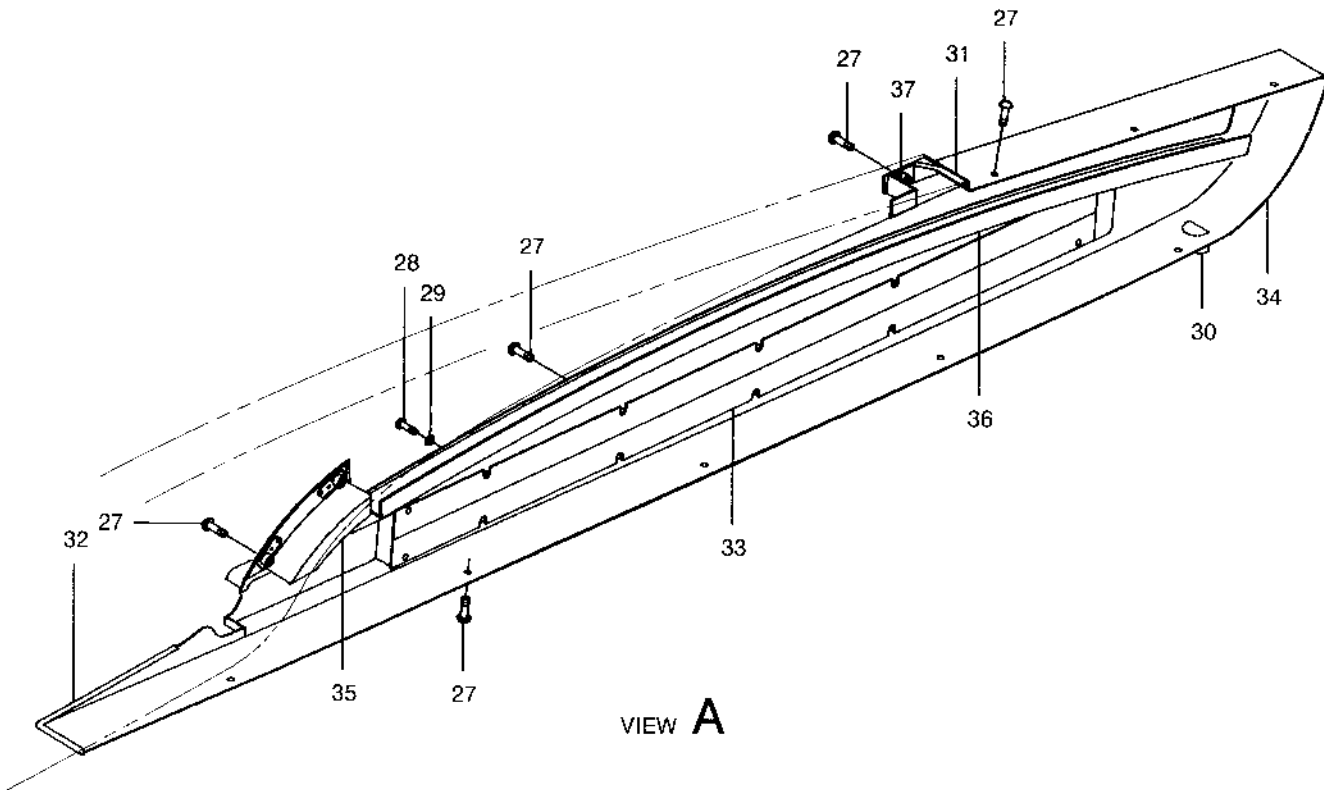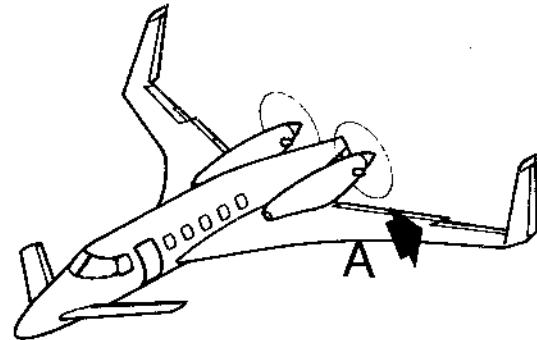

2000-10-05

FIGURE 20-00.FLAP FAIRINGS
/SHEET 3 OF 3 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-521132-21	FAIRING INSTL, LH OUTBD FLAP RIB.....	NP	
	122-521132-22	FAIRING INSTL, RH OUTBD FLAP RIB.....	NP	
	122-521132-23	. FAIRING ASSY, LH/ORDER 122-521132-37 FOR.....	NP	1
		SPARES/		
	122-521132-37	. FAIRING ASSY, LH.....	1	2
	122-521132-24	. FAIRING ASSY, RH/ORDER 122-521132-38 FOR.....	NP	1
		SPARES/		
	122-521132-38	. FAIRING ASSY, RH.....	1	2
		/ATTACHING PARTS/		
- 27	AN525-10R7	. SCREW.....	17	
- 28	AN525-832R6	. SCREW.....	8	
- 29	AN960-8L	. WASHER.....	8	
		★		
- 30	S43	.. GROMMET, DRAIN.....	1	
- 31	112416-002-12	.. SEAL, RUBBER.....	1	
- 32	112416-008-24	.. SEAL, RUBBER.....	1	
- 33	112416-030-22	.. SEAL, RUBBER.....	2	
- 34	122-521132-25	.. FAIRING, LH.....	1	1
	122-521132-39	.. FAIRING, LH.....	1	2
	122-521132-26	.. FAIRING, RH.....	1	1
	122-521132-40	.. FAIRING, RH.....	1	2
- 35	122-521132-11	. BRACKET ASSY, LH.....	1	
	122-521132-12	. BRACKET ASSY, RH.....	1	
	MS21061L3	.. NUTPLATE.....	2	
- 36	122-521132-7	. BRACKET ASSY, LH.....	1	1
	122-521132-27	. BRACKET ASSY, LH.....	1	2
	122-521132-8	. BRACKET ASSY, RH.....	1	1
	122-521132-28	. BRACKET ASSY, RH.....	1	2
	MS21059L3	.. NUTPLATE.....	2	
	MS21061L3	.. NUTPLATE.....	4	
- 37	122-521132-9	. BRACKET ASSY, LH.....	1	1
	122-521132-31	. BRACKET ASSY, LH.....	1	2
	122-521132-10	. BRACKET ASSY, RH.....	1	1
	122-521132-32	. BRACKET ASSY, RH.....	1	2
	MS21086L3	.. NUTPLATE.....	1	

CODES OF EFFECTIVITY



1	NC-4 THRU NC-27	2	NC-28 AND AFTER
3	NC-4 THRU NC-25	4	NC-26 AND AFTER
5	NC-4 THRU NC-35	6	NC-36 AND AFTER

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-20-10
WING ELECTRICAL WIRE CONDUIT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

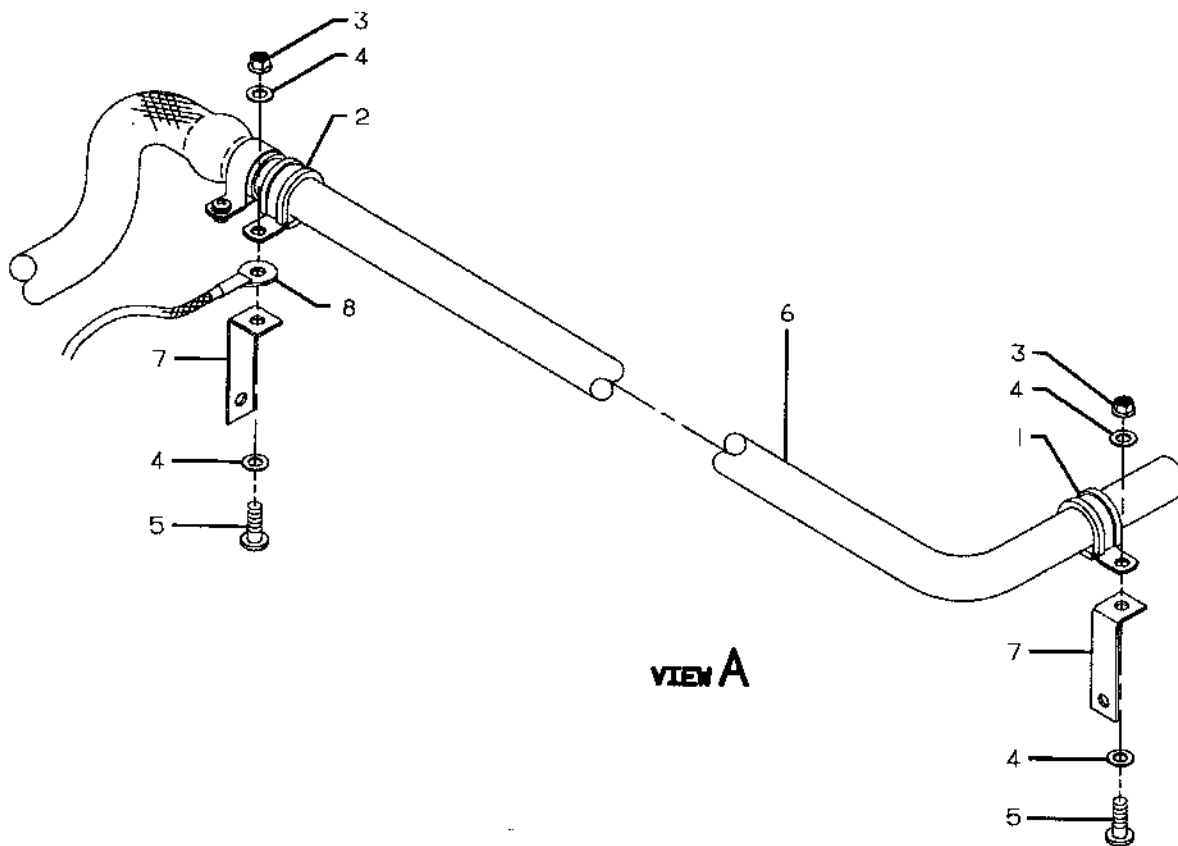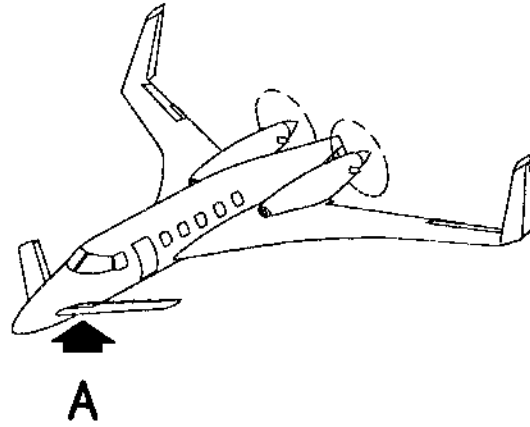


C93NC67A4692 C

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10	122-361030-13	WIRE TRAY INSTL, WING ELECTRICAL.....	NP	
	122-361030-19	.. WIRE TUBE INSTL, FORWARD WING.....	NP	
- 1	MS21919WDG8	.. CLAMP/1 LH, 1 RH/.....	2	
- 2	AN742D8	.. CLAMP/1 LH, 1 RH/.....	2	
		.. /ATTACHING PARTS/.....		
- 3	130909N29	.. NUT.....	1	
- 4	AN960-10L	.. WASHER.....	2	
- 5	MS35207-261	.. SCREW.....	1	
		-----★-----		
- 6	122-361033-49	.. TUBE/1 LH, 1 RH/.....	2	
- 7	50-369064-3	.. ANGLE/2 LH, 2 RH/.....	4	
- 8	MS25083-2BC6	.. JUMPER, BONDING/1 LH, 1 RH/.....	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

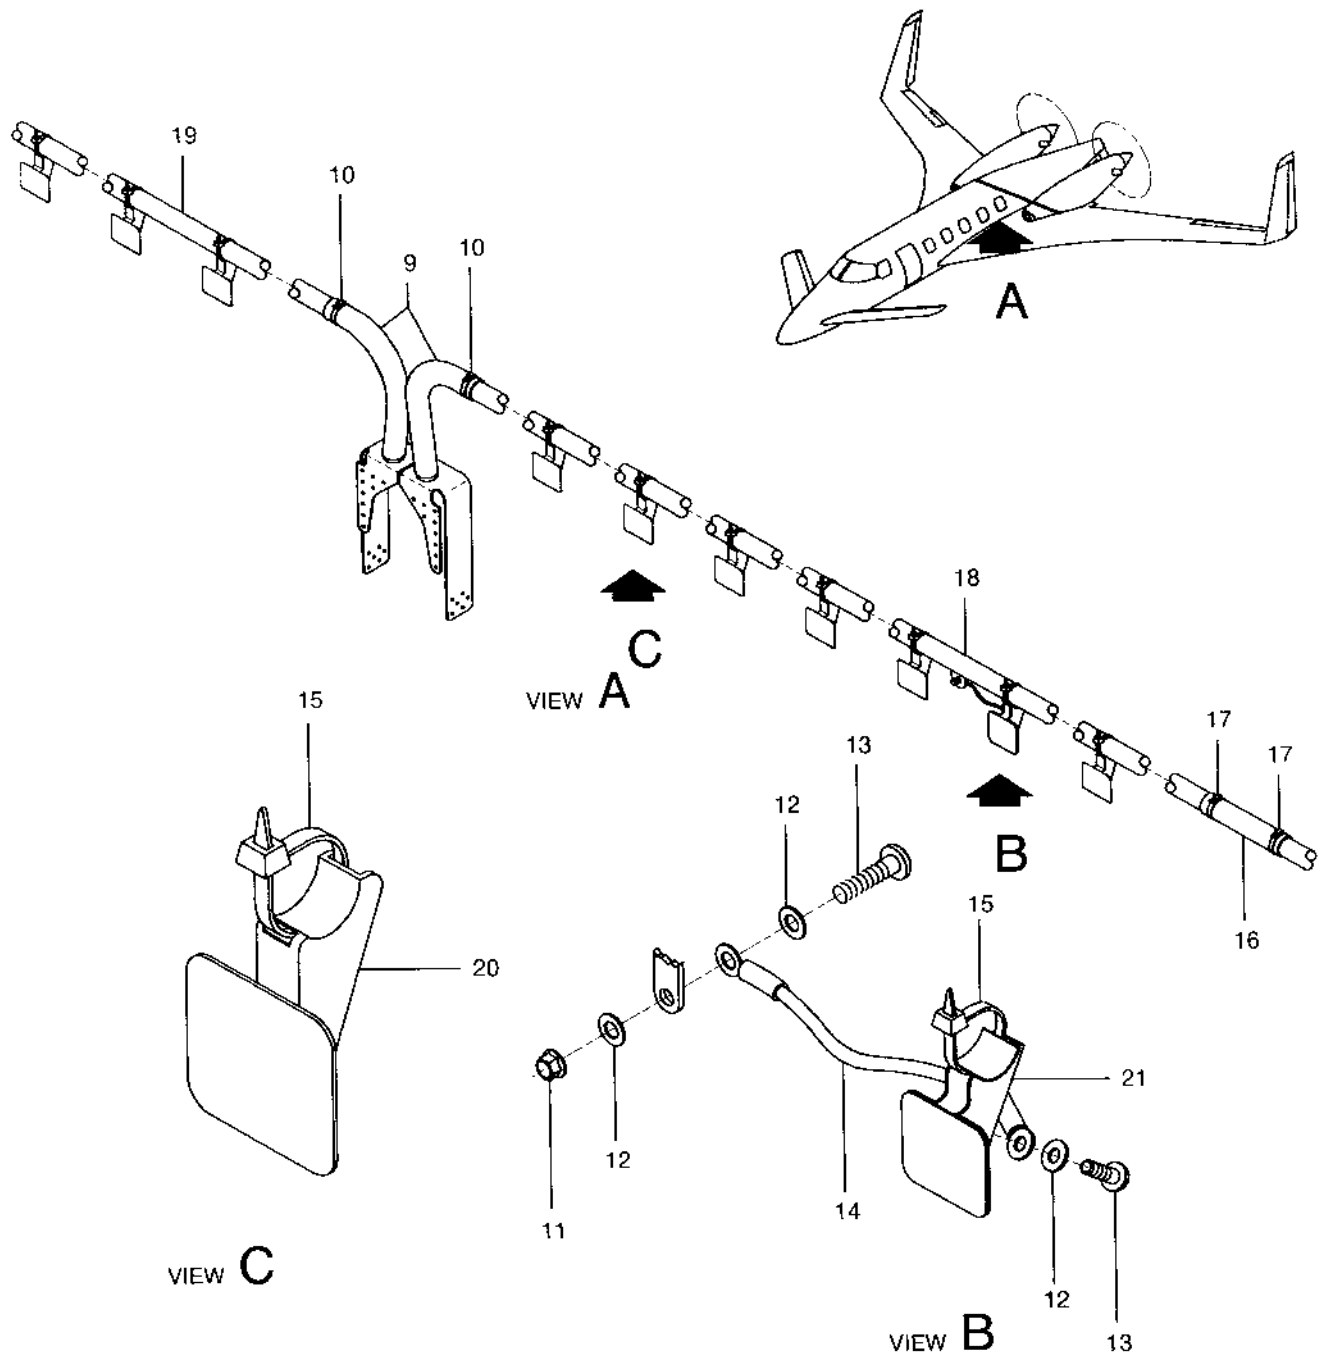


2000-032-02

FIGURE 20-10. WING ELECTRICAL WIRE CONDUIT
/SHEET 2 OF 7 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10	122-361030-3	. WIRE TRAY INSTL LH, AFT WING	NP	
	122-361030-4	. WIRE TRAY INSTL RH, AFT WING	NP	
- 9	2176	.. TINNED BRAID/8.5 INCH/	1	
		.. /ATTACHING PARTS/		
- 10	MS35842-11	.. CLAMP	2	
		-----★-----		
- 11	130909N29	.. NUT	1	
- 12	AN960JD10L	.. WASHER	3	
- 13	MS35207-260	.. SCREW	2	
- 14	MS25083-6BB6	.. JUMPER, BONDING	1	
- 15	TYZ25M	.. CABLE TIE	6	
- 16	2176	.. TINNED BRAID/4.2 INCH/	1	
		.. /ATTACHING PARTS/		
- 17	MS35842-11	.. CLAMP	2	
		-----★-----		
- 18	122-361033-1	.. TUBE ASSY, LH	1	
- 19	122-361033-3	.. TUBE ASSY, RH	1	
- 20	122-361057-1	.. BRACKET	5	
- 21	122-361057-15	.. BRACKET	1	
	130909N33	... NUTPLATE	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

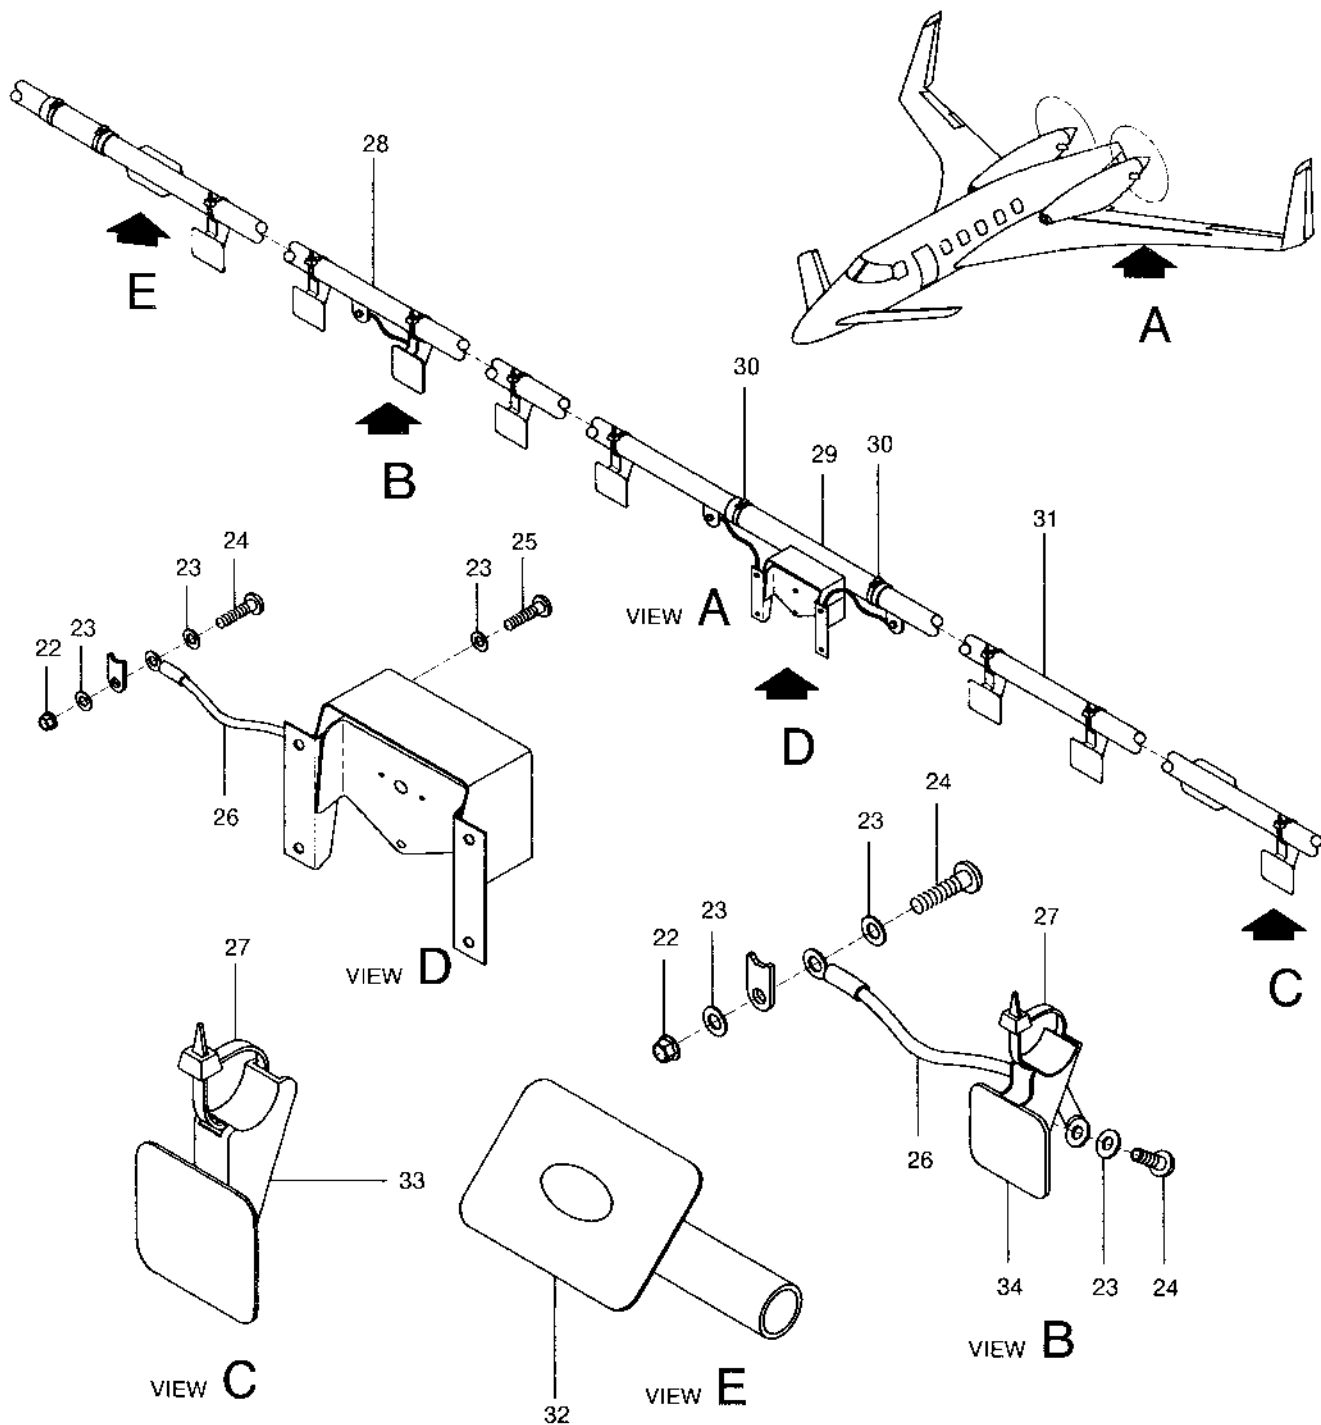


2000-032-03

FIGURE 20-10. WING ELECTRICAL WIRE CONDUIT
/SHEET 3 OF 7 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10 -22	130909N29	.. NUT	3	
-23	AN960JD10L	.. WASHER	9	
-24	MS35207-260	.. SCREW	4	
-25	MS27039-1-08	.. SCREW	2	
-26	MS25083-6BB6	.. JUMPER, BONDING	3	
-27	TYZ25M	.. CABLE TIE	8	
-28	122-361033-13	.. TUBE ASSY, LH	1	
	122-361033-14	.. TUBE ASSY, RH	1	
-29	2176	.. TINNED BRAID/15.0 INCH/ /ATTACHING PARTS/	1	
-30	MS35842-11	.. CLAMP	2	
		---★---		
-31	122-361033-27	.. TUBE ASSY, LH	1	
	122-361033-28	.. TUBE ASSY, RH	1	
-32	122-361049-1	.. TUBE ASSY	3	
-33	122-361057-1	.. BRACKET	7	
-34	122-361057-15	.. BRACKET	1	
	130909N33	... NUTPLATE	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

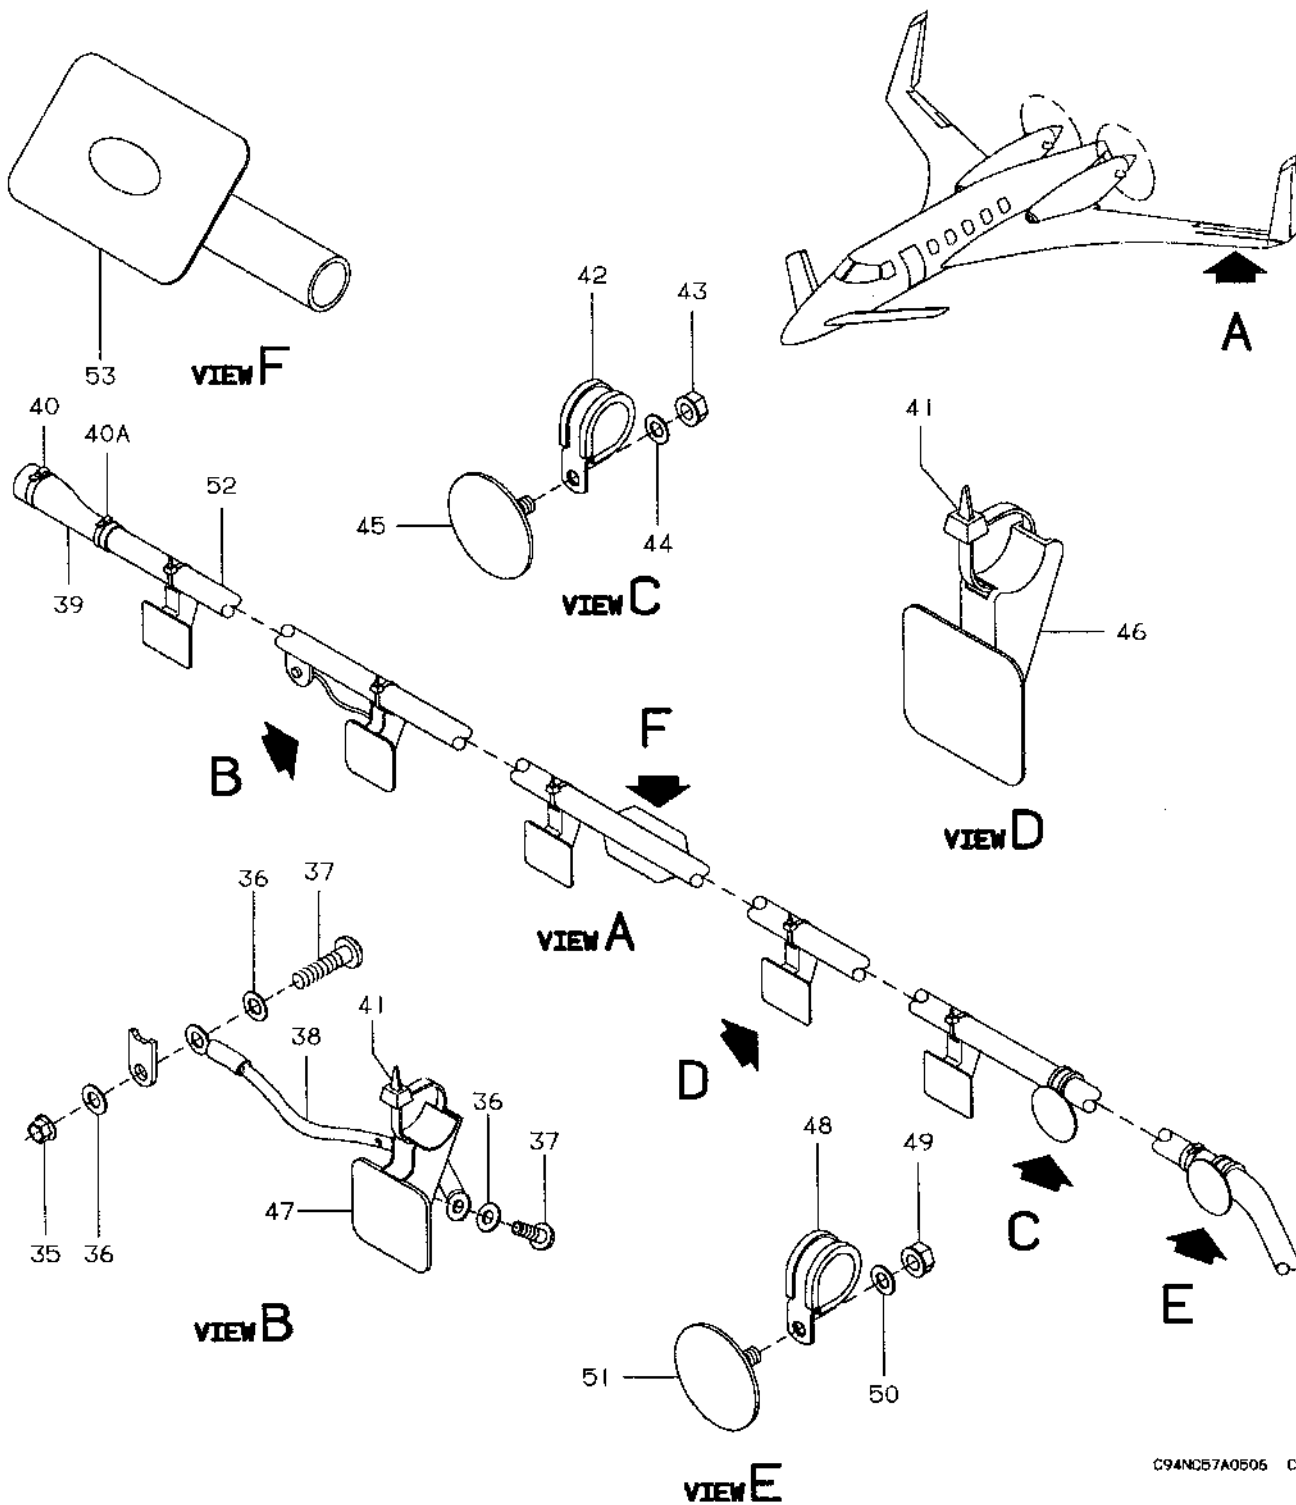


C94NC57A0505 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10 - 35	130909N29	.. NUT	1	
- 36	AN960JD10L	.. WASHER	3	
- 37	MS35207-260	.. SCREW	2	
- 38	MS25083-6BB6	.. JUMPER, BONDING	1	
- 39	2176	.. TINNED BRAID/4.2 INCH/ /ATTACHING PARTS/	1	
- 40	MS35842-11	.. CLAMP	1	
- 40A	GS5	.. CLAMP	1	
		-----★-----		
- 41	TYZ25M	.. CABLE TIE	5	
- 42	MS21919HG12	.. CLAMP	1	
		.. /ATTACHING PARTS/		
- 43	MS21043L3	.. NUT	1	
- 44	AN960L3	.. WASHER	1	
- 45	CB4000C3CR8	.. STUD	1	
		-----★-----		
- 46	122-361057-11	.. BRACKET	4	
- 47	122-361057-15	.. BRACKET	1	
	130909N33	.. NUTPLATE	1	
- 48	MS21919WCH4	.. CLAMP	1	
		.. /ATTACHING PARTS/		
- 49	MS21043L3	.. NUT	1	
- 50	AN960L3	.. WASHER	1	
- 51	CB4000C3CR8	.. STUD	1	
		-----★-----		
- 52	122-361066-5	.. TUBE ASSY, LH	1	
	122-361066-6	.. TUBE ASSY, RH	1	
- 53	122-361049-1	.. TUBE ASSY	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

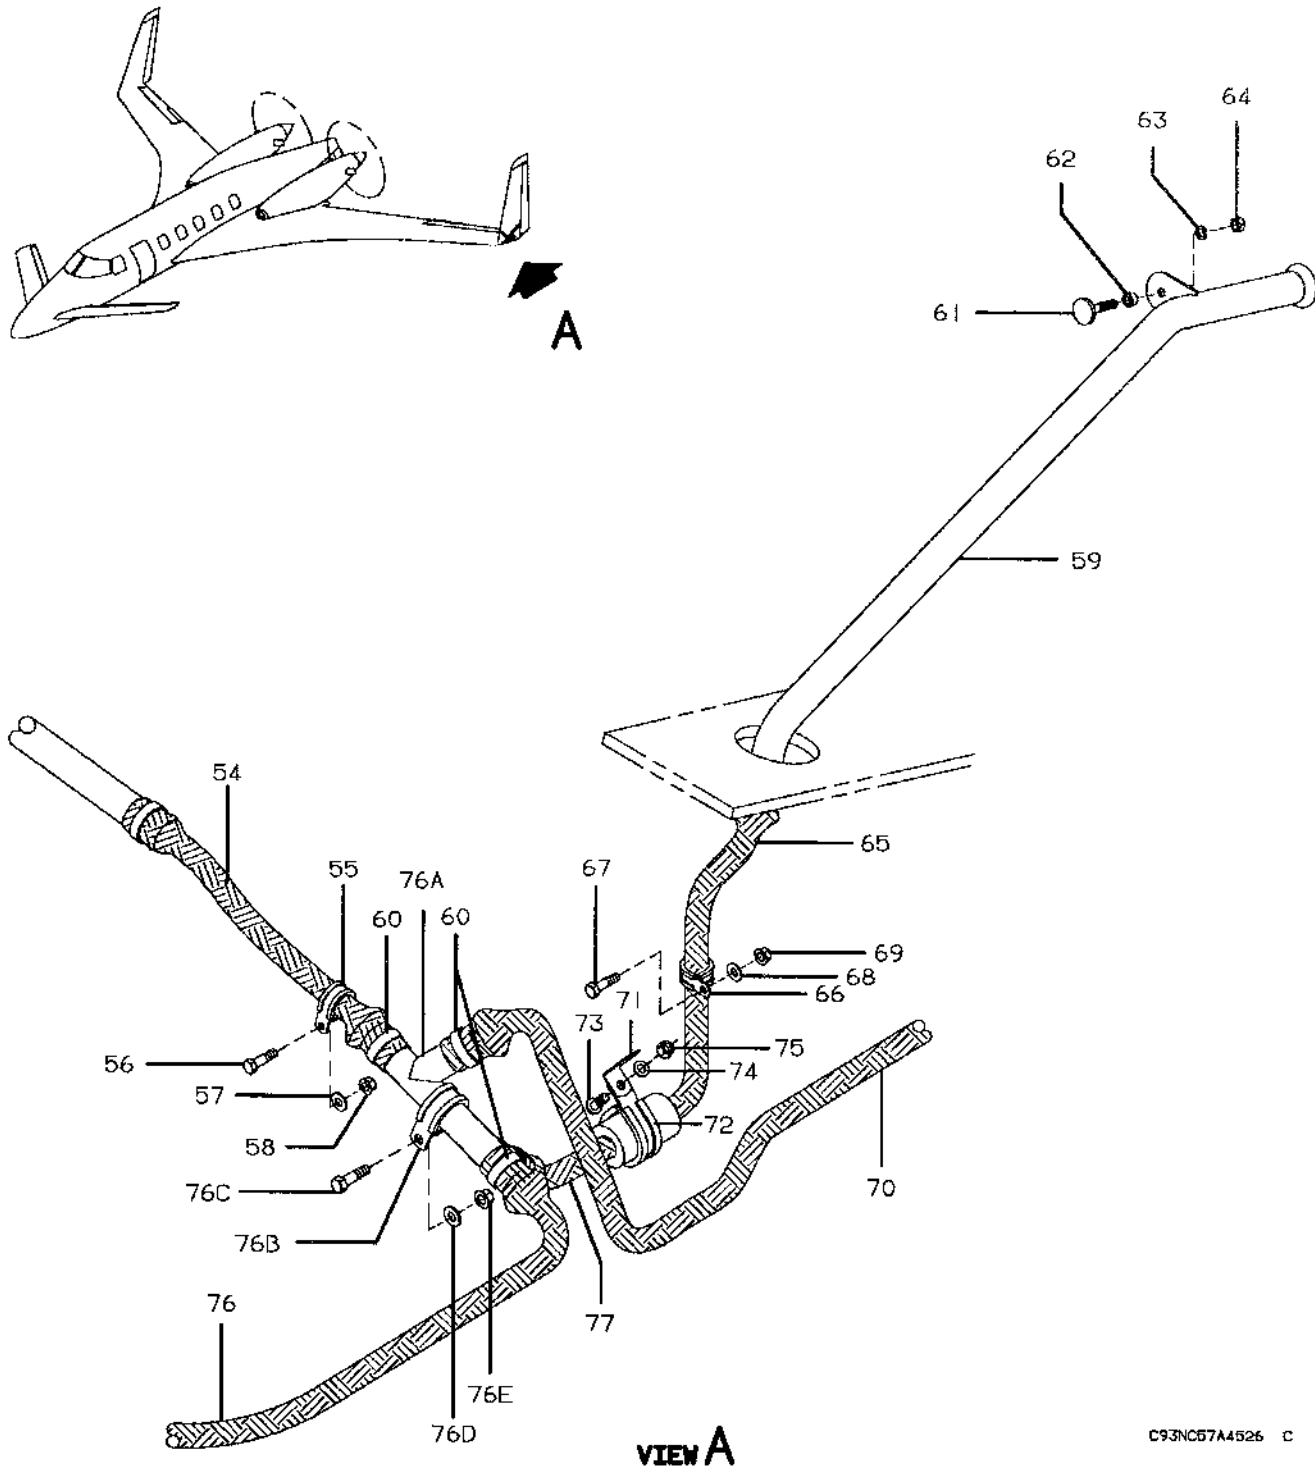


C93NC67A4526 C

FIGURE 20-10.WING ELECTRICAL WIRE CONDUIT
/SHEET 5 OF 7 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10	122-361030-11	.. WIRE TUBE INSTL, LH	NP	
	122-361030-12	.. WIRE TUBE INSTL, RH	NP	
- 54	2176	.. TINNED BRAID/14.0 INCH/	1	
- 55	MS21919WH7	.. CLAMP	1	
		/ATTACHING PARTS/		
- 56	AN3-15A	.. BOLT	1	
- 57	AN960-10L	.. WASHER	1	
- 58	130909N29	.. NUT	1	
		★		
- 59	122-361063-77	.. TUBE ASSEMBLY	1	
- 60	GS5	.. CLAMP	5	
- 61	132131-3-4	.. STUD	1	
- 62	NAS43DD3-10	.. SPACER	1	
- 63	AN960JD10	.. WASHER	1	
- 64	130909N29	.. NUT	1	
- 65	2176	.. TINNED BRAID /17.0 INCH/	1	
- 66	MS21919WH7	.. CLAMP	1	
		/ATTACHING PARTS/		
- 67	AN3-15A	.. BOLT	1	
- 68	AN960-10L	.. WASHER	1	
- 69	130909N29	.. NUT	1	
		★		
- 70	2176	.. TINNED BRAID	1	
- 71	AN743-13	.. BRACKET	1	
- 72	MS21919WDG18	.. CLAMP	1	
		/ATTACHING PARTS/		
- 73	MS35207-263	.. SCREW	1	
- 74	AN960-10L	.. WASHER	1	
- 75	130909N29	.. NUT	1	
		★		
- 76	2176	.. TINNED BRAID	1	
- 76A	122-361063-75	.. TUBE ASSY, LH	1	
	122-361063-76	.. TUBE ASSY, RH	1	
- 76B	MS21919WH12	.. CLAMP	1	
		/ATTACHING PARTS/		
- 76C	AN3-30A	.. BOLT	1	
- 76D	AN960-10L	.. WASHER	1	
- 76E	130909N29	.. NUT	1	
		★		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

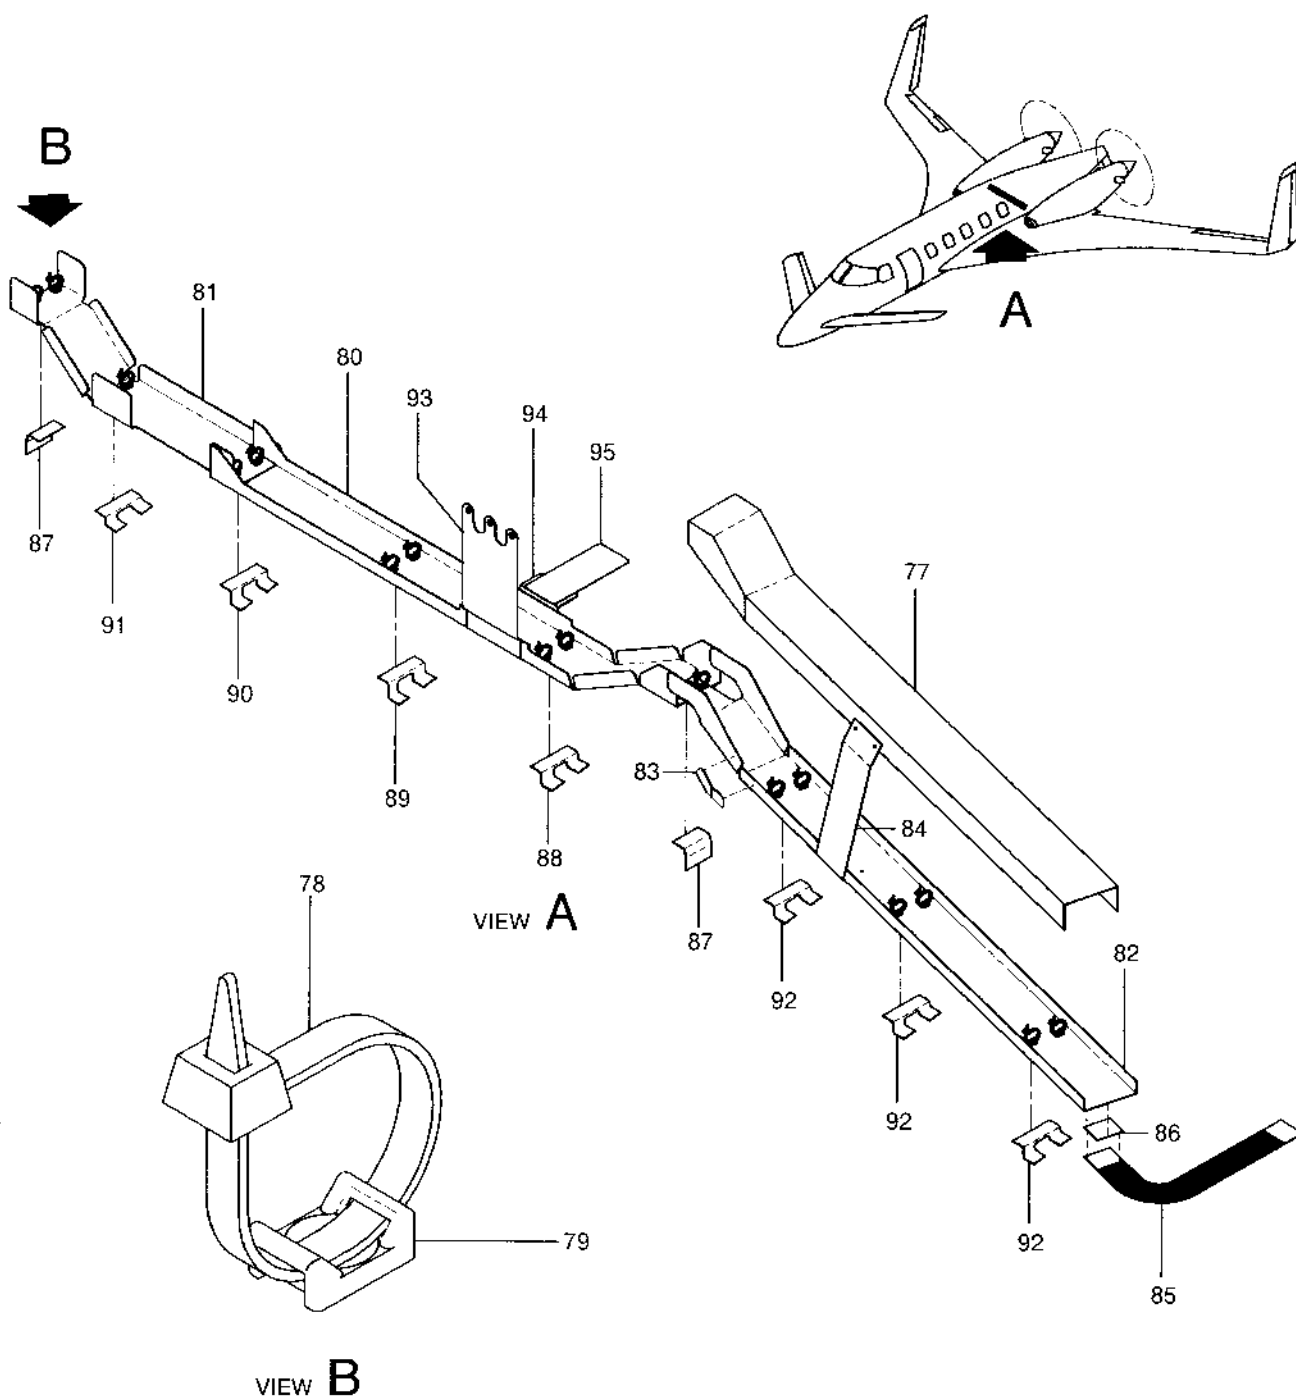


2000-032-06

FIGURE 20-10. WING ELECTRICAL WIRE CONDUIT
/SHEET 6 OF 7 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10 - 77	122-361054-7	.. COVER/1 LH, 1 RH/	2	
- 78	TYZ25M	.. CABLE TIE	22	
- 79	TM2R6	.. MOUNT	12	
- 80	122-361039-3	.. TRAY	1	
- 81	122-361032-1	.. TRAY	1	
- 82	122-361054-9	.. TRAY ASSY, LH	1	
	122-361054-10	.. TRAY ASSY, RH	1	
- 83	122-361054-6	.. CLIP, FWD	1	
	122-361054-5	.. CLIP, AFT	1	
- 84	122-361050-3	.. BOND STRAP, LH	1	
	122-361050-4	.. BOND STRAP, RH	1	
- 85	122-361050-9	.. BOND STRAP/1 LH, 1 RH/	2	
- 86	122-361050-13	.. SHIM/1 LH, 1 RH/	2	
- 87	122-361051-1	.. SUPPORT, TRAY/1 LH, 1 RH/	2	
- 88	122-361051-3	.. SUPPORT, TRAY	1	
- 89	122-361051-5	.. SUPPORT, TRAY	1	
- 90	122-361051-7	.. SUPPORT, TRAY	1	
- 91	122-361051-9	.. SUPPORT, TRAY	1	
- 92	122-361051-11	.. TRAY SUPPORT, LH	3	
	122-361051-12	.. TRAY SUPPORT, RH	3	
- 93	122-361018-1	.. STRAP, ELECTRICAL BONDING	1	
- 94	122-364083-1	.. BRACKET, BONDING STRAP	1	
- 95	122-364084-1	.. BONDING STRAP	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

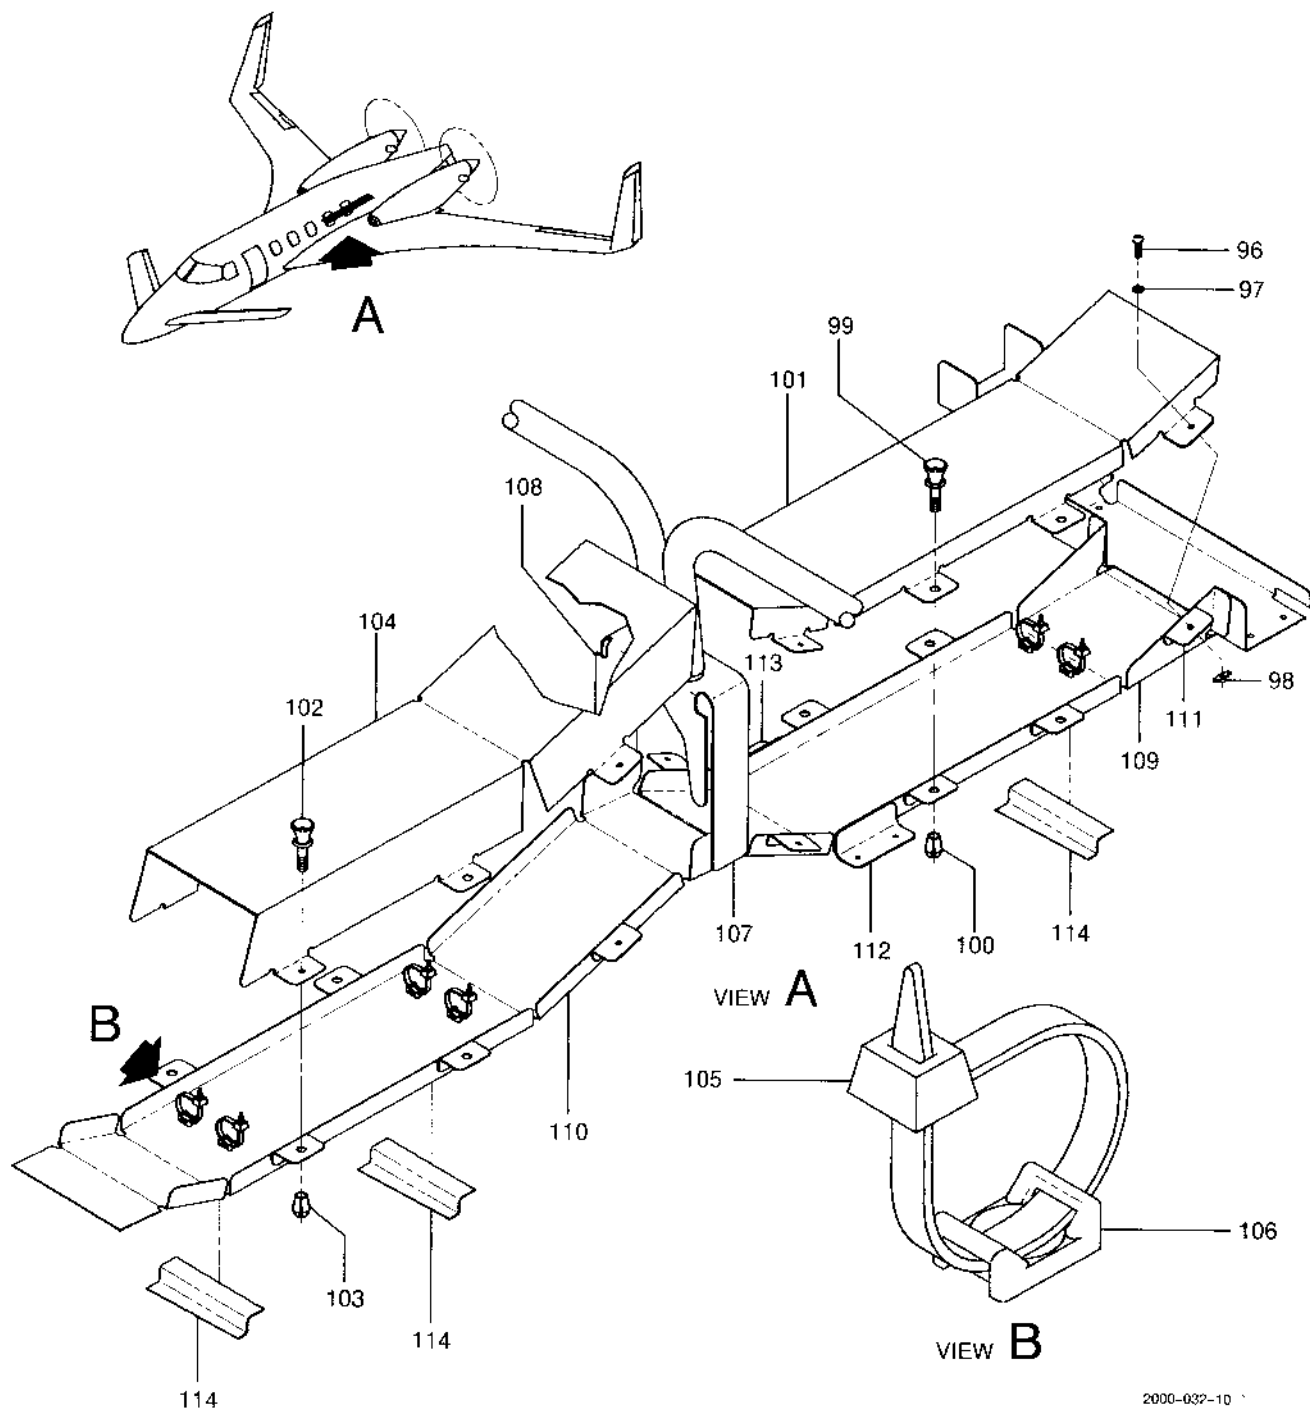

2000-032-10

FIGURE 20-10. WING ELECTRICAL WIRE CONDUIT
/SHEET 7 OF 7 SHEETS/



Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10 -96	MS35206-243	. SCREW.....	8	
-97	AN960L8	. WASHER.....	8	
-98	MS21047L08	. NUTPLATE.....	8	
	122-361037-17	. COVER ASSY, AFT.....	1	
-99	HN5P52-1-1	. . PLUNGER.....	4	
-100	HN5G52-1	. . GROMMET.....	4	
-101	122-361037-19	. . COVER, AFT.....	1	
	122-361037-21	. COVER ASSY, FWD.....	1	
-102	HN5P52-1-1	. . PLUNGER.....	2	
-103	HN5G52-1	. . GROMMET.....	2	
-104	122-361037-23	. . COVER, FWD.....	1	
-105	PLT1S	. CABLE TIE.....	8	
-106	TM2R6	. MOUNT.....	8	
-107	122-361035-1	. STRAP, LH.....	1	
-108	122-361035-2	. STRAP, RH.....	1	
-109	122-361037-1	. TRAY, WIRE/AFT/.....	1	
-110	122-361036-1	. TRAY, WIRE/FWD/.....	1	
-111	122-361037-11	. SUPPORT, COVER.....	14	
-112	122-361037-9	. SUPPORT, TRAY.....	1	
-113	122-361037-7	. SUPPORT, TRAY.....	1	
-114	122-361051-13	. SUPPORT, TRAY.....	3	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-20-20
ELEVON FENCE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

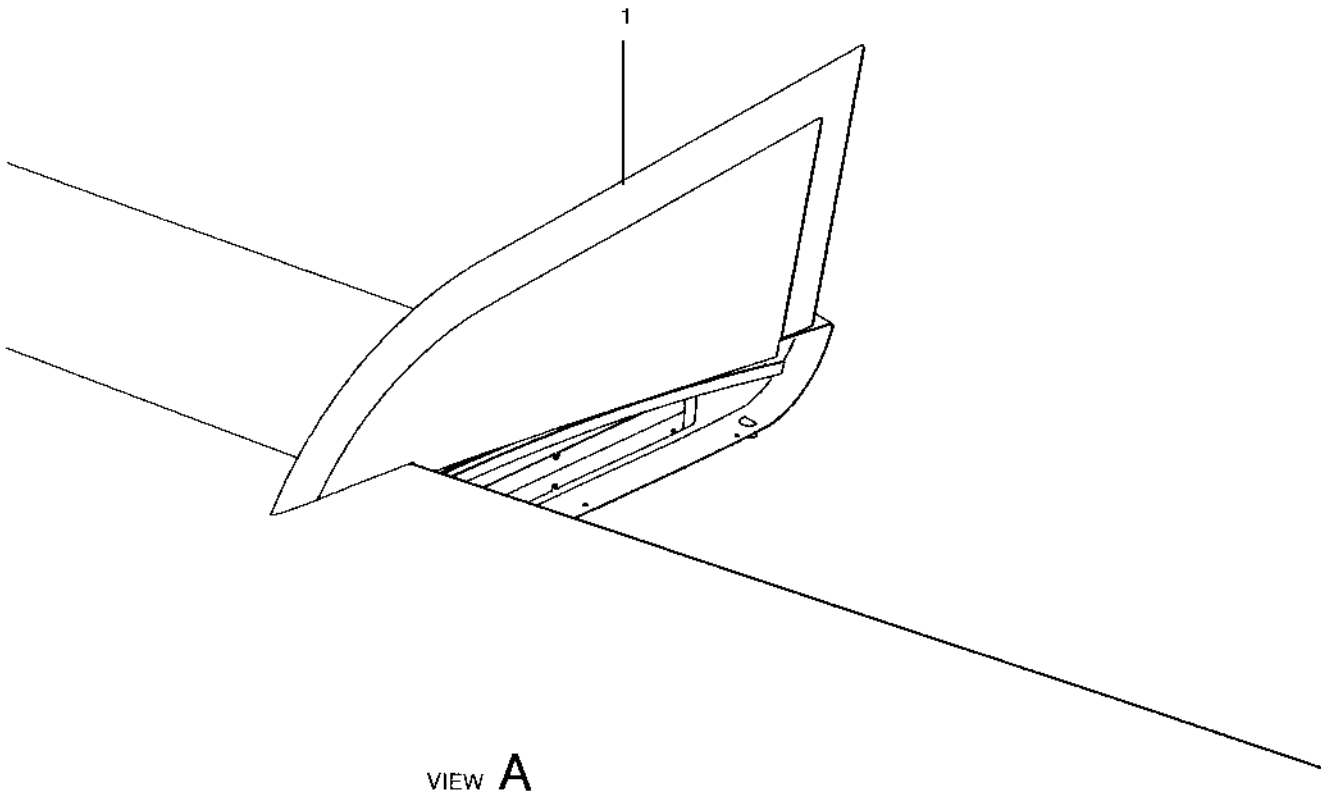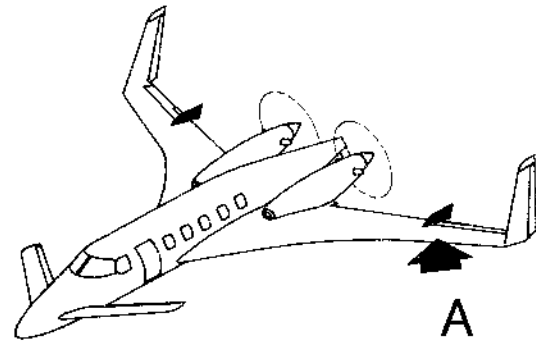

VIEW **A**

2000-030-01

FIGURE 20-20.ELEVON FENCE


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-20	122-100167-1	ELEVON FENCE INSTL, LH.....	NP	
	122-100167-2	ELEVON FENCE INSTL, RH.....	NP	
- 1	122-100167-3	. ELEVON FENCE ASSY, LH.....	1	
	122-100167-4	. ELEVON FENCE ASSY, RH.....	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-20-30
AFT WING FLAP COVE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

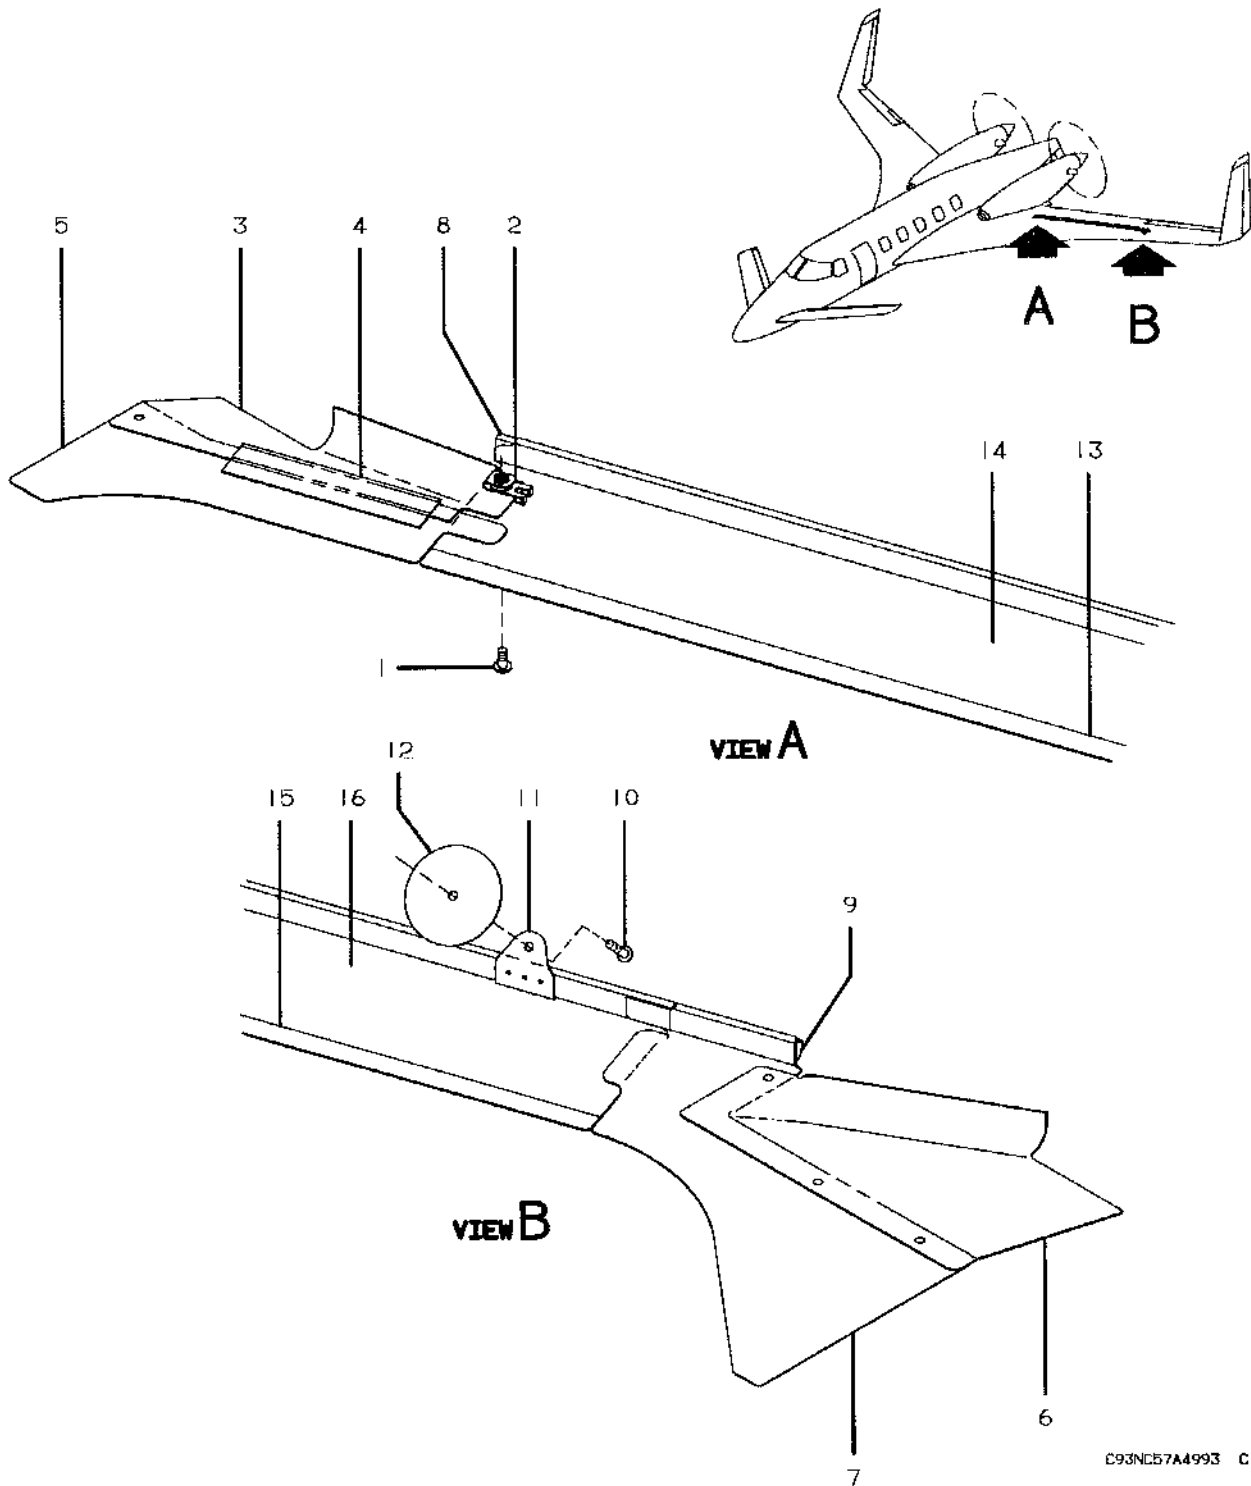

C93NC57A4993 C

FIGURE 20-30. AFT WING FLAP COVE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-30	122-100149-1	FLAP COVE INSTL, AFT WING LH	NP	5
	122-100149-51	FLAP COVE INSTL, AFT WING LH	NP	6
	122-100149-2	FLAP COVE INSTL, AFT WING RH	NP	5
	122-100149-52	FLAP COVE INSTL, AFT WING RH	NP	6
- 1	AN525-832R6	. SCREW	4	
- 2	130290-1	. NUT, CLIP	4	
- 3	122-100149-39	. DOOR, LH	1	5
	122-100149-55	. DOOR, LH	1	6
	122-100149-40	. DOOR, RH	1	5
	122-100149-56	. DOOR, RH	1	6
	122-100149-43	. FILLET ASSY, LH	1	
	122-100149-44	. FILLET ASSY, RH	1	
- 4	122-100149-11	. CLIP	1	
- 5	122-100149-45	. FILLET, LH	1	
	122-100149-46	. FILLET, RH	1	
- 6	122-100149-41	. DOOR, LH	1	5
	122-100149-57	. DOOR, LH	1	6
	122-100149-42	. DOOR, RH	1	5
	122-100149-58	. DOOR, RH	1	6
- 7	122-100149-15	. FILLET, LH	1	5
	122-100149-53	. FILLET, LH	1	6
	122-100149-16	. FILLET, RH	1	5
	122-100149-54	. FILLET, RH	1	6
- 8	122-100149-29	. SEAL, INBD	1	
- 9	122-100149-31	. SEAL, OUTBD	1	
- 10	MS27039C1-06	. SCREW	6	
	SL607-3-6CM	. INSERT	6	
- 11	122-100149-25	. CLIP	1	3
	122-100149-59	. CLIP	1	4
- 12	122-100149-33	. DOUBLER	6	
	122-100149-3	. COVE ASSY, CENTER	1	
	122-100149-4	. COVE ASSY, CENTER	1	
	122-100149-7	. FAIRING ASSY, LH /ORDER 122-100149-47	NP	1
		FOR SPARES/		
	122-100149-47	. FAIRING ASSY, LH	1	2
	122-100149-8	. FAIRING ASSY, RH /ORDER 122-100149-48	NP	1
		FOR SPARES/		
	122-100149-48	. FAIRING ASSY, RH	1	2
- 13	122-100149-21	. DOUBLER	1	
- 14	122-100149-37	. FAIRING	1	1
	122-100149-49	. FAIRING	1	2
	122-100149-38	. FAIRING	1	1
	122-100149-50	. FAIRING	1	2
	122-100149-5	. FAIRING ASSY, LH	1	
	122-100149-6	. FAIRING ASSY, RH	1	
- 15	122-100149-19	. DOUBLER	1	
- 16	122-100149-35	. FAIRING, LH	1	
	122-100149-36	. FAIRING, RH	1	

CODES OF EFFECTIVITY


1	NC-4 THRU NC-44	2	NC-45 AND AFTER
3	NC-4 THRU NC-28	4	NC-29 AND AFTER
5	NC-4 THRU NC-25	6	NC-26 AND AFTER

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-20-40
AFT WING ACCESS DOORS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

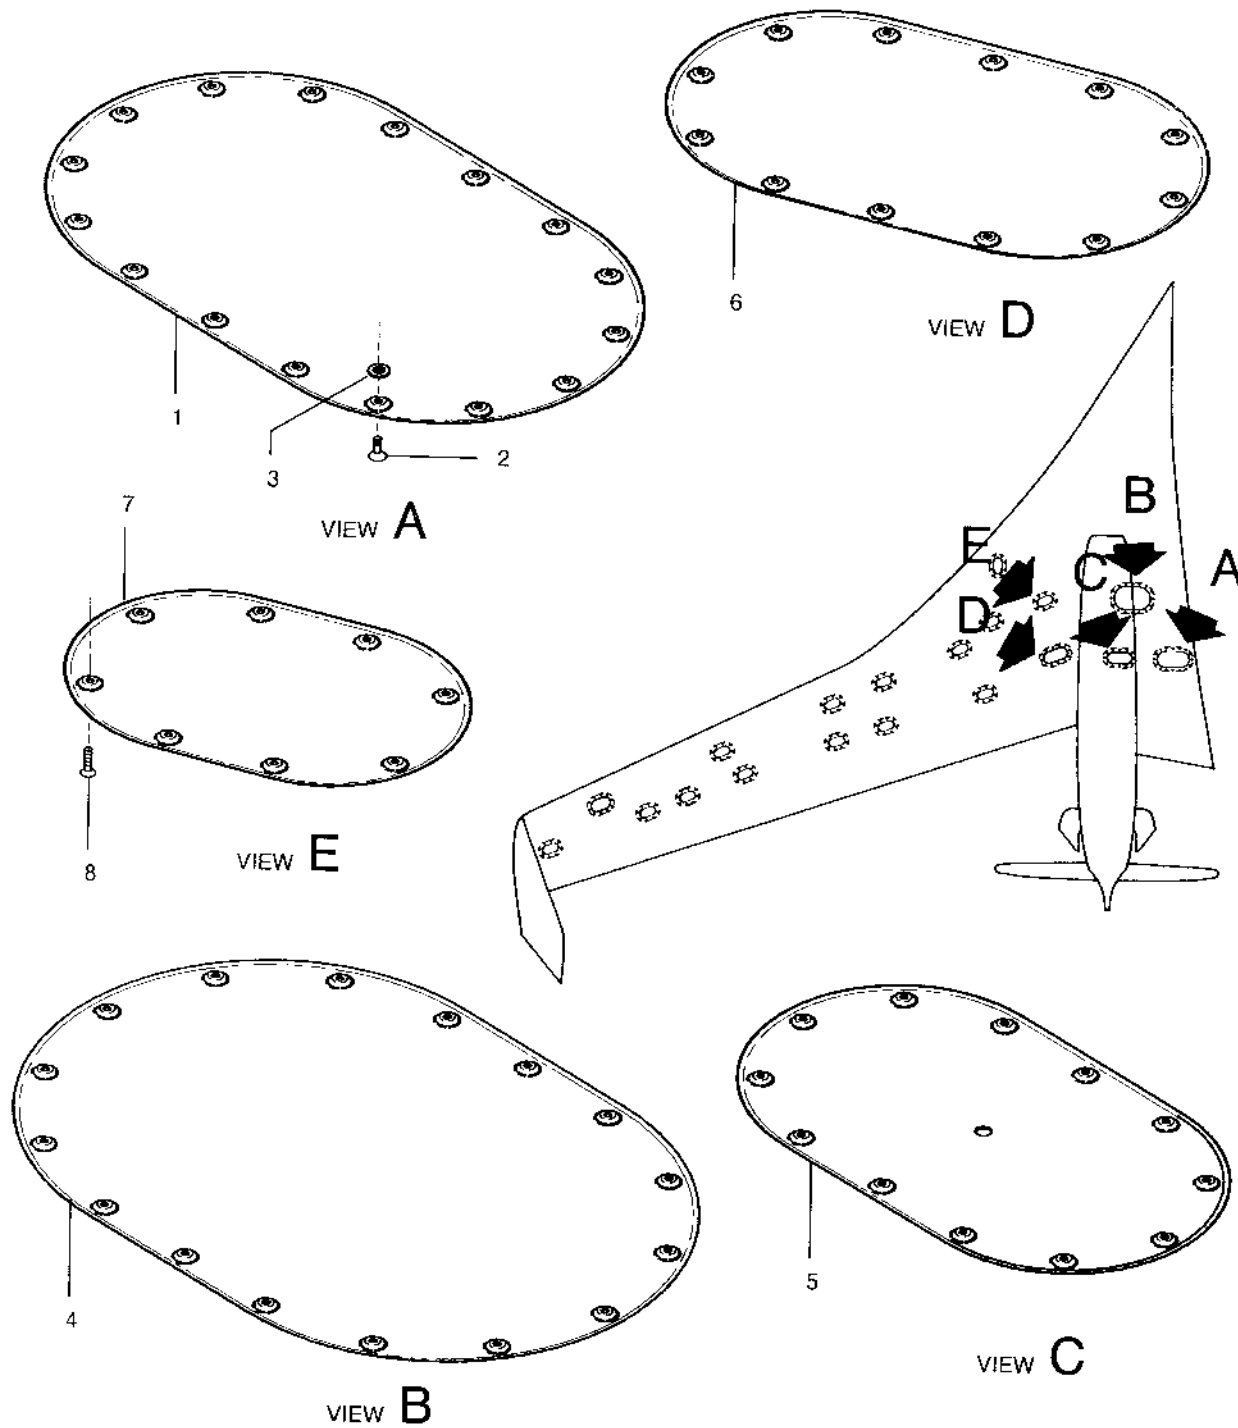


2000-36-6

FIGURE 20-40.AFT WING ACCESS DOORS
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-40	122-100080-1	DOOR INSTL, AFT WING ACCESS.....	NP	1
	122-100080-89	DOOR INSTL, AFT WING ACCESS.....	NP	2
	122-100080-63	. DOOR ASSY.....	2	1
	122-100080-99	. DOOR ASSY.....	2	2
- 1	122-100080-71	. DOOR.....	2	1
- 2	DPYS7900P10A1 5	. . SCREW, CAPTIVE.....	32	
- 3	122-100080-73	. . WASHER.....	32	1
- 4	122-100080-61	. DOOR ASSY.....	2	1
	122-100080-103	. DOOR ASSY.....	2	2
	DPYS7900P10A1 5	. . SCREW, CAPTIVE.....	32	
	122-100080-73	. . WASHER.....	32	1
- 5	122-100080-75	. DOOR ASSY, LH.....	1	1
	122-100080-95	. DOOR ASSY, LH.....	1	2
	DPYS7900P10A1 5	. . SCREW, CAPTIVE.....	12	
	122-100080-73	. . WASHER.....	12	1
	122-100080-59	. DOOR ASSY, RH.....	1	1
	122-100080-93	. DOOR ASSY, RH.....	1	2
	DPYS7900P10A1 5	. . SCREW, CAPTIVE.....	12	
	122-100080-73	. . WASHER.....	12	1
- 6	122-100080-59	. DOOR ASSY.....	2	1
	122-100080-93	. DOOR ASSY.....	2	2
	DPYS7900P10A1 5	. . SCREW, CAPTIVE.....	24	
	122-100080-73	. . WASHER.....	24	1
- 7	122-100080-57	. DOOR ASSY.....	2	1
	122-100080-91	. DOOR ASSY.....	2	2
	DPYS7900P10A1 5	. . SCREW, CAPTIVE.....	16	
	122-100080-73	. . WASHER.....	16	1
- 8	MS24694C46	. SCREW.....	16	
	SL3089A3-3	. INSERT.....	AR	
	SL607-3-6CM	. INSERT.....	16	1

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

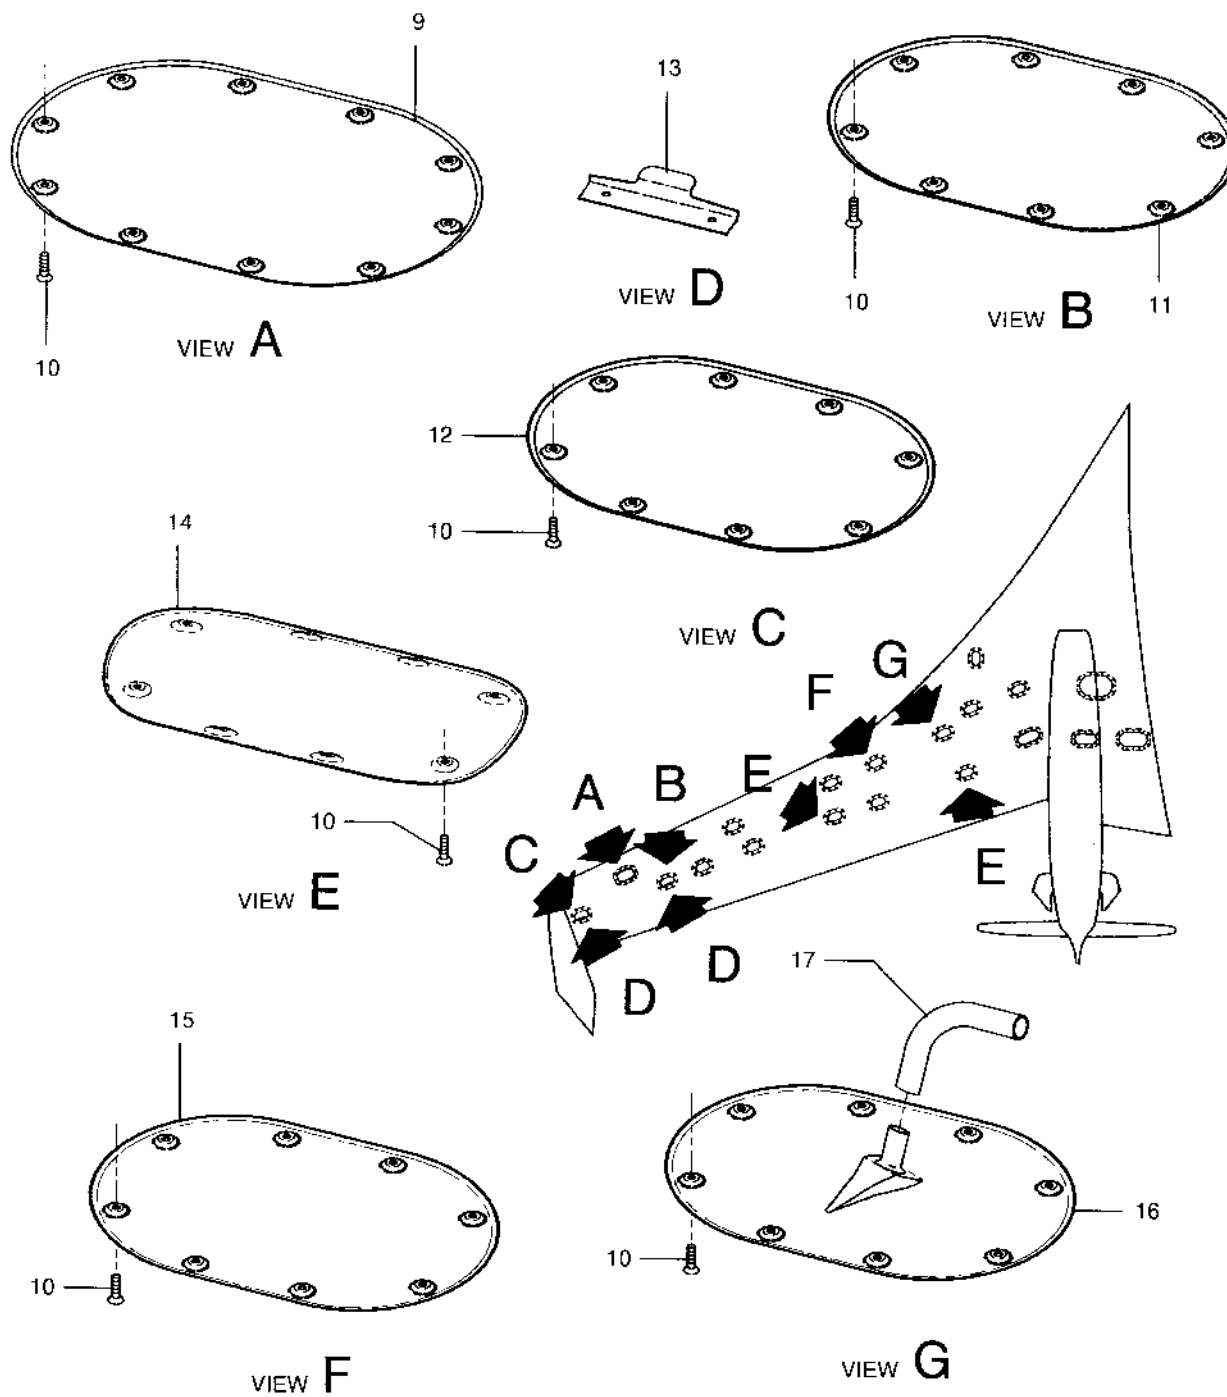

2000-36-7

FIGURE 20-40.AFT WING ACCESS DOORS
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-40 - 9	122-100080-43	. DOOR	2	1
	122-100080-81	. DOOR	2	2
- 10	MS24694C46	. SCREW	200	1
	MS27039C1-05	. SCREW	20	2
	AN961-10S	. WASHER	20	2
	AN526-1032R5	. SCREW	200	2
	SL607-3-6AM	. INSERT	AR	2
- 11	122-100080-47	. DOOR, LH	1	1
	122-100080-83	. DOOR, LH	1	2
	122-100080-48	. DOOR, RH	1	1
	122-100080-84	. DOOR, RH	1	2
- 12	122-100080-49	. DOOR, LH	1	1
	122-100080-85	. DOOR, LH	1	2
	122-100080-50	. DOOR, RH	1	1
	122-100080-86	. DOOR, RH	1	2
- 13	122-100080-55	. BRACKET ASSY	4	
		/ATTACHING PARTS/		
	AN525-10R7	. SCREW	8	
		★		
	MS21047-3	. NUTPLATE	2	
- 14	122-100080-51	. DOOR	6	1
	122-100080-87	. DOOR	6	2
- 15	122-100080-35	. DOOR	14	1
	122-100080-79	. DOOR	14	3
	122-100080-79	. DOOR/6 LH AND 7 RH/	13	4
- 16	122-920017-7	. SCOOP ASSY, LH FUEL VENT	1	
	122-920017-8	. SCOOP ASSY, RH FUEL VENT	1	
- 17	122-920017-11	. TUBE	1	


CODES OF EFFECTIVITY

1	NC-4 THRU NC-26	2	NC-27 AND AFTER
3	NC-27 THRU NC-29	4	NC-30 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-21-00
AFT WING TRAILING EDGE INBD COVE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

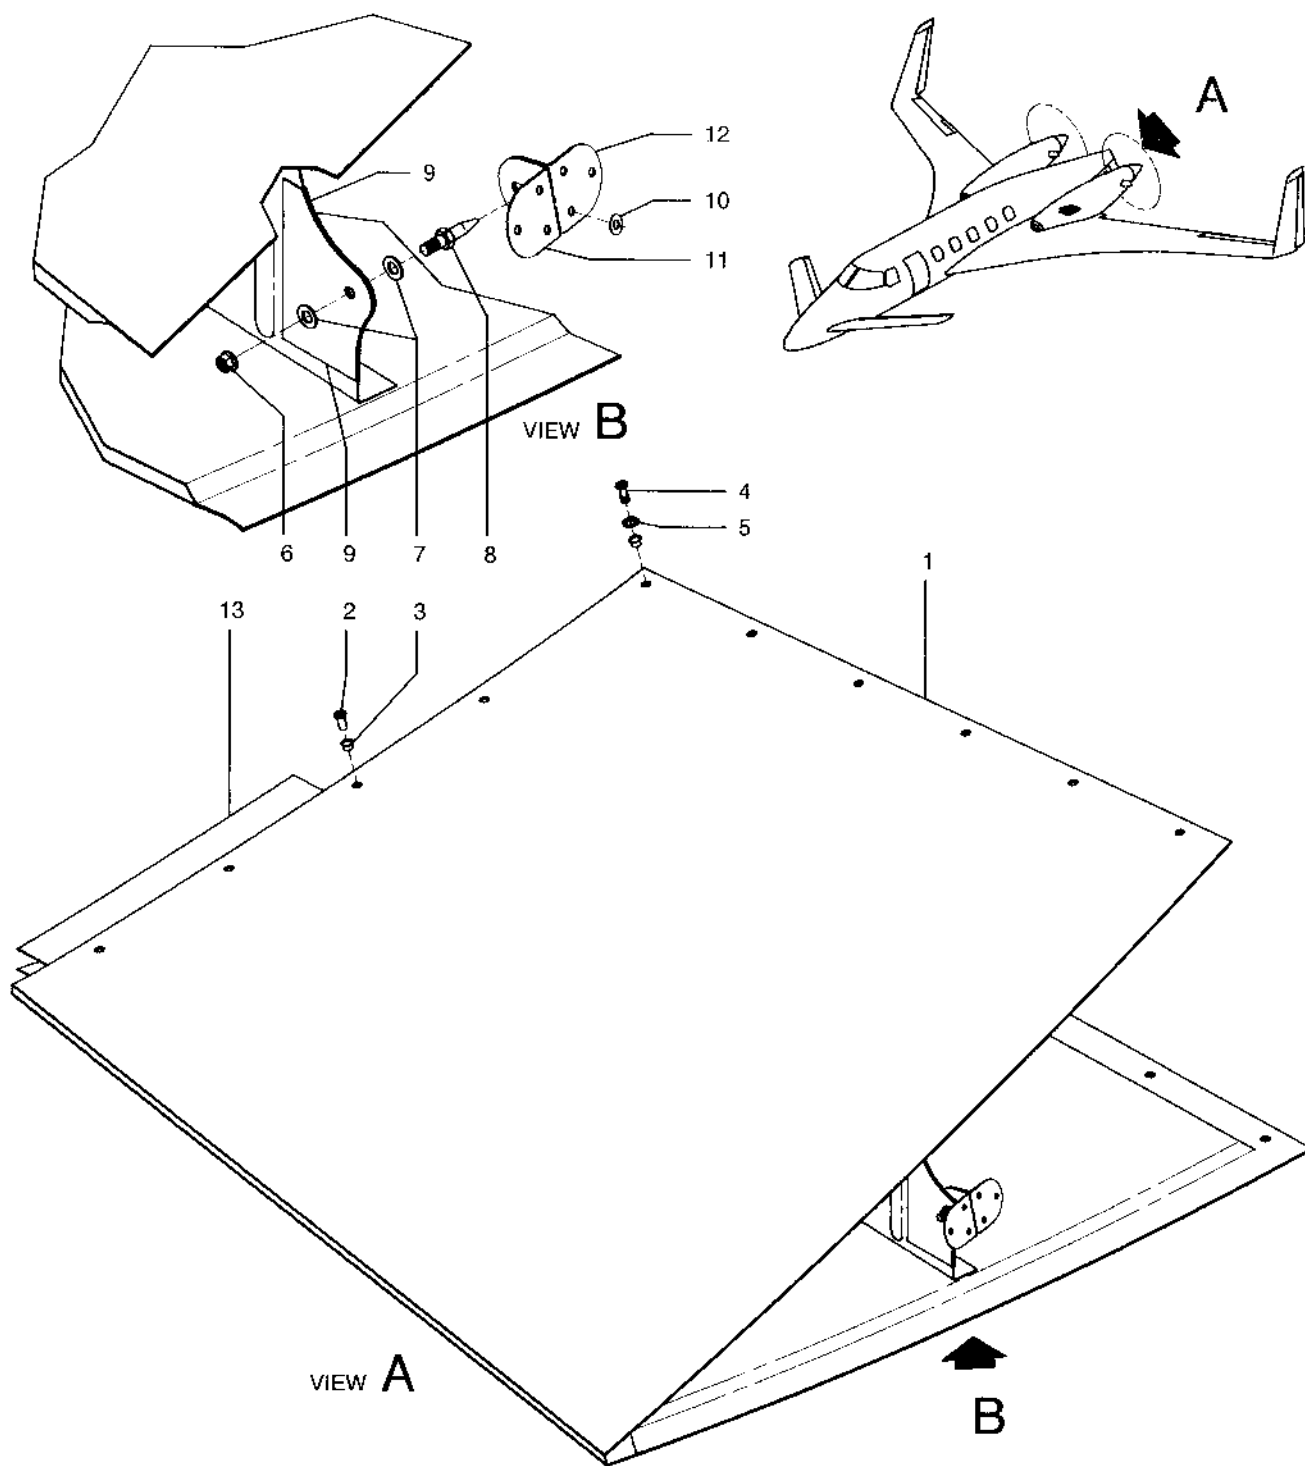

2000-037-01

FIGURE 21-00.AFT WING TRAILING EDGE INBD COVE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21-00	122-100030-1	COVE INSTL, LH AFT WING TRAILING EDGE INBD.....	NP	
	122-100030-2	COVE INSTL, RH AFT WING TRAILING EDGE INBD.....	NP	
- 1	122-100030-31	. COVE ASSY, LH.....	1	
	122-100030-32	. COVE ASSY, RH.....	1	
- 2	CA18324-1P	. NUT/4 UPPER AND 4 LOWER/.....	8	
- 3	CA18185	. GROMMET/4 UPPER AND 4 LOWER/.....	8	
- 4	DPYS7900P10B2	. SCREW/6 UPPER AND 7 LOWER/.....	13	
- 5	132116-1	. WASHER/6 UPPER AND 7 LOWER/.....	13	
	SL607-3-9CM	. INSERT/6 UPPER AND 7 LOWER/.....	13	
- 6	MS21043-4	. NUT.....	1	
- 7	AN960C416L	. WASHER.....	2	
- 8	122-100030-13	. STUD.....	1	
- 9	122-100030-29	. DOUBLER.....	1	
- 10	AN960C8	. WASHER/FAR SIDE/.....	6	
	122-100030-19	. BRACKET ASSY, LH.....	1	
	122-100030-20	. BRACKET ASSY, RH.....	1	
- 11	122-100030-21	. BRACKET, LH.....	1	
	122-100030-22	. BRACKET, RH.....	1	
- 12	122-100030-23	. BRACKET, LH.....	1	
	122-100030-24	. BRACKET, RH.....	1	
- 13	122-980052-75	. FIREWALL ASSY, LH AFT INBD/SEE CHAPTER 54/.....	1	1
	122-980052-81	. FIREWALL ASSY, LH AFT INBD/SEE CHAPTER 54/.....	1	2
	122-980052-89	. FIREWALL ASSY, LH AFT INBD/SEE CHAPTER 54/.....	1	3
	122-980052-76	. FIREWALL ASSY, RH AFT INBD/SEE CHAPTER 54/.....	1	1
	122-980052-82	. FIREWALL ASSY, RH AFT INBD/SEE CHAPTER 54/.....	1	2
	122-980052-90	. FIREWALL ASSY, RH AFT INBD/SEE CHAPTER 54/.....	1	3


CODES OF EFFECTIVITY

1	NC-4 THRU NC-28	2	NC-29 THRU NC-40
3	NC-41 AND AFTER		

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-40-00
LEADING EDGE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

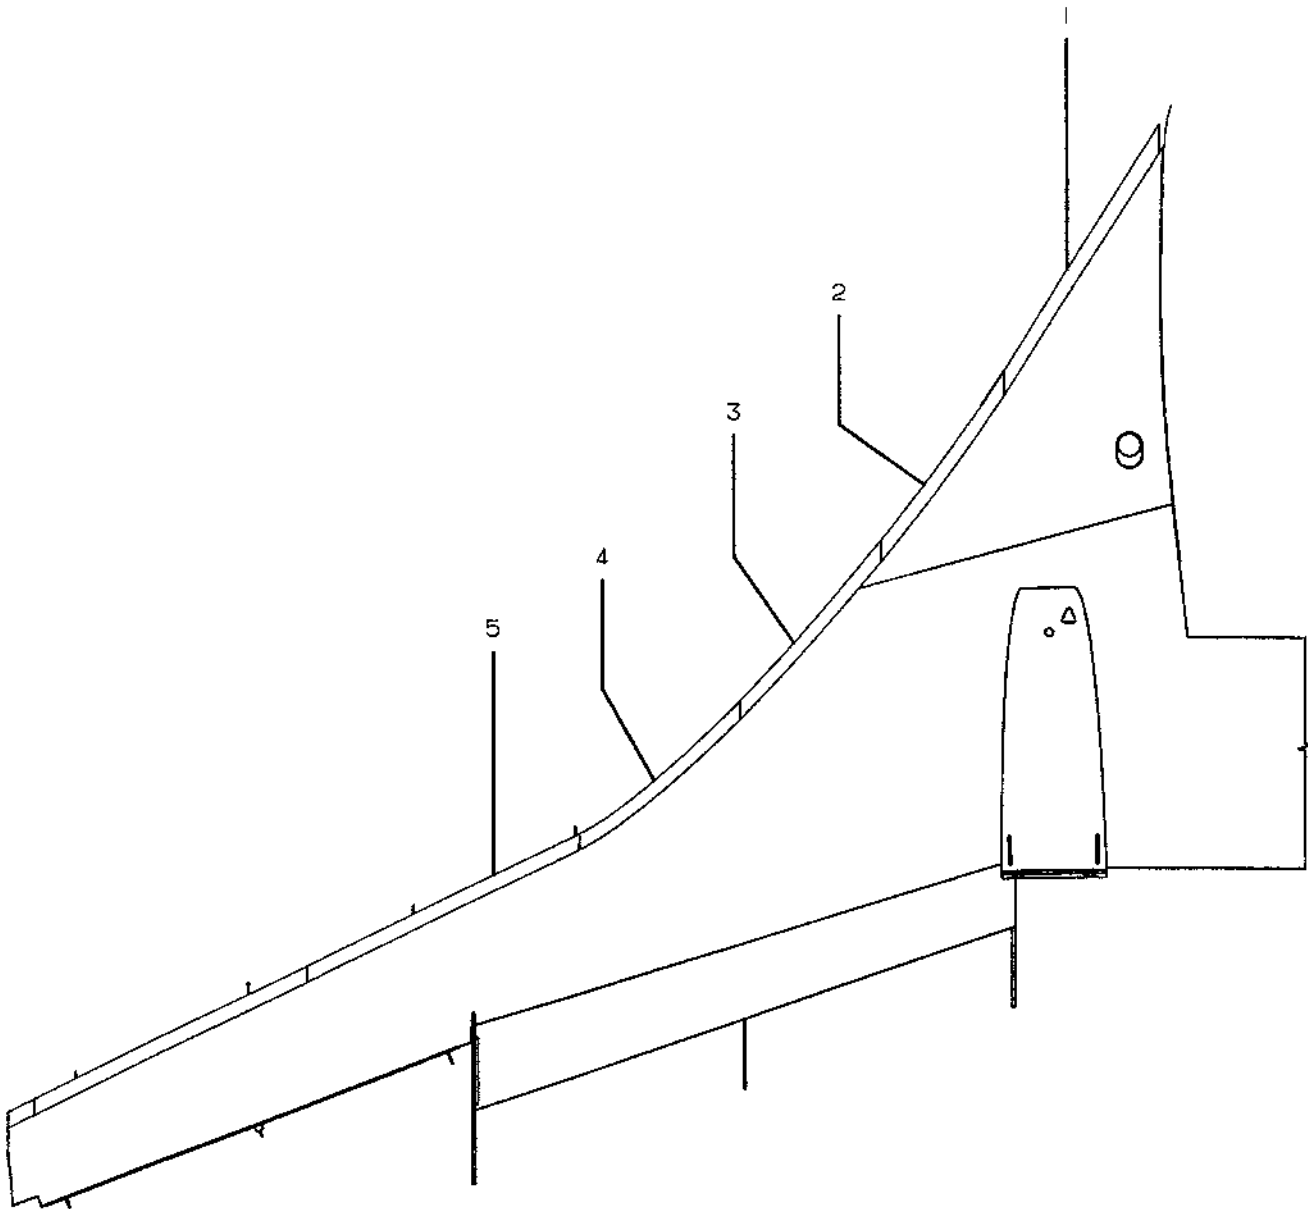


C94NC57A1796

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00	R 122-100151-1	LEADING EDGE INSTL, LH	NP	1
	R 122-100151-2	LEADING EDGE INSTL, RH	NP	1
	R 122-100152-1	LEADING EDGE INSTL, LH	NP	1
	R 122-100152-2	LEADING EDGE INSTL, RH	NP	1
	R 122-100153-1	LEADING EDGE INSTL, LH	NP	1
	R 122-100153-2	LEADING EDGE INSTL, RH	NP	1
	R 122-100154-1	LEADING EDGE INSTL, LH	NP	1
	R 122-100154-2	LEADING EDGE INSTL, RH	NP	1
	R 122-100155-1	LEADING EDGE INSTL, LH	NP	1
	R 122-100155-2	LEADING EDGE INSTL, RH	NP	1
	R 122-100156-1	LEADING EDGE INSTL, LH	NP	1
	R 122-100156-2	LEADING EDGE INSTL, RH	NP	1
	R 122-100118-1	SKIN INSTL, LEADING EDGE/LH/	NP	1
	R 122-100118-2	SKIN INSTL, LEADING EDGE/RH/	NP	1
	R 122-100157-1	LEADING EDGE INSTL, LH	NP	2
	R 122-100157-2	LEADING EDGE INSTL, RH	NP	2
	- 1 R 122-100151-3	. LEADING EDGE ASSY, LH	1	1
	R 122-100158-1	. LEADING EDGE ASSY, LH	1	2
	R 122-100151-4	. LEADING EDGE ASSY, RH	1	1
	R 122-100158-2	. LEADING EDGE ASSY, RH	1	2
	R MS21061L3	. . NUTPLATE/122-100158-1 & -2/	4	2
	R MS21060L3	. NUTPLATE/INSTALLED ON 122-100151-3 & -4/	4	1
	- 2 R 122-100152-3	. LEADING EDGE ASSY, LH	1	1
	R 122-100158-3	. LEADING EDGE ASSY, LH	1	2
	R 122-100152-4	. LEADING EDGE ASSY, RH	1	1
	R 122-100158-4	. LEADING EDGE ASSY, RH	1	2
	- 3 R 122-100153-3	. LEADING EDGE ASSY, LH	1	1
	R 122-100158-5	. LEADING EDGE ASSY, LH	1	2
	R 122-100153-4	. LEADING EDGE ASSY, RH	1	1
	R 122-100158-6	. LEADING EDGE ASSY, RH	1	2
	- 4 R 122-100154-3	. LEADING EDGE ASSY, LH	1	1
	R 122-100158-7	. LEADING EDGE ASSY, LH	1	2
	R 122-100154-4	. LEADING EDGE ASSY, RH	1	1
	R 122-100158-8	. LEADING EDGE ASSY, RH	1	2
	- 5 R 122-100155-3	. LEADING EDGE ASSY, LH	1	1
	R 122-100158-9	. LEADING EDGE ASSY, LH	1	2
	R 122-100155-4	. LEADING EDGE ASSY, RH	1	1
	R 122-100158-10	. LEADING EDGE ASSY, RH	1	2

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

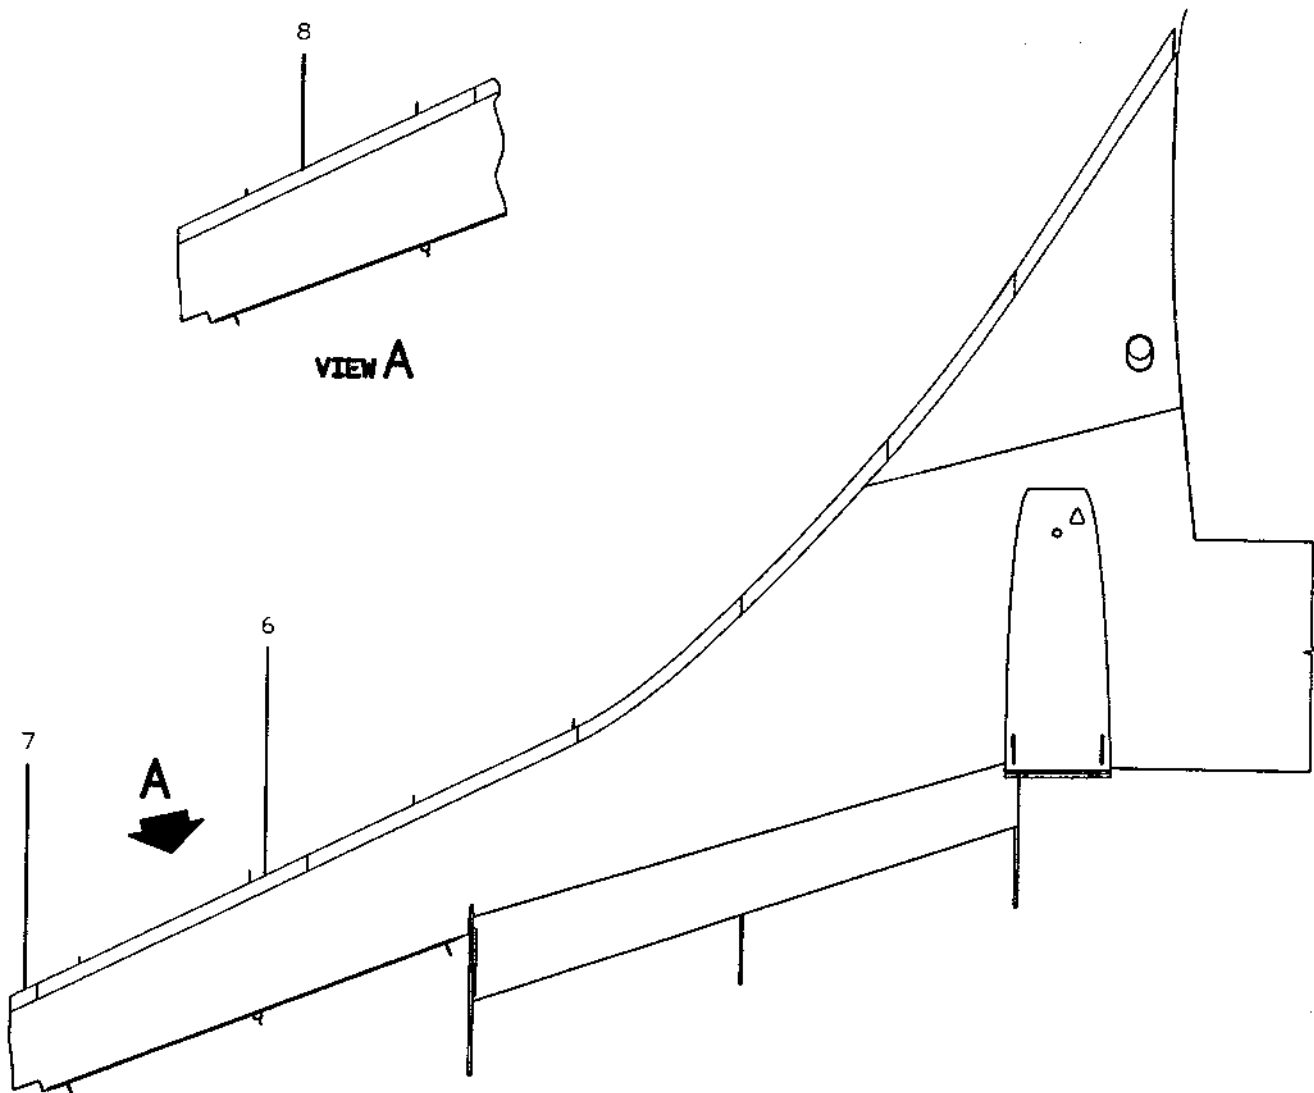

C94NC57A1797

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00 - 6	R 122-100156-3	. LEADING EDGE ASSY, LH	1	1
	R 122-100156-4	. LEADING EDGE ASSY, RH	1	1
- 7	R 122-100118-3	. SKIN, LEADING EDGE/LH/	1	1
	R 122-100118-4	. SKIN, LEADING EDGE/RH/	1	1
	R 122-100118-5	. BRACKET ASSY, LH/INSTALLED ON 122-100118-3/	1	1
	R 122-100118-6	. BRACKET ASSY, RH/INSTALLED ON 122-100118-4/	1	1
	R MS21059L3K	. . NUTPLATE	1	1
	R GFP6010L8C	. NUTPLATE/INSTALLED ON 122-100118-3 & -4/	2	1
- 8	R 122-100158-11	. LEADING EDGE ASSY, LH	1	2
	R 122-100158-12	. LEADING EDGE ASSY, RH	1	2
	R 122-100158-47	. . BRACKET ASSY/122-100158-11/	1	2
	R 122-100158-48	. . BRACKET ASSY/122-100158-12/	1	2
	R MS21059L3K	. . . NUTPLATE	1	2


CODES OF EFFECTIVITY

1 NC-4 THRU NC-20 2 NC-21 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-40-10
AFT WING LEADING EDGE VORTILON

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

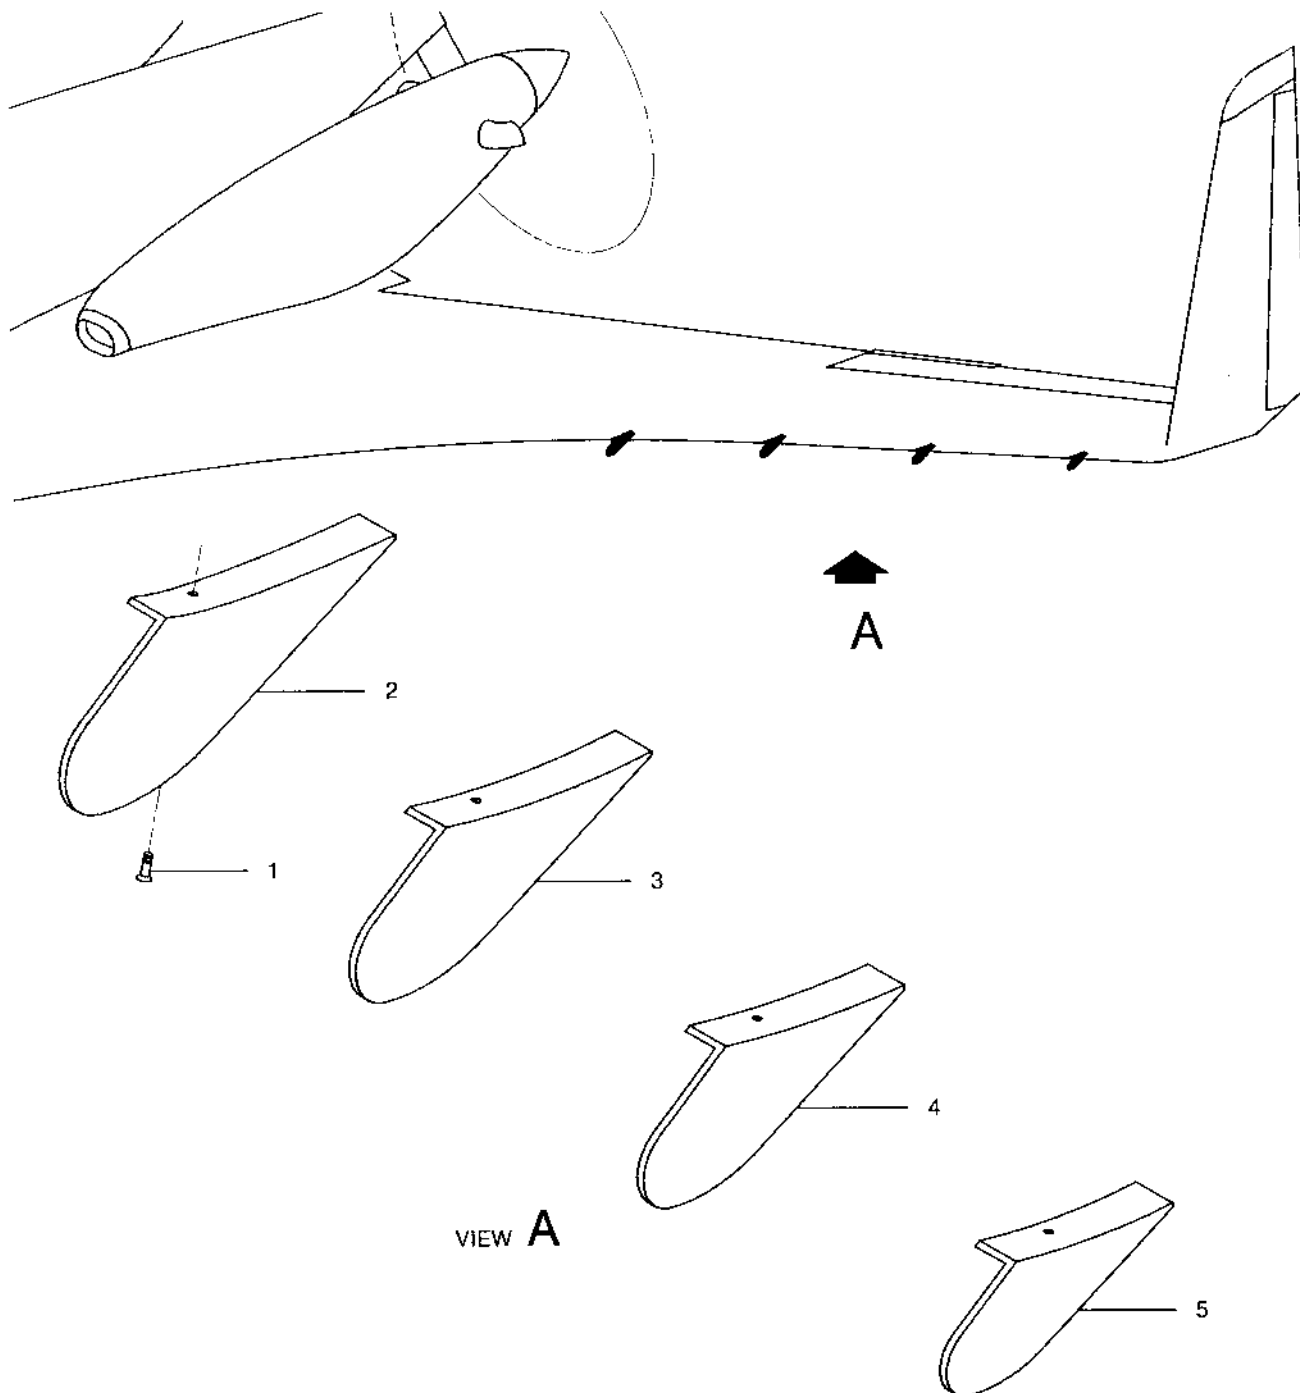

2000-34-01

FIGURE 40-10.AFT WING LEADING EDGE VORTILON


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-10	122-100021-1	VORTILON INSTL, AFT WING LEADING EDGE LH.....	NP	
	122-100021-2	VORTILON INSTL, AFT WING LEADING EDGE RH	NP	
- 1	NAS1921M06S06	. RIVET	4	
- 2	122-100022-9	. VORTILON, LH	1	
	122-100022-10	. VORTILON, RH	1	
- 3	122-100022-11	. VORTILON, LH	1	
	122-100022-12	. VORTILON, RH	1	
- 4	122-100022-13	. VORTILON, LH	1	
	122-100022-14	. VORTILON, RH	1	
- 5	122-100022-15	. VORTILON, LH	1	
	122-100022-16	. VORTILON, RH	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-50-00
FLAP INSTALLATION

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

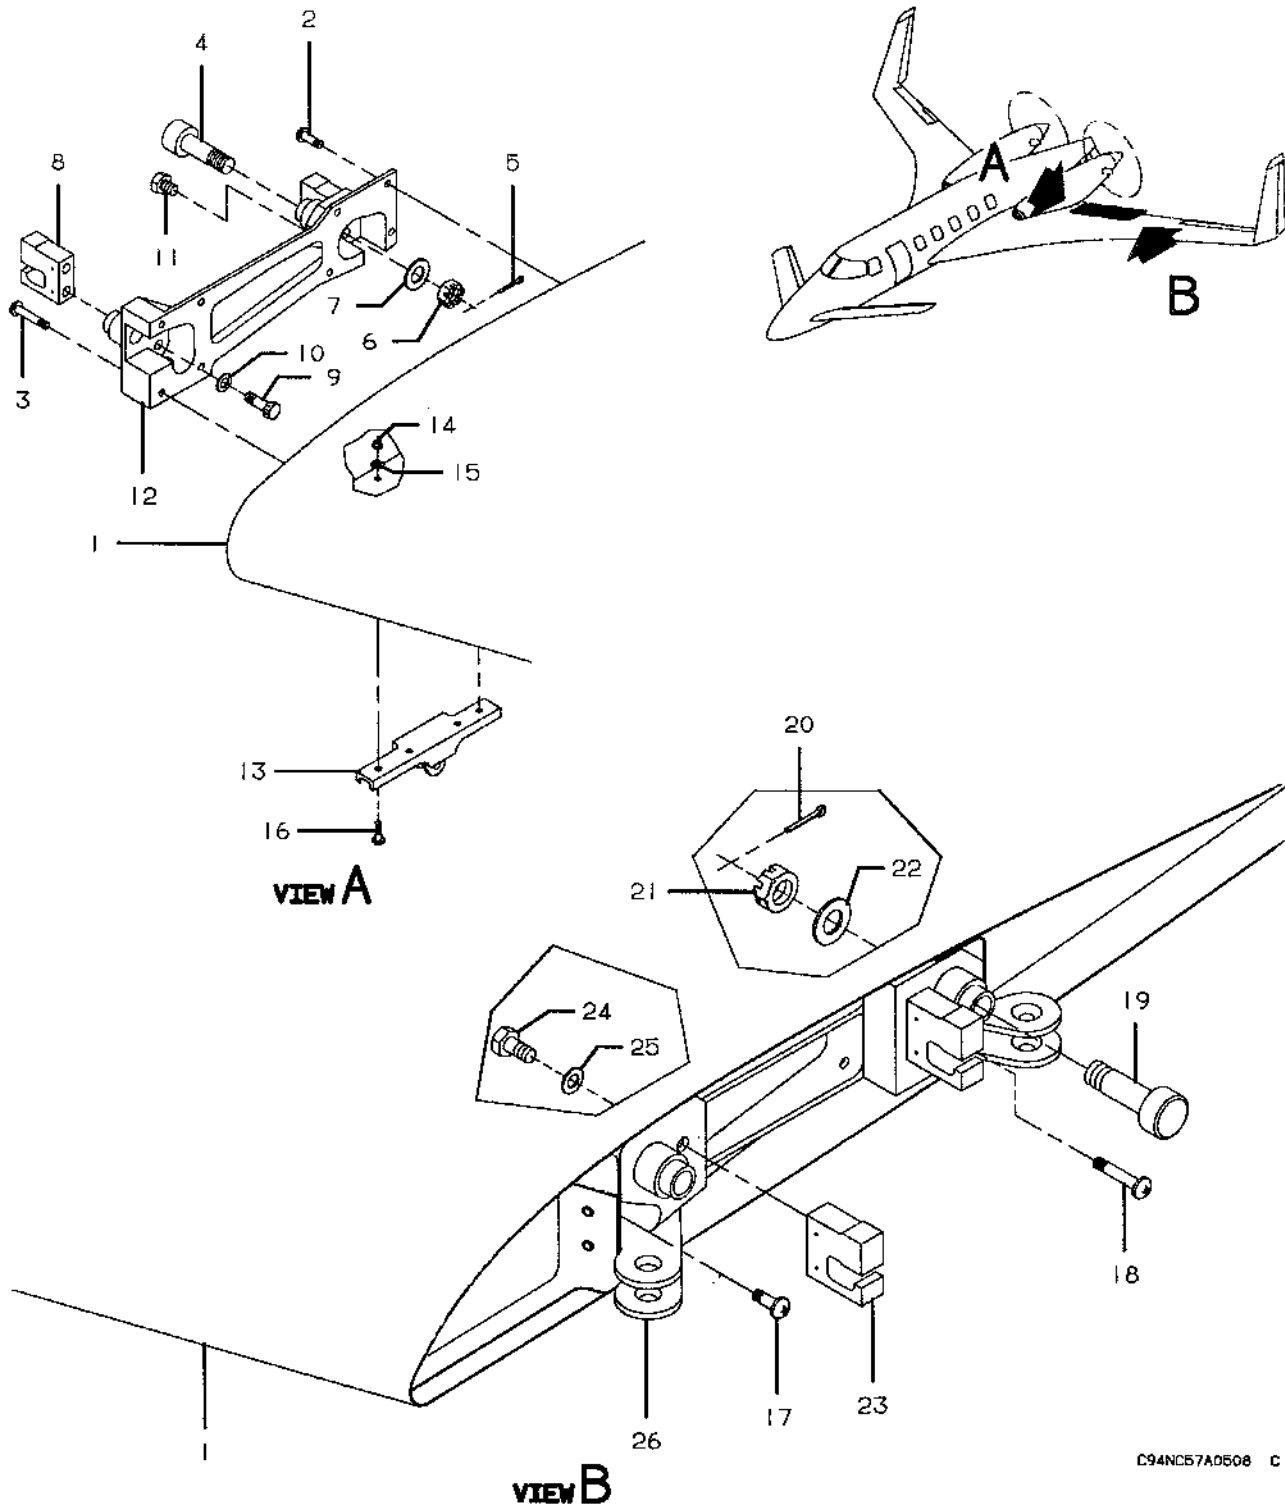


C94NC57A0508 C

FIGURE 50-00.FLAP INSTALLATION
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-00	122-160000-1	FLAP INSTL, LH WING	NP	
	122-160000-2	FLAP INSTL, RH WING	NP	
- 1	122-160022-1	.. FLAP ASSY, LH INBD	1	
	122-160022-2	.. FLAP ASSY, RH INBD	1	
	122-521124-5	.. SUPPORT ASSY, LH INBD FLAP INBD ROLLER	1	
	122-521124-6	.. SUPPORT ASSY, RH INBD FLAP INBD ROLLER	1	
		.. ATTACHING PARTS/		
- 2	MS27039C1-10	.. SCREW	6	
- 3	MS27039C1-25	.. SCREW	2	
		---★---		
- 4	CC59417	.. ROLLER	2	
		.. ATTACHING PARTS/		
- 5	MS24665-132	.. PIN, COTTER	1	
- 6	MS17826-7	.. NUT	1	
- 7	AN960-716	.. WASHER	1	
		---★---		
- 8	122-521126-9	.. FITTING	2	
		.. ATTACHING PARTS/		
- 9	NAS6204-2H	.. BOLT	2	
- 10	AN960-416L	.. WASHER	2	
		---★---		
- 11	122-521051-35	.. BOLT, GUIDE	2	
	130077-7L01	.. INSERT	2	
- 12	122-521124-3	.. FITTING, LH INBD FLAP INBD ROLLER SPRT	1	
	122-521124-4	.. FITTING, RH INBD FLAP INBD ROLLER SPRT	1	
- 13	122-521134-5	.. BRACKET, LH INBD FLAP DRIVE	1	
	122-521134-6	.. BRACKET, RH INBD FLAP DRIVE	1	
		.. ATTACHING PARTS/		
- 14	MS21043-08	.. NUT	4	
- 15	AN960C8	.. WASHER	4	
- 16	MS27039C0811	.. SCREW	4	
		---★---		
	122-521125-11	.. SUPPORT ASSY, LH INBD FLAP OUTBD ROLLER	1	
	122-521125-12	.. SUPPORT ASSY, RH INBD FLAP OUTBD ROLLER	1	
		.. ATTACHING PARTS/		
- 17	MS27039C1-10	.. SCREW	6	
- 18	MS27039C1-25	.. SCREW	2	
		---★---		
- 19	CC59417	.. ROLLER	2	
		.. ATTACHING PARTS/		
- 20	MS24665-132	.. PIN, COTTER	1	
- 21	MS17826-7	.. NUT	1	
- 22	AN960-716	.. WASHER	AR	
		---★---		
- 23	122-521125-9	.. FITTING	2	
		.. ATTACHING PARTS/		
- 24	NAS6204-2H	.. BOLT	2	
- 25	AN960-716	.. WASHER	2	
		---★---		
- 26	122-521125-15	.. FITTING, LH INBD FLAP OUTBD ROLLER SPRT	1	
	122-521125-16	.. FITTING, RH INBD FLAP OUTBD ROLLER SPRT	1	
	MS21070L3	.. NUTPLATE, SINGLE WING/LOCATED ON THE INBD	8	
		.. & OUTBD RIBS TO ATTACH ROLLER SUPPORTS/		
	MS21072L3	.. NUTPLATE, DOUBLE WING/LOCATED ON THE INBD	8	
		.. & OUTBD RIBS TO ATTACH ROLLER SUPPORTS/		
	MS21048L3	.. NUTPLATE, DOUBLE WING/ATTACHES CENTER FLAP	4	
		.. FAIRING/		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

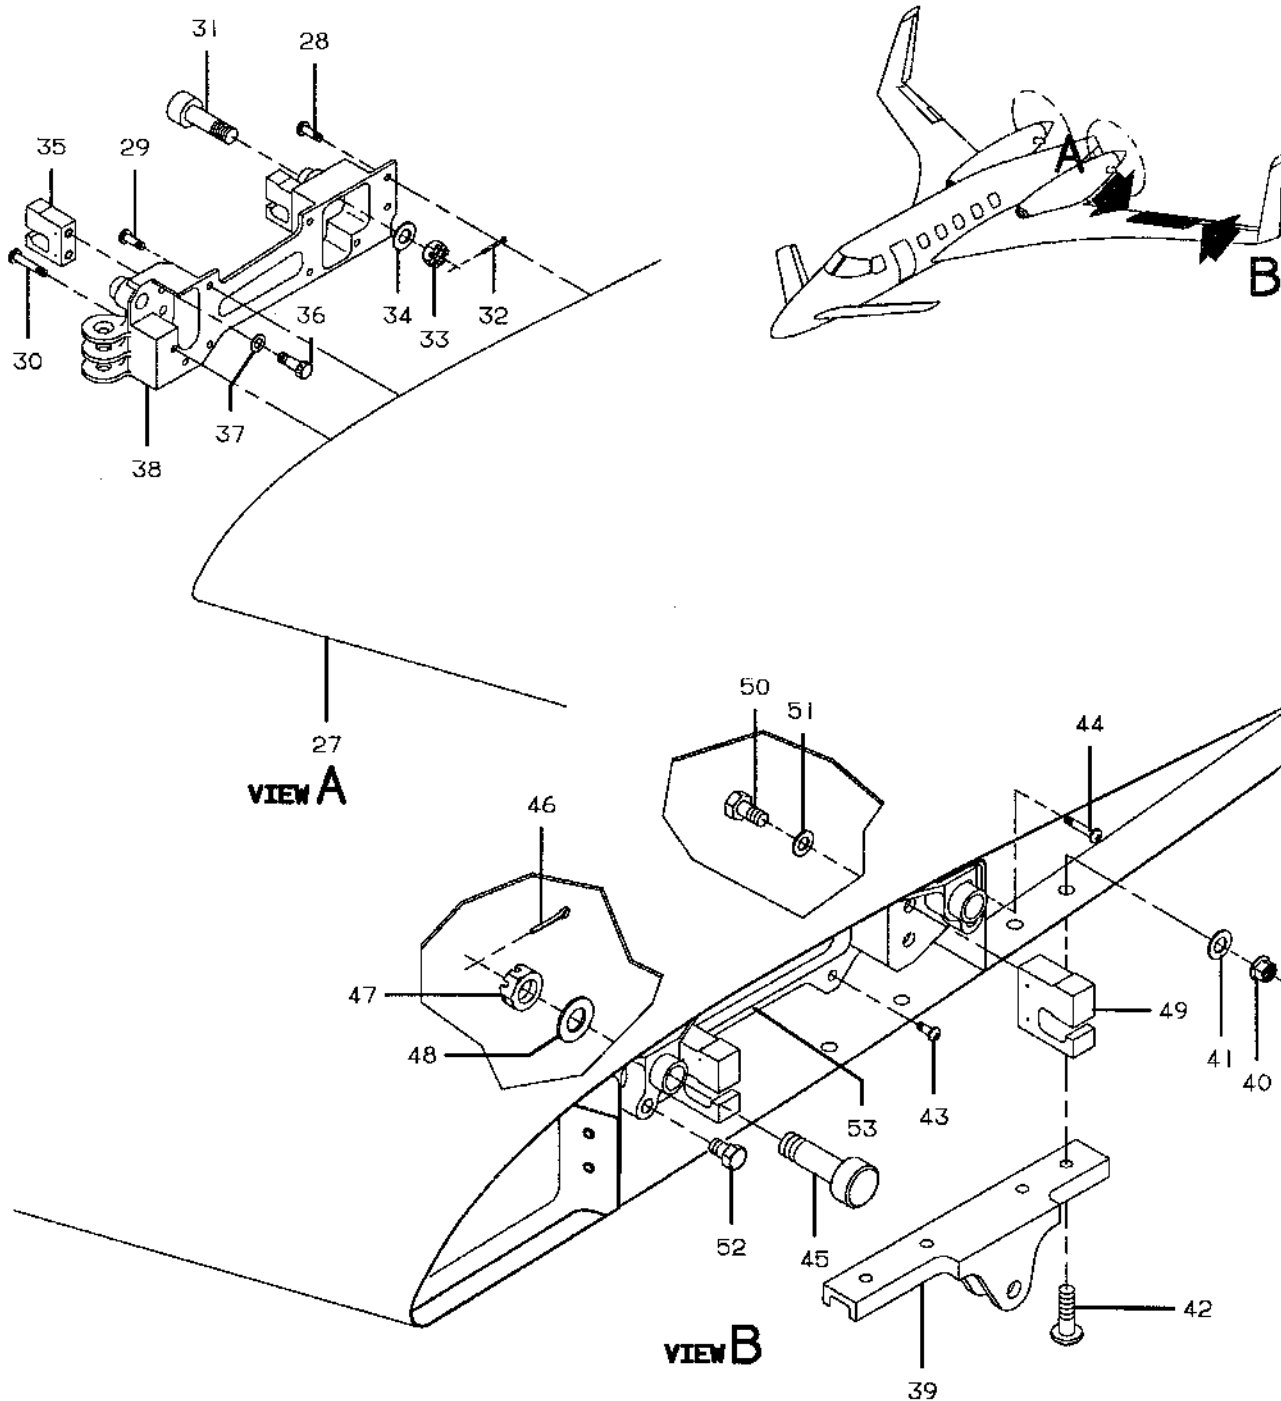

C94NC57A0509 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50-00 -27	122-160025-1	.. FLAP ASSY, LH OUTBD	1	
	122-160025-2	.. FLAP ASSY, RH OUTBD	1	
	122-521125-13	.. SUPPORT ASSY, LH OUTBD FLAP INBD ROLLER	1	
	122-521125-14	.. SUPPORT ASSY, RH OUTBD FLAP INBD ROLLER	1	
		.. ATTACHING PARTS/		
-28	MS27039C1-10	.. SCREW	5	
-29	MS27039C1-12	.. SCREW	1	
-30	MS27039C1-25	.. SCREW	3	
		---★---		
-31	CC59417	.. ROLLER	2	
		.. ATTACHING PARTS/		
-32	MS24665-132	.. PIN, COTTER	1	
-33	MS17826-7	.. NUT	1	
-34	AN960-716	.. WASHER	AR	
		---★---		
-35	122-521125-9	.. FITTING	2	
		.. ATTACHING PARTS/		
-36	NAS6204-2H	.. BOLT	2	
-37	AN960-716	.. WASHER	2	
		---★---		
-38	122-521125-17	.. FITTING, LH OUTBD FLAP INBD ROLLER SPRT	1	
	122-521125-18	.. FITTING, RH OUTBD FLAP INBD ROLLER SPRT	1	
-39	122-521134-1	.. BRACKET, OUTBD FLAP DRIVE	1	
		.. ATTACHING PARTS/		
-40	MS21043-08	.. NUT	4	
-41	AN960C8	.. WASHER	4	
-42	MS27039C0810	.. SCREW	4	
		---★---		
	122-521126-11	.. SUPPORT ASSY, LH OUTBD FLAP OUTBD ROLLER	1	
	122-521126-12	.. SUPPORT ASSY, RH OUTBD FLAP OUTBD ROLLER	1	
		.. ATTACHING PARTS/		
-43	MS27039C1-10	.. SCREW	6	
-44	MS27039C1-27	.. SCREW	2	
		---★---		
-45	CC59417	.. ROLLER	2	
		.. ATTACHING PARTS/		
-46	MS24665-132	.. PIN, COTTER	1	
-47	MS17826-7	.. NUT	1	
-48	AN960-716	.. WASHER	1	
		---★---		
-49	122-521126-9	.. FITTING	2	
		.. ATTACHING PARTS/		
-50	NAS6204-2H	.. BOLT	2	
-51	AN960-716	.. WASHER	2	
		---★---		
-52	122-521051-35	.. BOLT, GUIDE	2	
-53	122-521126-3	.. FITTING, LH OUTBD FLAP OUTBD ROLLER SPRT	1	
	122-521126-4	.. FITTING, RH OUTBD FLAP OUTBD ROLLER SPRT	1	
	130077-7L01	.. INSERT	2	
	MS21070L3	.. NUTPLATE, SINGLE WING/LOCATED ON THE INBD	9	
		.. & OUTBD RIBS TO ATTACH ROLLER SUPPORTS/		
	MS21072L3	.. NUTPLATE, DOUBLE WING/LOCATED ON THE INBD	8	
		.. & OUTBD RIBS TO ATTACH ROLLER SUPPORTS/		
	MS21048L3	.. NUTPLATE, DOUBLE WING/ATTACHES CENTER FLAP	4	
		.. FAIRING/		

—END—

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

57-60-00
ELEVON INSTALLATION

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

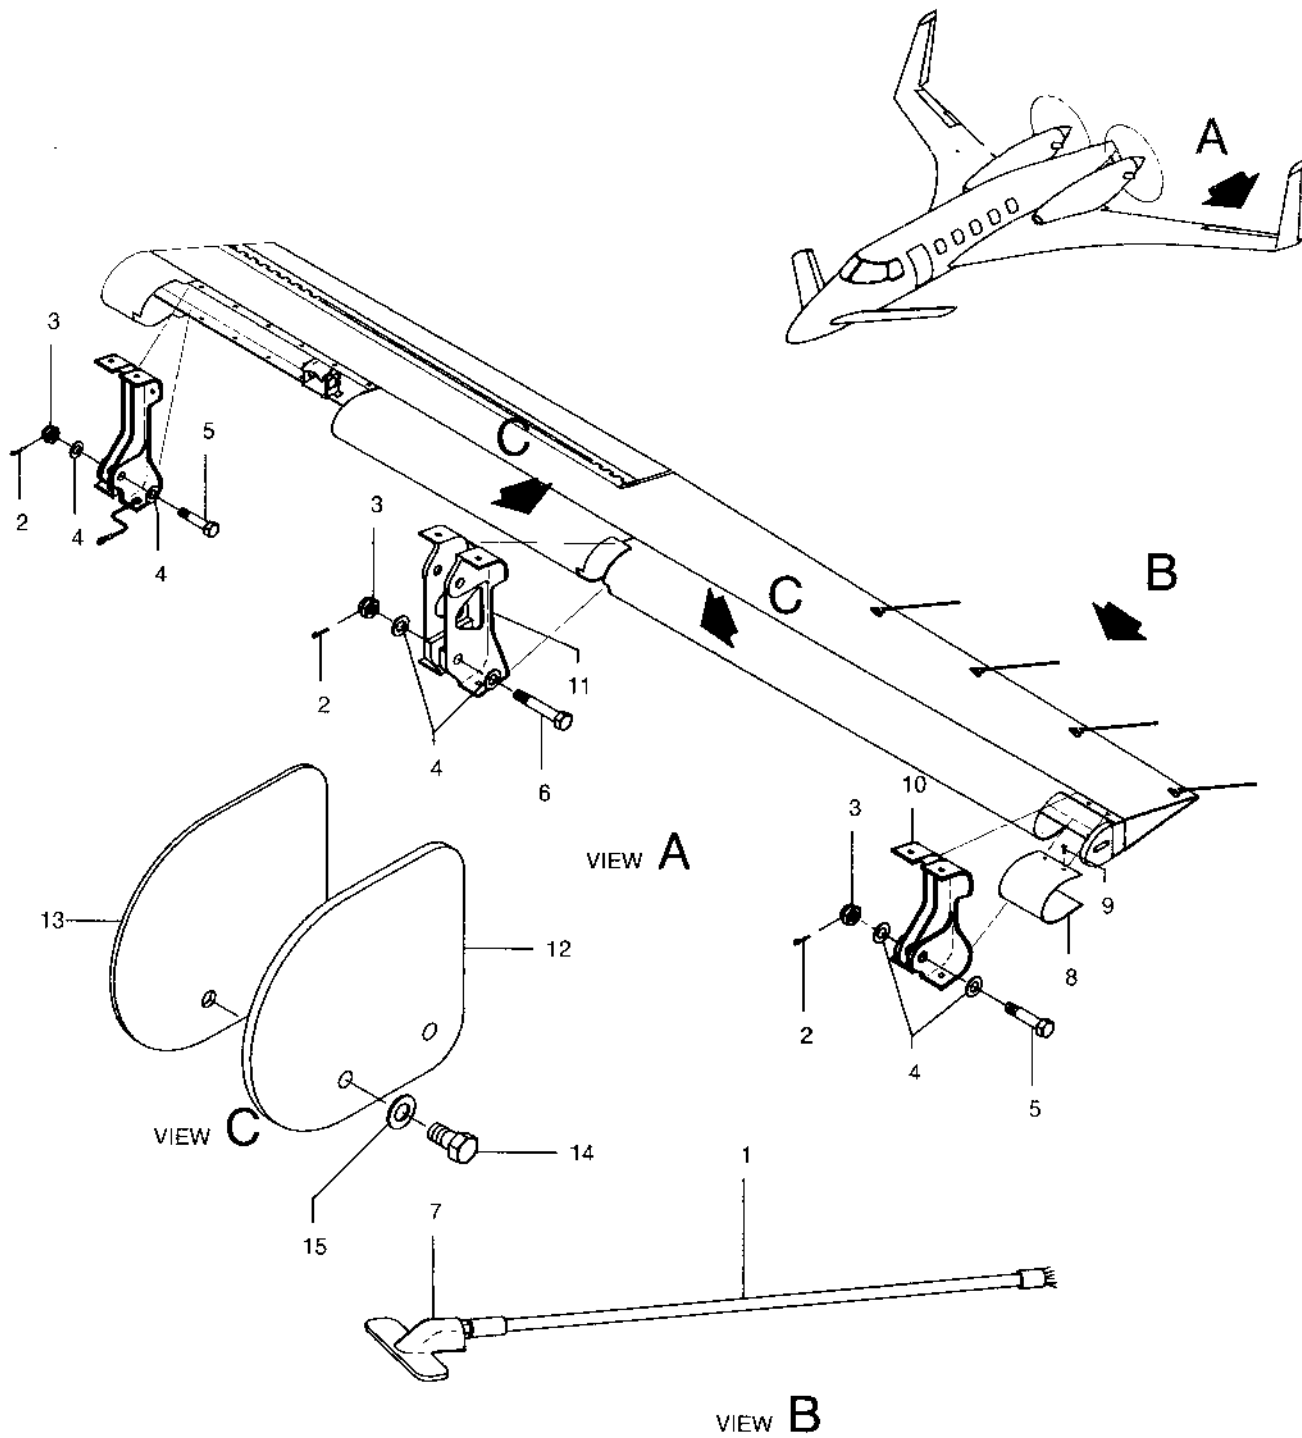


2000-41-01

FIGURE 60-00.ELEVON INSTALLATION
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60-00	122-130000-1	ELEVON INSTL, LH.....	NP	
	122-130000-2	ELEVON INSTL, RH.....	NP	
- 1	101-380053-11	. WICK, STATIC DISCHARGER.....	4	
	122-130044-123	. ELEVON ASSY, LH.....	1	1
	122-130044-129	. ELEVON ASSY, LH/ORDER 122-130044-133 FOR.....	NP	2
		SPARES/		
	122-130044-137	. ELEVON ASSY, LH/ORDER 122-130044-133 FOR.....	NP	3
		SPARES/		
	122-130044-133	. ELEVON ASSY, LH.....	1	4
	122-130044-124	. ELEVON ASSY, RH.....	1	1
	122-130044-130	. ELEVON ASSY, RH/ORDER 122-130044-134 FOR.....	NP	2
		SPARES/		
	122-130044-138	. ELEVON ASSY, RH/ORDER 122-130044-134 FOR.....	NP	3
		SPARES/		
	122-130044-134	. ELEVON ASSY, RH.....	1	4
		/ATTACHING PARTS/		
- 2	MS24665-153	. PIN, COTTER.....	3	
- 3	130909N48	. NUT.....	3	
- 4	AN960C416L	. WASHER.....	6	
- 5	NAS6204-10D	. BOLT, INBD & OUTBD.....	2	
- 6	NAS6204-12D	. BOLT, CENTER.....	1	
		★-----		
- 7	82B001-21	.. BASE, LH STATIC DISCHARGER WICK.....	4	
	122-610010-4	.. BASE, RH STATIC DISCHARGER WICK.....	4	
- 8	122-130047-31	.. COVER ASSY, LH.....	1	
	122-130047-32	.. COVER ASSY, RH.....	1	
		/ATTACHING PARTS/		
- 9	MS27039C0807	.. SCREW.....	4	
		★-----		
	MS21048L08	.. NUTPLATE.....	4	
- 10	122-130048-5	.. BRACKET, OUTBD HINGE.....	1	
- 11	122-130048-3	.. BRACKET, CENTER HINGE.....	1	
- 12	122-130110-7	.. WEIGHT, BALANCE/.12 THICK/.....	AR	
- 13	122-130110-9	.. WEIGHT, BALANCE/.06 THICK/.....	AR	
		/ATTACHING PARTS/		
- 14	AN3-H(A/R)A	.. BOLT/GRIP LENGTH DETERMINED BY THE NUMBER.....	2	
		OF BALANCE WEIGHTS/		
- 15	AN960C10L	.. WASHER.....	2	
		★-----		
	P104F1032-04	.. PLUG, INSERT/TO ATTACH BALANCE WEIGHTS/.....	4	
	S104F10-1	.. SLEEVE, INSERT/TO ATTACH BALANCE WEIGHTS/.....	4	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

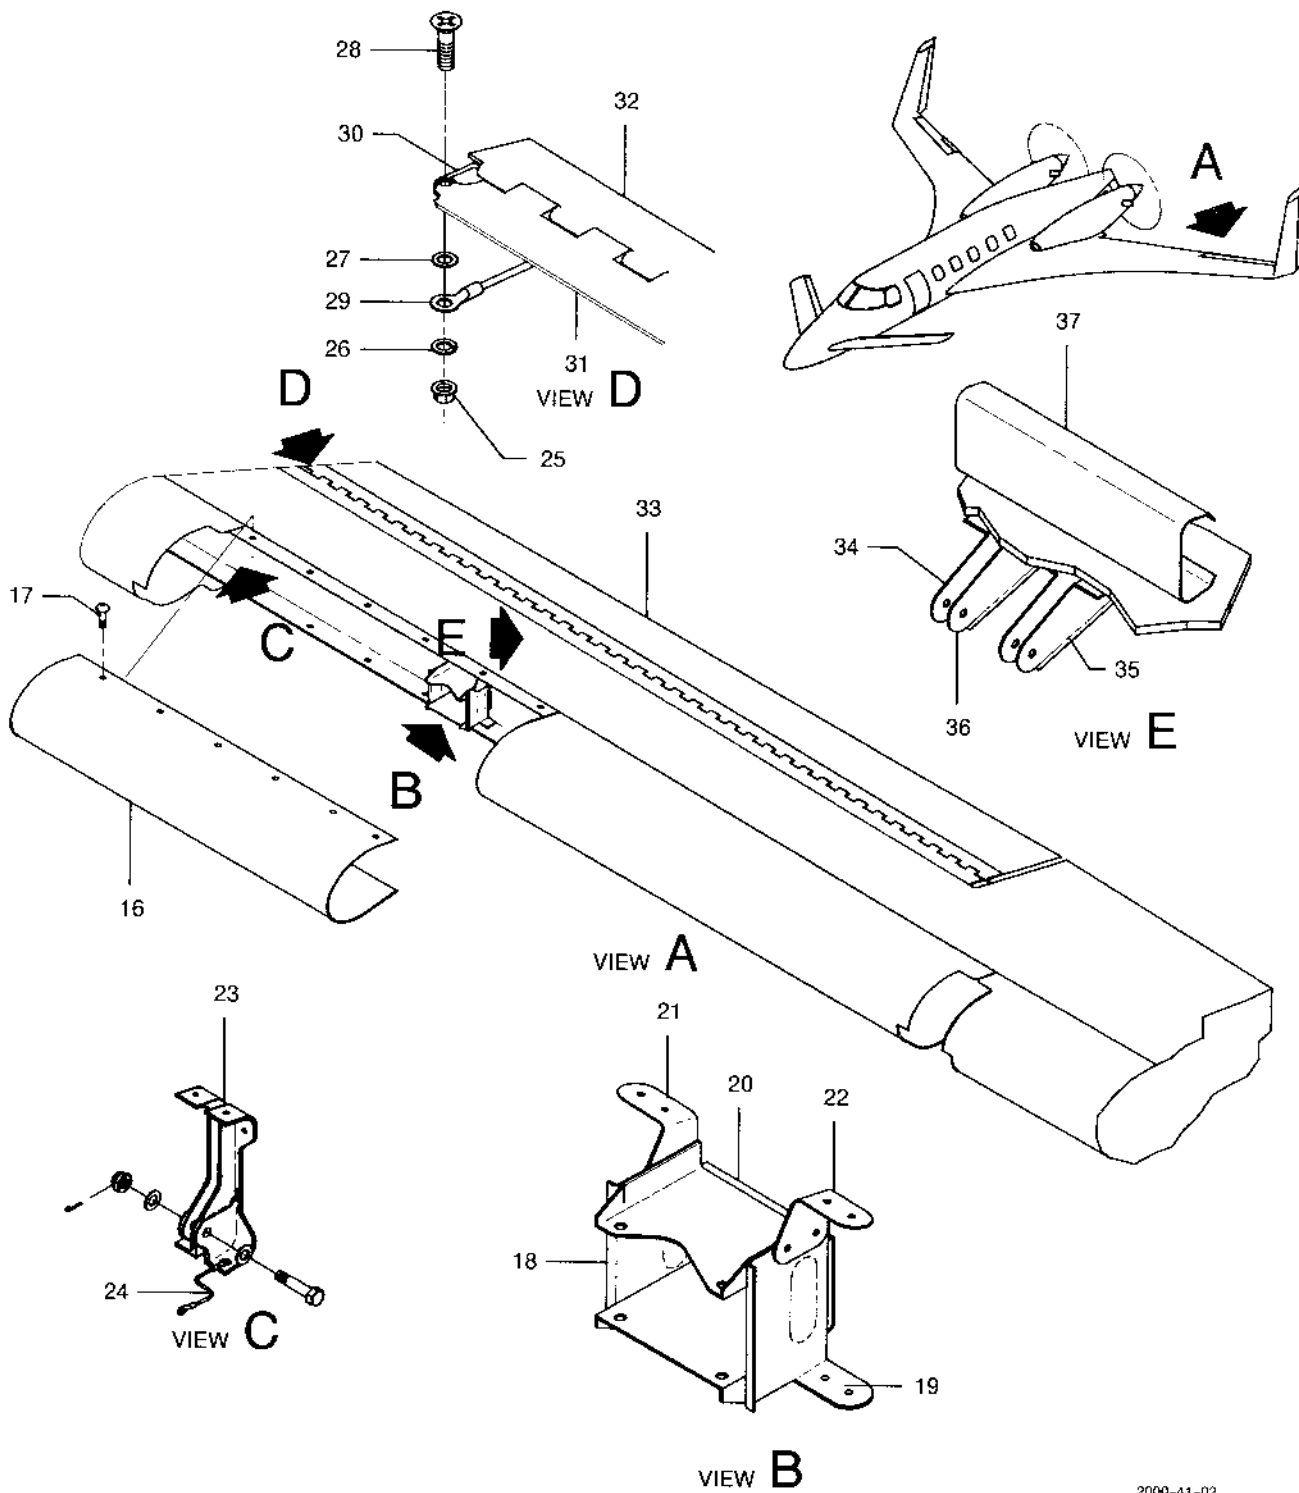

2000-41-02

FIGURE 60-00.ELEVON INSTALLATION
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60-00 -16	122-130047-3	.. COVER ASSY, LH TAB ACTUATOR	1	
	122-130047-4	.. COVER ASSY, RH TAB ACTUATOR	1	
		.. /ATTACHING PARTS/		
-17	MS27039C0807	.. SCREW	12	
		---★---		
	MS21048L08	.. NUTPLATE	12	
	122-130054-9	.. BRACKET ASSY, LH ELEVON TAB ACTUATOR	1	
	122-130054-10	.. BRACKET ASSY, RH ELEVON TAB ACTUATOR	1	
-18	122-130054-13	.. REINFORCEMENT, LH INBD & RH OUTBD	1	
-19	122-130054-14	.. REINFORCEMENT, LH OUTBD & RH INBD	1	
-20	122-130054-11	.. BRACKET, LH ELEVON TAB ACTUATOR	1	
	122-130054-12	.. BRACKET, RH ELEVON TAB ACTUATOR	1	
-21	122-130054-16	.. CLIP, LH INBD & RH OUTBD	1	
-22	122-130054-15	.. CLIP, LH OUTBD & RH INBD	1	
-23	122-130048-1	.. BRACKET, INBD HINGE	1	
-24	MS25083-3PA2	.. JUMPER, BONDING	1	
-25	MS21043-08	.. NUT	1	
-26	MS35338-42	.. WASHER	1	
-27	AN960C8	.. WASHER	1	
-28	MS24694C2	.. SCREW	1	
-29	MS25083-2AB2	.. JUMPER, BONDING	1	
-30	122-130044-93	.. PIN, ELEVON TAB HINGE	1	
-31	122-130044-91	.. HINGE HALF, LH ELEVON TAB	1	
	122-130044-92	.. HINGE HALF, RH ELEVON TAB	1	
-32	122-130044-89	.. HINGE HALF, LH ELEVON TAB	1	
	122-130044-90	.. HINGE HALF, RH ELEVON TAB	1	
	122-630044-97	.. WASHER/UNDER HINGE ATTACHING RIVET BUTT/	29	
	S43	.. GROMMET, DRAIN HOLE COVER	5	
-33	122-130044-105	.. TAB ASSY, LH	1	
	122-130044-106	.. TAB ASSY, RH	1	
-34	122-130044-115	.. BRACKET, LH INBD & RH OUTBD	1	
-35	122-130044-116	.. BRACKET, LH OUTBD & RH INBD	1	
-36	122-130044-117	.. BRACKET, CENTER	1	
-37	122-130044-77	.. STIFFENER	1	

CODES OF EFFECTIVITY

1	NC-4 THRU NC-18	2	NC-19 THRU NC-20
3	NC-21 THRU NC-26	4	NC-27 AND AFTER

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 61-00-00 PROPELLERS

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
61-00-00	1	06/30/95	LIST OF PAGES & TABLE OF CONTENTS
61-10-00	1	02/25/94	PROPELLER.....
61-10-00	2	02/25/94	
61-10-00	3	06/30/95	
61-20-00	1	02/25/94	PROPELLER SYNCHROPHASER
61-20-00	2	02/25/94	
61-20-00	3	02/25/94	
61-20-10	1	02/25/94	PROPELLER AUTOFEATHER
61-20-10	2	02/25/94	
61-20-10	3	06/30/95	
61-20-20	1	02/25/94	GROUND IDLE STOP SOLENOID
61-20-20	2	02/25/94	
61-20-20	3	02/25/94	
61-20-20	4	02/25/94	
61-20-20	5	06/30/95	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

61-10-00
PROPELLER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

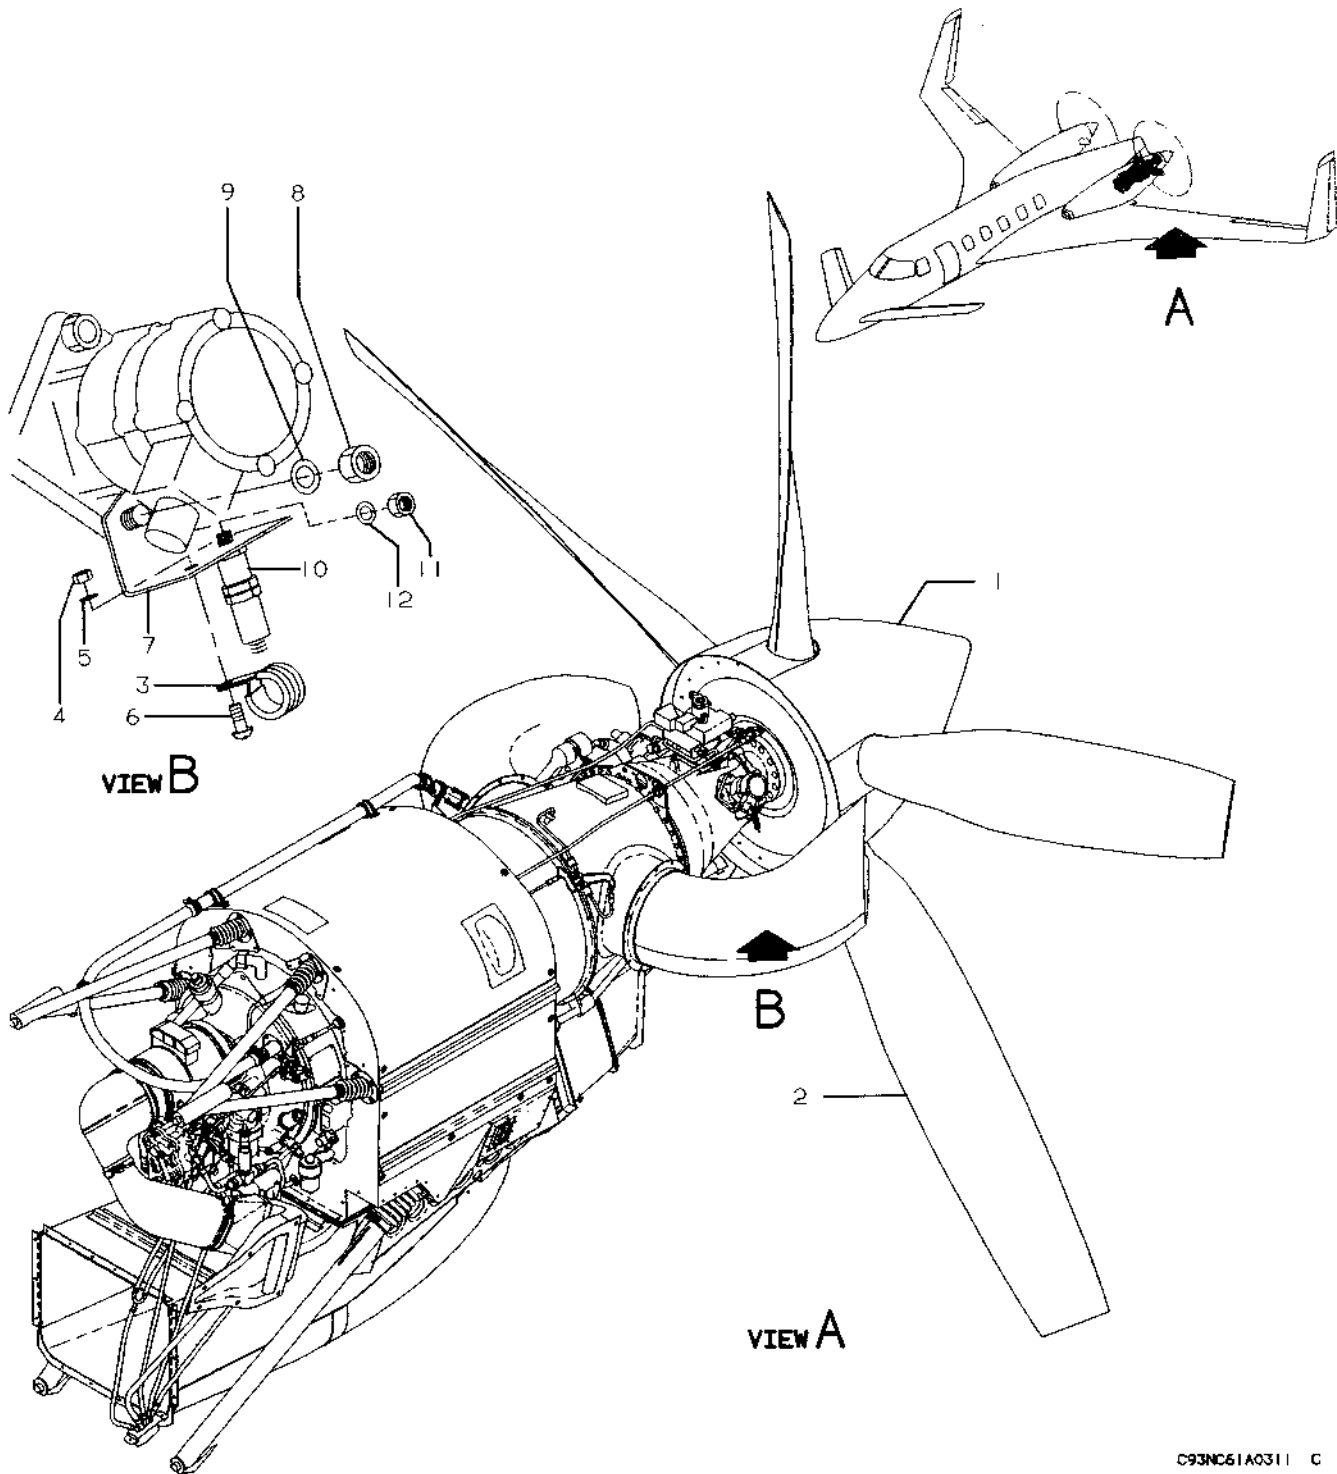

C93NC61A0311 C

FIGURE 10-00.PROPELLER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-910064-1	POWER PLANT INSTL, LH.....	NP	1
	122-910064-15	POWER PLANT INSTL, LH.....	NP	2
	122-910064-3	POWER PLANT INSTL, RH.....	NP	1
	122-910064-17	POWER PLANT INSTL, RH.....	NP	2
- 1	E6063	. SPINNER.....	1	
- 2	5JFR38C1003FDL *	104DSZ0P10036062-03 . PROPELLER ASSY, LH.....	1	
	5JFR38C1003FDL *	104DSZ0P10036062-04 . PROPELLER ASSY, RH.....	1	
- 3	R MS21919WH6	CLAMP, VELOCIMETER.....	2	3
		/ATTACHING PARTS/		
- 4	R MS21042L3	NUT.....	2	3
- 5	R AN980-10L	WASHER.....	2	3
- 6	R MS35207-263	SCREW.....	2	3
		---★---		
- 7	118-369021-3	BRACKET ASSY, DYNAMIC PROPELLER BALANCING.....	2	3
		VELOCIMETER		
		/ATTACHING PARTS/		
- 8	R MS21042L4	NUT.....	4	3
- 9	R AN980-416L	WASHER.....	4	3
		---★---		
- 10	R 908-8452A	VELOCIMETER.....	2	3
		/ATTACHING PARTS/		
- 11	R MS21042L4	NUT.....	4	3
- 12	R AN980-416L	WASHER.....	4	3
		---★---		

CODES OF EFFECTIVITY

1	NC-4 THRU NC-28	2	NC-29 AND AFTER
3	NC-35 AND AFTER		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

61-20-00
PROPELLER SYNCHROPHASER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

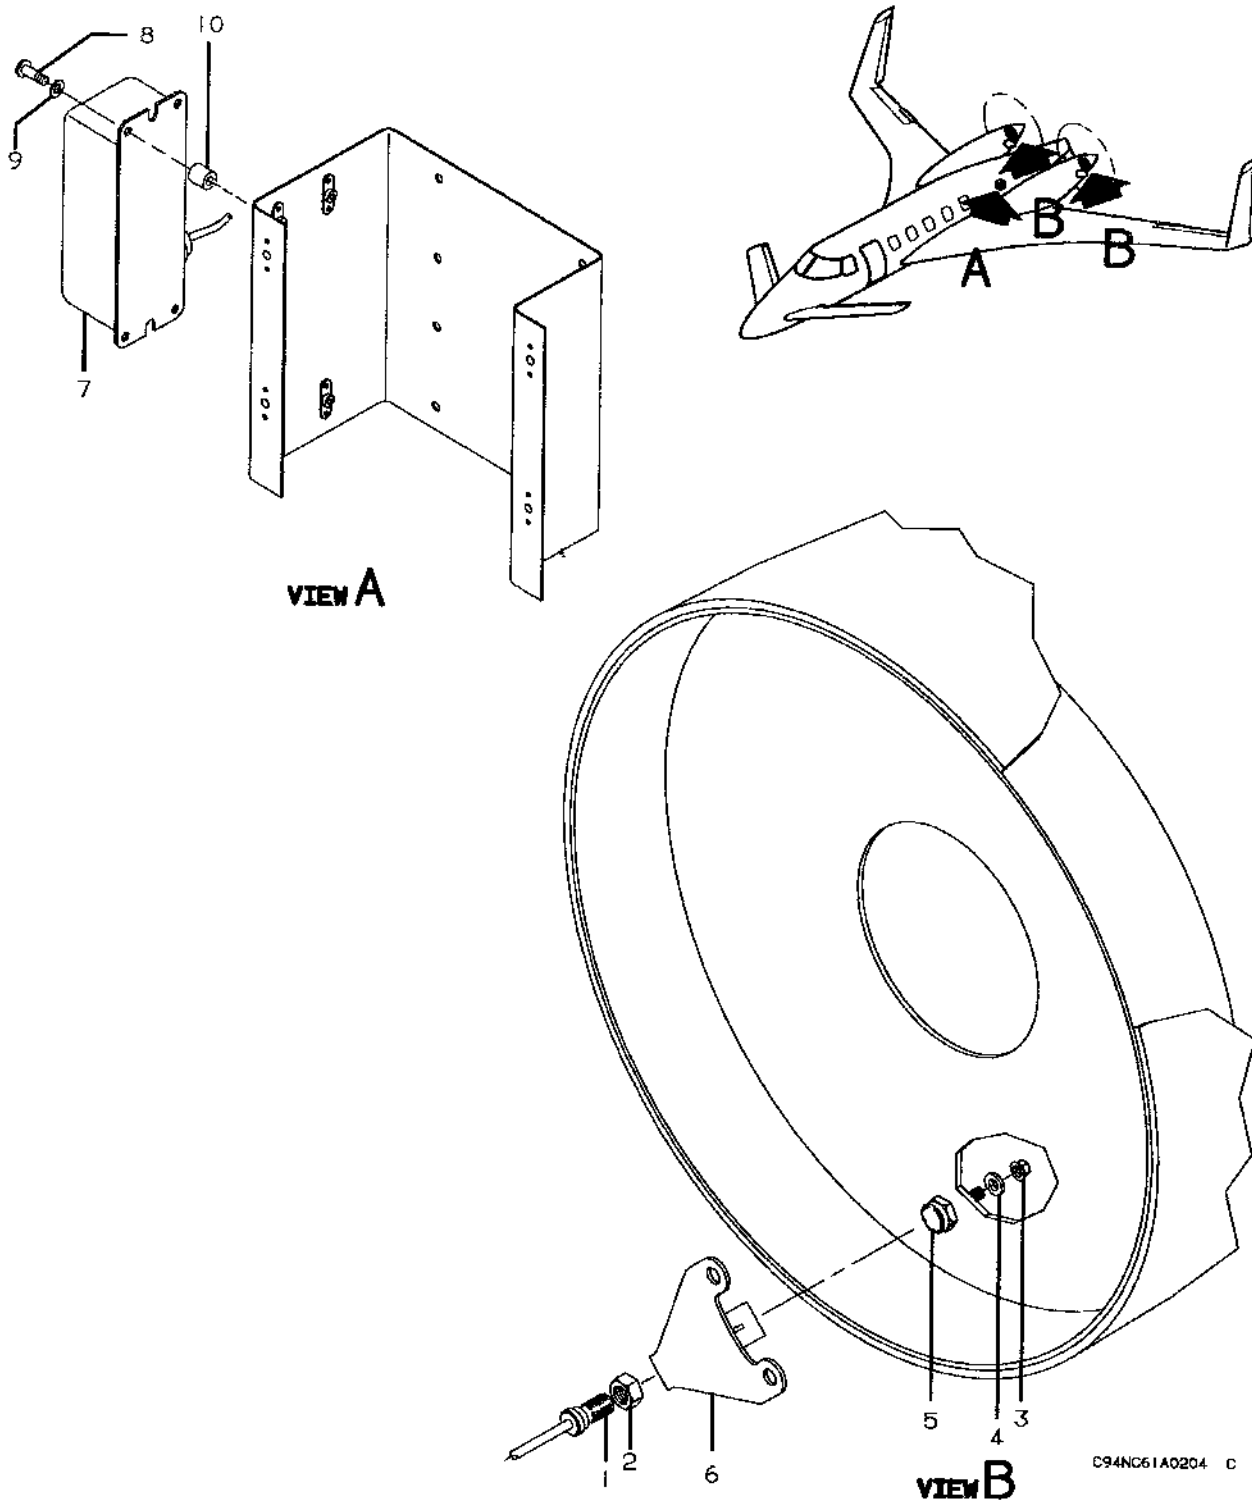


FIGURE 20-00.PROPELLER SYNCHROPHASER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-960010-17	SYNCHROPHASER INSTL, PROPELLER	NP	
- 1	213181	. PICKUP, MAGNETIC	2	
- 2	1133-877	. NUT, LOCK.....	2	
- 3	MS21043-06	. NUT	1	
- 4	AN860C6L	. WASHER	1	
- 5	3360-078	. TARGET, MAGNETIC	1	
- 6	122-960010-33	. BRACKET ASSY, PICKUP SUPPORT	2	
- 7	A213796	. CONTROL BOX, SYNCHROPHASER	1	
		/ATTACHING PARTS/		
- 8	MS35207-265	. SCREW.....	4	
- 9	AN960-10L	. WASHER	4	
- 10	NAS43HT3-16	. SPACER.....	4	

★
NOTE THE PROP-SYNC SWITCH AND CIRCUIT BREAKER
 ARE LISTED IN CHAPTER 39.

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

61-20-10
PROPELLER AUTOFEATHER

D

This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows:

- 4**: A vertical plate with two circular holes.
- 5**: A screw with a hexagonal head.
- 6**: A small cylindrical pin or spacer.
- 7**: A horizontal plate with two circular holes, positioned below plate 4.
- 8**: A screw with a hexagonal head, shown passing through a component.
- 9**: A small cylindrical pin or spacer, shown passing through a component.
- 10**: A component with two circular features, possibly a bearing or a connector, shown at the bottom left.
- 11**: A component with a circular feature, possibly a bearing or a connector, shown at the bottom right.
- 12**: A series of three rectangular plates with circular holes, shown in a sequence of positions.

C9200450

02/25/94

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10	122-910064-1	POWER PLANT INSTL, LH.....	NP	1
	122-910064-15	POWER PLANT INSTL, LH.....	NP	2
	122-910064-3	POWER PLANT INSTL, RH.....	NP	1
	122-910064-17	POWER PLANT INSTL, RH.....	NP	2
- 1	50-389121-29	. SWITCH, AUTOFEATHER LOW PRESSURE.....	1	
- 2	50-389121-31	. SWITCH, AUTOFEATHER HI PRESSURE.....	1	
- 3	MS29561-012	. PACKING, PREFORMED.....	2	
	122-522035-5	QUADRANT INSTL, PEDESTAL.....	NP	
- 4	R 122-522028-19	. HANGER.....	2	
		/ATTACHING PARTS/		
- 5	NAS1096-1-6	. SCREW.....	4	
- 6	AN960-6L	. WASHER.....	4	
		-----★-----		
- 7	R 122-522063-5	. CLIP ASSY.....	2	
- 8	R MS35208-208	. SCREW.....	4	
- 9	AN960PD2L	. WASHER.....	4	
- 10	122-522063-1	. PLATE ASSY.....	2	
- 11	R JS5	. ACTUATOR, SWITCH/SEE CHAPTER 76/.....	2	
- 12	11MS3S	. SWITCH, AUTOFEATHER CONTROL/SEE CHAPTER 76/.....	4	
	AT10832	. INSULATOR.....	8	

NOTE THE AUTOFEATHER AND CIRCUIT BREAKER
SWITCH ARE LISTED IN CHAPTER 39.


CODES OF EFFECTIVITY

1 NC-4 THRU NC-28 2 NC-29 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

61-20-20
GROUND IDLE STOP SOLENOID

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

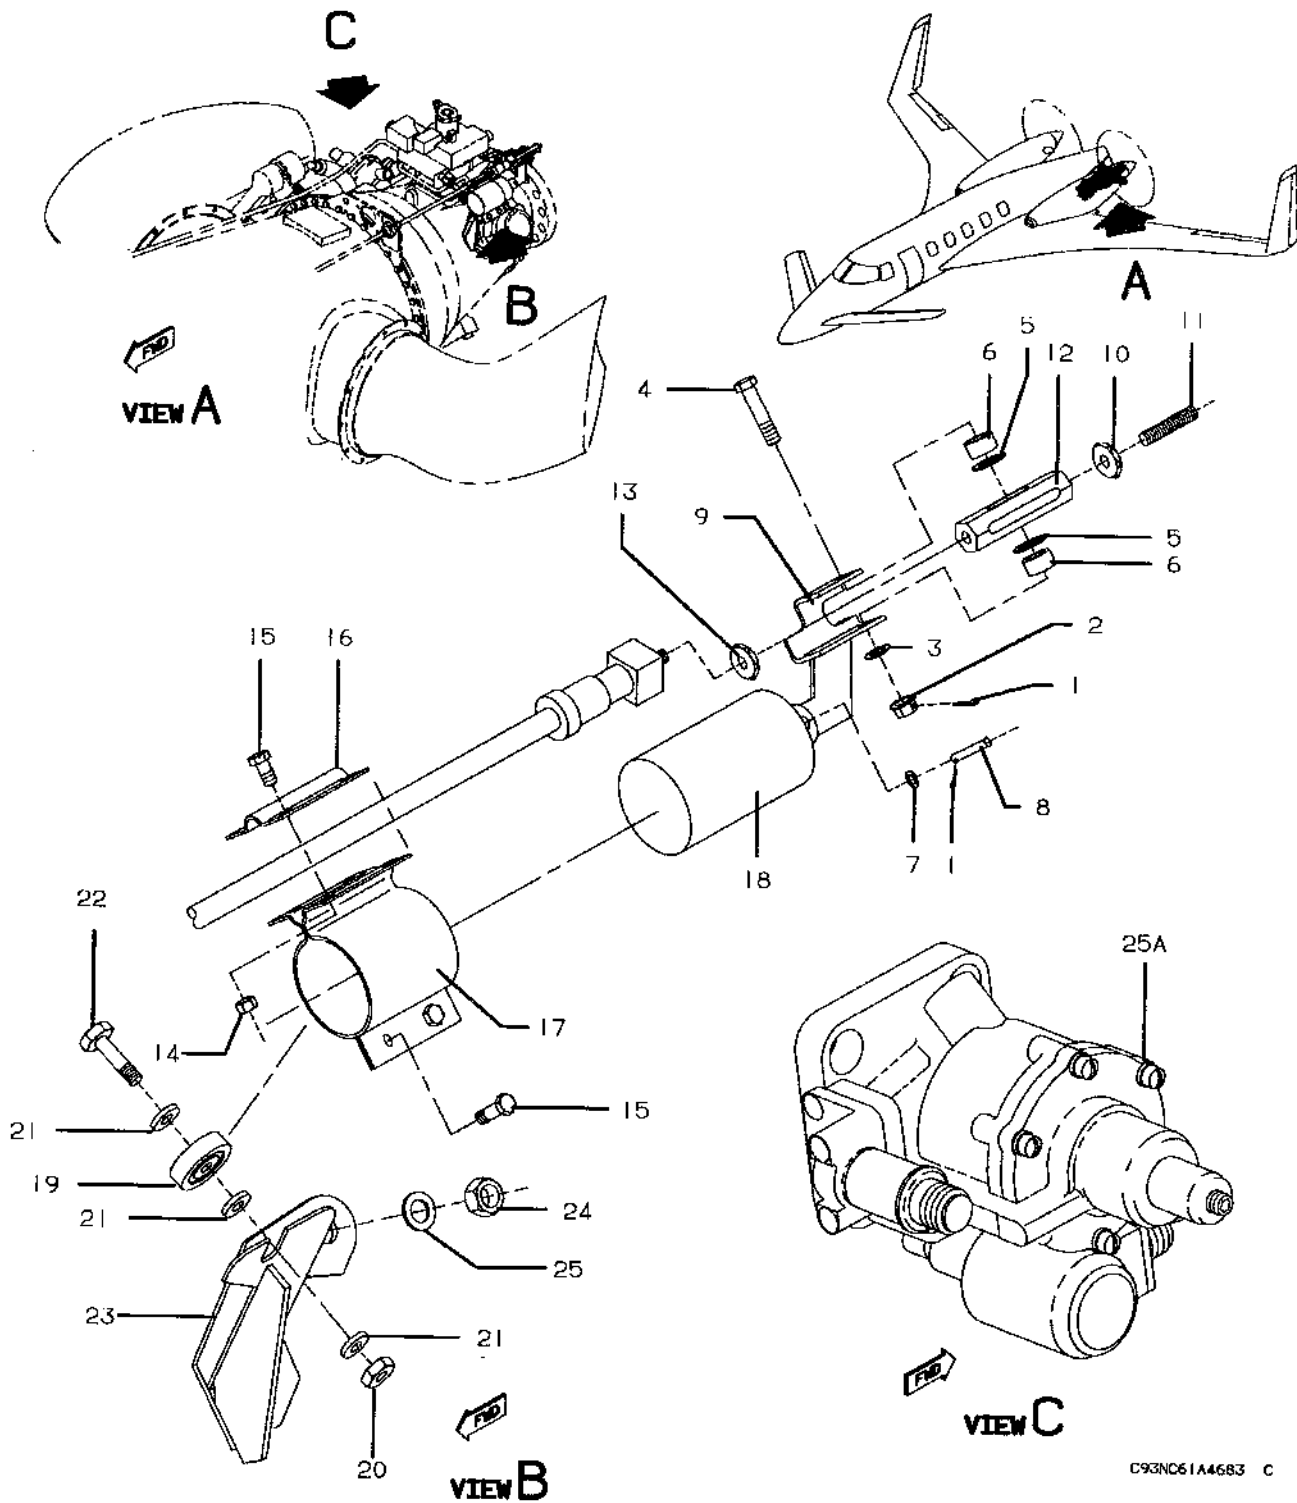


C93NC61A4683 C

FIGURE 20-20. GROUND IDLE STOP SOLENOID
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
20-20	101-960027-5	SOLENOID INSTL, GROUND IDLE STOP.....	NP	
- 1	MS24865-132	. PIN, COTTER	2	
- 2	130909N6	. NUT	1	
- 3	AN960-10	. WASHER	1	
- 4	130909B22	. BOLT	1	
- 5	AN960C10L	. WASHER	2	
- 6	NAS43HT3-8	. SPACER	2	
- 7	AN960-4L	. WASHER	1	
- 8	MS20392-1C21	. PIN, CLEVIS	1	
- 9	109-960028-7	. BRACKET ASSY	1	
-10	NAS509-3	. NUT, JAM	1	
-11	AN565AC1032H20	. SCREW, SET	1	
-12	109-960028-13	. CLEVIS	1	
-13	NAS509-4	. NUT, JAM	1	
-14	MS21043-3	. NUT	6	
-15	NAS1096-3-6	. SCREW	6	
-16	109-960028-11	. BRACKET	1	
-17	109-960028-7	. BRACKET ASSY	1	
-18	186641-001	. SOLENOID, GROUND IDLE STOP	1	
-19	MS27641-4	. BEARING	1	
		/ATTACHING PARTS/		
-20	MS21043-4	. NUT	1	
-21	AN960C416L	. WASHER	3	
-22	AN4C6A	. BOLT	1	
		★		
-23	109-960028-21	. BRACKET ASSY	1	
		/ATTACHING PARTS/		
-24	MS21043-4	. NUT	2	
-25	AN960C416L	. WASHER	2	
		★		
-25A	122-389037-3	GOVERNOR ASSY, OVERSPEED, PROPELLER	1	
	3010818	GASKET	1	
	AN960C516	WASHER	4	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

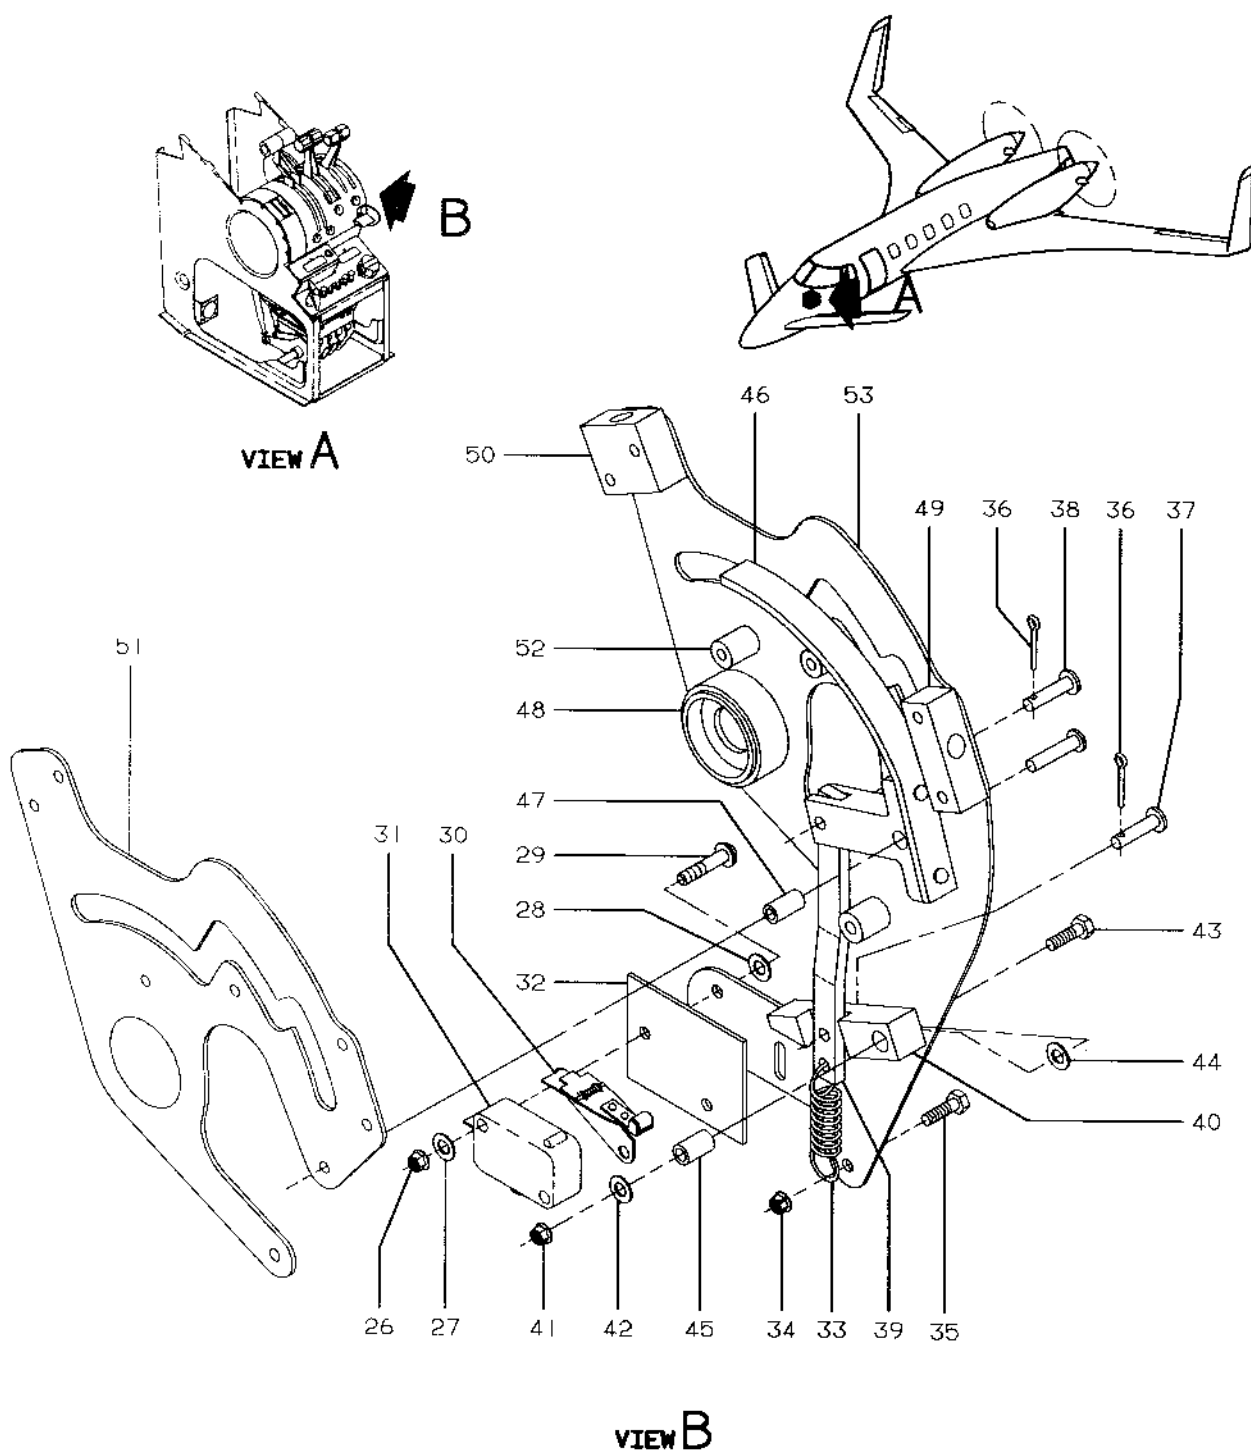

C9200451

FIGURE 20-20.GROUND IDLE STOP SOLENOID
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-20		122-522083-5	DETENT ASSY, THROTTLE CONTROL	1	
	- 26	MS21042L04	. NUT	2	
	- 27	AN936A4	. WASHER	2	
	- 28	AN960-4L	. WASHER	2	
	- 29	MS35206-219	. SCREW	2	
	- 30	JV20	. ACTUATOR, SWITCH	1	
	- 31	V3-101D8	. SWITCH, GROUND IDLE STOP ACTUATING	1	
	- 32	50-364254-7	. INSULATOR	1	
	- 33	100942H0016-16	. SPRING	1	
	- 34	130909N49	. NUT	1	
	- 35	130909B11	. BOLT	1	
	- 36	MS24665-132	. PIN, COTTER	2	
	- 37	MS20392-1C9	. PIN	1	
	- 38	MS20392-1C11	. PIN	1	
	- 39	122-522083-13	. LINK	1	
	- 40	50-524585	. LEVER ARM	1	
			/ATTACHING PARTS/		
	- 41	130909N49	. NUT	1	
	- 42	AN960-10L	. WASHER	1	
	- 43 R	130909B18	. BOLT	1	
	- 44 R	AN960-10	. WASHER	2	
	- 45 R	105739X-ZM0390	. BUSHING	1	
			-----★-----		
		122-522083-7	. DETENT ASSY, THROTTLE CONTROL	1	
	- 46	50-524583	. LEVER ASSY	1	
	- 47	50-524569-15	. SPACER	1	
	- 48	99-524089-7	. BUSHING	1	
	- 49	99-524168-1	. SUPPORT	1	
	- 50	99-524168-3	. SUPPORT	1	
	- 51	122-522083-11	. DETENT	1	
	- 52 R	NAS42HT4-24	. SPACER	4	
	- 53	122-522083-9	. DETENT	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 71-00-00 POWER PLANT

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
71-00-00	1	06/30/95	LIST OF PAGES & TABLE OF CONTENTS
71-00-10	1	02/25/94	POWER PLANT
71-00-10	2	02/25/94	
71-00-10	3	06/30/95	
71-20-00	1	02/25/94	ENGINE MOUNT
71-20-00	2	02/25/94	
71-20-00	3	11/04/94	
71-60-00	1	02/25/94	ENGINE AIR PLENUM AND INLET DUCT
71-60-00	2	02/25/94	
71-60-00	3	02/25/94	
71-60-00	4	02/25/94	
71-60-00	5	02/25/94	
71-60-00	6	06/30/95	
71-60-00	7	06/30/95	
71-60-00	8	02/25/94	
71-60-00	9	06/30/95	
71-70-00	1	02/25/94	ENGINE DRAINS
71-70-00	2	02/25/94	
71-70-00	3	02/25/94	
71-70-00	4	02/25/94	
71-70-00	5	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

71-00-10
POWER PLANT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

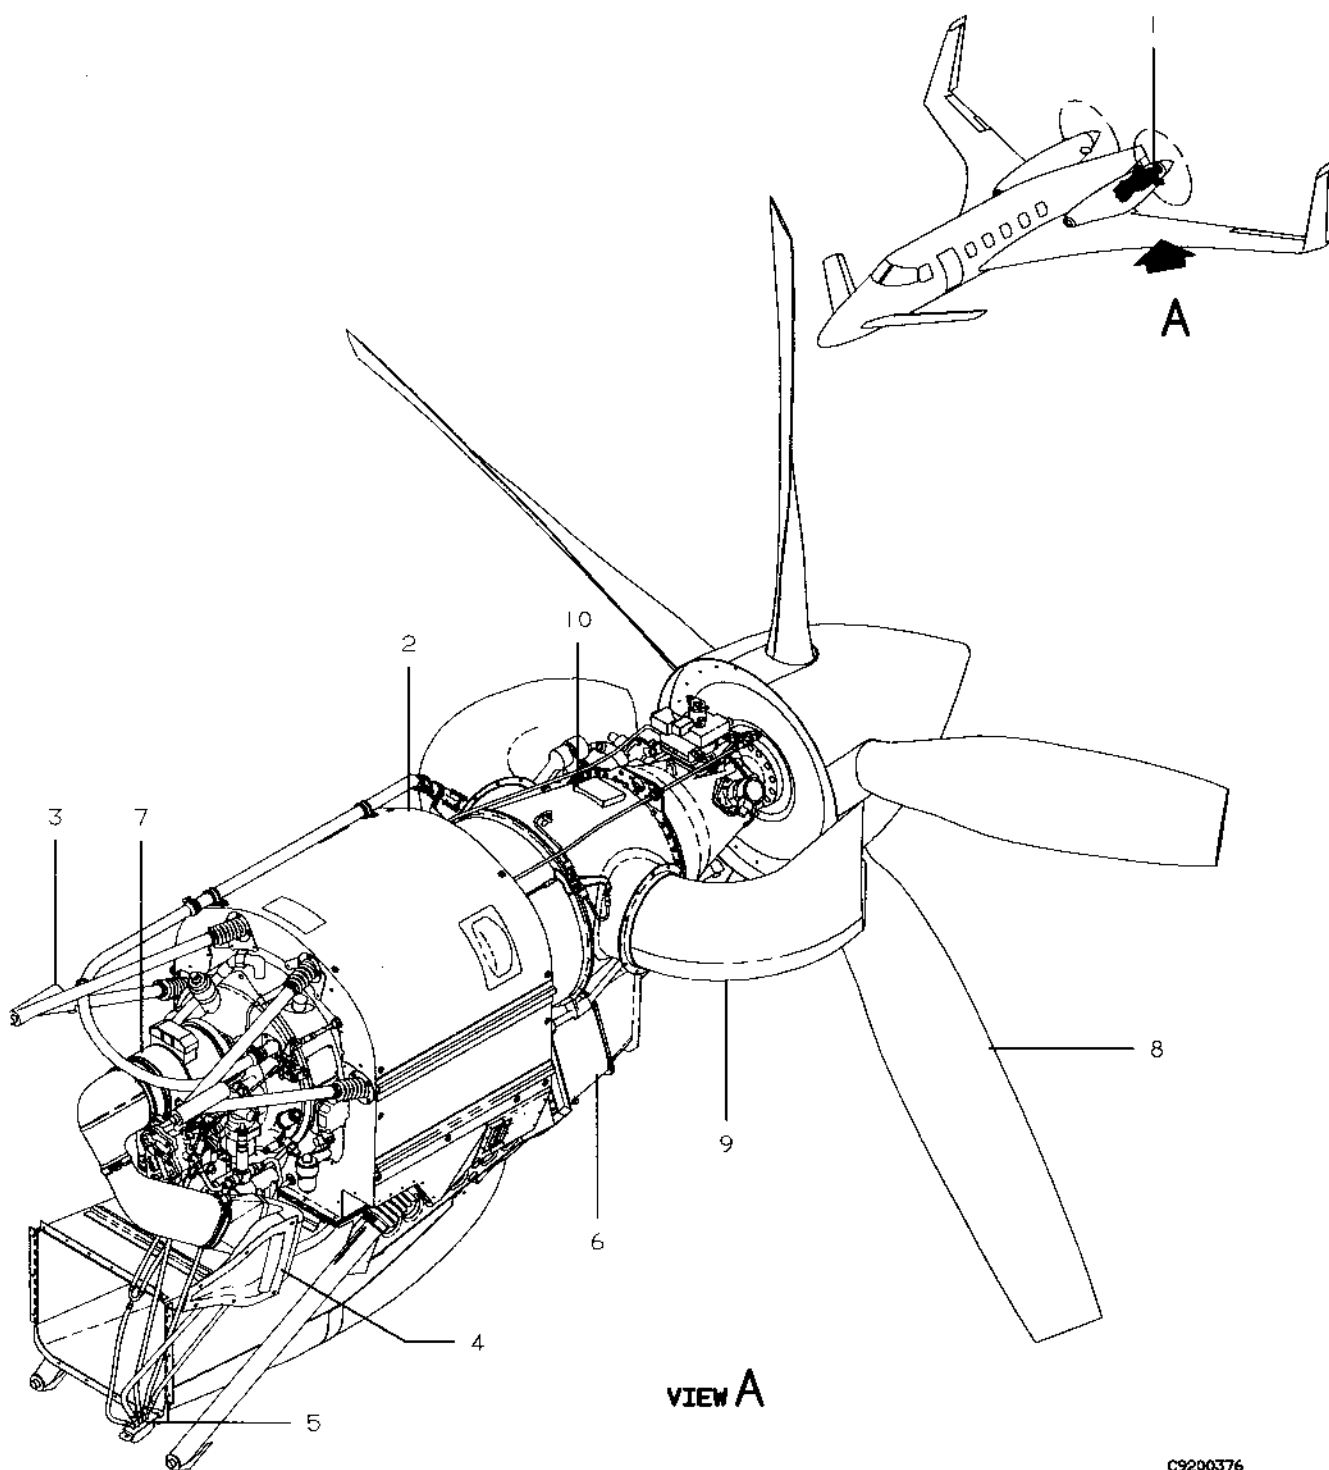

C9200376

FIGURE 00-10.POWER PLANT

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
00-10	122-910064-1	POWER PLANT INSTL, LH.....	NP	1
	122-910064-15	POWER PLANT INSTL, LH.....	NP	2
	122-910064-3	POWER PLANT INSTL, RH.....	NP	1
	122-910064-17	POWER PLANT INSTL, RH.....	NP	2
- 1	R 122-910065-5	. COWLING INSTL, LH/SEE CHAPTER 54/.....	NP	1
	R 122-910065-9	. COWLING INSTL, LH/SEE CHAPTER 54/.....	NP	2
	R 122-910065-7	. COWLING INSTL, RH/SEE CHAPTER 54/.....	NP	1
	R 122-910065-11	. COWLING INSTL, RH/SEE CHAPTER 54/.....	NP	2
- 2	122-910079-1	. PLENUM INSTL/SEE CHAPTER 71-60-00/.....	NP	
- 3	122-910063-49	. MOUNT, ENGINE/SEE CHAPTER 71-20-00/.....	1	
- 4	122-910008-5	. COOLING INSTL, STARTER-GENERATOR/SEE CHAPTER 75/.....	NP	
- 5	122-910076-1	. DRAIN INSTL, LH/SEE CHAPTER 71-70-00/.....	NP	
	122-910076-3	. DRAIN INSTL, RH/SEE CHAPTER 71-70-00/.....	NP	
- 6	122-930011-17	. OIL SYSTEM INSTL/SEE CHAPTER 79/.....	NP	
	122-930010-1	. LINE INSTL, OIL BREATHER/SEE CHAPTER 79/.....	NP	
- 7	23085-001	. STARTER-GENERATOR/SEE CHAPTER 24/.....	1	
	90-389000-9	. KIT, STARTER-GENERATOR MOUNTING/SEE CHAPTER 24/.....	1	
- 8	5JFR36C1003FDL *	104DSZ0P10036062-03 . PROPELLER ASSY, LH..... /SEE CHAPTER 61/.....	1	
	5JFR36C1003FDL *	104DSZ0P10036062-04 . PROPELLER ASSY, RH..... /SEE CHAPTER 61/.....	1	
- 9	122-950004-1	. STACK ASSY, LH OUTBD AND RH INBD EXHAUST..... /SEE CHAPTER 78/.....	1	
	122-950004-3	. STACK ASSY, RH OUTBD AND LH INBD EXHAUST..... /SEE CHAPTER 78/.....	1	
- 10	PT6A-67A	. ENGINE/SEE CHAPTER 72/.....	1	
	E6023	. SPINNER, PROPELLER/SEE CHAPTER 61/.....	1	
	122-750001-1	. FIRE DETECTION INSTL/SEE CHAPTER 26/.....	NP	
	122-920012-11	. TANK INSTL, FUEL PURGE/SEE CHAPTER 73/.....	NP	
	122-970017-21	. TUBE, BLEED AIR/SEE CHAPTER 36/.....	1	
	122-550157-17	. TUBE ASSY, LH BLEED AIR/SEE CHAPTER 36/.....	1	
	122-550157-13	. TUBE ASSY, RH BLEED AIR/SEE CHAPTER 36/.....	1	


CODES OF EFFECTIVITY

1 NC-4 THRU NC-28 2 NC-29 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

71-20-00
ENGINE MOUNT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

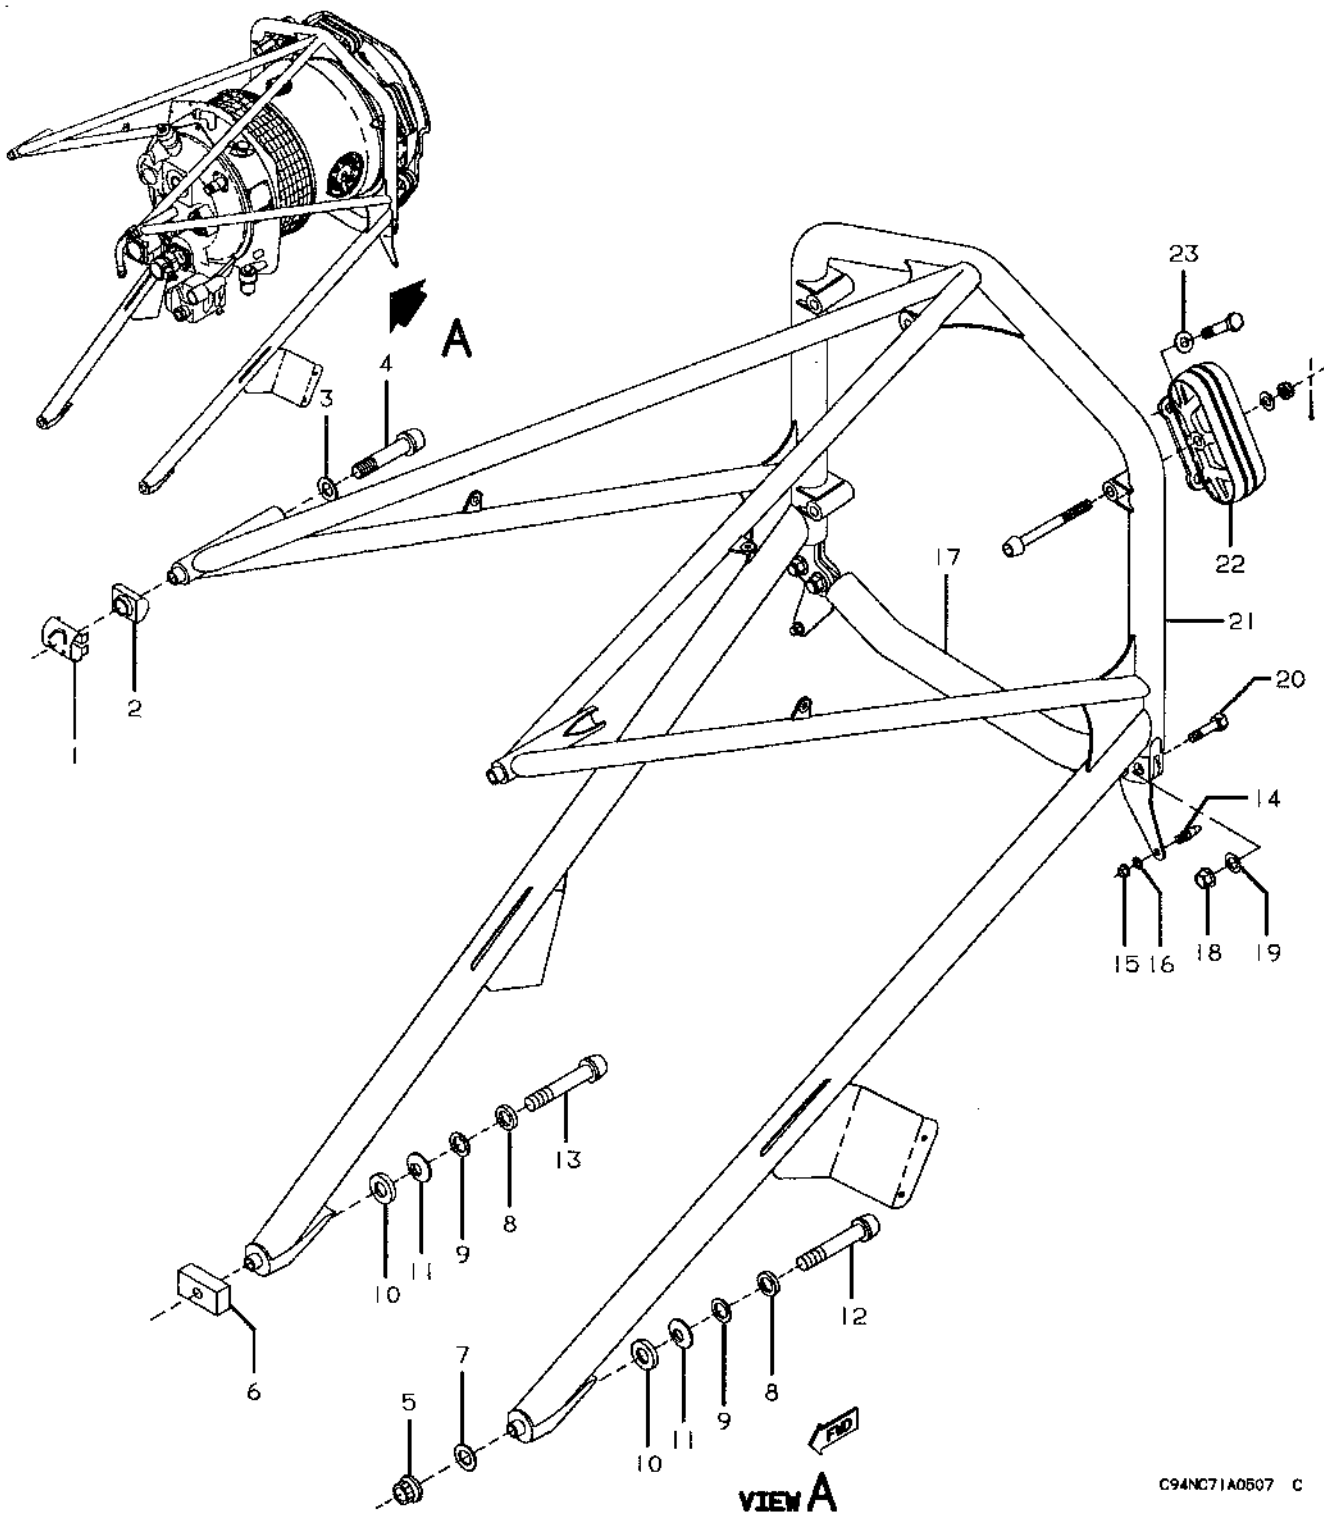

C94NC71A0507 C

FIGURE 20-00.ENGINE MOUNT


Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-910063-49	MOUNT ASSY, ENGINE	2	
		/ATTACHING PARTS/		
- 1	NAS578-7A	RETAINER, BARREL NUT	2	
- 2	NAS577-7A	NUT, BARREL	2	
- 3	MS20002C7	WASHER	2	
- 4	NAS147-31	BOLT	2	
- 5	ZEB1845-070	NUT	1	
- 6	122-910078-1	NUT, BAR	1	
- 7	AN960C716	WASHER	1	
- 8	R MS20002C7	WASHER	AR	
		/IF AN960C716 REQD,QTY MAXIMUM OF 1 UNDER BOLT HEAD/		
- 9	R AN960C716	WASHER/IF REQUIRED,QTY MAXIMUM OF 2/	AR	
-10	122-910032-3	WASHER	2	
-11	122-910032-1	WASHER	2	
-12	R NAS147DH59	BOLT/ALTERNATE FOR MS21250H07046/	2	
	R MS21250H07046	BOLT/ALTERNATE FOR NAS147DH59/	2	
-13	R NAS147DH57	BOLT/ALTERNATE FOR MS21250H07044/	2	
	R MS21250H07044	BOLT/ALTERNATE FOR NAS147DH57/	2	
		★		
-14	122-910039-1	. PIN	2	
		/ATTACHING PARTS/		
-15	MS21043-5	. NUT	1	
-16	AN960-516	. WASHER	1	
		★		
-17	R 122-910063-35	. TUBE ASSY	1	
		/ATTACHING PARTS/		
-18	130909N25	. NUT	4	
-19	AN960-616	. WASHER	4	
-20	AN6-14A	. BOLT	4	
		★		
-21	R 122-910063-51	. WELD ASSY	1	
-22	114-389031-17	ISOLATOR ASSY, ENGINE	10	
		/ALTERNATE FOR 114-389031-19/		
	114-389031-19	ISOLATOR ASSY, ENGINE	10	
		/ALTERNATE FOR 114-389031-17/		
		NOTE ALL ISOLATOR ASSEMBLIES ON ONE ENGINE MUST HAVE THE SAME DASH NUMBER		
	114-389031-7	. PAD,ISOLATOR/USED ONLY WITH 114-389031-17/	2	
	114-389031-21	. PAD,ISOLATOR/USED ONLY WITH 114-389031-19/	2	
		/ALTERNATE FOR 114-389031-23/		
	114-389031-23	. PAD ISOLATOR/USED ONLY WITH 114-389031-19/	2	
		/ALTERNATE FOR 114-389031-21/		
		NOTE MOUNTING BOLTS ARE COMPONENT PARTS OF ENGINE ISOLATOR ASSY.		
-23	AN960-616	WASHER	20	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

71-60-00
ENGINE AIR PLENUM AND INLET DUCT

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

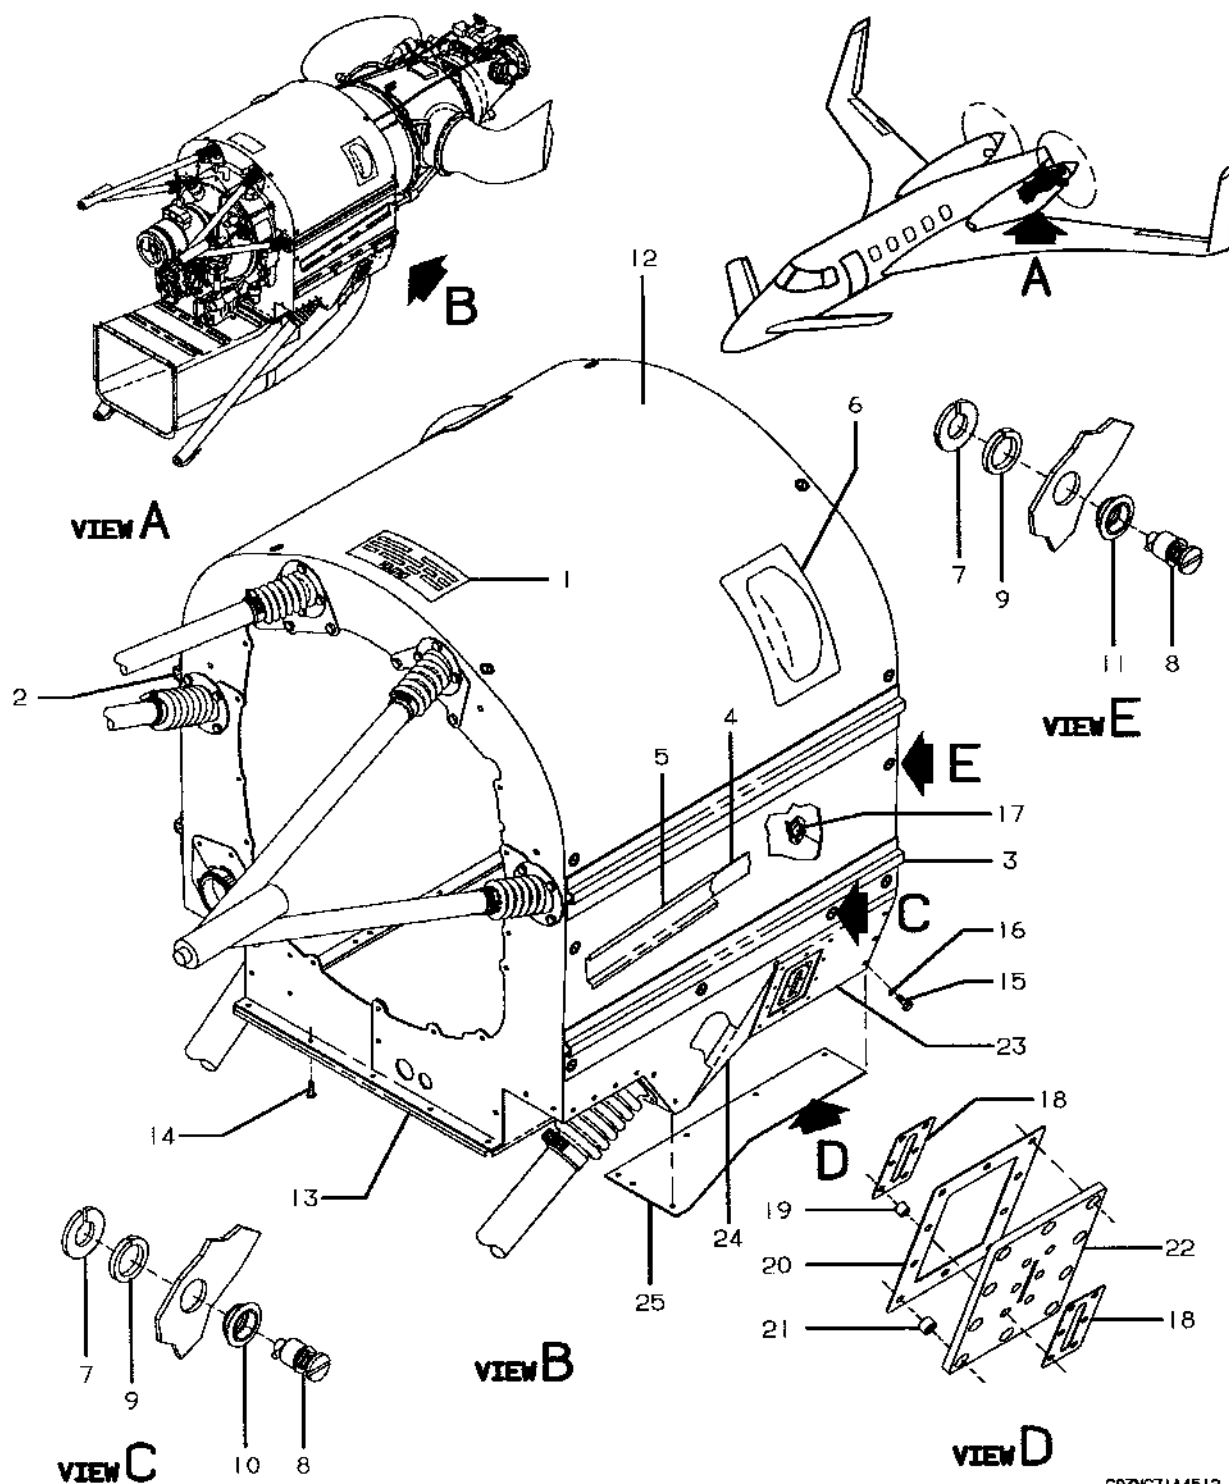


C93NC71A4512 C

FIGURE 60-00.ENGINE AIR PLENUM AND INLET DUCT
/SHEET 1 OF 4 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60-00	122-910079-1	PLENUM INSTL, ENGINE AIR.....	NP	
	122-910079-93	. COVER ASSY.....	1	
- 1	50-910398	. PLATE, ENGINE COMPARTMENT INSTRUCTION.....	1	
- 2	122-910079-41	. CHANNEL.....	2	
- 3	122-910079-39	. CHANNEL, LH.....	1	
	122-910079-40	. CHANNEL, RH.....	1	
- 4	122-910079-97	. RUB STRIP.....	2	
- 5	122-910079-95	. CHANNEL.....	2	
- 6	122-910079-25	. CUP.....	2	
- 7	4002SW	. RING, STUD RETAINING.....	22	
- 8	4002-4	. STUD.....	22	
- 9	R4G	. RING, GROMMET RETAINING.....	22	
- 10	4002N	. GROMMET.....	8	
- 11	4002N2	. GROMMET.....	14	
	MS21059L3K	. NUTPLATE.....	2	
- 12	122-910079-83	. COVER.....	1	
- 13	122-910079-23	. FLANGE.....	1	
		/ATTACHING PARTS/		
- 14	MS24693S271	. SCREW.....	24	
		-----★-----		
	122-910079-71	. PANEL ASSY, LH LOWER SIDE.....	1	
	122-910079-72	. PANEL ASSY, RH LOWER SIDE.....	1	
		/ATTACHING PARTS/		
- 15	130909B12	. BOLT.....	9	
- 16	AN960PD10L	. WASHER.....	9	
		-----★-----		
- 17	244-16SD	. RECEPTACLE/ALTERNATE FOR 244-16D/.....	2	
	244-16D	. RECEPTACLE/ALTERNATE FOR 244-16SD/.....	2	
- 18	122-910079-55	. DOUBLER.....	2	
- 19	NAS42DD3-12A	. SPACER/ALTERNATE FOR NAS42DD3-12/.....	6	
	NAS42DD3-12	. SPACER/ALTERNATE FOR NAS42DD3-12A/.....	6	
- 20	122-910079-53	. DOUBLER.....	1	
- 21	NAS42DD4-12A	. SPACER/ALTERNATE FOR NAS42DD4-12/.....	10	
	NAS42DD4-12	. SPACER/ALTERNATE FOR NAS42DD4-12A/.....	10	
- 22	122-910079-51	. SEAL.....	1	
- 23	122-910079-69	. PANEL, LH.....	1	
	122-910079-70	. PANEL, RH.....	1	
- 24	122-910079-65	. PANEL, LH.....	1	
	122-910079-66	. PANEL, RH.....	1	
	MS21049L3K	. NUTPLATE, 2 LUG COUNTERSUNK.....	2	
	MS21053L3K	. NUTPLATE, 1 LUG COUNTERSUNK.....	2	
- 25	122-910079-79	. PANEL, LH.....	1	
	122-910079-80	. PANEL, RH.....	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

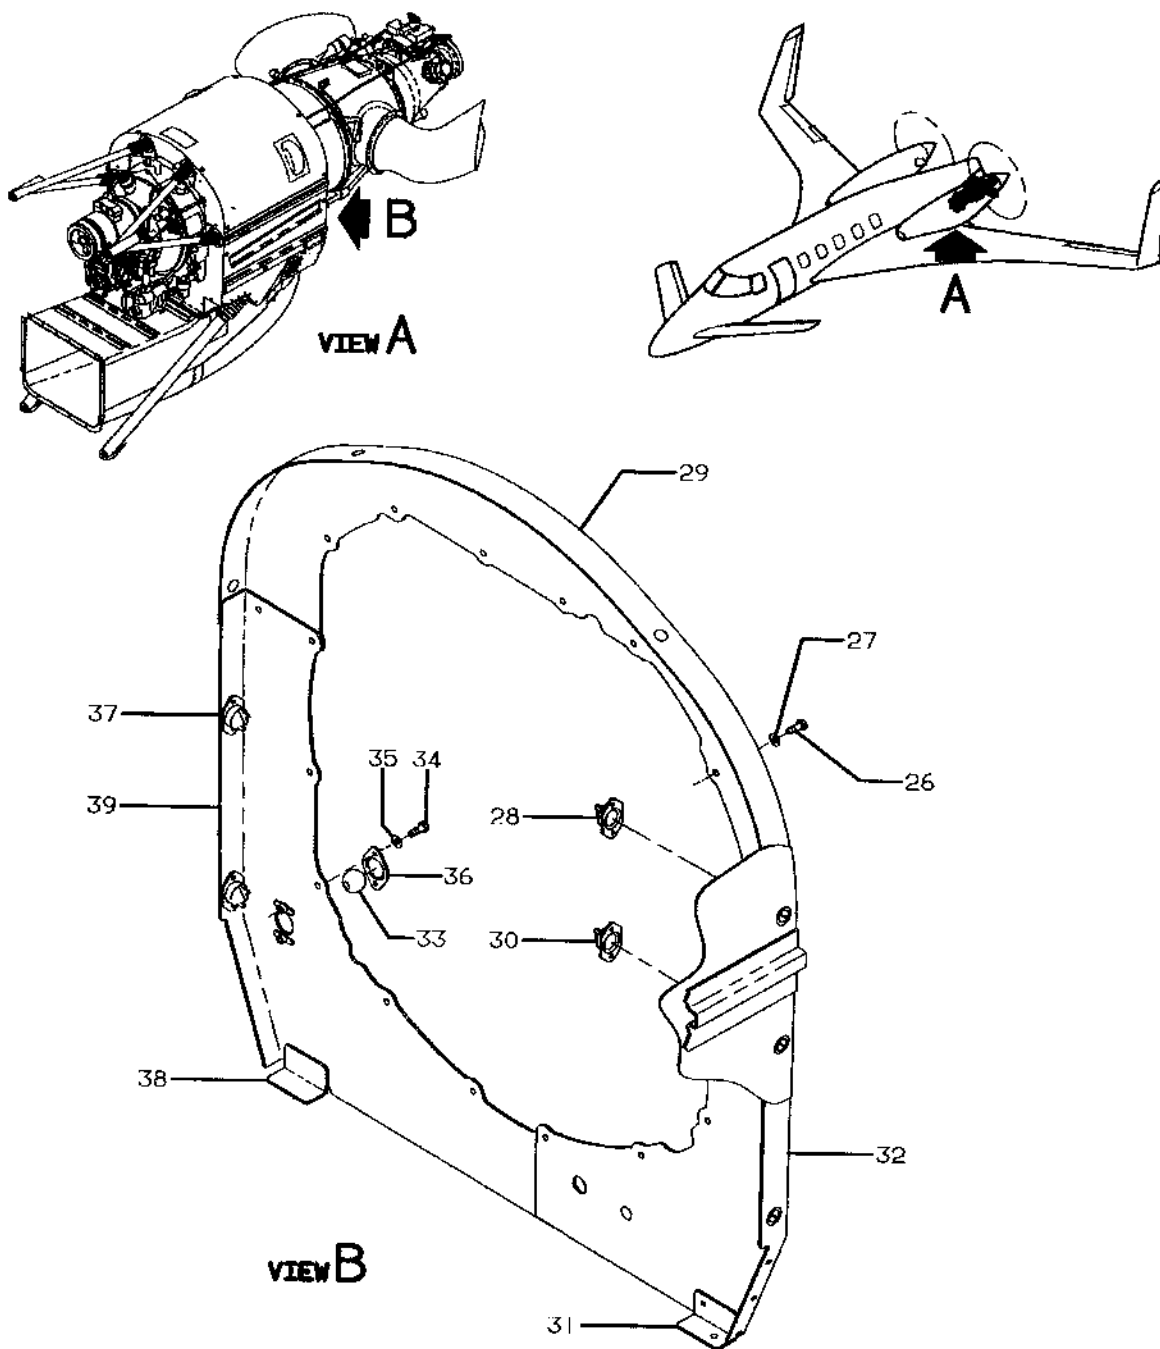


C93NC7/A4513 C

FIGURE 60-00.ENGINE AIR PLENUM AND INLET DUCT
/SHEET 2 OF 4 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60-00 -26	130909B12	. BOLT	19	
-27	AN960PD10L	. WASHER	19	
	122-910079-27	. SECTION ASSY, BULKHEAD	1	
	MS21059L3K	. . NUTPLATE	6	
	MS21062L3K	. . NUTPLATE	4	
-28	244-16SD	. . RECEPTACLE/ALTERNATE FOR 244-16D/	5	
	244-16D	. . RECEPTACLE/ALTERNATE FOR 244-16SD/	5	
-29	122-910079-29	. . SECTION, BULKHEAD	1	
	122-910079-31	. . SECTION ASSY, BULKHEAD	1	
	MS21049L3K	. . NUTPLATE	1	
	MS21053L3K	. . NUTPLATE	2	
	MS21059L3K	. . NUTPLATE	5	
	MS21062L3K	. . NUTPLATE	1	
-30	244-16SD	. . RECEPTACLE/ALTERNATE FOR 244-16D/	2	
	244-16D	. . RECEPTACLE/ALTERNATE FOR 244-16SD/	2	
-31	122-910079-62	. . ANGLE ASSY	1	
	MS21062L3K	. . NUTPLATE	1	
-32	122-910079-33	. . SECTION, BULKHEAD	1	
-33	122-910079-89	. COVER	1	
		. /ATTACHING PARTS/		
-34	130909B14	. BOLT	2	
-35	AN960-10L	. WASHER	4	
		★		
-36	122-910079-91	. SEAL	1	
	122-910079-685	. SECTION ASSY, BULKHEAD	1	
	MS21049L3K	. . NUTPLATE	1	
	MS21053L3K	. . NUTPLATE	1	
	MS21059L3K	. . NUTPLATE	7	
	MS21062L3K	. . NUTPLATE	3	
-37	244-16SD	. . RECEPTACLE/ALTERNATE FOR 244-16D/	2	
	244-16D	. . RECEPTACLE/ALTERNATE FOR 244-16SD/	2	
-38	122-910079-61	. . ANGLE ASSY	1	
	MS21062L3K	. . NUTPLATE	1	
-39	122-910079-87	. . SECTION BULKHEAD /ORDER 122-910079-685/	NP	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

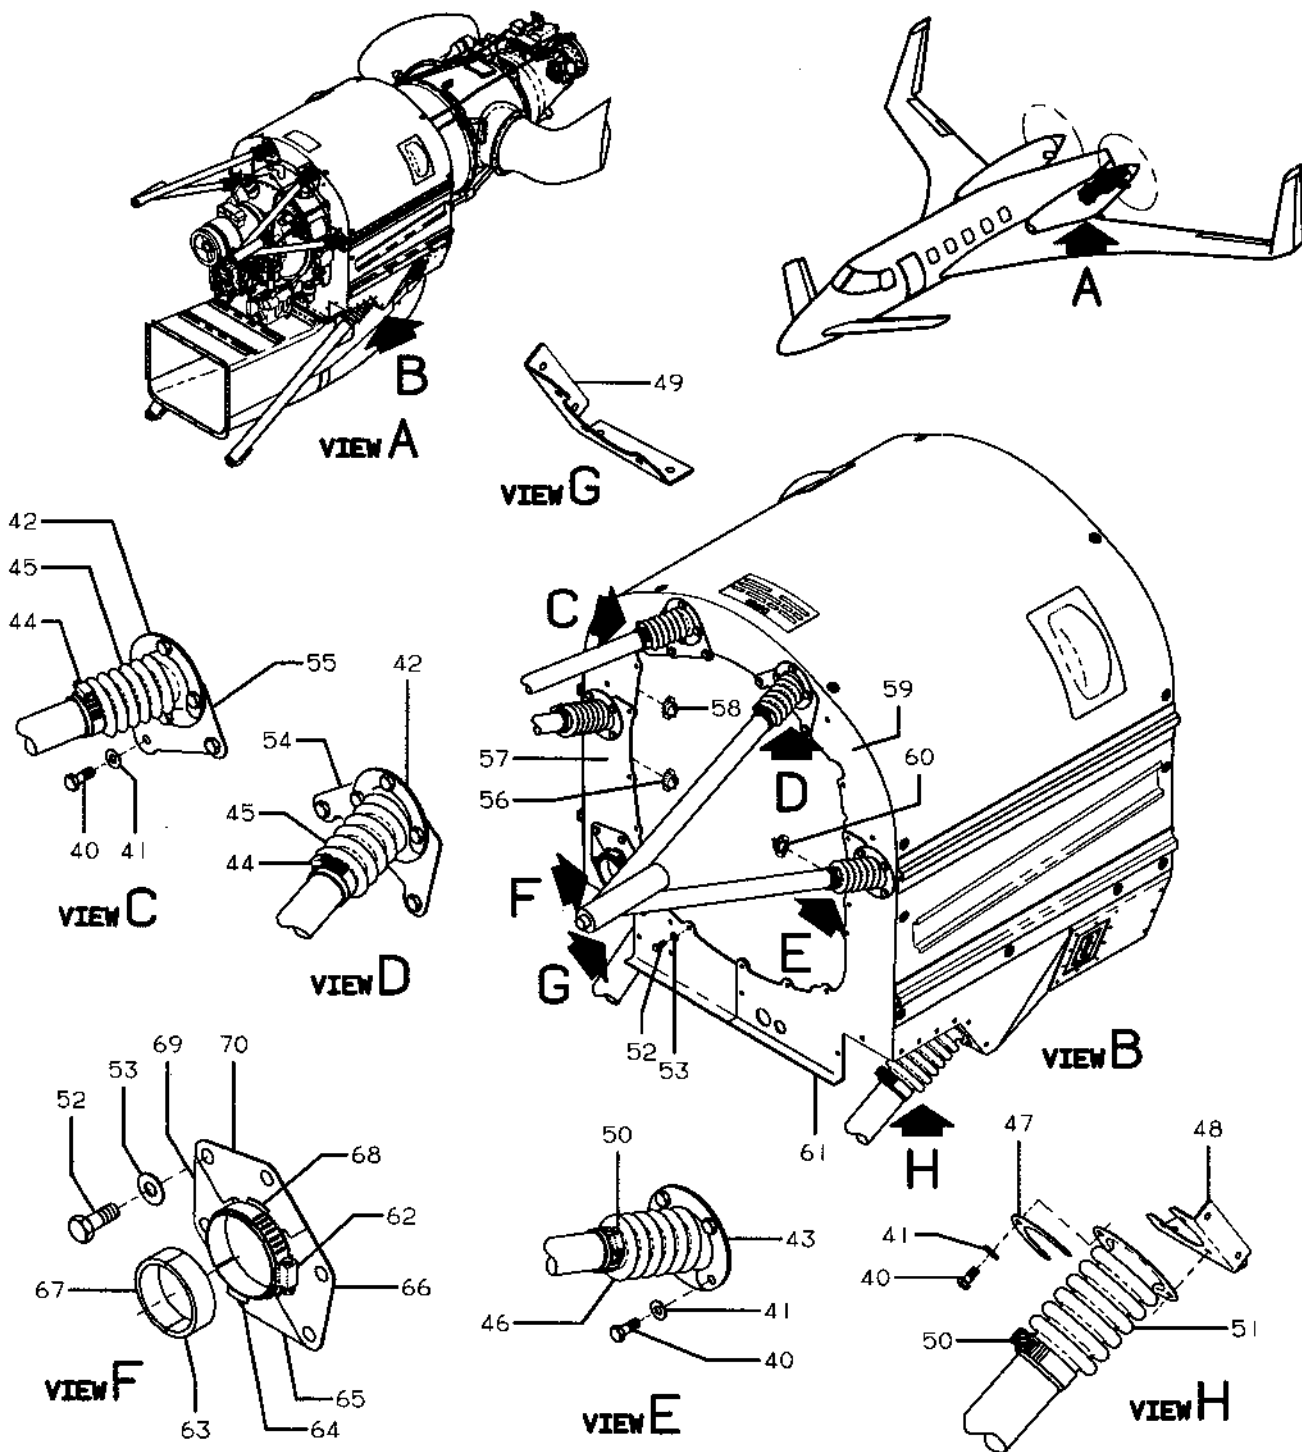


C93NC71A4514 C

FIGURE 60-00.ENGINE AIR PLENUM AND INLET DUCT
/SHEET 3 OF 4 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60-00 - 40	130909B12	. BOLT	24	
- 41	AN960PD10L	. WASHER	24	
- 42	122-910079-57	. RETAINER, BOOT	4	
- 43	122-910079-59	. RETAINER, BOOT	4	
- 44	R 12H	. CLAMP	2	
- 45	122-380008-1	. BOOT	2	
- 46	122-380008-3	. BOOT	2	
- 47	122-910079-67	. RETAINER, BOOT	4	
- 48	122-910079-47	. CLOSEOUT ASSY, LH	1	
- 49	122-910079-48	. CLOSEOUT ASSY, RH	1	
	MS21059L3K	. NUTPLATE	1	
	MS21062L3K	. NUTPLATE	4	
- 50	R 28KS3	. CLAMP	4	
- 51	122-380008-5	. BOOT	2	
- 52	130909B12	. BOLT	27	
- 53	AN960PD10L	. WASHER	27	
- 54	122-910079-11	. CLOSEOUT ASSY	1	
	MS21059L3K	. NUTPLATE	1	
	MS21062L3K	. NUTPLATE	4	
- 55	122-910079-15	. CLOSEOUT ASSY	1	
	MS21059L3K	. NUTPLATE	1	
	MS21062L3K	. NUTPLATE	4	
	122-910079-19	. SECTION ASSY, BULKHEAD	1	
	R MS21049L3K	. NUTPLATE	1	
	R MS21053L3K	. NUTPLATE	2	
	MS21059L3K	. NUTPLATE	10	
	R MS21062L3K	. NUTPLATE	5	
- 56	244-16SD	. RECEPTACLE/ALTERNATE FOR 244-16D/	2	
	244-16D	. RECEPTACLE/ALTERNATE FOR 244-16SD/	2	
- 57	122-910079-21	. SECTION, BULKHEAD	1	
	122-910079-3	. SECTION ASSY, BULKHEAD	1	
	MS21059L3K	. NUTPLATE	5	
	MS21059L4K	. NUTPLATE	3	
	MS21062L3K	. NUTPLATE	1	
- 58	244-16SD	. RECEPTACLE/ALTERNATE FOR 244-16D/	5	
	244-16D	. RECEPTACLE/ALTERNATE FOR 244-16SD/	5	
- 59	122-910079-5	. SECTION, BULKHEAD	1	
	122-910079-7	. SECTION ASSY, BULKHEAD	1	
	MS21049L3K	. NUTPLATE	1	
	MS21053L3K	. NUTPLATE	1	
	MS21059L3K	. NUTPLATE	3	
	MS21062L3K	. NUTPLATE	8	
- 60	244-16SD	. RECEPTACLE/ALTERNATE FOR 244-16D/	2	
	244-16D	. RECEPTACLE/ALTERNATE FOR 244-16SD/	2	
- 61	122-910079-9	. SECTION, BULKHEAD	1	
- 62	R MS35842-13	. CLAMP	1	
	R 122-910048-1	. PANEL ASSY, CLOSEOUT	1	
- 63	122-910048-13	. SEAL	1	
- 64	122-910048-15	. CLIP	1	
- 65	122-910048-9	. PANEL, LOWER	1	
- 66	122-910048-11	. PANEL, UPPER	1	
	R 122-910048-3	. PANEL ASSY, CLOSEOUT	1	
- 67	122-910048-13	. SEAL	1	
- 68	122-910048-15	. CLIP	1	
- 69	122-910048-7	. PANEL, LOWER	1	
- 70	122-910048-5	. PANEL, UPPER	1	

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

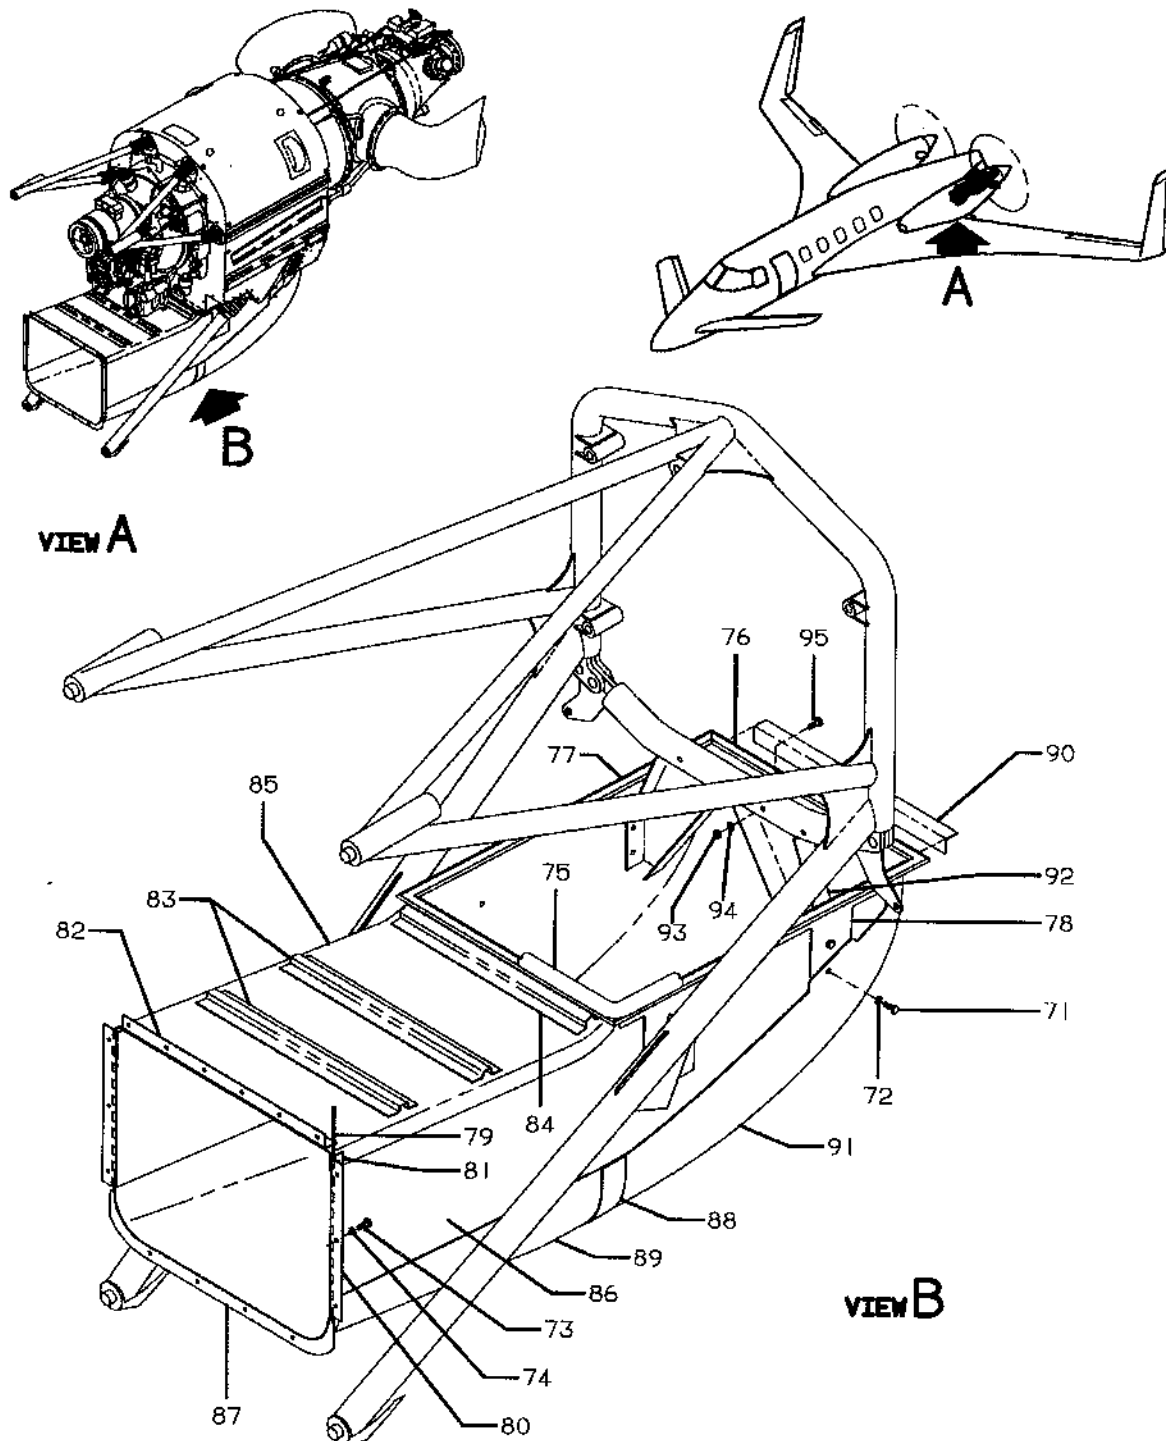

C93NC71A4515 C


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60-00	R 122-910080-1	DUCT ASSY, FIREWALL TO PLENUM	1	
		/ATTACHING PARTS/		
- 71	130909B34	BOLT	8	
- 72	AN960C416L	WASHER	8	
- 73	130909B14	BOLT	16	
- 74	AN960-10L	WASHER	16	
		-----★-----		
- 75	R 122-380010-3	. SEAL	1	
- 76	122-910080-25	. RETAINER, SEAL	2	
- 77	122-910080-23	. RETAINER, SEAL	2	
- 78	122-910080-21	. FLANGE, SEAL RETAINER	1	
- 79	MS20253P3-970	. PIN, HINGE	2	
- 80	122-910080-27	. HINGE HALF	2	
- 81	122-910080-29	. HINGE HALF	2	
- 82	122-910080-11	. FLANGE	1	
- 83	122-910080-7	. CHANNEL	2	
- 84	122-910080-9	. CHANNEL	1	
- 85	R 122-910080-5	. COVER, UPPER	1	
	MS21059L4	. NUTPLATE	4	
- 86	122-910080-3	. PANEL, LH SIDE	1	
	122-910080-4	. PANEL, RH SIDE	1	
- 87	122-910080-13	. FLANGE, LOWER	1	
- 88	122-910080-17	. DOUBLER	1	
- 89	122-910080-19	. PAN, LOWER FORWARD	1	
- 90	122-910080-31	. ANGLE	1	
- 91	122-910080-15	. PAN, LOWER AFT	1	
- 92	R 122-910082-1	BRACKET ASSY, DUCT LH SUPPORT	1	
	R 122-910082-2	BRACKET ASSY, DUCT RH SUPPORT	1	
		/ATTACHING PARTS/		
- 93	MS21043-4	NUT	2	
- 94	AN960-416L	WASHER	2	
- 95	130909B33	BOLT	2	
		-----★-----		
	MS21061L4	. NUTPLATE	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

71-70-00
ENGINE DRAINS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

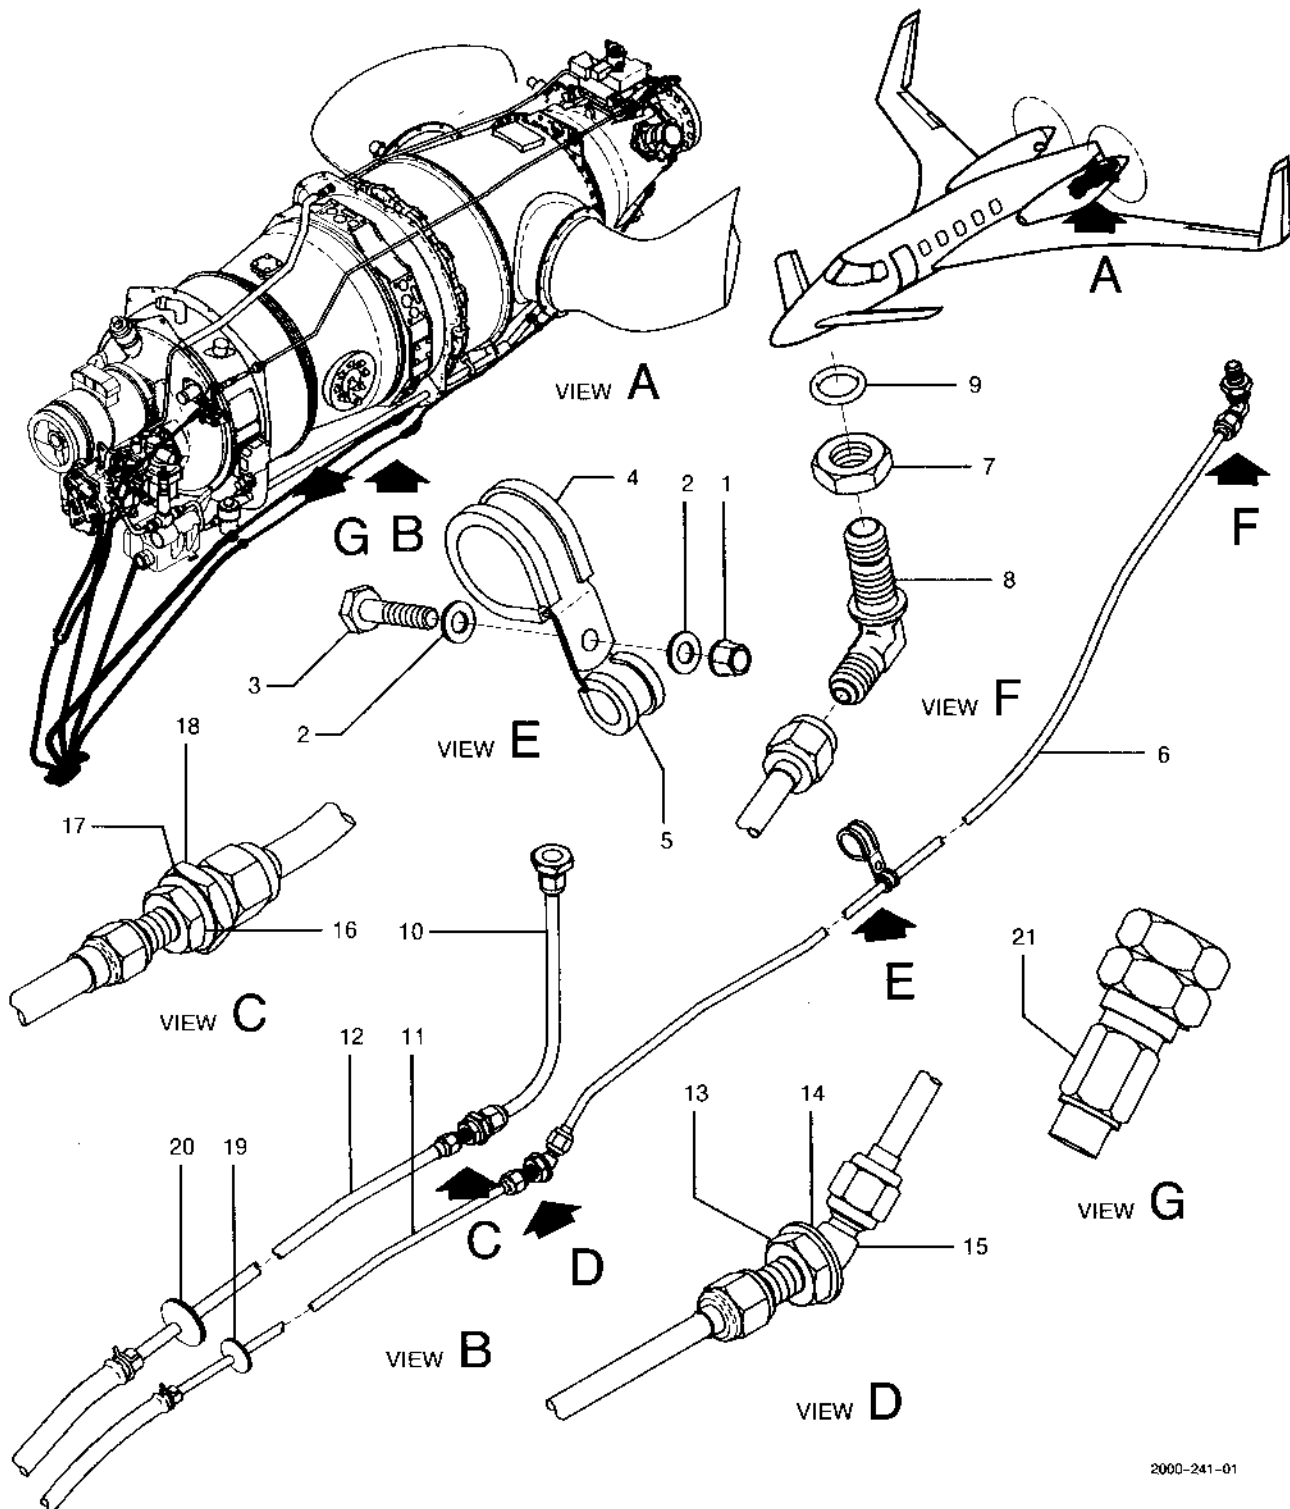


2000-241-01

FIGURE 70-00.ENGINE DRAINS
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
70-00	122-910076-1	DRAIN INSTL, LH ENGINE	NP	
	122-910076-3	DRAIN INSTL, RH ENGINE	NP	
- 1	130909N29	. NUT	1	
- 2	AN960-10L	. WASHER	2	
- 3	130909B15	. BOLT	1	
- 4	MS21919WH10	. CLAMP	1	
- 5	MS21919WH4	. CLAMP	1	
- 6	122-910076-17	. TUBE ASSY, PROP SEAL DRAIN	1	
- 7	AN924-4D	. NUT	1	
- 8	AN833-4D	. ELBOW	1	
- 9	MS29561-012	. PACKING, PREFORMED	1	
- 10	122-910076-13	. TUBE ASSY, COMBUSTION CHAMBER DRAIN	1	
- 11	122-910076-5	. TUBE ASSY, PROP SEAL DRAIN	1	
- 12	122-910076-9	. TUBE ASSY, COMBUSTION CHAMBER DRAIN	1	
- 13	AN924-4D	. NUT	1	
- 14	AN960-716	. WASHER	1	
- 15	AN837-4D	. ELBOW	1	
- 16	AN924-6D	. NUT	1	
- 17	AN960-916	. WASHER	1	
- 18	AN832-6D	. UNION	1	
- 19	MS35489-7	. GROMMET	1	
- 20	MS35489-12	. GROMMET	1	
- 21	AN929-6J	. CAP, COMBUSTION CHAMBER FUEL DRAIN	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

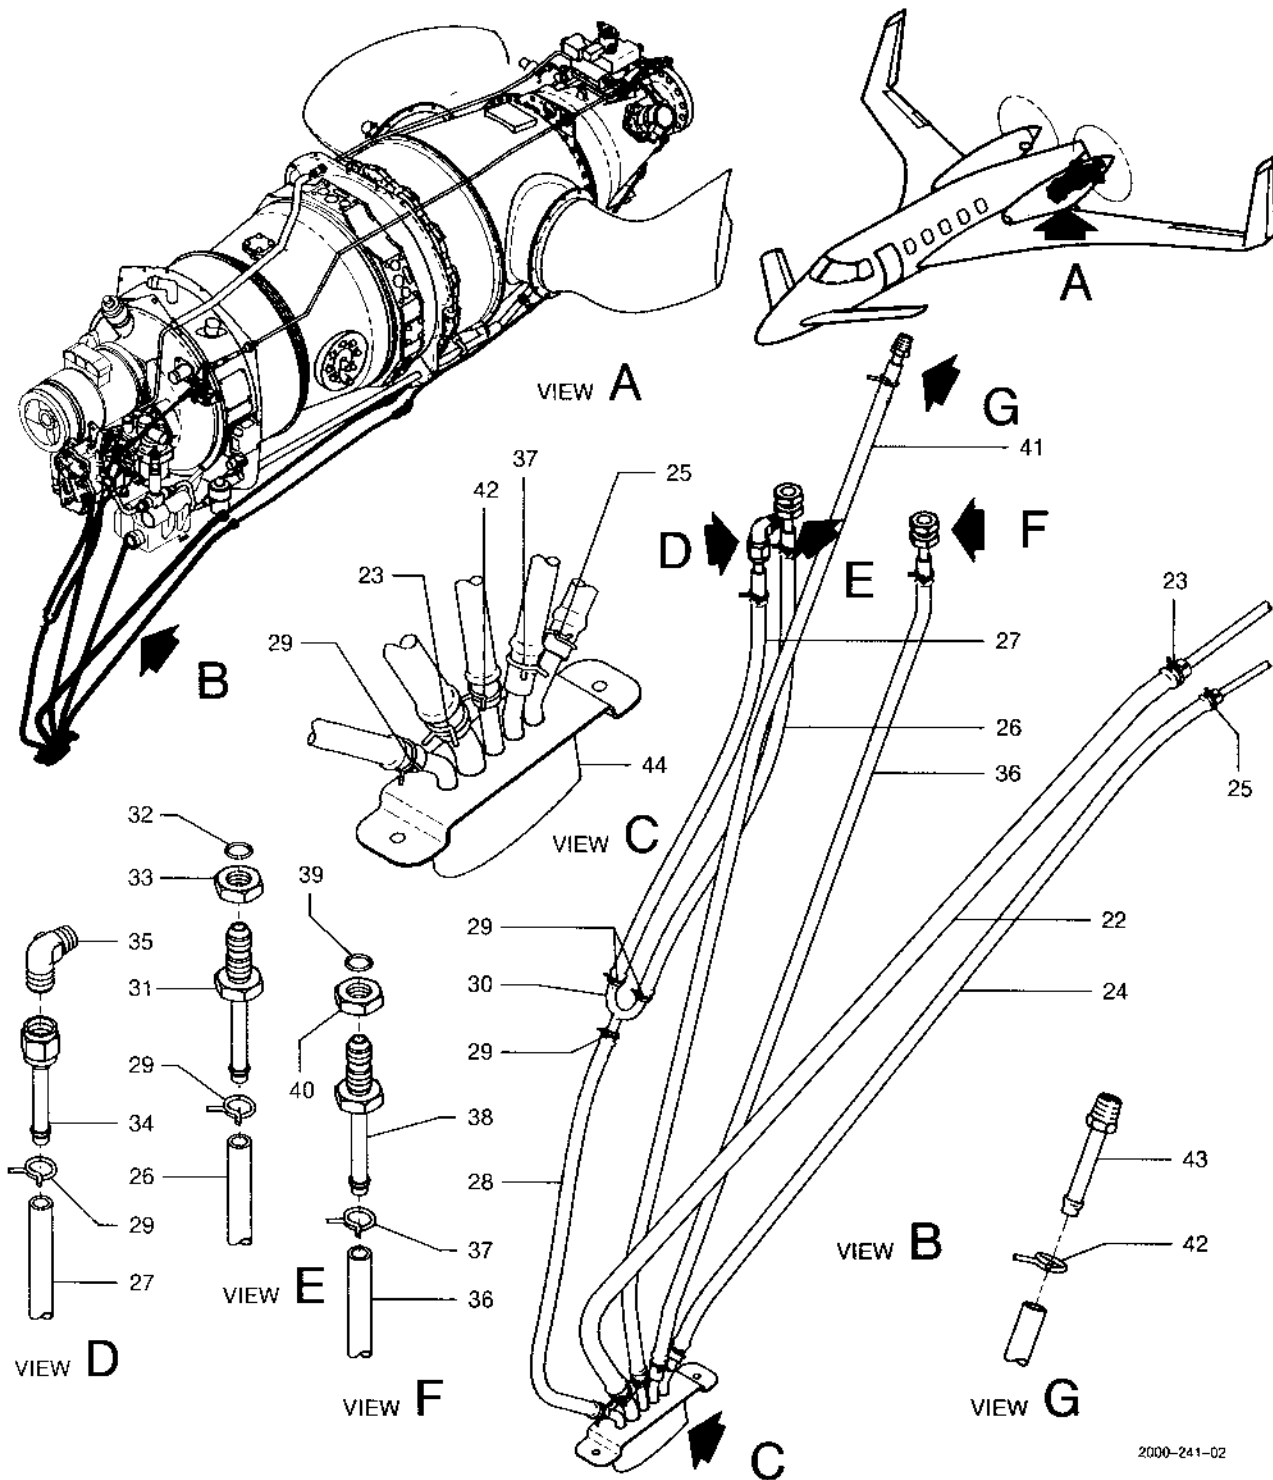

2000-241-02

FIGURE 70-00.ENGINE DRAINS
/SHEET 2 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
70-00 - 22	131066-4-0450	. HOSE, LH ENGINE COMBUSTION CHAMBER	1	
	131066-4-0390	. HOSE, RH ENGINE COMBUSTION CHAMBER	1	
		/ATTACHING PARTS/		
- 23	130292A8	. CLAMP	2	
		-----★-----		
- 24	131066-2-0450	. HOSE, LH ENGINE PROP SEAL DRAIN	1	
	131066-2-0390	. HOSE, RH ENGINE PROP SEAL DRAIN	1	
		/ATTACHING PARTS/		
- 25	130292A6	. CLAMP	2	
		-----★-----		
- 26	131066-2-0080	. HOSE, LH & RH ENGINE DRIVEN BOOST PUMP DRAIN	1	
- 27	131066-2-0080	. HOSE, LH & RH ENGINE DRIVEN BOOST PUMP DRAIN	1	
- 28	131066-2-0320	. HOSE, LH & RH ENGINE DRIVEN BOOST PUMP DRAIN	1	
		/ATTACHING PARTS/		
- 29	130292A6	. CLAMP	6	
		-----★-----		
- 30	104-920044-11	. TUBE ASSY, -Y-	1	
- 31	AN807-4D	. ADAPTER, HOSE	1	
- 32	MS29561-012	. PACKING, PREFORMED	1	
- 33	AN924-4D	. NUT	1	
- 34	122-910047-15	. TUBE ASSY	1	
- 35	122-910047-13	. RESTRICTOR ASSY	1	
- 36	131066-2-0410	. HOSE, LH & RH ENGINE FUEL PUMP DRAIN	1	
		/ATTACHING PARTS/		
- 37	130292A6	. CLAMP	2	
		-----★-----		
- 38	AN807-4D	. ADAPTER, HOSE	1	
- 39	MS29561-012	. PACKING, PREFORMED	1	
- 40	AN924-4D	. NUT	1	
- 41	131066-2-0410	. HOSE, LH ENGINE STARTER-GENERATOR DRAIN	1	
	131066-2-0160	. HOSE, RH ENGINE STARTER-GENERATOR DRAIN UPR	1	
		/ATTACHING PARTS/		
- 42	130292A6	. CLAMP	2	
		-----★-----		
- 43	AN840-4D	. ADAPTER, HOSE	1	
	131066-2-0150	. HOSE, AIR CONDITIONER COMPRESSOR DRAIN	1	
		/RH ENGINE ONLY/		
	131066-2-0260	. HOSE, AIR CONDITIONER COMPRESSOR & STARTER-.....	1	
		GENERATOR DRAIN LWR/RH ENGINE ONLY/		
		/ATTACHING PARTS/		
	130292A6	. CLAMP/RH ENGINE ONLY/	2	
		-----★-----		
	104-920044-11	. TUBE ASSY, AIR CONDITIONER COMPRESSOR &	1	
		STARTER-GENERATOR DRAIN -Y-/RH ENGINE		
		ONLY/		
- 44	122-910085-1	. DRAIN ASSY, ENGINE	1	2
	122-910077-1	. DRAIN ASSY, ENGINE/ORDER 122-910085-1 FOR	NP	1
		SPARES/		
	MS21059L3	. NUTPLATE	2	

CODES OF EFFECTIVITY

1 NC-4 THRU NC-14 2 NC-15 AND AFTER

STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 72-00-00 ENGINE

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
72-00-00	1	02/25/94	LIST OF PAGES & TABLE OF CONTENTS
72-00-01	1	02/25/94	ENGINE/REFERENCE/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

72-00-01
ENGINE/REFERENCE/
FOR THE ENGINE BREAKDOWN, REFER TO THE
PRATT AND WHITNEY AIRCRAFT OF CANADA
LTD. ILLUSTRATED PARTS CATALOG MANUAL
PART NUMBER 3036134.

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 73-00-00 ENGINE FUEL SYSTEMS

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
73-00-00	1	06/30/95	LIST OF PAGES & TABLE OF CONTENTS
73-10-00	1	02/25/94	ENGINE SECTION FUEL
73-10-00	2	06/30/95	
73-10-00	3	06/30/95	
73-10-05	1	02/25/94	ENGINE FUEL FILTER ASSEMBLY
73-10-05	2	02/25/94	
73-10-05	3	02/25/94	
73-10-10	1	02/25/94	FUEL PURGE TANK
73-10-10	2	02/25/94	
73-10-10	3	02/25/94	
73-20-00	1	02/25/94	CONDITION LEVER FUEL CUTOFF SWITCH
73-20-00	2	02/25/94	
73-20-00	3	02/25/94	
73-30-00	1	02/25/94	FUEL FLOWMETER TRANSMITTER
73-30-00	2	02/25/94	
73-30-00	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

73-10-00
ENGINE SECTION FUEL

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

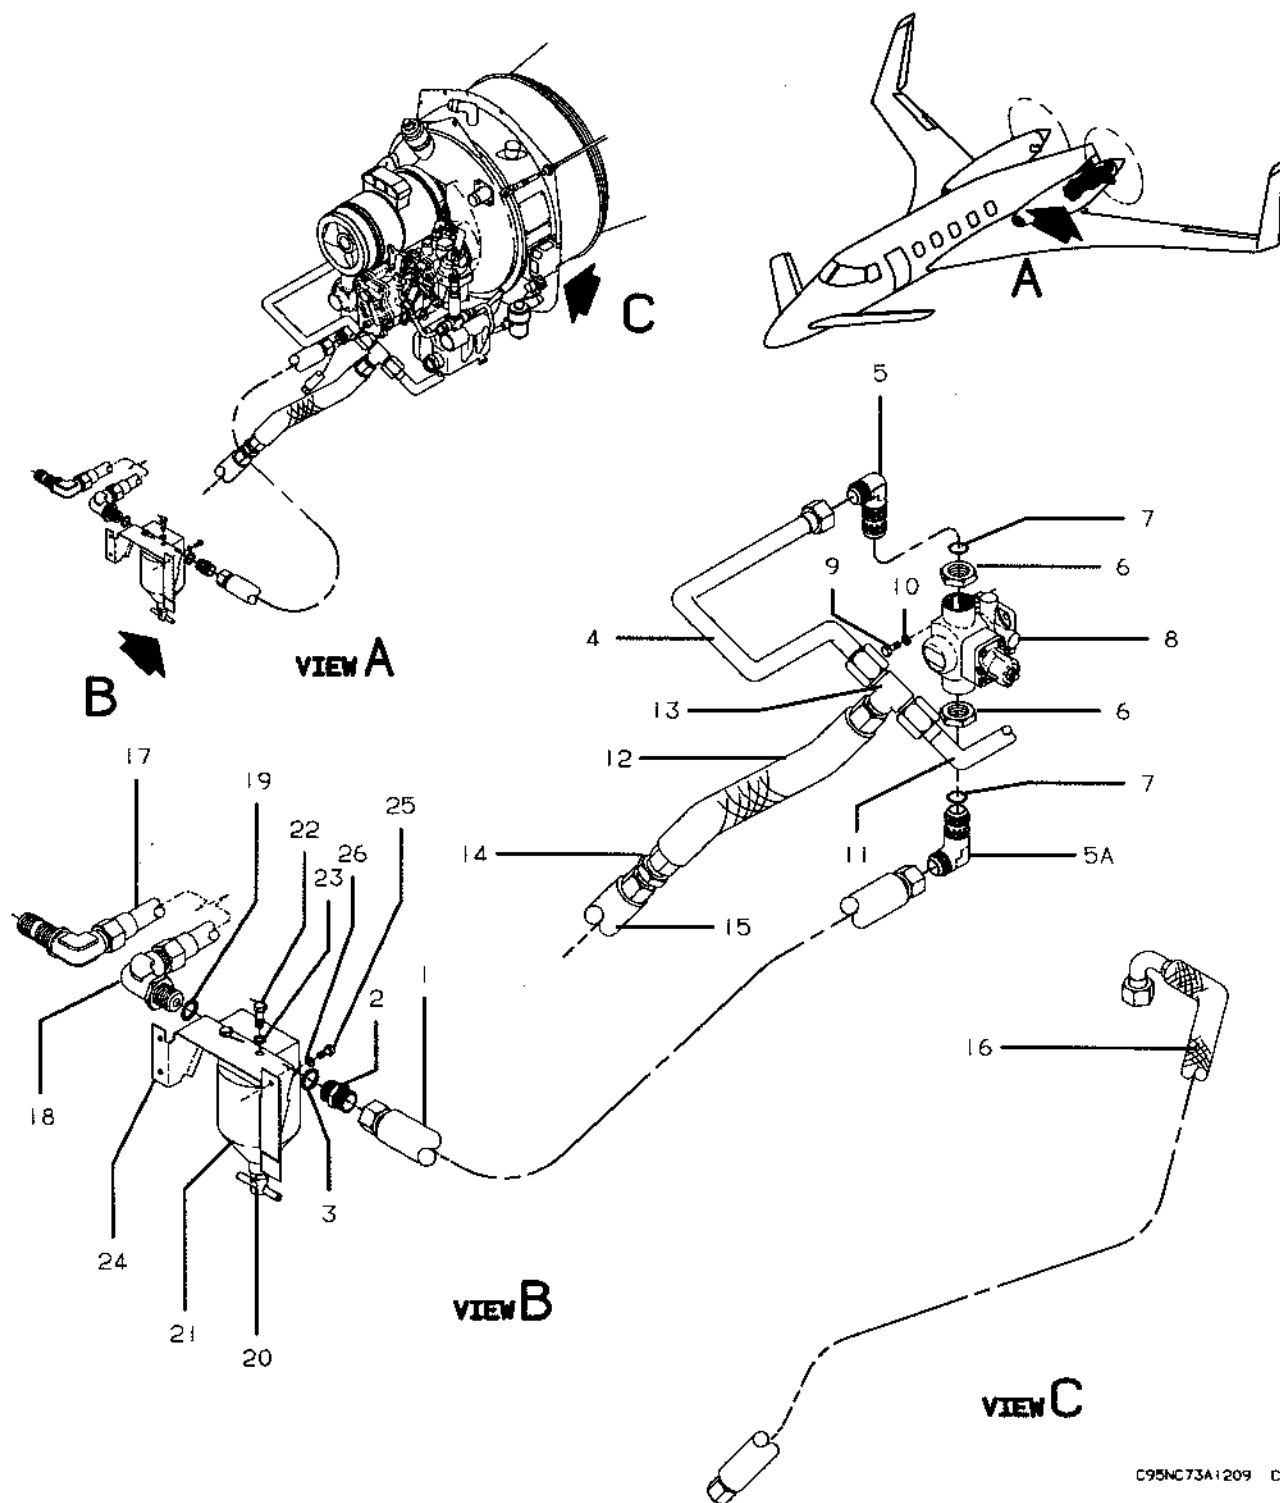

C95NC73A1209 C

FIGURE 10-00.ENGINE SECTION FUEL

Beechcraft

STARSHIP 1

ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-910064-1	POWER PLANT INSTL, LH.....	NP	1
	122-910064-15	POWER PLANT INSTL, LH.....	NP	2
	122-910064-3	POWER PLANT INSTL, RH.....	NP	1
	122-910064-17	POWER PLANT INSTL, RH.....	NP	2
- 1	330997F12-0340	. HOSE ASSY, LH FUEL SUPPLY/FILTER TO PUMP/.....	1	
	330997F12-0306	. HOSE ASSY, RH FUEL SUPPLY/FILTER TO PUMP/.....	1	
- 2	AN815-12J	. UNION/FILTER TO HOSE/.....	1	
- 3	MS29512-12	. PACKING, PREFORMED.....	1	
- 4	122-910064-7	. TUBE ASSY, FUEL SUPPLY/PUMP TO -T-/.....	1	
- 5 R	AN833-12D	. ELBOW.....	2	
- 5A R	AN833-12D	. ELBOW, LH.....	1	
	AN837-12D	. ELBOW, RH.....	1	
- 6	AN924-12D	. NUT.....	2	
- 7	MS29512-12	. PACKING, PREFORMED.....	2	
- 8	114-389042-5	. PUMP, FUEL BOOST/ENG DRIVEN/.....	1	
		/ATTACHING PARTS/		
- 9	AN4H8A	. BOLT.....	4	
- 10	AN960-416L	. WASHER.....	4	
		-----★-----		
- 11	122-910064-11	. TUBE ASSY, FUEL SUPPLY/TEE TO FUEL HEATER/.....	1	
- 12	330995F12-0240	. HOSE ASSY, LH MOTIVE FLOW.....	1	
	330997F12-0324	. HOSE ASSY, RH MOTIVE FLOW.....	1	
	MS21043-3	. NUT.....	2	
	AN960-10L	. WASHER.....	2	
	MS35207-283	. SCREW.....	2	
	MS21919WH16	. CLAMP.....	1	
	MS21919WH18	. CLAMP.....	1	
	MS21919WH24	. CLAMP.....	2	
- 13	AN824-12D	. TEE.....	1	
- 14	AN919-20D	. REDUCER.....	1	
- 15	330995F10-0244	. HOSE ASSY, LH MOTIVE FLOW.....	1	
	330995F10-0150	. HOSE ASSY, RH MOTIVE FLOW.....	1	
	R MS21043-3	. NUT.....	1	
	R AN960-10L	. WASHER.....	1	
	R MS35207-263	. SCREW.....	1	
	MS21919WH10	. CLAMP.....	1	
	MS21919WH16	. CLAMP.....	1	
- 16	330997F4-0570	. HOSE ASSY, LH AND RH PURGE.....	1	
	122-920002-165	FUEL SYSTEM INSTL.....	NP	
- 17	122-920001-95	. TUBE ASSY, LH FUEL SUPPLY/FIREWALL TO FILTER/.....	1	
	122-920001-96	. TUBE ASSY, RH FUEL SUPPLY/FIREWALL TO FILTER/.....	1	
- 18	MS51527B12S	. ELBOW/FILTER TO TUBE ASSY/.....	2	
- 19	MS29512-12	. PACKING, PREFORMED.....	2	
- 20	CCA4850	. VALVE ASSY, FUEL FILTER DRAIN.....	2	
	CCA1269	. SEAL, DRAIN VALVE.....	1	
- 21	114-389032-7	. FILTER ASSY, LH FUEL/SEE CHAPTER 73-10-05/.....	1	
	114-389032-8	. FILTER ASSY, RH FUEL/SEE CHAPTER 73-10-05/.....	1	
		/ATTACHING PARTS/		
- 22	MS20073-04-05	. BOLT.....	2	
- 23	AN960JD416L	. WASHER.....	2	
		-----★-----		
- 24	122-920011-9	. BRACKET, LH FUEL FILTER SUPPORT.....	1	
	122-920011-10	. BRACKET, RH FUEL FILTER SUPPORT.....	1	
		/ATTACHING PARTS/		
- 25	130909B12	. BOLT.....	4	
- 26	AN960JD10L	. WASHER.....	4	
		-----★-----		

CODES OF EFFECTIVITY

1 NC-4 THRU NC-28 2 NC-29 AND AFTER


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

34-30-00
GLIDESLOPE AND MARKER BEACON ANTENNAS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

73-10-05
ENGINE FUEL FILTER ASSEMBLY

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

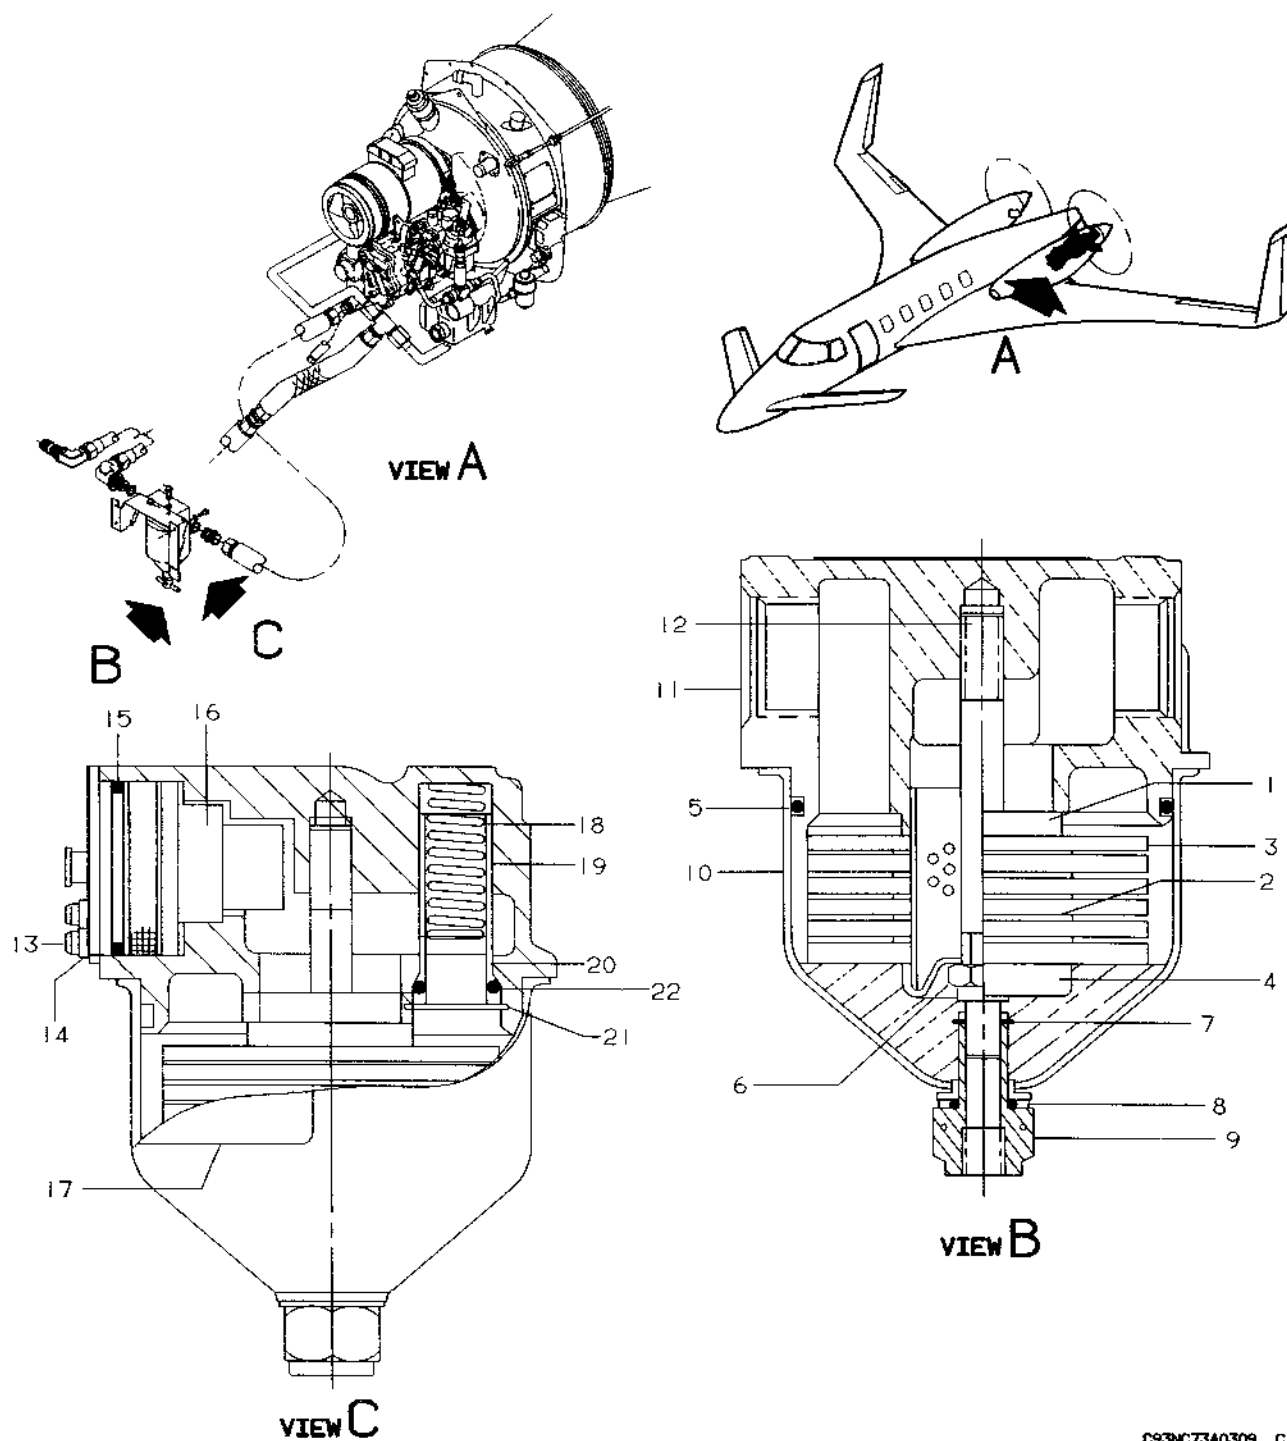

C93NC73A0309 C

FIGURE 10-05. ENGINE FUEL FILTER ASSEMBLY

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO	NO.	1 2 3 4 5 6 7	ASSY	CODE
10-05	114-389032-7	FILTER ASSY, LH FUEL	1	
	114-389032-8	FILTER ASSY, RH FUEL	1	
	03W1950-231	. SUBASSEMBLY, FILTER CARTRIDGE	1	
- 1	03W1950-218	. . OUTLET TUBE, PERFORATED	1	
- 2	03S683A135	. . SPACER	5	
- 3	204038	. . DISC, FILTER	6	
- 4	03W1950-211	. . CUP, RETAINER	1	
- 5	MS29513-233	. PACKING, PREFORMED	1	
- 6	29NTE-068	. LOCKNUT	1	
- 7	MS16624-4050	. RING, RETAINING	1	
- 8	600-3142-1/2	. GASKET, WASHER SEAL /STAT-O-SEAL/	1	
- 9	150164-011	. NUT, BOWL RETAINING	1	
- 10	150158-001	. BODY, FUEL FILTER	1	
	03W2161-156	. SUBASSEMBLY, FILTER HEAD, LH	1	
	03W2187-156	. SUBASSEMBLY, FILTER HEAD, RH	1	
- 11	03W2161-140	. . HEAD, FILTER, LH	1	
	03W2187-140	. . HEAD, FILTER, RH	1	
- 12	03W1950-134	. . STUD, SPECIAL	1	
- 13	MS24678-10	. SCREW	2	
- 14	AN960-10	. WASHER	2	
- 15	MS29513-028	. PACKING, PREFORMED	2	
- 16	204259	. INDICATOR, DIFFERENTIAL PRESSURE	1	
	MS9244-01	. DECAL, RBR ASSEMBLY DATE	1	
- 17	02FC30	. DECAL, IDENTIFICATION & INSTRUCTION	1	
- 18	150110-009-02	. SPRING, HELICAL COMPRESSION	1	
- 19	150214-004	. VALVE, POPPET	1	
- 20	150213-003	. SEAT, BY-PASS VALVE	1	
- 21	RR75S	. RING, RETAINING	1	
- 22	MS29513-015	. PACKING, PREFORMED	1	

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

73-10-10
FUEL PURGE TANK

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

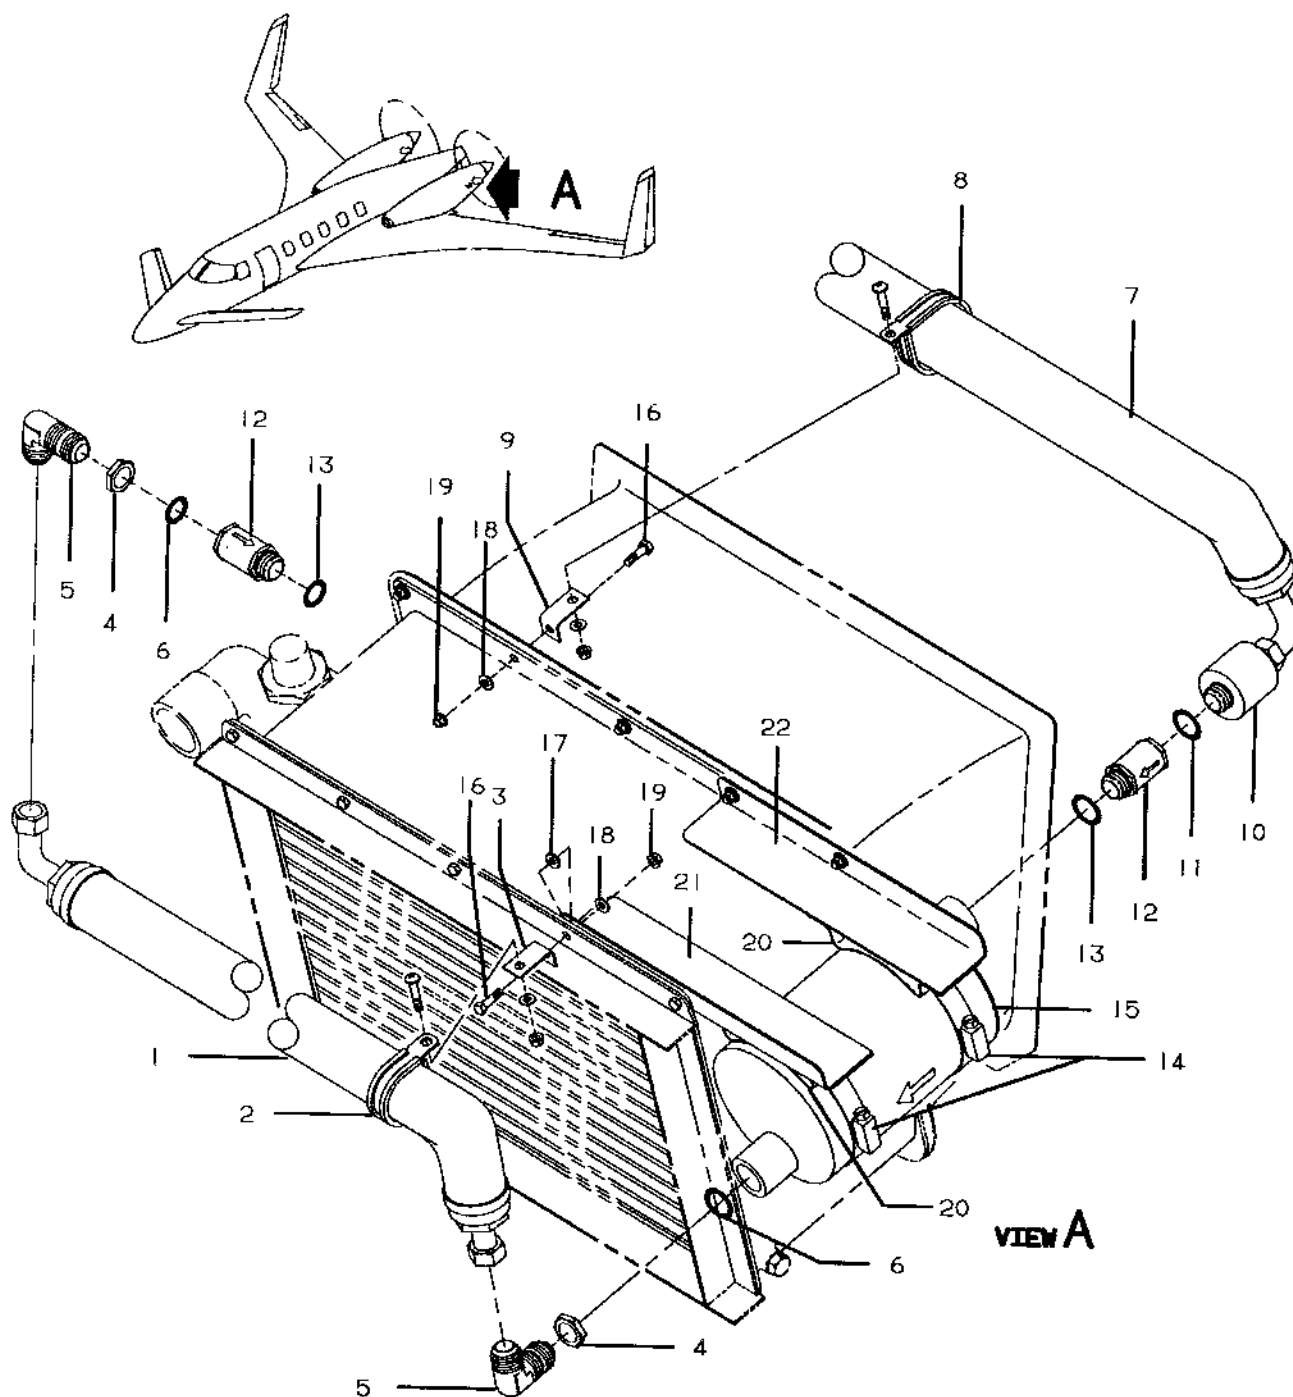

C93NC73A4453 C

FIGURE 10-10.FUEL PURGE TANK

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	122-920012-11	TANK INSTALLATION, FUEL PURGE.....	NP	
- 1	330997F4-0170	. HOSE ASSY/FUEL FLOW DIVIDER TO TANK/	1	
		. /ATTACHING PARTS/		
- 2	MS21919WH12	. CLAMP	1	
- 3	50-389064-13	. STANDOFF	1	
	MS35207-262	. SCREW	1	
	AN960-10	. WASHER	1	
	130909N29	. NUT	1	
		-----★-----		
- 4	AN924-4J	. NUT	2	
- 5	AN833-4J	. ELBOW	2	
- 6	MS29512-04	. PACKING, PREFORMED	2	
- 7	330997F4-0284	. HOSE ASSY/BLEED AIR TUBE TO TANK/	1	
		. /ATTACHING PARTS/		
- 8	MS21919WH12	. CLAMP	1	
- 9	50-389064-13	. STANDOFF	1	
	MS35207-262	. SCREW	1	
	AN-960-10L	. WASHER	1	
	130909N29	. NUT	1	
		-----★-----		
-10	4210T4TT	. FILTER, AIR	1	
-11	MS29512-04	. PACKING, PREFORMED	1	
-12	101-389011-65	. VALVE, CHECK	2	
-13	MS29512-04	. PACKING, PREFORMED	2	
-14	MS35842-15	. CLAMP	2	
-15	101-920082-9	. TANK ASSY, PURGE AIR PRESSURE	1	
	122-920012-19	. BRACKET ASSY, FWD SUPPORT	1	
	122-920012-20	. BRACKET ASSY, AFT SUPPORT	1	
		. /ATTACHING PARTS/		
-16	130909B15	. BOLT	2	
-17	NAS43HT3-8	. SPACER	2	
-18	AN960-10L	. WASHER	2	
-19	130909N29	. NUT	2	
		-----★-----		
-20	122-920012-21	. BRACKET	1	
-21	122-920012-15	. BRACKET, FWD SUPPORT	1	
-22	122-920012-16	. BRACKET, AFT SUPPORT	1	

-END-

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

73-20-00
CONDITION LEVER FUEL CUTOFF SWITCH

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

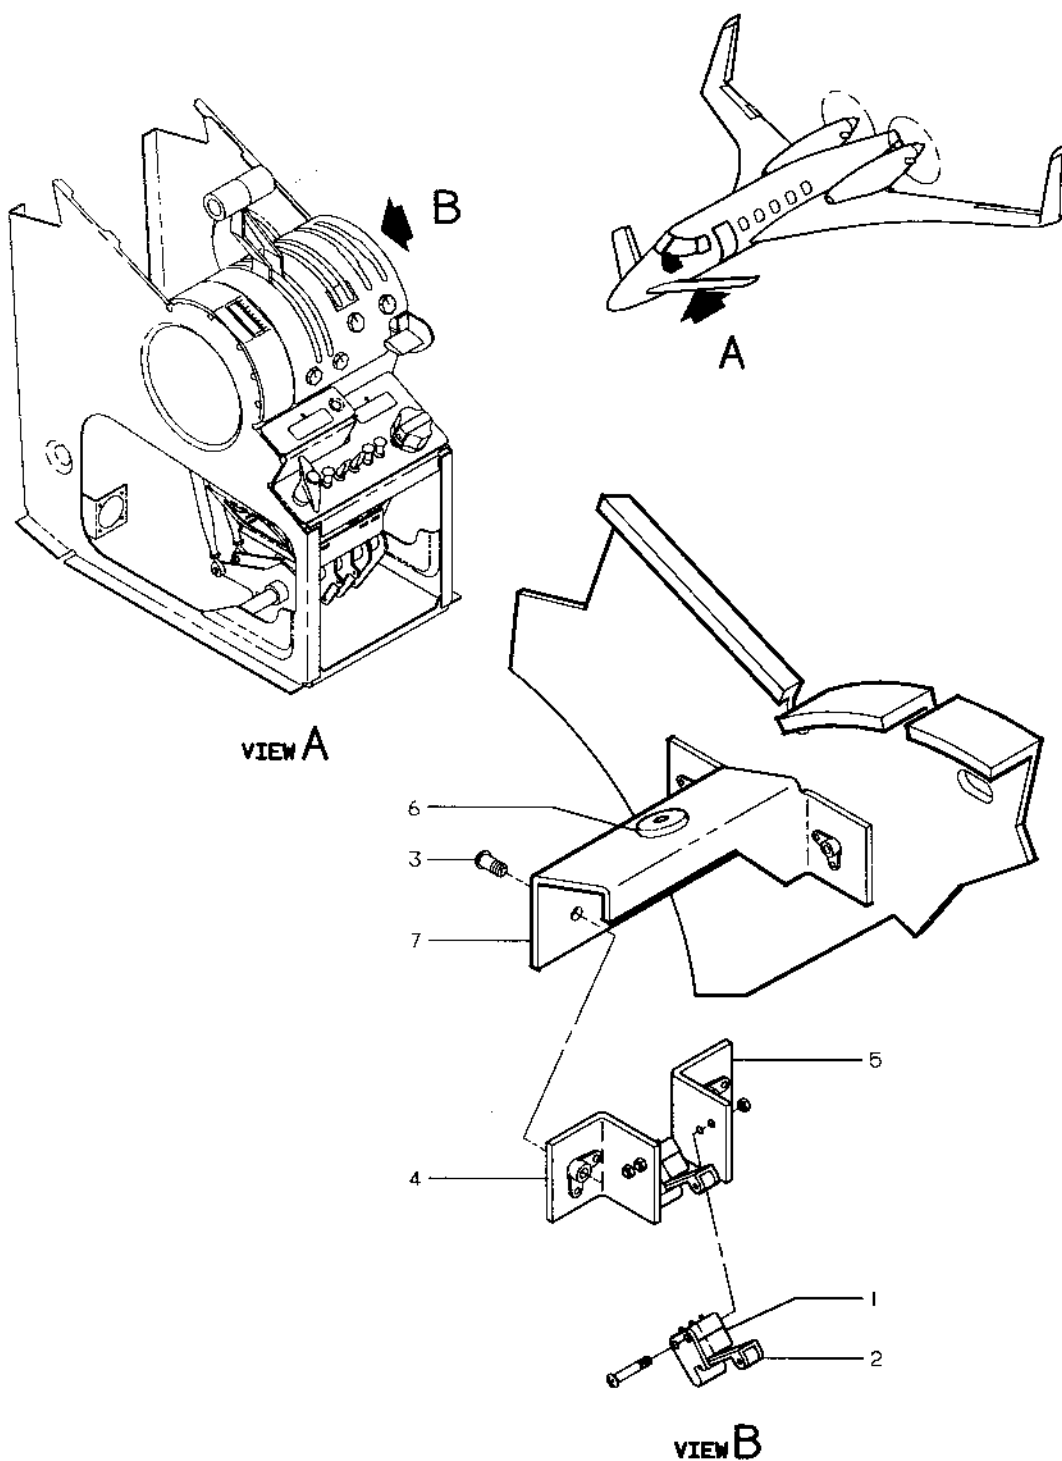

C9200452

FIGURE 20-00.CONDTN LEVER FUEL CUTOFF SWITCH


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	99-524043	SWITCH ASSY, CONDITION LEVER FUEL CUTOFF/SEE..... CHAPTER 39 FOR ATTACHING PARTS/	1	
- 1	MS24547-1	. SWITCH.....	2	
- 2	JX25	. ACTUATOR, SWITCH.....	2	
- 3	AN515-8R6	. SCREW.....	2	
- 4	99-524043-5	. ANGLE ASSY, LH.....	1	
- 5	99-524043-6	. ANGLE ASSY, RH.....	1	
	MK3000-08	. . NUTPLATE.....	1	
- 6	AN931-3-5	. GROMMET.....	1	
- 7	99-524043-1	. BRACKET ASSY.....	1	
	MK3000-08	. . NUTPLATE.....	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

73-30-00
FUEL FLOWMETER TRANSMITTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

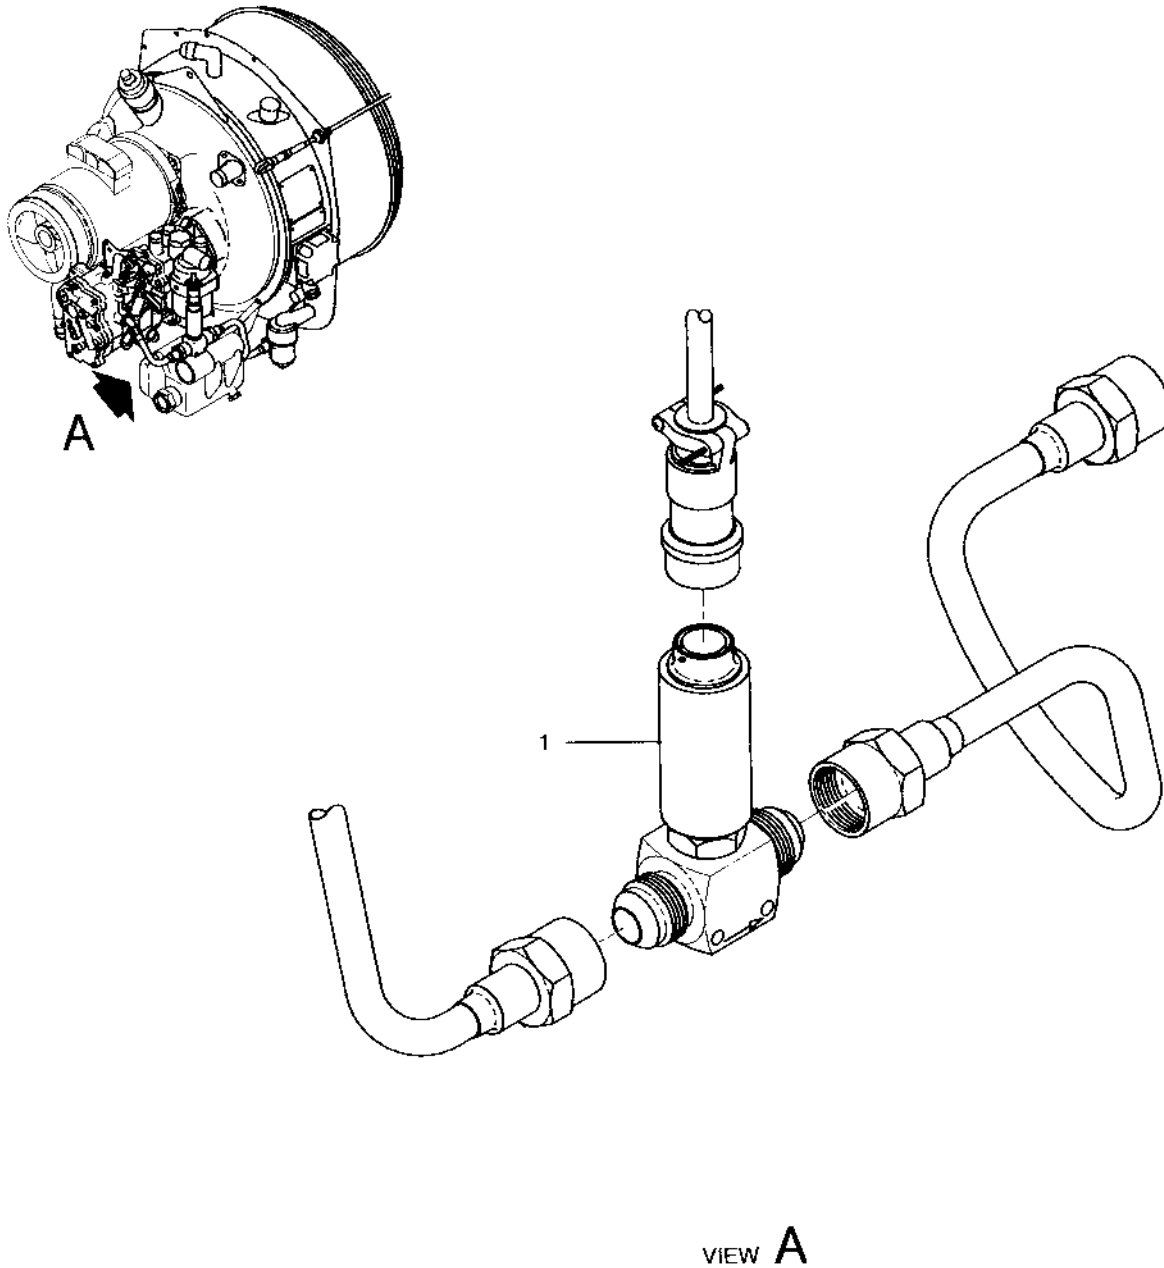

VIEW **A**

2000-282-07

FIGURE 30-00.FUEL FLOWMETER TRANSMITTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00	122-910064-1	POWER PLANT INSTL, LH.....	NP	1
	122-910064-15	POWER PLANT INSTL, LH.....	NP	2
	122-910064-3	POWER PLANT INSTL, RH.....	NP	1
	122-910064-17	POWER PLANT INSTL, RH.....	NP	2
- 1	122-389031-3	. TRANSMITTER, FUEL FLOWMETER.....	1	

NOTE THE FUEL TUBE ASSEMBLIES CAN BE FOUND
IN THE PRATT & WHITNEY PT6A-67A PARTS
MANUAL.

CODES OF EFFECTIVITY

1 NC-4 THRU NC-28 2 NC-29 AND AFTER


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 74-00-00 IGNITION

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
74-00-00	1	02/25/94	LIST OF PAGES & TABLE OF CONTENTS
74-10-00	1	02/25/94	IGNITION EXCITER.....
74-10-00	2	02/25/94	
74-10-00	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

74-10-00
IGNITION EXCITER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

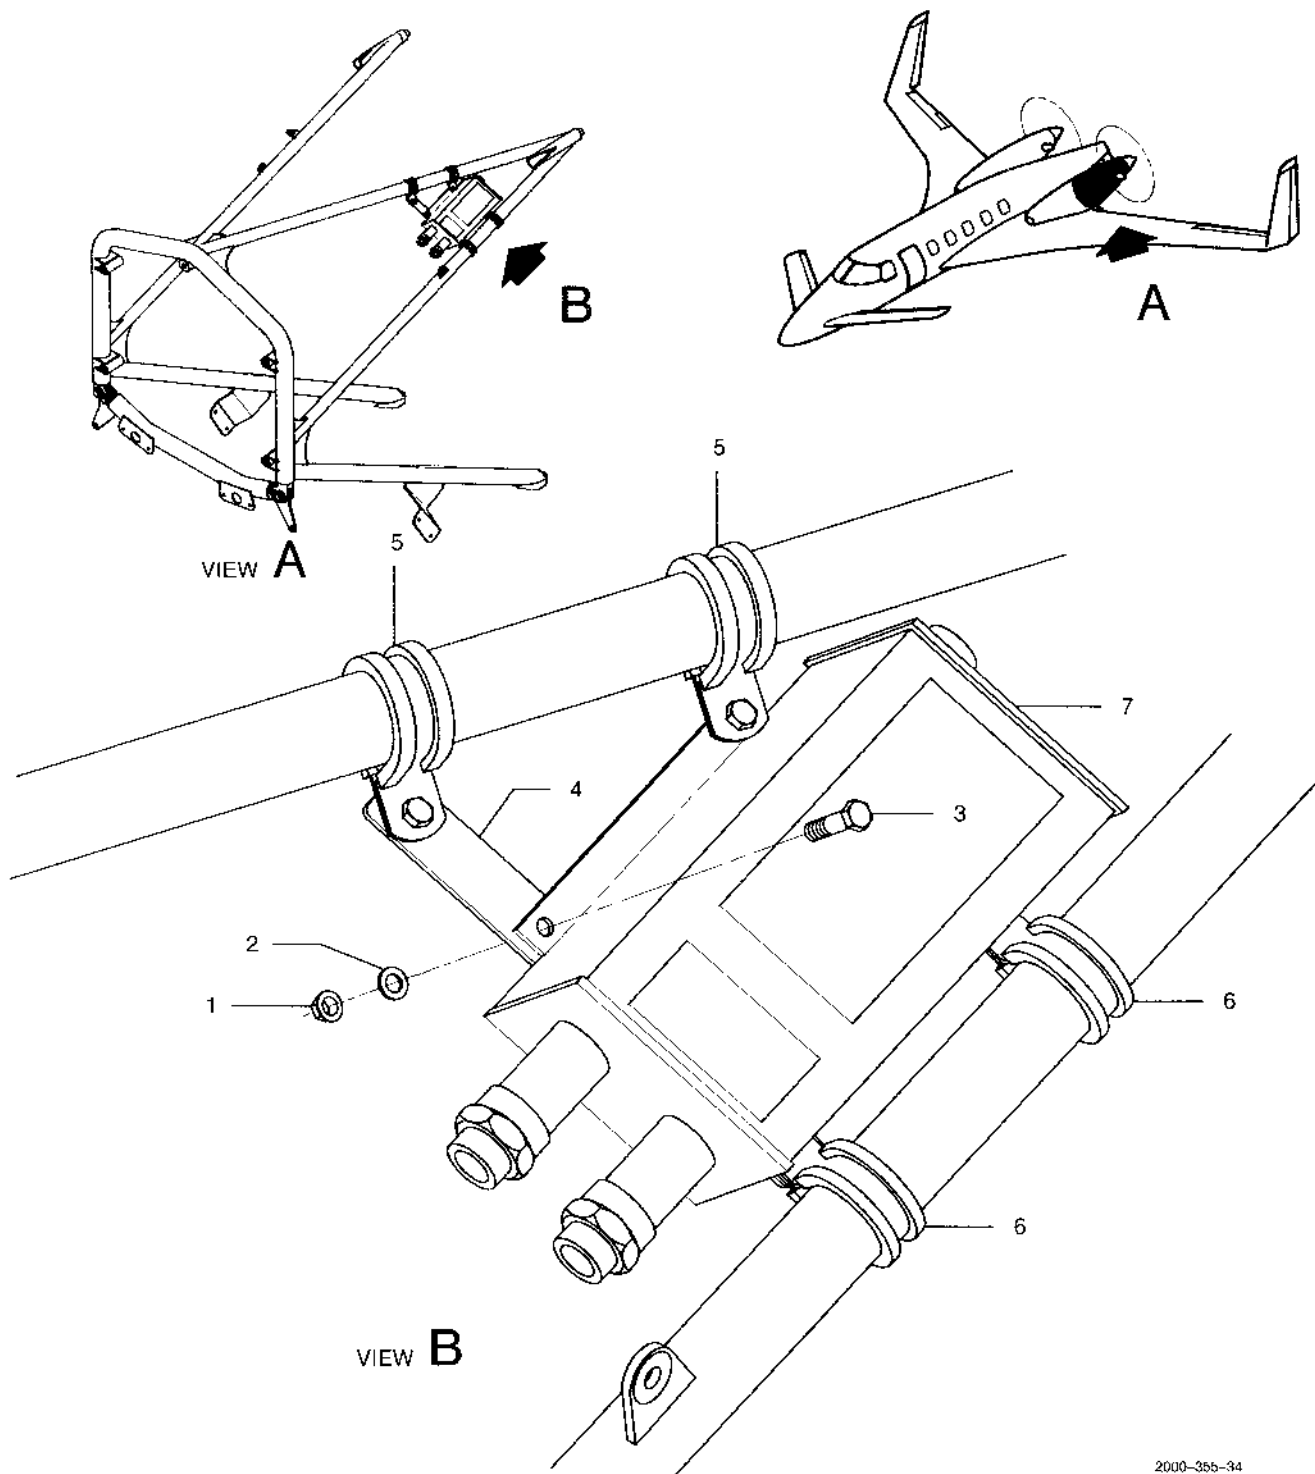

2000-355-34

FIGURE 10-00.IGNITION EXCITER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-910064-1	POWER PLANT INSTL, LH.....	NP	1
	122-910064-15	POWER PLANT INSTL, LH.....	NP	2
	122-910064-3	POWER PLANT INSTL, RH.....	NP	1
	122-910064-17	POWER PLANT INSTL, RH.....	NP	2
- 1	MS21043-3	. NUT.....	5	
- 2	AN960C10L	. WASHER.....	5	
- 3	130909B14	. BOLT.....	5	
- 4	122-910064-5	. BRACKET.....	1	
- 5	MS21919WH17	. CLAMP.....	2	
- 6	MS21919WH19	. CLAMP.....	2	
- 7	3014365K	EXCITER, IGNITION/SUPPLIED AS A COMPONENT PART..... OF THE ENGINE/	1	
	MS21919WH5	CLAMP/IGNITOR LEAD/.....	2	
	130909N29	NUT.....	1	
	AN960-10L	WASHER.....	1	
	130909B12	BOLT.....	1	

CODES OF EFFECTIVITY


1 NC-4 THRU NC-28 2 NC-29 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 75-00-00 AIR

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
75-00-00	1	02/25/94	LIST OF PAGES & TABLE OF CONTENTS
75-20-00	1	02/25/94	GENERATOR COOLING
75-20-00	2	02/25/94	
75-20-00	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

75-20-00
GENERATOR COOLING



02/25/94

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	PART	DESCRIPTION	UNITS	USABLE
UNIT &	NO.		PER	ON
ITEM NO		1 2 3 4 5 6 7	ASSY	CODE
20-00	122-910008-5	GENERATOR COOLING INSTL	NP	
- 1	MS35842-16	. CLAMP	3	
- 2	115167AXX190888	. HOSE	1	
- 3	122-910046-3	. CAP. ADAPTER	1	
- 4	122-910046-1	. ADAPTER	1	
	122-910074-13	. INLET ASSEMBLY	1	
- 5	122-910074-11	. . DUCT	1	
- 6	122-9100740-15	. . DUCT	1	
- 7	122-910074-3	. . RAMP ASSEMBLY	1	
	CA1810	. . . RECEPTACLE	6	
	CA1818-3	. . . SHIM	6	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 76-00-00 ENGINE CONTROLS

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
76-00-00	1	06/30/95	LIST OF PAGES & TABLE OF CONTENTS
76-10-00	1	02/25/94	PEDESTAL ENGINE CONTROL MECHANISM
76-10-00	2	02/25/94	
76-10-00	3	06/30/95	
76-10-00	4	02/25/94	
76-10-00	5	06/30/95	
76-10-00	6	02/25/94	
76-10-00	7	02/25/94	
76-10-00	8	06/30/95	
76-10-00	9	06/30/95	
76-10-00	10	02/25/94	
76-10-00	11	06/30/95	
76-10-10	1	02/25/94	ENGINE CONTROLS.....
76-10-10	2	02/25/94	
76-10-10	3	02/25/94	
76-10-10	4	02/25/94	
76-10-10	5	06/30/95	
76-10-10	6	02/25/94	
76-10-10	7	06/30/95	
76-10-10	8	02/25/94	
76-10-10	9	06/30/95	
76-10-10	10	02/25/94	
76-10-10	11	06/30/95	
76-10-10	12	02/25/94	
76-10-10	13	06/30/95	
76-10-10	14	02/25/94	
76-10-10	15	06/30/95	
76-10-10	16	06/30/95	
76-10-10	17	06/30/95	
76-10-10	18	02/25/94	
76-10-10	19	06/30/95	
76-10-20	1	02/25/94	THROTTLE GO AROUND SWITCH
76-10-20	2	02/25/94	
76-10-20	3	02/25/94	

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

76-10-00
PEDESTAL ENGINE CONTROL MECHANISM

Beechcraft STARSHIP 1

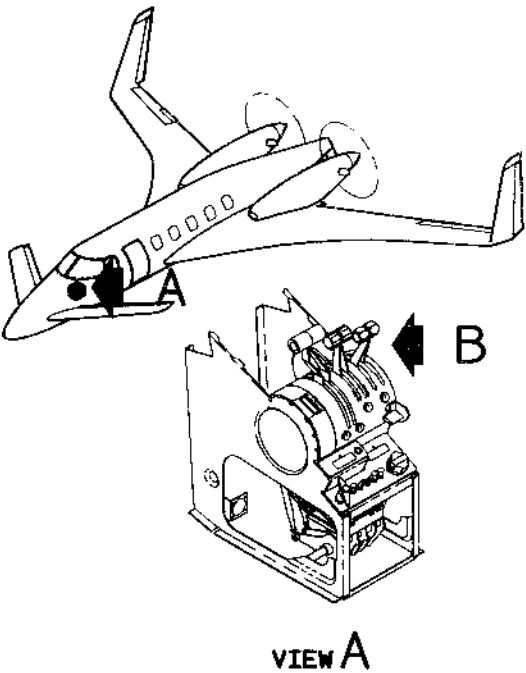


FIGURE 10-00.PEDESTAL ENGINE CONTROL MECHANISM
/SHEET 1 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-522098-3	MECHANISM INSTL, PEDESTAL UPPER	NP	
- 1	130909N29	. NUT	6	
- 2	AN960-10L	. WASHER	6	
- 3	R NAS1303-6	. BOLT	6	
- 4	S747-3L	. KNOB, FRICTION BRAKE	4	
- 5	MS27039-1-08	. SCREW	4	
- 6	R AN4H4A	. BOLT	1	
- 7	AN960-416	. WASHER	1	
- 8	100951X040ZZ	. WASHER	1	
- 9	122-522102-7	. BUSHING	1	
-10	AN960-816	. WASHER/ALTERNATE FOR AN960-816L/	AR	
	AN960-816L	. WASHER/ALTERNATE FOR AN960-816/	AR	
-11	122-522102-1	. SHAFT ASSY, PIVOT	1	
-12	AN960-816L	. WASHER/A MINIMUM OF ONE WASHER IS USED FOUR PLACES ON THE SHAFT TO SPACE CONTROLS/	AR	
-13	130909N29	. NUT	6	
-14	AN960-10L	. WASHER	6	
-15	MS24694S53	. SCREW	6	
-16	122-522078-3	. KNOB, LH POWER CONTROL LEVER	1	
-17	122-522078-4	. KNOB, RH POWER CONTROL LEVER	1	
-18	50-524506	. KNOB, PROP CONTROL LEVER	2	
-19	50-524504	. KNOB, CONDITION CONTROL LEVER	2	
-20	50-524512	. SPRING, POWER LEVER TENSION	2	
-21	130909N32	. NUT	4	
-22	AN960-416	. WASHER	4	
-23	MS24665-132	. PIN, COTTER	2	
-24	AN960-416L	. WASHER	2	
-25	AN960-416	. WASHER	4	
	122-522112-1	. ARM ASSY, LH POWER CONTROL	1	
	122-522112-2	. ARM ASSY, RH POWER CONTROL	1	
-26	100-524176-5	. PLATE	1	
-27	100-524196-1	. BRAKE ASSY, CONTROL FRICTION	1	
-28	R 100-524178-23	. DRUM	1	
-29	08DU06	. BEARING	2	
-30	122-522112-7	. BRAZE ASSY, LH POWER CONTROL	1	
	122-522112-8	. BRAZE ASSY, RH POWER CONTROL	1	
-31	G12DU	. WASHER	2	
-32	122-522031-1	. LEVER ASSY, LH POWER CONTROL	1	
-33	122-522031-3	. LEVER ASSY, RH POWER CONTROL	1	
-34	122-522083-5	. DETENT ASSY, POWER CONTROL STOP	1	
		/ATTACHING PARTS/		
-35	MS24694S4	. SCREW	2	
	99-524168-5	. NUT, SLIDING	2	

---★---

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG


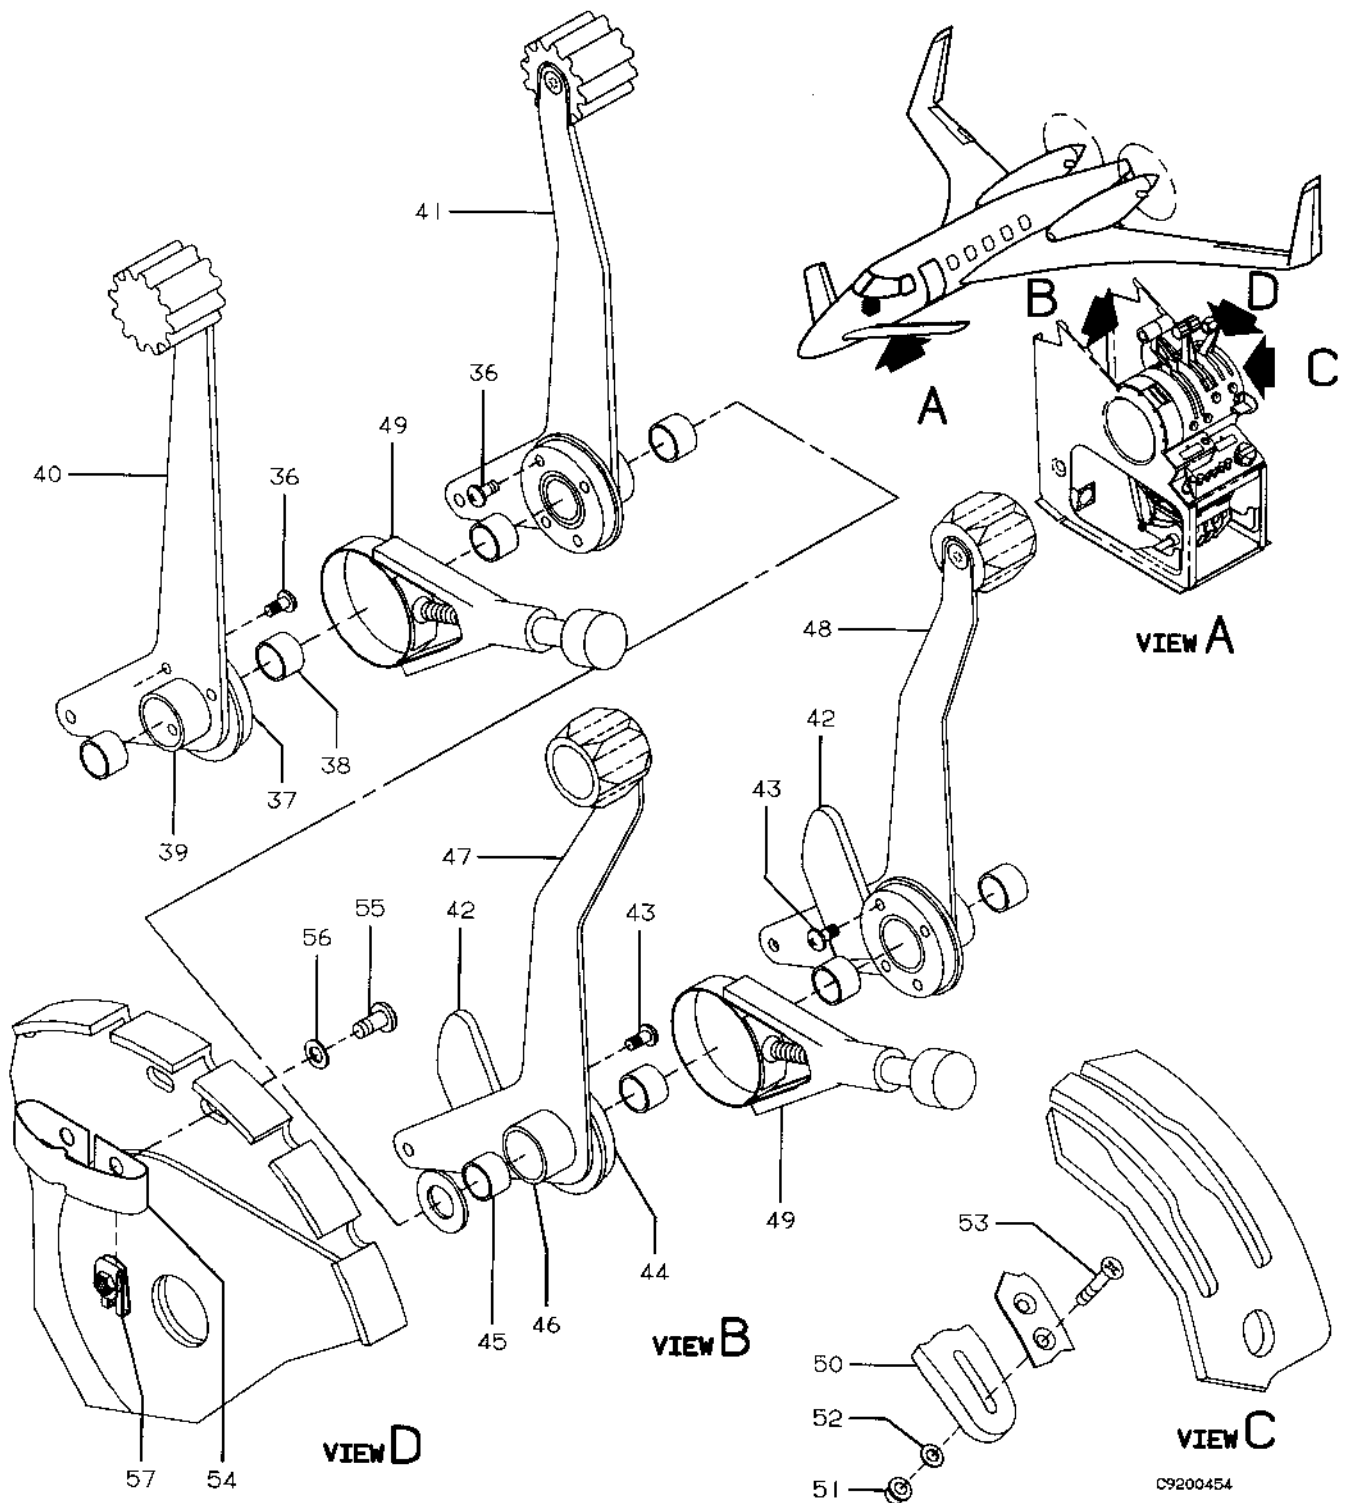


FIGURE 10-00. PEDESTAL ENGINE CONTROL MECHANISM
/SHEET 2 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-522032-1	. LEVER ASSY, LH PROP CONTROL.....	1	
	122-522032-3	. LEVER ASSY, RH PROP CONTROL.....	1	
- 36	R NAS623-2-1	. . SCREW.....	3	
	100-524174-35	. . DRUM ASSY.....	1	
- 37	100-524174-33	. . DRUM.....	1	
- 38	08DU06	. . BEARING.....	2	
- 39	100-524174-9	. . HUB ASSY.....	1	
- 40	122-522032-5	. . LEVER, LH PROP CONTROL.....	1	
- 41	122-522032-7	. . LEVER, RH PROP CONTROL.....	1	
	122-522033-1	. LEVER ASSY, LH CONDITION CONTROL.....	1	
	122-522033-3	. LEVER ASSY, RH CONDITION CONTROL.....	1	
- 42	50-524568-39	. . CAM.....	1	
- 43	NAS602-5	. . SCREW.....	3	
	100-524174-35	. . DRUM ASSY.....	1	
- 44	100-524174-33	. . DRUM.....	1	
- 45	08DU06	. . BEARING.....	2	
- 46	100-524174-9	. . HUB ASSY.....	1	
- 47	122-522033-9	. . LEVER, LH CONDITION CONTROL.....	1	
- 48	122-522033-11	. . LEVER, RH CONDITION CONTROL.....	1	
- 49	100-524196-1	. BRAKE ASSY, CONTROL FRICTION.....	2	
- 50	122-522056-1	. CATCH, CONDITION LEVER.....	1	
		/ATTACHING PARTS/		
- 51	130909N28	. NUT.....	2	
- 52	AN960-8L	. WASHER.....	2	
- 53	MS24693S52	. SCREW.....	2	
		-----★-----		
- 54	122-522034-1	. DETENT, CONDITION LEVER.....	1	
		/ATTACHING PARTS/		
- 55	MS35206-245	. SCREW.....	2	
- 56	AN960-8L	. WASHER.....	AR	
- 57	130290-3	. CLIP NUT ASSY.....	2	
		-----★-----		

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

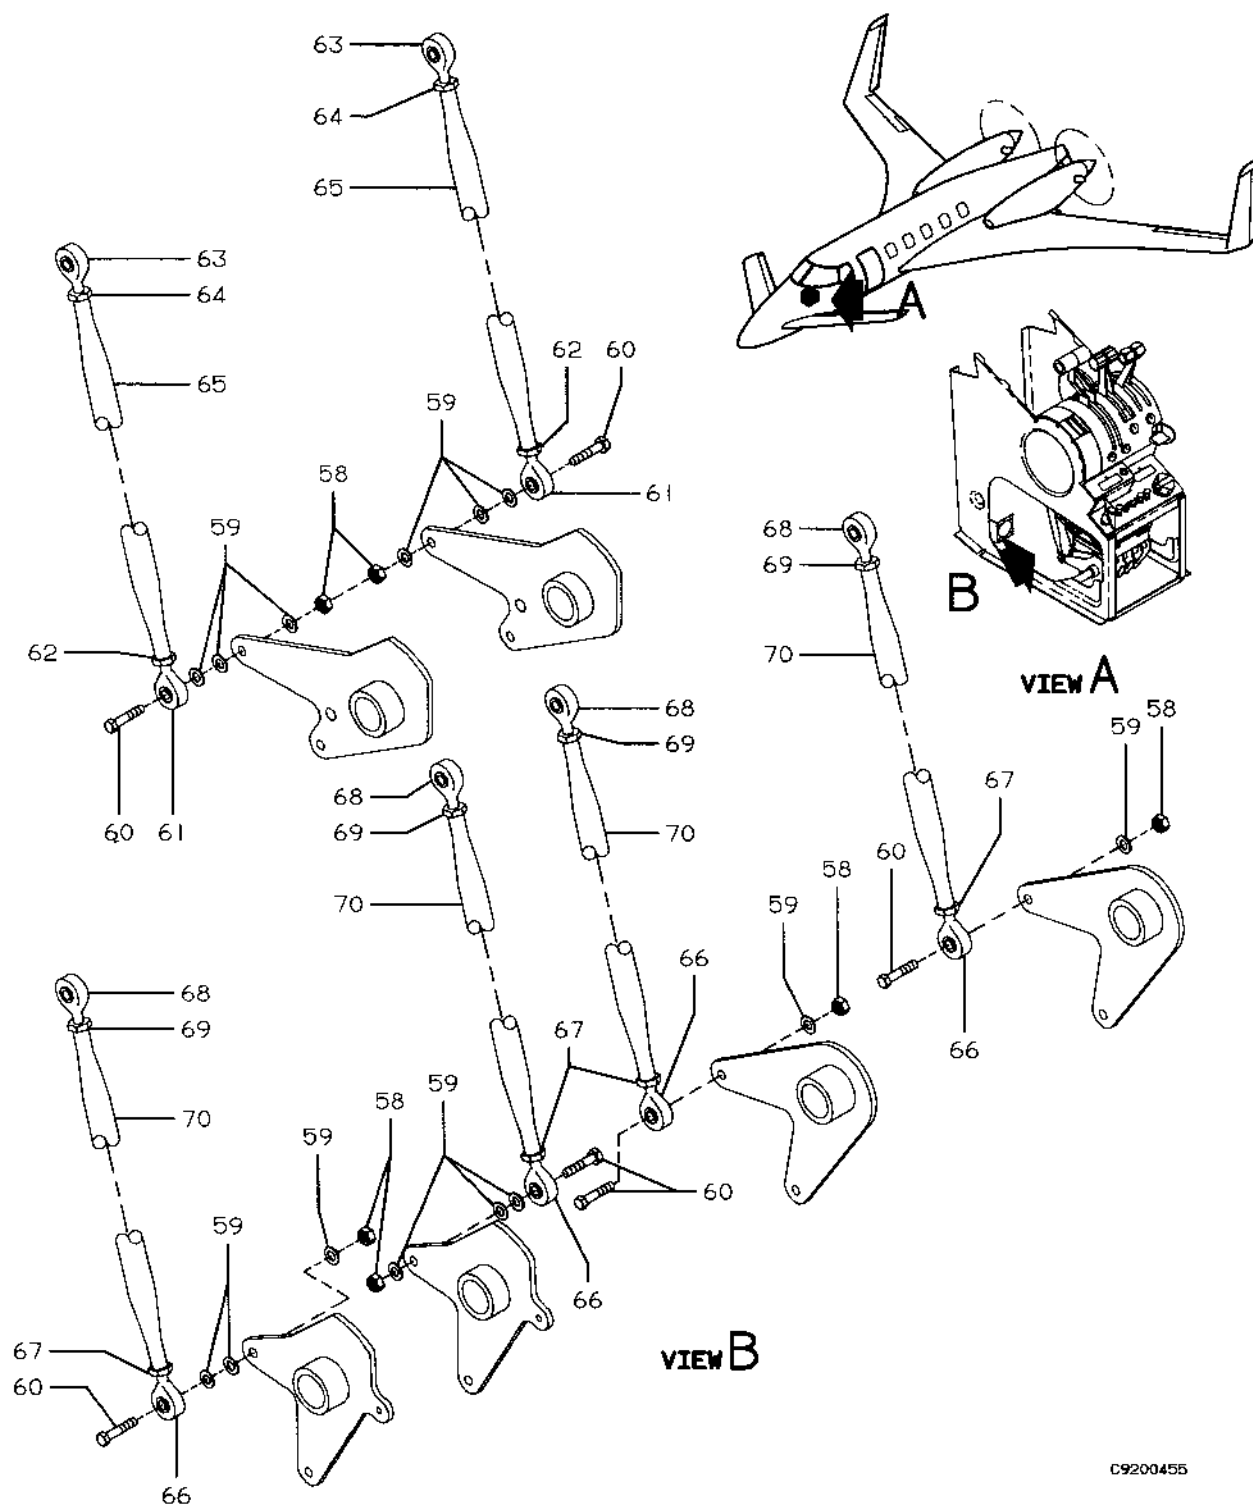


C9200455

FIGURE 10-00. PEDESTAL ENGINE CONTROL MECHANISM
/SHEET 3 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC									UNITS	USABLE
UNIT &	PART	DESCRIPTION							PER	ON
ITEM NO	NO.	1 2 3 4 5 6 7							ASSY	CODE
10-00	122-522035-5	QUADRANT INSTL, PEDESTAL LOWER.....							NP	
- 58	130909N29	. NUT							6	
- 59	AN960-10L	. WASHER							12	
- 60	NAS1303-7	. BOLT							6	
	122-522039-21	. PUSH ROD ASSY, POWER CONTROL.....							2	
- 61	131553L3M	. . ROD END.....							1	
- 62	AN315-3L	. . NUT							1	
- 63	131553-3M	. . ROD END.....							1	
- 64	AN315-3R	. . NUT							1	
- 65	122-522039-23	. . PUSH ROD, POWER.....							1	
	122-522039-3	. . PUSH ROD ASSY, PROP & CONDITION CONTROL.....							4	
- 66	131553L3M	. . ROD END.....							1	
- 67	AN315-3L	. . NUT							1	
- 68	131553-3M	. . ROD END.....							1	
- 69	AN315-3R	. . NUT							1	
- 70	122-522039-7	. . PUSH ROD, PROP & CONDITION							1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

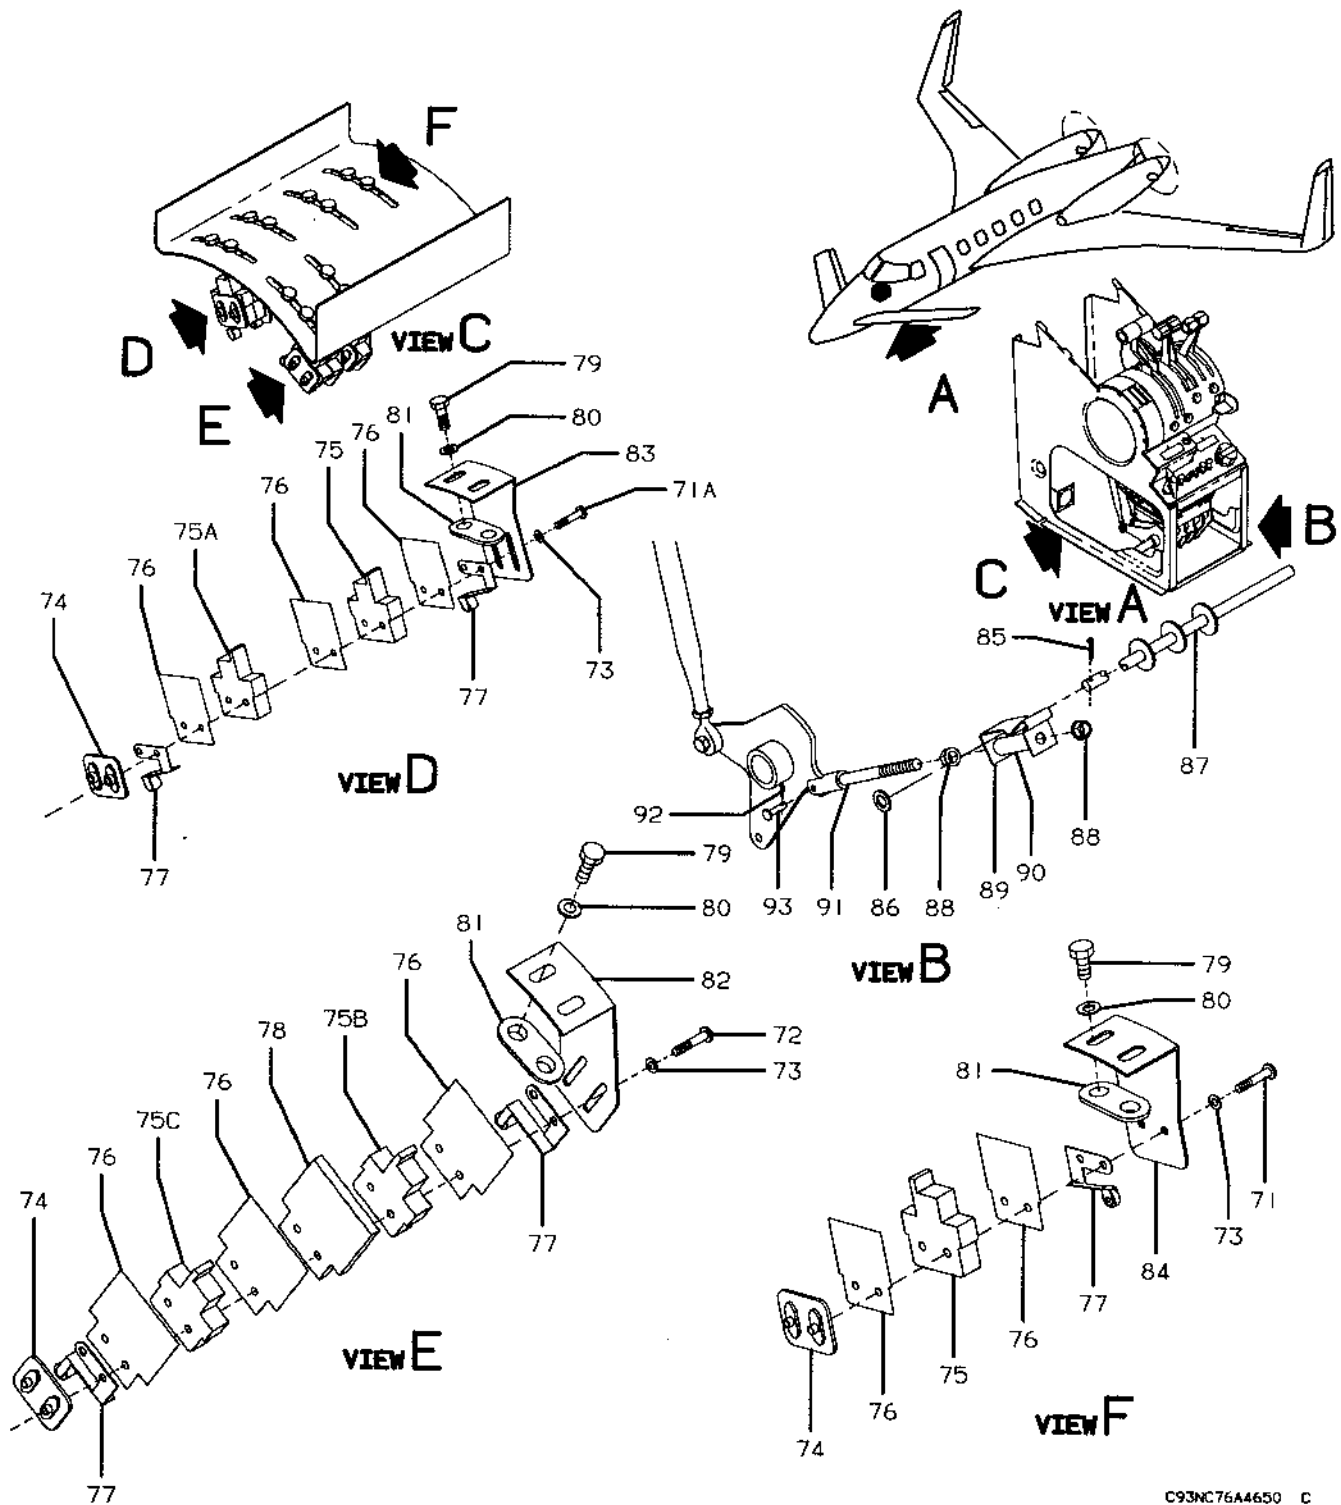


C93NC76A4650 C

FIGURE 10-00. PEDESTAL ENGINE CONTROL MECHANISM
/SHEET 4 OF 5 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00 -71	R MS35206-208	. SCREW.....	4	
-71A	R MS35206-210	. SCREW.....	4	
-72	MS35206-321	. SCREW.....	4	
-73	AN960PD2L	. WASHER.....	12	
-74	122-522063-1	. PLATE ASSY.....	6	
	MS21069L02	. NUTPLATE.....	2	
-75	R 11SM3S	. SWITCH, 1 LH AUTO FEATHER/S213/.....	1	
	R 11SM3S	. SWITCH, 1 RH AUTO FEATHER/S215/.....	1	
-75A	R 11SM3S	. SWITCH, 3 LH AUTO FEATHER/S285/.....	1	
	R 11SM3S	. SWITCH, 3 RH AUTO FEATHER/S288/.....	1	
-75B	R 11SM3S	. SWITCH, LH LDG GR WARNING/S217/.....	1	
	R 11SM3S	. SWITCH, RH LDG GR WARNING/S218/.....	1	
-75C	R 11SM3S	. SWITCH, LH STALL WARNING/S282/.....	1	
	R 11SM3S	. SWITCH, RH STALL WARNING/S283/.....	1	
-76	AT10823	. INSULATOR, SWITCH.....	14	
-77	R JS5	. ACTUATOR, SWITCH.....	10	
-78	122-522213-1	. SPACER.....	1	
-79	NAS1096-1-6	. SCREW.....	12	
-80	AN960-6L	. WASHER.....	12	
-81	122-522063-5	. CLIP ASSY.....	6	
	46LNK(040)	. PRESSERT.....	2	
-82	122-522028-21	. HANGER, SWITCH.....	2	
-83	122-522028-17	. HANGER, SWITCH.....	2	
-84	122-522028-19	. HANGER, SWITCH.....	2	
-85	MS24665-132	. PIN, COTTER.....	1	
-86	AN960-416L	. WASHER.....	2	
-87	122-522040-1	. ROD ASSY, DETENT.....	1	
-88	MS21083N4	. NUT.....	4	
-89	50-524478-15	. SPRING, DETENT.....	2	
-90	NAS43HT4-96	. SPACER.....	2	
-91	50-524548-87	. ROD ASSY.....	2	
-92	MS24665-132	. PIN, COTTER.....	2	
-93	MS20392-1C13	. PIN.....	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

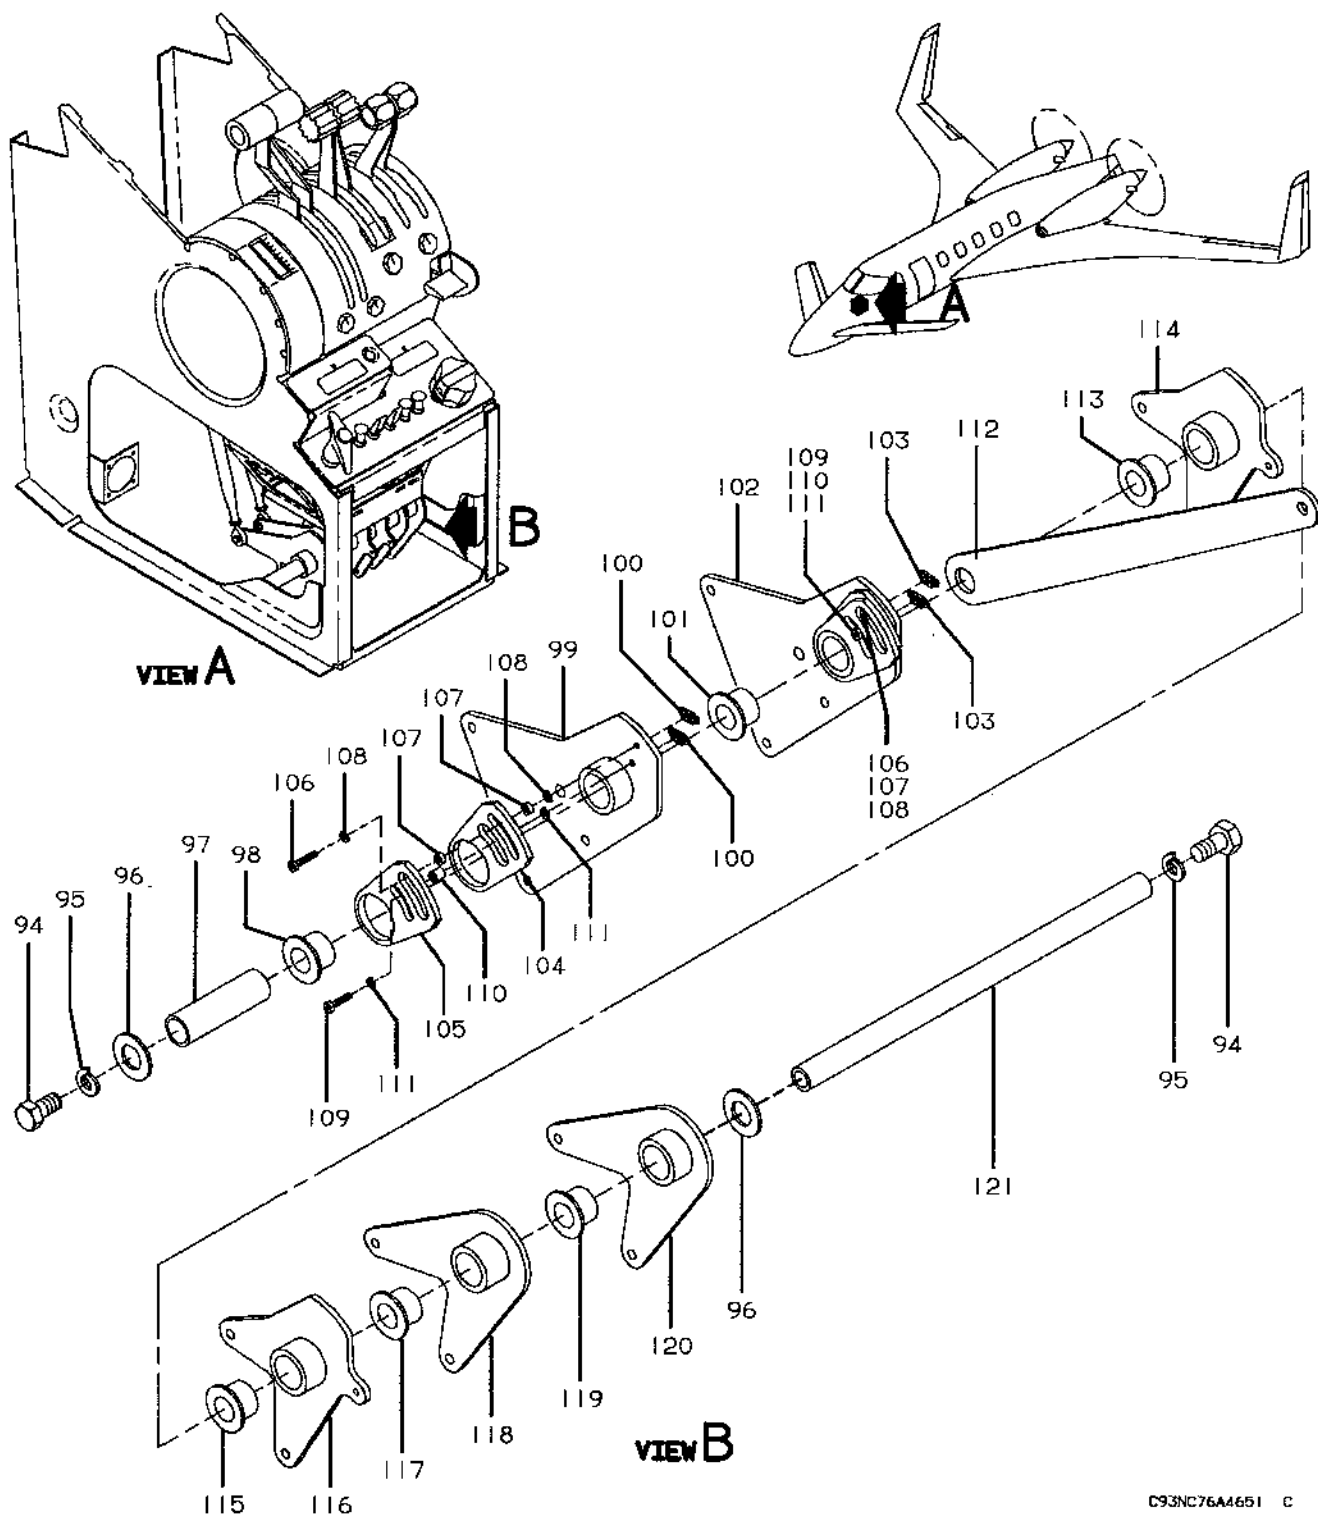

C93NC76A4651 C

FIGURE 10-00. PEDESTAL ENGINE CONTROL MECHANISM
/SHEET 5 OF 5 SHEETS/


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00 -94	AN5H6A	. BOLT	2	
-95	MS35338-45	. WASHER	2	
-96	AN960-816L	. WASHER/ONE WASHER REQUIRED AT EACH END. USE ADDITIONAL WASHERS TO REDUCE END PLAY IF NECESSARY/	AR	
-97	NAS43DD8-128	. SPACER	1	
	122-522036-51	. BELLCRANK ASSY, LH POWER CONTROL	1	
-98	503-0008-012	. . BUSHING	2	
-99	122-522036-41	. . BRAZE ASSY	1	
-100 R	MS21075L08	. . NUTPLATE	2	
	122-522036-53	. BELLCRANK ASSY, RH POWER CONTROL	1	
-101	503-0008-012	. . BUSHING	2	
-102	122-522036-43	. . BRAZE ASSY	1	
-103 R	MS21075L08	. . NUTPLATE	2	
-104	122-522036-49	. CAM	1	
-105	122-522036-47	. CAM	1	
-106 R	NAS1096-2-13	. SCREW	1	
-107	NAS42DD5-8	. SPACER	1	
-108	MS35338-42	. WASHER	1	
-109 R	NAS1096-2-12	. SCREW	1	
-110	NAS43DD5-18	. SPACER	1	
-111	MS35338-42	. WASHER, LOCK	1	
-112	122-522081-1	. PLATE, DETENT ROD SUPPORT	1	
	122-522037-11	. CAM ASSY, LH PROP CONTROL	1	
-113	503-0008-012	. . BUSHING	2	
-114	122-522037-15	. . BRAZE ASSY	1	
	122-522037-13	. CAM ASSY, RH PROP CONTROL	1	
-115	503-0008-012	. . BUSHING	2	
-116	122-522037-17	. . BRAZE ASSY	1	
	122-522036-1	. CAM ASSY, LH CONDITION CONTROL	1	
-117	503-0008-012	. . BUSHING	2	
-118	122-522036-5	. . BRAZE ASSY	1	
	122-522036-3	. CAM ASSY, RH CONDITION CONTROL	1	
-119	503-0008-012	. . BUSHING	2	
-120	122-522036-7	. . BRAZE ASSY	1	
-121	122-522061-1	. SHAFT, QUADRANT	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

76-10-10
ENGINE CONTROLS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

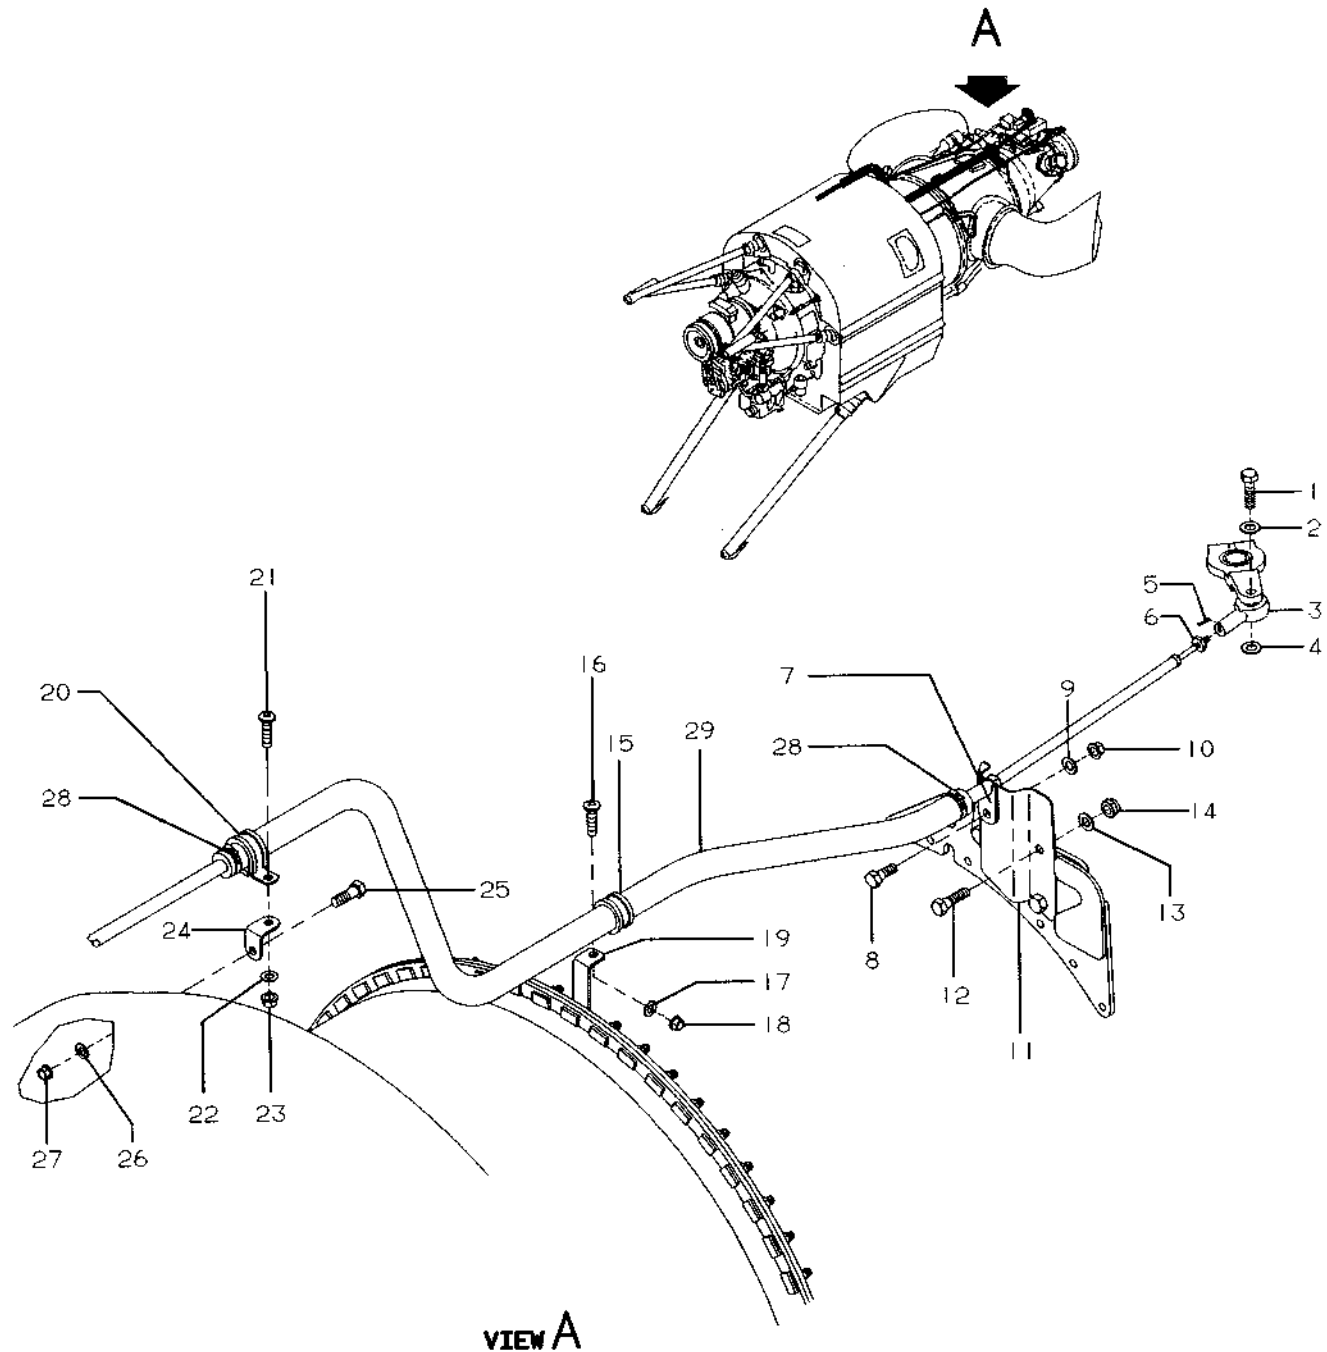


C93NC76A0312 C

FIGURE 10-00.ENGINE CONTROLS
/SHEET 1 OF 9 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	122-940004-1	ENGINE CONTROLS INSTL, LH & RH	NP	
- 1	AN3H6A	. BOLT/PROPELLER CABLE/	2	
- 2	100951X040ZL	. WASHER	2	
- 3	FK34-14M	. END, ROD	2	
- 4	AN960-10	. WASHER	2	
- 5	NAS559-1	. LOCK, KEY TYPE	2	
- 6	NAS509-4	. NUT	2	
- 7	RA1039C	. CLIP	2	
		. /ATTACHING PARTS/		
- 8	130909B32	. BOLT	1	
- 9	AN960-416L	. WASHER	1	
- 10	130909N32	. NUT	1	
		-----★-----		
- 11	114-940023-7	. BRACKET	2	
		. /ATTACHING PARTS/		
- 12	130909B15	. BOLT	3	
- 13	AN960-10L	. WASHER	3	
- 14	130909N29	. NUT	3	
		-----★-----		
- 15	MS21919WH14	. CLAMP	2	
		. /ATTACHING PARTS/		
- 16	MS35207-263	. SCREW	1	
- 17	AN960-10L	. WASHER	1	
- 18	130909N29	. NUT	1	
		-----★-----		
- 19	MS9592-020	. BRACKET	2	
- 20	MS21919WH6	. CLAMP	2	
		. /ATTACHING PARTS/		
- 21	MS35207-263	. SCREW	1	
- 22	AN960-10L	. WASHER	1	
- 23	130909N29	. NUT	1	
		-----★-----		
- 24	AN743-12	. BRACKET	2	
		. /ATTACHING PARTS/		
- 25	130909B15	. BOLT	1	
- 26	AN960-10L	. WASHER	1	
- 27	130909N29	. NUT	1	
		-----★-----		
- 28	AN737W30	. CLAMP	4	
- 29	131545SG7-0190	. FIRESLEEVE	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

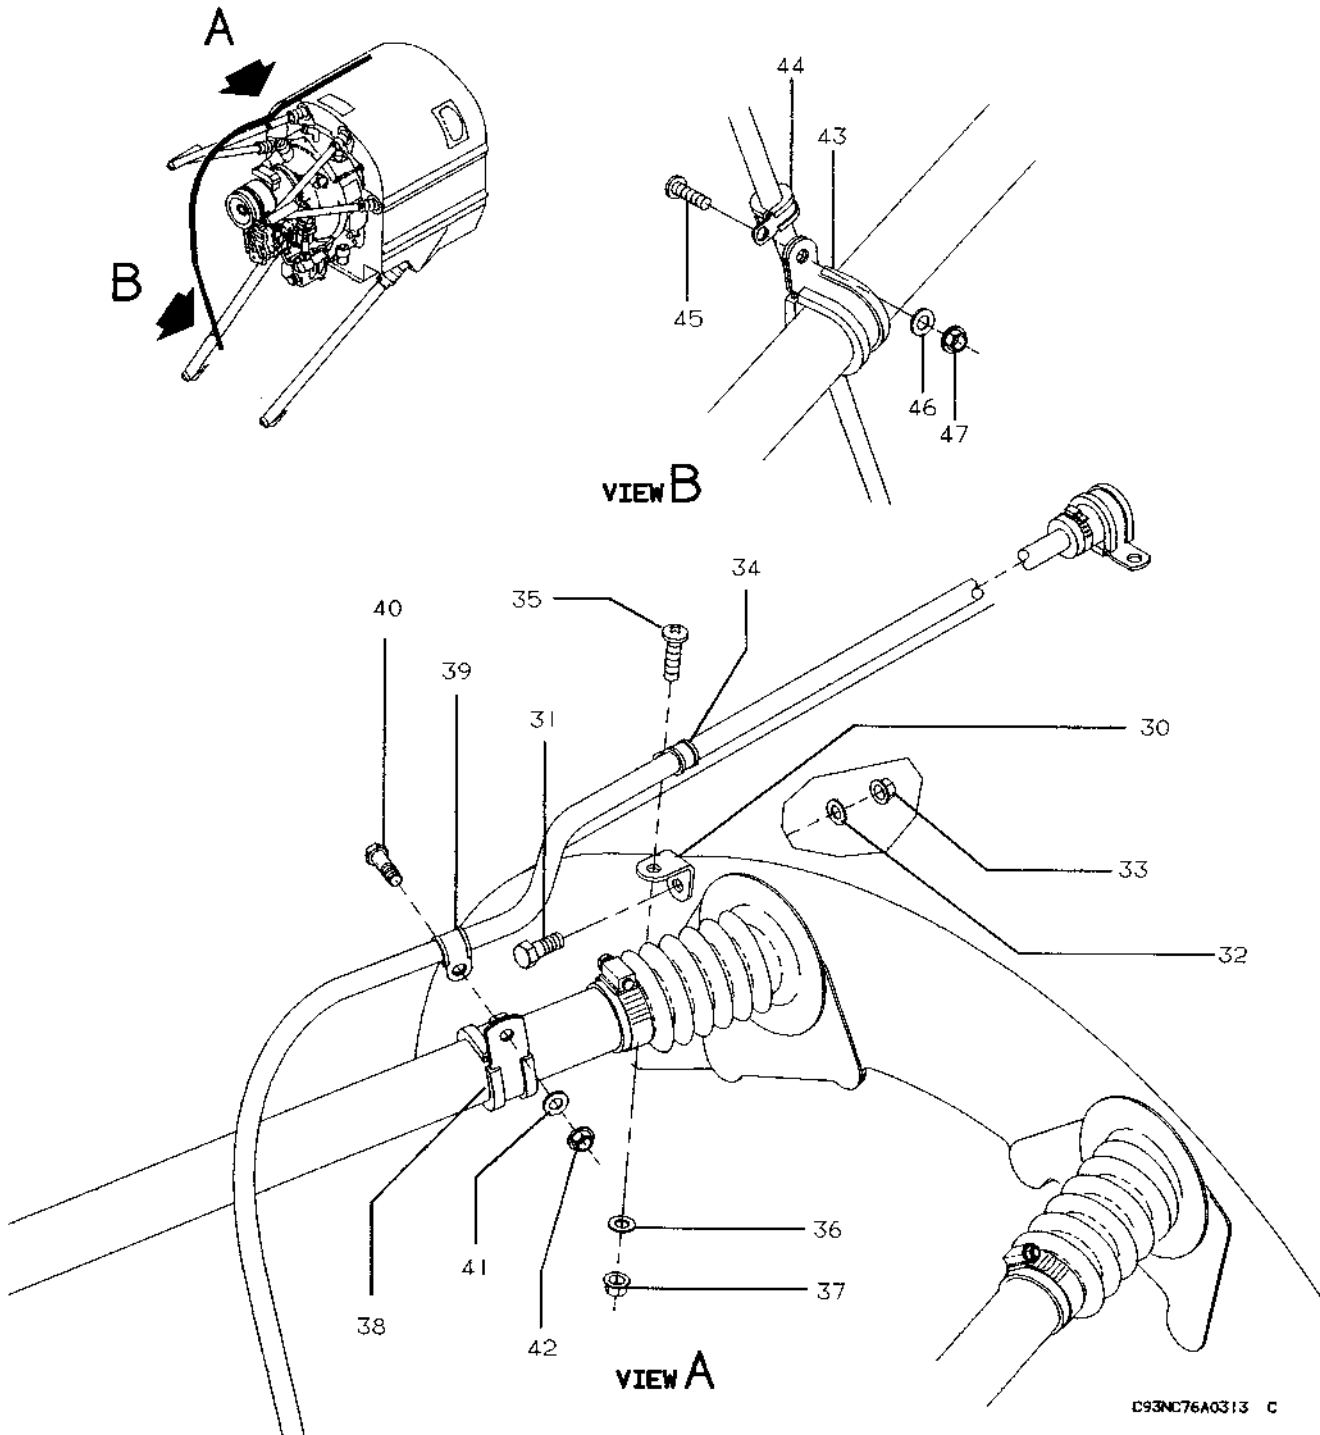


C93NC76A0313 C

FIGURE 10-00.ENGINE CONTROLS
/SHEET 2 OF 9 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 -30	AN743-12	. BRACKET..... /ATTACHING PARTS/	2	
-31	130909B15	. BOLT.....	1	
-32	AN960-10L	. WASHER.....	1	
-33	130909N29	. NUT..... ★	1	
-34	MS21919WH7	. CLAMP..... /ATTACHING PARTS/	2	
-35	MS35207-263	. SCREW.....	1	
-36	AN960-10L	. WASHER.....	1	
-37	130909N29	. NUT..... ★	1	
-38	MS21919WH17	. CLAMP, LH.....	1	
-39	MS21919WH6	. CLAMP, LH..... /ATTACHING PARTS/	1	
-40	MS35207-263	. SCREW.....	1	
-41	AN960-10L	. WASHER.....	1	
-42	130909N29	. NUT..... ★	1	
	R MS21919WH21	. CLAMP, RH.....	1	
	MS21919WH6	. CLAMP, RH..... /ATTACHING PARTS/	1	
	MS35207-263	. SCREW.....	1	
	AN960-10L	. WASHER.....	1	
	130909N29	. NUT..... ★	1	
-43	R MS21919WH21	. CLAMP, LH.....	1	
-44	MS21919WH7	. CLAMP, LH..... /ATTACHING PARTS/	1	
-45	MS35207-263	. SCREW.....	1	
-46	AN960-10L	. WASHER.....	1	
-47	130909N29	. NUT..... ★	1	
	R MS21919WH21	. CLAMP, RH.....	2	
	R MS21919WH6	. CLAMP, RH..... /ATTACHING PARTS/	2	
	MS35207-263	. SCREW.....	1	
	AN960-10L	. WASHER.....	1	
	130909N29	. NUT..... ★	1	
	500015-2	. WRAP, SPIRAL.....	AR	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

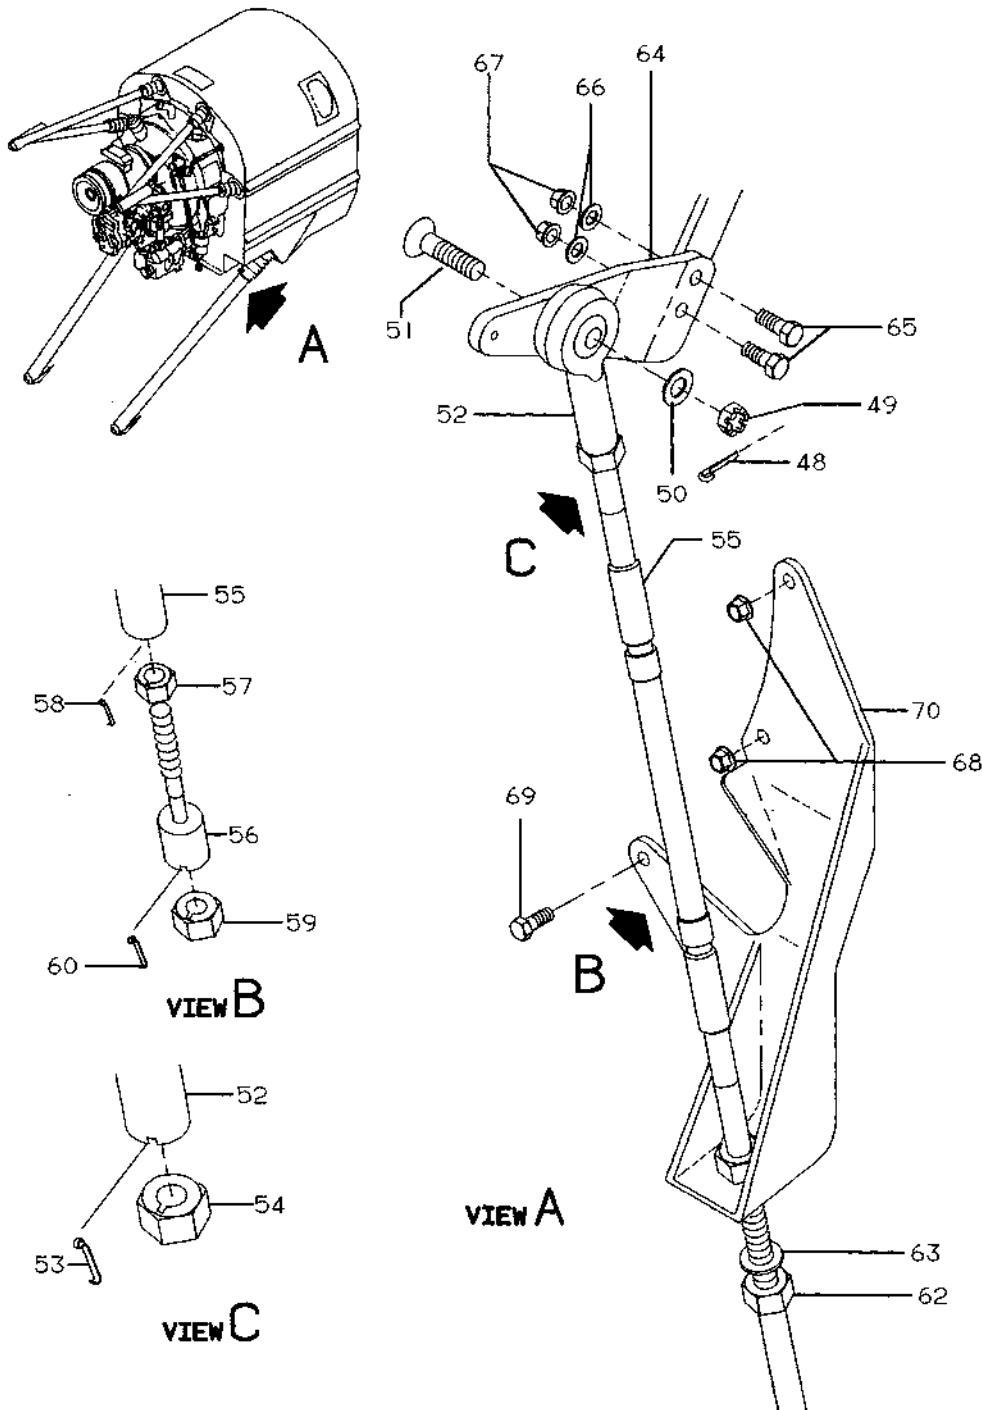


C93NC76A0314 C

FIGURE 10-00.ENGINE CONTROLS
/SHEET 3 OF 9 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 - 48	MS24665-132	. PIN, COTTER/POWER CABLE/	2	
- 49	130909N15	. NUT	2	
- 50	100951X040ZL	. WASHER	2	
- 51	NAS1203-9D	. SCREW	2	
- 52	FK34-14M	. END, ROD	2	
- 53	NAS559-1	. LOCK, KEY TYPE	2	
- 54	NAS509-4	. NUT	2	
	122-940031-1	. ADAPTER ASSY	2	
- 55	122-940031-7	. . EXTENSION	1	
- 56	C80074-1	. . CONNECTOR, BALL JOINT	1	
- 57	NAS509-4	. . NUT	1	
- 58	NAS559-1	. . LOCK, KEY TYPE	1	
- 59	NAS509-4	. NUT	2	
- 60	NAS559-1	. LOCK, KEY TYPE	2	
- 61		. DELETED		
- 62	NAS509-7	. NUT	4	
- 63	AN960-716L	. WASHER	4	
- 64	122-940029-1	. LEVER, EXTENSION	2	
		. /ATTACHING PARTS/		
- 65	130909B15	. BOLT	2	
- 66	AN960-10L	. WASHER	2	
- 67	MS21043-3	. NUT	2	
		★		
- 68 R	130909N29	. NUT	4	
- 69 R	AN3H15A	. BOLT	2	
- 70 R	122-940028-1	. BRACKET ASSY, POWER CONTROL/WELDED/	NP	
		. /ORDER 122-940028-15 FOR SPARES/		
R	122-940028-15	. BRACKET ASSY, POWER CONTROL/WELDED/	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

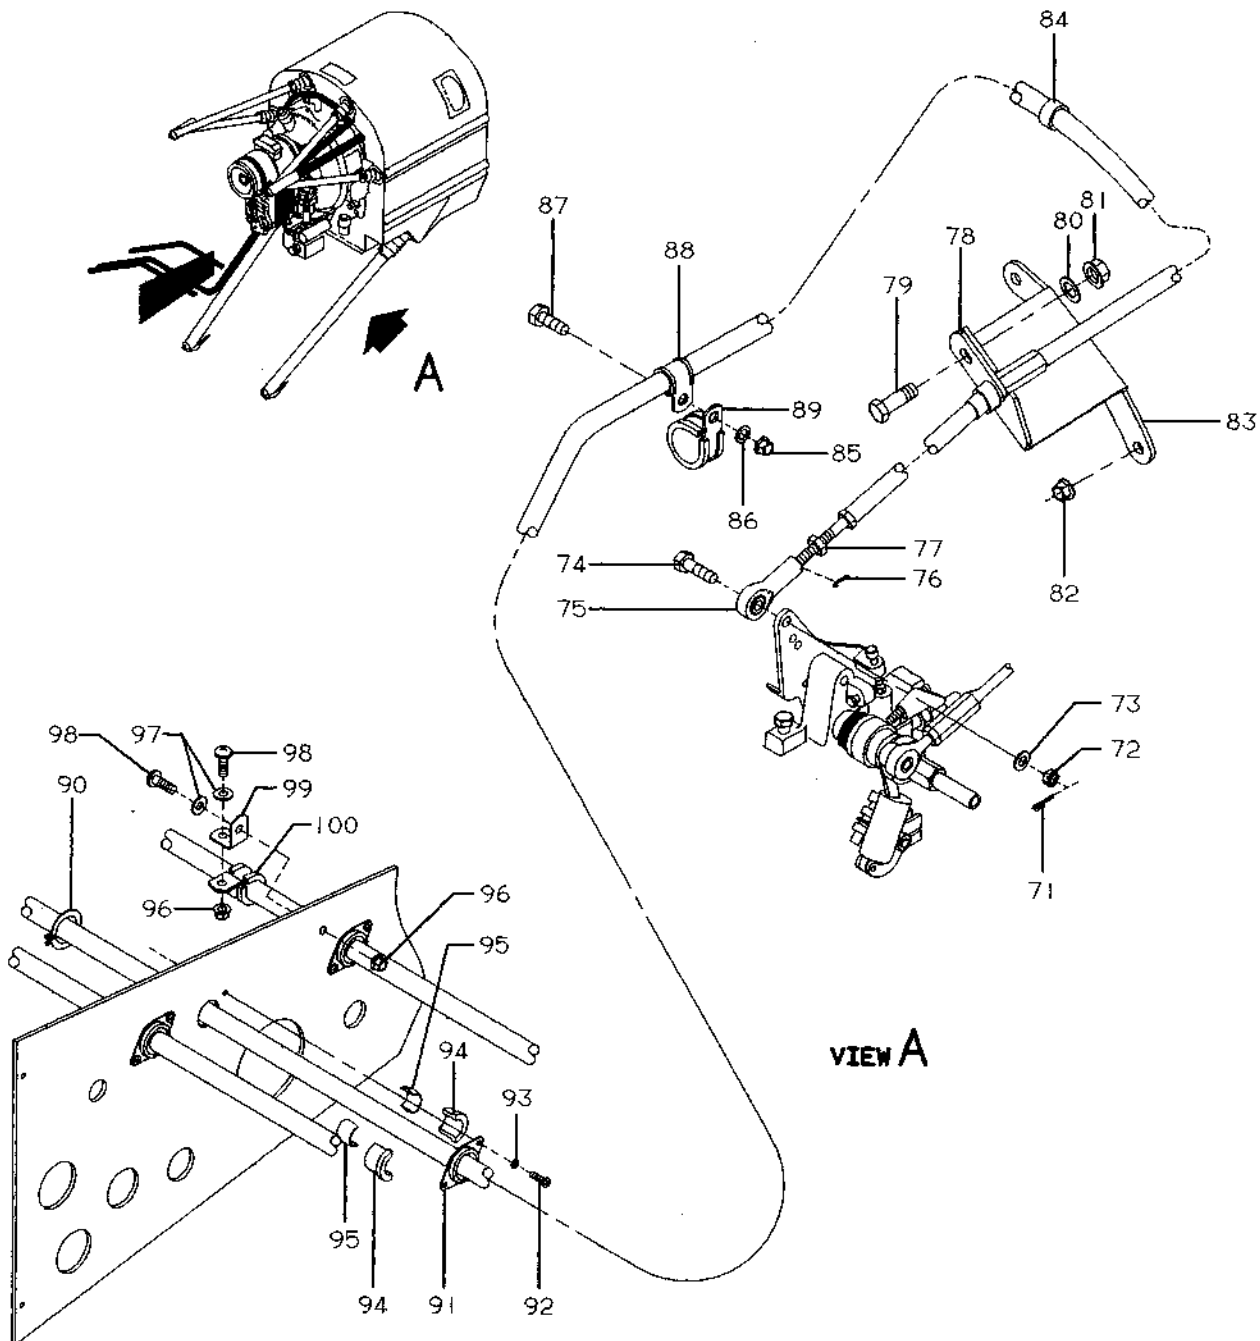

C93NC76A0315 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	-71	MS24665-132 . PIN, COTTER/CONDITION CABLE/.....	2	
	-72	130909N15 . NUT	2	
	-73	100951X040ZL . WASHER	2	
	-74	130909B18 . BOLT	2	
	-75	FK34-14M . END, ROD	2	
	-76	NAS559-1 . LOCK, KEY TYPE.....	2	
	-77	NAS509-4 . NUT	2	
	-78	RA1039C . CLIP.....	2	
		/ATTACHING PARTS/		
	-79	130909B32 . BOLT	1	
	-80	AN960-416L . WASHER	1	
	-81	130909N32 . NUT	1	
		---★---		
	-82	130909N29 . NUT	4	
	-83	114-940024-1 . BRACKET.....	2	
	-84	MS21919WH7 . CLAMP, LH	2	
	R	MS21919WH4 . CLAMP, RH	1	
	-85	130909N29 . NUT	4	
	-86	AN960-10L . WASHER	4	
	-87	MS35207-263 . SCREW.....	4	
	-88	MS21919WH7 . CLAMP, LH & RH PROP & CONDITION CABLES.....	4	
	R	MS21919WH21 . CLAMP, LH & RH ENGINE MOUNT	4	
		130909N29 . NUT	1	
		AN960-10L . WASHER	1	
		MS35207-263 . SCREW.....	1	
		MS21919WH7 . CLAMP, LH PROPELLER & CONDITION CABLES.....	2	
		MS21919WH8 . CLAMP, LH PROPELLER & CONDITION CABLES.....	1	
	-90	MS16624-1087 . RING, GROMMET/PROPELLER & CONDITION CABLES/	4	
	-91	112436-6 . RETAINER, GROMMET	4	
		/ATTACHING PARTS/		
	-92	MS35206-228 . SCREW.....	2	
	-93	AN960-6L . WASHER	2	
		---★---		
	-94	112412 . GROMMET	8	
	-95	112413-4 . BALL, HALF	8	
		MS16624-1087 . RING, GROMMET/POWER CABLES/	2	
		112436-6 . RETAINER, GROMMET	2	
		/ATTACHING PARTS/		
		MS35206-228 . SCREW.....	2	
		AN960-6L . WASHER	2	
		---★---		
		112412 . GROMMET	4	
		112413-8 . BALL, HALF	4	
	-96	130909N29 . NUT	4	
	-97	AN960-10L . WASHER	4	
	-98	MS35207-263 . SCREW.....	4	
	-99	AN743-12 . BRACKET	2	
	-100	MS21919WH7 . CLAMP, POWER CABLES/LWR NACELLE FIREWALL/.....	2	

ILLUSTRATED PARTS CATALOG



/SHEET 5 OF 9 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	-101	130909N28	. NUT	2	
	-102	NAS620-8L	. WASHER	2	
	-103	MS35206-243	. SCREW	2	
	-104	HP7N	. CLAMP, LH & RH AFT MAIN SPAR, AFT WING	4	
	-105	130909N29	. NUT	2	
	-106	AN960-10L	. WASHER	2	
	-107	MS9592-012	. BRACKET	2	
	-108	130909N28	. NUT	2	
	-109	NAS620-8L	. WASHER	2	
	-110	MS35206-242	. SCREW	2	
	-111	HP7N	. CLAMP, LH & RH AFT MAIN SPAR, AFT WING	2	
	-112	130909N29	. NUT	2	
	-113	AN960-10L	. WASHER	2	
	-114	MS9592-008	. BRACKET	2	
	-115	130909N28	. NUT	2	
	-116	NAS620-8L	. WASHER	2	
	-117	MS35206-244	. SCREW	2	
	-118 R	HP7N	. CLAMP, LH & RH/FS 400.26/	6	
	-119	130909N29	. NUT	4	
	-120	AN960-10L	. WASHER	4	
	-121	AN960-10	. WASHER/INSTALL ONE EACH AN960-10 & AN960-10L BETWEEN BRACKET & STUD FACE/	8	
	-122	132151-3-4	. STUD	4	
	-123	122-940000-73	. BRACKET, LH	1	
		122-940000-74	. BRACKET, RH	1	
	-124	130909N28	. NUT	2	
	-125	NAS620-8L	. WASHER	2	
	-126	MS35206-243	. SCREW	2	
	-127	HP7N	. CLAMP, LH & RH CTR MAIN SPAR, AFT WING	4	
	-128	130909N29	. NUT	2	
	-129	AN960-10L	. WASHER	2	
	-130	MS9592-012	. BRACKET	2	
	-131	130909N28	. NUT	2	
	-132	NAS620-8L	. WASHER	2	
	-133	MS35206-242	. SCREW	2	
	-134	HP7N	. CLAMP, LH & RH CTR MAIN SPAR, AFT WING	2	
	-135	130909N29	. NUT	2	
	-136	AN960-10L	. WASHER	2	
	-137	AN743-12	. BRACKET	2	

ILLUSTRATED PARTS CATALOG





/SHEET 6 OF 9 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC	UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10	-138	130909N28	. NUT	2	
	-139	NAS620-8L	. WASHER	2	
	-140	NAS43DD3-23	. SPACER	2	
	-141	MS35206-250	. SCREW	2	
	-142	HP7N	. CLAMP, LH & RH	6	
	-143	130909N28	. NUT	2	
	-144	NAS620-8L	. WASHER	2	
	-145	MS35206-243	. SCREW	2	
	-146	HP7N	. CLAMP, LH & RH FWD MAIN SPAR, AFT WING	4	
	-147	130909N29	. NUT	2	
	-148	AN960-10L	. WASHER	2	
	-149	MS9592-012	. BRACKET	2	
	-150	130909N28	. NUT	2	
	-151	NAS620-8L	. WASHER	2	
	-152	MS35206-242	. SCREW	2	
	-153	HP7N	. CLAMP, LH & RH FWD MAIN SPAR, AFT WING	2	
	-154	130909N29	. NUT	2	
	-155	AN960-10L	. WASHER	2	
	-156	MS9592-008	. BRACKET	2	
	-157	130909N29	. NUT	3	
	-158	AN960-10L	. WASHER	3	
	-159	132151-3-4	. STUD/2 LH, 1 RH/	3	
	-160	R HP7N	. CLAMP, LH & RH/FS 347.50/	4	
		130909N29	. NUT	1	
		AN960-10L	. WASHER	1	
		MS35206-263	. SCREW	1	
		HP7N	. CLAMP, LH POWER CABLE	1	
	-161	130909N29	. NUT	2	
	-162	AN960-10L	. WASHER	2	
	-163	132151-3-4	. STUD	2	
	-164	HP7N	. CLAMP, LH & RH PROPELLER CABLES/FS 338.06/	2	
	-165	130909N29	. NUT	2	
	-166	AN960-10L	. WASHER	2	
	-167	132151-3-4	. STUD	2	
	-168	782-1E8	. CLAMP, LH & RH CONDITION CABLES/FS 336.58/	2	
		130909N29	. NUT	2	
		AN960-10L	. WASHER	2	
		NAS43DD3-40	. SPACER	2	
		132131-3-8	. STUD	2	
	R	HP7N	. CLAMP, LH & RH POWER CABLE/FS 336.50/	2	
	R	130909N29	. NUT	2	
	R	AN960-10L	. WASHER	2	
	R	NAS43DD3-61	. SPACER	2	
	R	132131-14	. STUD	2	
		HP7N	. CLAMP, LH & RH CONDITION CABLES/FS 309.50/	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

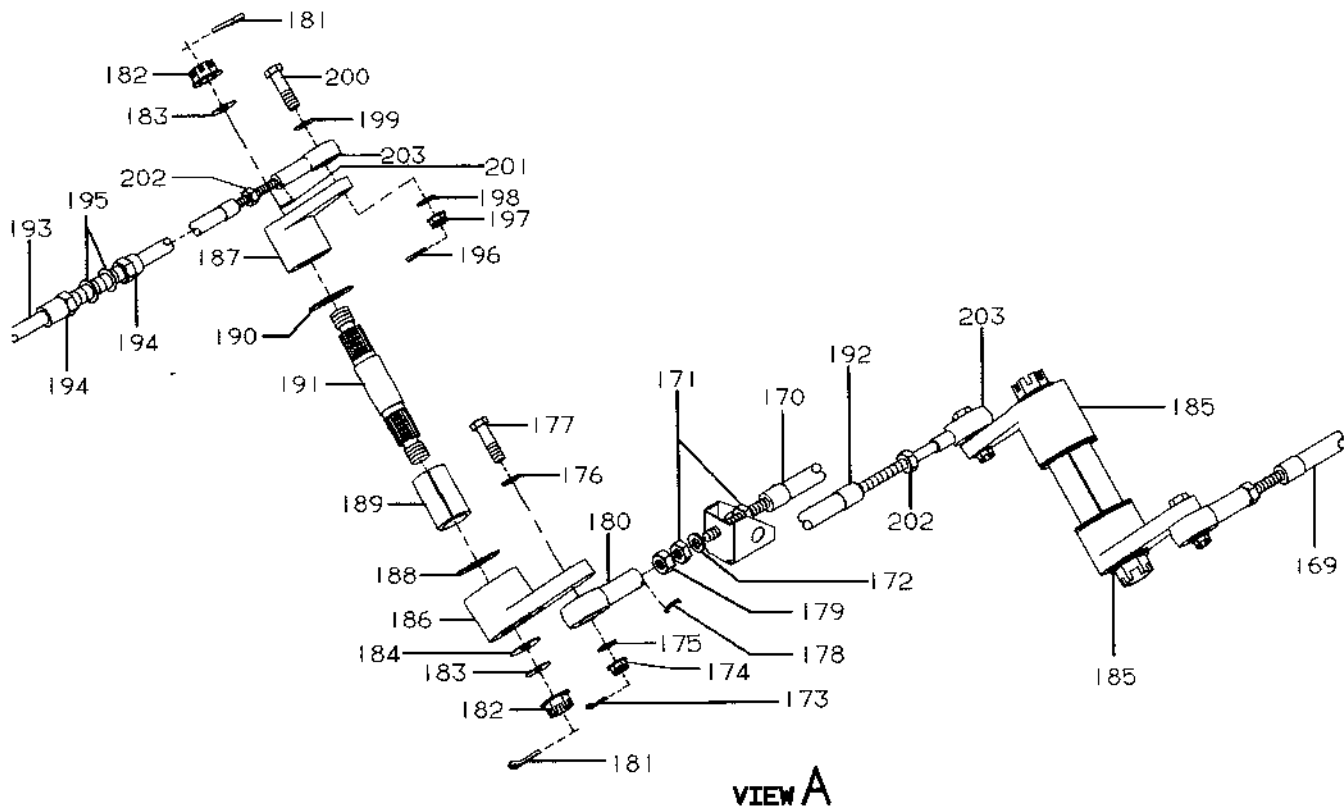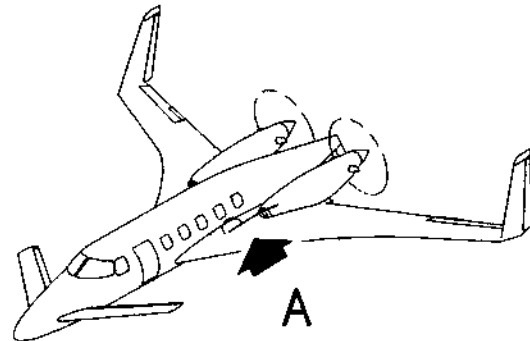

C93NC76A0318 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 -169	122-389023-33	. CABLE ASSY, LH PROPELLER, AFT.....	1	
	122-389023-35	. CABLE ASSY, RH PROPELLER, AFT.....	1	
-170	122-389023-37	. CABLE ASSY, LH & RH CONDITION, AFT..... /ATTACHING PARTS/	2	
-171 R	NAS509-7	. NUT.....	2	
-172 R	AN960-716L	. WASHER.....	2	
-173	MS24665-132	. PIN, COTTER.....	1	
-174	130909N15	. NUT.....	1	
-175	AN960-10L	. WASHER.....	1	
-176	100951X040ZL	. WASHER.....	1	
-177	130909B209	. BOLT.....	1	
		★-----		
-178	NAS559-1	. LOCK, KEY TYPE.....	4	
-179	NAS509-4	. NUT.....	4	
-180	FK34-14M	. END, ROD.....	4	
-181	MS24665-134	. PIN, COTTER.....	8	
-182	AN310D5	. NUT.....	8	
-183	AN960-516	. WASHER.....	8	
-184	MS20002C7	. WASHER.....	4	
-185	122-940002-7	. LEVER, LH & RH PROPELLER CABLE.....	4	
-186	122-940002-7	. LEVER, LH & RH CONDITION CABLE.....	2	
-187	122-940002-9	. LEVER, LH & RH CONDITION CABLE.....	2	
-188	100951B010XM	. WASHER/SHIM BETWEEN LEVER & 122-430075..... INSERT TO MAINTAIN .005-.015 GAP/	AR	
-189	09DU06	. BUSHING.....	8	
-190	G09DU	. WASHER/INSTALL ON INSIDE OF FUSELAGE ONLY..... WITH TEFLON FACING AWAY FROM LEVER/	4	
-191	122-940003-3	. JOURNAL.....	4	
-192	122-389021-23	. CABLE ASSY, LH & RH PROPELLER, FWD.....	2	
-193	122-389022-1	. CABLE ASSY, LH & RH CONDITION, FWD..... /ATTACHING PARTS/	2	
-194	NAS509-7	. NUT.....	4	
-195	AN960-716L	. WASHER.....	4	
-196	MS24665-132	. PIN, COTTER.....	1	
-197	130909N15	. NUT.....	1	
-198	AN960-10L	. WASHER.....	1	
-199	100951X040ZL	. WASHER.....	1	
-200	130909B209	. BOLT.....	1	
		★-----		
-201	NAS559-1	. LOCK, KEY TYPE.....	4	
-202	NAS509-4	. NUT.....	4	
-203	FK34-14M	. END, ROD.....	4	

ILLUSTRATED PARTS CATALOG

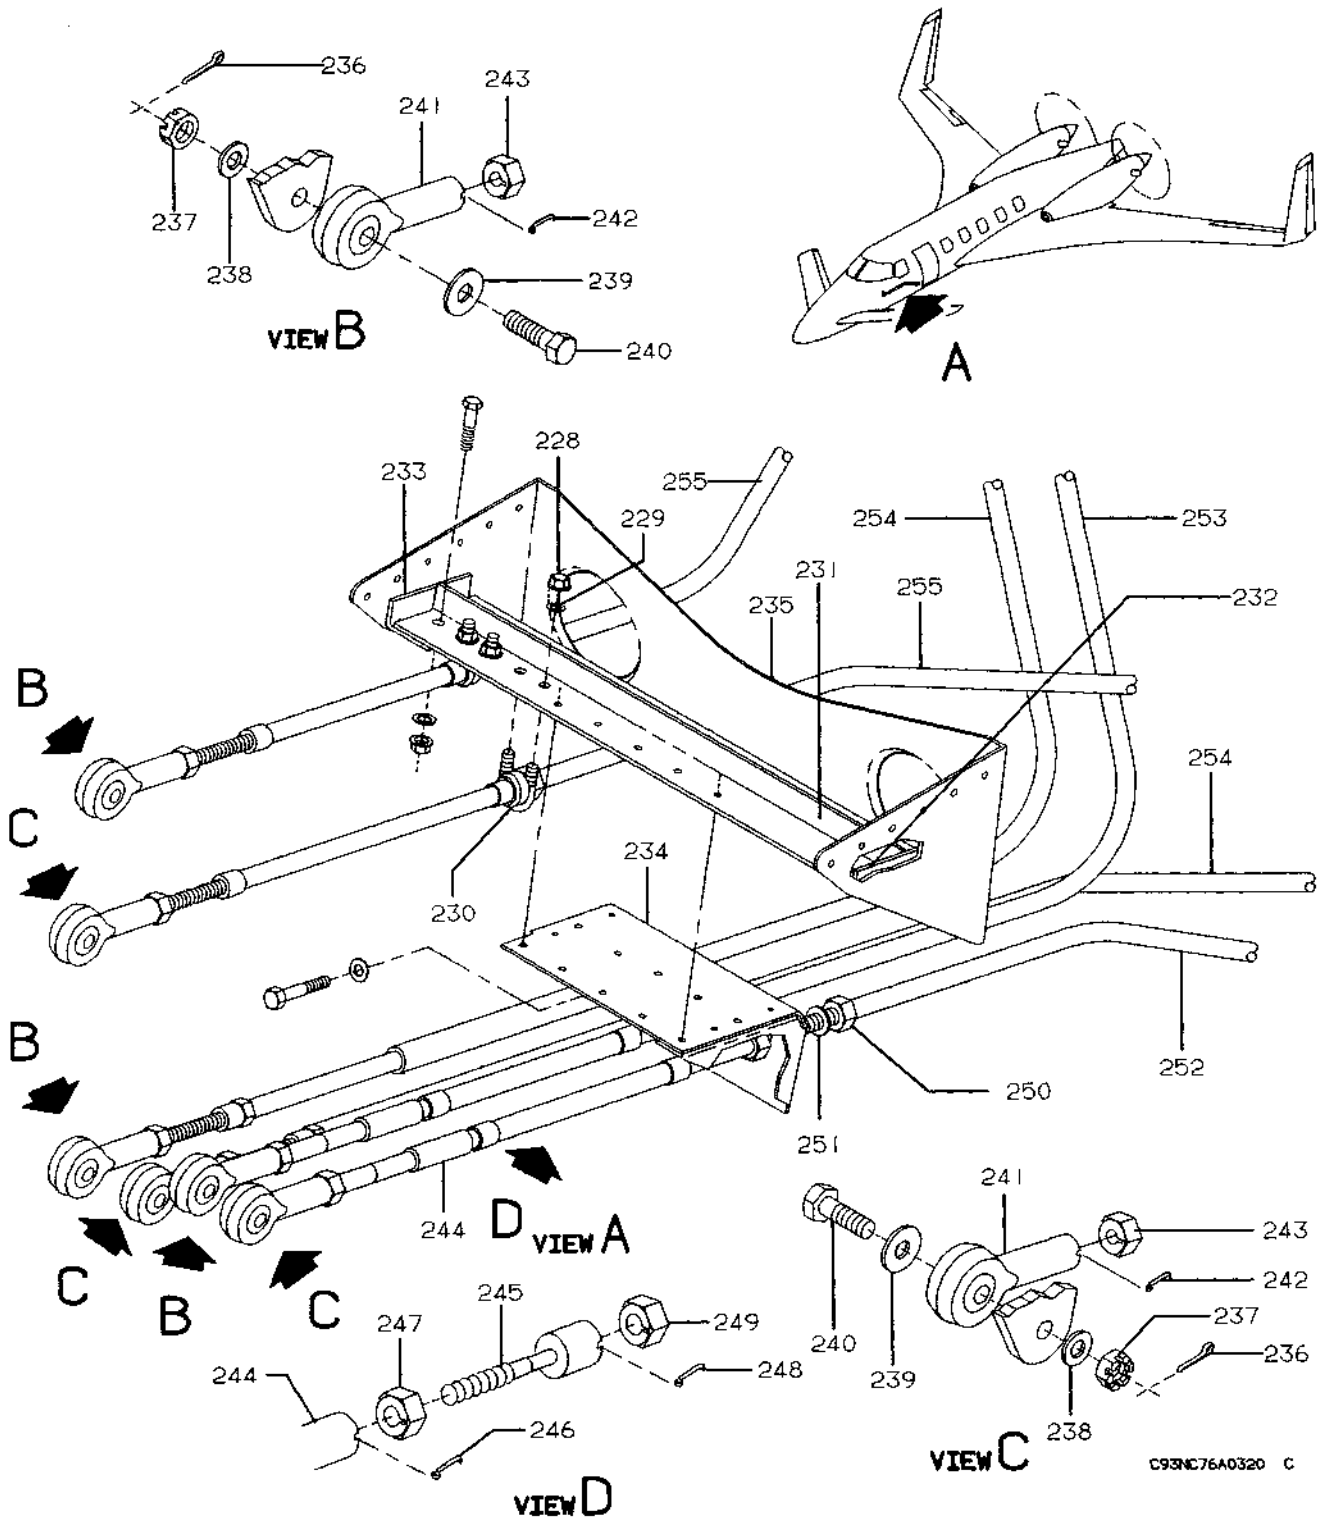


FIGURE 10-00.ENGINE CONTROLS
/SHEET 8 OF 9 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 -204	130909N29	. NUT	1	
-205	AN960-10L	. WASHER	1	
-206	MS35207-263	. SCREW	1	
-207	MS21919WH8	. CLAMP, LH POWER CABLE/FS 287.00/	1	
-208	MS21919WH4	. CLAMP, LH/HYDRAULIC LINE/FS 287.00/	1	
	130909N28	. NUT	1	
	NAS620-8L	. WASHER	1	
	MS35206-242	. SCREW	1	
	HP7N	. CLAMP, RH POWER CABLE/FS 287.00/	1	
	130909N29	. NUT	1	
	AN960-10L	. WASHER	1	
	132131-3-4	. STUD	1	
	AN743-12	. BRACKET	1	
-209	130909N28	. NUT	2	
-210	NAS620-8L	. WASHER	2	
-211	NAS43DD3-61	. SPACER	2	
-212	132131-08-14	. STUD	2	
-213	HP7N	. CLAMP, PROP & CONDITION CABLES/FS 270.00/	4	
-214	130909N28	. NUT	14	
-215	NAS620-8L	. WASHER	14	
-216	NAS43DD3-61	. SPACER	14	
-217	132131-08-14	. STUD	14	
-218	HP7N	. CLAMP, LH & RH/FS 256.80 THRU FS 175.00/	42	
	130909N28	. NUT	1	
	NAS620-8L	. WASHER	1	
	MS35206-243	. SCREW	1	
	R HP7N	. CLAMP, RH PROPELLER & POWER CABLES	2	
	130909N28	. NUT	1	
	NAS620-8L	. WASHER	1	
	MS35206-242	. SCREW	1	
	R HP7N	. CLAMP, RH CONDITION CABLE	1	
	R 130909N29	. NUT	2	
	R AN960-10L	. WASHER	2	
	R 132131-3-4	. STUD	2	
	R AN743-12	. BRACKET	2	
-219	130909N29	. NUT	1	
-220	AN960-10L	. WASHER	1	
-221	MS35207-263	. SCREW	1	
-222	MS21919WH8	. CLAMP, LH PROPELLER & POWER CABLES	2	
-223	130909N29	. NUT	1	
-224	AN960-10L	. WASHER	1	
-225	MS35207-263	. SCREW	1	
-226	MS21919WH8	. CLAMP, LH PROPELLER & CONDITION CABLES	2	
-227	MS21919WH4	. CLAMP, LH/HYDRAULIC LINE/	1	
	130909N29	. NUT	1	
	AN960-10L	. WASHER	1	
	NAS43DD3-61	. SPACER	1	
	132131-3-14	. STUD	1	
	HP7N	. CLAMP, LH CONDITION & RH POWER CABLES	2	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG



C93NC76A0320 C

FIGURE 10-00.ENGINE CONTROLS
/SHEET 9 OF 9 SHEETS/

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-10 -228	130909N29	. NUT	4	
-229	AN960-10L	. WASHER	4	
-230	50-944073-15	. U-BOLT, LH & RH CONDITION CABLES	2	
	122-940030-15	. BRACKET ASSY, ENGINE CONTROL	1	
-231	122-940030-13	. . SUPPORT	1	
-232	122-940030-9	. . ANGLE, LH	1	
-233	122-940030-11	. . ANGLE, RH	1	
-234	122-940030-19	. . BRACKET ASSY	1	
-235	122-940030-17	. . SUPPORT	1	
-236	MS24685-132	. PIN, COTTER	6	
-237	130909N15	. NUT	6	
-238	AN960-10L	. WASHER	6	
-239	100951X040ZL	. WASHER	6	
-240	130909B18	. BOLT	6	
-241	FK34-14M	. END, ROD	6	
-242	NAS559-1	. LOCK, KEY TYPE	6	
-243	NAS509-4	. NUT	6	
	122-940031-3	. ADAPTER ASSY, LH & RH POWER CABLES	2	
-244	122-940031-9	. . EXTENSION	1	
-245	C80074-1	. . CONNECTOR, BALL JOINT	1	
-246	NAS559-1	. . LOCK, KEY TYPE	1	
-247	NAS509-4	. . NUT	1	
-248	NAS559-1	. . LOCK, KEY TYPE	2	
-249	NAS509-4	. . NUT	2	
-250	NAS509-7	. NUT, LOCK/LH & RH POWER CABLES/	4	
-251	AN960-716L	. WASHER	4	
	122-380077-1	. CABLE HEATER ASSY, LH AFT POWER CABLE	1	
		. /ATTACHING PARTS/		
R	MS3367-1-9	. STRAP, TIE	4	
		---★---		
	122-380077-3	. CABLE HEATER ASSY, RH AFT POWER CABLE	1	
		. /ATTACHING PARTS/		
R	MS3367-1-9	. STRAP, TIE	4	
		---★---		
	122-380077-5	. CABLE HEATER ASSY, LH & RH FWD POWER CABLE	2	
		. /ATTACHING PARTS/		
R	MS3367-1-9	. STRAP, TIE	6	
		---★---		
-252	R 122-389041-1	. CABLE ASSY, LH POWER/ALTERNATE FOR	1	1
		122-389041-5/		
R	122-389041-5	. CABLE ASSY, LH POWER/ALTERNATE FOR	1	1
		122-389041-1/		
	122-389041-9	. CABLE ASSY, LH POWER/ALTERNATE FOR	1	2
		122-389041-13/		
	122-389041-13	. CABLE ASSY, LH POWER/ALTERNATE FOR	1	2
		122-389041-9/		
-253	R 122-389041-3	. CABLE ASSY, RH POWER/ALTERNATE FOR	1	1
		122-389041-7/		
R	122-389041-7	. CABLE ASSY, RH POWER/ALTERNATE FOR	1	1
		122-389041-3/		
	122-389041-11	. CABLE ASSY, RH POWER/ALTERNATE FOR	1	2
		122-389041-15/		
	122-389041-15	. CABLE ASSY, RH POWER/ALTERNATE FOR	1	2
		122-389041-11/		
	NAS509-10	. NUT, LOCK/LH & RH PROPELLER CABLES/	4	
	AN960-1016L	. WASHER	3	
	122-940030-23	. WASHER/RH PROPELLER CABLE ONLY, FWD SIDE/	1	
-254	R 122-389021-23	. CABLE ASSY, LH & RH PROPELLER, FWD	2	
-255	R 122-389022-1	. CABLE ASSY, LH & RH CONDITION, FWD	2	

CODES OF EFFECTIVITY


1 NC-4 THRU NC-35

2 NC-36 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

76-10-20
THROTTLE GO AROUND SWITCH

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

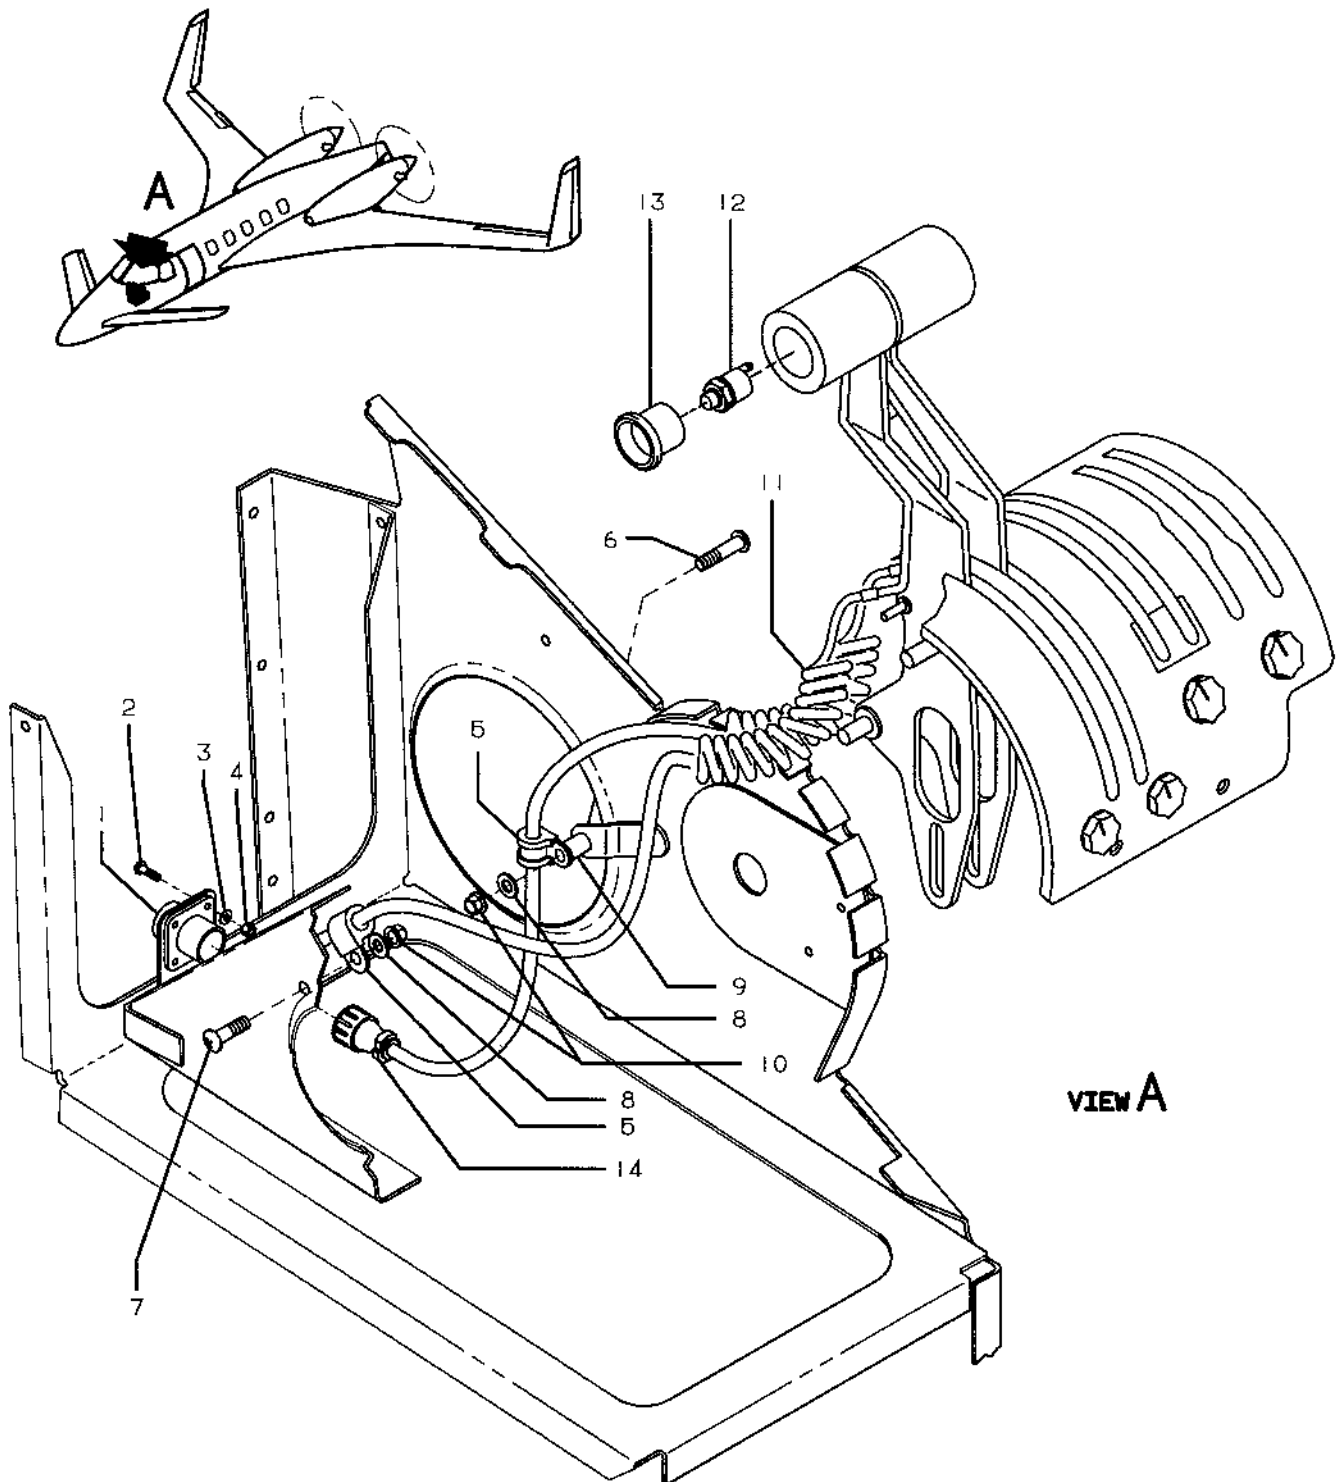

VIEW A

C93NC76A4420

FIGURE 10-20.THROTTLE GO AROUND SWITCH

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-20	122-522066-1	SWITCH INSTL, THROTTLE GO AROUND.....	NP	
- 1	205841-1	. RECEPTACLE.....	1	
		. /ATTACHING PARTS/.....		
- 2	MS35206-216	. SCREW.....	4	
- 3	AN960PD4	. WASHER.....	4	
- 4	MS21042L04	. NUT.....	4	
		-----★-----		
	205089-1	. PIN, CONTACT.....	8	
- 5	MS21122C2	. CLAMP.....	2	
		. /ATTACHING PARTS/.....		
- 6	MS35206-249	. SCREW.....	1	
- 7	MS35206-244	. SCREW.....	1	
- 8	AN960-8L	. WASHER.....	1	
- 9	NAS43DD3-40	. SPACER.....	1	
- 10	130909N28	. NUT.....	1	
		-----★-----		
- 11	122-382087-1	. CORD RETRACTILE.....	2	
	106242C43-00108	. TUBING, SHRINK.....	2	
- 12	P7-300014	. SWITCH, GO AROUND.....	2	
	AN565A6H3	. SCREW, SET.....	2	
- 13	122-522079-3	. ADAPTER, SWITCH.....	2	
- 14	206062-1	. BACKSHELL.....	1	


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 77-00-00 ENGINE INDICATING

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
77-00-00	1	02/25/94	LIST OF PAGES & TABLE OF CONTENTS
77-40-00	1	02/25/94	INTEGRATED ENGINE INSTRUMENT SYSTEMS.....
77-40-00	2	02/25/94	
77-40-00	3	02/25/94	
77-40-00	4	02/25/94	
77-40-00	5	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

77-40-00
INTEGRATED ENGINE INSTRUMENT SYSTEMS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

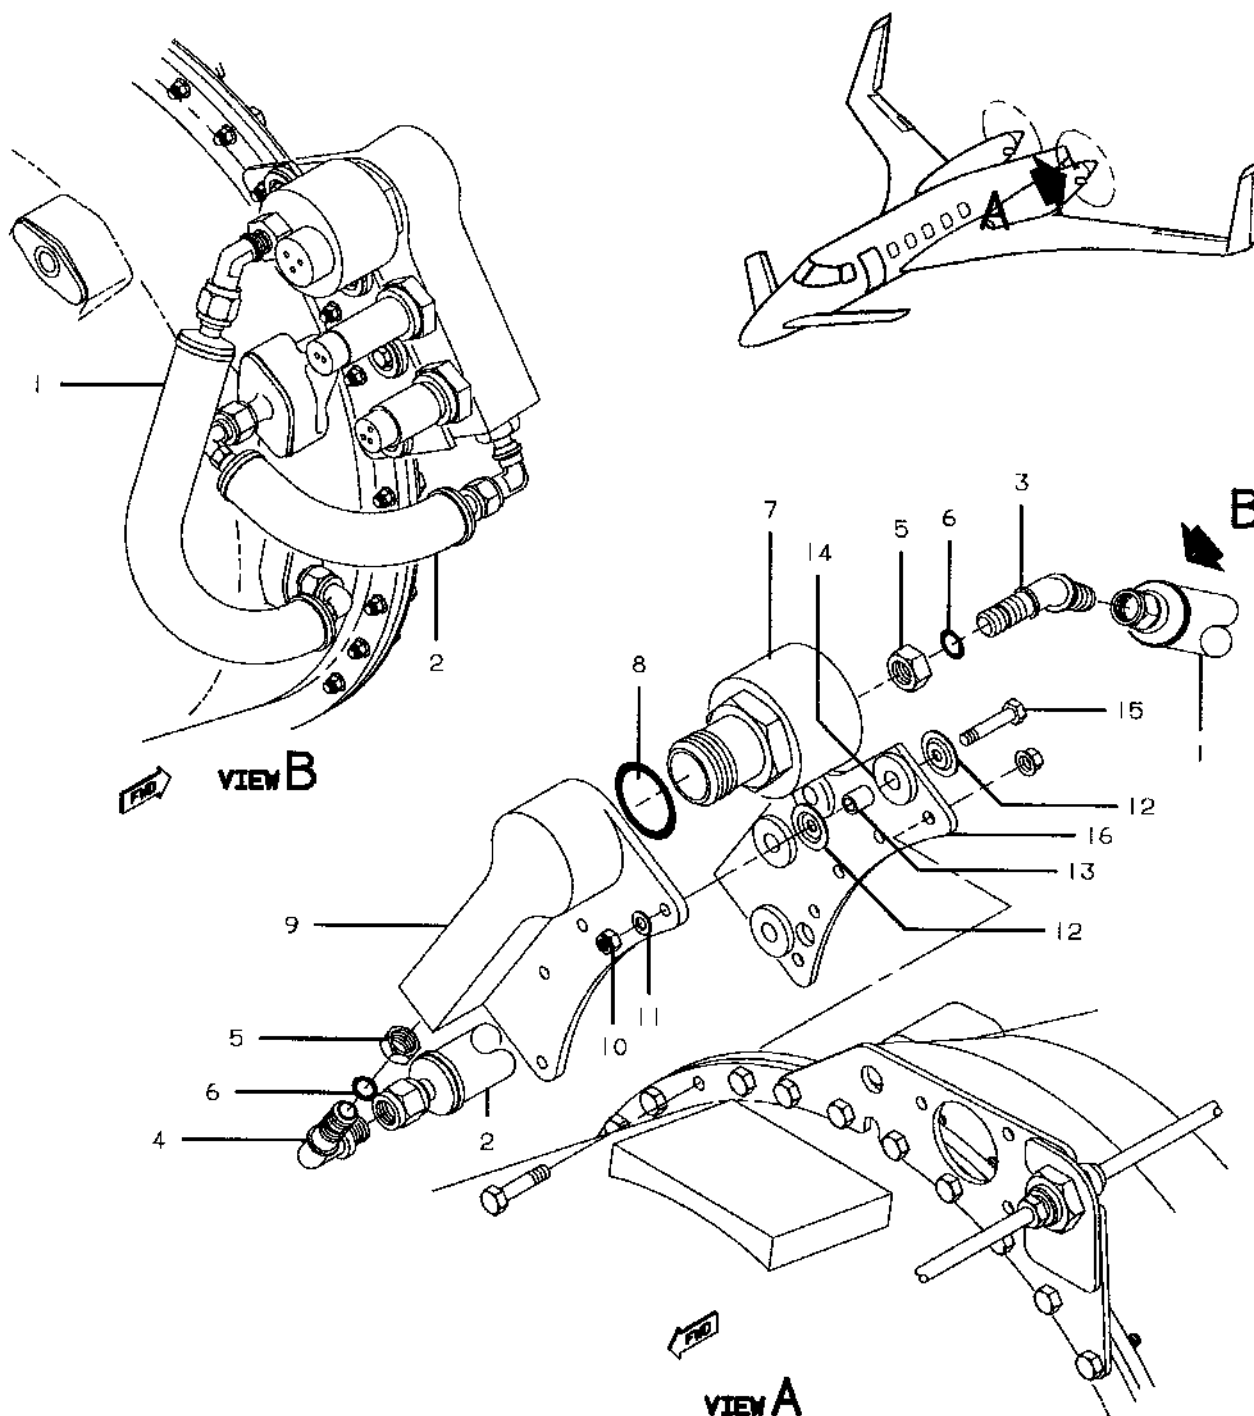


D94NC77A0060 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00	122-910064-1	POWER PLANT INST, LH.....	NP	1
	122-910064-15	POWER PLANT INST, LH.....	NP	2
	122-910064-3	POWER PLANT INST, RH.....	NP	1
	122-910084-17	POWER PLANT INST, RH.....	NP	2
- 1	33099F4-0094	. HOSE ASSY, REDUCTION GEAR STATIC PRESSURE.....	1	
- 2	33099F4-0062	. HOSE ASSY, TORQUEMETER PRESSURE.....	1	
- 3	AN837-4	. ELBOW /45 DEGREE/.....	1	
- 4	AN833-4	. ELBOW/90 DEGREE/.....	1	
- 5	AN924-4	. NUT, JAM.....	2	
- 6	M29561-012	. PACKING, PREFORMED.....	2	
- 7	122-389042-3	. TRANSDUCER, TORQUE/ALTERNATE FOR.....	1	
		122-389042-1/		
	122-389042-1	. TRANSDUCER, TORQUE/ALTERNATE FOR.....	1	
		122-389042-3/		
- 8	NAS1595-12	. PACKING, PREFORMED.....	1	
- 9	50-910471-3	. MANIFOLD.....	1	
		/ATTACHING PARTS/		
- 10	130909N29	. NUT.....	4	
- 11	AN960CL10L	. WASHER.....	8	
- 12	6001	. WASHER.....	8	
- 13	105740X-YY0310	. BUSHING.....	4	
- 14	50-389122	. GROMMET.....	4	
- 15	130909B19	. BOLT.....	4	
		★		
- 16	50-910489-3	. BRACKET, MANIFOLD SUPPORT/EXISTING ENGINE.....	1	
		BOLTS ARE USED TO ATTACH BRACKET/		

NOTE INDICATION OF ENGINE TORQUE IS DISPLAYED
ON A DISPLAY UNIT ON THE INSTRUMENT
PANEL AND IT IS LISTED IN CHAPTER 39.

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

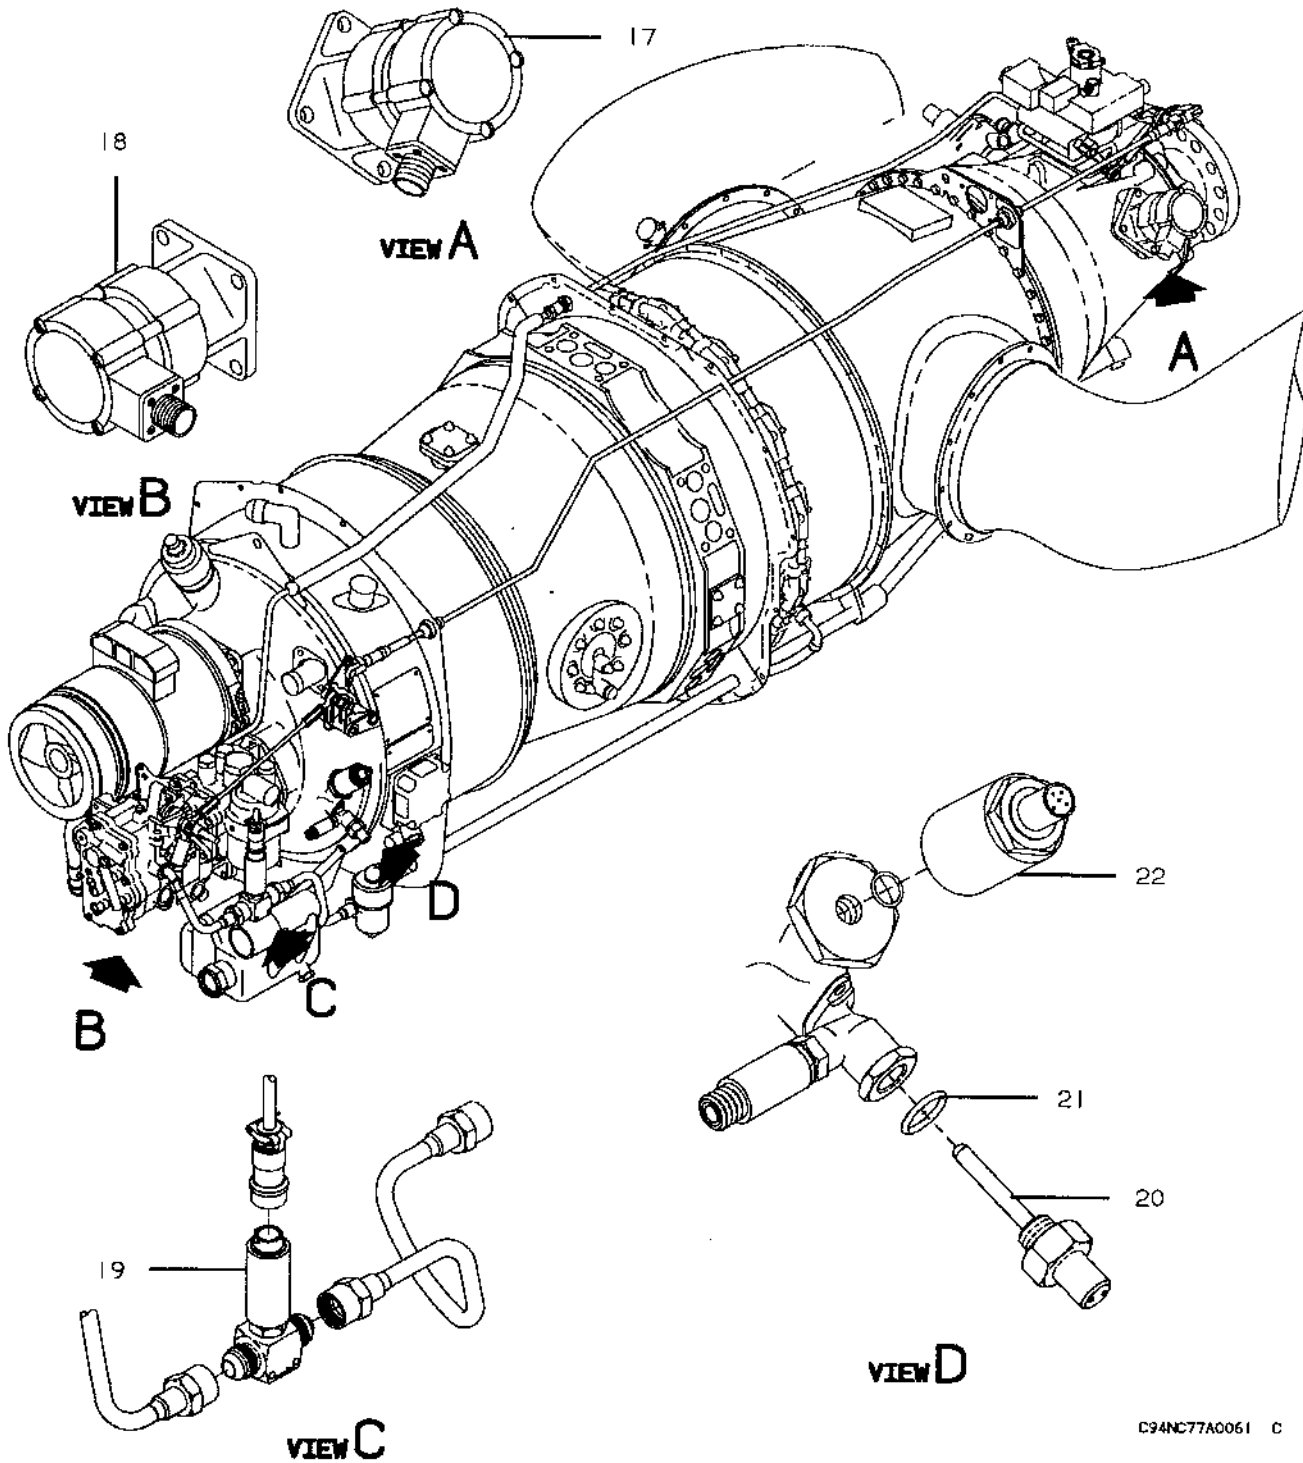

C94NC77A0061 C

**FIGURE 40-00. INTEGRATED ENGINE INSTRUMENT
 SYSTEMS/SHEET 2 OF 2 SHEETS/**

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40-00 - 17	50-389057-1 MS9134-01	. GENERATOR, PROP SHAFT TACH..... . GASKET, PROP SHAFT TACH GENERATOR/SUPPLIED WITH ENGINE/	1 1	
- 18	50-389057-1 MS9134-01	. GENERATOR, GAS GENERATOR TACH..... . GASKET, GAS GENERATOR TACH GENERATOR /SUPPLIED WITH ENGINE/	1 1	
NOTE INDICATION OF GAS GENERATOR AND PROP RPM ARE DISPLAYED ON A DISPLAY UNIT ON THE INSTRUMENT PANEL AND IT IS LISTED IN CHAPTER 39.				
- 19	122-389031-3	. TRANSMITTER, FUEL FLOWMETER.....	1	
- 20	MS28034-1	. BULB, OIL TEMPERATURE	1	
- 21	AN900-10	. . GASKET/SUPPLIED WITH TEMPERATURE BULB/	1	
- 22	101-389023-5	. TRANSMITTER, OIL PRESSURE.....	1	

CODES OF EFFECTIVITY

1 NC-4 THRU NC-28 2 NC-29 AND AFTER


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 78-00-00 EXHAUST

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
78-00-00	1	02/25/94	LIST OF PAGES & TABLE OF CONTENTS
78-10-00	1	02/25/94	ENGINE EXHAUST STACKS.....
78-10-00	2	02/25/94	
78-10-00	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

78-10-00
ENGINE EXHAUST STACKS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

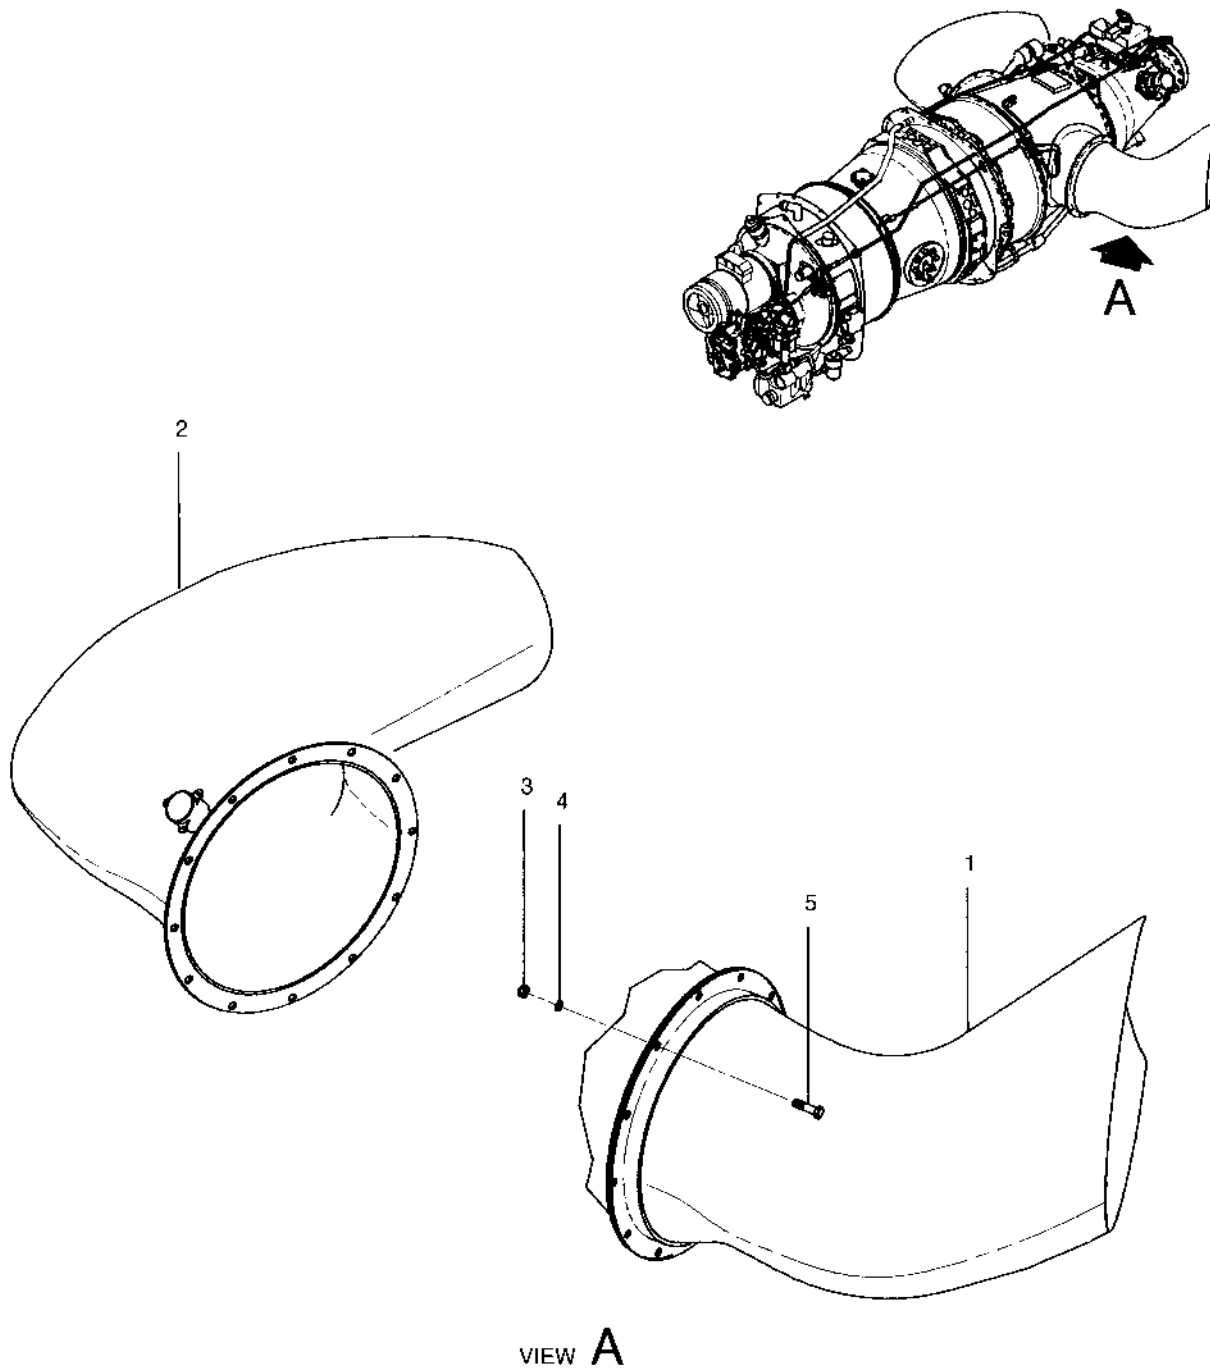

2000-245-1

FIGURE 10-00.ENGINE EXHAUST STACKS

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10-00	122-910064-1	POWER PLANT INSTL, LH	NP	1
	122-910064-15	POWER PLANT INSTL, LH	NP	2
	122-910064-3	POWER PLANT INSTL, RH	NP	1
	122-910064-17	POWER PLANT INSTL, RH	NP	2
- 1	122-950004-1	. STACK ASSY, LH OUTBD AND RH INBD EXHAUST	2	
- 2	122-950004-3	. STACK ASSY, RH OUTBD AND LH INBD EXHAUST	2	
		/ATTACHING PARTS/		
- 3	MS20500-428	NUT	12	
- 4	AN960C416	WASHER	12	
- 5	MS20034-1	BOLT	12	

---★---

CODES OF EFFECTIVITY

1 NC-4 THRU NC-28

2 NC-29 AND AFTER


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 79-00-00 OIL

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
79-00-00	1	02/25/94	LIST OF PAGES & TABLE OF CONTENTS
79-20-00	1	02/25/94	ENGINE OIL SYSTEM
79-20-00	2	02/25/94	
79-20-00	3	02/25/94	
79-20-00	4	02/25/94	
79-20-00	5	02/25/94	
79-20-10	1	02/25/94	OIL BREATHER LINE
79-20-10	2	02/25/94	
79-20-10	3	02/25/94	
79-30-00	1	02/25/94	OIL LEVEL INDICATOR.....
79-30-00	2	02/25/94	
79-30-00	3	02/25/94	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

79-20-00
ENGINE OIL SYSTEM

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

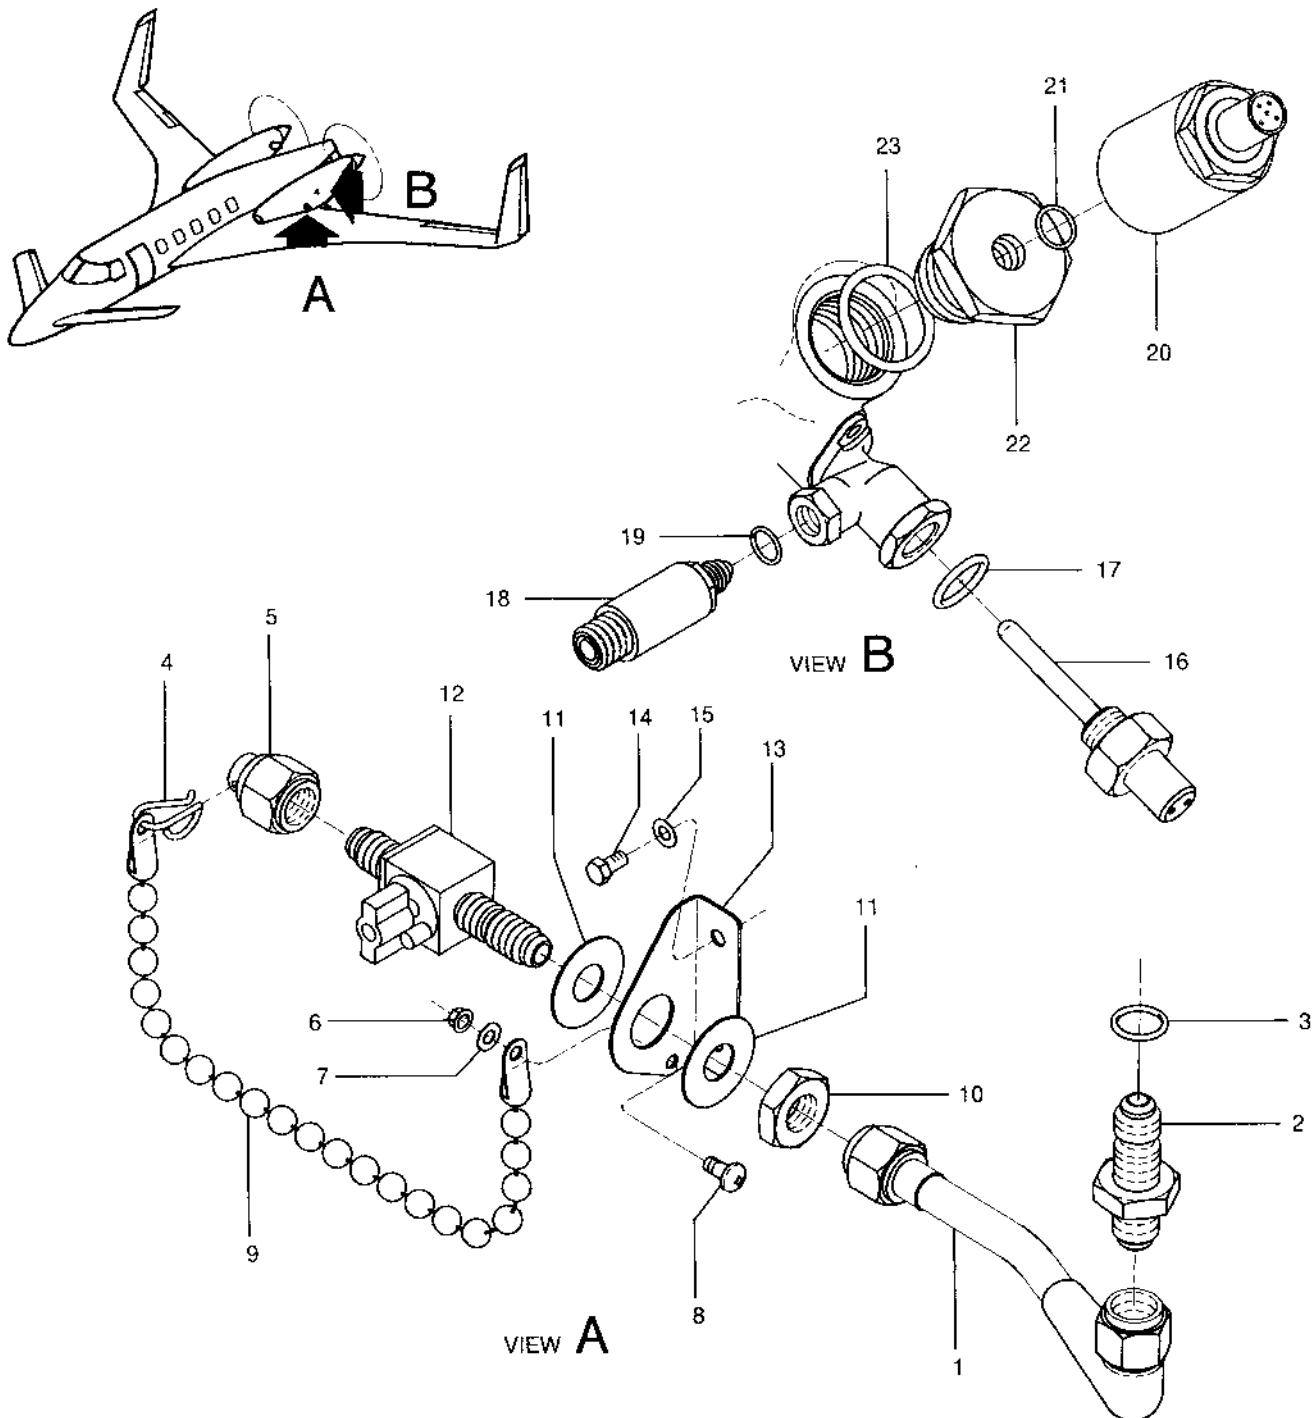


2000-257-01

FIGURE 20-00.ENGINE OIL SYSTEM
/SHEET 1 OF 2 SHEETS/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00	122-930011-17	OIL SYSTEM INSTL, ENGINE	NP	
- 1	122-930011-13	. TUBE ASSY, OIL DRAIN	1	
- 2	AN832-8D	. UNION	1	
- 3	MS29561-114	. PACKING, PREFORMED	1	
- 4	AN415-1-2	. PIN	1	
- 5	101-930023-5	. CAP ASSY, DUST	1	
- 6	130909N29	. NUT	1	
- 7	AN960-10L	. WASHER	1	
- 8	MS35207-263	. SCREW	1	
- 9	NAS1201C10A12B	. CHAIN ASSY	1	
- 10	AN924-8D	. NUT	1	
- 11	AN960-1216	. WASHER	2	
- 12	101-389015-3	. VALVE, ENGINE OIL DRAIN	1	
- 13	122-930011-21	. BRACKET, OIL DRAIN VALVE SUPPORT	1	2
	122-930011-19	. BRACKET/ORDER 122-930011-21 FOR SPARES/	NP	1
- 14	130909B12	. BOLT	2	
- 15	AN960-10L	. WASHER	2	
- 16	MS28034-1	. BULB, OIL TEMPERATURE	1	
- 17	AN900-10	. GASKET/SUPPLIED WITH TEMPERATURE BULB/	1	
- 18	50-389121-15	. SWITCH, PRESSURE	1	
- 19	NAS617-4	. PACKING, PREFORMED	1	
- 20	101-389023-5	. TRANSMITTER, OIL PRESSURE	1	
- 21	MS28778-4	. PACKING, PREFORMED	1	
- 22	AN893-4D	. BUSHING	1	
- 23	MS9388-213	. PACKING, PREFORMED	1	

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

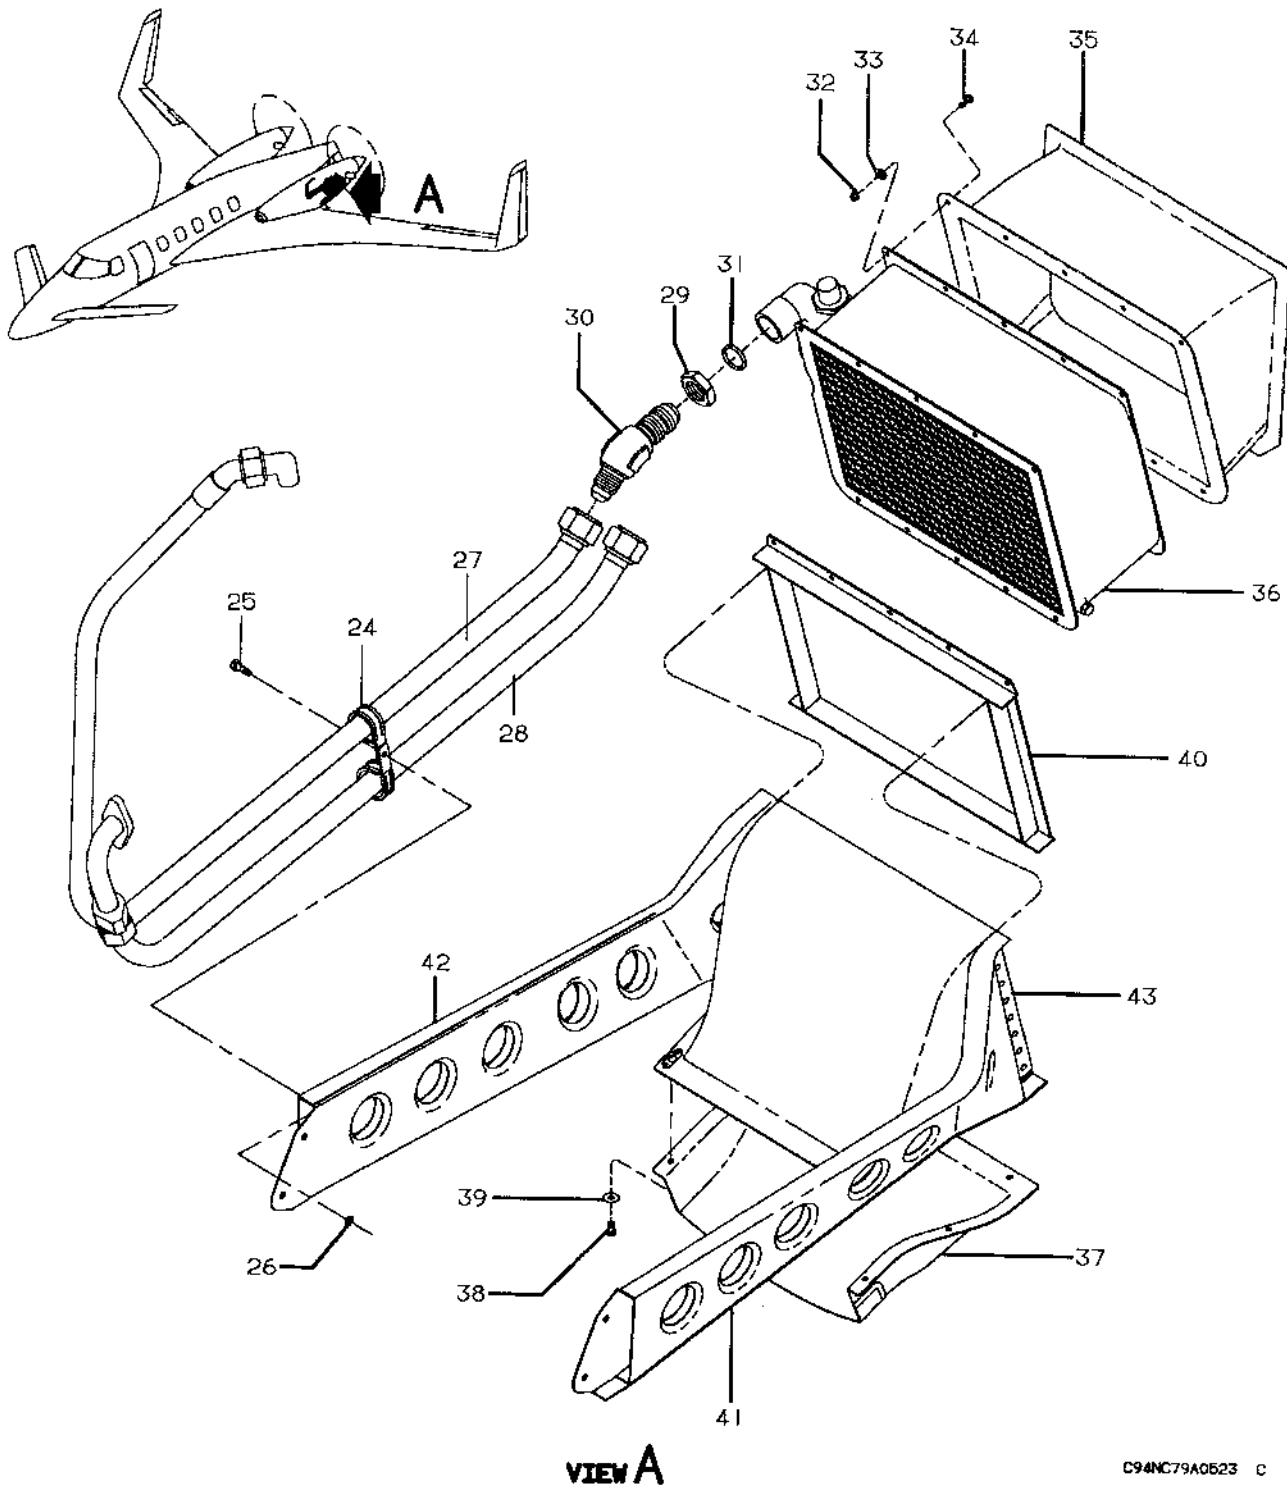

C94NC79A0523 C

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-00 -24	MS21919WH20	. CLAMP	2	
		. /ATTACHING PARTS/		
-25	130909B15	. BOLT	1	
-26	AN960-10L	. WASHER	1	
		★		
-27	330996F12-0640	. HOSE ASSY	1	
-28	330998G0450145F	. HOSE ASSY	1	
-29	AN924-12D	. NUT	1	
-30	AN837-12D	. ELBOW	1	
-31	MS28778-12	. PACKING, PREFORMED	1	
-32	130909N29	. NUT	20	
-33	AN960-10L	. WASHER	20	
-34	130909B14	. BOLT	20	
-35	122-930008-1	. DUCT, OIL COOLER OUTLET	1	
-36	122-389039-1	. COOLER ASSY, OIL	1	
	L8530815	. VALVE, THERMOSTATIC CONTROL	1	
	L8600424	. PLUG, OIL COOLER DRAIN	1	
	L8534856	. PACKING, PREFORMED/DRAIN PLUG/	1	
-37	122-930007-1	. DUCT	1	
		. /ATTACHING PARTS/		
-38	130909B14	. SCREW	12	
-39	AN960JD10	. WASHER	12	
		★		
	122-930006-19	. SUPPORT ASSY, OIL COOLER	1	
	MS21059L3	. NUTPLATE	4	
-40	122-930006-3	. FLANGE ASSY	1	
-41	122-930006-21	. CHANNEL ASSY	1	
	122-930007-3	. DUCT	1	
	122-930006-25	. CHANNEL, OUTBD	1	
-42	122-930006-22	. CHANNEL ASSY	1	
	122-930006-24	. CHANNEL, INBD	1	
	122-930006-26	. CHANNEL, OUTBD	1	
-43	122-930007-3	. DUCT ASSY	1	
	MS21059L3	. NUTPLATE	4	


CODES OF EFFECTIVITY

1 NC-4 THRU NC-10 2 NC-11 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

79-20-10
OIL BREATHER LINE

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

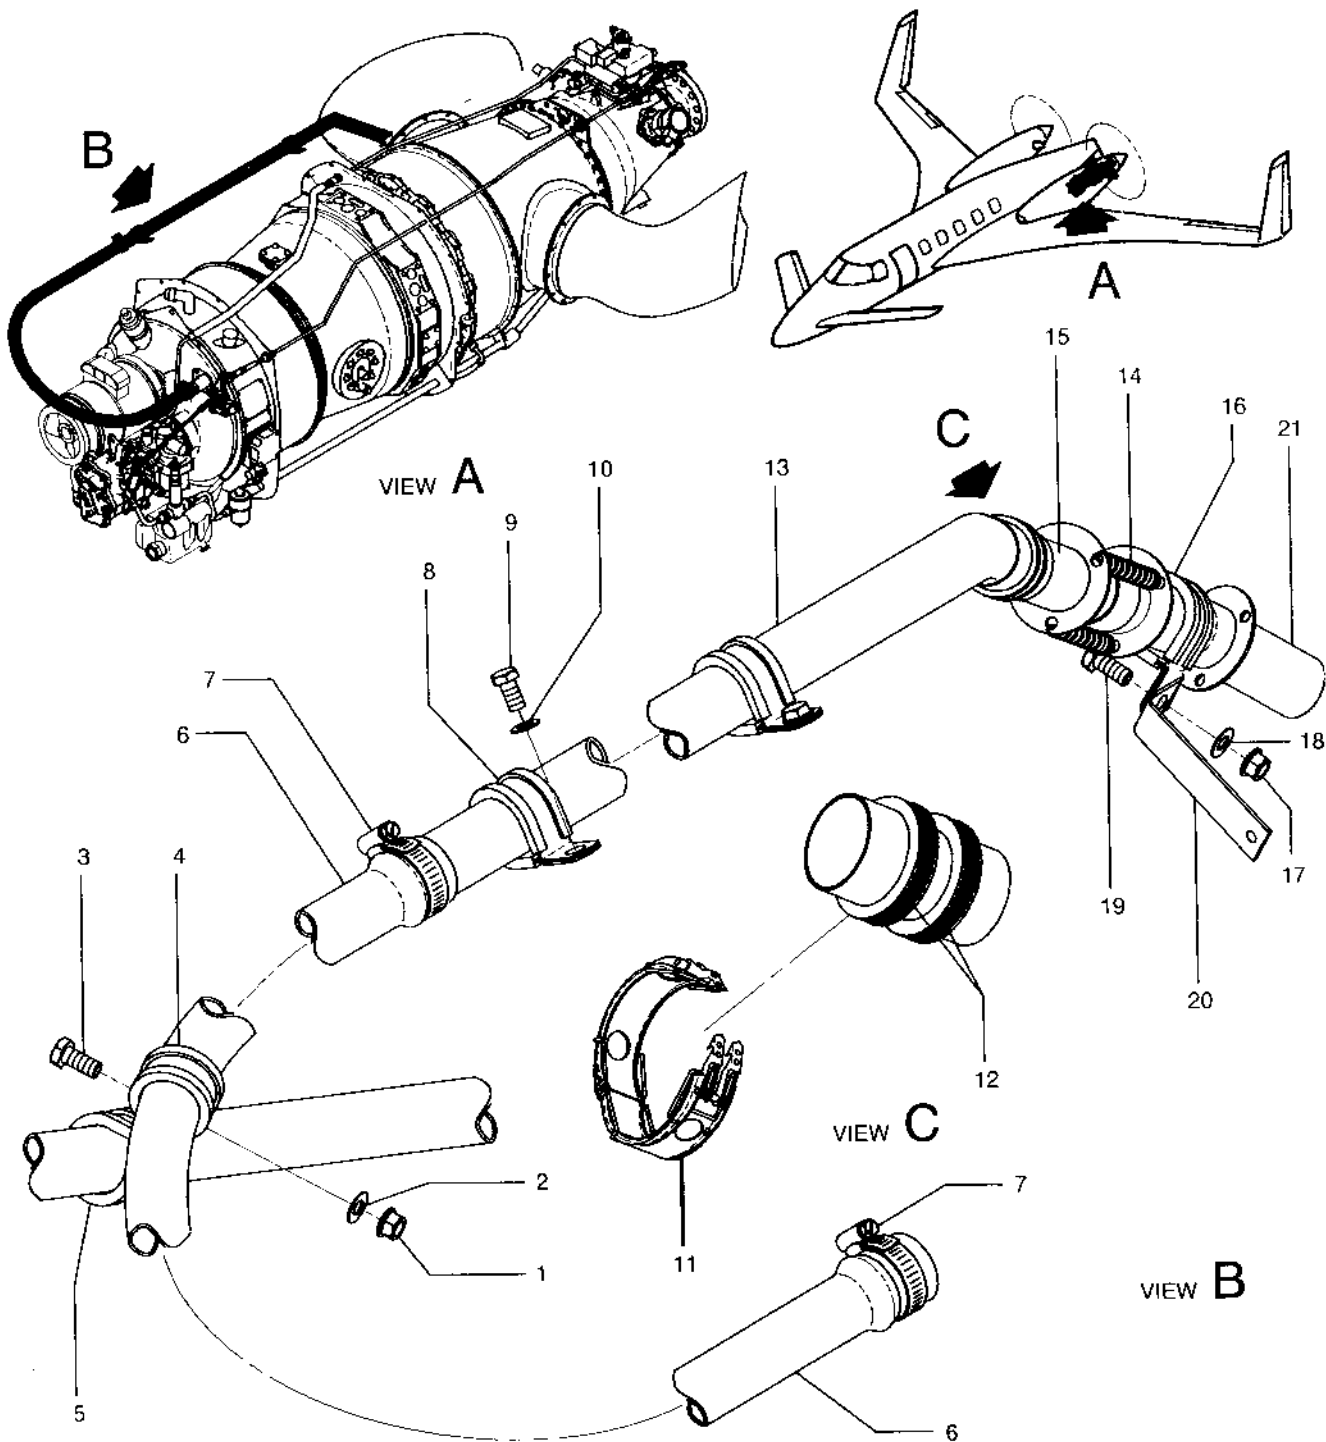

2000-257-03

FIGURE 20-10.OIL BREATHER LINE


Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20-10	122-930010-1	OIL BREATHER LINE INSTALLATION.....	NP	
- 1	130909N29	. NUT	1	
- 2	AN960-10L	. WASHER	1	
- 3	130909B15	. BOLT	1	
- 4	MS21919WDF18	. CLAMP	1	
- 5	MS21919WDF20	. CLAMP	1	
- 6	SCDEETS-4-144-6	. HOSE	1	
- 7	12KS3	. CLAMP	2	
- 8	MS21919WDF18	. CLAMP	2	
		/ATTACHING PARTS/		
- 9	130909B14	. BOLT	1	
-10	AN960-10L	. WASHER	1	
		★-----		
-11	14J02-16A	. COUPLING ASSY.....	1	
-12	MS9387-213	. PACKING, PREFORMED.....	1	
-13	122-930010-13	. TUBE ASSY.....	1	
-14	100942H0022-22	. SPRING	6	
-15	122-930010-27	. TUBE ASSY.....	1	
-16	MS21919WDF16	. CLAMP	1	
		/ATTACHING PARTS/		
-17	130909N29	. NUT	1	
-18	AN960-10L	. WASHER	1	
-19	130909B14	. BOLT	1	
		★-----		
-20	122-930010-19	. BRACKET	1	
-21	122-930010-21	. TUBE ASSY.....	1	

Deechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

79-30-00
OIL LEVEL INDICATOR

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

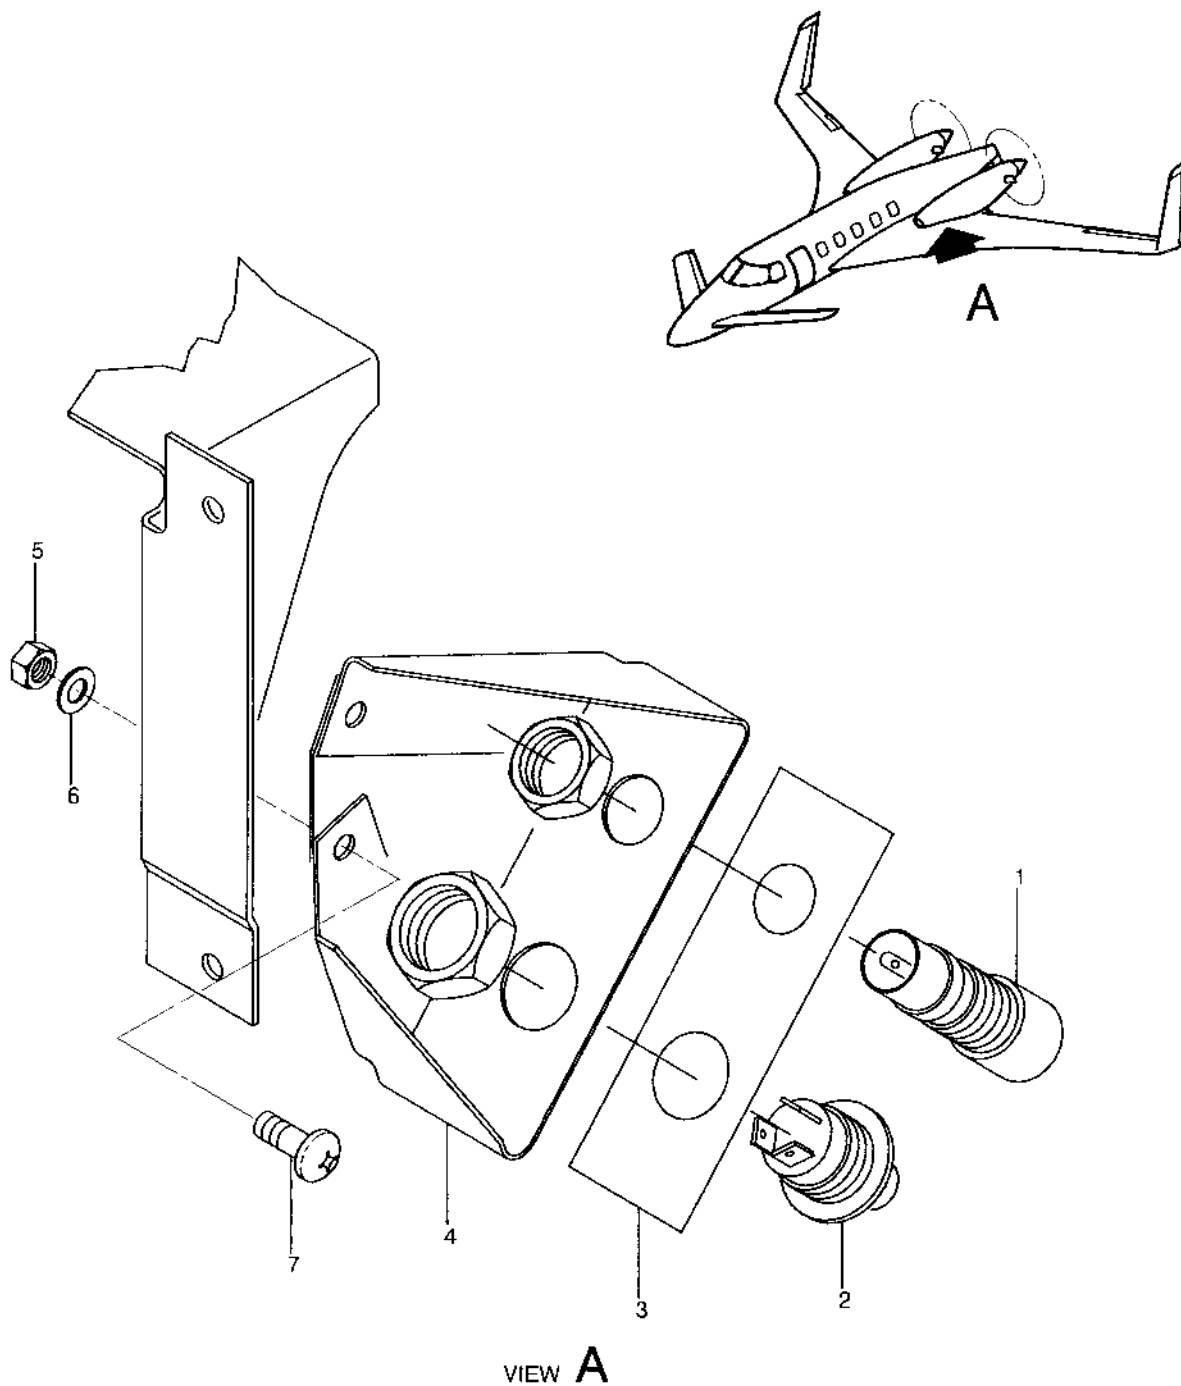

2000-257-04

FIGURE 30-00.OIL LEVEL INDICATOR

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

SUB-SEC UNIT & ITEM NO	PART NO.	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30-00	122-910064-1	POWER PLANT INSTL, LH.....	NP	1
	122-910064-15	POWER PLANT INSTL, LH.....	NP	2
	122-910064-3	POWER PLANT INSTL, RH.....	NP	1
	122-910064-17	POWER PLANT INSTL, RH.....	NP	2
- 1	MS25041-7-327	. LIGHT, OIL LEVEL O.K. INDICATION.....	1	
- 2	P1-32112	. SWITCH, OIL LEVEL INDICATOR LIGHT ACTUATION.....	1	
- 3	122-910055-3	. DECAL, OIL LEVEL INDICATOR IDENTIFICATION.....	1	
- 4	122-910054-1	. BRACKET, LH.....	1	
	122-910054-2	. BRACKET, RH.....	1	
		/ATTACHING PARTS/		
- 5	MS21043-3	. NUT.....	2	
- 6	AN960-10	. WASHER.....	2	
- 7	MS35207-263	. SCREW.....	2	

---★---

CODES OF EFFECTIVITY

1 NC-4 THRU NC-28 2 NC-29 AND AFTER

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG
LIST OF PAGES & TABLE OF CONTENTS
FOR
CHAPTER 80-00-00 STARTING

CHAP/SUB- SECT & UNIT	PAGE NO.	EFFECTIVE DATE	TABLE OF CONTENTS
80-00-00	1	02/25/94	LIST OF PAGES & TABLE OF CONTENTS
80-00-01	1	02/25/94	STARTER/REFERENCE/

Beechcraft
STARSHIP 1
ILLUSTRATED PARTS CATALOG

80-00-01

STARTER/REFERENCE/

**THE STARTER GENERATOR IS DESIGNED TO FUNCTION
AS THE STARTER FOR THE ENGINE AND AS A DC
GENERATOR. SINCE IT SERVES AS THE PRIMARY
DC GENERATING SOURCE, IT IS COVERED IN
CHAPTER 24.**